



How to Configure and Select SIP accounts in VOI-7xxx?

In the web interface for the VOI-7xxx, select SIP Settings > Service Domain. This page contains entries for 3 VoIP Service Providers (ITSP) called Realm 1, 2 and 3. In this example Realm 2 is an internal IP PBXs, and Realm 3 is the external SIP service provider FreeWorldDialup.

Realm 2	
Active:	<input checked="" type="radio"/> On <input type="radio"/> Off
Display Name:	VOI-9300
User Name:	39
Register Name:	39
Register Password:	*****
Domain Server:	192.168.124.8
Proxy Server:	192.168.124.8
Outbound Proxy:	
Status:	Registered

Realm 3	
Active:	<input checked="" type="radio"/> On <input type="radio"/> Off
Display Name:	FWD
User Name:	879968
Register Name:	879968
Register Password:	*****
Domain Server:	fwd.pulver.com
Proxy Server:	fwd.pulver.com
Outbound Proxy:	
Status:	Registered

1. **Display Name** field is what should be displayed on the VOI-7xxx's display to indicate that the Realm is selected. When the display shows date / time and "(VOI-9300)" the user knows that any outgoing call will go through the

organisations internal telephone exchange (in this case a LevelOne VOI-9300).

When the display shows date / time and “(FWD)” any outgoing call will go directly to Free World Dialup.

2. **User Name** and **Register Name** should both be set to the username of the VoIP account; and **Register Password** is the VoIP accounts password.
3. **Domain Server** is the server address given by the VoIP provider (ITSP). It may be an IP Address or Domain name.
4. **Proxy Server** and **Outbound Proxy** is optional, it should be set as suggested by your VoIP provider.

How do I select which VoIP provider to make calls?

Incoming calls from *all* of the VoIP providers (ITSP) which your VOI-7xxx is registered to will ring the VOI-7xxx, with the Display Name of the Realm and the caller ID on the VOI-7xxx's display. For example when receiving an internal call from extension 34, the display shows “VOI-9300” and “34”.

To select which Realm (SIP Account) the VOI-7xxx should use for outgoing calls,

1. Press the Realm number, 1, 2 or 3
2. Press [*] (star)
3. Then the SPK or H-F (speakerphone/hands free) button.

The display should now show the realm you selected. e.g. To make an outgoing call through FWD press [3] [*] [H-F] then dial the FWD account number.