



How to configure IP Cam Secure to hear audio on Remote live viewer and IE ?

A. How to enable audio at Main Console.

1. If you are using IP cameras, please go to <Main Console> - <Config> - <Setting> - <Camera> - <Camera Setting>

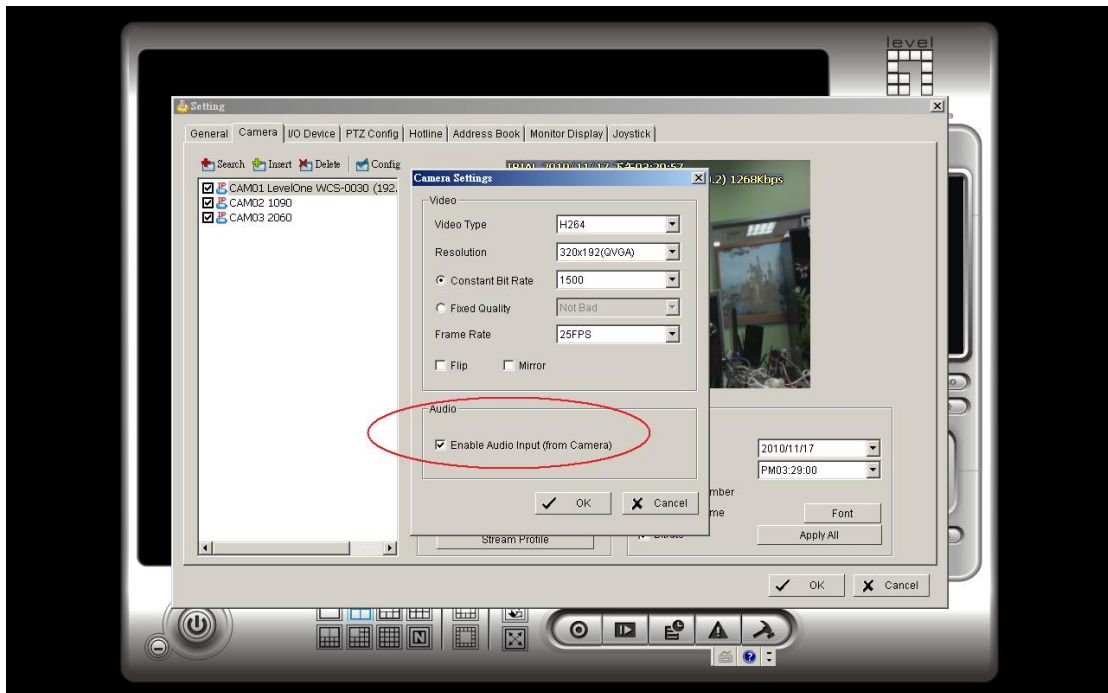


2. If you are using analog cameras, please go to <Main Console> - <Config> - <Setting> - <Audio Preview>

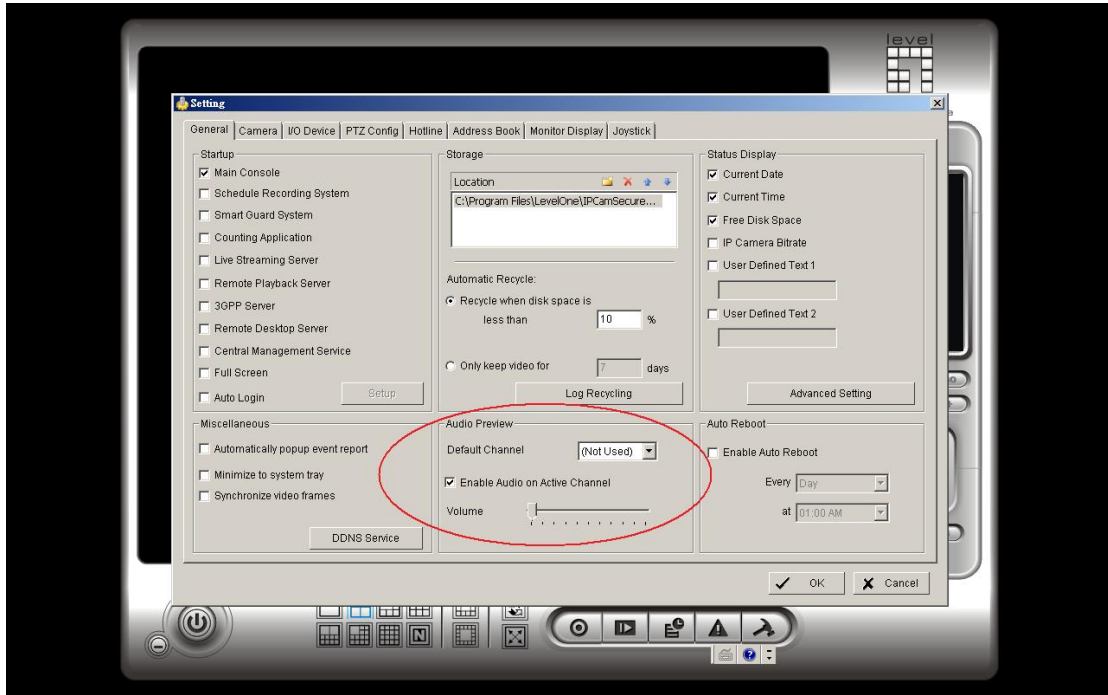

B. How to enable audio on Remote Live Viewer


Please go to remote live viewer and right click on the screen to check <Enable Audio>

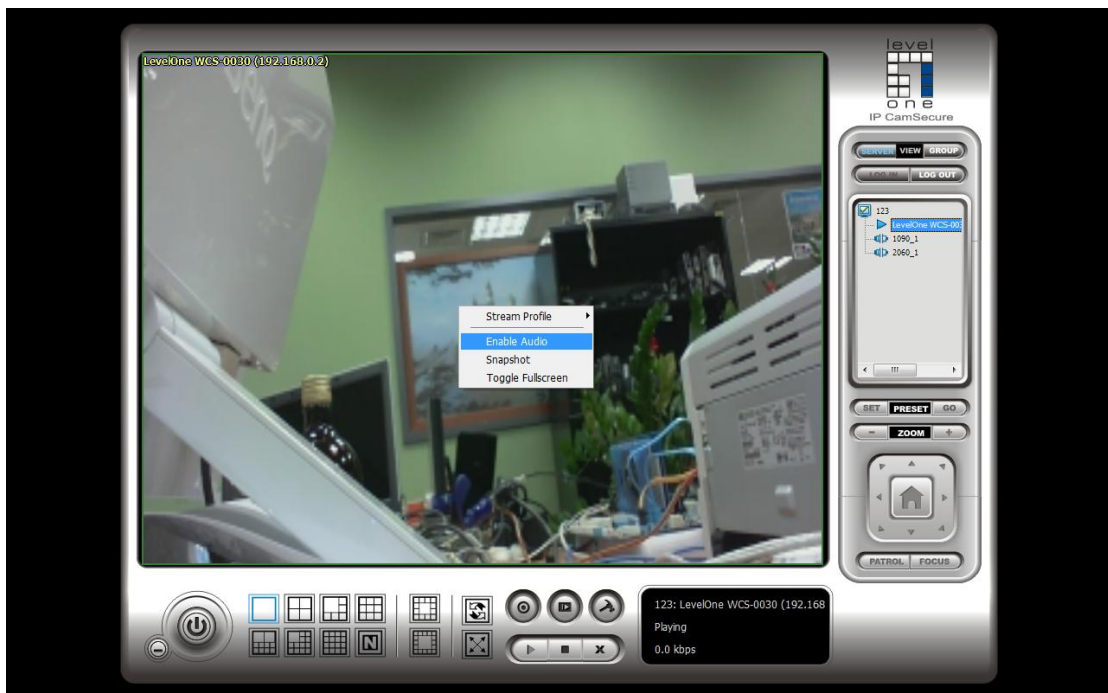



C. How to enable audio on IE remote live viewer.

Click on Remote Live Viewer

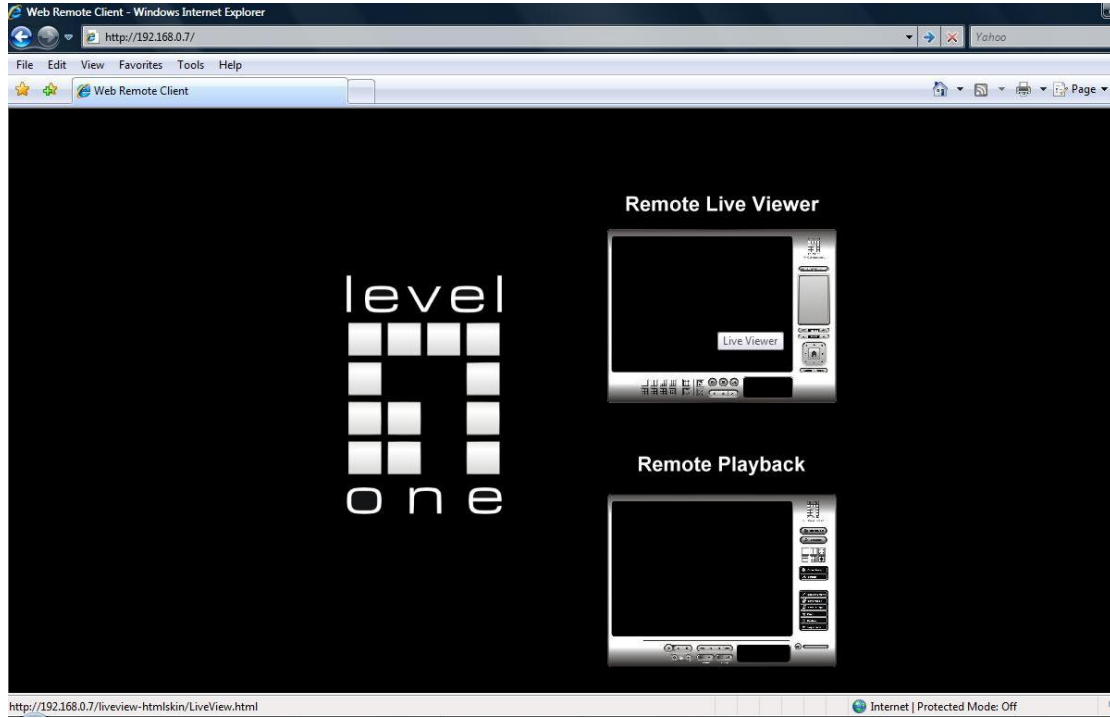

Right click to enable audio.

