





How to recover IPS-0008 administrator password?

If you happen to forget the administrator password of IPS-0008 system, please follow below steps to recover the administrator password.

1. Open the IPS-0008 housing.
2. Find the below jumper on the circuit board.
3. Short the Jumper 1 and 2 like below.

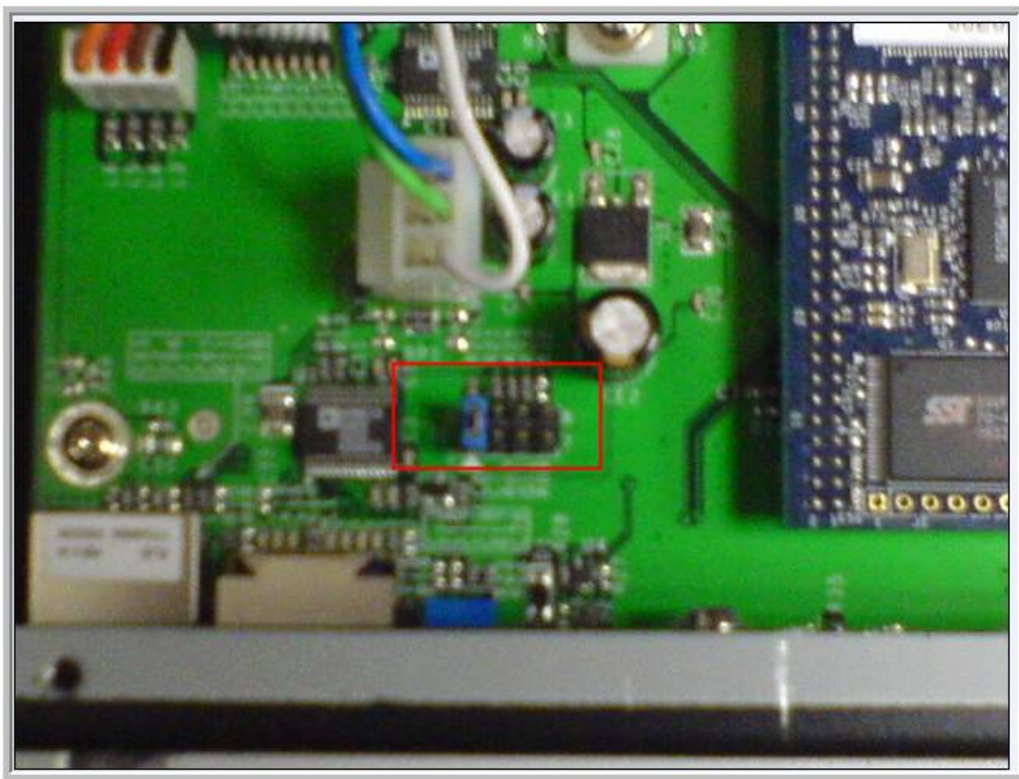

4. Power on the IPS-0008 system.
5. Using the HyperTerminal to login IPS-0008's console like below and enter the password as **"admin"** (default admin password)

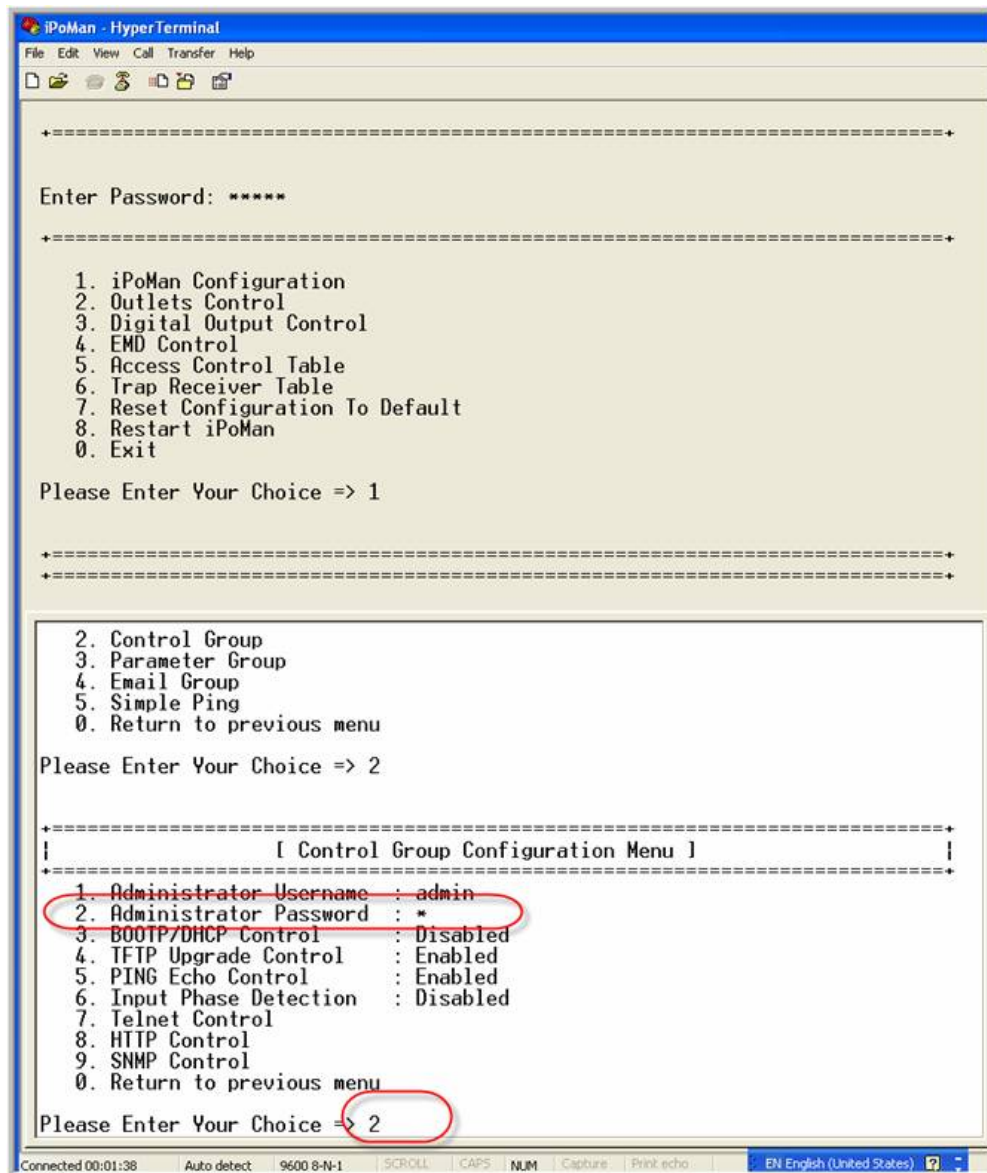

6. Then select the second option (Administrator Password) to change the admin password as you desire.

Please Enter Your Choice => 2

Enter Old Administrator Password : *****

Enter New Administrator Password : *****

Confirm New Administrator Password : *****

```
+-----+
|                                     [ Control Group Configuration Menu ]
+-----+
```

```
1. Administrator Username : admin
2. Administrator Password : *
3. BOOTP/DHCP Control    : Disabled
4. TFTP Upgrade Control  : Enabled
5. PING Echo Control     : Enabled
6. Input Phase Detection : Disabled
7. Telnet Control
8. HTTP Control
9. SNMP Control
0. Return to previous menu
```

6. Turn off the IPS-0008 system.
7. Move the Jumper back to normal location.
8. Put the IPS-0008 housing back and then use new administrator password to login IPS-0008.