



LevelOne

FCS-1101

PoE IP Network Camera



User Manual

Ver:1.3.0-0812

Copyright (c) 2008 Digital Data Communications Co., Ltd. All Rights Reserved.

Before you use this Product

This LevelOne product has been designed with safety in mind. However, if not used properly electrical products can cause fires which may lead to serious body injury. To avoid such accidents, be sure to heed the following.

Legal Caution

Video and audio surveillance can be forbidden by laws that vary from country to country. Check the laws in your local region before using this product for surveillance purposes.

Heed the safety precautions

Be sure to follow the general safety precautions and the "Operation Notice."

In case of a breakdown

In case of system breakdown, discontinue use and contact your authorized LevelOne dealer.

In case of abnormal operation

- If the unit emits smoke or an unusual smell,
- If water or other foreign objects enter the cabinet, or
- If you drop the unit or damage the cabinet:
 - 1 Disconnect the cable and the connecting cables.
 - 2 Contact your authorized LevelOne dealer or the store where you purchased the product.

Operation Notice - Operating or storage location

Avoid operating or storing the camera in the following locations:

- Extremely hot or cold places (Operating temperature: 0 °C to +50 °C [32 °F to 122°F])
- Exposed to direct sunlight for a long time, or close to heating equipment (e.g., near heaters)
- Close to sources of strong magnetism
- Close to sources of powerful electromagnetic radiation, such as radios or TV transmitters
- Locations subject to strong vibration or shock

Ventilation

To prevent heat buildup, do not block air circulation around the device.

Transportation

When transporting the camera, repack it as originally packed at the factory or in materials of equal quality.

Cleaning

- Use a soft, dry cloth to clean the external surfaces of the device. Stubborn stains can be removed using a soft cloth dampened with a small quantity of detergent solution, then wipe dry.
- Do not use volatile solvents such as alcohol, benzene or thinners as they may damage the surface.

Installation	1
Hardware Installation	1
Software Installation	3
Install "IP CamLocator"	3
Install "IP CamSecure"	4
How to Use IP CamLocator	6
Using IP Camera via Mobile Phone	29
3G Mobile Phone viewing	29
2.5G Mobile Phone viewing	29
How to Access to the Network Camera	31
Initial accessing the IP camera	31
Setting	36
Basic.....	36
System.....	36
Camera.....	39
Network	45
Security.....	52
Advance.....	54
FTP Client.....	54
SMTP.....	58
HTTP Event	63
Schedule.....	65
Alarm Buffer.....	66
Motion Detection.....	68
System Log.....	70
Trouble shooting sheet	71
Streaming Video/Audio Solution	72
GNU GENERAL PUBLIC LICENSE	73


Installation

Check the package contents against the list below.


Package Contents

1. FCS-1101
2. 6mm Fixed Lens
3. Camera Stand
4. CD Manual/Utility
5. Quick Installation Guide

Hardware Installation

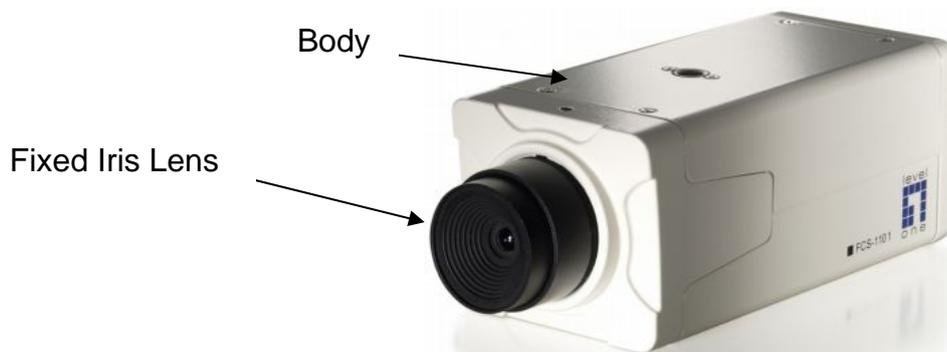

Rear Panel :

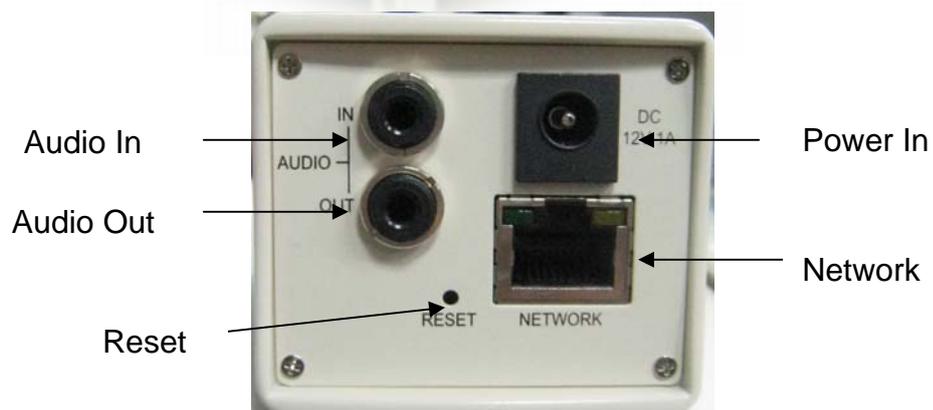

Depending on the user's application, an Ethernet cable may be needed. The Ethernet cable should meet the specs of UTP Category 5 and not exceed 100 meters in length.

⚠ Connect the power adapter jack to the Network Camera before plugging in to the power socket. This will reduce the risk of accidental electric shock.

Since FCS-1101 is a PoE IP camera, it could work without attaching to power outlet as long

as it connects to PoE switch.

The Network Camera will first detect Ethernet. Until the Network Camera is connected to Network, the LED will become green and flash. Operating in the Network mode, the green LED will flash every second as heartbeat to indicate alive.

To adjust the lens

There is a fixed lens free bundled. Whereby revolving the lens, it can be focused on. However, users shall loosen or tighten the gray loop by using the wrench attached in the package.

1. Unscrew it first

2. Loosen or tighten the gray





Software Installation

In this manual, "User" refers to whoever has access to the Network Camera, and "Administrator" refers to the person who can configure the Network Camera and grant user access to the camera.


At the end of the hardware installation, the Administrator must place the product software CD into the CD-ROM drive of the PC running in MS Windows. An auto-run program will pop up (If the program is not on auto-run, go to the root directory of the software CD and click on "autorun.exe").

Install "IP CamLocator"

Click on "Install Software" item, after the window contains changed, click on "IP CamLocator" to run installation program.

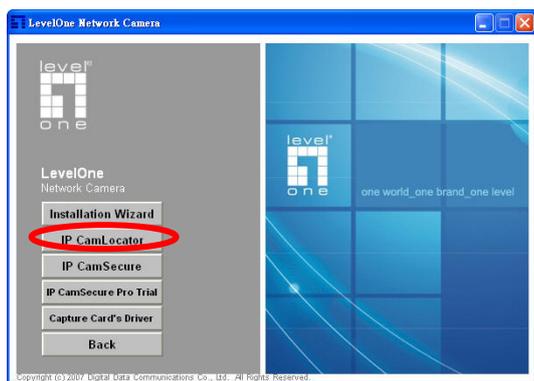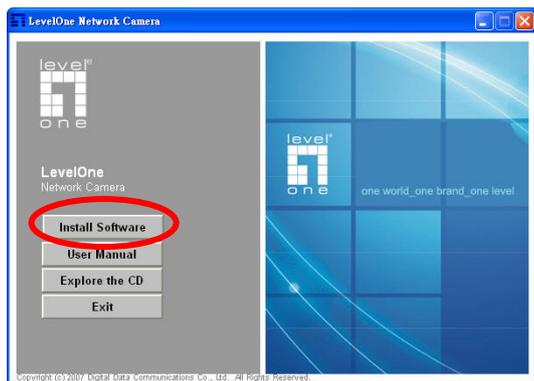


Upon IP CamLocator's start up, this program searches for LevelOne's products on the same LAN. After searching, LevelOne Video Servers or Network cameras will be located by the IP CamLocator. There may be several entries shown in the window. The Administrator may differentiate the Network cameras with the model number and MAC address.

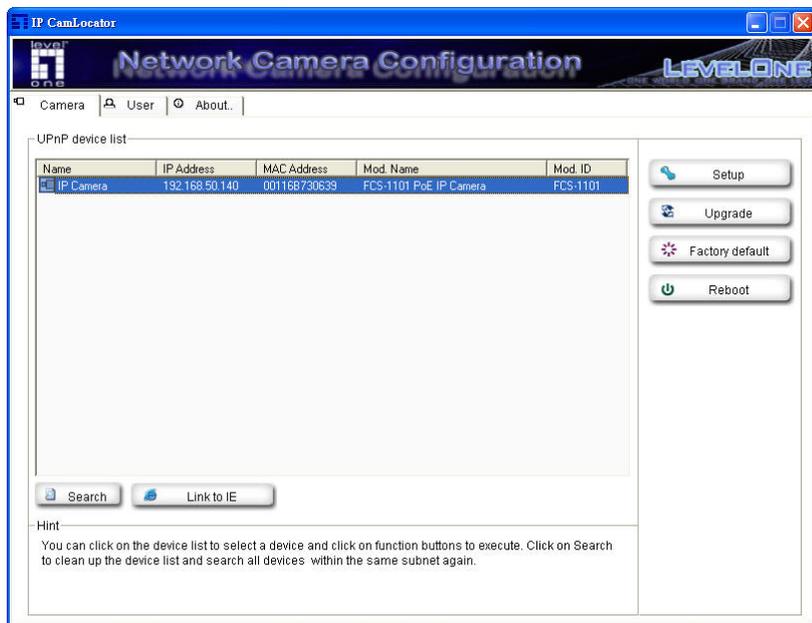


The IP addresses shown in the "IP Address" field reflect those on the local network. They may be from the DHCP server. If there is no DHCP server, the camera will try to find a free IP address (this takes from 15 second to 3 minutes, depending on the LAN status). The method of finding IP address is seeking from 192.168.0.2, to 192.168.0.254. If any of the address inside this range is free, the Network Camera will be assigned to this IP address, and its subnet mask would be 255.255.255.0.

Install "IP CamSecure"


Click "Install Software"

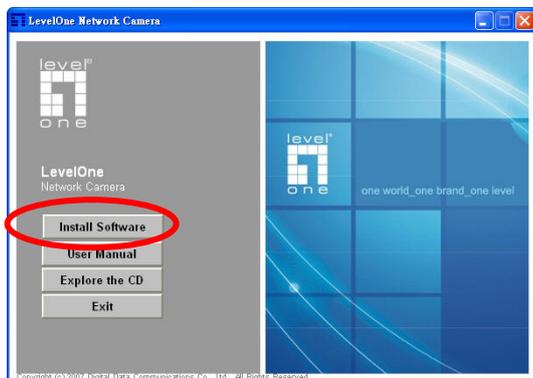


Click "IP CamSecure" and follow the onscreen instruction or refer to the user's manual to complete installation.

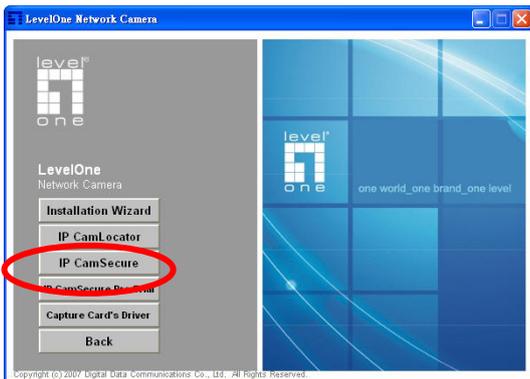

Custom Setup Type:

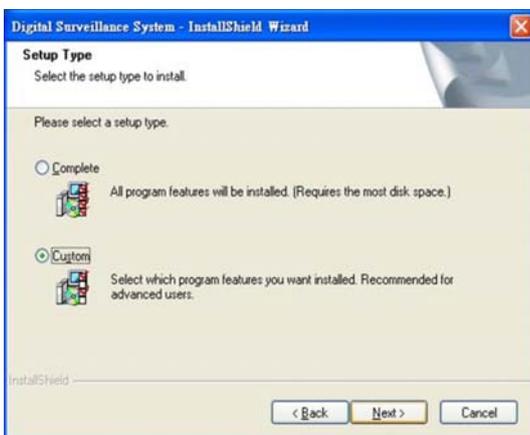

You may install the system to the directory of your preference and choose which feature(s) you want to install to the PC.

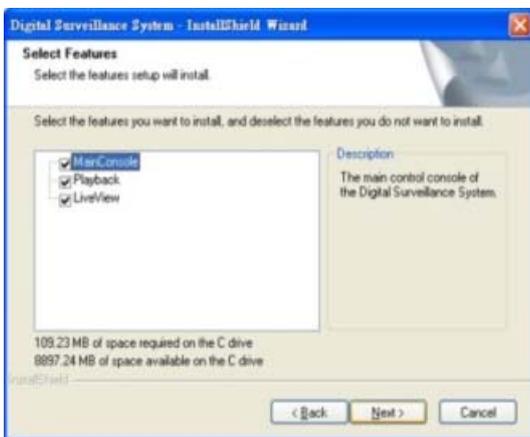


Hint: You may, for instance, install only Playback and/or LiveView on the PC at home or other remote site from which you do not install the camera but are going to watch them remotely.

How to Use IP CamLocator


This chapter introduces how to monitor the image from the camera using **IP CamLocator**. The LevelOne video server and Network camera can be used with Microsoft web browsers and IP CamLocator in Windows operation systems. This document focuses on introducing IP CamLocator.

Initial use IP CamLocator

Click Start -> Program Files -> LevelOne -> IP Cam Locator -> IP Cam Locator.

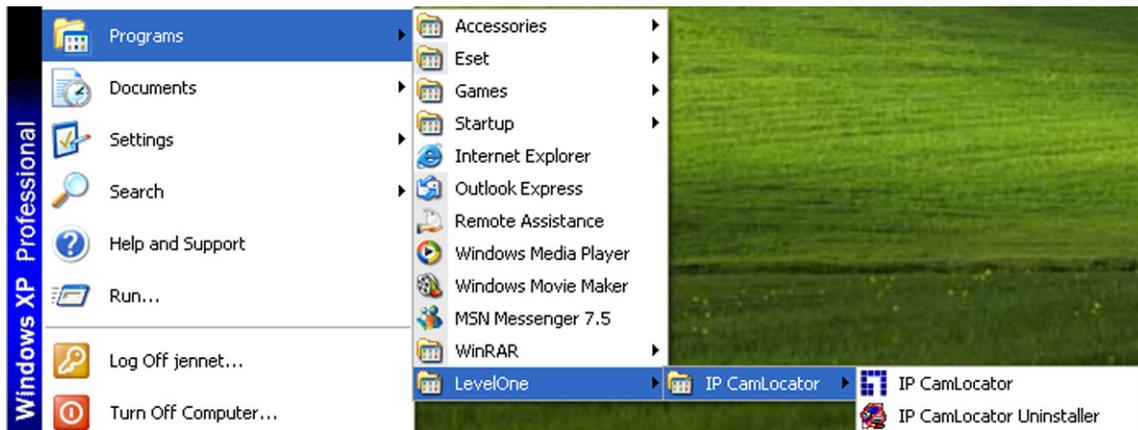

Configuration of Main Menu

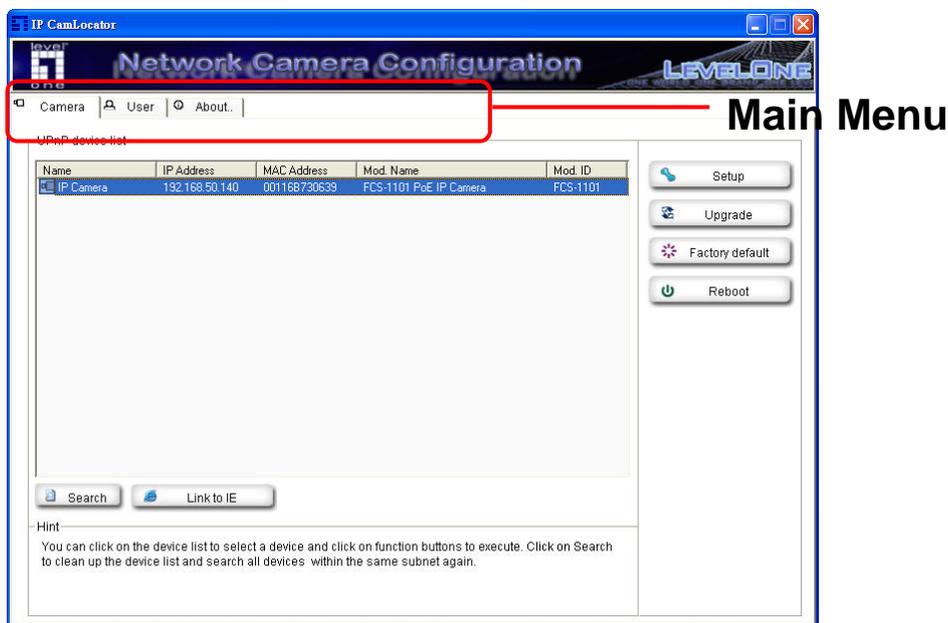

Main Menu

Camera

Click this button to get into common information of all Network Cameras in local network. You can connect the specific Network Cameras to get live video and to optimize video setting.

User

Click this button to get into user basic setting information of all Network Cameras in network. You can connect the specific Network Cameras to get and set basic values. This section includes Info, User, Date Time, TCP/IP, PPPoE and DDNS.

Note:


- Only the administrator has access to the Settings.

About

Click this button to get the information of IP CamLocator.

Camera

The Camera page provides you all Network Cameras in the network with product factory information, including product Name, IP Address, MAC, Mod. Name and Mod. ID.

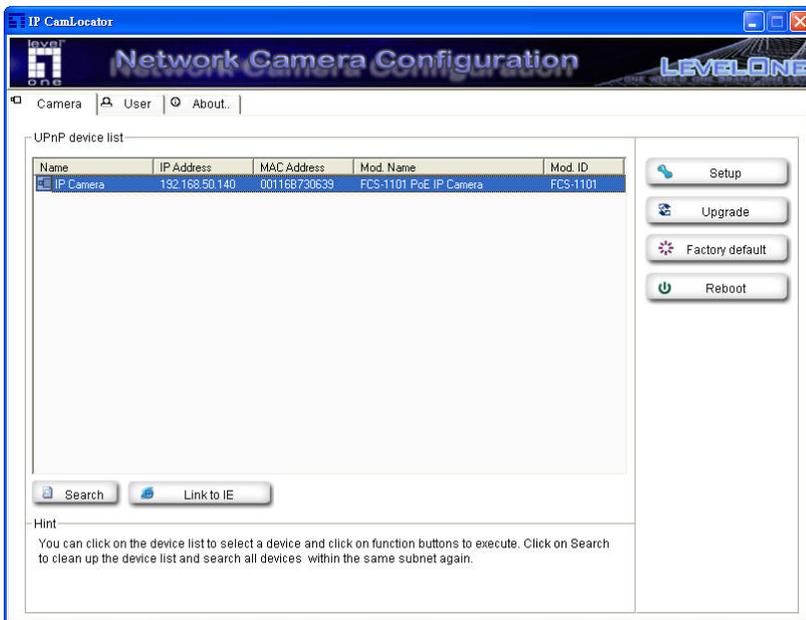

Search : Click it to search Network Cameras in the network, it displays Network Cameras information including Name, IP Address, MAC, Mod. Name and Mod. ID.

Note:


If the camera is not located in local network, it will appear in red text. Some information is not available when the IP camera is not in local network.

The IP addresses shown in the "IP Address" field reflect those on the local network. They may be from the DHCP server. If there is no DHCP server, the video server will try to find a free IP address (this takes from 15 second to 3 minutes, depending on the LAN status). The method of finding IP address is seeking from 192.168.0.2, to 192.168.0.254. If any of the address inside this range is free, the Network Video server will be assigned to this IP address, and its subnet mask would be 255.255.255.0.

Link to IE : After searching Network Cameras in network, you can click to specific Network

Cameras in search area and press **Link to IE** to use IP cameras with Microsoft web browsers.

Setup

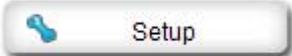
Choose a network camera, click on Setup  to change the configurations. You have to key in the username and password of the administrator to enter the setup page.

The following screen will display:

Note:

For IP cameras not in local network area (which appears in red in the search screen), you can still use setup to change the configurations of these cameras.

System Information: The system information is displayed.

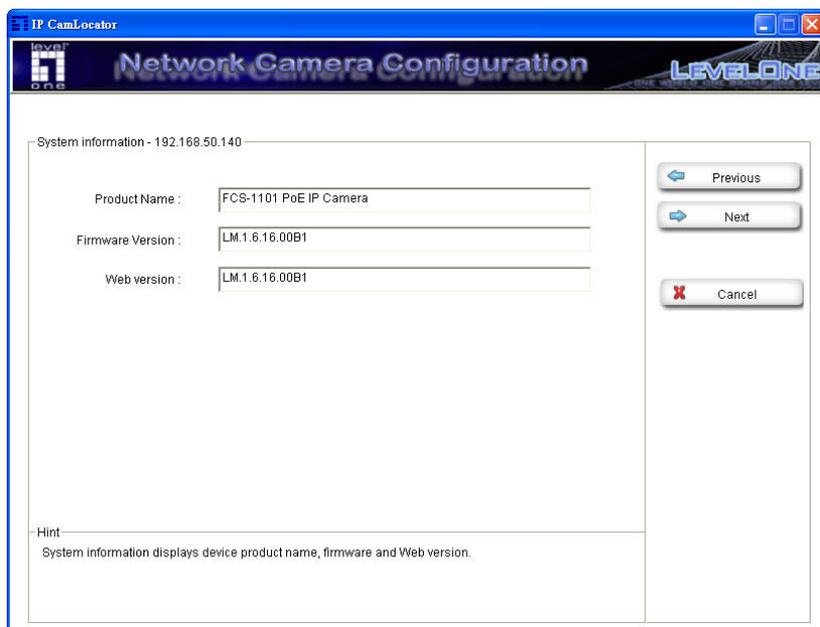

The screenshot shows a web browser window titled "IP CamLocator" with a "Network Camera Configuration" page. The page header includes the LevelOne logo. The main content area is titled "System information - 192.168.50.140" and contains three input fields: "Product Name" with the value "FCS-1101 PoE IP Camera", "Firmware Version" with "LM.1.6.16.00B1", and "Web version" with "LM.1.6.16.00B1". To the right of these fields are three buttons: "Previous", "Next", and "Cancel". A "Hint" section at the bottom states: "System information displays device product name, firmware and Web version."

Press "Next" to continue, "Previous" to go back, "Cancel" to go to the main page.

Account settings: The account setting is displayed. You can change the account setting here.

Account settings - 192.168.50.140

	User name	Password	Confirm	Mode
Administrator	root	*****	*****	Admin
User 1				Admin
User 2				Admin
User 3				Admin
User 4				Admin
User 5				Admin
User 6				Admin
User 7				Admin
User 8				Admin
User 9				Admin

Viewer authentication On Off

Hint
To change the authentication account, type the new account and password and select security mode in fields.

Navigation buttons: Previous, Next, Cancel

Press “Next” to continue, “Previous” to go back, “Cancel” to go to the main page.

Date/Time settings: You can set the date/time of the network camera here. See "Hint" for details.

IP CamLocator
LEVEL ONE
Network Camera Configuration
LEVEL ONE

Date/Time settings - 192.168.50.140

Current Setting : 2008/ 2/13 17:31:41

PC clock : 2008/ 2/13 17:31:42

Adjust : Keep current setting
 Synchronize with PC
 Manual setting : 2008/ 1/ 1 00:00:00
 Synchronize with NTP :
NTP server name : pool.ntp.org Auto
Interval 01 hours.

Time zone : (GMT+08:00) Taipei

Previous
Next
Cancel

-Hint-

There are three ways to adjust system date and time. The easiest way is to make Network Camera Synchronize with PC. The second way Manual setting is to set the date and time manually by entering new values. The third way Synchronize with NTP is to make Network Camera automatically synchronize with timeservers over the Internet.

Press "Next" to continue, "Previous" to go back, "Cancel" to go to the main page.

Network settings: You can change the network settings of the network camera here. See “Hint” for details.

IP CamLocator

Network Camera Configuration

Network settings - 192.168.50.140

Http Port: Port 80 others (1024 - 65535)

MAC Address: 00:11:8B:73:06:39

IP Address

Obtain IP automatically (DHCP)

Use the following IP

IP Address:

Subnet mask:

Default Gateway:

DNS Setting

Obtain DNS server automatically

Use the following DNS server

Primary DNS:

Secondary DNS:

Previous

Next

Cancel

Hint

You can change the device HTTP port, IP address, subnet mask, default gateway, primary DNS, and secondary DNS. If you use PPPoE, skip IP address and DNS settings. Then click on Next to setup PPPoE.

Press “Next” to continue, “Previous” to go back, “Cancel” to go to the main page.

PPPoE settings: You can change the PPPoE settings here. See “Hint” for details.

The screenshot shows a web browser window titled "IP CamLocator" with a "Network Camera Configuration" header. The main content area is titled "PPPoE settings - 192.168.50.140". It features a "PPPoE" section with radio buttons for "On" and "Off", where "Off" is selected. Below this are four input fields: "IP Address", "User ID", "Password", and "Confirm". To the right is a "DNS Setting" section with two radio buttons: "Obtain DNS server automatically" (selected) and "Use the following DNS server". The latter option includes "Primary DNS" and "Secondary DNS" input fields. On the right side of the form are three buttons: "Previous", "Next", and "Cancel". A "Hint" section at the bottom left contains the text: "Please input correct PPPoE settings include login user ID, password, primary DNS, and secondary DNS."


Press “Next” to continue, “Previous” to go back, “Cancel” to go to the main page.

DDNS settings: You can change the DDNS settings here.

The screenshot shows a web browser window titled "IP CamLocator" with a "Network Camera Configuration" header. The main content area is titled "DDNS settings - 192.168.50.140". It features a "DDNS" section with radio buttons for "On" and "Off". Below this are input fields for "Server Name" (with a dropdown menu showing "http://www.dyndns.org"), "User ID", "Password", "Confirm", and "Hostname". To the right of these fields are three buttons: "Previous", "Next", and "Cancel". A "Hint" section at the bottom left contains the text: "Please input correct Dynamic DNS settings include login user ID, password, and registered DDNS Hostname."


Press "Next" to continue, "Previous" to go back, "Cancel" to go to the main page.

Apply settings: Click on “Apply” to use the new settings.

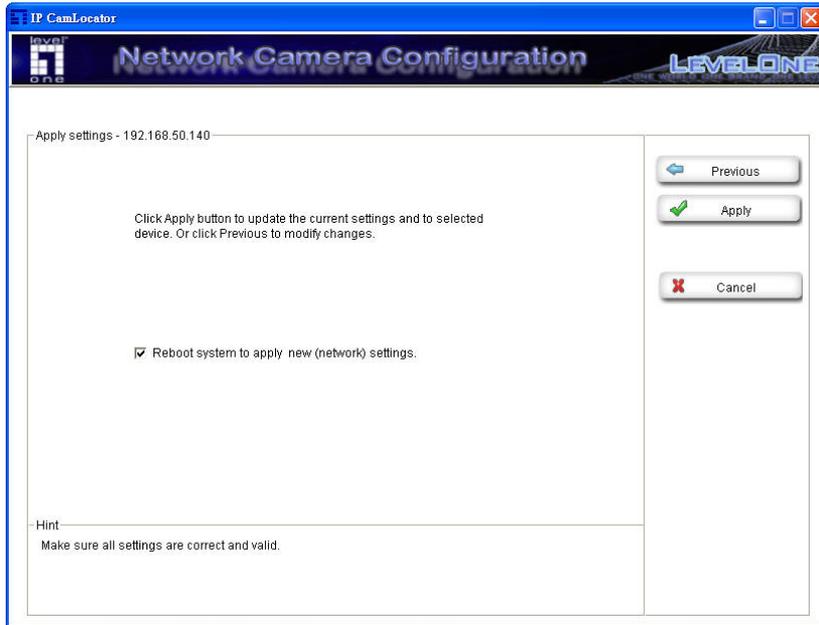


Choose “Reboot system to apply new (network) settings” to reboot after the settings are applied.

Upgrade

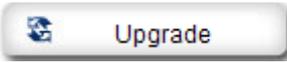Choose a network camera, click on Upgrade  to upgrade the firmware. You have to key in the username and password of the administrator to enter the upgrade page.


The following screen will display:

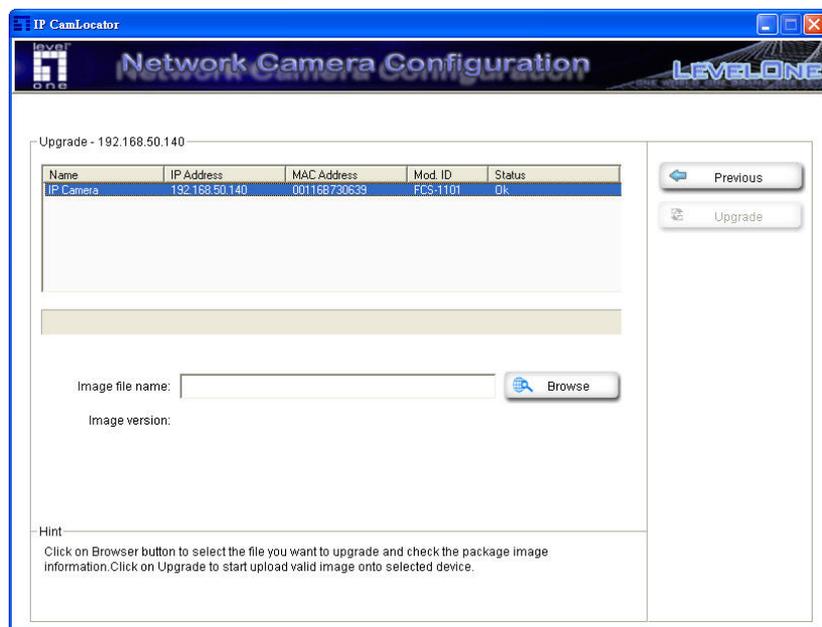

Choose the firmware image file you want to upgrade and press "Upgrade" to start. The device will automatically reboot after upgrade.

Factory Default


Choose a network camera, click on Factory default  to reset the configurations to default. You have to key in the user name and password to use the factory default function.

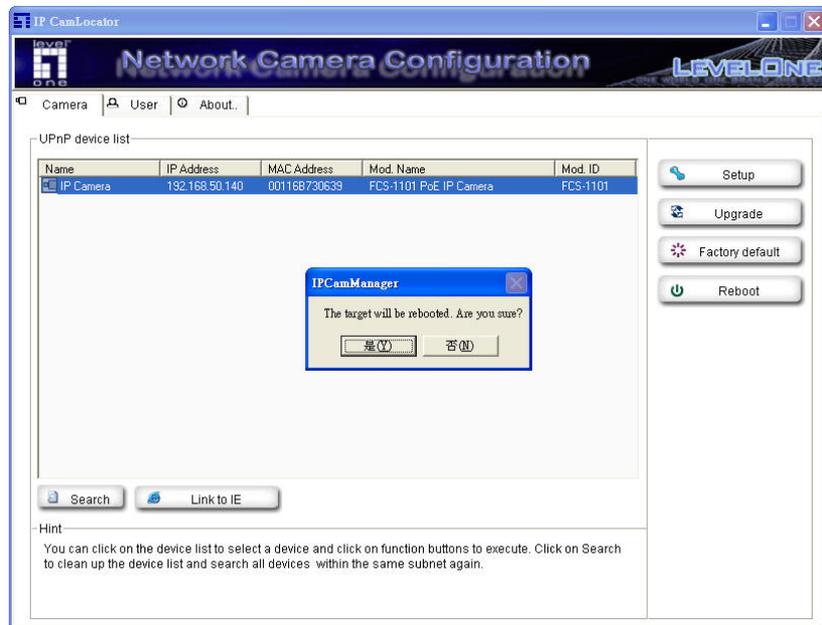

Click on "OK" to continue. The device will automatically reboot after the configurations set to default.

Reboot


Choose a network camera, click on Reboot  to reboot the device. You have to key in the user name and password to use the reboot function.

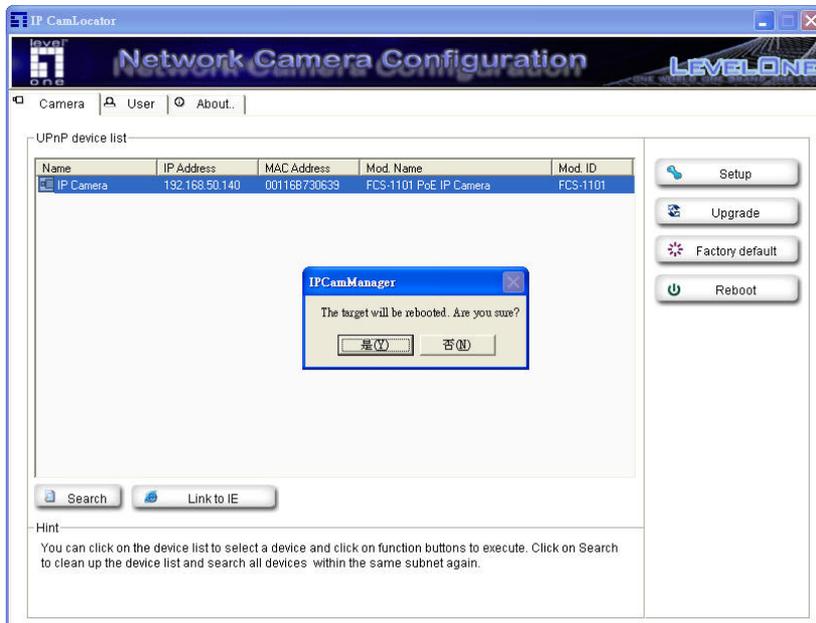

Click on "OK" to continue. The device will automatically reboot.

User


The System page provides you all Network Cameras configurations in the network with product or downloaded configuration file information, including Info, User, Date Time, TCP/IP, PPPoE and DDNS.

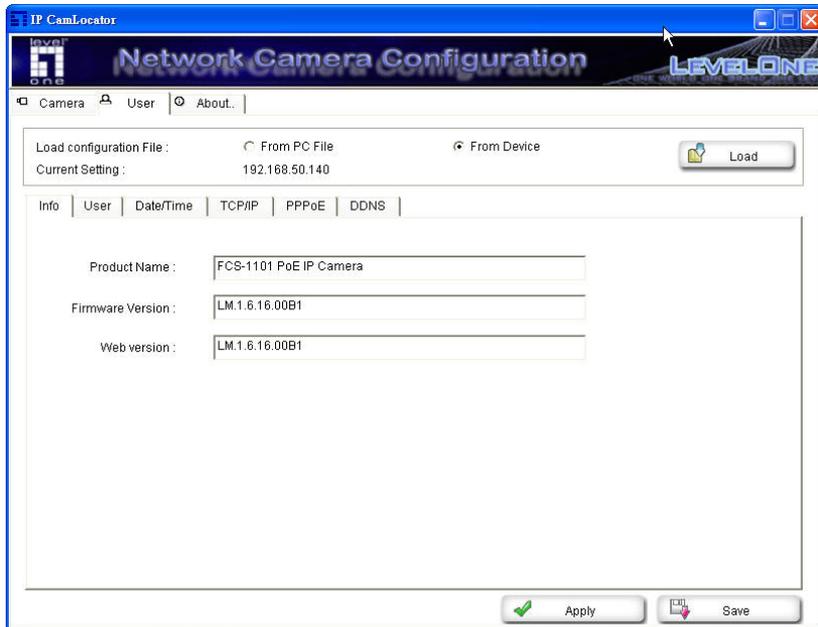

Load configuration File : Select **From PC File** or **From Device**, the former can load information of downloaded configuration file and the latter can load Network Camera configurations in the network.


From PC File : Click it and press **Load** to select configuration location from PC.

Note: • Configuration file format is *.conf.

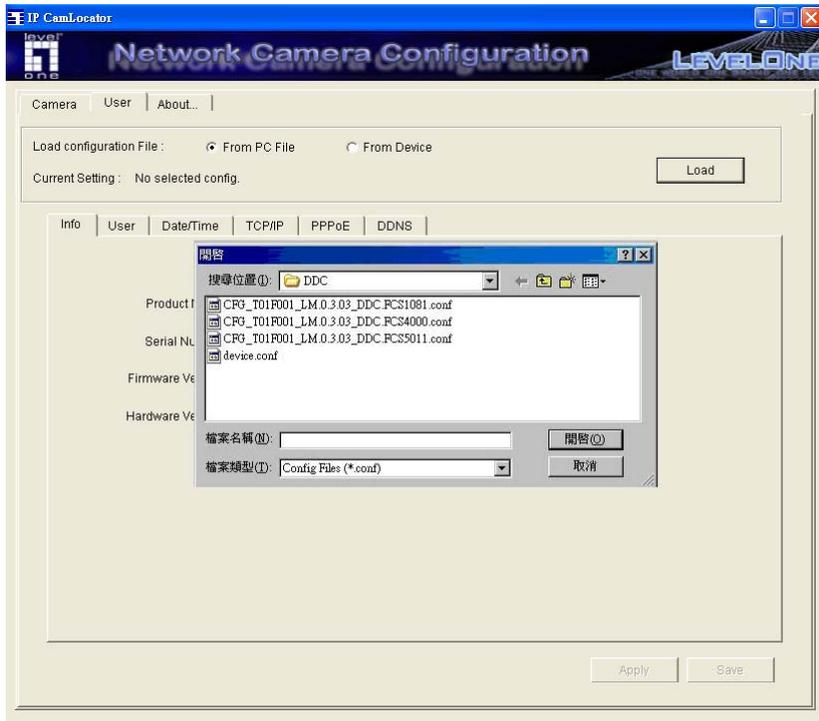

From Device : Click it and press **Load** to select the specific device in the network. Type the **Username** and **Password** to load configuration from device.


Note: If you have connected to the specific device before, you don't have to type the **Username** and **Password** again.

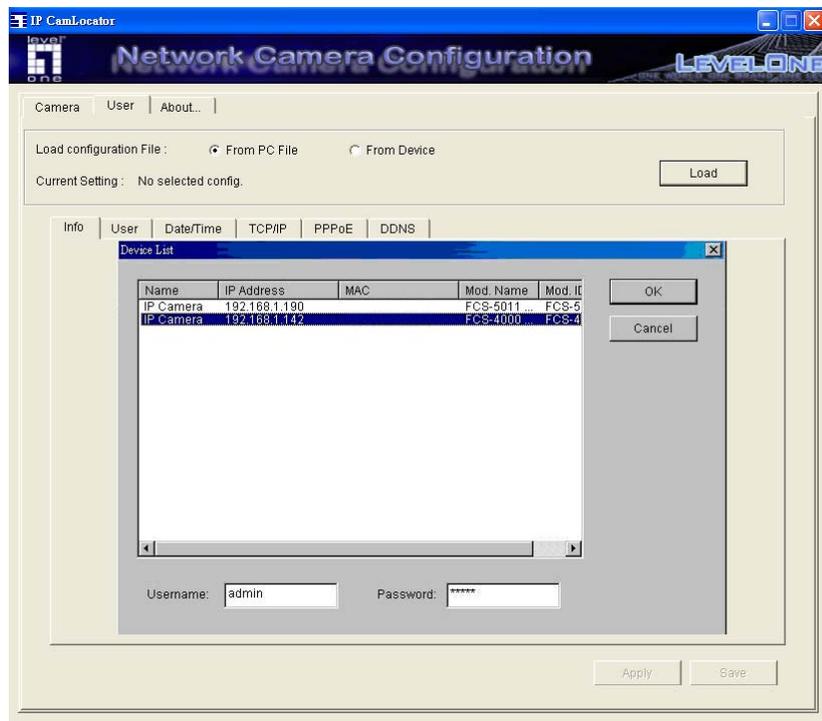

After loading, you can get configuration from PC files or devices. IP CamLocator displays the sub folders including Info, User, Date Time, TCP/IP, PPPoE and DDNS.

Info

The Info page provides you with product factory information, including Product Name, Firmware Version and Web version.

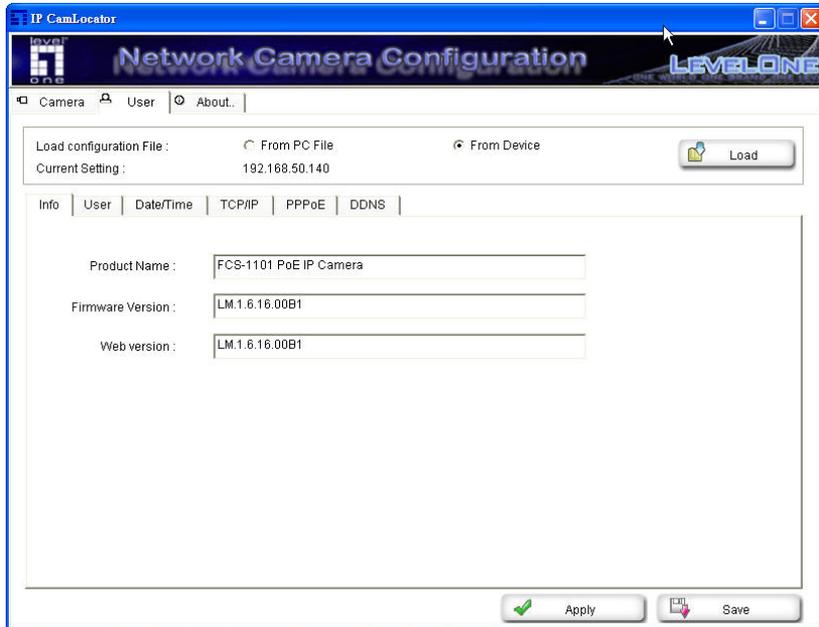

User

The Network Camera default account and password setting is “root/MAC address of IP camera (in capital letters)”. IP CamLocator provides to assign a password if the Network Camera is intended to be accessed by others. Use this menu to set the username and password of Administrator and up to 9 different users (User 1 to User 9), and the authentication access right of each group.

	User name	Password	Confirm	Mode
Administrator	root	*****	*****	Admin
User 1				Admin
User 2				Admin
User 3				Admin
User 4				Admin
User 5				Admin
User 6				Admin
User 7				Admin
User 8				Admin
User 9				Admin

Viewer authentication On Off

Username : Set a user name between 5 and 16 characters.

Password : Set a password between 5 and 16 characters.

Confirm : Re-type the password to confirm.

Mode : Set a user to **Admin**, **Operator** or **Viewer** mode.

Viewer authentication : Allows any viewer direct access to Live View.

Date/Time

The screenshot shows the 'Date/Time' configuration page in the IP CamLocator web interface. The page has a blue header with the 'LEVELONE' logo and navigation tabs for 'Camera', 'User', and 'About..'. Below the header, there are options to load configuration files from a PC or device, and a 'Load' button. The main configuration area is titled 'Date/Time' and includes fields for 'Current Setting' and 'PC clock', both showing '2008/ 2/13 17:17:07'. Under the 'Adjust' section, the 'Keep current setting' radio button is selected. There are also options for 'Synchronize with PC' and 'Synchronize with NTP'. The 'Synchronize with NTP' section includes a text box for 'NTP server name' containing 'pool.ntp.org', a checked 'Auto' checkbox, and a dropdown for 'Interval' set to '01' hours. At the bottom, there is a 'Time zone' dropdown set to '(GMT+08:00) Taipei'. 'Apply' and 'Save' buttons are located at the bottom right of the configuration area.

Current date & time : This displays the current date and time of the camera.

PC clock : This displays the date and time of the monitoring PC clock.

Adjust : Select one of four time adjusting modes.

Keep current setting : Select this mode to keep the current date and time of the camera.

Synchronize with PC : Select this mode to make the date and time of the camera the same as the monitoring PC.

Manual setting : Select this mode to manually adjust the date & time of the camera.

Synchronize with NTP : Specify the **NTP server name** and the Refresh **Interval** to synchronize the date and time of the camera with those of the time server, known as the NTP (Network Time Protocol) server.


Note:

- The NTP server (Network Time Protocol) is the time server which is an Internet standard protocol (built on top of TCP/IP) that assures accurate synchronization to the millisecond of computer clock times in a network of computers.

NTP server name : Type the host name or IP address of the NTP server, up to 64 characters.

Time zone : Select the time zone and time difference from Greenwich Mean Time in the area where the camera is installed from the pulldown box.

TCP/IP

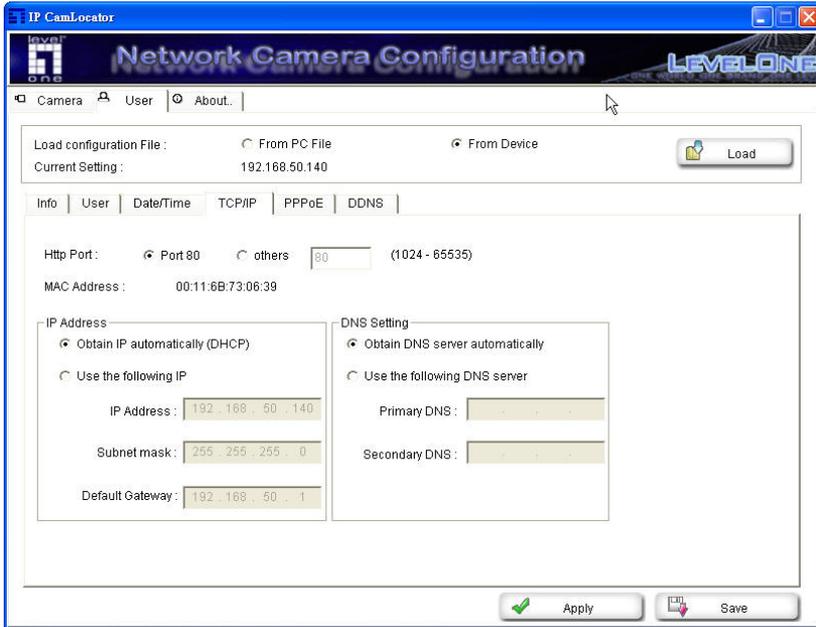

HTTP Port : Select **port 80** in general situations. If you want to use a port number other than **80**, select the text box and enter a port number between 1024 and 65535.

Note :

- When you have set the HTTP port number to a number other than 80 on the Network setting page or in the Setup Program, access the camera by typing the IP address of the camera on the web browser as follows:

Example: when HTTP port number is set to 2000 → `http://192.168.0.100:2000/`

MAC Address : Display the MAC address of the camera.

IP Address

Obtain IP automatically (DHCP) : If a DHCP server is installed on the network, to select this while the IP address is assigned by the DHCP server.

Note :

- When you set **Obtain IP automatically (DHCP)**, make sure that the DHCP server is working on the network.

Use the following IP : Select this when a fixed IP address is set.

IP Address : Enter the IP address of the camera.

Subnet mask : Enter the subnet mask.

Default Gateway : Enter the default gateway.

DNS Setting

Obtain DNS server automatically : If a DHCP server is installed on the network, to select this while the DNS server is assigned by the DHCP server.


Use the following DNS server : Select this when you set the fixed address as the IP address of DNS server.

Primary DNS : Enter the IP address of the primary DNS server.

Secondary DNS : Enter the IP address of the secondary DNS server, if necessary.

PPPoE

Use this when you connect the camera through PPPoE (Point -to- Point Protocol over Ethernet). PPPoE connection is the protocol that is widely used in xDSL (digital affiliate line such as ADSL, VDSL or SDSL) as the authentication and connection system.

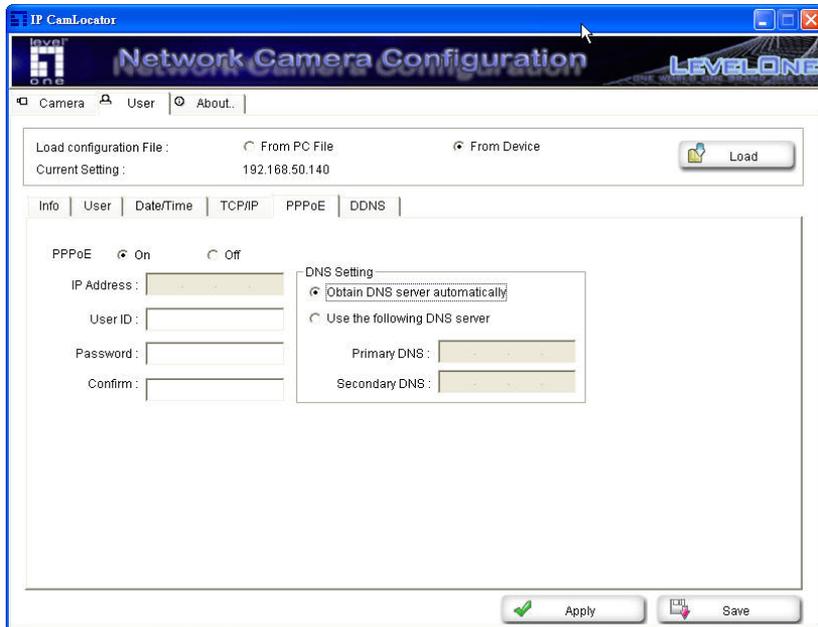

The screenshot shows the 'IP CamLocator' web interface for 'Network Camera Configuration'. The 'PPPoE' tab is selected. The 'PPPoE' section has a radio button for 'On' which is selected. Below it are input fields for 'IP Address', 'User ID', 'Password', and 'Confirm'. The 'DNS Setting' section has two radio buttons: 'Obtain DNS server automatically' (selected) and 'Use the following DNS server'. The latter has input fields for 'Primary DNS' and 'Secondary DNS'. At the top, there are options to load configuration from a PC file or from a device, with a 'Load' button. At the bottom, there are 'Apply' and 'Save' buttons.

IP Address : The IP address obtained at the PPPoE connecting with network.

User ID : Enter the user ID for authentication necessary for PPPoE connections. Type it up to 64 characters.

Password : Enter the password for authentication necessary for PPPoE connections. Type it up to 32 characters.

Confirm : Re-type the password to confirm.

Obtain DNS server automatically : Select this to obtain the address of DNS server automatically.

Use the following DNS server : Select this when you set the fixed address as the IP address of DNS server.

Primary DNS : Enter the IP address of the primary DNS server.

Secondary DNS : Enter the IP address of the secondary DNS server.

DDNS

The screenshot shows the 'IP CamLocator' web interface for 'Network Camera Configuration'. The 'DDNS' tab is selected. At the top, there are options to load configuration files: 'From PC File' and 'From Device'. The current setting is '192.168.50.140'. The DDNS section has a radio button for 'Off' selected. Below are input fields for 'Server Name' (a dropdown menu showing 'http://www.dyndns.org'), 'User ID', 'Password', 'Confirm', and 'Hostname'. At the bottom, there are 'Apply' and 'Save' buttons.

Server Name : Select the DDNS Server

User ID : Enter the user ID for authentication necessary for DDNS connections. Type it up to 64 characters.

Password : Enter the password for authentication necessary for DDNS connections. Type it up to 32 characters.

Confirm : Re-type the password to confirm.

Hostname : Enter the host name that is registered to the DDNS server.

Note :

- When you want to use DDNS function, you need to register an account in DDNS server first.

About

This page displays IP CamLocator information including Version, Copyright and Product Date information

Note :

- This computer procedure is protected of the right law and international convention. Making all or part which spread a procedure again without permission, may cause serious civil and criminal sanction and mention most severe telling in accordance with the law.



Using IP Camera via Mobile Phone

To use IP cameras via mobile phones, please make sure your RTSP is set to “ON”. (Default is “ON”) To change the settings of IP cameras, please see “Settings” for details.

3G Mobile Phone viewing

For 3G mobile phone viewing, type “rtsp://<IP>:<PORT>/video.3gp” into your 3G web browser. <IP> is the IP address of your IP camera, <PORT> is the RTSP port of your IP camera (Default value is 8554.)

Example: rtsp://100.10.10.1:8554/video.3gp

Note:

- You can also use RTSP clients (RealPlayer, MPlayer, Windows Media Player, Quicktime...etc.) to view RTSP streaming, just type in “rtsp://<IP>:<PORT>/video.3gp” as the Player’s URL

2.5G Mobile Phone viewing

For 2.5G mobile phone viewing, type “<IP>/mobile.wml” into your 2.5G web browser. <IP> is the IP address of your IP camera.

Using IP Camera via Web Browser

System Requirement

To use the product normally, we strongly recommend your computer follows our minimum system requirement (Computer level lower than this might cause some problems)

Item	Requirements
CPU	Pentium 4 1600MHz (or equivalent AMD)
Graphic Card	64MB RAM graphic cards (or equivalent on-board graphic cards)
RAM	512MB
Operating System	Windows 98, ME (Please see Note) Windows 2000, 2003, XP, Vista
Web Browser	Internet Explorer 6 or later

Note:

- If you're using Windows 98 or ME, please install IP CamLocator before using WEB UI to ensure the system runs normally.

How to Access to the Network Camera

This chapter introduces how to monitor the image from the device using Microsoft web browser. The LevelOne IP camera can be used with Microsoft web browsers and Intelligent IP CamLocator in Windows operation systems. This document focuses on introducing you to Microsoft web browser. The recommended browser for Windows is Internet Explorer 6.0. If you want to know how to use LevelOne IP camera with Intelligent IP CamLocator, check Intelligent IP CamLocator User's Manual in Windows operation systems.

The functions of the device should be set by the Administrator. For further instructions on setting the device, see "Setting the Camera".

Initial accessing the IP camera

1. Start your web browser, and enter the IP address or host name of the LEVELONE IP camera in the Location / Address field of your browser.

Note :

- If you only want to view the video without setting page, enter "http://<IP>/index2.htm" as your web URL.

2. Use the default account "root" and default password is MAC address in capital letter.

Note :

- The default user name "root" and the password are set at the factory for the administrator. You can change them in the Account Menu under Setting.





3. The monitor image will be displayed in your browser.


Configuration of Main Menu



Language

You can click the pulldown box to select system language, including English, Traditional Chinese, German, Danish, Greek and Korean.

Setting

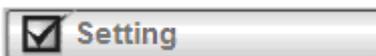

This function is only for the Administrator. Click this button to get into the Basic and Advance settings menu.

Client Setting

Mode: Click the pulldown box to choose between MPEG4 and MJPEG video compression mode.

Note : MJPEG streaming is unavailable if RTSP mode is ON.

View Size: Select the desired display image resolution to 640X480 or 320X240.

Protocol: Select the transferring protocol from TCP, UDP, HTTP and Multicast.

Video Buffer: Turn the Video Buffer function On/Off. The Video Buffer function makes the streaming more smoothly in unsteady network environment, but might cause a little delay in live viewing.



Image Setup

You can use the tool bar to optimize video brightness, contrast, and saturation.



Live View

Snapshot:


You can capture a still image shot by the camera and save it in your computer.

Press  , and a snapshot window will appear.

Click “Save” to save the picture in your computer.

Click “Close” to return to the view page.

Digital Zoom in / out the image via the monitor window

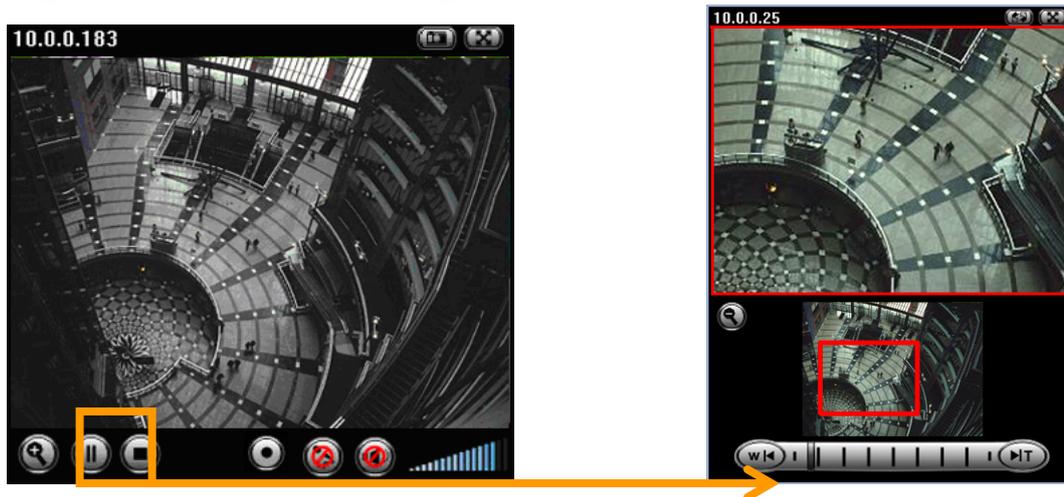

Click  to display the digital zoom in window.

Pull the  to adjust the digital zoom range, and it will be showed on the above window.

You can use the left click of your mouse to move the  to any where on the window.

Audio buttons :

 : Speakers turned on.

 : Speakers turned off.

 : Microphone turned on.

 : Microphone turned off.

 : Volume control bar.

Note :

-  It means the speakers of your computer are turned on to transmit the sounds from the connected IP camera(s). Similarly,  means you can broadcast to the connected IP camera(s) via the Ethernet using your microphone.

Video play buttons:



: Pause the current video



: Play the video.



: Stop the current video.



: Record the current video.

Setting

Basic

Click the “Basic” folder to display the sub folders, including System, Camera, Network, and Security.

System

Information

The Information page provides you with product factory information, including Product name, Firmware version, and Web version.



Day & Time

The screenshot shows a web-based configuration interface for 'Day & Time'. On the left is a sidebar with a 'HOME' button and a 'SETTING' menu. Under 'SETTING', there are sub-menus: 'BASIC', 'System', 'Information', 'Date/Time' (which is highlighted), 'Initialize', 'Camera', 'Network', 'Security', and 'Advance'. The main content area is titled 'Day & Time' and contains several configuration items:

- Current date/time**: A text box showing '2008-02-13 11:20:26'.
- PC clock**: A text box showing '2008-02-13 11:20:25'.
- Date/time format**: A dropdown menu set to 'yyyy-mm-dd hh:mm:ss'.
- Adjust**: A group of radio buttons with four options: 'Keep current setting', 'Synchronize with PC', 'Manual setting', and 'Synchronize with NTP'. The 'Synchronize with NTP' option is selected.
- NTP server name**: A text box containing 'pool.ntp.org' and a checked 'Auto' checkbox.
- Interval**: A dropdown menu set to '1' and the unit 'hours'.
- Time zone**: A dropdown menu set to '(GMT+08:00) Taipei'.

At the bottom of the configuration area are two buttons: 'OK' and 'Cancel'.

Current date & time : This displays the current date and time of the device.

PC clock : This displays the date and time of the monitoring PC clock.

Date & time format : Click the pulldown box to select among different time display formats, including yyyy-mm-dd hh:mm:ss (year-month-day hour:minute:second), mm-dd-yyyy hh:mm:ss (month-day-year hour:minute:second), and dd-mm-yyyy hh:mm:ss (day-month-year hour:minute:second).

Adjust : Select one of four time adjusting modes.

Keep current setting : Select this mode to keep the current date and time of the device.

Synchronize with PC : Select this mode to make the date and time of the device the same as the monitoring PC.

Manual setting : Select this mode to manually adjust the date & time of the device.

Synchronize with NTP : Specify the NTP server name and the Refresh Interval to synchronize the date and time of the device with those of the time server, known as the NTP (Network Time Protocol) server.

Note:

- The NTP server (Network Time Protocol) is the time server which is an Internet standard protocol (built on top of TCP/IP) that assures accurate synchronization to the millisecond of computer clock times in a network of computers.

NTP server name : Type the host name or IP address of the NTP server, up to 64 characters.

Time zone : Select the time zone and time difference from Greenwich Mean Time in the area where the device is installed from the pulldown box.

Initialize



Reboot : Click this button to reboot the device. A confirmation dialogue will appear. Click OK to proceed. It takes about two minutes to reboot the device.

Factory default : Click this button to reset the device to the factory default settings. A confirmation dialogue will appear. Click OK to proceed, the network indicator on the device will start to blink. After completing adjustments to the default settings, the device will reboot automatically. Do not turn off the device until the device reboots.

Backup setting data : Save the setting data of the device to a file. Click Save, and follow the instructions on the browser to save the setting data file to your specified location.

Restore setting : Load the saved setting data of the device. Click Browse and select the file in which the setting data is stored. Click OK, and the device is adjusted according to the loaded data and restarted.


Firmware update : Upgrade the device software. Click Browse and select the file for upgrading. A confirmation dialogue will appear. Click OK to start upgrading. The device will reboot upon completion.

Note:

- Use only upgrade files that are special for this device. Problems may occur otherwise.
- Do not turn off the device power or disconnect the network until the upgrading is completed.

Camera

General

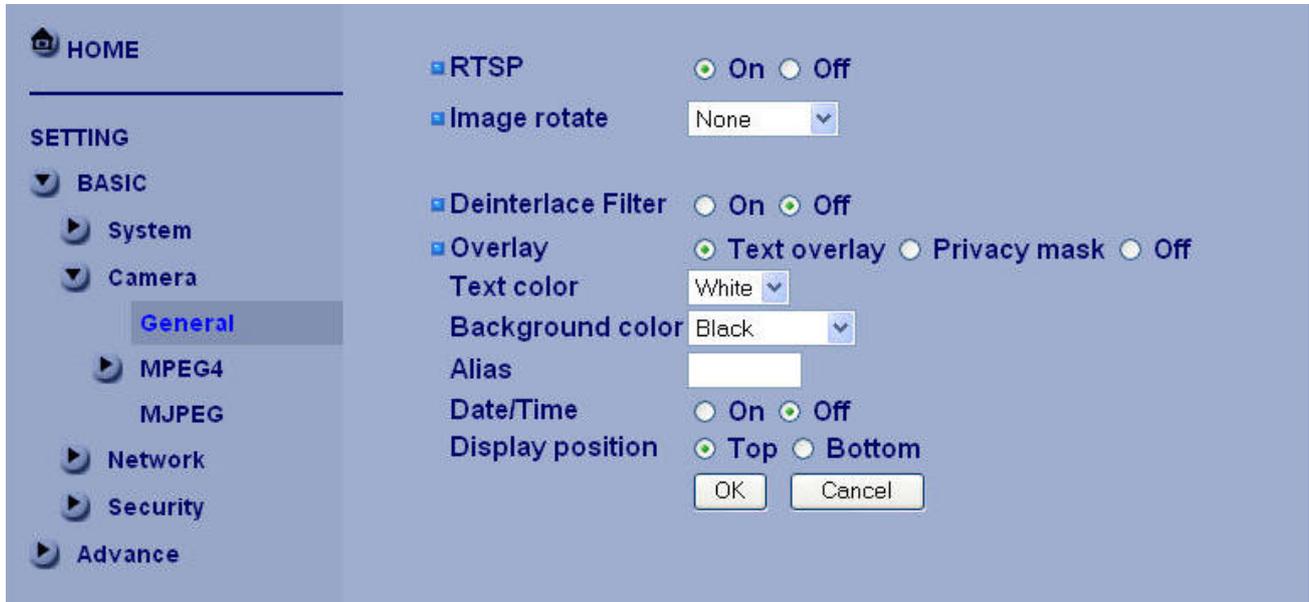

RTSP: Switch the RTSP streaming On/Off.

Note :

- RTSP: Real Time Streaming Protocol. RTSP is supported by most of the media clients . (RealPlayer, Media Player, QuickTime, etc...)

Deinterlace Filter : Switch the deinterlace filter on/off.

Overlay : Select to add Text Overlay or Privacy Mask on/off the display screen.

Text Overlay : Enables users to see some information on the display screen, including Date/Time and user-defined text. You can also change the background color.

Privacy Mask : Enables users to conceal an area of the video image.

MPEG4

Computer View



MPEG4 viewer port (If RTSP mode is OFF)

Unicast streaming Video/Audio port number : Specify the transmission port number of the video data. It is initially set to 8090. Specify an even number from 1024 to 65534.

Image Size : Specify the image size the network camera transmits. You can choose among 704 × 480, 352 × 240 and 176 × 120 for NTSC mode and 704 × 576, 352 × 288 and 176 × 144 for PAL mode.

Frame rate : Set the frame rate of the MPEG4 image. Selectable values are 5, 10, 15, 20, 25, 30 fps. The unit “fps” stands for “frames sent per second”.

Quality


Auto : The quality and bitrate will be automatically decided according to the frame rate.

Fixed Quality : The selectable values are Medium, Standard, Good, Detailed and Excellent.

Fixed Bitrate : Set the bit rate of MPEG4 image transmission for a line. Selectable values are 64, 128, 256, 384, 512, 768, 1024, 1280, 1536 and 2048 kbps.

Note :

- The selected frame rate and bit rate are a tentative value. The actual frame rate and bit rate may be different according to the image size, the shooting scene or the network condition.

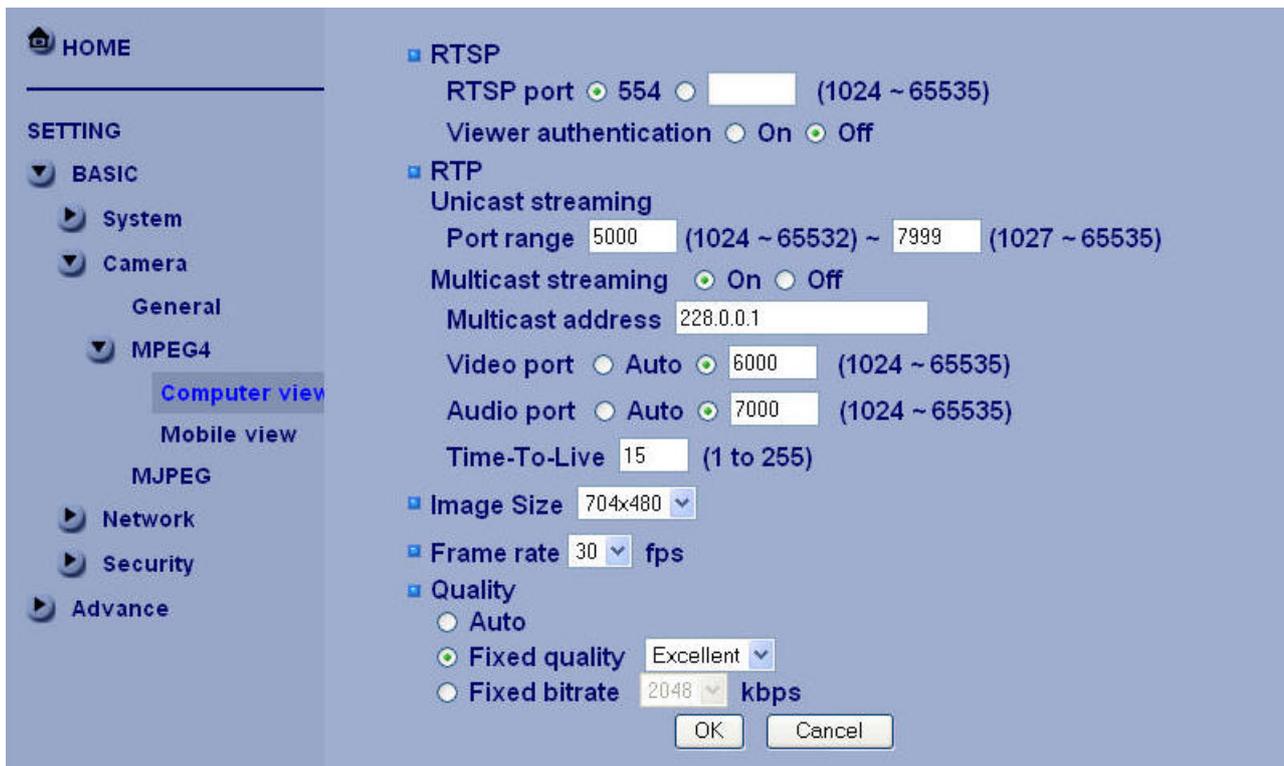

RTSP (If RTSP mode is ON)

RTSP port: Specify the transmission port number of RTSP streaming video. Default value is 554.

Viewer authentication: If the viewer authentication is ON, users viewing through RTSP will be requested to key-in username and password.

RTP (If RTSP mode is ON)

Unicast streaming:

Unicast streaming Video/Audio port range: Specify the transmission port range of RTP streaming video. RTP will select a port randomly from the range.

Multicast streaming:

Multicast address: Specify the multicast server address.

Video / Audio Port: Specify the transmission port number of the video data. Specify an even number from 1024 to 65534.

Time-To-Live: Set the maximum TTL that multicast can pass through.

MPEG4 viewer port (If RTSP mode is OFF)

Unicast streaming Video/Audio port number : Specify the transmission port number of the video data. It is initially set to 8090. Specify an even number from 1024 to 65534.

Image Size : Specify the image size the network camera transmits. You can choose among 704 × 480, 352 × 240 and 176 × 120 for NTSC mode and 704 × 576, 352 × 288 and 176 × 144 for PAL mode.

Frame rate : Set the frame rate of the MPEG4 image. Selectable values are 5, 10, 15, 20, 25, 30 fps. The unit “fps” stands for “frames sent per second”.

Quality

Auto : The quality and bitrate will be automatically decided according to the frame rate.


Fixed Quality : The selectable values are Medium, Standard, Good, Detailed and Excellent.

Fixed Bitrate : Set the bit rate of MPEG4 image transmission for a line. Selectable values are 64, 128, 256, 384, 512, 768, 1024, 1280, 1536 and 2048 kbps.

Note :

- The selected frame rate and bit rate are a tentative value. The actual frame rate and bit rate may be different according to the image size, the shooting scene or the network condition.

Mobile View

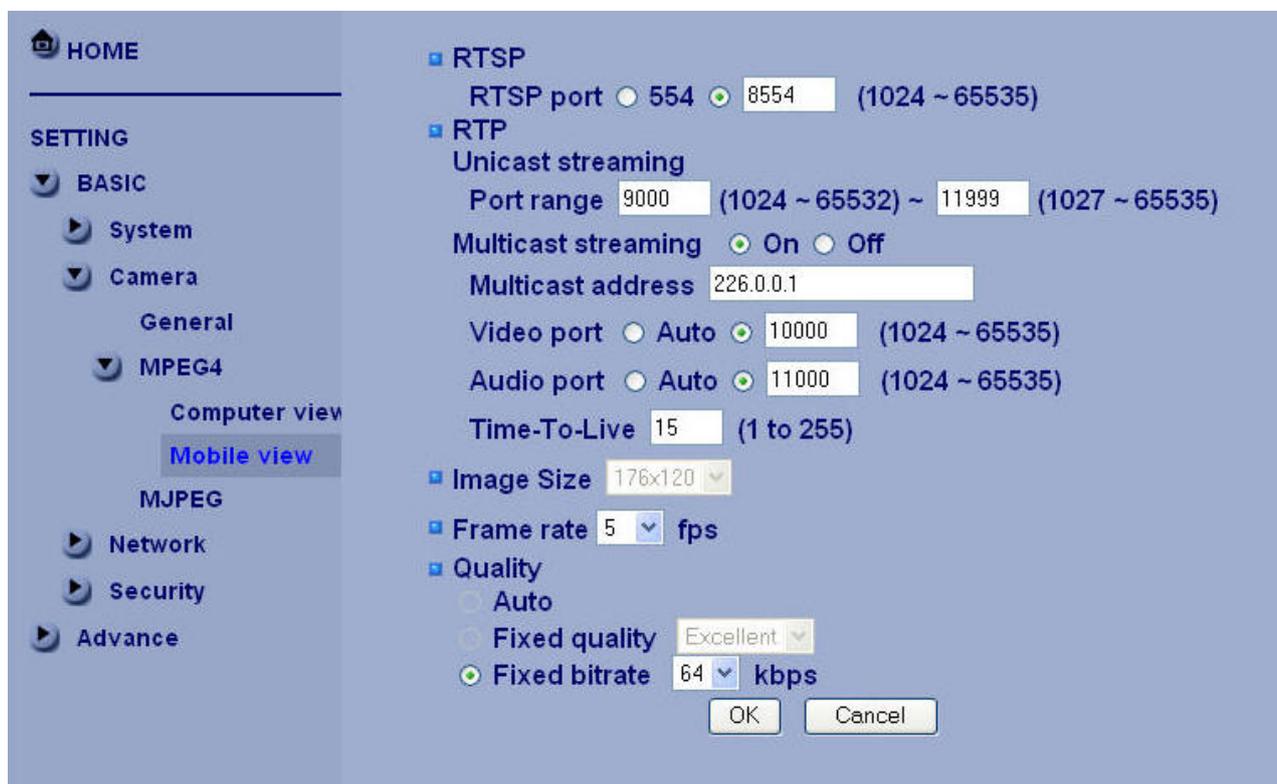

RTSP (If RTSP mode is ON)

RTSP port: Specify the transmission port number of RTSP streaming video. Default value is 8554.

RTP (If RTSP mode is ON)

Unicast streaming:

Unicast streaming Video/Audio port range: Specify the transmission port range of RTP streaming video. RTP will select a port randomly from the range.

Multicast streaming:

Multicast address: Specify the multicast server address.

Video / Audio Port: Specify the transmission port number of the video data. It is initially set to 10000 and 11000. Specify an even number from 1024 to 65534.

Time-To-Live: Set the maximum TTL that multicast can pass through.


Image Size: The Image size of Mobile view is fixed at 176x120.

Frame rate : Set the frame rate of the MPEG4 image. Selectable values are 5, 10, 15, 20 fps. The unit "fps" stands for "frames sent per second".

Quality

Fixed Bitrate : Set the bit rate of MPEG4 image transmission for a line. Selectable values are 64, 32, and 16kbps..

MJPEG

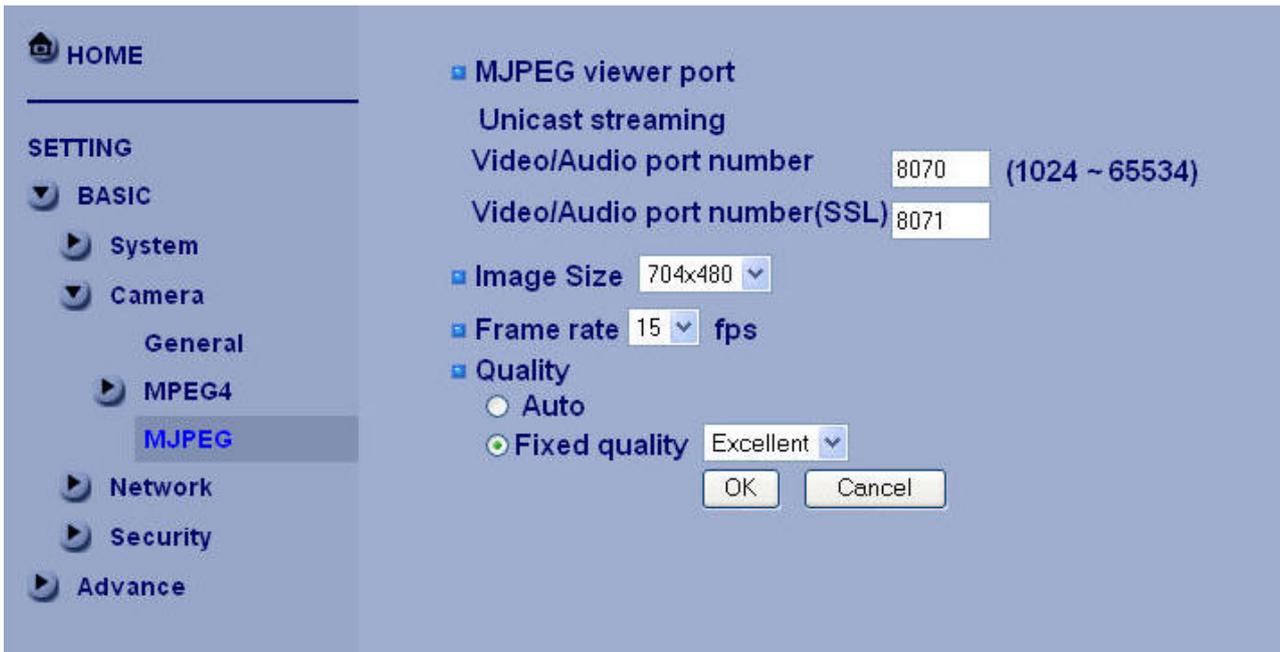

Note :

- MJPEG settings are unavailable if the RTSP mode is ON, which means the MJPEG streaming is closed.

MJPEG viewer port

Unicast streaming Video/Audio port number : Specify the transmission port number of the video data. It is initially set to 8070. Specify an even number from 1024 to 65534.

Note :

- Unicast streaming : Specify the transmission port number of the video data and audio data used when UDP (Unicast) is selected with the TCP/UDP transmission switching icon in the main viewer.

Image Size : Specify the image size the network camera transmits. You can choose among 704 × 480, 352 × 240 and 176 × 120 for NTSC mode and 704 × 576, 352 × 288 and 176 × 144 for PAL mode.

Frame rate : Set the frame rate of the MJPEG image. Selectable values are 5, 10, 15 fps. The unit “fps” stands for “frames sent per second”.


Quality

Auto : The quality will be automatically decided.

Fixed quality : The selectable values are Medium, Standard, Good, Detailed and Excellent.

Network

Information

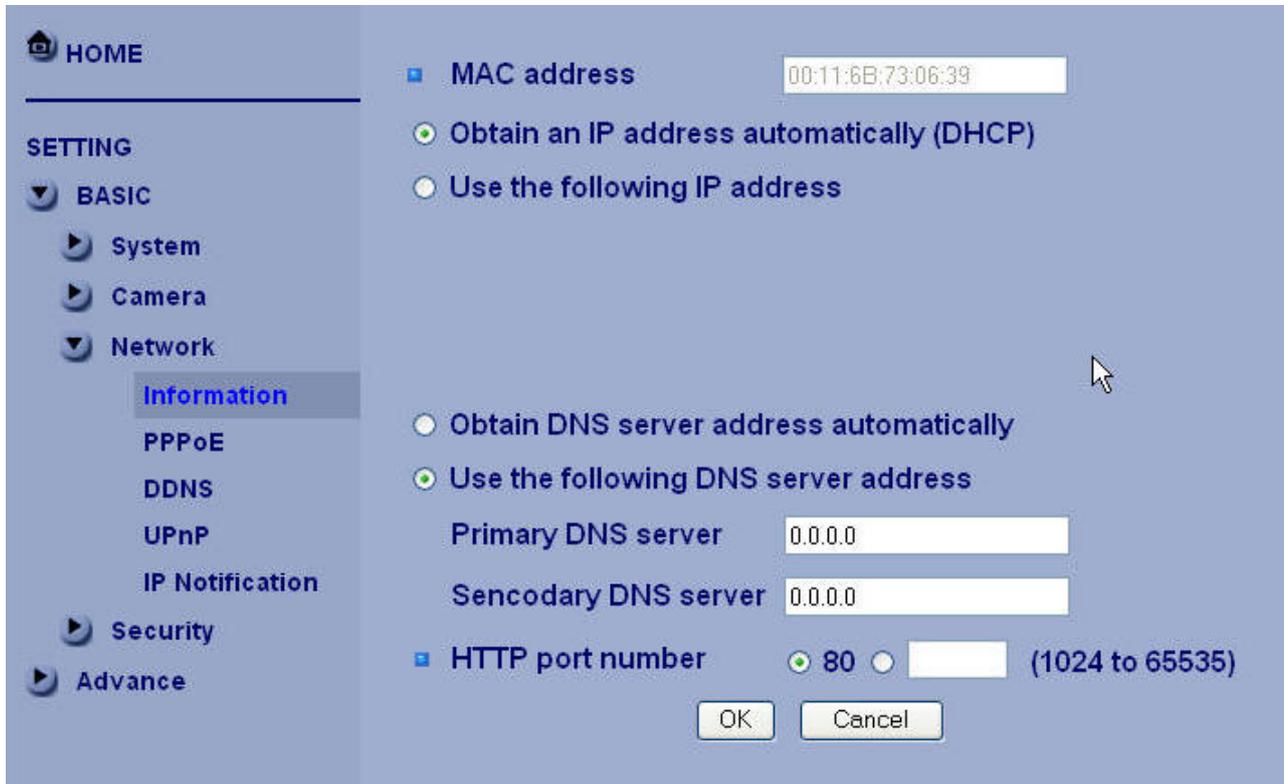

MAC address : Display the MAC address of the device.

Obtain an IP address automatically (DHCP) : If a DHCP server is installed on the network, to select this while the IP address is assigned by the DHCP server.

Note :

- When you set Obtain an IP address automatically (DHCP), make sure that the DHCP server is working on the network.

Use the following IP address : Select this when a fixed IP address is set.

IP address : Enter the IP address of the device.

Subnet mask : Enter the subnet mask.

Default gateway : Enter the default gateway.

Use the following DNS server address : Select this when you set the fixed address as the IP address of DNS server.

Primary DNS server : Enter the IP address of the primary DNS server.

Secondary DNS server : Enter the IP address of the secondary DNS server, if necessary.

HTTP port number : Select 80 in general situations. If you want to use a port number other than 80, select the text box and enter a port number between 1024 and 65535.

Note :

- When you have set the HTTP port number to a number other than 80 on the Network setting page or in the Setup Program, access the device by typing the IP address of the device on

the web browser as follows:

Example: when HTTP port number is set to 2000 → <http://192.168.1.100:2000/>

PPPoE

Use this when you connect the device through PPPoE (Point-to-Point Protocol over Ethernet). PPPoE connection is the protocol that is widely used in xDSL (digital affiliate line such as ADSL, VDSL or SDSL) as the authentication and connection system.

The screenshot shows a web-based configuration interface for PPPoE. On the left is a navigation menu with 'HOME' at the top, followed by 'SETTING'. Under 'SETTING', there are categories: 'BASIC', 'Network' (expanded), 'Information', 'DDNS', 'UPnP', 'IP Notification', 'Security', and 'Advance'. The 'Network' category is expanded to show 'Information', 'PPPoE' (selected), 'DDNS', 'UPnP', and 'IP Notification'. The main content area is titled 'PPPoE' and has a status 'On' (indicated by a green dot). Below this are several input fields: 'IP address' (0.0.0.0), 'User ID', 'Password', and 'Re-type password'. There are two radio button options for DNS: 'Obtain DNS server address automatically' (unselected) and 'Use the following DNS server address' (selected). Below these are two more input fields: 'Primary DNS server' (0.0.0.0) and 'Secondary DNS server' (0.0.0.0). At the bottom right are 'OK' and 'Cancel' buttons.

IP address : The IP address obtained at the PPPoE connecting with network.

User ID : Enter the user ID for authentication necessary for PPPoE connections. Type it up to 64 characters.

Password : Enter the password for authentication necessary for PPPoE connections. Type it up to 32 characters.

Re-type password : Re-type the password to confirm.

Obtain DNS server address automatically : Select this to obtain the address of DNS server automatically.

Use the following DNS server address : Select this when you set the fixed address as the IP address of DNS server.

Primary DNS server : Enter the IP address of the primary DNS server.

Secondary DNS server : Enter the IP address of the secondary DNS server.

DDNS

DDNS On Off

Server name

User ID

Password

Re-type password

Host name

OK Cancel

Server name : Choose the DDNS Server from the list.

User ID : Enter the user ID for authentication necessary for DDNS connections. Type it up to 64 characters.

Password : Enter the password for authentication necessary for DDNS connections. Type it up to 32 characters.

Re-type password : Re-type the password to confirm.

Host name : Enter the host name that is registered to the DDNS server.

Note :

- When you want to use DDNS function, you need to register an account in DDNS server first.

UPnP

The device includes support for UPnP, which is enabled by default. If also enabled on your computer, the device will automatically be detected and a new icon will be added to “My Network Places.” It provides port forwarding for opening a port in a router or firewall in a private network in order to let a party from the outside world contact a user inside.

HOME

SETTING

BASIC

- System
- Camera
- Network
 - Information
 - PPPoE
 - DDNS
 - UPnP
 - IP Notification
- Security
- Advance

UPnP On Off

Turn On UPnP port forwarding

HTTP port 80 (1024 ~ 65535)

SSL Port 443 (1024 ~ 65535)

MPEG4 viewer port (1024 ~ 65535)

MPEG4 viewer port(SSL) (1024 ~ 65535)

MJPEG viewer port (1024 ~ 65535)

MJPEG viewer port(SSL) (1024 ~ 65535)

MPEG4 RTSP port

Computer view (1024 ~ 65535)

Mobile view (1024 ~ 65535)

OK Cancel

HTTP port : Enter the HTTP port number and default HTTP port is 80.

SSL port: Enter the SSL port number and default SSL port is 443.

MPEG4 viewer port : Enter the MPEG4 viewer port number and default MPEG4 viewer port is 8090.

MPEG4 viewer port(SSL): Enter the MPEG4 SSL viewer port and default is 8091.


MJPEG viewer port : Enter the MJPEG viewer port number and default MJPEG viewer port is 8070.

MJPEG viewer port(SSL): Enter the MPEG4 SSL viewer port and default is 8071.

MPEG4 RTSP port: Enter the MPEG4 RTSP port, default value is 8050 for computer view, 8030 for mobile view.

IP Notification

When network notify type is set to On, you can send an e-mail notification of the completion of the network setting.

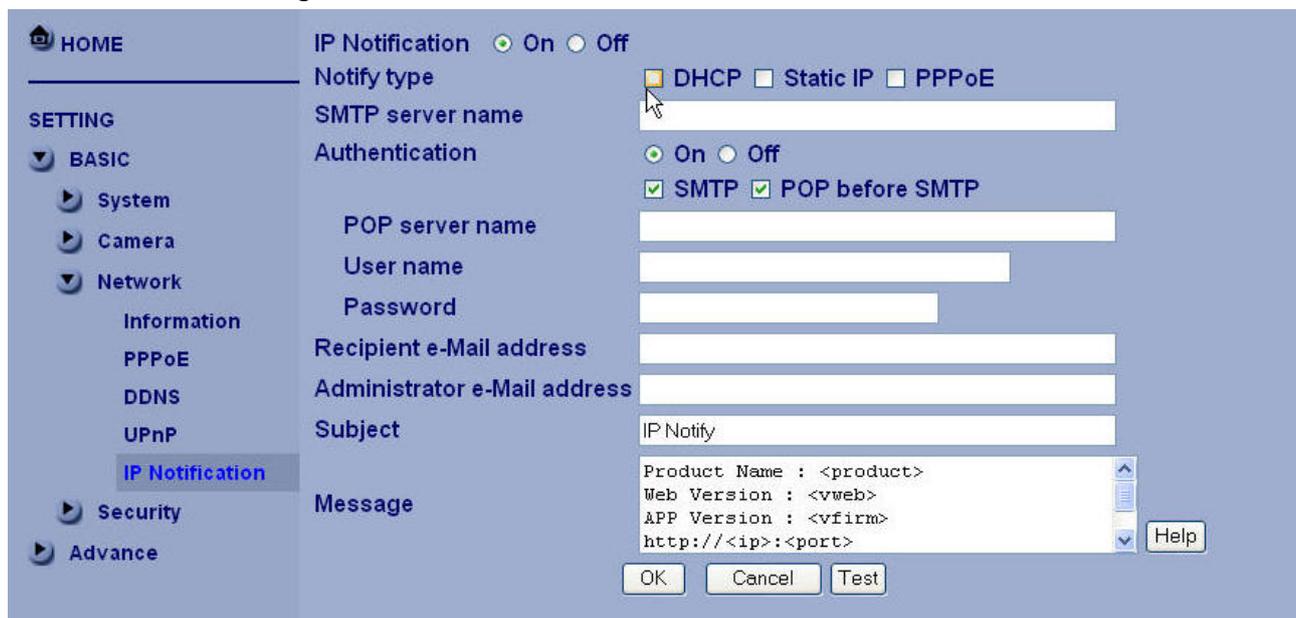

Notify type : Select type of DHCP, Static IP and PPPoE will notify.

SMTP server name : Type the SMTP server name up to 64 characters, or the IP address of the SMTP server.

Authentication : Select the authentication required when you send an email.

Off: Select if no authentication is necessary when an email is sent.

On: When authentication is necessary an e-mail is sent, select one of the authentication methods from the followings.

SMTP: Select if SMTP authentication is necessary when an e-mail is sent.

POP before SMTP: Select if POP before SMTP authentication is necessary when an e-mail is sent.

Note :

- When you set to On, be sure to select either or both SMTP or/and POP before SMTP.

POP server name : It is necessary when the POP before SMTP is selected in Authentication. Type the POP (receiving mail) server name up to 64 characters, or type the IP address of the POP server. This setting is necessary when the SMTP server which sends e-mails performs authentication using the POP user account.

User name, Password : Type the user name and Password of the user who has the mail account. This setting is necessary when the SMTP server which sends e-mails performs authentication.

Recipient e-mail address : Type the recipient e-Mail address up to 64 characters. You can specify up to three recipient E-mail addresses.

Administrator e-mail address : Type the Administrator e-Mail address up to 64 characters. This address is used for reply mail and sending system messages from the SMTP server.

Subject : Type the subject/title of the e-Mail up to 64 characters. With respect to mail which is

sent according to the IP notification.

Message

Type the text of the E-mail up to 384 characters. Default value provides network information including IP, Port, MAC, Model, Firmware Version and Web Version.

Security

Account

The device default account and password setting is “root/MAC address of IP camera (in capital letters)”. That means everyone might access the device including the configuration as long as the IP address is known. It is necessary to assign a password if the device is intended to be accessed by others. Use this menu to set the user names and passwords of Administrator and up to 9 different users (User 1 to User 9), and the access right of each user.

User ID	User name	Password	Re-type Password	Viewer mode
Administrator	root	●●●●●●●●	●●●●●●●●	Admin
User 1				Admin
User 2				Admin
User 3				Admin
User 4				Admin
User 5				Admin
User 6				Admin
User 7				Admin
User 8				Admin
User 9				Admin

Viewer authentication On Off

OK Cancel

User name : Set a user name between 5 and 16 characters.

Password : Set a password between 5 and 16 characters.

Re-type password : Re-type the password to confirm.

Viewer Mode : Set a user to Admin, Operator or Viewer mode.

Viewer authentication : Allows any viewer direct access to Live View.

HTTPS

HTTPS is a URI scheme used to indicate a secure HTTP connection. It is syntactically identical to the http:// scheme normally used for accessing resources using HTTP. Using an https: URL indicates that HTTP is to be used, but with a different default TCP port (443) and an additional encryption/authentication layer between the HTTP and TCP. You can use the IP camera through HTTPS easily by using https:// instead of http://.



Create & Install: Create a self-signed certificate for HTTPS to recognize.

Installed Certificate: Display or remove the properties of the installed certificate.

HTTPS Connection Policy: Set HTTPS connection policy for different level of users.

Advance

FTP Client

Use this menu to set up for capturing and sending images to an FTP server. By using FTP client function, you can send the image and audio file which has been shot and recorded linked with the external sensor input or with the built-in motion detection function to FTP server. FTP client setting menu is composed of two tabs, General, Alarm sending and Periodical sending.

General

HOME

SETTING

- BASIC
- Advance
 - FTP client
 - General
 - Alarm sending
 - Periodical sending
 - SMTP
 - HTTP event
 - Schedule
 - Alarm buffer
 - Motion detection
 - System Log

FTP client On Off

FTP server name

User name

Password

Re-type password

Passive mode On Off

OK Cancel Test

FTP client function : To activate the FTP client function, select On. The FTP client setting page appears. When you do not wish to use the FTP client function, select Off.

Note :

- The frame rate and operability on the main viewer may decrease while a file is being transmitted by the FTP client function.

FTP server name : Type the FTP server name to upload still images up to 64 characters, or the IP address of the FTP server.

User name : Type the user name for the FTP server.

Password : Type the password for the FTP server.

Retype password : To confirm the password, type the same characters as you typed in the Password box.

Passive mode : Set whether you use the passive mode of FTP server or not when connecting to FTP server. Select On to connect to FTP server using the passive mode.

Attached file type : Set attached file type to MJPEG or MPEG.4

Alarm sending

Set to forward the image and audio file to the specified FTP server linked with the alarm detection by the external sensor input or by the built-in motion detection function. Select On to send the image and audio file to FTP server linked with the alarm detection.

The screenshot shows a web interface for configuring alarm sending. On the left is a navigation menu with 'HOME' at the top, followed by 'SETTING' and a list of sub-menus: 'BASIC', 'Advance', 'FTP client' (with sub-items 'General', 'Alarm sending', and 'Periodical sending'), 'SMTP', 'HTTP event', 'Schedule', 'Alarm buffer', 'Motion detection', and 'System Log'. The 'Alarm sending' sub-menu is selected. The main content area is titled 'Alarm sending' and has radio buttons for 'On' (selected) and 'Off'. Below this are input fields for 'Remote path' and 'Image file name'. The 'Suffix' section has radio buttons for 'Date Time' and 'Sequence number' (selected), with a 'Sequence number clear' button labeled 'Clear'. The 'Alarm' section has two checked checkboxes: 'Motion detection' (with a 'Motion detection' button) and 'Use alarm buffer' (with an 'Alarm buffer' button). The 'Effective Period' section has radio buttons for 'Always' and 'Schedule' (selected), with a 'Schedule' button. At the bottom are 'OK' and 'Cancel' buttons.

Remote path : Type the path to the destination in FTP server up to 64 characters.

Image file name : Type the file name you want to assign to the images when sending to the FTP server. You can use up to 10 alphanumeric characters, - (hyphen) and _ (underscore) for naming.

Suffix : Select a suffix to add to the file name:

Date & time: The date & time suffix is added to the Image file name. The date/time suffix consists of lower two-digits of year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits), second (2 digits), and consecutive number (2 digits), thus 14-digit number is added to the file name.

Sequence number: A consecutive number of 10 digits between 0000000001 and 4294967295 and two fixed digits 00 is added to the Image file name.

Motion Detection : Click it on for using Motion Detection function as a sensor. You can set the motion detection function page.

Note :

- Motion Detection works only when the Video mode is set to MPEG4 and the Cropping is set to Off.

Alarm Buffer : Select Use alarm buffer when you forward the image/ audio of before and after the alarm detection (pre-alarm, post-alarm). If you do not select it, only the image of the moment of the alarm detection is forwarded. Click Alarm buffer to display the Alarm buffer setting menu. For details, see “Setting the Alarm Buffer — Alarm buffer setting Menu on page. Effective period : Set the period when the periodical sending is effective.

Always : The periodical sending is always effective.

Schedule : You can specify the period when the periodical sending is effective in the schedule setting in the other section. Click Schedule and the setting menu for the effective period is displayed.

Periodical sending

You can set to send an image file to FTP server periodically by selecting On to send the image file to FTP server linked with setting period.

HOME

SETTING

BASIC

Advance

FTP client

General

Alarm sending

Periodical sending

SMTP

HTTP event

Schedule

Alarm buffer

Motion detection

System Log

Periodical sending On Off

Remote path

Image file name

Suffix None Date Time Sequence number

Sequence number clear

Interval H M
(MIN : 1min. MAX : 24-hour interval)

Effective Period Always Schedule

Remote path : Type the remote path up to 64 characters.

Image file name : Type the file name of the image sent to FTP server up to 10 alphanumeric characters, - (hyphen) and _ (under score).

Suffix : Select a suffix to be added to the file name sent to FTP server.

None : The name of the sent file will be the Image file name.

Date & time : The date & time suffix is added to the Image file name. The date & time suffix consists of lower two-digits of year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits) and second (2 digits), and consecutive number (2 digits), thus 14-digit number is added to the file name.

Sequence number : A consecutive number is added to the Image file name.

Sequence number clear : Click Clear and the suffix of the sequence number returns to 1.

Interval : Set the periodical sending is effective interval. Min value is 1 min and Max value is 24 hour.

Effective period : Set the period when the periodical sending is effective.

Always : The periodical sending is always effective.

Schedule : You can specify the period when the periodical sending is effective in the schedule setting in the other section. Click Schedule and the setting menu for the effective period is displayed. (“Setting the Schedule — Schedule setting Menu” on page 34)

SMTP

Set the SMTP menu when you want to send an image via e-mail. By using Mail (SMTP) function, you can send a mail with attached image which has been shot linked with the external sensor input or with the built-in motion detection function. The image file can also be sent periodically. E-Mail (SMTP) setting menu is composed of three tabs, General, Alarm sending and Periodical sending.

General

Select On when you use the SMTP function. The common setting options are displayed below. If you do not wish to use the e-Mail (SMTP) function, select Off and click OK.

HOME

SETTING

BASIC

Advance

FTP client

SMTP

General

Alarm sending

Periodical sending

HTTP event

Schedule

Alarm buffer

Motion detection

System Log

e-Mail (SMTP) On Off

SMTP server name

Authentication On Off

SMTP POP before SMTP

POP server name

User name

Password

Recipient e-Mail address

Administrator e-Mail address

Subject

Message

OK Cancel Test

Note :

- During transmission of an image file via mail, the frame rate and operation performance of the monitor image of the main viewer decline.
- While the camera video mode is set to MPEG4, the image of the composite video signal output from the video output connector of the camera may be distorted during mail transmission.
- You cannot send an audio file by using the mail sending function.

SMTP server name : Type the SMTP server name up to 64 characters, or the IP address of the SMTP server.

Authentication : Select the authentication required when you send an email.

Off: Select if no authentication is necessary when an email is sent.

On: When authentication is necessary an e-mail is sent, select one of the authentication methods from the followings.

SMTP: Select if SMTP authentication is necessary when an e-mail is sent.

POP before SMTP: Select if POP before SMTP authentication is necessary when an e-mail is sent.

Note :

- When you set to On, be sure to select either or both SMTP or/and POP before SMTP.

POP server name : It is necessary when the POP before SMTP is selected in Authentication. Type the POP (receiving mail) server name up to 64 characters, or type the IP address of the POP server. This setting is necessary when the SMTP server which sends e-mails performs authentication using the POP user account.

User name, Password : Type the user name and Password of the user who has the mail account. This setting is necessary when the SMTP server which sends e-mails performs authentication.

Recipient e-mail address : Type the recipient e-Mail address up to 64 characters. You can specify up to three recipient E-mail addresses.

Administrator e-mail address : Type the Administrator e-Mail address up to 64 characters. This address is used for reply mail and sending system messages from the SMTP server.

Attached File Type: Select to attach the file as JPEG or MPEG4.

Subject : Type the subject/title of the e-Mail up to 64 characters. With respect to mail which is sent according to the alarm detection when Alarm sending of the alarm tab is set to On, the characters standing for the sensor type added to the subject.

Message : Type the text of the E-mail up to 384 characters. (A line break is equivalent to 2 characters.)

Alarm sending

Set to send the mail with connection to the alarm detection by the external sensor input or by the built-in motion detection function.

The screenshot shows a web interface for configuring alarm sending. On the left is a navigation menu with 'HOME' at the top, followed by 'SETTING' and a list of sub-menus: 'BASIC', 'Advance', 'FTP client', 'SMTP', 'General', 'Alarm sending' (highlighted), 'Periodical sendin', 'HTTP event', 'Schedule', 'Alarm buffer', 'Motion detection', and 'System Log'. The main content area is titled 'Alarm sending' and contains the following settings: 'Alarm sending' (radio buttons for 'On' and 'Off', with 'On' selected), 'File attachment' (radio buttons for 'On' and 'Off', with 'On' selected), 'Image file name' (an empty text input field), 'Suffix' (radio buttons for 'None', 'Date Time', and 'Sequence number', with 'Sequence number' selected), 'Sequence number clear' (a 'Clear' button), 'Alarm' (checkboxes for 'Motion detection' and 'Use alarm buffer', both checked, with corresponding buttons), and 'Effective Period' (radio buttons for 'Always' and 'Schedule', with 'Always' selected). At the bottom are 'OK' and 'Cancel' buttons.

Alarm sending : Select On to set to send mail with connection to the alarm detection.

File attachment : Set whether an image file is attached to the mail sent or not. When On is selected, the image file made by the settings below is attached. When Off is selected, only the message is sent.

Image file name : Type the file name you want to assign to the image to attach a mail. You can use up to 10 alphanumeric, - (hyphen) and _ (underscore) for naming.

Suffix : Select a suffix to add to the file name:

None: No suffix is added. The Image file name is assigned to the image to be sent via an e-Mail.

Date & time: The date & time suffix is added to the Image file name. The date/time suffix consists of lower two-digits of year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits), second (2 digits), and consecutive number (2 digits), thus 14-digit number is added to the file name.

Sequence number: A consecutive number of 10 digits between 0000000001 and 4294967295 and two fixed digits 00 is added to the Image file name.

Motion Detection : Click it on for using Motion Detection function as a sensor. You can set the motion detection function page.

Note :


- Motion Detection works only when the Video mode is set to MPEG4 and the Cropping is set

to Off.

Alarm Buffer : Select Use alarm buffer when you forward the image/ audio of before and after the alarm detection (pre-alarm, post-alarm). If you do not select it, only the image of the moment of the alarm detection is forwarded. Click Alarm buffer to display the Alarm buffer setting menu. For details, see “Setting the Alarm Buffer — Alarm buffer setting Menu on page.

Periodical sending

You can set to send an image file by SMTP server periodically by selecting On to send the image file by SMTP server linked with setting period.

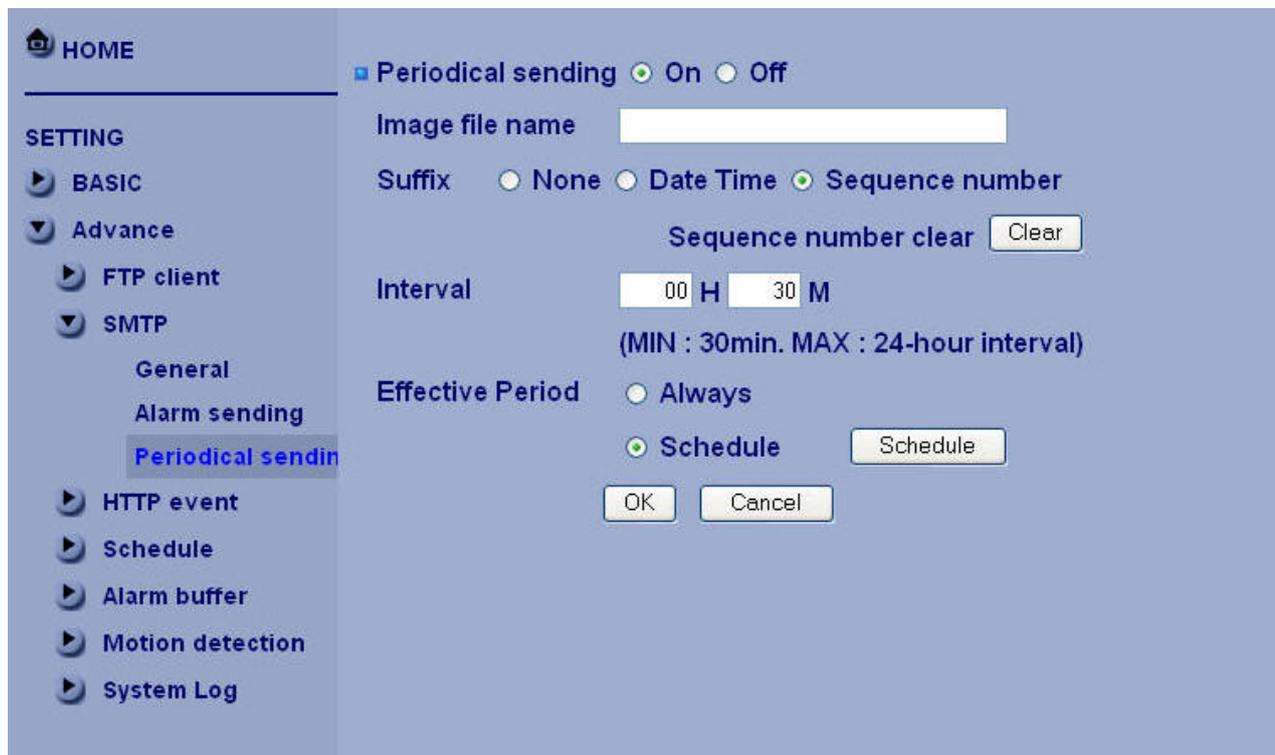

HOME

SETTING

- BASIC
- Advance
 - FTP client
 - SMTP
 - General
 - Alarm sending
 - Periodical sending**
 - HTTP event
 - Schedule
 - Alarm buffer
 - Motion detection
 - System Log

Periodical sending On Off

Image file name

Suffix None Date Time Sequence number

Sequence number clear

Interval H M
(MIN : 30min. MAX : 24-hour interval)

Effective Period Always Schedule

Image file name : Type the file name of the image sent by SMTP up to 10 alphanumeric characters, - (hyphen) and _ (under score).

Suffix : Select a suffix to be added to the file name sent by SMTP.

None : The name of the sent file will be the Image file name.

Date & time : The date & time suffix is added to the Image file name. The date & time suffix consists of lower two-digits of year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits) and second (2 digits), and consecutive number (2 digits), thus 14-digit number is added to the file name.

Sequence number : A consecutive number is added to the Image file name.

Sequence number clear : Click Clear and the suffix of the sequence number returns to 1.

Interval : Set the periodical sending is effective interval. Min value is 30 min and Max value is 24 hour.

Effective period : Set the period when the periodical sending is effective.


Always : The periodical sending is always effective.

Schedule : You can specify the period when the periodical sending is effective in the schedule setting in the other section. Click Schedule and the setting menu for the effective period is displayed. (“Setting the Schedule — Schedule setting Menu” on page 34)

HTTP Event

Use this menu to set up for capturing and sending images to an HTTP server. By using HTTP client function, you can send the image and audio file which has been shot and recorded linked with the external sensor input or with the built-in motion detection function to HTTP server. HTTP client setting menu is composed of two tabs, General and Alarm sending.

General

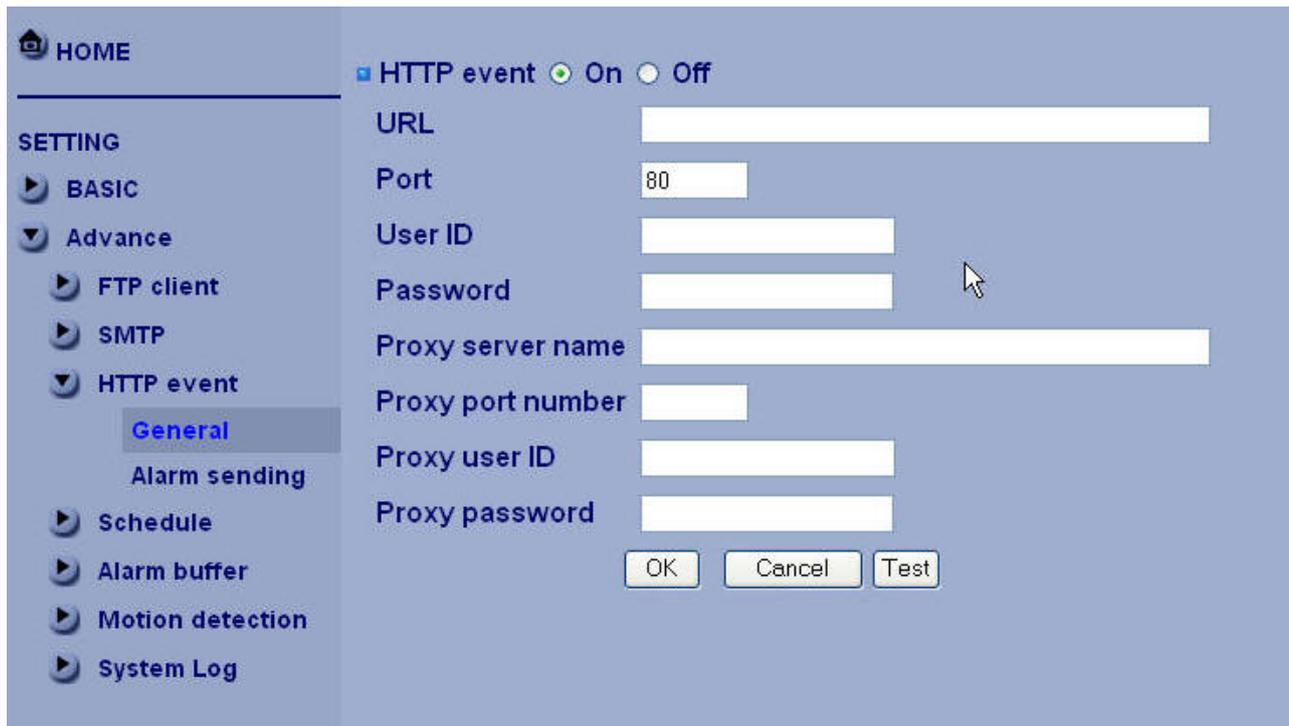


The screenshot shows a web-based configuration interface for the HTTP Event function. On the left is a navigation menu with a 'HOME' icon and a 'SETTING' section containing: BASIC, Advance (expanded), FTP client, SMTP, HTTP event (expanded), General (selected), Alarm sending, Schedule, Alarm buffer, Motion detection, and System Log. The main area is titled 'HTTP event' with radio buttons for 'On' (selected) and 'Off'. Below this are input fields for: URL, Port (set to 80), User ID, Password, Proxy server name, Proxy port number, Proxy user ID, and Proxy password. At the bottom are 'OK', 'Cancel', and 'Test' buttons.

HTTP event: Set up the HTTP server URL, port, user id, password, and proxy server settings.

Alarm sending

Set to send the mail with connection to the alarm detection by the external sensor input or by the built-in motion detection function.

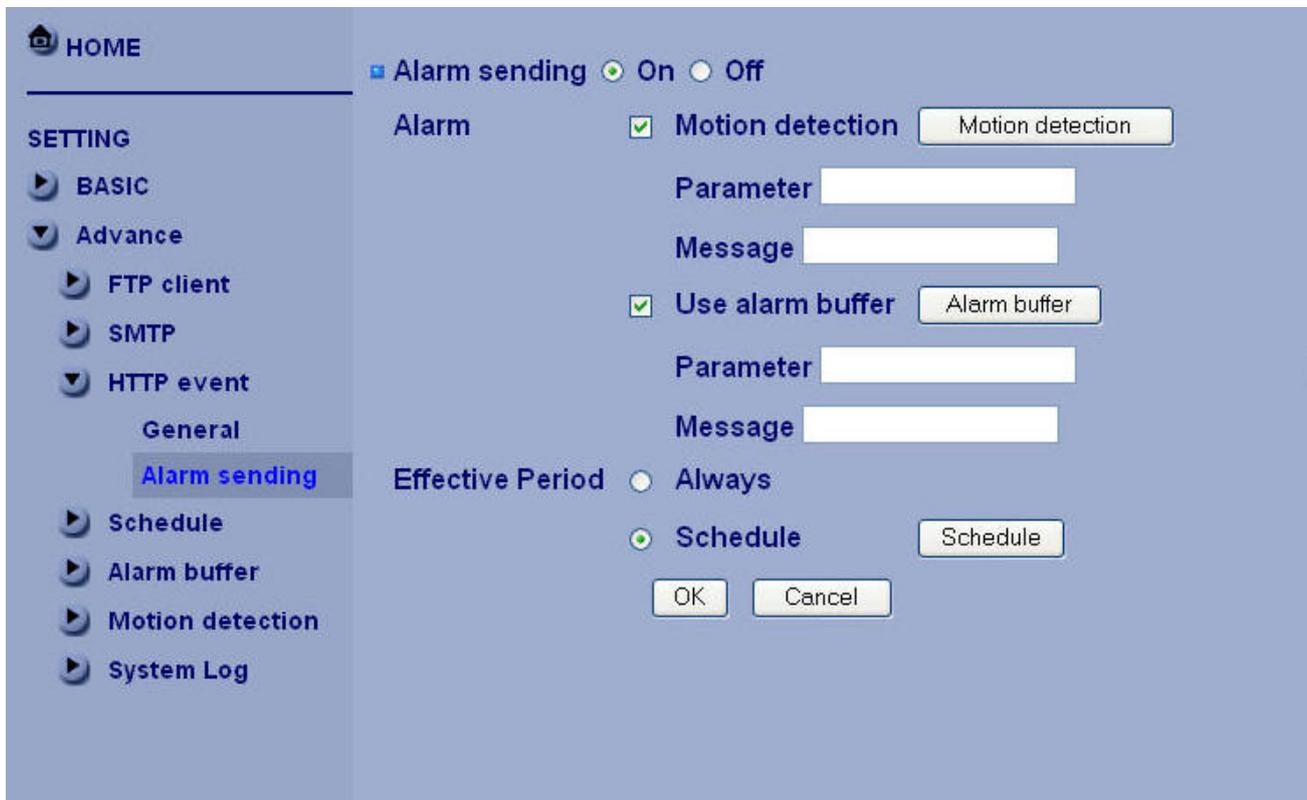

Alarm sending : Select On to set to send mail with connection to the alarm detection.

Motion Detection : Click it on for using Motion Detection function as a sensor. You can set the motion detection function page.

Note :

- Motion Detection works only when the Video mode is set to MPEG4 and the Cropping is set to Off.

Alarm Buffer : Select Use alarm buffer when you forward the image/ audio of before and after the alarm detection (pre-alarm, post-alarm). If you do not select it, only the image of the moment of the alarm detection is forwarded. Click Alarm buffer to display the Alarm buffer setting menu. For details, see “Setting the Alarm Buffer — Alarm buffer setting Menu on page.

Effective period : Set the period when the periodical sending is effective.

Always : The periodical sending is always effective.

Schedule : You can specify the period when the periodical sending is effective in the schedule setting in the other section. Click Schedule and the setting menu for the effective period is displayed.

Schedule

When you click Schedule on the Advanced mode menu, the Schedule setting menu appears. This is the same menu as the setting menu which is displayed when you click Schedule to set Effective period and Schedule in FTP client setting menu, e-Mail (SMTP) setting menu, Alarm out setting menu and so on. Example: When setting e-Mail (SMTP) (the alarm sending) in the Schedule setting menu.

HOME

SETTING

- BASIC
- Advance
 - FTP client
 - SMTP
 - HTTP event
 - Schedule
 - Setting
 - Alarm buffer
 - Motion detection
 - System Log

Schedule selection FTP - Alarm

Mon Start time 00 : 00 - End time 24 : 00

Tue Start time 00 : 00 - End time 24 : 00

Wed Start time 00 : 00 - End time 24 : 00

Thu Start time 00 : 00 - End time 24 : 00

Fri Start time 00 : 00 - End time 24 : 00

Sat Start time 00 : 00 - End time 24 : 00

Sun Start time 00 : 00 - End time 24 : 00

Use the same time schedule every day.

OK Cancel

Setting

Schedule selection

Select the list box to specify the schedule you want to set. e-Mail (SMTP) – Alarm, e-Mail (SMTP) – Periodical, FTP – Alarm, FTP – Periodical, HTTP event – Alarm, Alarm output – Alarm or Alarm output – Timer, can be selected.

Mon (Monday) to Sun (Sunday)

The time period on the right of the checked day is the effective period of the schedule.

Start time, End time


Specify the Start time and the End time.

Use the same time schedule every day

When this is checked, the Start time and End time set to Mon (Monday) are applied to all days. In this case, the Start time and End time of the other days than Mon (Monday) cannot be input.

Alarm Buffer

You can set the Pre-alarm image and audio (the image and audio before the alarm detection) and the Post - alarm image and audio. These can be set when Alarm sending FTP client setting menu or Image memory setting menu is set to On, and besides when Use alarm buffer is selected.

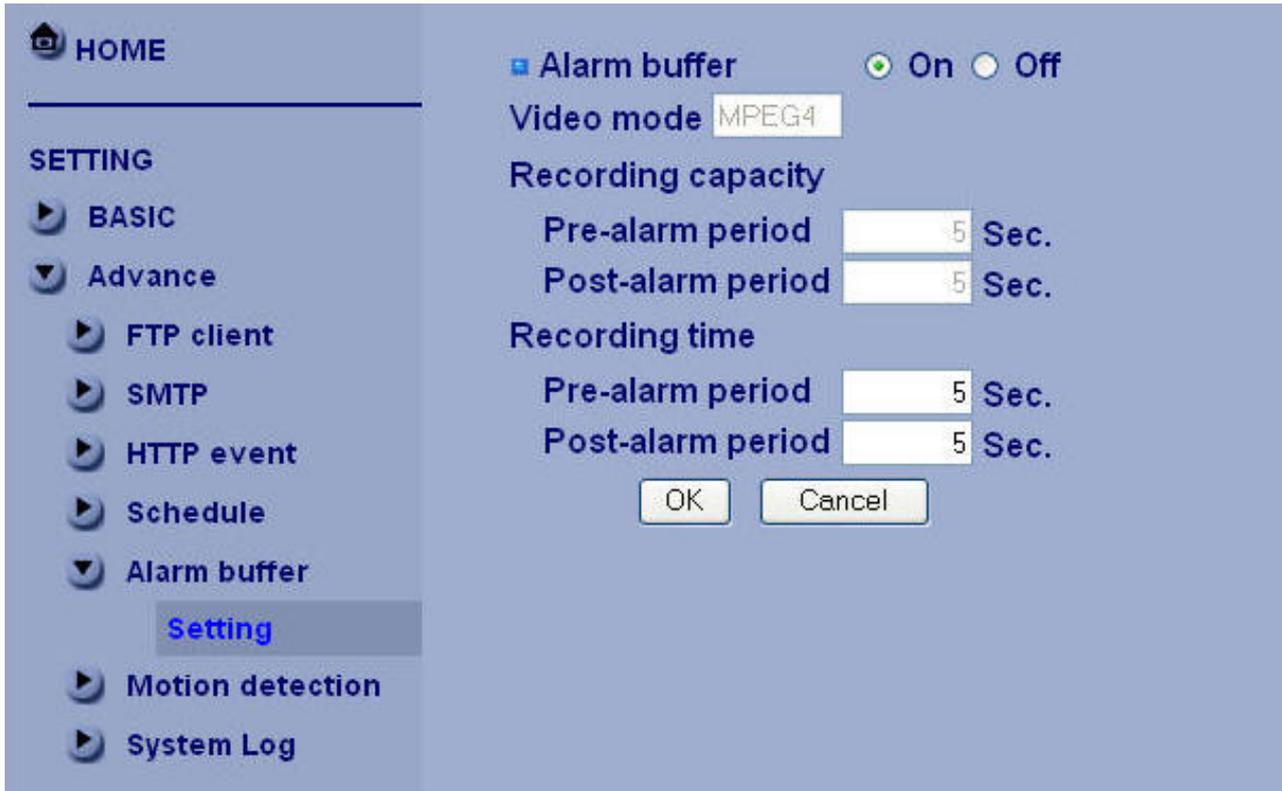

Setting

Alarm buffer : To activate the Alarm buffer function, select On. The basic setting options are displayed below. When you do not use the Alarm output function, select Off.

Recording capacity

Pre-alarm period : Display the maximum recording capacity of image/audio before the alarm detection.

Post-alarm period : Display the maximum recording capacity of image/audio after the alarm detection.

Recording time

Set the recording time for the Pre-alarm image/audio and Post alarm image/audio.

Pre alarm period : Type it with recording time of the image/audio before the alarm detection.

Post alarm period : Type it with recording time of the image/audio after the alarm detection.

Note :

- The value of Recording capacity differs depending on Image size, Bitrate (for MPEG4) and Image quality (for MPEG4 and MJPEG) in the camera setting menu.

Motion Detection

When you click Motion Detection on the Advance mode menu, the Motion Detection setting menu appears. There are three Motion Detection functions as sensors to set for different detecting zones. Each one has Threshold and Sensitivity inputs which you can adjust to specific zone sequentially. Motion Detection function can support to FTP, SMTP and Alarm output for capturing and sending images or starting alarm output.



Click it On when you use the Motion Detection function and detecting zone appears for adjusting and moving. The common setting options are displayed below. If you do not wish to use the Motion Detection function, click it Off and press OK.

Motion Detection 1 : Click it on for using Motion Detection 1 function as a sensor. You can adjust and move the detecting zone by using mouse.

Motion Detection 2 : Click it on for using Motion Detection 2 function as a sensor. You can adjust and move the detecting zone by using mouse.

Motion Detection 3 : Click it on for using Motion Detection 3 function as a sensor. You can adjust and move the detecting zone by using mouse.

Threshold : You can use the tool bar to set up-limit value. When detecting zone signals are over setting value, it would carry on assigned work.

Sensitivity : You can use the tool bar to set down-limit value. When detecting zone signals are over setting value, it would carry on assigned work.

Carry out the following steps :

Click On to Motion Detection 1 choose one of eight orders.

A detecting zone 1 appears and use mouse to adjust and move the zone boundaries and

position.

Use tool bar to set Threshold and Sensitivity value.

Follow the steps to set the other Motion Detection.

Click the OK to save the setting.


Note :

- Be careful! Motion Detection function don't work with Patrol function at same time.

System Log

The System Log function allows users to review any changes and events happened. The system starts logging automatically after started.

Remote Log: Enables user to send the log data to a specified log server.

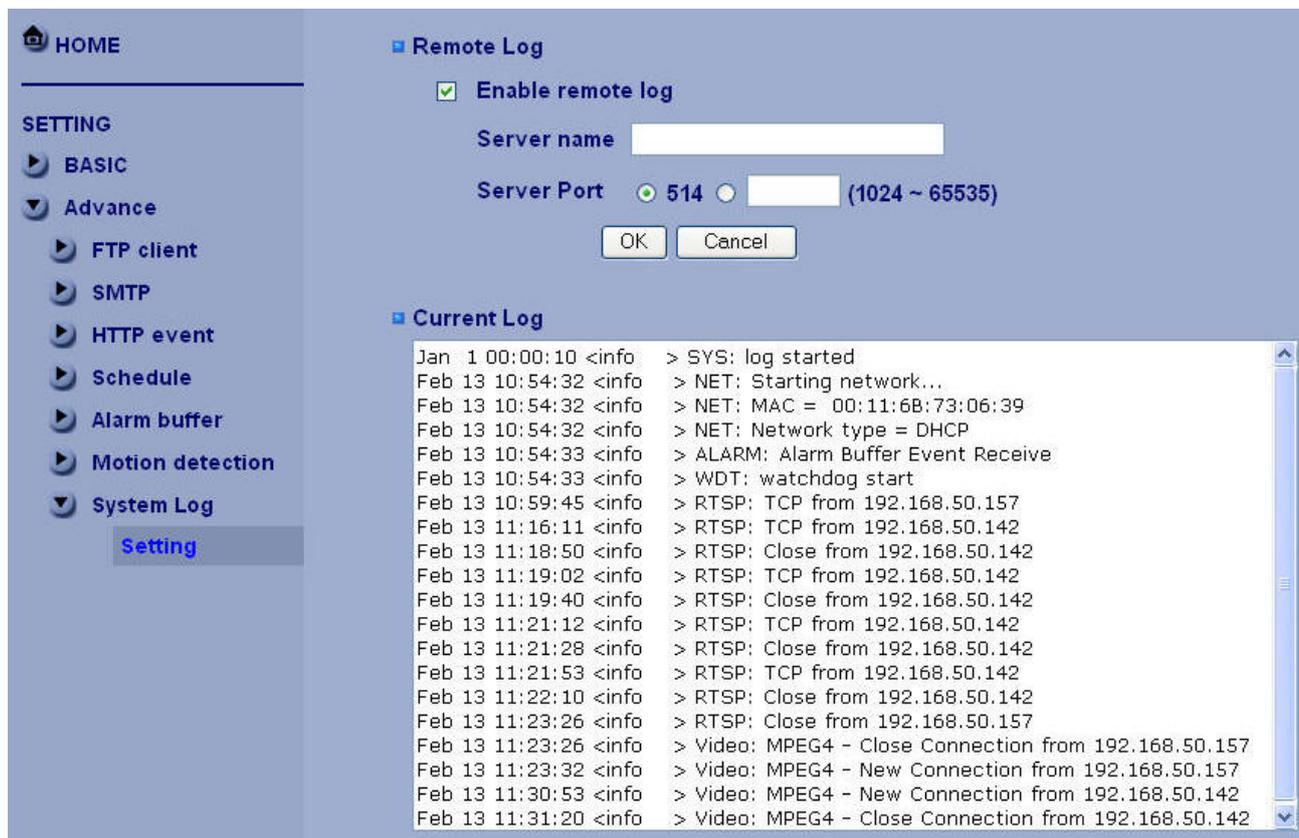

Remote Log

Enable remote log

Server name


Server Port 514 (1024 ~ 65535)

Current Log

```
Jan 1 00:00:10 <info > SYS: log started
Feb 13 10:54:32 <info > NET: Starting network...
Feb 13 10:54:32 <info > NET: MAC = 00:11:6B:73:06:39
Feb 13 10:54:32 <info > NET: Network type = DHCP
Feb 13 10:54:33 <info > ALARM: Alarm Buffer Event Receive
Feb 13 10:54:33 <info > WDT: watchdog start
Feb 13 10:59:45 <info > RTSP: TCP from 192.168.50.157
Feb 13 11:16:11 <info > RTSP: TCP from 192.168.50.142
Feb 13 11:18:50 <info > RTSP: Close from 192.168.50.142
Feb 13 11:19:02 <info > RTSP: TCP from 192.168.50.142
Feb 13 11:19:40 <info > RTSP: Close from 192.168.50.142
Feb 13 11:21:12 <info > RTSP: TCP from 192.168.50.142
Feb 13 11:21:28 <info > RTSP: Close from 192.168.50.142
Feb 13 11:21:53 <info > RTSP: TCP from 192.168.50.142
Feb 13 11:22:10 <info > RTSP: Close from 192.168.50.142
Feb 13 11:23:26 <info > RTSP: Close from 192.168.50.157
Feb 13 11:23:26 <info > Video: MPEG4 - Close Connection from 192.168.50.157
Feb 13 11:23:32 <info > Video: MPEG4 - New Connection from 192.168.50.157
Feb 13 11:30:53 <info > Video: MPEG4 - New Connection from 192.168.50.142
Feb 13 11:31:20 <info > Video: MPEG4 - Close Connection from 192.168.50.142
```

Trouble shooting sheet

After powering up or inserting LAN cable connected to a PoE switch, the Network Camera performs a self-diagnostic to detect any hardware defects.

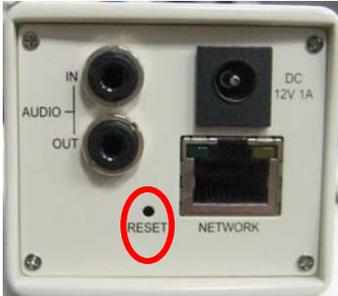

Reset and Restore

At the rear side of the camera there is a button hidden in the pinhole as shown in the picture. It is used to reset the system or restore the factory default settings. Sometimes resetting the system sets the system back to normal state. If the system problems remain after reset, restore the factory settings and install again.

 Restoring the factory defaults will erase any previous settings. Reset or restore the system after power on.

Troubles	Probable Reasons	Solutions
No action while power on. No image. The Networking indicator isn't flashing.	Power cable is not in well connection.	Reconnected.
	Firmware is hang up.	Start up with factory default setting by pressing the reset button over 10 seconds then releasing it.
Having image but can't control. The indicator isn't flashing.	Firmware is hang up.	Restart the Network camera by pressing and releasing the reset button.
Unstable images	Poor video cable connection	Reinsert
	Power W is not enough	Change
Vague images	The focus is out of focus.	Adjust the lens or focus manually.

Streaming Video/Audio Solution

Streaming video is a sequence of "moving images" that are sent in compressed form over the Internet and displayed by the viewer as they arrive. With streaming, a Web user does not have to wait to download a large file before seeing the video or hearing the sound. Instead, the media is sent in a continuous stream and is played as it arrives.

- Snapshot JPEG image

<http://servername/cgi-bin/jpg/image>

<http://servername/jpg/image.jpg>

- Snapshot JPEG image through mobile phone

<http://servername/mobile.wml>

<http://servername/mobile.htm>

- Stream MJPEG video stream

<http://servername:8070/video.mjpg>

- Stream MPEG4 video stream

<http://servername:8090/video.mp4>

- Stream RTSP stream

<rtsp://servername:554/video.mp4>

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.

59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all. The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

Terms And Conditions For Copying, Distribution And Modification

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as

separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it. Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program. In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:
- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
 - b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
 - c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based

on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING,

REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This product incorporates open source code into the software and therefore falls under the guidelines governed by the General Public License (GPL) agreement.

Adhering to the GPL requirements, the open source code and open source license for the source code are available for free download at <http://global.level1.com>.

If you would like a copy of the GPL or other open source code in this software on a physical CD medium, LevelOne (Digital Data Communications) offers to mail this CD to you upon request, for a price of US\$9.99 plus the cost of shipping.

