

GVM-1101 / GVM-1220 / GVM-1000

Web Smart Media Converter

User Manual

Chapter 1 Overview

1.1 Overview

GVM-1101 / GVM-1220 / GVM-1000 is remote Managed 10/100/1000 auto-negotiation Ethernet fiber media converter with OAM functions developed by our company. Remote devices can be managed by fiber-connected media converters/switches (which must support IEEE802.3ah standard).

1. Offer one Ethernet port, one 1000BASE-FX、1000 BASE-SX/LX optical port or SFP port.
2. Support 4 kinds of OAM functions: Discover of OAM, MIB variable response, OAM Loop back, Dying Gasp alarm.
3. Support optional LFP feature
4. Support Jumbo frame transmission
5. Support MDI/MDIX UTP cable

1.2 functional characteristics

1. Support LFP function.
2. Support Q-in-Q function, Optical port and Ethernet port can be set separately as dual Tag ports, and can be set as ISP Tag and ISP Tag TPID at will.
3. Can query and configured the operation mode of each port on local and remote devices, including port speed, full/half-duplex, and flow control, etc, and can display the real-time status of each port.
4. Support bandwidth-limiting function: with the step of 64kps, the bandwidth can be set between 0Mbps and 1000Mbps at will.
5. Offer MIB library files, support Open View、Snmpc, and other softwares.
6. Support link line-speed loopback, convenient for line debugging

Chapter 2 Technical parameters

2.1 Basic parameter

| | |
|---------------------------------|-----------------------|
| Structure Size (H×W×D) | 32mm×127mm×156mm |
| Optical Port | SC/PC、ST/PC、FC/PC、SFP |
| Working temperature (°C) | (0,45) |
| Storage temperature (°C) | (-40,80) |
| Power dissipation (W) | Typical value:5W |
| Relative humidity | 5%~90% no condensing |

Chapter 3 Preparation before Installing and Connection


3.1 Optical port connection

GVM-1101 / GVM-1220 / GVM-1000 supports hot plug SFP port. When one pair of optical modules is connected, four requirements need to be fulfilled.

1. Optical wavelengths must be the same, especially for single fiber optical ports, require transmit-receive optical wave with difference frequencies. The transmitting and receiving operating wavelengths should match each other (for example: if TX is 1310nm, and the opposite end RX should be 1310nm).
2. The rate of optical modules must be the same.
3. The optical powers must be matching
4. Comply with the Ethernet protocol of IEEE802.3、IEEE802.3u、IEEE802.3z、IEEE802.3x.


3.2 Network-building method

When connecting products in Network, Rules of 3.1 must be obeyed rules for connecting optical ports: for GVM-1101 / GVM-1220 / GVM-1000 fiber media converters. please build network according to the following sketch maps.

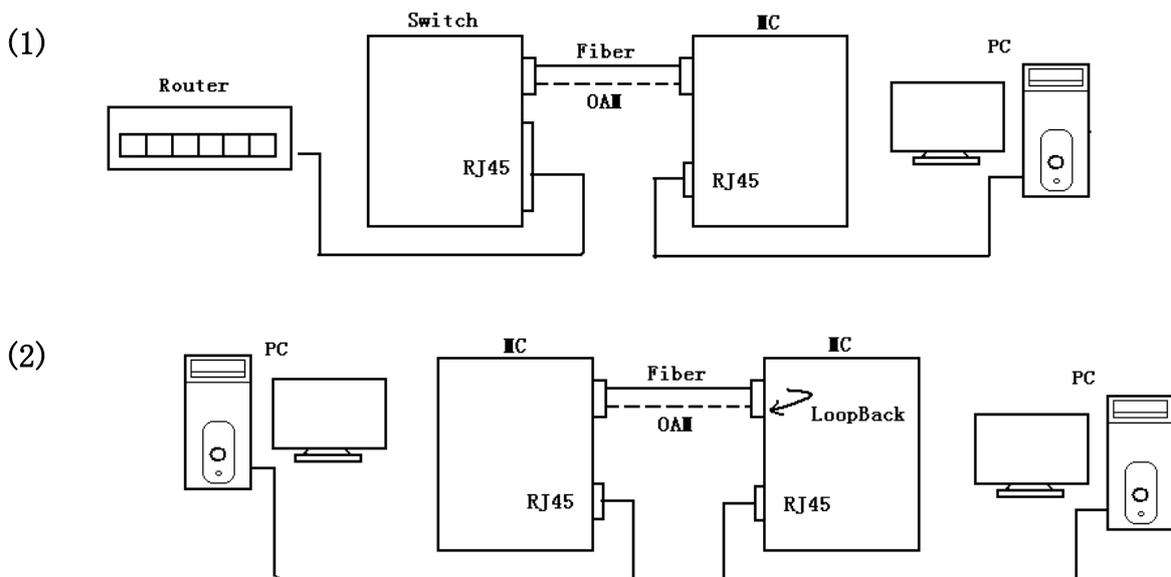

3.3 Test

Test the optical port connection between the device and Media Converter. After the OAM Discovery of Media Converter, test RFC-2544 and MIB variable quantity response.

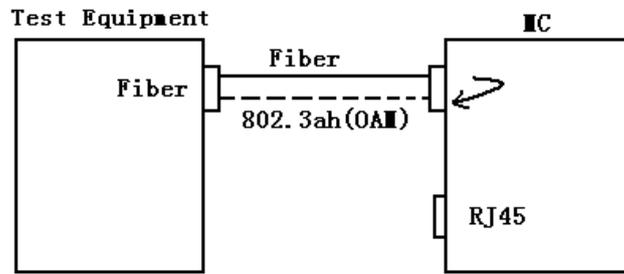

3.4 Connection between Media converter and other devices with UTP cables

Connecting the media converter and switch/router with cat UTP cables, the cables max length is to 100m.

1. Auto-negotiation of Ethernet port and MDIX/MDI function can be supported.

| Fiber media converter | Other devices | RJ45 port connection type |
|-----------------------|---------------|---------------------------|
| Fiber media converter | Switch | MDIX/MDI cable |
| Fiber media converter | HUB | MDIX/MDI cable |
| Fiber media converter | Router | MDIX/MDI cable |
| Fiber media converter | NIC | MDIX/MDI cable |


3.5 Requirements for power adaptor

AC 90~264V/50/60Hz

Chapter 4 LED status of device

4.1 Sketch map of the front panel

Sketch map of the front panel of GVM-1101 / GVM-1220 / GVM-1000 fiber media converter

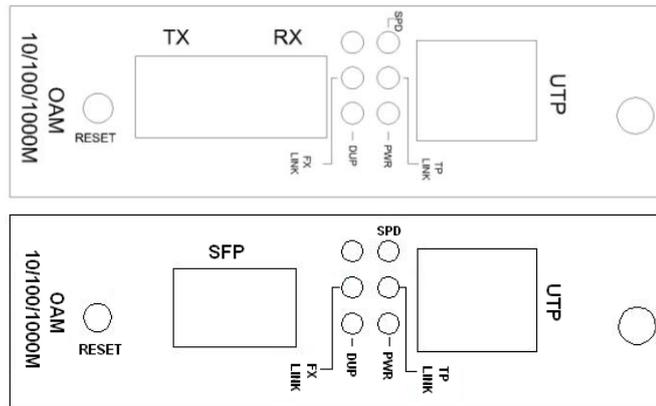

Indicator LED of GVM-1101 / GVM-1220 / GVM-1000 fiber media converters show the following information:

| LED | Color | meaning |
|--|--------------|---|
| DUP (Ethernet port full/half duplex indicator) | green | on: full duplex |
| | | off: half duplex |
| | | Flash: conflict indication during the working mode of half duplex |
| SPD (TP speed indicator) | Green or red | red: 1000M |
| | | green: 100M |
| | | off: 10M |
| TPLINK Ethernet link/data transmission Indicator | green | on: Ethernet port connected |
| | | flash: data transmission through Ethernet port |
| | | Off: Ethernet port disconnected |
| FXLINK Optical receiving link/data transmission Indicator light | green | On: optical port connected |
| | | Flash: data transmission through optical port |
| | | Off: optical port disconnected |
| PWR Power indicator light | green | on: normal |
| | | off: abnormal |

Chapter 5 WEB Interface

5.1 Login

First, we input the device's IP address 192.168.1.2 in the web browser, and then we could see the login page.



We must input the correct the password to login the web, otherwise we could not access any web pages. The default Username is admin and the default password is 123456 and could be changed in the web. If we don't have any operations in 15 minutes, we need login again.

When we login the web successfully, we could see the welcome page.



We could click the menu button in the left side of the web page to open the function pages.

5.2 Network Information

Remote Device Control: Enable

Local Device Information

| | |
|------------------|-------------------|
| MAC Address | 00:01:02:03:04:09 |
| Software Version | 1.5.0 |
| IP Address | 192.168.1.2 |
| Gateway | 192.168.1.254 |
| Subnet Mask | 255.255.255.0 |
| Description | 1G_MC |

Remote Device Information

| | |
|------------------|-------------------|
| MAC Address | 00:01:02:03:04:08 |
| IP Address | 192.168.1.3 |
| Software Version | 1.5.0 |

Local Port Status

| Ports | TP | FX |
|-------------------|----------|----------|
| Signal detect(SD) | Detected | Detected |
| Link status | On | On |
| Speed | 100M | 1000M |
| Duplex mode | Full | Full |

This menu is mainly for network interface and port status.

It will show local system information, include MAC, IP, gateway, subnet mask address, software version number and device description. User could enable/disable remote device control ability. If enable remote device control ability, we could configure remote device and see remote device's information. If both this device and remote device enable TS1000 function, this device is in center mode and Remote device is in terminal mode, this page will show remote device's information, include MAC, IP and software version.

Note: We could only enable one device's remote control ability. If both two devices enable this function, either device can not control the other one.

5.3 Local Setting

This menu contains local device's configuration.

5.4 IP Configuration

IP Configuration

| | |
|-------------|--|
| DHCP Client | Disable <input type="button" value="Apply"/> |
| IP Address | 192.168.1.2 |
| Subnet Mask | 255.255.255.0 |
| Gateway | 192.168.1.254 |
| Description | 1G_MC |

The OAM Media Converter embeds a DHCP client. We could enable/disable this function through the page.

If we disable DHCP, we should set the IP, gateway, subnet mask by self, and otherwise, these could not be set. They

will be provided by DHCP server. If the DHCP client is enabled, the IP address is provided by DHCP server, so user should make sure there is a DHCP server in the net before you enable this function.

5.5 Password Setting

In this page, we could change the password. The password must be 'a'-'z', 'A'-'Z', '0'-'9' and '_'. The max length is 16 characters. In this web, we do not support user purview configuration, and only support one user name setting. We can't not change user name in the web.

5.6 Converter Configuration

| | |
|--|---|
| Jumbo Frame (9K) | <input checked="" type="radio"/> Disable <input type="radio"/> Enable |
| Link Transparent | <input checked="" type="radio"/> Disable <input type="radio"/> Enable |
| Remote Fault Detect | <input checked="" type="radio"/> Disable <input type="radio"/> Enable |
| Link Loss Carry Forward | <input checked="" type="radio"/> Disable <input type="radio"/> Enable |
| Forward CRC Error Frame | <input checked="" type="radio"/> Drop <input type="radio"/> Forward |
| Forward Pause Frame | <input checked="" type="radio"/> Drop <input type="radio"/> Forward |
| Management Packet High Priority (This function need reset to take effect!) | <input type="radio"/> Disable <input checked="" type="radio"/> Enable |
| Broadcast Storm Filter | <input checked="" type="radio"/> Disable <input type="radio"/> Enable |
| Multicast Storm Filter | <input checked="" type="radio"/> Disable <input type="radio"/> Enable |
| Unknown DA Unicast Storm Filter | <input checked="" type="radio"/> Disable <input type="radio"/> Enable |

Notice : 1. When Management Packet High Priority is enabled, all management packet will be allocated to high priority queue to guarantee bandwidth.
2. If local MC enables Ts1000 and is configured as Center Mode, it will configure

Jumbo Frame (9K): If enable this function, the media converter could pass the max 9KB packet.

Link Transparent: Only if link transparent is enabled, the Remote Fault Detect and Link Loss Carry Forward will take effect.

Remote Fault Detect: If enable this function, when fiber port enable TS-1000 and receive OAM pkt.

The OAM Media Converter will set local UTP port link up or link down according to remote device's UTP port link

Status: This function need enable link transparent first.

Link Loss Carry Forward: If enable this function, when the UTP port link down, the fiber port will be forced link down. And the fiber will be resuming when UTP port link up. This function need enable link transparent first.

Forward CRC Error Frame: If enable this function, the CRC error packet will be pass, otherwise, the CRC error packets will be dropped.

Forward Pause Frame: If enable this function, The OAM Media Converter will forward pause frame and regard it as a normal packet.

Management Packet High Priority: If enable this function, The OAM Media Converter will enable QOS.

We enable four queues, and set queue 3 as strict priority. All management packets, such as 802.3ah OAM, SNMP packets will be in queue 3 to guarantee bandwidth.

Broadcast Storm Filter, Multicast Storm Filter, and Unknown DA unicast Storm Filter: If enable this function, when too many broadcast/multicast/unknown DA unicast packets arrive in a period time, the packets will be dropped.

5.7 Port Configuration

| Port | Link | Mode | Flow Control | Ingress Rate Limit (kbps) | Egress Rate Limit (kbps) |
|------|-------|------------|--------------|---------------------------|--------------------------|
| TP | 1000F | Auto Speed | Enable | Not Limit 0 | Not Limit 0 |
| FX | 1000F | Auto Speed | Enable | Not Limit 0 | Not Limit 0 |

Apply Refresh

Rate limit is 64kbps as a minimal step


This page could set local device's port status, including work mode, flow control ability, ingress and egress rate limit. There are some predefined rate settings. If user needs some special usage, you could input the rate by self. Because the rate limit is 64kbps as a minimal step, the input rate should be divided exactly by 64. If the value input is not divided exactly by 64, for example 65, the program will be change the rate to 64 automatically.

5.8 MIB Counter

| Port | TP | FX | CPU |
|------------------|-------|-------|--------|
| Total Bytes | 65549 | 11008 | 178413 |
| Total Pkts | 551 | 172 | 511 |
| Total Error Pkts | 0 | 0 | 0 |
| Unicast Pkts | 355 | 0 | 323 |
| Multicast Pkts | 16 | 156 | 170 |
| Broadcast Pkts | 180 | 16 | 18 |
| 64 | 367 | 172 | 372 |
| 65-127 | 107 | 0 | 1 |
| 128-255 | 14 | 0 | 15 |
| 256-511 | 30 | 0 | 13 |
| 512-1023 | 33 | 0 | 20 |
| 1024-1510 | 0 | 0 | 90 |
| Undersize Pkts | 0 | 0 | 0 |
| Oversize Pkts | 0 | 0 | 0 |
| Fragments | 0 | 0 | 0 |
| CRC Errors | 0 | 0 | 0 |
| Jabbers | 0 | 0 | 0 |
| Drop Events | 0 | 0 | 0 |
| Pause Frames | 0 | 0 | 0 |

The page shows local device's MIB counters. If click the "clear" button, all MIB counters will be clear to zero. Click the "refresh" button, show the current MIB counters again.

5.9 SNMP Configuration

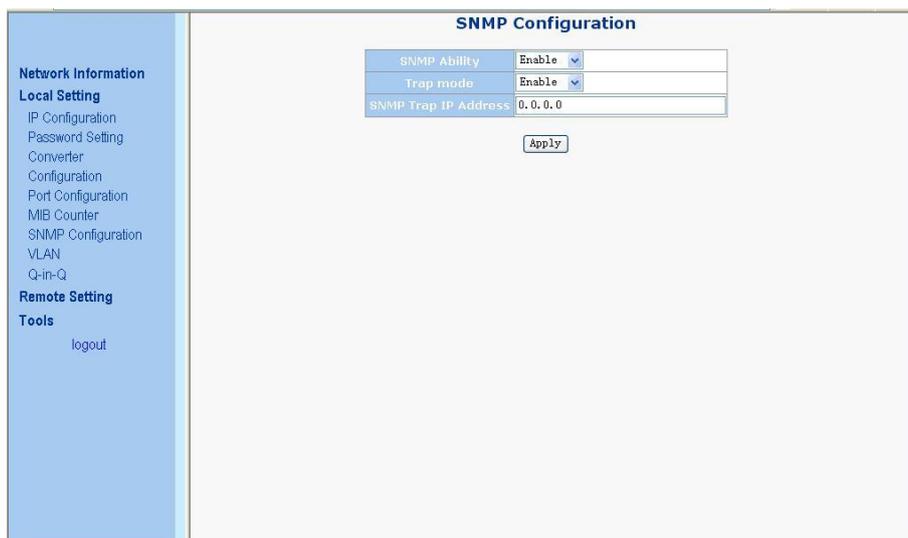

The screenshot shows the 'SNMP Configuration' page. On the left is a navigation menu with categories: Network Information, Local Setting (IP Configuration, Password Setting, Converter, Configuration, Port Configuration, MIB Counter, SNMP Configuration, VLAN, Q-in-Q), Remote Setting, and Tools (logout). The main content area is titled 'SNMP Configuration' and contains three fields: 'SNMP Ability' set to 'Enable', 'Trap mode' set to 'Enable', and 'SNMP Trap IP Address' set to '0.0.0.0'. An 'Apply' button is located below these fields.

This page could configure SNMP functions.


SNMP Ability: Enable or Disable SNMP functions.

Trap Mode: If enable, SNMP could send trap event to SNMP server.

SNMP Trap IP Address: SNMP Server's IP address, used for trap destination IP.

5.10 VLAN

5.10.1 VLAN Group

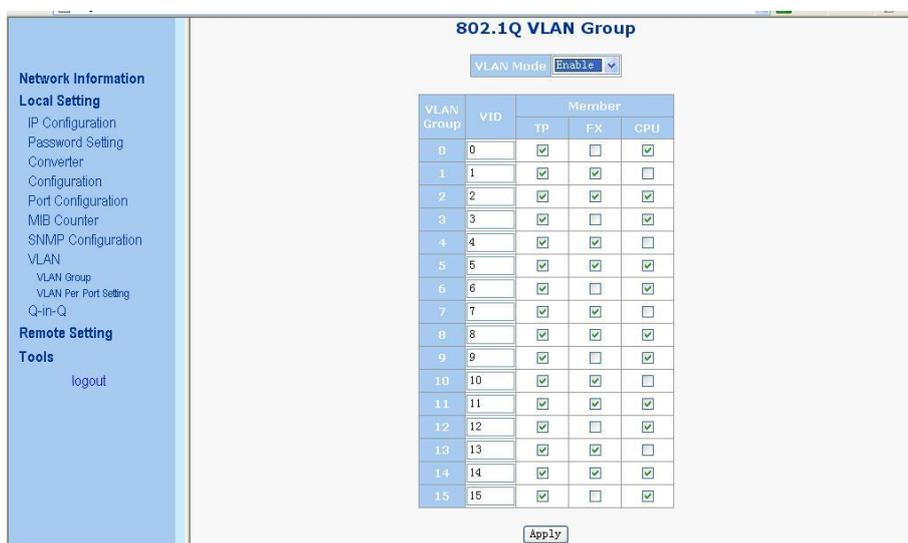

The screenshot shows the '802.1Q VLAN Group' configuration page. The left navigation menu is identical to the previous page, with 'VLAN Group' selected under the 'Local Setting' category. The main content area is titled '802.1Q VLAN Group' and features a 'VLAN Mode' dropdown set to 'Enable'. Below this is a table for configuring 16 VLAN entries. Each entry has a 'VLAN Group' column, a 'VID' column, and a 'Member' section with checkboxes for 'TP', 'FX', and 'GPU'. An 'Apply' button is at the bottom.

| VLAN Group | VID | Member | | |
|------------|-----|-------------------------------------|-------------------------------------|-------------------------------------|
| | | TP | FX | GPU |
| 0 | 0 | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> |
| 1 | 1 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> |
| 2 | 2 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 3 | 3 | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> |
| 4 | 4 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> |
| 5 | 5 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 6 | 6 | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> |
| 7 | 7 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> |
| 8 | 8 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 9 | 9 | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> |
| 10 | 10 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> |
| 11 | 11 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 12 | 12 | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> |
| 13 | 13 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> |
| 14 | 14 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 15 | 15 | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> |

If enable VLAN functions, user could set 16 VLAN entries. Each VLAN entry could set VID and member port. The VID should be 1~4094.

5.10.2 VLAN per Port Setting

| Port | Egress Link Type | Port VLAN Entry |
|------|------------------|-----------------|
| TP | Don't Touch Tag | 0 |
| FX | Don't Touch Tag | 1 |
| CPU | Don't Touch Tag | 2 |

Ingress Filter: Disable

Apply

In this page, we could set each port's PVID and egress tag behavior.

Egress Link Type:

Replace Tag: The switch will remove VLAN tags from packets then add new tags to them.

The inserted tag is the ingress port's "Default tag", which is indexed by port "Port based VLAN index". This is a replacement processing for tagged packets and an insertion for untagged packets.

Remove Tag: The switch will remove VLAN tags from packets, if they are tagged when these packets are output. The switch will not modify packets received without tags.

Add Tag: The switch will add VLAN tags to packets, if they are not tagged when these packets are output on this port. The switch will not add tags to packets already tagged. The inserted tag is the ingress port's "Default tag", which is indexed by port's "Port based VLAN index".

Don't Tough Tag: Do not insert or remove VLAN tags to/from packet which is output on this port.

Port VLAN Entry: Select Port based VLAN index. The number means VLAN table entry index, not VID.

Ingress Filter: enable or disable VLAN ingress filter.

5.11 Q-in-Q

| | |
|------------------------------------|--------------------------------|
| Q in Q Enable | Disable |
| Out Layer VLAN Tag EtherType (HEX) | 0x8100 |
| Out Layer VLAN VID (DEC) | 0 |
| VLAN Tag Priority Decision | Use Internal VLAN Tag Priority |
| Q in Q direction | P0 Add QinQ Tag, P1 Remove Tag |

Apply

Warning: If enable Q-in-Q, web connection may be lost because of the VLAN tag

This page could configure Q in Q function.

Out Layer VLAN Tag: User defined Q-in-Q out layer VLAN tag Ether type.

Out Layer VLAN VID: User defined Q-in-Q out layer VLAN tag VID

VLAN Tag Priority Decision: Decide out layer VLAN Tag's priority, use internal VLAN tag's priority or 802.1p remarking decision priority.

Q in Q direction: Select Q in Q direction, which port adds tag, and which port removes tag.

5.12 Remote Setting

5.12.1 TS1000 Functions

5.12.1.1 TS1000 Setting

| Local Device TS1000 Function Setting | |
|--------------------------------------|--|
| TS1000 Ability | <input type="radio"/> Disable <input checked="" type="radio"/> Enable |
| TS1000 Mode | <input type="radio"/> Terminal <input checked="" type="radio"/> Center |
| <input type="button" value="Apply"/> | |

| TS1000 Local Status | |
|---------------------|-----------------|
| TS1000 mode | Center |
| OpticalRxSigStats | Normal |
| NetlinkStatus | UTP Established |

| TS1000 Remote Status | |
|----------------------|--------------------------|
| Power status | Normal |
| OpticalRxSigStats | Normal |
| NetlinkStatus | UTP Established |
| LossOpNotifWay | with alarm FEFI |
| Operation status | under ordinary operation |
| MCOptionB | Support |
| Terminal Link Rate | 100M |
| Terminal Link | 100M |

This page could enable/disable TS1000, and set the TS1000 as center mode or terminal mode.

If TS1000 is enabled, the TS1000 information will be displayed in the web. And if it's in center mode, and remote device is in terminal mode, remote TS1000 information will also be shown in the page.


5.12.1.2 Loopback Test

| Loop Back Test | |
|--------------------------------------|-------------|
| Send Packet Number | 100 (1~255) |
| <input type="button" value="Apply"/> | |

| Loop Back Test Result | |
|-----------------------|------|
| Result | Pass |
| Result Counter | 100 |


This page could start TS1000 loopback function. User could set TS1000 loopback packet number. After click the "Apply" button, the loopback result will be displayed in the web.

5.12.1.3 Remote Device Reset

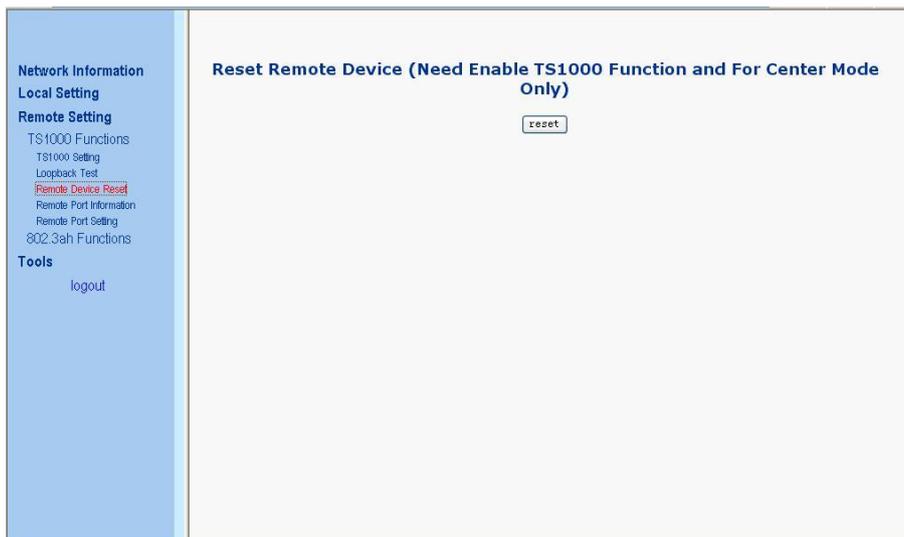

Through TS1000 function, we could let remote device do hardware reset. This function need both devices enable TS1000, local device in center mode and remote device in terminal mode.

5.12.1.4 Remote Port Information

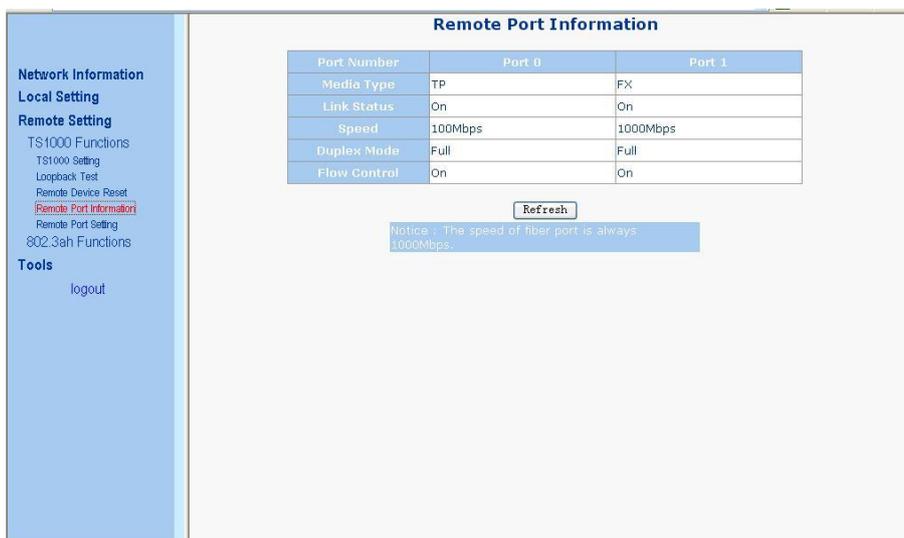

This page shows remote device port information.

5.12.1.5 Remote Port Setting

| Port Name | Enable | Speed & Duplex | Flow Control |
|-----------|---------|----------------|--------------|
| TP | Enable | Auto Speed | Enable |
| FX | Enabled | Auto Speed | Enable |

Apply Refresh

In this page, user could enable/disable remote device's UTP port, change remote device port's speed & duplex and flow control ability. Fiber port should not be disabled.

5.13 802.3ah Functions

5.13.1 802.3ah Configuration

| 802.3ah Function | <input type="radio"/> Disable <input checked="" type="radio"/> Enable |
|------------------|---|
| 802.3ah Mode | <input type="radio"/> Passive <input checked="" type="radio"/> Active |
| Remote Loopback | <input type="radio"/> Disable <input checked="" type="radio"/> Enable |

Apply

| Discovery Status | SEND_ANY |
|-------------------|----------|
| Fiber Port Status | NORM FWD |

refresh

This page could set 803.ah OAM function. User could enable/disable 802.3ah function and set its mode as passive or active mode.

5.13.2 Loopback Test

The screenshot shows the '802.3ah Loop Back Test' configuration page. On the left is a navigation menu with categories: Network Information, Local Setting, Remote Setting (containing TS1000 Functions, 802.3ah Functions, 802.3ah Configuration, Loopback Test, and 802.3ah Status), and Tools (containing logout). The main content area is titled '802.3ah Loop Back Test' and contains two tables. The first table is for configuration, with fields for 'Send Packet Number' (value: 120, range: 1~255) and 'Packet Length(Not include CRC)' (value: 1000, range: 60~1514), followed by an 'Apply' button. The second table is titled 'Loop Back Test Result' and shows the following data:

| Result | Pass |
|------------------|------|
| TX Counter | 120 |
| RX Counter | 120 |
| RX Error Counter | 0 |

This page could start 802.3ah loopback test. User could configure packet length and packet number.

5.13.3 802.3ah Status

The screenshot shows the '802.3ah Status Information' page. The left navigation menu is identical to the previous page. The main content area is titled '802.3ah Status Information' and contains three tables. The first table is 'Global Config':

| | |
|------------------|-------------------|
| Function Enable | ENABLED |
| Fiber Port State | NORM FWD |
| Local DTE MAC | 00-01-02-03-04-09 |
| Remote DTE MAC | 00-01-02-03-04-08 |

The second table is 'Flags Field':

| | Local | Remote |
|-------------------|-------|--------|
| Remote Stable | TRUE | TRUE |
| Remote Evaluating | FALSE | FALSE |
| Local Stable | TRUE | TRUE |
| Local Evaluating | FALSE | FALSE |
| Critical Event | FALSE | FALSE |
| Dying Gasp | FALSE | FALSE |
| Link Fault | FALSE | FALSE |

The third table is 'Discovery Information':

| | |
|-----------------|----------|
| Discovery State | SEND_ANY |
| Local PDU | ANY |


This page shows 802.3ah state machine information.

5.14 Tools

5.14.1 System Reboot

Click the button "System Reboot" to reset this device.

5.14.2 Save and Restore

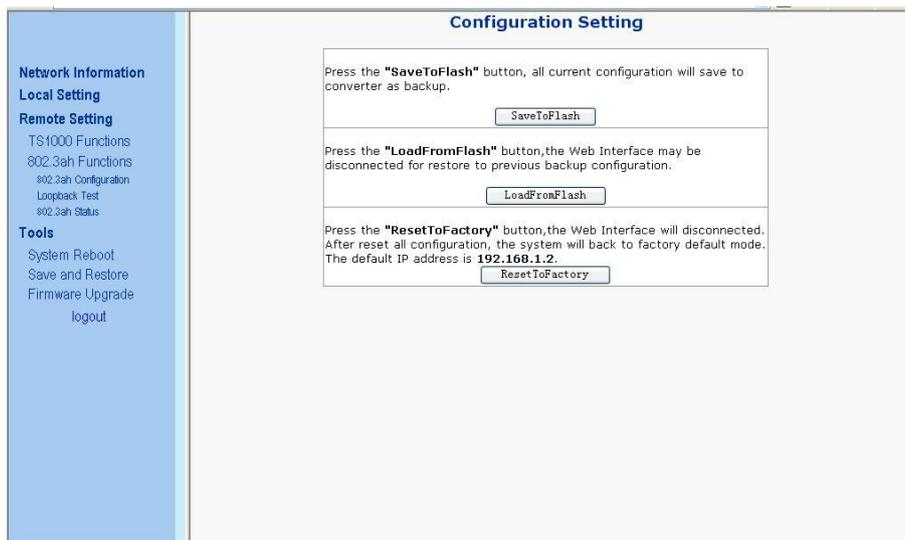


Backup: Save local configuration to flash.

Restore: Restore last saved configuration.

Factory: User factory default setting.

5.14.3 Firmware Upgrade

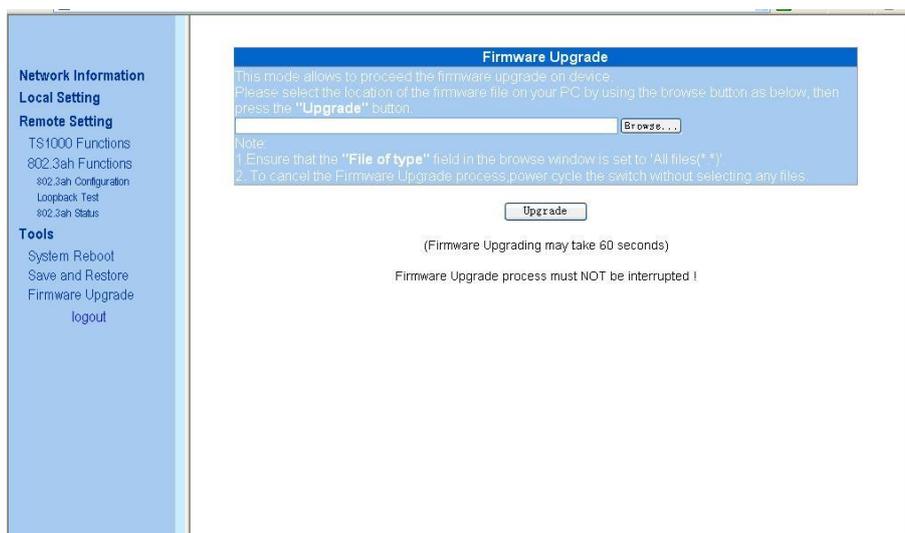

In this page, user could update the firmware by the web browser. User could click the browser button, select the new firmware image file, and then the new code image will be burned into the flash, and reset the device to use the new firmware.

Chapter 6 OAM (IEEE802.3ah) function

6.1 Overview

GVM-1101 / GVM-1220 / GVM-1000 supports four kinds of standard OAM functions: Discovery of OAM, MIB variable response, OAM loopback, Dying Gasp alarm

6.2 Discovery of OAM

When GVM-1101 / GVM-1220 / GVM-1000 is connected with the initiative device that can support 803.3ah, GVM-1101 / GVM-1220 / GVM-1000 will wait for OAM initiative device to initiate OAM discovery Process. After OAM is discovered, other OAM functions can be realized.

6.3 MIB Variable response

GVM-1101 / GVM-1220 / GVM-1000 supports MIB variable response processed by switch chips, which is a subset of standard MIB. GVM-1101 / GVM-1220 / GVM-1000 responses only to requests of the initiative device, if the requesting object is MIB information that GVM-1101 / GVM-1220 / GVM-1000 doesn't have, MIB variable response will return a null instruction.

6.4 OAM Loopback

GVM-1101 / GVM-1220 / GVM-1000 supports Loopback initiated by OAM initiative device. During the process of loopback, the Ethernet port operation of GVM-1101 / GVM-1220 / GVM-1000 will be disconnected. And after the loopback, it will be reconnected.

6.5 Dying Gasp alarm

When GVM-1101 / GVM-1220 / GVM-1000 is power down, Dying Gasp alarm will be sent to OAM initiative device.