

**FHU-0505TXDS
FHU-0805TXDS
FHU-1605TXDS
5/8/16 Port SOHO 10/100Mbps
Dual-Speed Hub**

User's Manual

(Revision 1.0)

Edition 1.01 (Feb. 1998)

FCC Class A Appliance

This equipment generates and uses radio frequency energy. If it is not installed and used properly in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type-tested and found to comply the specifications in sub-part J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. There is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Re-orient the receiving antenna

- Relocate the computing device with respect to the receiver
- Move the computer away from the receiver
- Plug the computer into a different outlet so that computer and receiver are on different electrical circuits.

If necessary the user should consult the dealer or an experienced radio or television technician for additional suggestions.

The information in this manual is subject to change without notice. All the brand names are registered trademarks of their respective companies.

Checklist

Carefully unpack the package and check its contents against the checklist given below.

Checklist of FHU-0505TXDS/FHU-0805TXDS/FHU-1605TXDS 5/8/16 Port SOHO 10/100Mbps Dual-Speed Hub

- 5/8/16 Port SOHO 10/100Mbps Dual-Speed Hub
- User's manual
- Power Adapter
- Desktop stand
- Stack cable

Please inform your supplier immediately for any wrong, missing, or damaged part if possible, retain the carton including the original packing materials, and use them against to repack the product in case there is a need to return it to us for repair.

Contents

Introduction

- Ethernet Standards and Operating Speeds
- Fast Ethernet Hub Classes
- 100BASE-TX Fast Ethernet Cabling
- 100BASE-TX and 10BASE-T: Important Differences
- 100BASE-TX Fast Ethernet Summary

Features and Specification

- Specification
- Features

Installation

- Hardware Description
 - Front Panel
 - Rear Panel
- Hardware Installation
 - General Rules
 - Connecting End Nodes
 - Stacking two Hubs
 - Connecting the hub to Another Hub by Uplink port
 - Connecting the Hub to AC Power

Introduction

FHU-0505TXDS/FHU-0805TXDS/FHU-1605TXDS series are technically known as 10/100BASE-TX Dual-Speed Ethernet hubs and 100BASE-TX Fast Ethernet hubs. This Section describes what this means in practical terms.

Ethernet Standards and Operation Speeds

Ethernet standards are defined by the Institute of Electrical and Electronics Engineers (IEEE). The standard for traditional Ethernet using hubs and twisted-pair cables is known as 10BASE-T. Traditional Ethernet works at a signaling speed of 10 Mbps, that is, ten megabits (slightly more than a characters) per second. The BASE in 10BASE-T stands for "baseband," a one-bit-at-a-time signaling method; the T stands for twisted-pai cable.

Fast Ethernet was developed to meet the demand for increased "bandwidth," in other word, greater data-carrying capacity. A fast Ethernet hub works at 100Mbps, ten times the speed of a 100BASE-T hub.

The IEEE had defined several Fast Ethernet Standards. The hub complies with the 100BASE-TX standard: 100 Mbps baseband signaling on twisted-pair cables, with signals crossing from the Transmit lines to the Receive lines somewhere between each pair of communcion end noeds.

Fast Ethernet Hub Classes

This series are Class II Fast Ethernet hub. This means two things:

1. The hubs will work with Fast Ethernet interface cards of one type only, and

2. The hubs can be connected to another hub for the purpose of expanding the network.

Note: A Class I hub will work with more than one type of Fast Ethernet interface card, but cannot be connected to another hub.

100BASE-TX Fast Ethernet Cabling

The twisted-pair cables used for traditional Ethernet and Fast Ethernet all look the same on the outside. Such cables, however, come in different grades and with different wire arrangement, and can have different kinds of sheathing.

The kinds of cables that can be used with a 100BASE-TX Class II Fast Ethernet hub are

- Category 5 unshielded twisted-pair cable, and (Category 5 UTP)
- Type 1 shielded twisted-pair cable (Type 1 STP)

100BASE-TX Fast Ethernet Summary

Be sure to remember the following rules about a 100BASE-TX Class II Fast Ethernet hub:

1. All end nodes connected to the hub must have 100BASE-TX Fast Ethernet interface cards.
2. Only Category 5 UTP or Type 1 STP cables may be used to connect and nodes to the hub. The cables must be straight-wired.
3. To expand a network built around one Fast Ethernet hub, you can connect the hub to one and only one other 100BASE-TX Class II hub.

Features and Specifications

Features

1. Comply with the IEEE802.3 10Base-T and IEEE802.3u 100Base-TX Class II standard
2. The SOHO 10/100Mbps Dual-Speed Hub series are
FHU-0505TXDS: 5-port dual speed Ethernet hub
FHU-0805TXDS: 8-port dual speed Ethernet hub
FHU-1605TXDS: 16-port dual speed Ethernet hub
3. FHU-0505TXDS/FHU-0805TXDS/1605TXDS series are with internal switching function, therefore, there is no called - “master hub” and “slave hub”. When two hubs stacked, only one switching function of a hub enabled and the others' are disabled automatically.
4. At rear panel, provide one stacking connector for stacking up to 2 units max.
5. Compact size design on SOHO series

6. LED indicators array for simple diagnostics and management

Specifications:

Standard: IEEE802.3 10BASE-T and IEEE802.3u 100BASE-TX

Network Media: 100BASE-TX – UTP/STP category 5 cable
10BASE-T – UTP/STP category 3 or 5 cable

Connector: STP RJ-45 ports for 10/100Mbps
1 RJ-45 connector for Up-link port
Stacking ports

LED indicators: System – power and collision LEDs
Individual port – link/activity and speed LEDs

Dimension: 120mm(W) x 220mm(L) x 44mm(H)

Temperature: Operating -- 0? to 50?
Storage -- -20? to 70?

Humidity: Operating – 10% to 90% RH
Storage – 5% to 90% RH

Input Power Requirement: FHU-0505TXDS/FHU-0805TXDS, 12VDC /1A,

AC power adapter

FHU-1605TXDS, external switching power supply with
output 5VDC/5A

Registrations: FCC Part 15 Class A, CE

Installation

Hardware Description

FHU-0505TXDS/FHU-0805TXDS SOHO 10/100Mbps Dual-Speed Hub provide two different running speed – 10Mbps and 100Mbps in the same hub and automatically distinguish the speed of incoming connection and group the same speed ports in a network segment, i.e., each port has auto-negotiation NWay function.

FHU-0505TXDS/FHU-0805TXDS/FHU-1605TXDS series product can stack up to 2 hubs max. Every hub is master. When two hubs stack, one of ID switch must set at “1” and the other set at “2” position. Only the ID “1” hub’s internal switching function can be enabled.

This section describes the important parts of the FHU-0505TXDS/FHU-0805TXDS/FHU-1605TXDS SOHO 10/100Mbps Dual-Speed Hub. It presents front panel and rear panel drawings of the product showing the LEDs, connectors, and switches.

Front panel

The following figure shows the front panel of FHU-0505TXDS/FHU-0805TXDS/FHU-1605TXDS SOHO 10/100Mbps Dual-Speed Hub

FHU-0505TXDS Front Panel
FHU-0805TXDS Front Panel
FHU-1605TXDS Front Panel

- All ports' Transmit and Receive lines are crossed within the hub. A 10/100BASE-TX port must be internally cross-wired to let you connect an end node using straight-wired cabling.

For FHU-0505TXDS/FHU-0805TXDS/FHU-1605TXDS Series

A special RJ-45 connector is converted from the 1st port as "Up-link" port. The "Up-link" port is used for connection another hub through an ordinary straight-wired twisted-pair cable by running one end of straight cable to "Uplink" port and the other end to another hub's station port.

On the front panel, there are several LED indicators for monitoring the device itself, and the network status. At a quick glance of the front panel, the user would be able to tell if the product is receiving power; if it is monitoring another hub or concentrator; or if a problem exists on the network.

The following describes the function of each LED indicator

Power LED

Color: Green

Label: PWR

Function: This LED light is located at the left side on the front panel. It will light up (ON) to show that the product is receiving power. Conversely, no light (OFF) means the product is not receiving power.

Collision LED

Color: Red

Label: COL10 and COL100

Function: A “collision” in Ethernet, is when two end nodes transmit at the same time. The indicator lights up whenever there is a collision between a directly attached end node and any other node

Port's Link and Activity

Color: Green

Label: Link/Act

Function: Each RJ45 station port on the hub is assigned one LED for monitoring port “Good Link” and data traffic. The LED is normally OFF after the power on operation, but will light up steadily to show “Good Link” when port is been connected. The LED will flash rapidly to show data passing in and out the port.

Port's Speed

Color: Yellow

Label: 10/100M

Function: Each RJ45 station port on the hub is assigned one LED to indicate the running speed. The LED is normally in state of “Off” after power on operation. If the connection is running at 100Mbps, the LED will keep “On”, otherwise, keep “Off” when it is at 10Mbps state.

Rear Panel

On the rear panel there are AC power inlet, power switch, fans, and stack connectors. The following describes the function of each connector and switch.

FHU-0505TXDS/FHU-0805TXDS Rear Panel
FHU-1605TXDS Rear Panel

Power Connector

For FHU-0505TXDS/FHU-0805TXDS/FHU-1605TXDS series

DC-Jack for AC Power Adapter

The FHU-0505TXDS/FHU-0805TXDS 5/8-port Dual-Speed Hub is using AC power adapter with output 12VDC/1A.

DC-Jack for DC output of External Switching Power Supply

The FHU-1605TXDS 16-port Dual-Speed Hub is using external switching power supply with output 5VDC/5A.

Stack Connectors

For FHU-0505TXDS/FHU-0805TXDS/FHU-1605TXDS series

There is one 26-pin connector at rear panel for stacking up two hubs to expand network size. The ID slide switch must be set at either "1" or "2" position.

Hardware Installation

After selecting an appropriate location, you are ready to connect it. This section covers important rules -- fast Ethernet connections, and how to connect the hub to end nodes, another hub, and power supply.

General Rules

Before making any connections to the hub, note the following rules:

- All network connections to the hub must be made using Category 5 UTP or

Type 1 STP cables. Do not use similar-looking Category 2 or 3 cables or “flat satin” telephone cords.

- No more than 100 meters (about 328 feet) of cabling may be used between the hub and an end node; no more than 5 meters (16.4 feet) may be used between two stacks. Each stack is composed up to 2 hubs max. Under this limitation, no more than 205 meters of cabling may be used between any two end nodes.
- To expand your network, you have three methods:
First -- you can connect the hub to another 100BASE-TX Class II Fast Ethernet hub, but not to more than one, and not to any other kind of hub through “Uplink” port. These two hubs can come from different suppliers.

Second -- you can connect the hub to another hub by stack connector. The function of stack connector is defined by manufacture, therefore, different vander supplied hubs can not be connected together.

Third -- Two stacks can connect together by using method one, i.e. choosing one station port from the first stack and one “Up-link” port from another stack, and linking these two ports within 5 meters (16.4 feet) length.

Connecting End Nodes

LAN end nodes such as single-user computers, servers, bridges, and routers must be connected to the 100BASE-TX ports using straight-wired high-grade (Category 5 unshielded or Type 1 shielded) twisted-pair cabling.

- We recommend starting with the higher-numbered ports when connecting Ethernet LAN and the new hub does not have an “Uplink” port or switch, you will have to use “Up-link” port on the hub for the connection.
- We also recommend making sure the end node is turned off before plugging

the cable in for the first time. If the plug does not fit well and the nose's LAN board is loose, forcible insertion can momentarily break an internal contact and damage the end node.

Followings are step-by-step instructions for connecting and end node to the hub using straight-wired twisted-pair cable.

1. Select a port on the hub
2. Plug one end of the cable into the node's RJ-45 jack.
3. Plug the cable's other end into the selected RJ-45 jack on the hub.

To test and end-node connection, connect the hub to power, then turn the hub and the end node on. The link indicator for the port should shine steadily. If it does not, check the cable and all connections.

Stacking two Hubs

For FHU-0505TXDS/FHU-0805TXDS/FHU-1605TXDS series

Two hubs can be connected by an attached stack cable – 26-pin flat ribbon cable.

1. Connect one end to stack port of hub.
2. Connect the other end to another stack port of another hub. These two hubs are stacked.

Connecting the Hub to Another Hub by Uplink port

You can connect the hub to another 100BASE-TX Class II Fast Ethernet hub using a twisted-pair cable. Never, connect the hub to any other kind of hub, or to more than one 100BASE-TX Class II hub.

Make the connection as follows:

1. Make sure “Up-link” port on the hub is free.
2. Plug one end of the cable into “Uplink” port on the hub.
3. Plug the cable’s other end into the available port (except “Up-link” port) on the second hub.

Connecting the Hub to DC Power

After making network connections as described in the preceding sections, you are ready to plug the hub in and turn it on.

The hub can run on AC power with 100-240VAC, 50-60Hz, auto-sensing.

Before plugging the hub in, make sure the power cord (1) is long enough to reach an AC wall outlet of an approved type, (2) has plugs that match both the hub’s power inlet and the type of wall outlet you will use, and (3) conforms to safety regulations in your area.

Troubleshooting

Symptom: Link indicator remains off

Causes: Workstation’s network adapter, cable or hub port is defective.

Solution: The most common cause is a defective network adapter or cable connection. Check the corresponding cable connections, or the workstations’ network adapter for possible defects. Verify that the correct cable type is being used. (Note that crossover cable is only required if you cascade hubs via RJ45 station ports, i.e. an uplink port is not used.) Replace the defective cable or adapter.


Some network adapters’ link indicator needs to be initialized by software driver. Therefore, if no driver is pre-loaded, the hub’s link indicator will remain off even the connection completed.

Hub's RJ-45 Pin Assignments

Pin	Station Ports 1-8	Uplink Port
1	Input Receive Data +	Output Transmit Data+
2	Input Receive Data -	Output Transmit Data-
2	Output Transmit Data+	Input Receive Data +
6	Output Transmit Data-	Input Receive Data -
4,5,7,8	Not used	Not used

Schematics for both straight and crossover twisted-pair cable are shown below.
 (Note that crossover cable is only required if you cascade hubs via the RJ-45 station ports; i.e. the Uplink port is not used.)

Straight-Through

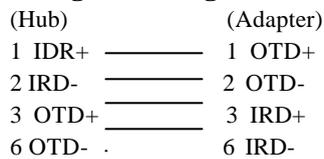

Crossover

