

## NAS

NAS				
	FNS-5000	FNS-6000	FNS-	GNS-
<b>H/W</b>				
<b>IBM HDD(HITACHI)</b>				
40GB(DTLA-305040)	Pass	Pass	Pass	Pass
80GB (IC35L080AVVA07)	Pass	Pass	Pass	Pass
120GB (IC35L120AVVA07)	Pass	Pass	Pass	Pass
120GB (IC35L120AVV207)	Pass	Pass	Fail	Pass
180GB (IC35L180AVV207)				
160GB (HDS722516VLAT80)				
250GB (HDS722525VLAT80)				
<b>Maxtor HDD</b>				
40GB(D540-4K), (6E040L0)	Pass	Pass	Pass	Pass
80GB(6Y080L0), (6Y080P0)	Pass	Pass	Pass	Pass
120GB(6Y120L0)	Pass	Pass	Pass	Pass
160GB(4A160J0)(4G1 60JB)		Pass	Pass	Pass
160GB (8MB Cache 6Y160PO)		Pass		Pass
200GB(6Y200P0)	Pass	Pass		Pass

250GB(4A250J0),(5A250J0),(7Y250P0)	Pass	Pass		Pass
300GB(5A300J0)				Pass
<b>Seagate HDD</b>				
40GB(ST340824A)	Pass	Pass	Pass	Pass
80GB(ST380021A)	Pass	Pass	Pass	Pass
120GB(ST3120023A)	Pass	Pass	Pass	Pass
160GB(ST3160023A)				Pass
<b>WD HDD</b>				
40GB	Pass	Pass		
80GB	Pass	Pass		
200GB(2000BB)	Pass	Pass		
	<b>FNS-5000</b>	<b>FNS-6000</b>	<b>FNS-</b>	<b>FNS-8000</b>
<b>UPS Supply</b>				
Smart-UPS 700+ APC Network Management Card	Pass	Pass	Pass	Pass
APC Smart UPS 700				Pass
Phoenixtec 1000				Pass
Smart-UPS AP9607 UPS Interface				Pass
<b>Tape Backup(LVD)</b>				
Exabyte Mammoth -				Pass
IBM Tape Drive Model 440				Pass
TANDBERG				Pass
HP SureStore DDS4				Pass
HP SureStore dat 40 Model:C5687A				Pass
hp StorageWorks DAT 72				Pass

hp StorageWorks Ultrium 460				Pass
hp surestore ultrium				Pass
hp surestore ultrium				Pass
	<b>FNS-5000</b>	<b>FNS-6000</b>	<b>FNS-</b>	<b>FNS-8000</b>
<b>S/W</b>				
<b>SNMP</b>				
MG-SOFT MIB	Pass	Pass	Pass	Pass
<b>Backup Software</b>				
ARCserve 9	Pass	Pass	Pass	Pass
NetVault 6.5.3 (Only For NASware 3)	NA	NA	NA	NA
