



**GEP-5271**

**KILBY™ 52-Port L3 Lite Managed Gigabit PoE Switch**

# **Web Management Guide**

**V1.0**

Digital Data Communications Asia Co., Ltd.

<http://www.level1.com>

# **Web Management Guide**

## **GEP-5271**

KILBY™ 52-Port L3 Lite Managed Gigabit PoE Switch

---

# How to Use This Guide

This guide includes detailed information on the switch software, including how to operate and use the management functions of the switch. To deploy this switch effectively and ensure trouble-free operation, you should first read the relevant sections in this guide so that you are familiar with all of its software features.

**Who Should Read this Guide?** This guide is for network administrators who are responsible for operating and maintaining network equipment. The guide assumes a basic working knowledge of LANs (Local Area Networks), the Internet Protocol (IP), and Simple Network Management Protocol (SNMP).

**How this Guide is Organized** This guide provides detailed information about the switch's key features. It also describes the switch's web browser interface. For information on the command line interface refer to the *CLI Reference Guide*.

The guide includes these sections:

- ◆ Section I **"Getting Started"** — Includes an introduction to switch management, and the basic settings required to access the management interface.
- ◆ Section II **"Web Configuration"** — Includes all management options available through the web browser interface.
- ◆ Section III **"Appendices"** — Includes information on troubleshooting switch management access.

**Related Documentation** This guide focuses on switch software configuration through the web browser.

For information on how to manage the switch through the command line interface, see the following guide:

*CLI Reference Guide*



**Note:** For a description of how to initialize the switch for management access via the CLI, web interface or SNMP, refer to "Initial Switch Configuration" in the *CLI Reference Guide*.

---

For information on how to install the switch, see the following guide:

*Quick Start Guide*

For all safety information and regulatory statements, see the following documents:

*Quick Start Guide*

*Safety and Regulatory Information*

**Conventions** The following conventions are used throughout this guide to show information:



---

**Note:** Emphasizes important information or calls your attention to related features or instructions.

---

**Revision History** This section summarizes the changes in each revision of this guide.

| <i><b>Revision</b></i> | <i><b>Date</b></i> | <i><b>Change Description</b></i> |
|------------------------|--------------------|----------------------------------|
| v1.2.24.182            | 10/2018            | Initial release                  |



---

# Contents

|                              |           |
|------------------------------|-----------|
| <b>How to Use This Guide</b> | <b>3</b>  |
| <b>Contents</b>              | <b>5</b>  |
| <b>Figures</b>               | <b>17</b> |
| <b>Tables</b>                | <b>33</b> |

---

|                  |                        |           |
|------------------|------------------------|-----------|
| <b>Section I</b> | <b>Getting Started</b> | <b>35</b> |
|------------------|------------------------|-----------|

|                                  |           |
|----------------------------------|-----------|
| <b>1 Introduction</b>            | <b>37</b> |
| Key Features                     | 37        |
| Description of Software Features | 38        |
| System Defaults                  | 43        |

---

|                   |                          |           |
|-------------------|--------------------------|-----------|
| <b>Section II</b> | <b>Web Configuration</b> | <b>47</b> |
|-------------------|--------------------------|-----------|

|  |           |
|--|-----------|
| <b>2 Using the Web Interface</b>         | <b>49</b> |
| Connecting to the Web Interface          | 49        |
| Navigating the Web Browser Interface     | 50        |
| Dashboard                                | 50        |
| Configuration Options                    | 51        |
| Panel Display                            | 52        |
| Main Menu                                | 52        |
| <b>3 Basic Management Tasks</b>          | <b>71</b> |
| Displaying System Information            | 72        |
| Displaying Hardware/Software Versions    | 73        |
| Configuring Support for Jumbo Frames     | 74        |
| Displaying Bridge Extension Capabilities | 75        |
| Managing System Files                    | 76        |

|   |            |
|---|------------|
| Copying Files via FTP/SFTP/TFTP or HTTP                 | 76         |
| Saving the Running Configuration to a Local File        | 79         |
| Setting the Start-up File                               | 80         |
| Showing System Files                                    | 80         |
| Automatic Operation Code Upgrade                        | 81         |
| Setting the System Clock                                | 85         |
| Setting the Time Manually                               | 85         |
| Setting the SNTP Polling Interval                       | 86         |
| Configuring NTP   | 87         |
| Configuring Time Servers                                | 88         |
| Setting the Time Zone                                   | 92         |
| Configuring Summer Time                                 | 93         |
| Configuring the Console Port                            | 95         |
| Configuring Telnet Settings                             | 97         |
| Displaying CPU Utilization                              | 98         |
| Configuring CPU Guard                                   | 99         |
| Displaying Memory Utilization                           | 100        |
| Resetting the System                                    | 101        |
| <b>4 Interface Configuration</b>                        | <b>105</b> |
| Port Configuration                                      | 106        |
| Configuring by Port List                                | 106        |
| Configuring by Port Range                               | 108        |
| Displaying Connection Status                            | 109        |
| Showing Port or Trunk Statistics                        | 110        |
| Displaying Statistical History                          | 115        |
| Displaying Transceiver Data                             | 119        |
| Configuring Transceiver Thresholds                      | 120        |
| Performing Cable Diagnostics                            | 122        |
| Trunk Configuration                                     | 124        |
| Configuring a Static Trunk                              | 125        |
| Configuring a Dynamic Trunk                             | 128        |
| Displaying LACP Port Counters                           | 134        |
| Displaying LACP Settings and Status for the Local Side  | 135        |
| Displaying LACP Settings and Status for the Remote Side | 137        |

|  |            |
|--|------------|
| Configuring Load Balancing               | 138        |
| Saving Power                             | 140        |
| Configuring Local Port Mirroring         | 141        |
| Configuring Remote Port Mirroring        | 143        |
| Sampling Traffic Flows                   | 147        |
| Configuring sFlow Receiver Settings      | 148        |
| Configuring an sFlow Polling Instance    | 150        |
| Traffic Segmentation                     | 152        |
| Enabling Traffic Segmentation            | 152        |
| Configuring Uplink and Downlink Ports    | 153        |
| <b>5 VLAN Configuration</b>              | <b>157</b> |
| IEEE 802.1Q VLANs                        | 157        |
| Configuring VLAN Groups                  | 161        |
| Adding Static Members to VLANs           | 163        |
| Configuring Dynamic VLAN Registration    | 167        |
| IEEE 802.1Q Tunneling                    | 171        |
| Enabling QinQ Tunneling on the Switch    | 175        |
| Creating CVLAN to SPVLAN Mapping Entries | 176        |
| Adding an Interface to a QinQ Tunnel     | 178        |
| L2PT Tunneling                           | 179        |
| Configuring the L2PT Tunnel Address      | 181        |
| Enabling L2PT for Selected Interfaces    | 182        |
| Protocol VLANs                           | 183        |
| Configuring Protocol VLAN Groups         | 184        |
| Mapping Protocol Groups to Interfaces    | 185        |
| Configuring IP Subnet VLANs              | 187        |
| Configuring MAC-based VLANs              | 190        |
| Configuring VLAN Translation             | 192        |
| <b>6 Address Table Settings</b>          | <b>195</b> |
| Displaying the Dynamic Address Table     | 195        |
| Clearing the Dynamic Address Table       | 196        |
| Changing the Aging Time                  | 197        |
| Configuring MAC Address Learning         | 198        |
| Setting Static Addresses                 | 199        |

|   |            |
|---|------------|
| Issuing MAC Address Traps                   | 201        |
| <b>7 Spanning Tree Algorithm</b>            | <b>203</b> |
| Overview                                    | 203        |
| Configuring Loopback Detection              | 205        |
| Configuring Global Settings for STA         | 207        |
| Displaying Global Settings for STA          | 213        |
| Configuring Interface Settings for STA      | 214        |
| Displaying Interface Settings for STA       | 218        |
| Configuring Multiple Spanning Trees         | 221        |
| Configuring Interface Settings for MSTP     | 225        |
| <b>8 Congestion Control</b>                 | <b>229</b> |
| Rate Limiting                               | 229        |
| Storm Control                               | 230        |
| Automatic Traffic Control                   | 232        |
| Setting the ATC Timers                      | 233        |
| Configuring ATC Thresholds and Responses    | 235        |
| <b>9 Class of Service</b>                   | <b>239</b> |
| Layer 2 Queue Settings                      | 239        |
| Setting the Default Priority for Interfaces | 239        |
| Selecting the Queue Mode                    | 240        |
| Layer 3/4 Priority Settings                 | 243        |
| Setting Priority Processing to DSCP or CoS  | 244        |
| Mapping CoS Priorities to Per-hop Behavior  | 245        |
| Mapping DSCP Priorities to Per-hop Behavior | 246        |
| <b>10 Quality of Service</b>                | <b>249</b> |
| Overview                                    | 249        |
| Configuring a Class Map                     | 250        |
| Creating QoS Policies                       | 253        |
| Attaching a Policy Map to a Port            | 257        |
| <b>11 VoIP Traffic Configuration</b>        | <b>259</b> |
| Overview                                    | 259        |
| Configuring VoIP Traffic                    | 260        |

|   |            |
|---|------------|
| Configuring Telephony OUI                             | 261        |
| Configuring VoIP Traffic Ports                        | 262        |
| <b>12 Security Measures</b>                           | <b>265</b> |
| AAA (Authentication, Authorization and Accounting)    | 266        |
| Configuring Local/Remote Logon Authentication         | <b>267</b> |
| Configuring Remote Logon Authentication Servers       | 268        |
| Configuring AAA Accounting                            | 273        |
| Configuring AAA Authorization                         | 279        |
| Configuring User Accounts                             | 283        |
| Web Authentication                                    | 285        |
| Configuring Global Settings for Web Authentication    | 285        |
| Configuring Interface Settings for Web Authentication | 286        |
| Network Access (MAC Address Authentication)           | 287        |
| Configuring Global Settings for Network Access        | 290        |
| Configuring Network Access for Ports                  | 291        |
| Configuring Port Link Detection                       | 293        |
| Configuring a MAC Address Filter                      | 294        |
| Displaying Secure MAC Address Information             | 296        |
| Configuring HTTPS                                     | 297        |
| Configuring Global Settings for HTTPS                 | 297        |
| Replacing the Default Secure-site Certificate         | 299        |
| Configuring the Secure Shell                          | 301        |
| Configuring the SSH Server                            | 303        |
| Generating the Host Key Pair                          | 304        |
| Importing User Public Keys                            | 306        |
| Access Control Lists                                  | 308        |
| Showing TCAM Utilization                              | 309        |
| Setting the ACL Name and Type                         | 311        |
| Configuring a Standard IPv4 ACL                       | 313        |
| Configuring an Extended IPv4 ACL                      | 314        |
| Configuring a Standard IPv6 ACL                       | 317        |
| Configuring an Extended IPv6 ACL                      | 318        |
| Configuring a MAC ACL                                 | 321        |
| Configuring an ARP ACL                                | 323        |

|   |     |
|---|-----|
| Binding a Port to an Access Control List                      | 324 |
| Showing ACL Hardware Counters                                 | 325 |
| Filtering IP Addresses for Management Access                  | 327 |
| Configuring Port Security                                     | 329 |
| Configuring 802.1X Port Authentication                        | 331 |
| Configuring 802.1X Global Settings                            | 333 |
| Configuring Port Authenticator Settings for 802.1X            | 334 |
| Displaying 802.1X Statistics                                  | 338 |
| DoS Protection  | 340 |
| DHCP Snooping   | 342 |
| DHCP Snooping Global Configuration                            | 344 |
| DHCP Snooping VLAN Configuration                              | 346 |
| Configuring Ports for DHCP Snooping                           | 347 |
| Displaying DHCP Snooping Binding Information                  | 349 |
| DHCPv6 Snooping   | 350 |
| DHCPv6 Snooping Global Configuration                          | 352 |
| DHCPv6 Snooping VLAN Configuration                            | 354 |
| Configuring Interfaces for DHCPv6 Snooping                    | 355 |
| Displaying DHCPv6 Snooping Binding Information                | 357 |
| Displaying DHCPv6 Snooping Statistics                         | 358 |
| IPv4 Source Guard   | 359 |
| Configuring Ports for IPv4 Source Guard                       | 359 |
| Configuring Static Bindings for IPv4 Source Guard             | 361 |
| Displaying Information for Dynamic IPv4 Source Guard Bindings | 364 |
| IPv6 Source Guard   | 365 |
| Configuring Ports for IPv6 Source Guard                       | 365 |
| Configuring Static Bindings for IPv6 Source Guard             | 367 |
| Displaying Information for Dynamic IPv6 Source Guard Bindings | 370 |
| ARP Inspection  | 371 |
| Configuring Global Settings for ARP Inspection                | 372 |
| Configuring VLAN Settings for ARP Inspection                  | 374 |
| Configuring Interface Settings for ARP Inspection             | 376 |
| Displaying ARP Inspection Statistics                          | 377 |
| Displaying the ARP Inspection Log                             | 378 |

|   |            |
|---|------------|
| Application Filter                            | 379        |
| <b>13 Basic Administration Protocols</b>      | <b>381</b> |
| Configuring Event Logging                     | 382        |
| System Log Configuration                      | 382        |
| Remote Log Configuration                      | 384        |
| Sending Simple Mail Transfer Protocol Alerts  | 385        |
| Link Layer Discovery Protocol                 | 387        |
| Setting LLDP Timing Attributes                | 387        |
| Configuring LLDP Interface Attributes         | 389        |
| Configuring LLDP Interface Civic-Address      | 393        |
| Displaying LLDP Local Device Information      | 395        |
| Displaying LLDP Remote Device Information     | 399        |
| Displaying Device Statistics                  | 407        |
| Power over Ethernet                           | 409        |
| Setting the Switch's Overall PoE Power Budget | 410        |
| Setting The Port PoE Power Budget             | 411        |
| Simple Network Management Protocol            | 413        |
| Configuring Global Settings for SNMP          | 415        |
| Setting Community Access Strings              | 416        |
| Setting the Local Engine ID                   | 417        |
| Specifying a Remote Engine ID                 | 418        |
| Setting SNMPv3 Views                          | 420        |
| Configuring SNMPv3 Groups                     | 422        |
| Configuring Local SNMPv3 Users                | 428        |
| Configuring Remote SNMPv3 Users               | 430        |
| Specifying Trap Managers                      | 433        |
| Creating SNMP Notification Logs               | 437        |
| Showing SNMP Statistics                       | 439        |
| Remote Monitoring                             | 441        |
| Configuring RMON Alarms                       | 441        |
| Configuring RMON Events                       | 444        |
| Configuring RMON History Samples              | 446        |
| Configuring RMON Statistical Samples          | 449        |

|   |     |
|---|-----|
| Switch Clustering                             | 451 |
| Configuring General Settings for Clusters     | 452 |
| Cluster Member Configuration                  | 453 |
| Managing Cluster Members                      | 455 |
| Setting a Time Range                          | 456 |
| Ethernet Ring Protection Switching            | 459 |
| ERPS Global Configuration                     | 463 |
| ERPS Ring Configuration                       | 463 |
| ERPS Forced and Manual Mode Operations        | 479 |
| Connectivity Fault Management                 | 483 |
| Configuring Global Settings for CFM           | 487 |
| Configuring Interfaces for CFM                | 490 |
| Configuring CFM Maintenance Domains           | 490 |
| Configuring CFM Maintenance Associations      | 495 |
| Configuring Maintenance End Points            | 499 |
| Configuring Remote Maintenance End Points     | 501 |
| Transmitting Link Trace Messages              | 503 |
| Transmitting Loop Back Messages               | 505 |
| Transmitting Delay-Measure Requests           | 507 |
| Displaying Local MEPs                         | 509 |
| Displaying Details for Local MEPs             | 510 |
| Displaying Local MIPs                         | 512 |
| Displaying Remote MEPs                        | 513 |
| Displaying Details for Remote MEPs            | 514 |
| Displaying the Link Trace Cache               | 516 |
| Displaying Fault Notification Settings        | 517 |
| Displaying Continuity Check Errors            | 518 |
| OAM Configuration                             | 519 |
| Enabling OAM on Local Ports                   | 519 |
| Displaying Statistics for OAM Messages        | 522 |
| Displaying the OAM Event Log                  | 523 |
| Displaying the Status of Remote Interfaces    | 524 |
| Configuring a Remote Loopback Test            | 525 |
| Displaying Results of Remote Loopback Testing | 527 |



|   |            |
|---|------------|
| UDLD Configuration  | 528        |
| Configuring UDLD Protocol Intervals                           | 529        |
| Configuring UDLD Interface Settings                           | 530        |
| Displaying UDLD Neighbor Information                          | 532        |
| LBD Configuration   | 533        |
| Configuring Global Settings for LBD                           | 534        |
| Configuring Interface Settings for LBD                        | 536        |
| <b>14 Multicast Filtering</b>                                 | <b>537</b> |
| Overview  | 537        |
| Layer 2 IGMP (Snooping and Query for IPv4)                    | 538        |
| Configuring IGMP Snooping and Query Parameters                | 540        |
| Specifying Static Interfaces for a Multicast Router           | 544        |
| Assigning Interfaces to Multicast Services                    | 546        |
| Setting IGMP Snooping Status per Interface                    | 548        |
| Filtering IGMP Packets on an Interface                        | 554        |
| Displaying Multicast Groups Discovered by IGMP Snooping       | 555        |
| Displaying IGMP Snooping Statistics                           | 556        |
| Filtering and Throttling IGMP Groups                          | 561        |
| Enabling IGMP Filtering and Throttling                        | 562        |
| Configuring IGMP Filter Profiles                              | 562        |
| Configuring IGMP Filtering and Throttling for Interfaces      | 565        |
| MLD Snooping (Snooping and Query for IPv6)                    | 566        |
| Configuring MLD Snooping and Query Parameters                 | 567        |
| Setting Immediate Leave Status for MLD Snooping per Interface | 569        |
| Specifying Static Interfaces for an IPv6 Multicast Router     | 570        |
| Assigning Interfaces to IPv6 Multicast Services               | 572        |
| Filtering MLD Query Packets on an Interface                   | 574        |
| Showing MLD Snooping Groups and Source List                   | 575        |
| Displaying MLD Snooping Statistics                            | 576        |
| Filtering and Throttling MLD Groups                           | 584        |
| Enabling MLD Filtering and Throttling                         | 585        |
| Configuring MLD Filter Profiles                               | 585        |
| Configuring MLD Filtering and Throttling for Interfaces       | 588        |

|  |            |
|--|------------|
| Multicast VLAN Registration for IPv4                 | 589        |
| Configuring MVR Global Settings                      | 591        |
| Configuring MVR Domain Settings                      | 593        |
| Configuring MVR Group Address Profiles               | 594        |
| Configuring MVR Interface Status                     | 597        |
| Assigning Static MVR Multicast Groups to Interfaces  | 599        |
| Displaying MVR Receiver Groups                       | 601        |
| Displaying MVR Statistics                            | 602        |
| Multicast VLAN Registration for IPv6                 | 606        |
| Configuring MVR6 Global Settings                     | 607        |
| Configuring MVR6 Domain Settings                     | 609        |
| Configuring MVR6 Group Address Profiles              | 610        |
| Configuring MVR6 Interface Status                    | 613        |
| Assigning Static MVR6 Multicast Groups to Interfaces | 615        |
| Displaying MVR6 Receiver Groups                      | 617        |
| Displaying MVR6 Statistics                           | 618        |
| <b>15 IP Tools</b>                                   | <b>625</b> |
| Using the Ping Function                              | 625        |
| Using the Trace Route Function                       | 627        |
| Address Resolution Protocol                          | 628        |
| Basic ARP Configuration                              | 629        |
| Configuring Static ARP Addresses                     | 630        |
| Displaying Dynamic or Local ARP Entries              | 632        |
| Displaying ARP Statistics                            | 633        |
| <b>16 IP Configuration</b>                           | <b>635</b> |
| Setting the Switch's IP Address (IP Version 4)       | 635        |
| Configuring IPv4 Interface Settings                  | 635        |
| Setting the Switch's IP Address (IP Version 6)       | 639        |
| Configuring the IPv6 Default Gateway                 | 639        |
| Configuring IPv6 Interface Settings                  | 640        |
| Configuring an IPv6 Address                          | 646        |
| Showing IPv6 Addresses                               | 648        |
| Showing the IPv6 Neighbor Cache                      | 650        |
| Showing IPv6 Statistics                              | 651        |

|  |            |
|--|------------|
| Showing the MTU for Responding Destinations    | 657        |
| <b>17 General IP Routing</b>                   | <b>659</b> |
| Overview                                       | 659        |
| Initial Configuration                          | 659        |
| IP Routing and Switching                       | 660        |
| Routing Path Management                        | 661        |
| Routing Protocols                              | 661        |
| Configuring Static Routes                      | 662        |
| Displaying the Routing Table                   | 663        |
| <b>18 Unicast Routing</b>                      | <b>665</b> |
| Overview                                       | 665        |
| Configuring the Routing Information Protocol   | 666        |
| Configuring General Protocol Settings          | 667        |
| Clearing Entries from the Routing Table        | 670        |
| Specifying Network Interfaces                  | 671        |
| Specifying Passive Interfaces                  | 673        |
| Specifying Static Neighbors                    | 674        |
| Configuring Route Redistribution               | 675        |
| Specifying an Administrative Distance          | 677        |
| Configuring Network Interfaces for RIP         | 678        |
| Displaying RIP Interface Settings              | 682        |
| Displaying Peer Router Information             | 682        |
| Resetting RIP Statistics                       | 683        |
| <b>19 IP Services</b>                          | <b>685</b> |
| Domain Name Service                            | 685        |
| Configuring General DNS Service Parameters     | 685        |
| Configuring a List of Domain Names             | 686        |
| Configuring a List of Name Servers             | 688        |
| Configuring Static DNS Host to Address Entries | 689        |
| Displaying the DNS Cache                       | 690        |
| Multicast Domain Name Service                  | 691        |
| Dynamic Host Configuration Protocol            | 692        |
| Specifying a DHCP Client Identifier            | 693        |

|  |     |
|--|-----|
| Configuring DHCP L3 Relay Service        | 694 |
| Configuring DHCP L2 Relay Service        | 696 |
| Enabling DHCP Dynamic Provision          | 698 |
| Configuring the DHCP Server              | 699 |
| Configuring DHCPv6 Relay                 | 706 |
| Configuring the PPPoE Intermediate Agent | 708 |
| Configuring PPPoE IA Global Settings     | 709 |
| Configuring PPPoE IA Interface Settings  | 710 |
| Showing PPPoE IA Statistics              | 712 |

---

|                    |   |            |
|--------------------|---|------------|
| <b>Section III</b> | <b>Appendices</b>                           | <b>715</b> |
| <b>A</b>           | <b>Software Specifications</b>              | <b>717</b> |
|                    | Software Features                           | 717        |
|                    | Management Features                         | 718        |
|                    | Standards                                   | 719        |
|                    | Management Information Bases                | 720        |
| <b>B</b>           | <b>Troubleshooting</b>                      | <b>723</b> |
|                    | Problems Accessing the Management Interface | 723        |
|                    | Using System Logs                           | 724        |
| <b>C</b>           | <b>License Information</b>                  | <b>725</b> |
|                    | The GNU General Public License              | 725        |

---

# Figures

|   |     |
|---|-----|
| Figure 1: Dashboard                                 | 50  |
| Figure 2: System Information                        | 72  |
| Figure 3: General Switch Information                | 74  |
| Figure 4: Configuring Support for Jumbo Frames      | 75  |
| Figure 5: Displaying Bridge Extension Configuration | 76  |
| Figure 6: Copy Firmware                             | 78  |
| Figure 7: Saving the Running Configuration          | 79  |
| Figure 8: Setting Start-Up Files                    | 80  |
| Figure 9: Displaying System Files                   | 81  |
| Figure 10: Configuring Automatic Code Upgrade       | 84  |
| Figure 11: Manually Setting the System Clock        | 86  |
| Figure 12: Setting the Polling Interval for SNTP    | 87  |
| Figure 13: Configuring NTP                          | 88  |
| Figure 14: Specifying SNTP Time Servers             | 89  |
| Figure 15: Adding an NTP Time Server                | 90  |
| Figure 16: Showing the NTP Time Server List         | 90  |
| Figure 17: Adding an NTP Authentication Key         | 91  |
| Figure 18: Showing the NTP Authentication Key List  | 91  |
| Figure 19: Setting the Time Zone                    | 93  |
| Figure 20: Configuring Summer Time                  | 95  |
| Figure 21: Console Port Settings                    | 96  |
| Figure 22: Telnet Connection Settings               | 98  |
| Figure 23: Displaying CPU Utilization               | 99  |
| Figure 24: Configuring CPU Guard                    | 100 |
| Figure 25: Displaying Memory Utilization            | 101 |
| Figure 26: Restarting the Switch (Immediately)      | 103 |
| Figure 27: Restarting the Switch (In)               | 103 |
| Figure 28: Restarting the Switch (At)               | 104 |
| Figure 29: Restarting the Switch (Regularly)        | 104 |

|   |     |
|---|-----|
| Figure 30: Configuring Connections by Port List                 | 108 |
| Figure 31: Configuring Connections by Port Range                | 109 |
| Figure 32: Displaying Port Information                          | 110 |
| Figure 33: Showing Port Statistics (Table)                      | 113 |
| Figure 34: Showing Port Statistics (Chart)                      | 114 |
| Figure 35: Configuring a History Sample                         | 116 |
| Figure 36: Showing Entries for History Sampling                 | 116 |
| Figure 37: Showing Status of Statistical History Sample         | 117 |
| Figure 38: Showing Current Statistics for a History Sample      | 118 |
| Figure 39: Showing Ingress Statistics for a History Sample      | 119 |
| Figure 40: Displaying Transceiver Data                          | 120 |
| Figure 41: Configuring Transceiver Thresholds                   | 122 |
| Figure 42: Performing Cable Tests                               | 124 |
| Figure 43: Configuring Static Trunks                            | 125 |
| Figure 44: Creating Static Trunks                               | 126 |
| Figure 45: Adding Static Trunks Members                         | 127 |
| Figure 46: Configuring Connection Parameters for a Static Trunk | 127 |
| Figure 47: Showing Information for Static Trunks                | 128 |
| Figure 48: Configuring Dynamic Trunks                           | 128 |
| Figure 49: Configuring the LACP Aggregator Admin Key            | 131 |
| Figure 50: Enabling LACP on a Port                              | 132 |
| Figure 51: Configuring LACP Parameters on a Port                | 132 |
| Figure 52: Showing Members of a Dynamic Trunk                   | 133 |
| Figure 53: Configuring Connection Settings for a Dynamic Trunk  | 133 |
| Figure 54: Showing Connection Parameters for Dynamic Trunks     | 134 |
| Figure 55: Displaying LACP Port Counters                        | 135 |
| Figure 56: Displaying LACP Port Internal Information            | 136 |
| Figure 57: Displaying LACP Port Remote Information              | 138 |
| Figure 58: Configuring Load Balancing                           | 139 |
| Figure 59: Enabling Power Savings                               | 141 |
| Figure 60: Configuring Local Port Mirroring                     | 141 |
| Figure 61: Configuring Local Port Mirroring                     | 142 |
| Figure 62: Displaying Local Port Mirror Sessions                | 143 |
| Figure 63: Configuring Remote Port Mirroring                    | 143 |
| Figure 64: Configuring Remote Port Mirroring (Source)           | 146 |

|   |     |
|---|-----|
| Figure 65: Configuring Remote Port Mirroring (Intermediate)   | 147 |
| Figure 66: Configuring Remote Port Mirroring (Destination)    | 147 |
| Figure 67: Configuring an sFlow Receiver                      | 149 |
| Figure 68: Showing sFlow Receivers                            | 150 |
| Figure 69: Configuring an sFlow Instance                      | 151 |
| Figure 70: Showing sFlow Instances                            | 151 |
| Figure 71: Enabling Traffic Segmentation                      | 153 |
| Figure 72: Configuring Members for Traffic Segmentation       | 154 |
| Figure 73: Showing Traffic Segmentation Members               | 155 |
| Figure 74: VLAN Compliant and VLAN Non-compliant Devices      | 159 |
| Figure 75: Using GVRP   | 160 |
| Figure 76: Creating Static VLANs                              | 162 |
| Figure 77: Modifying Settings for Static VLANs                | 163 |
| Figure 78: Showing Static VLANs                               | 163 |
| Figure 79: Configuring Static Members by VLAN Index           | 166 |
| Figure 80: Configuring Static VLAN Members by Interface       | 166 |
| Figure 81: Configuring Static VLAN Members by Interface Range | 167 |
| Figure 82: Configuring Global Status of GVRP                  | 169 |
| Figure 83: Configuring GVRP for an Interface                  | 169 |
| Figure 84: Showing Dynamic VLANs Registered on the Switch     | 170 |
| Figure 85: Showing the Members of a Dynamic VLAN              | 170 |
| Figure 86: QinQ Operational Concept                           | 172 |
| Figure 87: Enabling QinQ Tunneling                            | 176 |
| Figure 88: Configuring CVLAN to SPVLAN Mapping Entries        | 177 |
| Figure 89: Showing CVLAN to SPVLAN Mapping Entries            | 177 |
| Figure 90: Adding an Interface to a QinQ Tunnel               | 179 |
| Figure 91: Configuring the L2PT Tunnel Address                | 182 |
| Figure 92: Enabling L2PT on Required Interfaces               | 183 |
| Figure 93: Configuring Protocol VLANs                         | 185 |
| Figure 94: Displaying Protocol VLANs                          | 185 |
| Figure 95: Assigning Interfaces to Protocol VLANs             | 187 |
| Figure 96: Showing the Interface to Protocol Group Mapping    | 187 |
| Figure 97: Configuring IP Subnet VLANs                        | 189 |
| Figure 98: Showing IP Subnet VLANs                            | 189 |
| Figure 99: Configuring MAC-Based VLANs                        | 191 |

|   |     |
|---|-----|
| Figure 100: Showing MAC-Based VLANs                                     | 191 |
| Figure 101: Configuring VLAN Translation                                | 192 |
| Figure 102: Configuring VLAN Translation                                | 193 |
| Figure 103: Showing the Entries for VLAN Translation                    | 193 |
| Figure 104: Displaying the Dynamic MAC Address Table                    | 196 |
| Figure 105: Clearing Entries in the Dynamic MAC Address Table           | 197 |
| Figure 106: Setting the Address Aging Time                              | 198 |
| Figure 107: Configuring MAC Address Learning                            | 199 |
| Figure 108: Configuring Static MAC Addresses                            | 201 |
| Figure 109: Displaying Static MAC Addresses                             | 201 |
| Figure 110: Issuing MAC Address Traps (Global Configuration)            | 202 |
| Figure 111: Issuing MAC Address Traps (Interface Configuration)         | 202 |
| Figure 112: STP Root Ports and Designated Ports                         | 204 |
| Figure 113: MSTP Region, Internal Spanning Tree, Multiple Spanning Tree | 204 |
| Figure 114: Spanning Tree – Common Internal, Common, Internal           | 205 |
| Figure 115: Configuring Port Loopback Detection                         | 207 |
| Figure 116: Configuring Global Settings for STA (STP)                   | 211 |
| Figure 117: Configuring Global Settings for STA (RSTP)                  | 212 |
| Figure 118: Configuring Global Settings for STA (MSTP)                  | 212 |
| Figure 119: Displaying Global Settings for STA                          | 214 |
| Figure 120: Determining the Root Port                                   | 215 |
| Figure 121: Configuring Interface Settings for STA                      | 218 |
| Figure 122: STA Port Roles  | 220 |
| Figure 123: Displaying Interface Settings for STA                       | 221 |
| Figure 124: Creating an MST Instance                                    | 222 |
| Figure 125: Displaying MST Instances                                    | 223 |
| Figure 126: Modifying the Priority for an MST Instance                  | 223 |
| Figure 127: Displaying Global Settings for an MST Instance              | 224 |
| Figure 128: Adding a VLAN to an MST Instance                            | 224 |
| Figure 129: Displaying Members of an MST Instance                       | 225 |
| Figure 130: Configuring MSTP Interface Settings                         | 226 |
| Figure 131: Displaying MSTP Interface Settings                          | 227 |
| Figure 132: Configuring Rate Limits                                     | 230 |
| Figure 133: Configuring Storm Control                                   | 232 |
| Figure 134: Storm Control by Limiting the Traffic Rate                  | 232 |



|  |     |
|--|-----|
| Figure 135: Storm Control by Shutting Down a Port                  | 233 |
| Figure 136: Configuring ATC Timers                                 | 235 |
| Figure 137: Configuring ATC Interface Attributes                   | 237 |
| Figure 138: Setting the Default Port Priority                      | 240 |
| Figure 139: Setting the Queue Mode (Strict)                        | 242 |
| Figure 140: Setting the Queue Mode (WRR)                           | 242 |
| Figure 141: Setting the Queue Mode (Strict and WRR)                | 243 |
| Figure 142: Setting the Trust Mode                                 | 245 |
| Figure 143: Configuring CoS to Queue Mapping                       | 246 |
| Figure 144: Configuring DSCP to Queue Mapping                      | 248 |
| Figure 145: Configuring a Class Map                                | 251 |
| Figure 146: Showing Class Maps                                     | 252 |
| Figure 147: Adding Rules to a Class Map                            | 252 |
| Figure 148: Showing the Rules for a Class Map                      | 253 |
| Figure 149: Configuring a Policy Map                               | 255 |
| Figure 150: Showing Policy Maps                                    | 255 |
| Figure 151: Adding Rules to a Policy Map                           | 256 |
| Figure 152: Showing the Rules for a Policy Map                     | 257 |
| Figure 153: Attaching a Policy Map to a Port                       | 258 |
| Figure 154: Configuring a Voice VLAN                               | 261 |
| Figure 155: Configuring an OUI Telephony List                      | 262 |
| Figure 156: Showing an OUI Telephony List                          | 262 |
| Figure 157: Configuring Port Settings for a Voice VLAN             | 264 |
| Figure 158: Configuring the Authentication Sequence                | 268 |
| Figure 159: Authentication Server Operation                        | 268 |
| Figure 160: Configuring Remote Authentication Server (RADIUS)      | 271 |
| Figure 161: Configuring Remote Authentication Server (TACACS+)     | 272 |
| Figure 162: Configuring AAA Server Groups                          | 272 |
| Figure 163: Showing AAA Server Groups                              | 273 |
| Figure 164: Configuring Global Settings for AAA Accounting         | 275 |
| Figure 165: Configuring AAA Accounting Methods                     | 276 |
| Figure 166: Showing AAA Accounting Methods                         | 277 |
| Figure 167: Configuring AAA Accounting Service for 802.1X Service  | 277 |
| Figure 168: Configuring AAA Accounting Service for Command Service | 278 |
| Figure 169: Configuring AAA Accounting Service for Exec Service    | 278 |

|   |     |
|---|-----|
| Figure 170: Displaying a Summary of Applied AAA Accounting Methods  | 279 |
| Figure 171: Displaying Statistics for AAA Accounting Sessions       | 279 |
| Figure 172: Configuring AAA Authorization Methods                   | 281 |
| Figure 173: Showing AAA Authorization Methods                       | 281 |
| Figure 174: Configuring AAA Authorization Methods for Exec Service  | 282 |
| Figure 175: Displaying the Applied AAA Authorization Method         | 282 |
| Figure 176: Configuring User Accounts                               | 284 |
| Figure 177: Showing User Accounts                                   | 285 |
| Figure 178: Configuring Global Settings for Web Authentication      | 286 |
| Figure 179: Configuring Interface Settings for Web Authentication   | 287 |
| Figure 180: Configuring Global Settings for Network Access          | 291 |
| Figure 181: Configuring Interface Settings for Network Access       | 293 |
| Figure 182: Configuring Link Detection for Network Access           | 294 |
| Figure 183: Configuring a MAC Address Filter for Network Access     | 295 |
| Figure 184: Showing the MAC Address Filter Table for Network Access | 295 |
| Figure 185: Showing Addresses Authenticated for Network Access      | 297 |
| Figure 186: Configuring HTTPS                                       | 299 |
| Figure 187: Downloading the Secure-Site Certificate                 | 300 |
| Figure 188: Configuring the SSH Server                              | 304 |
| Figure 189: Generating the SSH Host Key Pair                        | 305 |
| Figure 190: Showing the SSH Host Key Pair                           | 306 |
| Figure 191: Copying the SSH User's Public Key                       | 307 |
| Figure 192: Showing the SSH User's Public Key                       | 308 |
| Figure 193: Showing TCAM Utilization                                | 311 |
| Figure 194: Creating an ACL   | 312 |
| Figure 195: Showing a List of ACLs                                  | 313 |
| Figure 196: Configuring a Standard IPv4 ACL                         | 314 |
| Figure 197: Configuring an Extended IPv4 ACL                        | 317 |
| Figure 198: Configuring a Standard IPv6 ACL                         | 318 |
| Figure 199: Configuring an Extended IPv6 ACL                        | 320 |
| Figure 200: Configuring a MAC ACL                                   | 322 |
| Figure 201: Configuring a ARP ACL                                   | 324 |
| Figure 202: Binding a Port to an ACL                                | 325 |
| Figure 203: Showing ACL Statistics                                  | 326 |
| Figure 204: Creating an IP Address Filter for Management Access     | 328 |

|  |     |
|--|-----|
| Figure 205: Showing IP Addresses Authorized for Management Access        | 328 |
| Figure 206: Configuring Port Security                                    | 331 |
| Figure 207: Configuring Port Authentication                              | 332 |
| Figure 208: Configuring Global Settings for 802.1X Port Authentication   | 333 |
| Figure 209: Configuring Interface Settings for 802.1X Port Authenticator | 337 |
| Figure 210: Showing Statistics for 802.1X Port Authenticator             | 339 |
| Figure 211: Protecting Against DoS Attacks                               | 342 |
| Figure 212: Configuring Global Settings for DHCP Snooping                | 346 |
| Figure 213: Configuring DHCP Snooping on a VLAN                          | 347 |
| Figure 214: Configuring the Port Mode for DHCP Snooping                  | 349 |
| Figure 215: Displaying the Binding Table for DHCP Snooping               | 350 |
| Figure 216: Configuring Global Settings for DHCPv6 Snooping              | 354 |
| Figure 217: Configuring DHCPv6 Snooping on a VLAN                        | 355 |
| Figure 218: Showing VLANs Enabled for DHCPv6 Snooping                    | 355 |
| Figure 219: Configuring the Trust Sate for DHCPv6 Snooping               | 357 |
| Figure 220: Displaying the Binding Table for DHCPv6 Snooping             | 358 |
| Figure 221: Displaying Statistics for DHCPv6 Snooping                    | 359 |
| Figure 222: Setting the Filter Type for IPv4 Source Guard                | 361 |
| Figure 223: Configuring Static Bindings for IPv4 Source Guard            | 363 |
| Figure 224: Displaying Static Bindings for IPv4 Source Guard             | 364 |
| Figure 225: Showing the IPv4 Source Guard Binding Table                  | 365 |
| Figure 226: Setting the Filter Type for IPv6 Source Guard                | 367 |
| Figure 227: Configuring Static Bindings for IPv6 Source Guard            | 369 |
| Figure 228: Displaying Static Bindings for IPv6 Source Guard             | 369 |
| Figure 229: Showing the IPv6 Source Guard Binding Table                  | 371 |
| Figure 230: Configuring Global Settings for ARP Inspection               | 374 |
| Figure 231: Configuring VLAN Settings for ARP Inspection                 | 375 |
| Figure 232: Configuring Interface Settings for ARP Inspection            | 376 |
| Figure 233: Displaying Statistics for ARP Inspection                     | 378 |
| Figure 234: Displaying the ARP Inspection Log                            | 379 |
| Figure 235: Configuring Discarding or Forwarding of CDP/PVST Packets     | 379 |
| Figure 236: Configuring Settings for System Memory Logs                  | 383 |
| Figure 237: Showing Error Messages Logged to System Memory               | 384 |
| Figure 238: Configuring Settings for Remote Logging of Error Messages    | 385 |
| Figure 239: Configuring SMTP Alert Messages                              | 387 |

|  |     |
|--|-----|
| Figure 240: Configuring LLDP Timing Attributes                           | 389 |
| Figure 241: Configuring LLDP Interface Attributes                        | 393 |
| Figure 242: Configuring the Civic Address for an LLDP Interface          | 394 |
| Figure 243: Showing the Civic Address for an LLDP Interface              | 395 |
| Figure 244: Displaying Local Device Information for LLDP (General)       | 398 |
| Figure 245: Displaying Local Device Information for LLDP (Port)          | 398 |
| Figure 246: Displaying Local Device Information for LLDP (Port Details)  | 398 |
| Figure 247: Displaying Remote Device Information for LLDP (Port)         | 405 |
| Figure 248: Displaying Remote Device Information for LLDP (Port Details) | 406 |
| Figure 249: Displaying Remote Device Information for LLDP (End Node)     | 407 |
| Figure 250: Displaying LLDP Device Statistics (General)                  | 409 |
| Figure 251: Displaying LLDP Device Statistics (Port)                     | 409 |
| Figure 252: Setting the Switch's PoE Budget                              | 411 |
| Figure 253: Setting a Port's PoE Budget                                  | 413 |
| Figure 254: Configuring Global Settings for SNMP                         | 416 |
| Figure 255: Setting Community Access Strings                             | 417 |
| Figure 256: Showing Community Access Strings                             | 417 |
| Figure 257: Configuring the Local Engine ID for SNMP                     | 418 |
| Figure 258: Configuring a Remote Engine ID for SNMP                      | 419 |
| Figure 259: Showing Remote Engine IDs for SNMP                           | 420 |
| Figure 260: Creating an SNMP View  | 421 |
| Figure 261: Showing SNMP Views   | 421 |
| Figure 262: Adding an OID Subtree to an SNMP View                        | 422 |
| Figure 263: Showing the OID Subtree Configured for SNMP Views            | 422 |
| Figure 264: Creating an SNMP Group                                       | 427 |
| Figure 265: Showing SNMP Groups  | 427 |
| Figure 266: Configuring Local SNMPv3 Users                               | 429 |
| Figure 267: Showing Local SNMPv3 Users                                   | 429 |
| Figure 268: Changing a Local SNMPv3 User Group                           | 430 |
| Figure 269: Configuring Remote SNMPv3 Users                              | 432 |
| Figure 270: Showing Remote SNMPv3 Users                                  | 432 |
| Figure 271: Configuring Trap Managers (SNMPv1)                           | 436 |
| Figure 272: Configuring Trap Managers (SNMPv2c)                          | 436 |
| Figure 273: Configuring Trap Managers (SNMPv3)                           | 436 |
| Figure 274: Showing Trap Managers  | 437 |

|   |     |
|---|-----|
| Figure 275: Creating SNMP Notification Logs                               | 438 |
| Figure 276: Showing SNMP Notification Logs                                | 439 |
| Figure 277: Showing SNMP Statistics                                       | 440 |
| Figure 278: Configuring an RMON Alarm                                     | 443 |
| Figure 279: Showing Configured RMON Alarms                                | 443 |
| Figure 280: Configuring an RMON Event                                     | 445 |
| Figure 281: Showing Configured RMON Events                                | 446 |
| Figure 282: Configuring an RMON History Sample                            | 447 |
| Figure 283: Showing Configured RMON History Samples                       | 448 |
| Figure 284: Showing Collected RMON History Samples                        | 448 |
| Figure 285: Configuring an RMON Statistical Sample                        | 450 |
| Figure 286: Showing Configured RMON Statistical Samples                   | 450 |
| Figure 287: Showing Collected RMON Statistical Samples                    | 451 |
| Figure 288: Configuring a Switch Cluster                                  | 453 |
| Figure 289: Configuring a Cluster Members                                 | 454 |
| Figure 290: Showing Cluster Members                                       | 454 |
| Figure 291: Showing Cluster Candidates                                    | 455 |
| Figure 292: Managing a Cluster Member                                     | 456 |
| Figure 293: Setting the Name of a Time Range                              | 457 |
| Figure 294: Showing a List of Time Ranges                                 | 457 |
| Figure 295: Add a Rule to a Time Range                                    | 458 |
| Figure 296: Showing the Rules Configured for a Time Range                 | 458 |
| Figure 297: ERPS Ring Components  | 460 |
| Figure 298: Ring Interconnection Architecture (Multi-ring/Ladder Network) | 461 |
| Figure 299: Setting ERPS Global Status                                    | 463 |
| Figure 300: Sub-ring with Virtual Channel                                 | 472 |
| Figure 301: Sub-ring without Virtual Channel                              | 473 |
| Figure 302: Non-ERPS Device Protection                                    | 474 |
| Figure 303: Creating an ERPS Ring   | 477 |
| Figure 304: Creating an ERPS Ring   | 478 |
| Figure 305: Showing Configured ERPS Rings                                 | 478 |
| Figure 306: Blocking an ERPS Ring Port                                    | 483 |
| Figure 307: Single CFM Maintenance Domain                                 | 484 |
| Figure 308: Multiple CFM Maintenance Domains                              | 485 |
| Figure 309: Configuring Global Settings for CFM                           | 489 |

|  |     |
|--|-----|
| Figure 310: Configuring Interfaces for CFM                             | 490 |
| Figure 311: Configuring Maintenance Domains                            | 494 |
| Figure 312: Showing Maintenance Domains                                | 494 |
| Figure 313: Configuring Detailed Settings for Maintenance Domains      | 495 |
| Figure 314: Creating Maintenance Associations                          | 498 |
| Figure 315: Showing Maintenance Associations                           | 498 |
| Figure 316: Configuring Detailed Settings for Maintenance Associations | 499 |
| Figure 317: Configuring Maintenance End Points                         | 500 |
| Figure 318: Showing Maintenance End Points                             | 501 |
| Figure 319: Configuring Remote Maintenance End Points                  | 502 |
| Figure 320: Showing Remote Maintenance End Points                      | 503 |
| Figure 321: Transmitting Link Trace Messages                           | 505 |
| Figure 322: Transmitting Loopback Messages                             | 506 |
| Figure 323: Transmitting Delay-Measure Messages                        | 508 |
| Figure 324: Showing Information on Local MEPs                          | 509 |
| Figure 325: Showing Detailed Information on Local MEPs                 | 511 |
| Figure 326: Showing Information on Local MIPs                          | 512 |
| Figure 327: Showing Information on Remote MEPs                         | 513 |
| Figure 328: Showing Detailed Information on Remote MEPs                | 515 |
| Figure 329: Showing the Link Trace Cache                               | 517 |
| Figure 330: Showing Settings for the Fault Notification Generator      | 518 |
| Figure 331: Showing Continuity Check Errors                            | 519 |
| Figure 332: Enabling OAM for Local Ports                               | 522 |
| Figure 333: Displaying Statistics for OAM Messages                     | 523 |
| Figure 334: Displaying the OAM Event Log                               | 524 |
| Figure 335: Displaying Status of Remote Interfaces                     | 525 |
| Figure 336: Running a Remote Loop Back Test                            | 527 |
| Figure 337: Displaying the Results of Remote Loop Back Testing         | 528 |
| Figure 338: Configuring UDLD Protocol Intervals                        | 530 |
| Figure 339: Configuring UDLD Interface Settings                        | 532 |
| Figure 340: Displaying UDLD Neighbor Information                       | 533 |
| Figure 341: Configuring Global Settings for LBD                        | 535 |
| Figure 342: Configuring Interface Settings for LBD                     | 536 |
| Figure 343: Multicast Filtering Concept                                | 538 |
| Figure 344: Configuring General Settings for IGMP Snooping             | 544 |

|  |     |
|--|-----|
| Figure 345: Configuring a Static Interface for a Multicast Router            | 545 |
| Figure 346: Showing Static Interfaces Attached a Multicast Router            | 546 |
| Figure 347: Showing Current Interfaces Attached a Multicast Router           | 546 |
| Figure 348: Assigning an Interface to a Multicast Service                    | 547 |
| Figure 349: Showing Static Interfaces Assigned to a Multicast Service        | 548 |
| Figure 350: Configuring IGMP Snooping on a VLAN                              | 553 |
| Figure 351: Showing Interface Settings for IGMP Snooping                     | 554 |
| Figure 352: Dropping IGMP Query or Multicast Data Packets                    | 555 |
| Figure 353: Showing Multicast Groups Learned by IGMP Snooping                | 556 |
| Figure 354: Displaying IGMP Snooping Statistics – Query                      | 559 |
| Figure 355: Displaying IGMP Snooping Statistics – VLAN                       | 560 |
| Figure 356: Displaying IGMP Snooping Statistics – Port                       | 560 |
| Figure 357: Displaying IGMP Snooping Statistics – Trunk                      | 561 |
| Figure 358: Enabling IGMP Filtering and Throttling                           | 562 |
| Figure 359: Creating an IGMP Filtering Profile                               | 563 |
| Figure 360: Showing the IGMP Filtering Profiles Created                      | 564 |
| Figure 361: Adding Multicast Groups to an IGMP Filtering Profile             | 564 |
| Figure 362: Showing the Groups Assigned to an IGMP Filtering Profile         | 565 |
| Figure 363: Configuring IGMP Filtering and Throttling Interface Settings     | 566 |
| Figure 364: Configuring General Settings for MLD Snooping                    | 569 |
| Figure 365: Configuring Immediate Leave for MLD Snooping                     | 570 |
| Figure 366: Configuring a Static Interface for an IPv6 Multicast Router      | 571 |
| Figure 367: Showing Static Interfaces Attached an IPv6 Multicast Router      | 571 |
| Figure 368: Showing Current Interfaces Attached an IPv6 Multicast Router     | 572 |
| Figure 369: Assigning an Interface to an IPv6 Multicast Service              | 573 |
| Figure 370: Showing Static Interfaces Assigned to an IPv6 Multicast Service  | 573 |
| Figure 371: Showing Current Interfaces Assigned to an IPv6 Multicast Service | 574 |
| Figure 372: Dropping MLD Query Packets                                       | 575 |
| Figure 373: Showing IPv6 Multicast Services and Corresponding Sources        | 576 |
| Figure 374: Displaying MLD Snooping Statistics – Input                       | 580 |
| Figure 375: Displaying MLD Snooping Statistics – Output                      | 581 |
| Figure 376: Displaying MLD Snooping Statistics – Query                       | 581 |
| Figure 377: Displaying MLD Snooping Statistics – Summary (Port/Trunk)        | 582 |
| Figure 378: Displaying MLD Snooping Statistics – Summary (VLAN)              | 583 |
| Figure 379: Clearing MLD Snooping Statistics                                 | 584 |

|   |     |
|---|-----|
| Figure 380: Enabling MLD Filtering and Throttling                       | 585 |
| Figure 381: Creating an MLD Filtering Profile                           | 586 |
| Figure 382: Showing the MLD Filtering Profiles Created                  | 587 |
| Figure 383: Adding Multicast Groups to an MLD Filtering Profile         | 587 |
| Figure 384: Showing the Groups Assigned to an MLD Filtering Profile     | 588 |
| Figure 385: Configuring MLD Filtering and Throttling Interface Settings | 589 |
| Figure 386: MVR Concept   | 590 |
| Figure 387: Configuring Global Settings for MVR                         | 592 |
| Figure 388: Configuring Domain Settings for MVR                         | 594 |
| Figure 389: Configuring an MVR Group Address Profile                    | 595 |
| Figure 390: Displaying MVR Group Address Profiles                       | 595 |
| Figure 391: Assigning an MVR Group Address Profile to a Domain          | 596 |
| Figure 392: Showing the MVR Group Address Profiles Assigned to a Domain | 596 |
| Figure 393: Configuring Interface Settings for MVR                      | 599 |
| Figure 394: Assigning Static MVR Groups to an Interface                 | 600 |
| Figure 395: Showing the Static MVR Groups Assigned to a Port            | 601 |
| Figure 396: Displaying MVR Receiver Groups                              | 602 |
| Figure 397: Displaying MVR Statistics – Query                           | 604 |
| Figure 398: Displaying MVR Statistics – VLAN                            | 605 |
| Figure 399: Displaying MVR Statistics – Port                            | 606 |
| Figure 400: Configuring Global Settings for MVR6                        | 609 |
| Figure 401: Configuring Domain Settings for MVR6                        | 610 |
| Figure 402: Configuring an MVR6 Group Address Profile                   | 611 |
| Figure 403: Displaying MVR6 Group Address Profiles                      | 612 |
| Figure 404: Assigning an MVR6 Group Address Profile to a Domain         | 612 |
| Figure 405: Showing MVR6 Group Address Profiles Assigned to a Domain    | 613 |
| Figure 406: Configuring Interface Settings for MVR6                     | 615 |
| Figure 407: Assigning Static MVR6 Groups to a Port                      | 616 |
| Figure 408: Showing the Static MVR6 Groups Assigned to a Port           | 617 |
| Figure 409: Displaying MVR6 Receiver Groups                             | 618 |
| Figure 410: Displaying MVR6 Statistics – Query                          | 620 |
| Figure 411: Displaying MVR6 Statistics – VLAN                           | 621 |
| Figure 412: Displaying MVR6 Statistics – Port                           | 622 |
| Figure 413: Displaying MVR6 Statistics – Trunk                          | 623 |
| Figure 414: Pinging a Network Device                                    | 626 |



|  |     |
|--|-----|
| Figure 415: Tracing the Route to a Network Device                | 628 |
| Figure 416: Proxy ARP  | 629 |
| Figure 417: Configuring General Settings for ARP                 | 630 |
| Figure 418: Configuring Static ARP Entries                       | 631 |
| Figure 419: Displaying Static ARP Entries                        | 632 |
| Figure 420: Displaying ARP Entries                               | 632 |
| Figure 421: Displaying ARP Statistics                            | 633 |
| Figure 422: Configuring a Static IPv4 Address                    | 637 |
| Figure 423: Configuring a Dynamic IPv4 Address                   | 638 |
| Figure 424: Showing the Configured IPv4 Address for an Interface | 639 |
| Figure 425: Configuring the IPv6 Default Gateway                 | 640 |
| Figure 426: Configuring General Settings for an IPv6 Interface   | 645 |
| Figure 427: Configuring RA Guard for an IPv6 Interface           | 645 |
| Figure 428: Configuring an IPv6 Address                          | 648 |
| Figure 429: Showing Configured IPv6 Addresses                    | 649 |
| Figure 430: Showing IPv6 Neighbors                               | 651 |
| Figure 431: Showing IPv6 Statistics (IPv6)                       | 655 |
| Figure 432: Showing IPv6 Statistics (ICMPv6)                     | 656 |
| Figure 433: Showing IPv6 Statistics (UDP)                        | 656 |
| Figure 434: Showing Reported MTU Values                          | 657 |
| Figure 435: Virtual Interfaces and Layer 3 Routing               | 660 |
| Figure 436: Configuring Static Routes                            | 663 |
| Figure 437: Displaying Static Routes                             | 663 |
| Figure 438: Displaying the Routing Table                         | 664 |
| Figure 439: Configuring RIP                                      | 666 |
| Figure 440: Configuring General Settings for RIP                 | 670 |
| Figure 441: Clearing Entries from the Routing Table              | 671 |
| Figure 442: Adding Network Interfaces to RIP                     | 672 |
| Figure 443: Showing Network Interfaces Using RIP                 | 673 |
| Figure 444: Specifying a Passive RIP Interface                   | 674 |
| Figure 445: Showing Passive RIP Interfaces                       | 674 |
| Figure 446: Specifying a Static RIP Neighbor                     | 675 |
| Figure 447: Showing Static RIP Neighbors                         | 675 |
| Figure 448: Redistributing External Routes into RIP              | 676 |
| Figure 449: Showing External Routes Redistributed into RIP       | 676 |

|  |     |
|--|-----|
| Figure 450: Setting the Distance Assigned to External Routes                       | 677 |
| Figure 451: Showing the Distance Assigned to External Routes                       | 678 |
| Figure 452: Configuring a Network Interface for RIP                                | 681 |
| Figure 453: Showing RIP Network Interface Settings                                 | 681 |
| Figure 454: Showing RIP Interface Settings   | 682 |
| Figure 455: Showing RIP Peer Information   | 683 |
| Figure 456: Resetting RIP Statistics   | 683 |
| Figure 457: Configuring General Settings for DNS                                   | 686 |
| Figure 458: Configuring a List of Domain Names for DNS                             | 687 |
| Figure 459: Showing the List of Domain Names for DNS                               | 687 |
| Figure 460: Configuring a List of Name Servers for DNS                             | 688 |
| Figure 461: Showing the List of Name Servers for DNS                               | 689 |
| Figure 462: Configuring Static Entries in the DNS Table                            | 690 |
| Figure 463: Showing Static Entries in the DNS Table                                | 690 |
| Figure 464: Showing Entries in the DNS Cache                                       | 691 |
| Figure 465: Configuring Multicast DNS  | 692 |
| Figure 466: Specifying a DHCP Client Identifier                                    | 694 |
| Figure 467: Layer 3 DHCP Relay Service   | 695 |
| Figure 468: Configuring L3 DHCP Relay Service                                      | 696 |
| Figure 469: Layer 2 DHCP Relay Service (DHCP server on a separate network segment) | 696 |
| Figure 470: Configuring L2 DHCP Relay Service                                      | 698 |
| Figure 471: Enabling Dynamic Provisioning via DHCP                                 | 699 |
| Figure 472: DHCP Server  | 699 |
| Figure 473: Enabling the DHCP Server   | 700 |
| Figure 474: Configuring Excluded Addresses on the DHCP Server                      | 701 |
| Figure 475: Showing Excluded Addresses on the DHCP Server                          | 701 |
| Figure 476: Configuring DHCP Server Address Pools (Network)                        | 704 |
| Figure 477: Configuring DHCP Server Address Pools (Host)                           | 704 |
| Figure 478: Showing Configured DHCP Server Address Pools                           | 705 |
| Figure 479: Shows Addresses Assigned by the DHCP Server                            | 706 |
| Figure 480: Enabling DHCPv6 Relay Agent for Unicast mode.                          | 707 |
| Figure 481: Enabling DHCPv6 Relay Agent for Multicast mode.                        | 708 |
| Figure 482: Enabling DHCPv6 Relay Agent for Multicast mode.                        | 708 |
| Figure 483: Configuring Global Settings for PPPoE Intermediate Agent               | 710 |
| Figure 484: Configuring Interface Settings for PPPoE Intermediate Agent            | 712 |

Figure 485: Showing PPPoE Intermediate Agent Statistics

713



---

# Tables

|  |     |
|--|-----|
| Table 1: Key Features  | 37  |
| Table 2: System Defaults                                       | 43  |
| Table 3: Web Page Configuration Buttons                        | 51  |
| Table 4: Switch Main Menu                                      | 52  |
| Table 5: Predefined Summer-Time Parameters                     | 94  |
| Table 6: Port Statistics                                       | 110 |
| Table 7: LACP Port Counters                                    | 134 |
| Table 8: LACP Internal Configuration Information               | 135 |
| Table 9: LACP Remote Device Configuration Information          | 137 |
| Table 10: Traffic Segmentation Forwarding                      | 153 |
| Table 11: Recommended STA Path Cost Range                      | 215 |
| Table 12: Default STA Path Costs                               | 215 |
| Table 13: Default Mapping of CoS/CFI Values to Queue/CFI       | 245 |
| Table 14: Default Mapping of DSCP Values to Queue/CFI          | 247 |
| Table 15: Dynamic QoS Profiles                                 | 289 |
| Table 16: HTTPS System Support                                 | 298 |
| Table 17: 802.1X Statistics                                    | 338 |
| Table 18: ARP Inspection Statistics                            | 377 |
| Table 19: ARP Inspection Log                                   | 378 |
| Table 20: Logging Levels                                       | 382 |
| Table 21: LLDP MED Location CA Types                           | 393 |
| Table 22: Chassis ID Subtype                                   | 395 |
| Table 23: System Capabilities                                  | 396 |
| Table 24: Port ID Subtype                                      | 397 |
| Table 25: Remote Port Auto-Negotiation Advertised Capability   | 400 |
| Table 26: Maximum Number of Ports Providing Simultaneous Power | 411 |
| Table 27: SNMPv3 Security Models and Levels                    | 414 |
| Table 28: Supported Notification Messages                      | 424 |
| Table 29: ERPS Request/State Priority                          | 480 |

|  |     |
|--|-----|
| Table 30: Remote MEP Priority Levels                 | 492 |
| Table 31: MEP Defect Descriptions                    | 492 |
| Table 32: OAM Operation State                        | 520 |
| Table 33: Remote Loopback Status                     | 526 |
| Table 34: Address Resolution Protocol                | 628 |
| Table 35: ARP Statistics                             | 633 |
| Table 36: Show IPv6 Neighbors - display description  | 650 |
| Table 37: Show IPv6 Statistics - display description | 652 |
| Table 38: Show MTU - display description             | 657 |
| Table 39: Options 60, 66 and 67 Statements           | 693 |
| Table 40: Options 55 and 124 Statements              | 693 |
| Table 41: Troubleshooting Chart                      | 723 |

# Section I

## Getting Started

This section provides an overview of the switch, and introduces some basic concepts about network switches. It also describes the basic settings required to access the management interface.

This section includes these chapters:

- ◆ ["Introduction" on page 37](#)





# Introduction

This switch provides a broad range of features for Layer 2 switching. It includes a management agent that allows you to configure the features listed in this manual. The default configuration can be used for most of the features provided by this switch. However, there are many options that you should configure to maximize the switch's performance for your particular network environment.

## Key Features

**Table 1: Key Features**

| Feature                          | Description  |
|----------------------------------|--|
| Configuration Backup and Restore | Using management station or FTP/SFTP/TFTP server   |
| Authentication                   | Console, Telnet, web – user name/password, RADIUS, TACACS+<br>Port – IEEE 802.1X, MAC address filtering<br>SNMP v1/2c - Community strings<br>SNMP version 3 – MD5 or SHA password<br>Telnet – SSH<br>Web – HTTPS         |
| General Security Measures        | AAA<br>ARP inspection<br>DHCP Snooping (with Option 82 relay information)<br>DoS Protection<br>IP Source Guard<br>PPPoE Intermediate Agent<br>Port Authentication – IEEE 802.1X<br>Port Security – MAC address filtering |
| Access Control Lists             | Supports up to 512 rules, 64 ACLs, and a maximum of 64 rules for an ACL  |
| DHCP/DHCPv6                      | Client, Relay Option 82  |
| DNS                              | Client and Proxy service   |
| Port Configuration               | Speed, duplex mode, and flow control   |
| Port Trunking                    | Supports up to 12 trunks – static or dynamic trunking (LACP)   |
| Port Mirroring                   | 8 sessions, one or more source ports to one analysis port  |
| Congestion Control               | Rate Limiting<br>Throttling for broadcast, multicast, unknown unicast storms   |
| Address Table                    | 16K MAC addresses in the forwarding table, 1K static MAC addresses, 1K L2 multicast groups   |
| IP Version 4 and 6               | Supports IPv4 and IPv6 addressing, and management  |

**Table 1: Key Features** (Continued)

| Feature                       | Description  |
|-------------------------------|--|
| IEEE 802.1D Bridge            | Supports dynamic data switching and addresses learning   |
| Store-and-Forward Switching   | Supported to ensure wire-speed switching while eliminating bad frames  |
| Spanning Tree Algorithm       | Supports standard STP, Rapid Spanning Tree Protocol (RSTP), and Multiple Spanning Trees (MSTP)   |
| Virtual LANs                  | Up to 4093 using IEEE 802.1Q, port-based, protocol-based, voice VLANs, and QinQ tunnel   |
| Traffic Prioritization        | Default port priority, traffic class map, queue scheduling, IP Precedence, or Differentiated Services Code Point (DSCP)  |
| Qualify of Service            | Supports Differentiated Services (DiffServ)  |
| Link Layer Discovery Protocol | Used to discover basic information about neighboring devices   |
| Switch Clustering             | Supports up to 36 member switches in a cluster   |
| Connectivity Fault Management | Connectivity monitoring using continuity check messages, fault verification through loop back messages, and fault isolation by examining end-to-end connections (IEEE 802.1ag) |
| ERPS                          | Supports Ethernet Ring Protection Switching for increased availability of Ethernet rings (G.8032)  |
| Multicast Filtering           | Supports IGMP snooping and query and Multicast VLAN Registration   |
| Remote Device Management      | Supports Ethernet OAM functions for attached CPEs (IEEE 802.3ah, ITU-T Y.1731)   |

## Description of Software Features

The switch provides a wide range of advanced performance enhancing features. Flow control eliminates the loss of packets due to bottlenecks caused by port saturation. Storm suppression prevents broadcast traffic storms from engulfing the network. Untagged (port-based), tagged, and protocol-based VLANs, plus support for automatic GVRP VLAN registration provide traffic security and efficient use of network bandwidth. CoS priority queueing ensures the minimum delay for moving real-time multimedia data across the network. While multicast filtering provides support for real-time network applications.

Some of the management features are briefly described below.

### Configuration Backup and Restore

You can save the current configuration settings to a file on the management station (using the web interface) or an FTP/SFTP/TFTP server (using the web or console interface), and later download this file to restore the switch configuration settings.

### Authentication

This switch authenticates management access via the console port, Telnet, or a web browser. User names and passwords can be configured locally or can be verified via

a remote authentication server (i.e., RADIUS or TACACS+). Port-based authentication is also supported via the IEEE 802.1X protocol. This protocol uses Extensible Authentication Protocol over LANs (EAPOL) to request user credentials from the 802.1X client, and then uses the EAP between the switch and the authentication server to verify the client's right to access the network via an authentication server (i.e., RADIUS or TACACS+ server).

Other authentication options include HTTPS for secure management access via the web, SSH for secure management access over a Telnet-equivalent connection, SNMP Version 3, IP address filtering for SNMP/Telnet/web management access. MAC address filtering and IP source guard also provide authenticated port access. DHCP snooping is provided to prevent malicious attacks from insecure ports. While PPPoE Intermediate Agent supports authentication of a client for a service provider.

**Access Control Lists** ACLs provide packet filtering for IP frames (based on address, protocol, TCP/UDP port number or TCP control code) or any frames (based on MAC address or Ethernet type). ACLs can be used to improve performance by blocking unnecessary network traffic or to implement security controls by restricting access to specific network resources or protocols.

**DHCP Relay** DHCP Relay is supported to allow dynamic configuration of local clients from a DHCP server located in a different network. And DHCP Relay Option 82 controls the processing of Option 82 information in DHCP request packets relayed by this device.

**Port Configuration** You can manually configure the speed, duplex mode, and flow control used on specific ports, or use auto-negotiation to detect the connection settings used by the attached device. Use full-duplex mode on ports whenever possible to double the throughput of switch connections. Flow control should also be enabled to control network traffic during periods of congestion and prevent the loss of packets when port buffer thresholds are exceeded. The switch supports flow control based on the IEEE 802.3x standard (now incorporated in IEEE 802.3-2002).

**Rate Limiting** This feature controls the maximum rate for traffic transmitted or received on an interface. Rate limiting is configured on interfaces at the edge of a network to limit traffic into or out of the network. Packets that exceed the acceptable amount of traffic are dropped.

**Port Mirroring** The switch can unobtrusively mirror traffic from any port to a monitor port. You can then attach a protocol analyzer or RMON probe to this port to perform traffic analysis and verify connection integrity.

**Port Trunking** Ports can be combined into an aggregate connection. Trunks can be manually set up or dynamically configured using Link Aggregation Control Protocol (LACP – IEEE 802.3-2005). The additional ports dramatically increase the throughput across any connection, and provide redundancy by taking over the load if a port in the trunk should fail. The switch supports up to 12 trunks.

**Storm Control** Broadcast, multicast and unknown unicast storm suppression prevents traffic from overwhelming the network. When enabled on a port, the level of traffic passing through the port is restricted. If traffic rises above a pre-defined threshold, it will be throttled until the level falls back beneath the threshold.

**Static MAC Addresses** A static address can be assigned to a specific interface on this switch. Static addresses are bound to the assigned interface and will not be moved. When a static address is seen on another interface, the address will be ignored and will not be written to the address table. Static addresses can be used to provide network security by restricting access for a known host to a specific port.

**IP Address Filtering** Access to insecure ports can be controlled using DHCP Snooping which filters ingress traffic based on static IP addresses and addresses stored in the DHCP Snooping table. Traffic can also be restricted to specific source IP addresses or source IP/MAC address pairs based on static entries or entries stored in the DHCP Snooping table.

**IEEE 802.1D Bridge** The switch supports IEEE 802.1D transparent bridging. The address table facilitates data switching by learning addresses, and then filtering or forwarding traffic based on this information. The address table supports up to 16K addresses.

**Store-and-Forward Switching** The switch copies each frame into its memory before forwarding them to another port. This ensures that all frames are a standard Ethernet size and have been verified for accuracy with the cyclic redundancy check (CRC). This prevents bad frames from entering the network and wasting bandwidth.

To avoid dropping frames on congested ports, the switch provides 4 Mbits for frame buffering. This buffer can queue packets awaiting transmission on congested networks.

**Spanning Tree Algorithm** The switch supports these spanning tree protocols:

- ◆ Spanning Tree Protocol (STP, IEEE 802.1D) – This protocol provides loop detection. When there are multiple physical paths between segments, this protocol will choose a single path and disable all others to ensure that only one route exists between any two stations on the network. This prevents the

creation of network loops. However, if the chosen path should fail for any reason, an alternate path will be activated to maintain the connection.

- ◆ **Rapid Spanning Tree Protocol (RSTP, IEEE 802.1w)** – This protocol reduces the convergence time for network topology changes to about 3 to 5 seconds, compared to 30 seconds or more for the older IEEE 802.1D STP standard. It is intended as a complete replacement for STP, but can still interoperate with switches running the older standard by automatically reconfiguring ports to STP-compliant mode if they detect STP protocol messages from attached devices.
- ◆ **Multiple Spanning Tree Protocol (MSTP, IEEE 802.1s)** – This protocol is a direct extension of RSTP. It can provide an independent spanning tree for different VLANs. It simplifies network management, provides for even faster convergence than RSTP by limiting the size of each region, and prevents VLAN members from being segmented from the rest of the group (as sometimes occurs with IEEE 802.1D STP).

### **Connectivity Fault Management**

The switch provides connectivity fault monitoring for end-to-end connections within a designated service area by using continuity check messages which can detect faults in maintenance points, fault verification through loop back messages, and fault isolation with link trace messages.

### **Virtual LANs**

The switch supports up to 4094 VLANs. A Virtual LAN is a collection of network nodes that share the same collision domain regardless of their physical location or connection point in the network. The switch supports tagged VLANs based on the IEEE 802.1Q standard. Members of VLAN groups can be dynamically learned via GVRP, or ports can be manually assigned to a specific set of VLANs. This allows the switch to restrict traffic to the VLAN groups to which a user has been assigned. By segmenting your network into VLANs, you can:

- ◆ Eliminate broadcast storms which severely degrade performance in a flat network.
- ◆ Simplify network management for node changes/moves by remotely configuring VLAN membership for any port, rather than having to manually change the network connection.
- ◆ Provide data security by restricting all traffic to the originating VLAN, except where a connection is explicitly defined via the switch's routing service.
- ◆ Use protocol VLANs to restrict traffic to specified interfaces based on protocol type.

### **IEEE 802.1Q Tunneling (QinQ)**

This feature is designed for service providers carrying traffic for multiple customers across their networks. QinQ tunneling is used to maintain customer-specific VLAN and Layer 2 protocol configurations even when different customers use the same

internal VLAN IDs. This is accomplished by inserting Service Provider VLAN (SPVLAN) tags into the customer's frames when they enter the service provider's network, and then stripping the tags when the frames leave the network.

**Traffic Prioritization** This switch prioritizes each packet based on the required level of service, using eight priority queues with strict priority, Weighted Round Robin (WRR) scheduling, or a combination of strict and weighted queuing. It uses IEEE 802.1p and 802.1Q tags to prioritize incoming traffic based on input from the end-station application. These functions can be used to provide independent priorities for delay-sensitive data and best-effort data.

This switch also supports several common methods of prioritizing layer 3/4 traffic to meet application requirements. Traffic can be prioritized based on the priority bits in the IP frame's Type of Service (ToS) octet using DSCP, or IP Precedence. When these services are enabled, the priorities are mapped to a Class of Service value by the switch, and the traffic then sent to the corresponding output queue.

**Quality of Service** Differentiated Services (DiffServ) provides policy-based management mechanisms used for prioritizing network resources to meet the requirements of specific traffic types on a per-hop basis. Each packet is classified upon entry into the network based on access lists, IP Precedence or DSCP values, or VLAN lists. Using access lists allows you select traffic based on Layer 2, Layer 3, or Layer 4 information contained in each packet. Based on network policies, different kinds of traffic can be marked for different kinds of forwarding.

**Ethernet Ring Protection Switching** ERPS can be used to increase the availability and robustness of Ethernet rings, such as those used in Metropolitan Area Networks (MAN). ERPS provides Layer 2 loop avoidance and fast reconvergence in Layer 2 ring topologies, supporting up to 255 nodes in the ring structure. It can also function with IEEE 802.1ag to support link monitoring when non-participating devices exist within the Ethernet ring.

**Operation, Administration, and Maintenance** The switch provides OAM remote management tools required to monitor and maintain the links to subscriber CPEs (Customer Premise Equipment). This section describes functions including enabling OAM for selected ports, loopback testing, and displaying remote device information.

**Multicast Filtering** Specific multicast traffic can be assigned to its own VLAN to ensure that it does not interfere with normal network traffic and to guarantee real-time delivery by setting the required priority level for the designated VLAN. The switch uses IGMP Snooping and Query for IPv4, and MLD Snooping and Query for IPv6 to manage multicast group registration. It also supports Multicast VLAN Registration (MVR for IPv4 and MVR6 for IPv6) which allows common multicast traffic, such as television channels,

to be transmitted across a single network-wide multicast VLAN shared by hosts residing in other standard or private VLAN groups, while preserving security and data isolation for normal traffic.

### Link Layer Discovery Protocol

LLDP is used to discover basic information about neighboring devices within the local broadcast domain. LLDP is a Layer 2 protocol that advertises information about the sending device and collects information gathered from neighboring network nodes it discovers.

Advertised information is represented in Type Length Value (TLV) format according to the IEEE 802.1ab standard, and can include details such as device identification, capabilities and configuration settings. Media Endpoint Discovery (LLDP-MED) is an extension of LLDP intended for managing endpoint devices such as Voice over IP phones and network switches. The LLDP-MED TLVs advertise information such as network policy, power, inventory, and device location details. The LLDP and LLDP-MED information can be used by SNMP applications to simplify troubleshooting, enhance network management, and maintain an accurate network topology.

## System Defaults

The switch's system defaults are provided in the configuration file "Factory\_Default\_Config.cfg." To reset the switch defaults, this file should be set as the startup configuration file.

The following table lists some of the basic system defaults.

**Table 2: System Defaults**

| Function                             | Parameter                                     | Default                              |
|--------------------------------------|---|--------------------------------------|
| Console Port Connection              | Baud Rate                                     | 115200 bps                           |
|                                      | Data bits                                     | 8                                    |
|                                      | Stop bits                                     | 1                                    |
|                                      | Parity  | none                                 |
|                                      | Local Console Timeout                         | 0 (disabled)                         |
| Authentication and Security Measures | Privileged Exec Level                         | Username "admin"<br>Password "admin" |
|                                      | Normal Exec Level                             | Username "guest"<br>Password "guest" |
|                                      | Enable Privileged Exec from Normal Exec Level | Password "super"                     |
|                                      | RADIUS Authentication                         | Disabled                             |
|                                      | TACACS+ Authentication                        | Disabled                             |

**Table 2: System Defaults** (Continued)

| Function   | Parameter                  | Default   |
|--|----------------------------|---|
| Authentication and Security Measures (continued) | 802.1X Port Authentication | Disabled  |
|  | Web Authentication         | Disabled  |
|  | MAC Authentication         | Disabled  |
|  | PPPoE Intermediate Agent   | Disabled  |
|  | HTTPS                      | Enabled   |
|  | SSH                        | Disabled  |
|  | Port Security              | Disabled  |
|  | IP Filtering               | Disabled  |
|  | DHCP Snooping              | Disabled  |
|  | IP Source Guard            | Disabled (all ports)  |
| Web Management                                   | HTTP Server                | Enabled   |
|  | HTTP Port Number           | 80  |
|  | HTTP Secure Server         | Enabled   |
|  | HTTP Secure Server Port    | 443   |
| SNMP   | SNMP Agent                 | Enabled   |
|  | Community Strings          | "public" (read only)<br>"private" (read/write)  |
|  | Traps                      | Authentication traps: enabled<br>Link-up-down events: enabled                         |
|  | SNMP V3                    | View: defaultview<br>Group: public (read only); private (read/write)                  |
| Port Configuration                               | Admin Status               | Enabled   |
|  | Auto-negotiation           | Enabled   |
|  | Flow Control               | Disabled  |
| Port Trunking                                    | Static Trunks              | None  |
|  | LACP (all ports)           | Disabled  |
| Congestion Control                               | Rate Limiting              | Disabled  |
|  | Storm Control              | Broadcast: Enabled (64 kbits/sec)<br>Multicast: Disabled<br>Unknown Unicast: Disabled |
|  | Auto Traffic Control       | Disabled  |
| Address Table                                    | Aging Time                 | 300 seconds   |
| Spanning Tree Algorithm                          | Status                     | Enabled, RSTP (Defaults: RSTP standard)   |
|  | Edge Ports                 | Disabled  |



**Table 2: System Defaults** (Continued)

| Function               | Parameter                     | Default  |
|------------------------|-------------------------------|--|
| LLDP                   | Status                        | Enabled  |
| ERPS                   | Status                        | Disabled   |
| CFM                    | Status                        | Enabled  |
| OAM                    | Status                        | Disabled   |
| Virtual LANs           | Default VLAN                  | 1  |
|                        | PVID                          | 1  |
|                        | Acceptable Frame Type         | All  |
|                        | Ingress Filtering             | Disabled   |
|                        | Switchport Mode (Egress Mode) | Hybrid   |
|                        | GVRP (global)                 | Disabled   |
|                        | GVRP (port interface)         | Disabled   |
|                        | QinQ Tunneling                | Disabled   |
| Traffic Prioritization | Ingress Port Priority         | 0  |
|                        | Queue Mode                    | WRR  |
|                        | Queue Weight                  | Queue: 0 1 2 3 4 5 6 7<br>Weight: 1 2 4 6 8 10 12 14 |
|                        | Class of Service              | Enabled  |
|                        | IP Precedence Priority        | Disabled   |
|                        | IP DSCP Priority              | Disabled   |
| IP Settings            | Management. VLAN              | VLAN 1   |
|                        | IP Address                    | DHCP assigned  |
|                        | Subnet Mask                   | 255.255.255.0  |
|                        | Default Gateway               | Not configured                                       |
|                        | DHCP                          | Client: Enabled                                      |
|                        | DNS                           | Proxy service: Disabled                              |
|                        | BOOTP                         | Disabled   |
| Multicast Filtering    | IGMP Snooping (Layer 2)       | Snooping: Enabled<br>Querier: Disabled               |
|                        | MLD Snooping (Layer 2 IPv6)   | Snooping: Enabled<br>Querier: Disabled               |
|                        | Multicast VLAN Registration   | Disabled   |
|                        | IGMP Proxy Reporting          | Enabled  |
| System Log             | Status                        | Enabled  |
|                        | Messages Logged to RAM        | Levels 0-7 (all)                                     |
|                        | Messages Logged to Flash      | Levels 0-3   |

**Table 2: System Defaults** (Continued)

| Function          | Parameter             | Default                         |
|-------------------|-----------------------|---------------------------------|
| SMTP Email Alerts | Event Handler         | Enabled (but no server defined) |
| SNTP              | Clock Synchronization | Disabled                        |
| Switch Clustering | Status                | Disabled                        |
|                   | Commander             | Disabled                        |

# Section II

## Web Configuration

This section describes the basic switch features, along with a detailed description of how to configure each feature via a web browser.

This section includes these chapters:

- ◆ ["Using the Web Interface" on page 49](#)
- ◆ ["Basic Management Tasks" on page 71](#)
- ◆ ["Interface Configuration" on page 105](#)
- ◆ ["VLAN Configuration" on page 157](#)
- ◆ ["Address Table Settings" on page 195](#)
- ◆ ["Spanning Tree Algorithm" on page 203](#)
- ◆ ["Congestion Control" on page 229](#)
- ◆ ["Class of Service" on page 239](#)
- ◆ ["Quality of Service" on page 249](#)
- ◆ ["VoIP Traffic Configuration" on page 259](#)
- ◆ ["Security Measures" on page 265](#)
- ◆ ["Basic Administration Protocols" on page 381](#)
- ◆ ["Multicast Filtering" on page 537](#)
- ◆ ["IP Configuration" on page 635](#)
- ◆ ["IP Services" on page 685](#)



## 2

# Using the Web Interface

This switch provides an embedded HTTP web agent. Using a web browser you can configure the switch and view statistics to monitor network activity. The web agent can be accessed by any computer on the network using a standard web browser (Internet Explorer 9, Mozilla Firefox 39, or Google Chrome 44, or more recent versions).



**Note:** You can also use the Command Line Interface (CLI) to manage the switch over a serial connection to the console port or via Telnet. For more information on using the CLI, refer to the *CLI Reference Guide*.

## Connecting to the Web Interface

Prior to accessing the switch from a web browser, be sure you have first performed the following tasks:

1. The default IP address and subnet mask for the switch is 192.168.2.10 and 255.255.255.0, with no default gateway. If this is not compatible with the subnet connected to the switch, you can configure it with a valid IP address, subnet mask, and default gateway. To configure this device as the default gateway, use the IP > Routing > Static Routes (Add) page, set the destination address to the required interface, and the next hop to null address 0.0.0.0 .
2. Set user names and passwords using an out-of-band serial connection. Access to the web agent is controlled by the same user names and passwords as the onboard configuration program. (See [“Configuring User Accounts” on page 283.](#))
3. After you enter a user name and password, you will have access to the system configuration program.



**Note:** You are allowed three attempts to enter the correct password; on the third failed attempt the current connection is terminated.

**Note:** If you log into the web interface as guest (Normal Exec level), you can view the configuration settings or change the guest password. If you log in as “admin” (Privileged Exec level), you can change the settings on any page.

**Note:** If the path between your management station and this switch does not pass through any device that uses the Spanning Tree Algorithm, then you can set the

switch port attached to your management station to fast forwarding (i.e., enable Admin Edge Port) to improve the switch's response time to management commands issued through the web interface. See ["Configuring Interface Settings for STA" on page 214](#).

**Note:** Users are automatically logged off of the HTTP server or HTTPS server if no input is detected for 600 seconds.

**Note:** Connection to the web interface is not supported for HTTPS using an IPv6 link local address.


---


## Navigating the Web Browser Interface

To access the web-browser interface you must first enter a user name and password. The administrator has Read/Write access to all configuration parameters and statistics. The default user name and password for the administrator is "admin." The administrator has full access privileges to configure any parameters in the web interface. The default user name and password for guest access is "guest." The guest only has read access for most configuration parameters. Refer to ["Configuring User Accounts" on page 283](#) for more details.

**Dashboard** When your web browser connects with the switch's web agent, the Dashboard is displayed as shown below. The Dashboard displays the main menu on the left side of the screen and System Information, CPU Utilization, Temperature, and Top 5 Most Active Interfaces on the right side. The main menu links are used to navigate to other menus, and display configuration parameters and statistics.


**Figure 1: Dashboard**

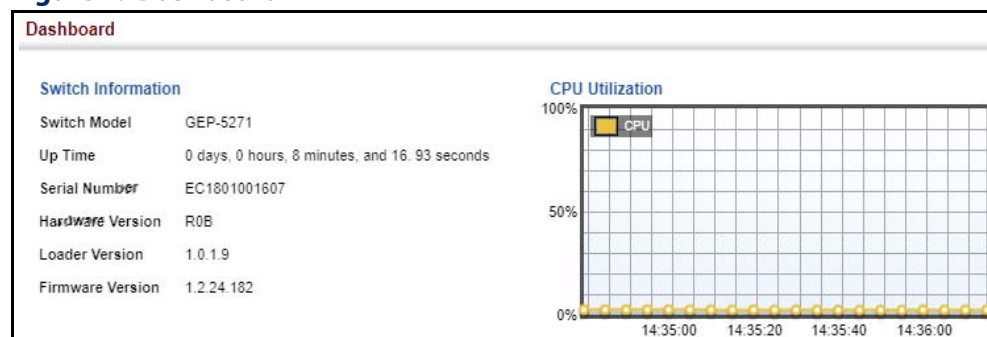

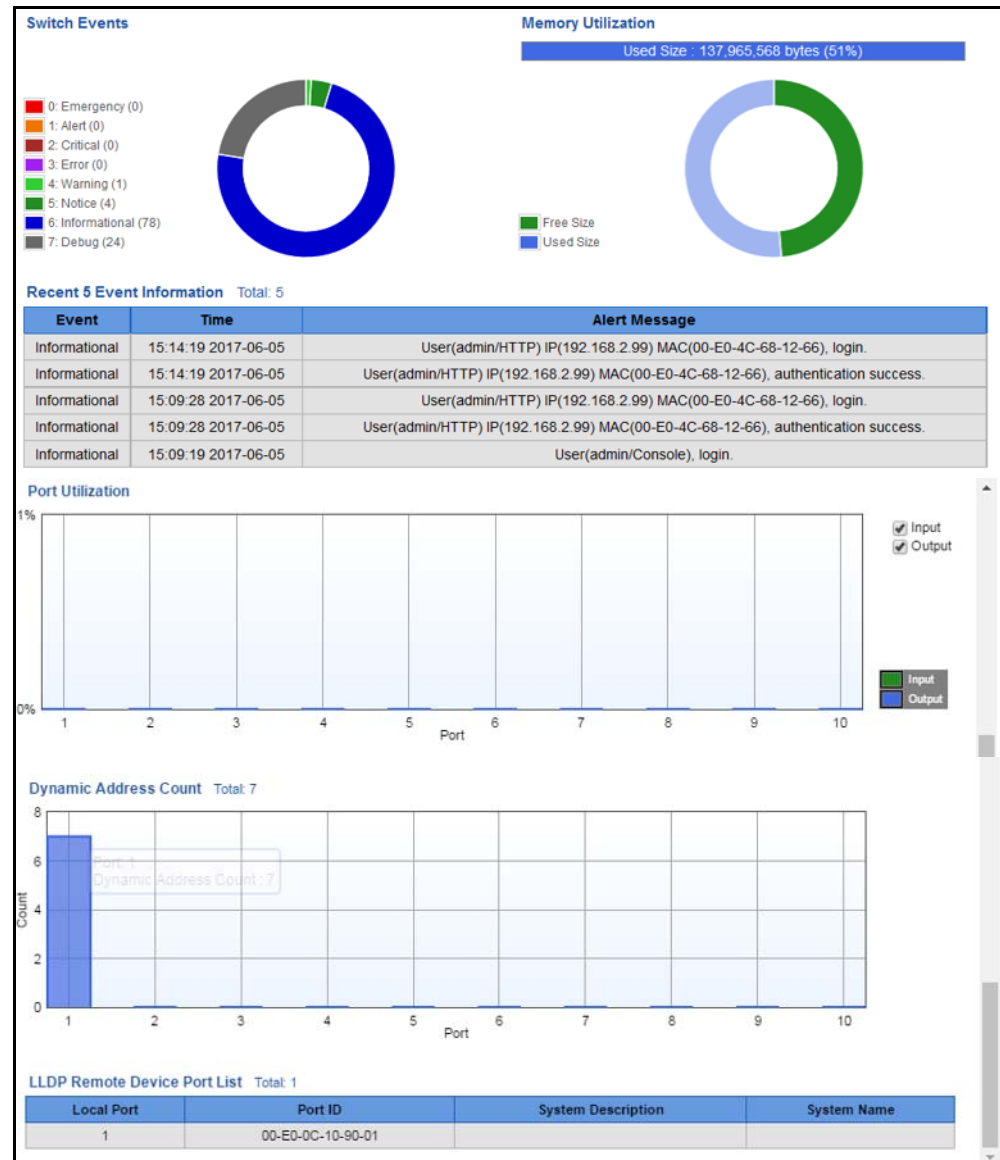







**Configuration Options** Configurable parameters have a dialog box or a drop-down list. Once a configuration change has been made on a page, be sure to click on the Apply button to confirm the new setting. The following table summarizes the web page configuration buttons.

**Table 3: Web Page Configuration Buttons**

| Button  | Action   |
|---|--|
| Apply   | Sets specified values to the system.   |
| Revert  | Cancel specified values and restores current values prior to pressing "Apply." |
|  | Saves current settings.  |


**Table 3: Web Page Configuration Buttons** (Continued)

| Button  | Action                                |
|---|---------------------------------------|
|  | Displays help for the selected page.  |
|  | Refreshes the current page.           |
|  | Displays the site map.                |
|  | Logs out of the management interface. |
|  | Sends mail to the vendor.             |
|  | Links to the vendor's web site.       |

**Panel Display** The web agent displays an image of the switch's ports. The Mode can be set to display different information for the ports, including Active (i.e., up or down), Duplex (i.e., half or full duplex), or Flow Control (i.e., with or without flow control).

### Front Panel Indicators

 **GEP-5271**



**NOTE:** You can open a connection to the LevelOne web site by clicking on the LevelOne logo.

**Main Menu** Using the onboard web agent, you can define system parameters, manage and control the switch, and all its ports, or monitor network conditions. The following table briefly describes the selections available from this program.

**Table 4: Switch Main Menu**

| Menu       | Description  | Page   |
|------------|--|--------|
| Dashboard  | Displays system information, CPU utilization, temperature, and top 5 most active interfaces. | 50     |
| System     |  |        |
| General    | Provides basic system description, including contact information                             | 72     |
| Switch     | Shows the number of ports, hardware version, power status, and firmware version numbers      | 73     |
| Capability | Enables support for jumbo frames; shows the bridge extension parameters                      | 74, 75 |



**Table 4: Switch Main Menu** (Continued)

| Menu                             | Description  | Page |
|----------------------------------|--|------|
| File                             |  | 76   |
| Copy                             | Allows the transfer and copying files  | 76   |
| Automatic Operation Code Upgrade | Automatically upgrades operation code if a newer version is found on the server                          | 81   |
| Set Startup                      | Sets the startup file  | 80   |
| Show                             | Shows the files stored in flash memory; allows deletion of files   | 80   |
| Time                             |  | 85   |
| Configure General                |  |      |
| Manual                           | Manually sets the current time   | 85   |
| SNTP                             | Configures SNTP polling interval   | 86   |
| NTP                              | Configures NTP authentication parameters   | 87   |
| Configure Time Server            | Configures a list of SNTP servers  | 88   |
| Configure SNTP Server            | Sets the IP address for SNTP time servers  | 88   |
| Add NTP Server                   | Adds NTP time server and index of authentication key   | 89   |
| Show NTP Server                  | Shows list of configured NTP time servers  | 89   |
| Add NTP Authentication Key       | Adds key index and corresponding MD5 key   | 90   |
| Show NTP Authentication Key      | Shows list of configured authentication keys   | 90   |
| Configure Time Zone              | Sets the local time zone for the system clock  | 92   |
| Configure Summer Time            | Configures summer time settings  | 93   |
| Console                          | Sets console port connection parameters  | 95   |
| Telnet                           | Sets Telnet connection parameters  | 97   |
| CPU Utilization                  | Displays information on CPU utilization  | 98   |
| CPU Guard                        | Sets the CPU utilization watermark and threshold   | 99   |
| Memory Status                    | Shows memory utilization parameters  | 100  |
| Reset                            | Restarts the switch immediately, at a specified time, after a specified delay, or at a periodic interval | 101  |
| Interface                        |  | 105  |
| Port                             |  | 106  |
| General                          |  | 106  |
| Configure by Port List           | Configures connection settings per port  | 106  |
| Configure by Port Range          | Configures connection settings for a range of ports  | 108  |
| Show Information                 | Displays port connection status  | 109  |
| Statistics                       | Shows Interface, Etherlike, and RMON port statistics   | 110  |
| Chart                            | Shows Interface, Etherlike, and RMON port statistics   | 110  |
| History                          | Shows statistical history for specified interfaces   | 115  |

**Table 4: Switch Main Menu** (Continued)

| Menu                       | Description  | Page                                       |
|----------------------------|--|--|
| Transceiver                | Shows identifying information and operational parameters for optical transceivers which support Digital Diagnostic Monitoring (DDM), and configures thresholds for alarm and warning messages for optical transceivers which support DDM | <a href="#">119</a><br><a href="#">120</a> |
| Cable Test                 | Performs cable diagnostics for selected port to diagnose any cable faults (short, open etc.) and report the cable length   | <a href="#">122</a>                        |
| Trunk                      |  | <a href="#">124</a>                        |
| Static                     |  | <a href="#">125</a>                        |
| Configure Trunk            |  | <a href="#">125</a>                        |
| Add                        | Creates a trunk, along with the first port member  | <a href="#">125</a>                        |
| Show                       | Shows the configured trunk identifiers   | <a href="#">125</a>                        |
| Add Member                 | Specifies ports to group into static trunks  | <a href="#">125</a>                        |
| Show Member                | Shows the port members for the selected trunk  | <a href="#">125</a>                        |
| Configure General          |  | <a href="#">125</a>                        |
| Configure                  | Configures trunk connection settings   | <a href="#">125</a>                        |
| Show Information           | Displays trunk connection settings   | <a href="#">125</a>                        |
| Dynamic                    |  | <a href="#">128</a>                        |
| Configure Aggregator       | Configures administration key and timeout for specific LACP groups   | <a href="#">128</a>                        |
| Configure Aggregation Port |  | <a href="#">125</a>                        |
| Configure                  |  | <a href="#">125</a>                        |
| General                    | Allows ports to dynamically join trunks  | <a href="#">128</a>                        |
| Actor                      | Configures parameters for link aggregation group members on the local side   | <a href="#">128</a>                        |
| Partner                    | Configures parameters for link aggregation group members on the remote side  | <a href="#">128</a>                        |
| Show Information           |  | <a href="#">134</a>                        |
| Counters                   | Displays statistics for LACP protocol messages   | <a href="#">134</a>                        |
| Internal                   | Displays configuration settings and operational state for the local side of a link aggregation   | <a href="#">135</a>                        |
| Neighbors                  | Displays configuration settings and operational state for the remote side of a link aggregation  | <a href="#">137</a>                        |
| Configure Trunk            |  | <a href="#">128</a>                        |
| Configure                  | Configures connection settings   | <a href="#">128</a>                        |
| Show                       | Displays port connection status  | <a href="#">128</a>                        |
| Show Member                | Shows the active members in a trunk  | <a href="#">128</a>                        |
| Statistics                 | Shows Interface, Etherlike, and RMON port statistics   | <a href="#">110</a>                        |
| Chart                      | Shows Interface, Etherlike, and RMON port statistics   | <a href="#">110</a>                        |

**Table 4: Switch Main Menu** (Continued)

| Menu                           | Description   | Page |
|--------------------------------|---|------|
| Load Balance                   | Sets the load-distribution method among ports in aggregated links   | 138  |
| History                        | Shows statistical history for specified interfaces  | 115  |
| Green Ethernet                 | Adjusts the power provided to ports based on the length of the cable used to connect to other devices   | 140  |
| Mirror                         |   | 141  |
| Add                            | Sets the source and target ports for mirroring  | 141  |
| Show                           | Shows the configured mirror sessions  | 141  |
| RSPAN                          | Mirrors traffic from remote switches for analysis at a destination port on the local switch   | 143  |
| sFlow                          | Configures flow sampling for receiver ports and instances   | 147  |
| Configure Receiver             | Creates an sFlow receiver on the switch   | 148  |
| Configure Details              | Enable an sFlow polling data source that polls periodically based on a specified time interval, or an sFlow data source instance that takes samples periodically based on the number of packets processed | 150  |
| Traffic Segmentation           |   | 152  |
| Configure Global               | Enables traffic segmentation globally   | 152  |
| Configure Session              | Configures the uplink and down-link ports for a segmented group of ports  | 153  |
| VLAN                           | Virtual LAN   | 157  |
| Static                         |   |      |
| Add                            | Creates VLAN groups   | 161  |
| Show                           | Displays configured VLAN groups   | 161  |
| Modify                         | Configures group name and administrative status   | 161  |
| Edit Member by VLAN            | Specifies VLAN attributes per VLAN  | 163  |
| Edit Member by Interface       | Specifies VLAN attributes per interface   | 163  |
| Edit Member by Interface Range | Specifies VLAN attributes per interface range   | 163  |
| Dynamic                        |   | 167  |
| Configure General              | Enables GVRP VLAN registration protocol globally  | 167  |
| Configure Interface            | Configures GVRP status and timers per interface   | 167  |
| Show Dynamic VLAN              |   | 167  |
| Show VLAN                      | Shows the VLANs this switch has joined through GVRP   | 167  |
| Show VLAN Member               | Shows the interfaces assigned to a VLAN through GVRP  | 167  |
| Tunnel                         | IEEE 802.1Q (QinQ) Tunneling  |      |
| Configure Global               | Sets tunnel mode for the switch   |      |
| Configure Service              | Sets a CVLAN to SPVLAN mapping entry  |      |
| Configure Interface            | Sets the tunnel mode for any participating interface  |      |
| L2PT                           | Layer 2 Protocol Tunneling  | 179  |

**Table 4: Switch Main Menu** (Continued)

| Menu                | Description   | Page |
|---------------------|---|------|
| Configure Global    | Configures the destination MAC address for L2PT   | 181  |
| Configure Interface | Enables L2PT on selected interfaces   | 182  |
| Protocol            |   | 183  |
| Configure Protocol  |   | 184  |
| Add                 | Creates a protocol group, specifying supported protocols  | 184  |
| Show                | Shows configured protocol groups  | 184  |
| Configure Interface |   | 185  |
| Add                 | Maps a protocol group to a VLAN   | 185  |
| Show                | Shows the protocol groups mapped to each VLAN   | 185  |
| IP Subnet           |   | 187  |
| Add                 | Maps IP subnet traffic to a VLAN  | 187  |
| Show                | Shows IP subnet to VLAN mapping   | 187  |
| MAC-Based           |   | 190  |
| Add                 | Maps traffic with specified source MAC address to a VLAN  | 190  |
| Show                | Shows source MAC address to VLAN mapping  | 190  |
| Translation         |   | 192  |
| Add                 | Maps VLAN IDs between the customer and service provider   | 192  |
| Show                | Displays the configuration settings for VLAN translation  | 192  |
| MAC Address         |   | 195  |
| Dynamic             |   |      |
| Configure Aging     | Sets timeout for dynamically learned entries  | 197  |
| Show Dynamic MAC    | Displays dynamic entries in the address table   | 195  |
| Clear Dynamic MAC   | Removes any learned entries from the forwarding database and clears the transmit and receive counts for any static or system configured entries | 196  |
| Learning Status     | Enables MAC address learning on selected interfaces   | 198  |
| Static              | Configures static MAC addresses   | 199  |
| MAC Notification    |   | 201  |
| Configure Global    | Issues a trap when a dynamic MAC address is added or removed  | 201  |
| Configure Interface | Enables MAC authentication traps on the current interface   | 201  |
| Spanning Tree       |   | 203  |
| Loopback Detection  | Configures Loopback Detection parameters  | 205  |
| STA                 | Spanning Tree Algorithm   |      |
| Configure Global    |   |      |
| Configure           | Configures global bridge settings for STP, RSTP and MSTP  | 207  |

**Table 4: Switch Main Menu** (Continued)

| Menu                | Description  | Page |
|---------------------|--|------|
| Show Information    | Displays STA values used for the bridge  | 213  |
| Configure Interface |  |      |
| Configure           | Configures interface settings for STA  | 214  |
| Show Information    | Displays interface settings for STA  | 218  |
| MSTP                | Multiple Spanning Tree Algorithm   | 221  |
| Configure Global    |  | 221  |
| Add                 | Configures initial VLAN and priority for an MST instance   | 221  |
| Modify              | Configures the priority or an MST instance   | 221  |
| Show                | Configures global settings for an MST instance   | 221  |
| Add Member          | Adds VLAN members for an MST instance  | 221  |
| Show Member         | Adds or deletes VLAN members for an MST instance   | 221  |
| Show Information    | Displays MSTP values used for the bridge   |      |
| Configure Interface |  | 225  |
| Configure           | Configures interface settings for an MST instance  | 225  |
| Show Information    | Displays interface settings for an MST instance  | 225  |
| Traffic             |  |      |
| Rate Limit          | Sets the input and output rate limits for a port   | 229  |
| Storm Control       | Sets the broadcast storm threshold for each interface  | 230  |
| Priority            |  |      |
| Default Priority    | Sets the default priority for each port or trunk   | 239  |
| Queue               | Sets queue mode for the switch; sets the service weight for each queue that will use a weighted or hybrid mode | 240  |
| Trust Mode          | Selects DSCP or CoS priority processing  | 244  |
| CoS to Queue        | Maps CoS/CFI values in incoming packets to per-hop behavior for priority processing                            | 245  |
| DSCP to Queue       | Maps DSCP values in incoming packets to per-hop behavior for priority processing                               | 246  |
| DiffServ            |  | 249  |
| Configure Class     |  | 250  |
| Add                 | Creates a class map for a type of traffic  | 250  |
| Show                | Shows configured class maps  | 250  |
| Modify              | Modifies the name of a class map   | 250  |
| Add Rule            | Configures the criteria used to classify ingress traffic   | 250  |
| Show Rule           | Shows the traffic classification rules for a class map   | 250  |

**Table 4: Switch Main Menu** (Continued)

| Menu                  | Description   | Page |
|-----------------------|---|------|
| Configure Policy      |   | 253  |
| Add                   | Creates a policy map to apply to multiple interfaces  | 253  |
| Show                  | Shows configured policy maps  | 253  |
| Modify                | Modifies the name of a policy map   | 253  |
| Add Rule              | Sets the boundary parameters used for monitoring inbound traffic, and the action to take for conforming and non-conforming traffic  | 253  |
| Show Rule             | Shows the rules used to enforce bandwidth policing for a policy map   | 253  |
| Configure Interface   | Applies a policy map to an ingress port   | 257  |
| VoIP                  | Voice over IP   | 259  |
| Configure Global      | Configures auto-detection of VoIP traffic, sets the Voice VLAN, and VLAN aging time   | 260  |
| Configure OUI         |   | 261  |
| Add                   | Maps the OUI in the source MAC address of ingress packets to the VoIP device manufacturer   | 261  |
| Show                  | Shows the OUI telephony list  | 261  |
| Configure Interface   | Configures VoIP traffic settings for ports, including the way in which a port is added to the Voice VLAN, filtering of non-VoIP packets, the method of detecting VoIP traffic, and the priority assigned to the voice traffic | 262  |
| Security              |   | 265  |
| AAA                   | Authentication, Authorization and Accounting  | 266  |
| System Authentication | Configures authentication sequence – local, RADIUS, and TACACS  | 267  |
| Server                |   | 268  |
| Configure Server      | Configures RADIUS and TACACS server message exchange settings   | 268  |
| Configure Group       |   | 268  |
| Add                   | Specifies a group of authentication servers and sets the priority sequence  | 268  |
| Show                  | Shows the authentication server groups and priority sequence  | 268  |
| Accounting            | Enables accounting of requested services for billing or security purposes   | 273  |
| Configure Global      | Specifies the interval at which the local accounting service updates information to the accounting server   | 273  |
| Configure Method      |   | 273  |
| Add                   | Configures accounting for various service types   | 273  |
| Show                  | Shows the accounting settings used for various service types  | 273  |
| Configure Service     | Sets the accounting method applied to specific interfaces for 802.1X, CLI command privilege levels for the console port, and for Telnet   | 273  |
| Show Information      |   | 273  |
| Summary               | Shows the configured accounting methods, and the methods applied to specific interfaces   | 273  |

**Table 4: Switch Main Menu** (Continued)

| Menu                 | Description  | Page |
|----------------------|--|------|
| Statistics           | Shows basic accounting information recorded for user sessions  | 273  |
| Authorization        | Enables authorization of requested services  | 279  |
| Configure Method     |  | 279  |
| Add                  | Configures authorization for various service types   | 279  |
| Show                 | Shows the authorization settings used for various service types  | 279  |
| Configure Service    | Sets the authorization method applied used for the console port, and for Telnet  | 279  |
| Show Information     | Shows the configured authorization methods, and the methods applied to specific interfaces   | 279  |
| User Accounts        |  | 283  |
| Add                  | Configures user names, passwords, and access levels  | 283  |
| Show                 | Shows authorized users   | 283  |
| Modify               | Modifies user attributes   | 283  |
| Web Authentication   | Allows authentication and access to the network when 802.1X or Network Access authentication are infeasible or impractical                       | 285  |
| Configure Global     | Configures general protocol settings   | 285  |
| Configure Interface  | Enables Web Authentication for individual ports  | 286  |
| Network Access       | MAC address-based network access authentication  | 287  |
| Configure Global     | Enables aging for authenticated MAC addresses, and sets the time period after which a connected MAC address must be reauthenticated              | 290  |
| Configure Interface  |  | 291  |
| General              | Enables MAC authentication on a port; sets the maximum number of address that can be authenticated, the guest VLAN, dynamic VLAN and dynamic QoS | 291  |
| Configure MAC Filter |  | 294  |
| Add                  | Specifies MAC addresses exempt from authentication   | 294  |
| Show                 | Shows the list of exempt MAC addresses   | 294  |
| Show Information     | Shows the authenticated MAC address list   | 296  |
| HTTPS                | Secure HTTP  | 297  |
| Configure Global     | Enables HTTPS, and specifies the UDP port to use   | 297  |
| Copy Certificate     | Replaces the default secure-site certificate   | 299  |
| SSH                  | Secure Shell   | 301  |
| Configure Global     | Configures SSH server settings   | 303  |
| Configure Host Key   |  | 304  |
| Generate             | Generates the host key pair (public and private)   | 304  |
| Show                 | Displays RSA and DSA host keys; deletes host keys  | 304  |
| Configure User Key   |  | 306  |

**Table 4: Switch Main Menu** (Continued)

| Menu                   | Description   | Page |
|------------------------|---|------|
| Copy                   | Imports user public keys from a TFTP server   | 306  |
| Show                   | Displays RSA and DSA user keys; deletes user keys   | 306  |
| ACL                    | Access Control Lists  | 308  |
| Configure ACL          |   | 311  |
| Show TCAM              | Shows utilization parameters for TCAM   | 309  |
| Add                    | Adds an ACL based on IP or MAC address filtering  | 311  |
| Show                   | Shows the name and type of configured ACLs  | 311  |
| Add Rule               | Configures packet filtering based on IP or MAC addresses and other packet attributes                            | 311  |
| Show Rule              | Shows the rules specified for an ACL  | 311  |
| Configure Interface    | Binds a port to the specified ACL and time range  |      |
| Configure              | Binds a port to the specified ACL and time range  | 324  |
| Show Hardware Counters | Shows statistics for ACL hardware counters  | 325  |
| IP Filter              |   | 327  |
| Add                    | Sets IP addresses of clients allowed management access via the web, SNMP, and Telnet                            | 327  |
| Show                   | Shows the addresses to be allowed management access   | 327  |
| Port Security          | Configures per port security, including status, response for security breach, and maximum allowed MAC addresses | 329  |
| Port Authentication    | IEEE 802.1X   | 331  |
| Configure Global       | Enables authentication and EAPOL pass-through   | 333  |
| Configure Interface    | Sets authentication parameters for individual ports   | 334  |
| Show Statistics        | Displays protocol statistics for the selected port  | 338  |
| DoS Protection         | Protects against Denial-of-Service attacks  | 340  |
| DHCP Snooping          |   | 342  |
| Configure Global       | Enables DHCP snooping globally, MAC-address verification, information option; and sets the information policy   | 344  |
| Configure VLAN         | Enables DHCP snooping on a VLAN   | 346  |
| Configure Interface    | Sets the trust mode for an interface  | 347  |
| Show Information       | Displays the DHCP Snooping binding information  | 349  |
| DHCP Snooping6         |   | 342  |
| Configure Global       | Enables DHCPv6 snooping globally, MAC-address verification, information option; and sets the information policy | 344  |
| Configure VLAN         | Enables DHCPv6 snooping on a VLAN   | 346  |
| Configure Interface    | Sets the trust mode for an interface  | 347  |
| Show Information       | Displays the DHCPv6 Snooping binding information  | 349  |



**Table 4: Switch Main Menu** (Continued)

| Menu                | Description  | Page                |
|---------------------|--|---------------------|
| IP Source Guard     | Filters IP traffic based on static entries in the IP Source Guard table, or dynamic entries in the DHCP Snooping table           | <a href="#">359</a> |
| General             | Enables IP source guard and selects filter type per port   | <a href="#">359</a> |
| Static Binding      |  | <a href="#">361</a> |
| Configure ACL Table |  | <a href="#">361</a> |
| Add                 | Adds static addresses to the source guard ACL binding table  | <a href="#">361</a> |
| Show                | Shows static addresses in the source guard ACL binding table   | <a href="#">361</a> |
| Configure MAC Table |  | <a href="#">361</a> |
| Add                 | Adds static addresses to the source guard MAC address binding table  | <a href="#">361</a> |
| Show                | Shows static addresses in the source guard MAC address binding table   | <a href="#">361</a> |
| Dynamic Binding     | Displays the source-guard binding table for a selected interface   | <a href="#">364</a> |
| IPv6 Source Guard   | Filters IPv6 traffic based on static entries in the IP Source Guard table, or dynamic entries in the DHCP Snooping table         | <a href="#">365</a> |
| Port Configuration  | Enables IPv6 source guard and selects filter type per port   | <a href="#">365</a> |
| Static Binding      |  | <a href="#">367</a> |
| Add                 | Adds a static addresses to the source-guard binding table  | <a href="#">367</a> |
| Show                | Shows static addresses in the source-guard binding table   | <a href="#">367</a> |
| Dynamic Binding     | Displays the source-guard binding table for a selected interface   | <a href="#">370</a> |
| ARP Inspection      |  | <a href="#">371</a> |
| Configure General   | Enables inspection globally, configures validation of additional address components, and sets the log rate for packet inspection | <a href="#">372</a> |
| Configure VLAN      | Enables ARP inspection on specified VLANs  | <a href="#">374</a> |
| Configure Interface | Sets the trust mode for ports, and sets the rate limit for packet inspection   | <a href="#">376</a> |
| Show Information    |  | <a href="#">377</a> |
| Show Statistics     | Displays statistics on the inspection process  | <a href="#">377</a> |
| Show Log            | Shows the inspection log list  | <a href="#">378</a> |
| Application Filter  | Discards CDP or PVST packets   | <a href="#">379</a> |
| Administration      |  | <a href="#">381</a> |
| Log                 |  | <a href="#">382</a> |
| System              |  | <a href="#">382</a> |
| Configure Global    | Stores error messages in local memory  | <a href="#">382</a> |
| Show System Logs    | Shows logged error messages  | <a href="#">382</a> |
| Remote              | Configures the logging of messages to a remote logging process   | <a href="#">384</a> |
| SMTP                | Sends an SMTP client message to a participating server   | <a href="#">385</a> |
| LLDP                |  | <a href="#">387</a> |

**Table 4: Switch Main Menu** (Continued)

| Menu                           | Description  | Page                |
|--------------------------------|--|---------------------|
| Configure Global               | Configures global LLDP timing parameters   | <a href="#">387</a> |
| Configure Interface            |  | <a href="#">389</a> |
| Configure General              | Sets the message transmission mode; enables SNMP notification; and sets the LLDP attributes to advertise             | <a href="#">389</a> |
| Add CA-Type                    | Specifies the physical location of the device attached to an interface   | <a href="#">393</a> |
| Show Local Device Information  |  | <a href="#">395</a> |
| General                        | Displays general information about the local device  | <a href="#">395</a> |
| Port/Trunk                     | Displays information about each interface  | <a href="#">395</a> |
| Show Remote Device Information |  | <a href="#">399</a> |
| Port/Trunk                     | Displays information about a remote device connected to a port on this switch  | <a href="#">399</a> |
| Port/Trunk Details             | Displays detailed information about a remote device connected to this switch   | <a href="#">399</a> |
| Show Device Statistics         |  | <a href="#">407</a> |
| General                        | Displays statistics for all connected remote devices   | <a href="#">407</a> |
| Port/Trunk                     | Displays statistics for remote devices on a selected port or trunk   | <a href="#">407</a> |
| PoE                            | Power over Ethernet  | <a href="#">409</a> |
| PSE                            | Configures the maximum PoE power for the switch, and port power parameters for priority and maximum power allocation | <a href="#">409</a> |
| SNMP                           | Simple Network Management Protocol   | <a href="#">413</a> |
| Configure Global               | Enables SNMP agent status, and sets related trap functions   | <a href="#">415</a> |
| Configure Engine               |  | <a href="#">417</a> |
| Set Engine ID                  | Sets the SNMP v3 engine ID on this switch  | <a href="#">417</a> |
| Add Remote Engine              | Sets the SNMP v3 engine ID for a remote device   | <a href="#">418</a> |
| Show Remote Engine             | Shows configured engine ID for remote devices  | <a href="#">418</a> |
| Configure View                 |  | <a href="#">420</a> |
| Add View                       | Adds an SNMP v3 view of the OID MIB  | <a href="#">420</a> |
| Show View                      | Shows configured SNMP v3 views   | <a href="#">420</a> |
| Add OID Subtree                | Specifies a part of the subtree for the selected view  | <a href="#">420</a> |
| Show OID Subtree               | Shows the subtrees assigned to each view   | <a href="#">420</a> |
| Configure Group                |  | <a href="#">422</a> |
| Add                            | Adds a group with access policies for assigned users   | <a href="#">422</a> |
| Show                           | Shows configured groups and access policies  | <a href="#">422</a> |
| Configure User                 |  |                     |
| Add Community                  | Configures community strings and access mode   | <a href="#">426</a> |
| Show Community                 | Shows community strings and access mode  | <a href="#">426</a> |

**Table 4: Switch Main Menu** (Continued)

| Menu                           | Description  | Page |
|--------------------------------|--|------|
| Add SNMPv3 Local User          | Configures SNMPv3 users on this switch   | 428  |
| Show SNMPv3 Local User         | Shows SNMPv3 users configured on this switch   | 428  |
| Change SNMPv3 Local User Group | Assign a local user to a new group   | 428  |
| Add SNMPv3 Remote User         | Configures SNMPv3 users from a remote device   | 430  |
| Show SNMPv3 Remote User        | Shows SNMPv3 users set from a remote device  | 428  |
| Configure Trap                 |  | 433  |
| Add                            | Configures trap managers to receive messages on key events that occur on this switch | 433  |
| Show                           | Shows configured trap managers   | 433  |
| Configure Notify Filter        |  |      |
| Add                            | Creates an SNMP notification log   | 437  |
| Show                           | Shows the configured notification logs   | 437  |
| Show Statistics                | Shows the status of SNMP communications  | 439  |
| RMON                           | Remote Monitoring  | 441  |
| Configure Global               |  |      |
| Add                            |  |      |
| Alarm                          | Sets threshold bounds for a monitored variable                                       | 441  |
| Event                          | Creates a response event for an alarm  | 444  |
| Show                           |  | 441  |
| Alarm                          | Shows all configured alarms  | 441  |
| Event                          | Shows all configured events  | 444  |
| Configure Interface            |  |      |
| Add                            |  |      |
| History                        | Periodically samples statistics on a physical interface                              | 446  |
| Statistics                     | Enables collection of statistics on a physical interface                             | 449  |
| Show                           |  |      |
| History                        | Shows sampling parameters for each entry in the history group                        | 446  |
| Statistics                     | Shows sampling parameters for each entry in the statistics group                     | 449  |
| Show Details                   |  |      |
| History                        | Shows sampled data for each entry in the history group                               | 446  |
| Statistics                     | Shows sampled data for each entry in the history group                               | 449  |
| Cluster                        |  | 451  |
| Configure Global               | Globally enables clustering for the switch; sets Commander status                    | 452  |
| Configure Member               | Adds switch Members to the cluster   | 453  |
| Show Member                    | Shows cluster switch member; managed switch members                                  | 455  |

**Table 4: Switch Main Menu** (Continued)

| Menu                 | Description  | Page |
|----------------------|--|------|
| Time Range           | Configures the time to apply an ACL  | 456  |
| Add                  | Specifies the name of a time range   | 456  |
| Show                 | Shows the name of configured time ranges   | 456  |
| Add Rule             |  | 456  |
| Absolute             | Sets exact time or time range  | 456  |
| Periodic             | Sets a recurrent time  | 456  |
| Show Rule            | Shows the time specified by a rule   | 456  |
| ERPS                 | Ethernet Ring Protection Switching   | 459  |
| Configure Global     | Activates ERPS globally  | 463  |
| Configure Domain     |  | 463  |
| Add                  | Creates an ERPS ring   | 463  |
| Show                 | Shows list of configured ERPS rings, status, and settings  | 463  |
| Configure Details    | Configures ring parameters   | 463  |
| Configure Operation  | Blocks a ring port using Forced Switch or Manual Switch commands   | 479  |
| CFM                  | Connectivity Fault Management  | 483  |
| Configure Global     | Configures global settings, including administrative status, cross-check start delay, link trace, and SNMP traps   | 487  |
| Configure Interface  | Configures administrative status on an interface   | 490  |
| Configure MD         | Configure Maintenance Domains  | 490  |
| Add                  | Defines a portion of the network for which connectivity faults can be managed, identified by an MD index, maintenance level, and the MIP creation method | 490  |
| Configure Details    | Configures the archive hold time and fault notification settings   | 490  |
| Show                 | Shows list of configured maintenance domains   | 490  |
| Configure MA         | Configure Maintenance Associations   | 495  |
| Add                  | Defines a unique CFM service instance, identified by its parent MD, the MA index, the VLAN assigned to the MA, and the MIP creation method               | 495  |
| Configure Details    | Configures detailed settings, including continuity check status and interval level, cross-check status, and alarm indication signal parameters           | 495  |
| Show                 | Shows list of configured maintenance associations  | 495  |
| Configure MEP        | Configures Maintenance End Points  | 499  |
| Add                  | Configures MEPs at the domain boundary to provide management access for each maintenance association   | 499  |
| Show                 | Shows list of configured maintenance end points  | 499  |
| Configure Remote MEP | Configures Remote Maintenance End Points   | 501  |

**Table 4: Switch Main Menu** (Continued)

| Menu                              | Description   | Page |
|-----------------------------------|---|------|
| Add                               | Configures a static list of remote MEPs for comparison against the MEPs learned through continuity check messages   | 501  |
| Show                              | Shows list of configured remote maintenance end points  | 501  |
| Transmit Link Trace               | Sends link trace messages to isolate connectivity faults by tracing the path through a network to the designated target node  | 503  |
| Transmit Loopback                 | Sends loopback messages to isolate connectivity faults by requesting a target node to echo the message back to the source   | 505  |
| Transmit Delay Measure            | Sends periodic delay-measure requests to a specified MEP within a maintenance association   | 507  |
| Show Information                  |   |      |
| Show Local MEP                    | Shows the MEPs configured on this device  | 509  |
| Show Local MEP Details            | Displays detailed CFM information about a specified local MEP in the continuity check database  | 510  |
| Show Local MIP                    | Shows the MIPs on this device discovered by the CFM protocol  | 512  |
| Show Remote MEP                   | Shows MEPs located on other devices which have been discovered through continuity check messages, or statically configured in the MEP database  | 513  |
| Show Remote MEP Details           | Displays detailed CFM information about a specified remote MEP in the continuity check database   | 514  |
| Show Link Trace Cache             | Shows information about link trace operations launched from this device   | 516  |
| Show Fault Notification Generator | Displays configuration settings for the fault notification generator  | 517  |
| Show Continuity Check Error       | Displays CFM continuity check errors logged on this device  | 518  |
| OAM                               | Operation, Administration, and Maintenance  | 519  |
| Interface                         | Enables OAM on specified port, sets the mode to active or passive, and enables the reporting of critical events or errored frame events   | 519  |
| Counters                          | Displays statistics on OAM PDUs   | 522  |
| Event Log                         | Displays the log for recorded link events   | 523  |
| Remote Interface                  | Displays information about attached OAM-enabled devices   | 524  |
| Remote Loopback                   | Performs a loopback test on the specified port  | 525  |
| UDLD                              | UniDirectional Link Detection   | 528  |
| Configure Global                  | Configures the message probe interval, detection interval, and recovery interval  | 529  |
| Configure Interface               | Enables UDLD and aggressive mode which reduces the shut-down delay after loss of bidirectional connectivity is detected   | 530  |
| Show Information                  | Displays UDLD neighbor information, including neighbor state, expiration time, and protocol intervals   | 532  |
| LDB                               | Loopback Detection  | 533  |
| Configure Global                  | Enables loopback detection globally, specifies the interval at which to transmit control frames, specifies the interval to wait before releasing an interface from shutdown state, specifies response to detect loopback, and traps to send | 534  |

**Table 4: Switch Main Menu** (Continued)

| Menu                     | Description  | Page                |
|--------------------------|--|---------------------|
| Configure Interface      | Enables loopback detection per interface   | <a href="#">536</a> |
| Tools                    |  |                     |
| Ping                     | Sends ICMP echo request packets to another node on the network   | <a href="#">463</a> |
| Trace Route              | Shows the route packets take to the specified destination  | <a href="#">464</a> |
| ARP                      | Shows entries in the Address Resolution Protocol cache   | <a href="#">466</a> |
| IP                       |  | <a href="#">635</a> |
| General                  |  |                     |
| Routing Interface        |  |                     |
| Add Address              | Configures an IP interface for a VLAN  | <a href="#">635</a> |
| Show Address             | Shows the IP interfaces assigned to a VLAN   | <a href="#">635</a> |
| Routing                  |  |                     |
| Static Routes            |  | <a href="#">662</a> |
| Add                      | Configures static routing entries  | <a href="#">662</a> |
| Show                     | Shows static routing entries   | <a href="#">662</a> |
| Routing Table            | Shows all routing entries, including local, static and dynamic routes  | <a href="#">663</a> |
| IPv6 Configuration       |  | <a href="#">639</a> |
| Configure Global         | Sets an IPv6 default gateway for traffic with no known next hop  | <a href="#">639</a> |
| Configure Interface      | Configures IPv6 interface address using auto-configuration or link-local address, and sets related protocol settings   | <a href="#">640</a> |
| Add IPv6 Address         | Adds an global unicast, EUI-64, or link-local IPv6 address to an interface   | <a href="#">646</a> |
| Show IPv6 Address        | Show the IPv6 addresses assigned to an interface   | <a href="#">648</a> |
| Show IPv6 Neighbor Cache | Displays information in the IPv6 neighbor discovery cache  | <a href="#">650</a> |
| Show Statistics          |  | <a href="#">651</a> |
| IPv6                     | Shows statistics about IPv6 traffic  | <a href="#">651</a> |
| ICMPv6                   | Shows statistics about ICMPv6 messages   | <a href="#">651</a> |
| UDP                      | Shows statistics about UDP messages  | <a href="#">651</a> |
| Show MTU                 | Shows the maximum transmission unit (MTU) cache for destinations that have returned an ICMP packet-too-big message along with an acceptable MTU to this switch | <a href="#">657</a> |
| IP Service               |  | <a href="#">685</a> |
| DNS                      | Domain Name Service  |                     |
| General                  |  | <a href="#">685</a> |
| Configure Global         | Enables DNS lookup; defines the default domain name appended to incomplete host names  | <a href="#">685</a> |
| Add Domain Name          | Defines a list of domain names that can be appended to incomplete host names   | <a href="#">686</a> |

**Table 4: Switch Main Menu** (Continued)

| Menu                          | Description   | Page                |
|-------------------------------|---|---------------------|
| Show Domain Names             | Shows the configured domain name list   | <a href="#">686</a> |
| Add Name Server               | Specifies IP address of name servers for dynamic lookup   | <a href="#">688</a> |
| Show Name Servers             | Shows the name server address list  | <a href="#">688</a> |
| Static Host Table             |   | <a href="#">689</a> |
| Add                           | Configures static entries for domain name to address mapping  | <a href="#">689</a> |
| Show                          | Shows the list of static mapping entries  | <a href="#">689</a> |
| Modify                        | Modifies the static address mapped to the selected host name  | <a href="#">689</a> |
| Cache                         | Displays cache entries discovered by designated name servers  | <a href="#">690</a> |
| Multicast DNS                 | Configures multicast DNS lookup on the local network without the need for a dedicated server              | <a href="#">685</a> |
| DHCP                          | Dynamic Host Configuration Protocol   | <a href="#">692</a> |
| Client                        | Specifies the DHCP client identifier for an interface   | <a href="#">693</a> |
| Relay                         | Specifies DHCP relay servers  | <a href="#">694</a> |
| Dynamic Provision             | Enables dynamic provisioning via DHCP   | <a href="#">698</a> |
| PPPoE Intermediate Agent      | Point-to-Point Protocol over Ethernet Intermediate Agent  | <a href="#">699</a> |
| Multicast                     |   | <a href="#">537</a> |
| IGMP Snooping                 |   | <a href="#">538</a> |
| General                       | Enables multicast filtering; configures parameters for multicast snooping                                 | <a href="#">540</a> |
| Multicast Router              |   | <a href="#">544</a> |
| Add Static Multicast Router   | Assigns ports that are attached to a neighboring multicast router   | <a href="#">544</a> |
| Show Static Multicast Router  | Displays ports statically configured as attached to a neighboring multicast router                        | <a href="#">544</a> |
| Show Current Multicast Router | Displays ports attached to a neighboring multicast router, either through static or dynamic configuration | <a href="#">544</a> |
| IGMP Member                   |   | <a href="#">546</a> |
| Add Static Member             | Statically assigns multicast addresses to the selected VLAN   | <a href="#">546</a> |
| Show Static Member            | Shows multicast addresses statically configured on the selected VLAN                                      | <a href="#">546</a> |
| Interface                     |   | <a href="#">548</a> |
| Configure VLAN                | Configures IGMP snooping per VLAN interface   | <a href="#">548</a> |
| Show VLAN Information         | Shows IGMP snooping settings per VLAN interface   | <a href="#">548</a> |
| Configure Port                | Configures the interface to drop IGMP query packets or all multicast data packets                         | <a href="#">554</a> |
| Configure Trunk               | Configures the interface to drop IGMP query packets or all multicast data packets                         | <a href="#">554</a> |
| Forwarding Entry              | Displays the current multicast groups learned through IGMP Snooping                                       | <a href="#">555</a> |

**Table 4: Switch Main Menu** (Continued)

| Menu                          | Description   | Page |
|-------------------------------|---|------|
| Filter                        |   | 561  |
| Configure General             | Enables IGMP filtering for the switch   | 562  |
| Configure Profile             |   | 562  |
| Add                           | Adds IGMP filter profile; and sets access mode  | 562  |
| Show                          | Shows configured IGMP filter profiles   | 562  |
| Add Multicast Group Range     | Assigns multicast groups to selected profile  | 562  |
| Show Multicast Group Range    | Shows multicast groups assigned to a profile  | 562  |
| Configure Interface           | Assigns IGMP filter profiles to port interfaces and sets throttling action                                  | 565  |
| Statistics                    |   | 556  |
| Show Query Statistics         | Shows statistics for query-related messages   | 556  |
| Show VLAN Statistics          | Shows statistics for protocol messages, number of active groups   | 556  |
| Show Port Statistics          | Shows statistics for protocol messages, number of active groups   | 556  |
| Show Trunk Statistics         | Shows statistics for protocol messages, number of active groups   | 556  |
| MLD Snooping                  |   | 566  |
| General                       | Enables multicast filtering; configures parameters for IPv6 multicast snooping                              | 567  |
| Interface                     | Configures Immediate Leave status for a VLAN  | 569  |
| Multicast Router              |   | 570  |
| Add Static Multicast Router   | Assigns ports that are attached to a neighboring multicast router   | 570  |
| Show Static Multicast Router  | Displays ports statically configured as attached to a neighboring multicast router                          | 570  |
| Show Current Multicast Router | Displays ports attached to a neighboring multicast router, either through static or dynamic configuration   | 570  |
| MLD Member                    |   | 572  |
| Add Static Member             | Statically assigns multicast addresses to the selected VLAN   | 572  |
| Show Static Member            | Shows multicast addresses statically configured on the selected VLAN  | 572  |
| Show Current Member           | Shows multicast addresses associated with the selected VLAN, either through static or dynamic configuration | 572  |
| Filter                        |   | 584  |
| Configure General             | Enables MLD filtering for the switch  | 585  |
| Configure Profile             |   | 585  |
| Add                           | Adds MLD filter profile; and sets access mode   | 585  |
| Show                          | Shows configured MLD filter profiles  | 585  |
| Add Multicast Group Range     | Assigns multicast groups to selected profile  | 585  |
| Show Multicast Group Range    | Shows multicast groups assigned to a profile  | 585  |
| Query Drop                    | Configures the interface to drop MLD query packets  | 574  |



**Table 4: Switch Main Menu** (Continued)

| Menu                          | Description  | Page |
|-------------------------------|--|------|
| Group Information             | Displays known multicast groups, member ports, the means by which each group was learned, and the corresponding source list                  | 575  |
| Statistics                    |  | 576  |
| Input                         | Shows statistics for MLD ingress traffic   | 572  |
| Output                        | Shows statistics for MLD egress traffic  | 572  |
| Query                         | Shows statistics for query-related messages  | 572  |
| Summary                       | Shows summary statistics for querier and report/leave messages   | 572  |
| Clear                         | Clears all MLD statics or statistics for specified VLAN/port   | 572  |
| MVR                           | Multicast VLAN Registration  | 589  |
| Configure Global              | Configures proxy switching and robustness value  | 591  |
| Configure Domain              | Enables MVR for a domain, sets the MVR VLAN, forwarding priority, and upstream source IP   | 593  |
| Configure Profile             |  | 594  |
| Add                           | Configures multicast stream addresses  | 594  |
| Show                          | Shows multicast stream addresses   | 594  |
| Associate Profile             |  | 594  |
| Add                           | Maps an address profile to a domain  | 594  |
| Show                          | Shows addresses profile to domain mapping  | 594  |
| Configure Interface           | Configures MVR interface type and immediate leave mode; also displays MVR operational and active status                                      | 597  |
| Configure Static Group Member |  | 599  |
| Add                           | Statically assigns MVR multicast streams to an interface   | 599  |
| Show                          | Shows MVR multicast streams assigned to an interface   | 599  |
| Show Member                   | Shows the multicast groups assigned to an MVR VLAN, the source address of the multicast services, and the interfaces with active subscribers | 601  |
| Show Statistics               |  | 602  |
| Show Query Statistics         | Shows statistics for query-related messages  | 602  |
| Show VLAN Statistics          | Shows statistics for protocol messages and number of active groups   | 602  |
| Show Port Statistics          | Shows statistics for protocol messages and number of active groups   | 602  |
| Show Trunk Statistics         | Shows statistics for protocol messages and number of active groups   | 602  |
| MVR6                          | Multicast VLAN Registration for IPv6   | 606  |
| Configure Global              | Configures proxy switching and robustness value  | 607  |
| Configure Domain              | Enables MVR for a domain, sets the MVR VLAN, forwarding priority, and upstream source IP   | 609  |
| Configure Profile             |  | 610  |
| Add                           | Configures multicast stream addresses  | 610  |

**Table 4: Switch Main Menu** (Continued)

| Menu                          | Description  | Page                |
|-------------------------------|--|---------------------|
| Show                          | Shows multicast stream addresses   | <a href="#">610</a> |
| Associate Profile             |  | <a href="#">610</a> |
| Add                           | Maps an address profile to a domain  | <a href="#">610</a> |
| Show                          | Shows addresses profile to domain mapping  | <a href="#">610</a> |
| Configure Interface           | Configures MVR interface type and immediate leave mode; also displays MVR operational and active status                                      | <a href="#">613</a> |
| Configure Port                | Configures MVR attributes for a port   | <a href="#">613</a> |
| Configure Trunk               | Configures MVR attributes for a trunk  | <a href="#">613</a> |
| Configure Static Group Member |  | <a href="#">615</a> |
| Add                           | Statically assigns MVR multicast streams to an interface   | <a href="#">615</a> |
| Show                          | Shows MVR multicast streams assigned to an interface   | <a href="#">615</a> |
| Show Member                   | Shows the multicast groups assigned to an MVR VLAN, the source address of the multicast services, and the interfaces with active subscribers | <a href="#">617</a> |
| Show Statistics               |  | <a href="#">618</a> |
| Show Query Statistics         | Shows statistics for query-related messages  | <a href="#">618</a> |
| Show VLAN Statistics          | Shows statistics for protocol messages, number of active groups  | <a href="#">618</a> |
| Show Port Statistics          | Shows statistics for protocol messages, number of active groups  | <a href="#">618</a> |
| Show Trunk Statistics         | Shows statistics for protocol messages, number of active groups  | <a href="#">618</a> |

---

# Basic Management Tasks

This chapter describes the following topics:

- ◆ [Displaying System Information](#) – Provides basic system description, including contact information.
- ◆ [Displaying Hardware/Software Versions](#) – Shows the hardware version, power status, and firmware versions
- ◆ [Configuring Support for Jumbo Frames](#) – Enables support for jumbo frames.
- ◆ [Displaying Bridge Extension Capabilities](#) – Shows the bridge extension parameters.
- ◆ [Managing System Files](#) – Describes how to upgrade operating software or configuration files, and set the system start-up files.
- ◆ [Setting the System Clock](#) – Sets the current time manually or through specified NTP or SNTP servers.
- ◆ [Configuring the Console Port](#) – Sets console port connection parameters.
- ◆ [Configuring Telnet Settings](#) – Sets Telnet connection parameters.
- ◆ [Displaying CPU Utilization](#) – Displays information on CPU utilization.
- ◆ [Configuring CPU Guard](#) – Sets thresholds in terms of CPU usage time and number of packets processed per second.
- ◆ [Displaying Memory Utilization](#) – Shows memory utilization parameters.
- ◆ [Resetting the System](#) – Restarts the switch immediately, at a specified time, after a specified delay, or at a periodic interval.

## Displaying System Information

Use the System > General page to identify the system by displaying information such as the device name, location and contact information.

### Parameters

These parameters are displayed:

- ◆ **System Description** – Brief description of device type.
- ◆ **System Object ID** – MIB II object ID for switch's network management subsystem.
- ◆ **System Up Time** – Length of time the management agent has been up.
- ◆ **System Name** – Name assigned to the switch system.
- ◆ **System Location** – Specifies the system location.
- ◆ **System Contact** – Administrator responsible for the system.

### Web Interface

To configure general system information:

1. Click System, General.
2. Specify the system name, location, and contact information for the system administrator.
3. Click Apply.

**Figure 2: System Information**

The screenshot shows a web interface titled "System > General". It contains a table with the following information:

|                    |  |
|--------------------|--|
| System Description | GEP-5271                                       |
| System Object ID   | 1.3.6.1.4.1.22426.46.109                       |
| System Up Time     | 0 days, 0 hours, 14 minutes, and 50.85 seconds |
| System Name        | <input type="text"/>                           |
| System Location    | <input type="text"/>                           |
| System Contact     | <input type="text"/>                           |

At the bottom right of the form are two buttons: "Apply" and "Revert".

---

## Displaying Hardware/Software Versions

Use the System > Switch page to display hardware/firmware version numbers for the main board and management software, as well as the power status of the system.

### Parameters

The following parameters are displayed:

#### *Main Board Information*

- ◆ **Serial Number** – The serial number of the switch.
- ◆ **Number of Ports** – Number of built-in ports.
- ◆ **Hardware Version** – Hardware version of the main board.
- ◆ **Main Power Status** – Displays the status of the internal power supply.

#### *Management Software Information*


- ◆ **Role** – Shows that this switch is operating as Master or Slave.
- ◆ **Loader Version** – Version number of loader code.
- ◆ **Linux Kernel Version** – Version number of Linux kernel.
- ◆ **Operation Code Version** – Version number of runtime code.
- ◆ **Temperature List** – Temperature at a thermal detection point.

### Web Interface

To view hardware and software version information.

1. Click System, then Switch.

**Figure 3: General Switch Information**

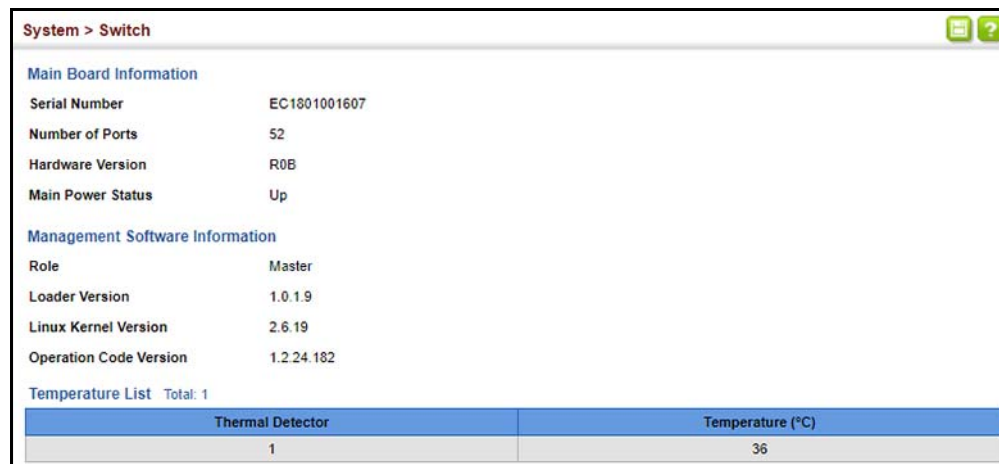

The screenshot shows a web interface titled 'System > Switch'. It contains two sections: 'Main Board Information' and 'Management Software Information'. Below these is a 'Temperature List' table.

| Main Board Information |              |
|------------------------|--------------|
| Serial Number          | EC1801001607 |
| Number of Ports        | 52           |
| Hardware Version       | R0B          |
| Main Power Status      | Up           |

| Management Software Information |            |
|---------------------------------|------------|
| Role                            | Master     |
| Loader Version                  | 1.0.1.9    |
| Linux Kernel Version            | 2.6.19     |
| Operation Code Version          | 1.2.24.182 |

| Temperature List Total: 1 |                  |
|---------------------------|------------------|
| Thermal Detector          | Temperature (°C) |
| 1                         | 36               |

## Configuring Support for Jumbo Frames

Use the System > Capability page to configure support for layer 2 jumbo frames. The switch provides more efficient throughput for large sequential data transfers by supporting jumbo frames up to 10240 bytes for Gigabit Ethernet and 10 Gigabit Ethernet ports or trunks. Compared to standard Ethernet frames that run only up to 1.5 KB, using jumbo frames significantly reduces the per-packet overhead required to process protocol encapsulation fields.

### Usage Guidelines

To use jumbo frames, both the source and destination end nodes (such as a computer or server) must support this feature. Also, when the connection is operating at full duplex, all switches in the network between the two end nodes must be able to accept the extended frame size. And for half-duplex connections, all devices in the collision domain would need to support jumbo frames.

### Parameters

The following parameters are displayed:

- ◆ **Jumbo Frame** – Configures support for jumbo frames. (Default: Disabled)


### Web Interface

To configure support for jumbo frames:

1. Click System, then Capability.
2. Enable or disable support for jumbo frames.

3. Click Apply.

**Figure 4: Configuring Support for Jumbo Frames**

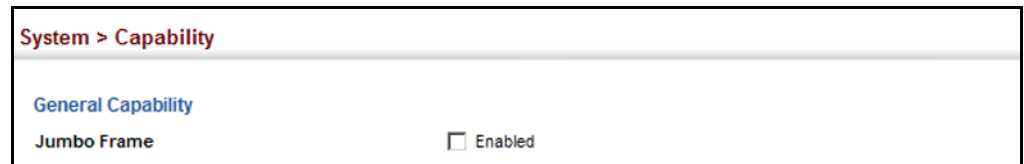

---

## Displaying Bridge Extension Capabilities

Use the System > Capability page to display settings based on the Bridge MIB. The Bridge MIB includes extensions for managed devices that support Multicast Filtering, Traffic Classes, and Virtual LANs. You can access these extensions to display default settings for the key variables.

### Parameters

The following parameters are displayed:

- ◆ **Extended Multicast Filtering Services** – This switch does not support the filtering of individual multicast addresses based on GMRP (GARP Multicast Registration Protocol).
- ◆ **Traffic Classes** – This switch provides mapping of user priorities to multiple traffic classes. (Refer to [“Class of Service” on page 239.](#))
- ◆ **Static Entry Individual Port** – This switch allows static filtering for unicast and multicast addresses. (Refer to [“Setting Static Addresses” on page 199.](#))
- ◆ **VLAN Version Number** – Based on IEEE 802.1Q, “1” indicates Bridges that support only single spanning tree (SST) operation, and “2” indicates Bridges that support multiple spanning tree (MST) operation.
- ◆ **VLAN Learning** – This switch uses Independent VLAN Learning (IVL), where each port maintains its own filtering database.
- ◆ **Local VLAN Capable** – This switch does not support multiple local bridges outside of the scope of 802.1Q defined VLANs.
- ◆ **Configurable PVID Tagging** – This switch allows you to override the default Port VLAN ID (PVID used in frame tags) and egress status (VLAN-Tagged or Untagged) on each port. (Refer to [“VLAN Configuration” on page 157.](#))
- ◆ **Max Supported VLAN Numbers** – The maximum number of VLANs supported on this switch.
- ◆ **Max Supported VLAN ID** – The maximum configurable VLAN identifier supported on this switch.

### Web Interface

To view Bridge Extension information:

1. Click System, then Capability.

**Figure 5: Displaying Bridge Extension Configuration**

The screenshot shows the 'System > Capability' configuration page. It is divided into two sections: 'General Capability' and 'Bridge Extension'. Under 'General Capability', there is a 'Jumbo Frame' setting with an 'Enabled' checkbox. Under 'Bridge Extension', there are several settings: 'Extended Multicast Filtering Services' (No), 'Traffic Classes' (Enabled), 'Static Entry Individual Port' (Yes), 'VLAN Version Number' (2), 'VLAN Learning' (IVL), 'Local VLAN Capable' (No), 'Configurable PVID Tagging' (Yes), 'Max Supported VLAN Numbers' (4094), and 'Max Supported VLAN ID' (4094). At the bottom right, there are 'Apply' and 'Revert' buttons.

| System > Capability                   |                                  |
|---------------------------------------|----------------------------------|
| <b>General Capability</b>             |                                  |
| Jumbo Frame                           | <input type="checkbox"/> Enabled |
| <b>Bridge Extension</b>               |                                  |
| Extended Multicast Filtering Services | No                               |
| Traffic Classes                       | Enabled                          |
| Static Entry Individual Port          | Yes                              |
| VLAN Version Number                   | 2                                |
| VLAN Learning                         | IVL                              |
| Local VLAN Capable                    | No                               |
| Configurable PVID Tagging             | Yes                              |
| Max Supported VLAN Numbers            | 4094                             |
| Max Supported VLAN ID                 | 4094                             |

Apply Revert

## Managing System Files

This section describes how to upgrade the switch operating software or configuration files, and set the system start-up files.

### Copying Files via FTP/ SFTP/TFTP or HTTP

Use the System > File (Copy) page to upload/download firmware or configuration settings using FTP, SFTP, TFTP or HTTP. By backing up a file to a FTP/SFTP/TFTP server or management station, that file can later be downloaded to the switch to restore operation. Specify the method of file transfer, along with the file type and file names as required.

You can also set the switch to use new firmware or configuration settings without overwriting the current version. Just download the file using a different name from the current version, and then set the new file as the startup file.

### Command Usage

- ◆ When logging into an FTP/SFTP server, the interface prompts for a user name and password configured on the remote server. Note that "Anonymous" is set as the default user name.



- ◆ Secure Shell FTP (SFTP) provides a method of transferring files between two network devices over an SSH2-secured connection. SFTP functions similar to Secure Copy (SCP), using SSH for user authentication and data encryption.

Although the underlying premises of SFTP are similar to SCP, it requires some additional steps to verify the protocol versions and perform security checks. SFTP connection setup includes verification of the DSS signature, creation of session keys, creation of client-server and server-client ciphers, SSH key exchange, and user authentication. An SFTP channel is then opened, the SFTP protocol version compatibility verified, and SFTP finally initialized.

- ◆ The reset command will not be accepted during copy operations to flash memory.

### Parameters

The following parameters are displayed:

- ◆ **Copy Type** – The firmware copy operation includes these options:
  - FTP Upload – Copies a file from an FTP server to the switch.
  - FTP Download – Copies a file from the switch to an FTP server.
  - HTTP Upload – Copies a file from a management station to the switch.
  - HTTP Download – Copies a file from the switch to a management station
  - SFTP Upload – Copies a file from an SFTP server to the switch.
  - SFTP Download – Copies a file from the switch to an SFTP server.
  - TFTP Upload – Copies a file from a TFTP server to the switch.
  - TFTP Download – Copies a file from the switch to a TFTP server.
- ◆ **FTP/SFTP/TFTP Server IP Address** – The IP address of an FTP/SFTP/TFTP server.
- ◆ **User Name** – The user name for SFTP/FTP server access.
- ◆ **Password** – The password for SFTP/FTP server access.
- ◆ **File Type** – Specify Operation Code to copy firmware.
- ◆ **File Name** – The file name should not contain slashes (\ or /), the leading letter of the file name should not be a period (.), and the maximum length for file names is 32 characters for files on the switch or 127 characters for files on the server. (Valid characters: A-Z, a-z, 0-9, "", "-", "\_")



**Note:** Up to two copies of the system software (i.e., the runtime firmware) can be stored in the file directory on the switch.

**Note:** The maximum number of user-defined configuration files is limited only by available flash memory space.

**Note:** The file “Factory\_Default\_Config.cfg” can be copied to a file server or management station, but cannot be used as the destination file name on the switch.

### Web Interface

To copy firmware files:

1. Click System, then File.
2. Select Copy from the Action list.
3. Select FTP Upload, HTTP Upload, SFTP or TFTP Upload as the file transfer method.
4. If FTP, SFTP or TFTP Upload is used, enter the IP address of the file server.
5. If FTP/SFTP Upload is used, enter the user name and password for your account on the FTP/SFTP server.
6. Set the file type to Operation Code.
7. Enter the name of the file to download.
8. Select a file on the switch to overwrite or specify a new file name.
9. Then click Apply.

**Figure 6: Copy Firmware**

The screenshot shows the 'System > File' web interface. At the top, there is a breadcrumb 'System > File' and a green help icon. Below this is a section titled 'Action:' with a dropdown menu set to 'Copy'. The main configuration area contains several fields: 'Copy Type' is a dropdown set to 'FTP Upload'; 'FTP Server IP Address' is a text box containing '192.168.2.243'; 'User Name' is a text box containing 'level1'; 'Password' is a text box with masked characters '\*\*\*\*\*'; 'File Type' is a dropdown set to 'Operation Code'; 'Source File Name' is a text box containing 'Level1-5271\_V1.2.24.182.bix'; and 'Destination File Name' has two radio buttons, with the first one selected and labeled 'Level1-5271\_V1.2.24.182.bix'. At the bottom right of the form are 'Apply' and 'Revert' buttons.

If you replaced a file currently used for startup and want to start using the new file, reboot the system via the System > Reset menu.

## Saving the Running Configuration to a Local File

Use the System > File (Copy) page to save the current configuration settings to a local file on the switch. The configuration settings are not automatically saved by the system for subsequent use when the switch is rebooted. You must save these settings to the current startup file, or to another file which can be subsequently set as the startup file.

### Parameters

The following parameters are displayed:

- ◆ **Copy Type** – The copy operation includes this option:
  - Running-Config – Copies the current configuration settings to a local file on the switch.
- ◆ **Destination File Name** – Copy to the currently designated startup file, or to a new file. The file name should not contain slashes (\ or /), the leading letter of the file name should not be a period (.), and the maximum length for file names is 32 characters. (Valid characters: A-Z, a-z, 0-9, ".", "-", "\_")



**Note:** The maximum number of user-defined configuration files is limited only by available flash memory space.

### Web Interface

To save the running configuration file:

1. Click System, then File.
2. Select Copy from the Action list.
3. Select Running-Config from the Copy Type list.
4. Select the current startup file on the switch to overwrite or specify a new file name.
5. Then click Apply.

**Figure 7: Saving the Running Configuration**

The screenshot shows the 'System > File' web interface. At the top, the breadcrumb 'System > File' is displayed. Below it, the 'Action:' dropdown menu is set to 'Copy'. Under the 'Copy Type' section, the 'Running-Config' option is selected from a dropdown. In the 'Destination File Name' section, there are two radio buttons. The first radio button is selected and is followed by a dropdown menu showing 'startup1.cfg'. The second radio button is unselected and is followed by an empty text input field. At the bottom right of the form, there are two buttons: 'Apply' and 'Revert'.

If you replaced a file currently used for startup and want to start using the new file, reboot the system via the System > Reset menu.


**Setting the Start-up File** Use the System > File (Set Start-Up) page to specify the firmware or configuration file to use for system initialization.

#### Web Interface

To set a file to use for system initialization:

1. Click System, then File.
2. Select Set Start-Up from the Action list.
3. Mark the operation code or configuration file to be used at startup
4. Then click Apply.

**Figure 8: Setting Start-Up Files**

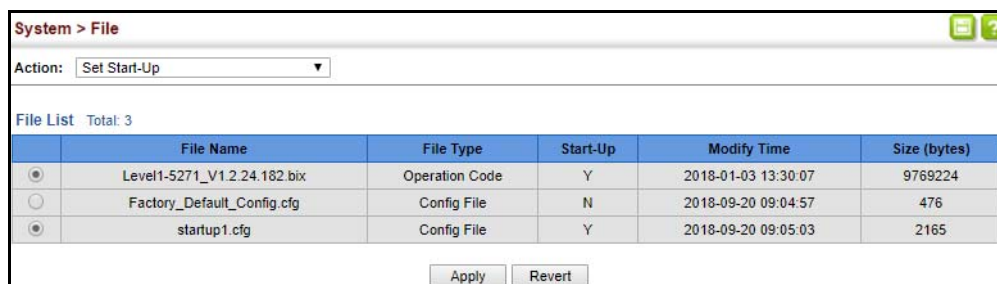

|                                  | File Name                   | File Type      | Start-Up | Modify Time         | Size (bytes) |
|----------------------------------|-----------------------------|----------------|----------|---------------------|--------------|
| <input checked="" type="radio"/> | Level1-5271_V1.2.24.182.bix | Operation Code | Y        | 2018-01-03 13:30:07 | 9769224      |
| <input type="radio"/>            | Factory_Default_Config.cfg  | Config File    | N        | 2018-09-20 09:04:57 | 476          |
| <input checked="" type="radio"/> | startup1.cfg                | Config File    | Y        | 2018-09-20 09:05:03 | 2165         |

To start using the new firmware or configuration settings, reboot the system via the System > Reset menu.

**Showing System Files** Use the System > File (Show) page to show the files in the system directory, or to delete a file.




**Note:** Files designated for start-up, and the Factory\_Default\_Config.cfg file, cannot be deleted.

#### Web Interface

To show the system files:

1. Click System, then File.
2. Select Show from the Action list.
3. To delete a file, mark it in the File List and click Delete.

**Figure 9: Displaying System Files**

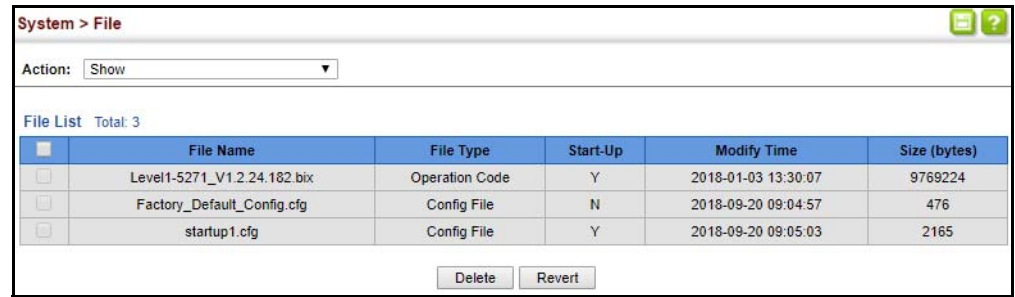

|                          | File Name                   | File Type      | Start-Up | Modify Time         | Size (bytes) |
|--------------------------|-----------------------------|----------------|----------|---------------------|--------------|
| <input type="checkbox"/> | Level1-5271_V1.2.24.182.bix | Operation Code | Y        | 2018-01-03 13:30:07 | 9769224      |
| <input type="checkbox"/> | Factory_Default_Config.cfg  | Config File    | N        | 2018-09-20 09:04:57 | 476          |
| <input type="checkbox"/> | startup1.cfg                | Config File    | Y        | 2018-09-20 09:05:03 | 2165         |

### Automatic Operation Code Upgrade

Use the System > File (Automatic Operation Code Upgrade) page to automatically download an operation code file when a file newer than the currently installed one is discovered on the file server. After the file is transferred from the server and successfully written to the file system, it is automatically set as the startup file, and the switch is rebooted.

### Usage Guidelines

- ◆ If this feature is enabled, the switch searches the defined URL once during the bootstrap sequence.
- ◆ FTP (port 21) and TFTP (port 69) are both supported. Note that the TCP/UDP port bindings cannot be modified to support servers listening on non-standard ports.
- ◆ The host portion of the upgrade file location URL must be a valid IPv4 IP address. DNS host names are not recognized. Valid IP addresses consist of four numbers, 0 to 255, separated by periods.
- ◆ The path to the directory must also be defined. If the file is stored in the root directory for the FTP/TFTP service, then use the "/" to indicate this (e.g., ftp://192.168.0.1/).
- ◆ The file name must not be included in the upgrade file location URL. The file name of the code stored on the remote server must be *GEP-5271-Series.bix* (using upper case and lower case letters exactly as indicated here). Enter the file name for other switches described in this manual exactly as shown on the web interface.
- ◆ The FTP connection is made with PASV mode enabled. PASV mode is needed to traverse some fire walls, even if FTP traffic is not blocked. PASV mode cannot be disabled.
- ◆ The switch-based search function is case-insensitive in that it will accept a file name in upper or lower case (i.e., the switch will accept *GEP-5271-Series.bix* from the server even though *gep-5271-Series.bix* was requested). However, keep in mind that the file systems of many operating systems such as Unix and most Unix-like systems (FreeBSD, NetBSD, OpenBSD, and most Linux distributions, etc.) are case-sensitive, meaning that two files in the same directory, *gep-5271-*

*Series.bix* and *GEP-5271-Series.bix* are considered to be unique files. Thus, if the upgrade file is stored as *GEP-5271-Series.bix* (or even *GeP-5271-Series.bix*) on a case-sensitive server, then the switch (requesting *gEp-5271-Series.bix*) will not be upgraded because the server does not recognize the requested file name and the stored file name as being equal. A notable exception in the list of case-sensitive Unix-like operating systems is Mac OS X, which by default is case-insensitive. Please check the documentation for your server's operating system if you are unsure of its file system's behavior.

- ◆ Note that the switch itself does not distinguish between upper and lower-case file names, and only checks to see if the file stored on the server is more recent than the current runtime image.
- ◆ If two operation code image files are already stored on the switch's file system, then the non-startup image is deleted before the upgrade image is transferred.
- ◆ The automatic upgrade process will take place in the background without impeding normal operations (data switching, etc.) of the switch.
- ◆ During the automatic search and transfer process, the administrator cannot transfer or update another operation code image, configuration file, public key, or HTTPS certificate (i.e., no other concurrent file management operations are possible).
- ◆ The upgrade operation code image is set as the startup image after it has been successfully written to the file system.
- ◆ The switch will send an SNMP trap and make a log entry upon all upgrade successes and failures.
- ◆ The switch will immediately restart after the upgrade file is successfully written to the file system and set as the startup image.

### Parameters

The following parameters are displayed:

- ◆ **Automatic Opcode Upgrade** – Enables the switch to search for an upgraded operation code file during the switch bootup process. (Default: Disabled)
- ◆ **Automatic Upgrade Location URL** – Defines where the switch should search for the operation code upgrade file. The last character of this URL must be a forward slash ("/"). The *GEP-5271-Series.bix* filename must not be included since it is automatically appended by the switch. (Options: ftp, sftp, tftp)

The following syntax must be observed:

**tftp://host[/filedir]/**

- **tftp://** – Defines TFTP protocol for the server connection.

- *host* – Defines the IP address of the TFTP server. Valid IP addresses consist of four numbers, 0 to 255, separated by periods. DNS host names are not recognized.
- *filedir* – Defines the directory, relative to the TFTP server root, where the upgrade file can be found. Nested directory structures are accepted. The directory name must be separated from the host, and in nested directory structures, from the parent directory, with a prepended forward slash “/”.
- */* – The forward slash must be the last character of the URL.

**ftp://[username[:password@]]host[/filedir]/**

- **ftp://** – Defines FTP protocol for the server connection.
- *username* – Defines the user name for the FTP connection. If the user name is omitted, then “anonymous” is the assumed user name for the connection.
- *password* – Defines the password for the FTP connection. To differentiate the password from the user name and host portions of the URL, a colon (:) must precede the password, and an “at” symbol (@), must follow the password. If the password is omitted, then “” (an empty string) is the assumed password for the connection.
- *host* – Defines the IP address of the FTP server. Valid IP addresses consist of four numbers, 0 to 255, separated by periods. DNS host names are not recognized.
- *filedir* – Defines the directory, relative to the FTP server root, where the upgrade file can be found. Nested directory structures are accepted. The directory name must be separated from the host, and in nested directory structures, from the parent directory, with a prepended forward slash “/”.
- */* – The forward slash must be the last character of the URL.

### Examples

The following examples demonstrate the URL syntax for a TFTP server at IP address 192.168.0.1 with the operation code image stored in various locations:

- **tftp://192.168.0.1/**  
The image file is in the TFTP root directory.
- **tftp://192.168.0.1/switch-opcode/**  
The image file is in the “switch-opcode” directory, relative to the TFTP root.
- **tftp://192.168.0.1/switches/opcode/**  
The image file is in the “opcode” directory, which is within the “switches” parent directory, relative to the TFTP root.

The following examples demonstrate the URL syntax for an FTP server at IP address 192.168.0.1 with various user name, password and file location options presented:

- ftp://192.168.0.1/  
The user name and password are empty, so “anonymous” will be the user name and the password will be blank. The image file is in the FTP root directory.
- ftp://switches:upgrade@192.168.0.1/  
The user name is “switches” and the password is “upgrade”. The image file is in the FTP root.
- ftp://switches:upgrade@192.168.0.1/switches/opcode/  
The user name is “switches” and the password is “upgrade”. The image file is in the “opcode” directory, which is within the “switches” parent directory, relative to the FTP root.

### Web Interface

To configure automatic code upgrade:

1. Click System, then File.
2. Select Automatic Operation Code Upgrade from the Action list.
3. Mark the check box to enable Automatic Opcode Upgrade.
4. Enter the URL of the FTP or TFTP server, and the path and directory containing the operation code.
5. Click Apply.

**Figure 10: Configuring Automatic Code Upgrade**

The screenshot shows a web interface titled "System > File". It features a dropdown menu for "Action:" with "Automatic Operation Code Upgrade" selected. Below this, there is a section for "Automatic Opcode Upgrade" with a checkbox labeled "Enabled" that is currently unchecked. A text input field for "Automatic Upgrade Location URL" contains the value "ftp://192.168.0.1/switches". A note at the bottom states: "Note: For automatic upgrades, the operation code file name must be set as ECS2100-series.bix." At the bottom right, there are two buttons: "Apply" and "Revert".



If a new image is found at the specified location, the following type of messages will be displayed during bootup.

```
.  
. Automatic Upgrade is looking for a new image  
New image detected: current version 1.2.1.3; new version 1.2.1.6  
Image upgrade in progress  
The switch will restart after upgrade succeeds  
Downloading new image  
  
Flash programming started  
Flash programming completed  
The switch will now restart  
.  
.
```

## Setting the System Clock

Simple Network Time Protocol (SNTP) allows the switch to set its internal clock based on periodic updates from a time server (SNTP or NTP). Maintaining an accurate time on the switch enables the system log to record meaningful dates and times for event entries. You can also manually set the clock. If the clock is not set manually or via SNTP, the switch will only record the time from the factory default set at the last bootup.

When the SNTP client is enabled, the switch periodically sends a request for a time update to a configured time server. You can configure up to three time server IP addresses. The switch will attempt to poll each server in the configured sequence.

**Setting the Time Manually** Use the System > Time (Configure General - Manual) page to set the system time on the switch manually without using SNTP.

### Parameters

The following parameters are displayed:

- ◆ **Current Time** – Shows the current time set on the switch.
- ◆ **Hours** – Sets the hour. (Range: 0-23)
- ◆ **Minutes** – Sets the minute value. (Range: 0-59)
- ◆ **Seconds** – Sets the second value. (Range: 0-59)
- ◆ **Month** – Sets the month. (Range: 1-12)
- ◆ **Day** – Sets the day of the month. (Range: 1-31)

- ◆ **Year** – Sets the year. (Range: 1970-2037)

### Web Interface

To manually set the system clock:

1. Click System, then Time.
2. Select Configure General from the Step list.
3. Select Manual from the Maintain Type list.
4. Enter the time and date in the appropriate fields.
5. Click Apply

**Figure 11: Manually Setting the System Clock**

The screenshot shows a web interface for configuring the system time. The breadcrumb is 'System > Time'. The 'Step' dropdown is set to '1. Configure General'. The 'Current Time' is displayed as '2014-5-30 9:59:20'. The 'Maintain Type' dropdown is set to 'Manual'. Below this, there are input fields for time and date: Hours (9), Minutes (59), Seconds (20), Month (5), Day (30), and Year (2014). At the bottom right, there are 'Apply' and 'Revert' buttons.

### Setting the SNTP Polling Interval

Use the System > Time (Configure General - SNTP) page to set the polling interval at which the switch will query the specified time servers.

### Parameters

The following parameters are displayed:

- ◆ **Current Time** – Shows the current time set on the switch.
- ◆ **SNTP Polling Interval** – Sets the interval between sending requests for a time update from a time server. (Range: 16-16384 seconds; Default: 16 seconds)

### Web Interface

To set the polling interval for SNTP:

1. Click System, then Time.
2. Select Configure General from the Step list.
3. Select SNTP from the Maintain Type list.
4. Modify the polling interval if required.

5. Click Apply

**Figure 12: Setting the Polling Interval for SNTP**

The screenshot shows a web interface for configuring system time. At the top, it says 'System > Time'. Below that is a 'Step:' dropdown menu set to '1. Configure General'. The 'Current Time' is displayed as '2014-5-30 9:59:20'. The 'Maintain Type' is set to 'SNTP' via a dropdown menu. Under the 'SNTP Configuration' section, the 'SNTP Polling Interval (16-16384)' is set to '16' seconds. At the bottom right, there are 'Apply' and 'Revert' buttons.

**Configuring NTP** Use the System > Time (Configure General - NTP) page to configure NTP authentication and show the polling interval at which the switch will query the specified time servers.

#### Parameters

The following parameters are displayed:

- ◆ **Current Time** – Shows the current time set on the switch.
- ◆ **Authentication Status** – Enables authentication for time requests and updates between the switch and NTP servers. (Default: Disabled)  
  
You can enable NTP authentication to ensure that reliable updates are received from only authorized NTP servers. The authentication keys and their associated key number must be centrally managed and manually distributed to NTP servers and clients. The key numbers and key values must match on both the server and client.
- ◆ **Polling Interval** – Shows the interval between sending requests for a time update from NTP servers. (Fixed: 1024 seconds)

#### Web Interface

To set the clock maintenance type to NTP:

1. Click System, then Time.
2. Select Configure General from the Step list.
3. Select NTP from the Maintain Type list.
4. Enable authentication if required.
5. Click Apply

**Figure 13: Configuring NTP**

The screenshot shows a web interface for configuring system time. At the top, it says 'System > Time'. Below that is a 'Step:' dropdown menu with '1. Configure General' selected. The main content area displays the following information:

- Current Time:** 2014-5-30 9:59:20
- Maintain Type:** A dropdown menu with 'NTP' selected.
- NTP Configuration:**
  - Authentication Status:** A checkbox labeled 'Enabled' which is currently unchecked.
  - Polling Interval:** 1024 sec

At the bottom right of the form are two buttons: 'Apply' and 'Revert'.

**Configuring Time Servers** Use the System > Time (Configure Time Server) pages to specify the IP address for NTP/SNTP time servers, or to set the authentication key for NTP time servers.

### Specifying SNTP Time Servers

Use the System > Time (Configure Time Server – Configure SNTP Server) page to specify the IP address for up to three SNTP time servers.

#### Parameters

The following parameters are displayed:

- ◆ **SNTP Server IP Address** – Sets the IPv4 address for up to three time servers. The switch attempts to update the time from the first server, if this fails it attempts an update from the next server in the sequence.

#### Web Interface

To set the SNTP time servers:

1. Click System, then Time.
2. Select Configure Time Server from the Step list.
3. Select Configure SNTP Server from the Action list.
4. Enter the IP address of up to three time servers.
5. Click Apply.

**Figure 14: Specifying SNTP Time Servers**

The screenshot shows a web interface for configuring system time. The breadcrumb is 'System > Time'. The 'Step' dropdown is set to '2. Configure Time Server' and the 'Action' dropdown is set to 'Configure SNTP Server'. There are three input fields for SNTP Server IP addresses: 'SNTP Server IP Address 1' with value '10.1.0.19', 'SNTP Server IP Address 2' with value '137.62.140.80', and 'SNTP Server IP Address 3' with value '128.250.36.2'. At the bottom right are 'Apply' and 'Revert' buttons.

### Specifying NTP Time Servers

Use the System > Time (Configure Time Server – Add NTP Server) page to add the IP address for up to 50 NTP time servers.

#### Parameters

The following parameters are displayed:

- ◆ **NTP Server IP Address** – Sets the IPv4 address for up to three time servers. The switch will poll the specified time servers for updates when the clock maintenance type is set to NTP on the System > Time (Configure General) page. It issues time synchronization requests at a fixed interval of 1024 seconds. The switch will poll all the time servers configured, the responses received are filtered and compared to determine the most reliable and accurate time update for the switch.
- ◆ **Version** – Specifies the NTP version supported by the server. (Fixed: Version 3)
- ◆ **Authentication Key** – Specifies the number of the key in the NTP Authentication Key List to use for authentication with the configured server. NTP authentication is optional. If enabled on the System > Time (Configure General) page, you must also configure at least one key on the System > Time (Add NTP Authentication Key) page. (Range: 1-65535)

#### Web Interface

To add an NTP time server to the server list:

1. Click System, then Time.
2. Select Configure Time Server from the Step list.
3. Select Add NTP Server from the Action list.
4. Enter the IP address of an NTP time server, and specify the index of the authentication key if authentication is required.
5. Click Apply.

Figure 15: Adding an NTP Time Server

The screenshot shows the 'System > Time' configuration page. At the top, there is a breadcrumb 'System > Time'. Below it, a 'Step:' dropdown is set to '2. Configure Time Server' and an 'Action:' dropdown is set to 'Add NTP Server'. The main form contains three fields: 'NTP Server IP Address' with the value '192.168.3.20', 'Version' with the value '3', and 'Authentication Key (1-65535)' with the value '3' (marked as optional). At the bottom right, there are 'Apply' and 'Revert' buttons.

To show the list of configured NTP time servers:

1. Click System, then Time.
2. Select Configure Time Server from the Step list.
3. Select Show NTP Server from the Action list.

Figure 16: Showing the NTP Time Server List

The screenshot shows the 'System > Time' configuration page with the 'Action:' dropdown set to 'Show NTP Server'. Below the form, there is a table titled 'NTP Server List' with a 'Total: 1' indicator. The table has four columns: a checkbox, 'Server IP Address', 'Version', and 'Authentication Key'. It contains one row with the values: checkbox (checked), '192.168.3.20', '3', and '3'. At the bottom right, there are 'Delete' and 'Revert' buttons.

|                                     | Server IP Address | Version | Authentication Key |
|-------------------------------------|-------------------|---------|--------------------|
| <input checked="" type="checkbox"/> | 192.168.3.20      | 3       | 3                  |

### Specifying NTP Authentication Keys

Use the System > Time (Configure Time Server – Add NTP Authentication Key) page to add an entry to the authentication key list.

#### Parameters

The following parameters are displayed:

- ◆ **Authentication Key** – Specifies the number of the key in the NTP Authentication Key List to use for authentication with a configured server. NTP authentication is optional. When enabled on the System > Time (Configure General) page, you must also configure at least one key on this page. Up to 255 keys can be configured on the switch. (Range: 1-65535)
- ◆ **Key Context** – An MD5 authentication key string. The key string can be up to 32 case-sensitive printable ASCII characters (no spaces).  
NTP authentication key numbers and values must match on both the server and client.

### Web Interface

To add an entry to NTP authentication key list:

1. Click System, then Time.
2. Select Configure Time Server from the Step list.
3. Select Add NTP Authentication Key from the Action list.
4. Enter the index number and MD5 authentication key string.
5. Click Apply.

**Figure 17: Adding an NTP Authentication Key**

System > Time

Step: 2. Configure Time Server Action: Add NTP Authentication Key

Authentication Key (1-65535) 3

Key Context (1-32) S1507N122103J068173M

Apply Revert

To show the list of configured NTP authentication keys:

1. Click System, then Time.
2. Select Configure Time Server from the Step list.
3. Select Show NTP Authentication Key from the Action list.

**Figure 18: Showing the NTP Authentication Key List**

System > Time

Step: 2. Configure Time Server Action: Show NTP Authentication Key

NTP Authentication Key List Total: 1

| Authentication Key | Key Context   |
|--------------------|---|
| 3                  | 8J0774Q6699747D10867F12S505J62770084708278G1357878N8475052113Q69137L8 |

Delete Revert

**Setting the Time Zone** Use the System > Time (Configure Time Zone) page to set the time zone. SNTP uses Coordinated Universal Time (or UTC, formerly Greenwich Mean Time, or GMT) based on the time at the Earth's prime meridian, zero degrees longitude, which passes through Greenwich, England. To display a time corresponding to your local time, you must indicate the number of hours and minutes your time zone is east (before) or west (after) of UTC. You can choose one of the 80 predefined time zone definitions, or you can manually configure the parameters for your local time zone.

#### Parameters

The following parameters are displayed:

- ◆ **Predefined Configuration** – A drop-down box provides access to the 80 predefined time zone configurations. Each choice indicates its offset from UTC and lists at least one major city or location covered by the time zone.
- ◆ **User-defined Configuration** – Allows the user to define all parameters of the local time zone.
  - **Direction** – Configures the time zone to be before (east of) or after (west of) UTC.
  - **Name** – Assigns a name to the time zone. (Range: 1-30 characters)
  - **Hours** (0-13) – The number of hours before or after UTC. The maximum value before UTC is 12. The maximum value after UTC is 13.
  - **Minutes** (0-59) – The number of minutes before/after UTC.

#### Web Interface

To set your local time zone:

1. Click System, then Time.
2. Select Configure Time Zone from the Step list.
3. Set the offset for your time zone relative to the UTC in hours and minutes.
4. Click Apply.



**Figure 19: Setting the Time Zone**

**System > Time**

Step: 3. Configure Time Zone ▼

☐ Predefined Configuration

☒ User Defined Configuration

Direction: After UTC ▼

Name: UTC

Hours (0-13): 0

Minutes (0-59): 0

Note: The maximum value before UTC is 12:00.  
The maximum value after UTC is 13:00.

Apply Revert

### Configuring Summer Time

Use the Summer Time page to set the system clock forward during the summer months (also known as daylight savings time).

In some countries or regions, clocks are adjusted through the summer months so that afternoons have more daylight and mornings have less. This is known as Summer Time, or Daylight Savings Time (DST). Typically, clocks are adjusted forward one hour at the start of spring and then adjusted backward in autumn.

### Parameters

The following parameters are displayed in the web interface:

#### General Configuration

- ◆ **Summer Time in Effect** – Shows if the system time has been adjusted.
- ◆ **Status** – Shows if summer time is set to take effect during the specified period.
- ◆ **Name** – Name of the time zone while summer time is in effect, usually an acronym. (Range: 1-30 characters)
- ◆ **Mode** – Selects one of the following configuration modes. (The Mode option can only be managed when the Summer Time Status option has been set to enabled for the switch.)

*Predefined Mode* – Configures the summer time status and settings for the switch using predefined configurations for several major regions of the world. To specify the time corresponding to your local time when summer time is in effect, select the predefined summer-time zone appropriate for your location.

**Table 5: Predefined Summer-Time Parameters**

| Region      | Start Time, Day, Week, & Month      | End Time, Day, Week, & Month         | Rel. Offset |
|-------------|-------------------------------------|--------------------------------------|-------------|
| Australia   | 00:00:00, Sunday, Week 5 of October | 23:59:59, Sunday, Week 5 of March    | 60 min      |
| Europe      | 00:00:00, Sunday, Week 5 of March   | 23:59:59, Sunday, Week 5 of October  | 60 min      |
| New Zealand | 00:00:00, Sunday, Week 1 of October | 23:59:59, Sunday, Week 3 of March    | 60 min      |
| USA         | 02:00:00, Sunday, Week 2 of March   | 02:00:00, Sunday, Week 1 of November | 60 min      |

*Date Mode* – Sets the start, end, and offset times of summer time for the switch on a one-time basis. This mode sets the summer-time zone relative to the currently configured time zone. To specify a time corresponding to your local time when summer time is in effect, you must indicate the number of minutes your summer-time zone deviates from your regular time zone.

- ◆ **Offset** – Summer-time offset from the regular time zone, in minutes.  
(Range: 1-120 minutes)
- ◆ **From** – Start time for summer-time offset.
- ◆ **To** – End time for summer-time offset.

*Recurring Mode* – Sets the start, end, and offset times of summer time for the switch on a recurring basis. This mode sets the summer-time zone relative to the currently configured time zone. To specify a time corresponding to your local time when summer time is in effect, you must indicate the number of minutes your summer-time zone deviates from your regular time zone.

- ◆ **Offset** – Summer-time offset from the regular time zone, in minutes.  
(Range: 1-120 minutes)
- ◆ **From** – Start time for summer-time offset.
- ◆ **To** – End time for summer-time offset.

### Web Interface

To specify summer time settings:

1. Click SNTP, Summer Time.
2. Select one of the configuration modes, configure the relevant attributes, enable summer time status.
3. Click Apply.

**Figure 20: Configuring Summer Time**

The screenshot shows a web-based configuration interface for a switch. The breadcrumb trail at the top is 'System > Time'. Below this, a step indicator shows 'Step: 4. Configure Summer Time'. The main configuration area contains the following elements:

- Summer Time in Effect:** A label followed by the value 'No'.
- Status:** A label followed by an unchecked checkbox labeled 'Enabled'.
- Name:** A label followed by an empty text input field.
- Mode:** A label followed by a dropdown menu currently showing 'Predefined'.
- Predefined Mode Configuration:** A section header followed by a 'Daylight Savings' dropdown menu currently showing 'Australia'.
- Buttons:** 'Apply' and 'Revert' buttons located at the bottom right of the configuration area.

## Configuring the Console Port

Use the System > Console menu to configure connection parameters for the switch's console port. You can access the onboard configuration program by attaching a VT100 compatible device to the switch's serial console port. Management access through the console port is controlled by various parameters, including a password (only configurable through the CLI), time outs, and basic communication settings. Note that these parameters can be configured via the web or CLI interface.

### Parameters

The following parameters are displayed:

- ◆ **Login Timeout** – Sets the interval that the system waits for a user to log into the CLI. If a login attempt is not detected within the timeout interval, the connection is terminated for the session. (Range: 10-300 seconds; Default: 300 seconds)
- ◆ **Exec Timeout** – Sets the interval that the system waits until user input is detected. If user input is not detected within the timeout interval, the current session is terminated. (Range: 60-65535 seconds; Default: 600 seconds)
- ◆ **Password Threshold** – Sets the password intrusion threshold, which limits the number of failed logon attempts. When the logon attempt threshold is reached, the system interface becomes silent for a specified amount of time (set by the Silent Time parameter) before allowing the next logon attempt. (Range: 1-120; Default: 3 attempts)
- ◆ **Silent Time** – Sets the amount of time the management console is inaccessible after the number of unsuccessful logon attempts has been exceeded. (Range: 1-65535 seconds; Default: Disabled)
- ◆ **Data Bits** – Sets the number of data bits per character that are interpreted and generated by the console port. If parity is being generated, specify 7 data bits

per character. If no parity is required, specify 8 data bits per character.  
(Default: 8 bits)

- ◆ **Stop Bits** – Sets the number of the stop bits transmitted per byte.  
(Range: 1-2; Default: 1 stop bit)
- ◆ **Parity** – Defines the generation of a parity bit. Communication protocols provided by some terminals can require a specific parity bit setting. Specify Even, Odd, or None. (Default: None)
- ◆ **Speed** – Sets the terminal line's baud rate for transmit (to terminal) and receive (from terminal). Set the speed to match the baud rate of the device connected to the serial port. (Range: 9600, 19200, 38400, 57600, or 115200 baud; Default: 115200 baud)



**Note:** The password for the console connection can only be configured through the CLI (see the “password” command in the *CLI Reference Guide*).

**Note:** Password checking can be enabled or disabled for logging in to the console connection (see the “login” command in the *CLI Reference Guide*). You can select authentication by a single global password as configured for the password command, or by passwords set up for specific user-name accounts. The default is for local passwords configured on the switch.

### Web Interface

To configure parameters for the console port:

1. Click System, then Console.
2. Specify the connection parameters as required.
3. Click Apply

**Figure 21: Console Port Settings**

The screenshot shows the 'System > Console' configuration page. It contains several settings with input fields and checkboxes:

- Login Timeout (10-300)**: Input field with '300' and 'sec' label.
- Exec Timeout (60-65535)**: Checked checkbox, input field with '600' and 'sec' label.
- Password Threshold (1-120)**: Checked checkbox, input field with '3'.
- Silent Time (1-65535)**: Unchecked checkbox, input field with 'sec' label.
- Data Bits**: Dropdown menu with '8' selected.
- Stop Bits**: Dropdown menu with '1' selected.
- Parity**: Dropdown menu with 'None' selected.
- Speed**: Dropdown menu with '115200' selected and 'baud' label.

At the bottom right, there are two buttons: 'Apply' and 'Revert'.

## Configuring Telnet Settings

Use the System > Telnet menu to configure parameters for accessing the CLI over a Telnet connection. You can access the onboard configuration program over the network using Telnet (i.e., a virtual terminal). Management access via Telnet can be enabled/disabled and other parameters set, including the TCP port number, time outs, and a password. Note that the password is only configurable through the CLI.) These parameters can be configured via the web or CLI interface.

### Parameters

The following parameters are displayed:

- ◆ **Telnet Status** – Enables or disables Telnet access to the switch.  
(Default: Enabled)
- ◆ **TCP Port** – Sets the TCP port number for Telnet on the switch. (Range: 1-65535; Default: 23)
- ◆ **Max Sessions** – Sets the maximum number of Telnet sessions that can simultaneously connect to this system. (Range: 0-8; Default: 8)  
  
A maximum of eight sessions can be concurrently opened for Telnet and Secure Shell (i.e., both Telnet and SSH share a maximum number of eight sessions).
- ◆ **Login Timeout** – Sets the interval that the system waits for a user to log into the CLI. If a login attempt is not detected within the timeout interval, the connection is terminated for the session. (Range: 10-300 seconds; Default: 300 seconds)
- ◆ **Exec Timeout** – Sets the interval that the system waits until user input is detected. If user input is not detected within the timeout interval, the current session is terminated. (Range: 60-65535 seconds; Default: 600 seconds)
- ◆ **Password Threshold** – Sets the password intrusion threshold, which limits the number of failed logon attempts. When the logon attempt threshold is reached, the system interface becomes silent for a specified amount of time (set by the Silent Time parameter) before allowing the next logon attempt. (Range: 1-120; Default: 3 attempts)
- ◆ **Silent Time** – Sets the amount of time the management interface is inaccessible after the number of unsuccessful logon attempts has been exceeded. (Range: 1-65535 seconds; Default: Disabled)



**Note:** The password for the Telnet connection can only be configured through the CLI (see the “password” command in the *CLI Reference Guide*).

**Note:** Password checking can be enabled or disabled for login to the console connection (see the “login” command in the *CLI Reference Guide*). You can select

authentication by a single global password as configured for the password command, or by passwords set up for specific user-name accounts. The default is for local passwords configured on the switch.

---

### Web Interface

To configure parameters for the console port:

1. Click System, then Telnet.
2. Specify the connection parameters as required.
3. Click Apply

**Figure 22: Telnet Connection Settings**

The screenshot shows the 'System > Telnet' configuration page. It contains several settings with input fields and checkboxes:

- Telnet Status:** A checkbox labeled 'Enabled' is checked.
- TCP Port (1-65535):** A text input field containing the value '23'.
- Max Sessions (0-8):** A text input field containing the value '8'.
- Login Timeout (10-300):** A text input field containing '300' followed by 'sec'.
- Exec Timeout (60-65535):** A text input field containing '600' followed by 'sec'.
- Password Threshold (1-120):** A checkbox is checked, and a text input field contains the value '3'.
- Silent Time (1-65535):** An unchecked checkbox is followed by an empty text input field and the unit 'sec'.

At the bottom right of the form are two buttons: 'Apply' and 'Revert'.

---

## Displaying CPU Utilization

Use the System > CPU Utilization page to display information on CPU utilization.

### Parameters

The following parameters are displayed:


- ◆ **Time Interval** – The interval at which to update the displayed utilization rate. (Options: 1, 5, 10, 30, 60 seconds; Default: 1 second)
- ◆ **CPU Utilization** – CPU utilization over specified interval.

### Web Interface

To display CPU utilization:

1. Click System, then CPU Utilization.
2. Change the update interval if required. Note that the interval is changed as soon as a new setting is selected.

**Figure 23: Displaying CPU Utilization**

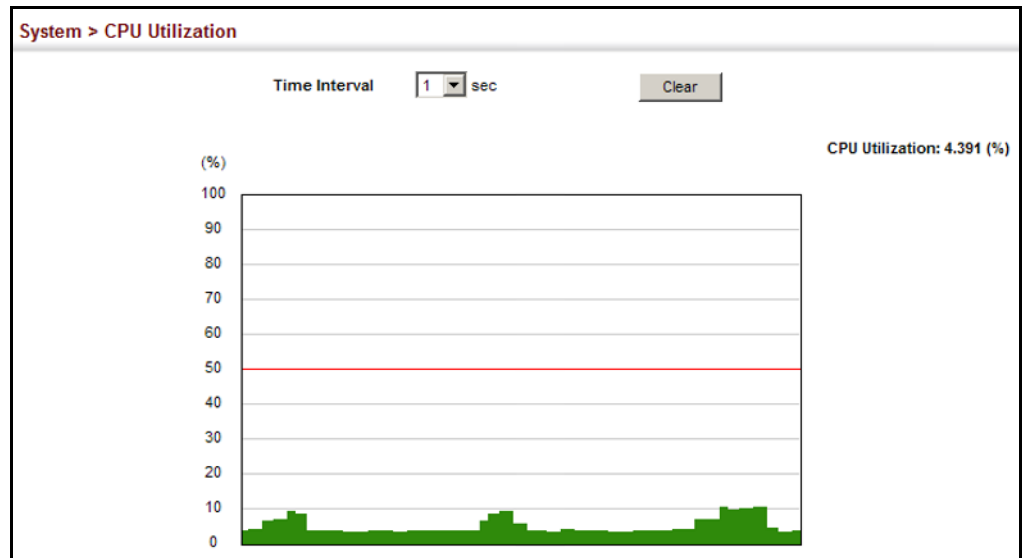

## Configuring CPU Guard

Use the System > CPU Guard page to set the CPU utilization high and low watermarks in percentage of CPU time utilized and the CPU high and low thresholds in the number of packets being processed per second.

### Parameters

The following parameters are displayed:

- ◆ **CPU Guard Status** – Enables CPU Guard. (Default: Disabled)
- ◆ **High Watermark** – If the percentage of CPU usage time is higher than the high-watermark, the switch stops packet flow to the CPU (allowing it to catch up with packets already in the buffer) until usage time falls below the low watermark. (Range: 40-100 %; Default: 90 %)
- ◆ **Low Watermark** – If packet flow has been stopped after exceeding the high watermark, normal flow will be restored after usage falls beneath the low watermark. (Range: 40-100 %; Default: 70 %)
- ◆ **Maximum Threshold** – If the number of packets being processed by the CPU is higher than the maximum threshold, the switch stops packet flow to the CPU (allowing it to catch up with packets already in the buffer) until the number of packets being processed falls below the minimum threshold. (Range: 50-300 pps; Default: 300 pps)
- ◆ **Minimum Threshold** – If packet flow has been stopped after exceeding the maximum threshold, normal flow will be restored after usage falls beneath the minimum threshold. (Range: 50-300 pps; Default: 50 pps)

- ◆ **Trap Status** – If enabled, an alarm message will be generated when utilization exceeds the high watermark or exceeds the maximum threshold.  
(Default: Disabled)

Once the high watermark is exceeded, utilization must drop beneath the low watermark before the alarm is terminated, and then exceed the high watermark again before another alarm is triggered.

Once the maximum threshold is exceeded, utilization must drop beneath the minimum threshold before the alarm is terminated, and then exceed the maximum threshold again before another alarm is triggered.

- ◆ **Current Threshold** – Shows the configured threshold in packets per second.

### Web Interface

To configure CPU Guard:

1. Click System, CPU Guard.
2. Set CPU guard status, configure the watermarks or threshold parameter, enable traps if required.
3. Click Apply.

**Figure 24: Configuring CPU Guard**

The screenshot shows a web interface for configuring CPU Guard. The title bar reads "System > CPU Guard". The configuration is as follows:

| Parameter                  | Value                            | Unit        |
|----------------------------|----------------------------------|-------------|
| CPU Guard Status           | <input type="checkbox"/> Enabled |             |
| High Watermark (40-100)    | 90                               | %           |
| Low Watermark (40-100)     | 70                               | %           |
| Maximum Threshold (50-300) | 300                              | packets/sec |
| Minimum Threshold (50-300) | 50                               | packets/sec |
| Trap Status                | <input type="checkbox"/> Enabled |             |
| Current Threshold          | 300                              | packets/sec |

At the bottom right, there are two buttons: "Apply" and "Revert".

## Displaying Memory Utilization

Use the System > Memory Status page to display memory utilization parameters.

### Parameters

The following parameters are displayed:

- ◆ **Free Size** – The amount of memory currently free for use.
- ◆ **Used Size** – The amount of memory allocated to active processes.
- ◆ **Total** – The total amount of system memory.



## Web Interface

To display memory utilization:

1. Click System, then Memory Status.

**Figure 25: Displaying Memory Utilization**

| System > Memory Status |                   |     |
|------------------------|-------------------|-----|
| Memory Status          |                   |     |
| Free Size              | 45,416,448 bytes  | 16% |
| Used Size              | 223,019,008 bytes | 84% |
| Total                  | 268,435,456 bytes |     |

## Resetting the System

Use the System > Reset menu to restart the switch immediately, at a specified time, after a specified delay, or at a periodic interval.

### Command Usage

- ◆ This command resets the entire system.
- ◆ When the system is restarted, it will always run the Power-On Self-Test. It will also retain all configuration information stored in non-volatile memory. (See [“Saving the Running Configuration to a Local File” on page 79](#)).

### Parameters

The following parameters are displayed:

#### System Reload Information

- ◆ **Reload Settings** – Displays information on the next scheduled reload and selected reload mode as shown in the following example:  
 “The switch will be rebooted at March 9 12:00:00 2012. Remaining Time: 0 days, 2 hours, 46 minutes, 5 seconds.  
 Reloading switch regularly time: 12:00 everyday.”
- ◆ **Refresh** – Refreshes reload information. Changes made through the console or to system time may need to be refreshed to display the current settings.
- ◆ **Cancel** – Cancels the current settings shown in this field.

#### System Reload Configuration

- ◆ **Reset Mode** – Restarts the switch immediately or at the specified time(s).
  - **Immediately** – Restarts the system immediately.

- **In** – Specifies an interval after which to reload the switch. (The specified time must be equal to or less than 24 days.)
  - *hours* – The number of hours, combined with the minutes, before the switch resets. (Range: 0-576)
  - *minutes* – The number of minutes, combined with the hours, before the switch resets. (Range: 0-59)
- **At** – Specifies a time at which to reload the switch.
  - DD - The day of the month at which to reload. (Range: 01-31)
  - MM - The month at which to reload. (Range: 01-12)
  - YYYY - The year at which to reload. (Range: 1970-2037)
  - HH - The hour at which to reload. (Range: 00-23)
  - MM - The minute at which to reload. (Range: 00-59)
- **Regularly** – Specifies a periodic interval at which to reload the switch.

*Time*

- HH - The hour at which to reload. (Range: 00-23)
- MM - The minute at which to reload. (Range: 00-59)

*Period*

- Daily - Every day.
- Weekly - Day of the week at which to reload.  
(Range: Sunday ... Saturday)
- Monthly - Day of the month at which to reload. (Range: 1-31)

**Web Interface**

To restart the switch:

1. Click System, then Reset.
2. Select the required reset mode.
3. For any option other than to reset immediately, fill in the required parameters
4. Click Apply.
5. When prompted, confirm that you want reset the switch.

**Figure 26: Restarting the Switch (Immediately)**

The screenshot shows the 'System > Reset' configuration page. Under 'System Reload Information', it states 'No configured settings for reloading.' with 'Refresh' and 'Cancel' buttons. Under 'System Reload Configuration', the 'Reset Mode' is set to 'Immediately' with a dropdown arrow. 'Apply' and 'Revert' buttons are present. A modal dialog box titled 'Message from webpage' is displayed, asking 'Do you want to reset the switch immediately?' with 'OK' and 'Cancel' buttons.

**Figure 27: Restarting the Switch (In)**

The screenshot shows the 'System > Reset' configuration page. Under 'System Reload Information', it displays: 'The switch will be rebooted at Jan 1 02:54:25 2001. Remaining Time: 0 days, 1 hours, 10 minutes, 0 seconds. Reloading switch in time: 5 hours 26 minutes. Reloading switch regularity time: 11:20 everyday.' with 'Refresh' and 'Cancel' buttons. Under 'System Reload Configuration', the 'Reset Mode' is set to 'In' with a dropdown arrow. Below, 'Reload switch in' is set to '1' hours and '30' minutes. A note states: 'Note: The specified time must be equal to or less than 24 days.' 'Apply' and 'Revert' buttons are at the bottom.

**Figure 28: Restarting the Switch (At)**

**System > Reset**

**System Reload Information:**  
The switch will be rebooted at Jan 1 02:54:25 2001. Remaining Time: 0 days, 1 hours, 10 minutes, 0 seconds.  
Reloading switch in time: 5 hours 26 minutes.  
Reloading switch regularity time: 11:20 everyday.

RefreshCancel

**System Reload Configuration:**  
**Reset Mode** At  
Reload switch at 19/10/2009 (DD/MM/YYYY) 05:00 (HH:MM)  
Warning: You have to setup system time first.Otherwise this function won't work.

ApplyRevert

**Figure 29: Restarting the Switch (Regularly)**

**System > Reset**

**System Reload Information:**  
No configured settings for reloading.

RefreshCancel

**System Reload Configuration:**  
**Reset Mode** Regularly  
**Time** 05:30 (HH:MM)  
**Period**  
☒ Daily  
☐ Weekly Sunday  
☐ Monthly 1  
Warning: You have to setup system time first.Otherwise this function won't work.

ApplyRevert

---

# Interface Configuration

This chapter describes the following topics:

- ◆ [Port Configuration](#) – Configures connection settings, including auto-negotiation, or manual setting of speed, duplex mode, and flow control.
- ◆ [Displaying Statistics](#) – Shows Interface, Etherlike, and RMON port statistics in table or chart form.
- ◆ [Displaying Statistical History](#) – Displays statistical history for the specified interfaces.
- ◆ [Displaying Transceiver Data](#) – Displays identifying information, and operational parameters for optical transceivers which support DDM.
- ◆ [Configuring Transceiver Thresholds](#) – Configures thresholds for alarm and warning messages for optical transceivers which support DDM.
- ◆ [Cable Test](#) – Performs cable diagnostics on the specified port.
- ◆ [Trunk Configuration](#) – Configures static or dynamic trunks.
- ◆ [Saving Power](#) – Adjusts the power provided to ports based on the length of the cable used to connect to other devices.
- ◆ [Local Port Mirroring](#) – Sets the source and target ports for mirroring on the local switch.
- ◆ [Remote Port Mirroring](#) – Configures mirroring of traffic from remote switches for analysis at a destination port on the local switch.
- ◆ [Flow Sampling](#) – Configures periodic sampling of traffic flows.
- ◆ [Traffic Segmentation](#) – Configures the uplinks and down links to a segmented group of ports.

---

## Port Configuration

This section describes how to configure port connections, mirror traffic from one port to another, and run cable diagnostics.

### Configuring by Port List

Use the Interface > Port > General (Configure by Port List) page to enable/disable an interface, set auto-negotiation and the interface capabilities to advertise, or manually fix the speed, duplex mode, and flow control.

#### Command Usage

- ◆ Auto-negotiation must be disabled before you can configure or force a Gigabit RJ-45 interface to use the Speed/Duplex mode or Flow Control options.
- ◆ When using auto-negotiation, the optimal settings will be negotiated between the link partners based on their advertised capabilities. To set the speed, duplex mode, or flow control under auto-negotiation, the required operation modes must be specified in the capabilities list for an interface.
- ◆ The Speed/Duplex mode is fixed at 100full for 100BASE-FX transceivers, 1000full for Gigabit transceivers, and 10Gfull for 10 Gigabit transceivers. When auto-negotiation is enabled, the only attributes which can be advertised include flow control and symmetric pause frames.
- ◆ The 1000BASE-T standard does not support forced mode. Auto-negotiation should always be used to establish a connection over any 1000BASE-T port or trunk. If not used, the success of the link process cannot be guaranteed when connecting to other types of switches.



**Note:** Auto-negotiation is not supported for 1000BASE SFP transceivers.

---

#### Parameters

These parameters are displayed:

- ◆ **Port** – Port identifier. (Range: 1-52)
- ◆ **Type** – Indicates the port type. (1000BASE-T, 1000BASE SFP, 10GBASE SFP+)
- ◆ **Name** – Allows you to label an interface. (Range: 1-64 characters)
- ◆ **Admin** – Allows you to manually disable an interface. You can disable an interface due to abnormal behavior (e.g., excessive collisions), and then re-enable it after the problem has been resolved. You may also disable an interface for security reasons. (Default: Enabled)

- ◆ **Media Type** – Configures the forced transceiver mode for SFP/SFP+ ports.
  - **None** - Forced transceiver mode is not used for SFP/SFP+ ports.
  - **SFP-Forced 1000SFP** - Always uses the SFP/SFP+ port at 1000 Mbps, Full Duplex.
  - **SFP-Forced 100FX** - Always uses the SFP port at 100 Mbps, Full Duplex.
- ◆ **Autonegotiation** (Port Capabilities) – Allows auto-negotiation to be enabled/disabled. When auto-negotiation is enabled, you need to specify the capabilities to be advertised. When auto-negotiation is disabled, you can force the settings for speed, mode, and flow control. The following capabilities are supported.
  - **10h** - Supports 10 Mbps half-duplex operation.
  - **10f** - Supports 10 Mbps full-duplex operation.
  - **100h** - Supports 100 Mbps half-duplex operation.
  - **100f** - Supports 100 Mbps full-duplex operation.
  - **1000f** - Supports 1000 Mbps full-duplex operation.
  - **10Gf** - Supports 10 Gbps full-duplex operation.
  - **Sym** - Symmetric exchange of transmit and receive pause frames.
  - **FC** - Flow control can eliminate frame loss by “blocking” traffic from end stations or segments connected directly to the switch when its buffers fill. When enabled, back pressure is used for half-duplex operation and IEEE 802.3-2005 (formally IEEE 802.3x) for full-duplex operation.

Default: Autonegotiation enabled;  
Advertised capabilities for

  - 100BASE-FX (SFP) – 100full
  - 1000BASE-T – 10half, 10full, 100half, 100full, 1000full
  - 1000BASE-SX/LX/LHX/ZX (SFP) – 1000full
  - 10GBASE- CR/SR/LR/LRM (SFP+) – 10Gfull
- ◆ **Speed/Duplex** – Allows you to manually set the port speed and duplex mode. (i.e., with auto-negotiation disabled)
- ◆ **Flow Control** – Allows automatic or manual selection of flow control, i.e. with auto-negotiation disabled. (Default: Disabled)
- ◆ **Link Up Down Trap** – Issues a notification message whenever a port link is established or broken. (Default: Enabled)

### Web Interface

To configure port connection parameters:

1. Click Interface, Port, General.
2. Select Configure by Port List from the Action List.
3. Modify the required interface settings.
4. Click Apply.

**Figure 30: Configuring Connections by Port List**

Interface > Port > General

Action: Configure by Port List

Port List Total: 52

| Port | Type       | Name | Admin   | Media Type | Autonegotiation  | Speed Duplex | Flow Control | Link Up Down Trap |
|------|------------|------|---------|------------|--|--------------|--------------|-------------------|
| 1    | 1000BASE-T |      | Enabled | None       | <input checked="" type="checkbox"/> Enabled<br><input checked="" type="checkbox"/> 10h <input checked="" type="checkbox"/> 100h <input checked="" type="checkbox"/> 1000f <input type="checkbox"/> FC<br><input checked="" type="checkbox"/> 10f <input checked="" type="checkbox"/> 100f <input type="checkbox"/> Sym | 100full      | Enabled      | Enabled           |
| 2    | 1000BASE-T |      | Enabled | None       | <input checked="" type="checkbox"/> Enabled<br><input checked="" type="checkbox"/> 10h <input checked="" type="checkbox"/> 100h <input checked="" type="checkbox"/> 1000f <input type="checkbox"/> FC<br><input checked="" type="checkbox"/> 10f <input checked="" type="checkbox"/> 100f <input type="checkbox"/> Sym | 100full      | Enabled      | Enabled           |
| 3    | 1000BASE-T |      | Enabled | None       | <input checked="" type="checkbox"/> Enabled<br><input checked="" type="checkbox"/> 10h <input checked="" type="checkbox"/> 100h <input checked="" type="checkbox"/> 1000f <input type="checkbox"/> FC<br><input checked="" type="checkbox"/> 10f <input checked="" type="checkbox"/> 100f <input type="checkbox"/> Sym | 100full      | Enabled      | Enabled           |

### Configuring by Port Range

Use the Interface > Port > General (Configure by Port Range) page to enable/disable an interface, set auto-negotiation and the interface capabilities to advertise, or manually fix the speed, duplex mode, and flow control.

### Parameters

Except for the trap command, refer to [“Configuring by Port List” on page 106](#) for more information on command usage and a description of the parameters.

### Web Interface

To configure port connection parameters:

1. Click Interface, Port, General.
2. Select Configure by Port Range from the Action List.
3. Enter a range of ports to which your configuration changes apply.
4. Modify the required interface settings.
5. Click Apply.



**Figure 31: Configuring Connections by Port Range**

Interface > Port > General

Action: Configure by Port Range ▼

Port Range (1-26) 1-26 -

Admin ☒ Enabled

Autonegotiation ☒ Enabled

☐ 10h ☐ 100h ☐ 1000f ☐ Sym

☐ 10f ☐ 100f ☐ 10Gf ☐ FC

Speed Duplex 10half ▼

Flow Control ☒ Enabled

Link Up Down Trap ☒ Enabled

Apply Revert

## Displaying Connection Status

Use the Interface > Port > General (Show Information) page to display the current connection status, including link state, speed/duplex mode, flow control, and auto-negotiation.

### Parameters

These parameters are displayed:

- ◆ **Port** – Port identifier.
- ◆ **Type** – Indicates the port type. (1000BASE-T, 1000BASE SFP, 10GBASE SFP+)
- ◆ **Name** – Interface label.
- ◆ **Admin** – Shows if the port is enabled or disabled.
- ◆ **Oper Status** – Indicates if the link is Up or Down.
- ◆ **Shutdown Reason** – Shows the reason this interface has been shut down if applicable. Some of the reasons for shutting down an interface include being administratively disabled, or exceeding traffic boundary limits set by auto traffic control.
- ◆ **Media Type** – Shows the forced transceiver mode for SFP/SFP+ ports.
- ◆ **Autonegotiation** – Shows if auto-negotiation is enabled or disabled.
- ◆ **Oper Speed Duplex** – Shows the current speed and duplex mode.
- ◆ **Oper Flow Control** – Shows the flow control type used.
- ◆ **Link Up Down Trap** – Shows if a notification message will be sent whenever a port link is established or broken. (Default: Enabled)

## Web Interface

To display port connection parameters:

1. Click Interface, Port, General.
2. Select Show Information from the Action List.

**Figure 32: Displaying Port Information**

| Port | Type       | Name | Admin   | Oper Status | Shutdown Reason | Media Type | Autonegotiation | Oper Speed Duplex | Oper Flow Control | Link Up Down Trap |
|------|------------|------|---------|-------------|-----------------|------------|-----------------|-------------------|-------------------|-------------------|
| 1    | 1000BASE-T |      | Enabled | Up          |                 | None       | Enabled         | 100full           | None              | Enabled           |
| 2    | 1000BASE-T |      | Enabled | Down        | License         | None       | Enabled         | 1000full          | None              | Enabled           |
| 3    | 1000BASE-T |      | Enabled | Down        | License         | None       | Enabled         | 1000full          | None              | Enabled           |
| 4    | 1000BASE-T |      | Enabled | Down        | License         | None       | Enabled         | 1000full          | None              | Enabled           |
| 5    | 1000BASE-T |      | Enabled | Down        | License         | None       | Enabled         | 1000full          | None              | Enabled           |

## Showing Port or Trunk Statistics

Use the Interface > Port/Trunk > Statistics or Chart page to display standard statistics on network traffic from the Interfaces Group and Ethernet-like MIBs, as well as a detailed breakdown of traffic based on the RMON MIB. Interfaces and Ethernet-like statistics display errors on the traffic passing through each port. This information can be used to identify potential problems with the switch (such as a faulty port or unusually heavy loading). RMON statistics provide access to a broad range of statistics, including a total count of different frame types and sizes passing through each port. All values displayed have been accumulated since the last system reboot, and are shown as counts per second. Statistics are refreshed every 60 seconds by default.



**Note:** RMON groups 2, 3 and 9 can only be accessed using SNMP management software.

## Parameters

These parameters are displayed:

**Table 6: Port Statistics**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

### Interface Statistics

|                    |  |
|--------------------|--|
| Received Octets    | The total number of octets received on the interface, including framing characters.        |
| Transmitted Octets | The total number of octets transmitted out of the interface, including framing characters. |

**Table 6: Port Statistics** (Continued)

| Parameter                     | Description   |
|-------------------------------|---|
| Received Errors               | The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.  |
| Received Unicast Packets      | The number of subnetwork-unicast packets delivered to a higher-layer protocol.  |
| Received Multicast Packets    | The number of packets, delivered by this sub-layer to a higher (sub-)layer, which were addressed to a multicast address at this sub-layer.  |
| Received Broadcast Packets    | The number of packets, delivered by this sub-layer to a higher (sub-)layer, which were addressed to a broadcast address at this sub-layer.  |
| Transmitted Octets            | The total number of octets transmitted out of the interface, including framing characters.  |
| Transmitted Errors            | The number of outbound packets that could not be transmitted because of errors.   |
| Transmitted Unicast Packets   | The total number of packets that higher-level protocols requested be transmitted to a subnetwork-unicast address, including those that were discarded or not sent.  |
| Transmitted Discarded Packets | The number of outbound packets which were chosen to be discarded even though no errors had been detected to prevent their being transmitted. One possible reason for discarding such a packet could be to free up buffer space.                           |
| Received Discarded Packets    | The number of inbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. One possible reason for discarding such a packet could be to free up buffer space. |
| Transmitted Multicast Packets | The total number of packets that higher-level protocols requested be transmitted, and which were addressed to a multicast address at this sub-layer, including those that were discarded or not sent.   |
| Transmitted Broadcast Packets | The total number of packets that higher-level protocols requested be transmitted, and which were addressed to a broadcast address at this sub-layer, including those that were discarded or not sent.   |
| <i>Etherlike Statistics</i>   |   |
| Single Collision Frames       | The number of successfully transmitted frames for which transmission is inhibited by exactly one collision.   |
| Multiple Collision Frames     | A count of successfully transmitted frames for which transmission is inhibited by more than one collision.  |
| Late Collisions               | The number of times that a collision is detected later than 512 bit-times into the transmission of a packet.  |
| Excessive Collisions          | A count of frames for which transmission on a particular interface fails due to excessive collisions. This counter does not increment when the interface is operating in full-duplex mode.  |
| Deferred Transmissions        | A count of frames for which the first transmission attempt on a particular interface is delayed because the medium was busy.  |
| Frames Too Long               | A count of frames received on a particular interface that exceed the maximum permitted frame size.  |
| FCS Errors                    | A count of frames received on a particular interface that are an integral number of octets in length but do not pass the FCS check. This count does not include frames received with frame-too-long or frame-too-short error.                             |
| Internal MAC Transmit Errors  | A count of frames for which transmission on a particular interface fails due to an internal MAC sublayer transmit error.  |

**Table 6: Port Statistics** (Continued)

| Parameter                        | Description  |
|----------------------------------|--|
| Pause Frames Input               | If the counter is incrementing this means that the port is receiving pause frames.   |
| Pause Frames Output              | Pause outputs occur when the receiving port is getting overloaded and the device sends a pause request to the device connected to the port.  |
| Symbol Errors                    | The number of times there was an invalid data symbol when a valid carrier was present.   |
| <i>RMON Statistics</i>           |  |
| Drop Events                      | The total number of events in which packets were dropped due to lack of resources.   |
| Jabbers                          | The total number of frames received that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS or alignment error.                        |
| Fragments                        | The total number of frames received that were less than 64 octets in length (excluding framing bits, but including FCS octets) and had either an FCS or alignment error.                   |
| Collisions                       | The best estimate of the total number of collisions on this Ethernet segment.  |
| Received Octets                  | Total number of octets of data received on the network. This statistic can be used as a reasonable indication of Ethernet utilization.   |
| Received Packets                 | The total number of packets (bad, broadcast and multicast) received.   |
| Broadcast Packets                | The total number of good packets received that were directed to the broadcast address. Note that this does not include multicast packets.  |
| Multicast Packets                | The total number of good packets received that were directed to this multicast address.  |
| Undersize Packets                | The total number of packets received that were less than 64 octets long (excluding framing bits, but including FCS octets) and were otherwise well formed.                                 |
| Oversize Packets                 | The total number of packets received that were longer than 1518 octets (excluding framing bits, but including FCS octets) and were otherwise well formed.                                  |
| 64 Byte Packets                  | The total number of packets (including bad packets) received and transmitted that were 64 octets in length (excluding framing bits but including FCS octets).                              |
| 65-127 Byte Packets              | The total number of packets (including bad packets) received and transmitted where the number of octets fall within the specified range (excluding framing bits but including FCS octets). |
| 128-255 Byte Packets             |  |
| 256-511 Byte Packets             |  |
| 512-1023 Byte Packets            |  |
| 1024-1518 Byte Packets           |  |
| 1519-1536 Byte Packets           |  |
| CRC Align Errors                 | Alignment errors are the count of the number of frames received that do not end with an even number of octets and have a bad Cyclic Redundancy Check (CRC)                                 |
| <i>Utilization Statistics</i>    |  |
| Input Octets in kbits per second | Number of octets entering this interface in kbits/second.  |
| Input Packets per second         | Number of packets entering this interface per second.  |
| Input Utilization                | The input utilization rate for this interface.   |

**Table 6: Port Statistics** (Continued)

| Parameter                         | Description  |
|-----------------------------------|--|
| Output Octets in kbits per second | Number of octets leaving this interface in kbits/second. |
| Output Packets per second         | Number of packets leaving this interface per second.     |
| Output Utilization                | The output utilization rate for this interface.          |

### Web Interface

To show a list of port statistics:

1. Click Interface, Port, Statistics.
2. Select the statistics mode to display (Interface, Etherlike, RMON or Utilization).
3. Select a port from the drop-down list.
4. Use the Refresh button to update the screen.

**Figure 33: Showing Port Statistics** (Table)

Interface > Port > Statistics

Mode
☒ Interface
☐ Etherlike
☐ RMON
☐ Utilization

Port
1

☐ Auto-refresh

Interface Statistics


|                               |          |
|-------------------------------|----------|
| Received Octets               | 3477878  |
| Received Errors               | 0        |
| Received Unicast Packets      | 23967    |
| Received Multicast Packets    | 4287     |
| Received Broadcast Packets    | 99       |
| Transmitted Octets            | 14012554 |
| Transmitted Errors            | 0        |
| Transmitted Unicast Packets   | 27532    |
| Transmitted Discarded Packets | 0        |
| Transmitted Multicast Packets | 343      |
| Transmitted Broadcast Packets | 48       |

Clear
Refresh

To show a chart of port statistics:

1. Click Interface, Port, Chart.
2. Select the statistics mode to display (Interface, Etherlike, RMON or All).
3. If Interface, Etherlike, RMON statistics mode is chosen, select a port from the drop-down list. If All (ports) statistics mode is chosen, select the statistics type to display.

**Figure 34: Showing Port Statistics (Chart)**

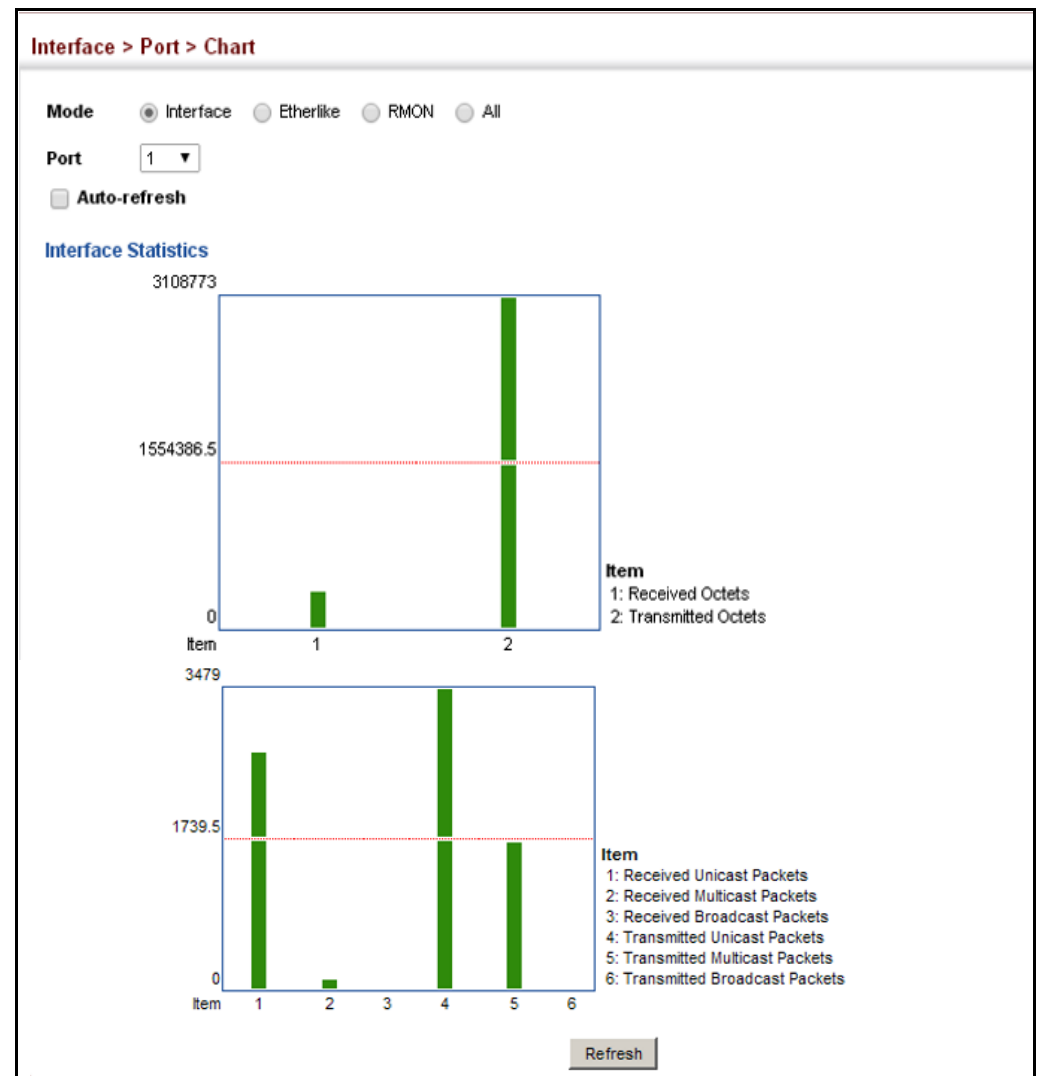

**Displaying Statistical History** Use the Interface > Port > History or Interface > Trunk > History page to display statistical history for the specified interfaces.

#### Command Usage

- ◆ For a description of the statistics displayed on these pages, see [“Showing Port or Trunk Statistics” on page 110](#).
- ◆ To configure statistical history sampling, use the [“Displaying Statistical History” on page 115](#).

#### Parameters

These parameters are displayed:

##### Add

- ◆ **Port** – Port number. (Range: 1-52)
- ◆ **History Name** – Name of sample interval. (Range: 1-32 characters)
- ◆ **Interval** – The interval for sampling statistics. (Range: 1-86400 minutes)
- ◆ **Requested Buckets** – The number of samples to take. (Range: 1-96)

##### Show

- ◆ **Port** – Port number. (Range: 1-52)
- ◆ **History Name** – Name of sample interval. (Default settings: 15min, 1day)
- ◆ **Interval** – The interval for sampling statistics.
- ◆ **Requested Buckets** – The number of samples to take.

##### Show Details

- ◆ **Mode**
  - **Status** – Shows the sample parameters.
  - **Current Entry** – Shows current statistics for the specified port and named sample.
  - **Input Previous Entries** – Shows statistical history for ingress traffic.
  - **Output Previous Entries** – Shows statistical history for egress traffic.
- ◆ **Port** – Port number. (Range: 1-52)
- ◆ **Name** – Name of sample interval.

### Web Configuration

To configure a periodic sample of statistics:

1. Click Interface, Port, Statistics, or Interface, Trunk, Statistics.
2. Select Add from the Action menu.
3. Select an interface from the Port or Trunk list.
4. Enter the sample name, the interval, and the number of buckets requested.
5. Click Apply.

**Figure 35: Configuring a History Sample**

Interface > Port > History

Action: Add

Port: 1

History Name:

Interval (1-86400):

Requested Buckets (1-96):

Apply Revert

To show the configured entries for a history sample:

1. Click Interface, Port, Statistics, or Interface, Trunk, Statistics.
2. Select Show from the Action menu.
3. Select an interface from the Port or Trunk list.

**Figure 36: Showing Entries for History Sampling**

Interface > Port > History

Action: Show

Port: 1

History Name List Total: 3

|                          | History Name | Interval | Requested Buckets |
|--------------------------|--------------|----------|-------------------|
| <input type="checkbox"/> | 15min        | 900      | 96                |
| <input type="checkbox"/> | 1day         | 86400    | 7                 |
| <input type="checkbox"/> | rd#1         | 60       | 50                |

Delete Revert



To show the configured parameters for a sampling entry:

1. Click Interface, Port, Statistics, or Interface, Trunk, Statistics.
2. Select Show Details from the Action menu.
3. Select Status from the options for Mode.
4. Select an interface from the Port or Trunk list.
5. Select an sampling entry from the Name list.

**Figure 37: Showing Status of Statistical History Sample**

The screenshot shows a web interface window titled 'Interface > Port > History'. At the top, there is an 'Action:' dropdown menu set to 'Show Details'. Below this, the 'Mode' section has four radio buttons: 'Status' (selected), 'Current Entry', 'Input Previous Entries', and 'Output Previous Entries'. Under 'Mode', there are two dropdown menus: 'Port' set to '1' and 'Name' set to '15min'. Below these, the 'History Status' section displays a table of parameters:

|                   |               |
|-------------------|---------------|
| Name              | 15min         |
| Interval          | 900 second(s) |
| Requested Buckets | 96            |
| Granted Buckets   | 19            |
| Status            | Active        |

At the bottom right of the table area, there is a 'Refresh' button.

To show statistics for the current interval of a sample entry:

1. Click Interface, Port, Statistics, or Interface, Trunk, Statistics.
2. Select Show Details from the Action menu.
3. Select Current Entry from the options for Mode.
4. Select an interface from the Port or Trunk list.
5. Select an sampling entry from the Name list.

**Figure 38: Showing Current Statistics for a History Sample**

Interface > Port > History

Action: Show Details ▾

Mode ☐ Status ☒ Current Entry ☐ Input Previous Entries ☐ Output Previous Entries

Port 1 ▾

Name 15min ▾

Current Entry

|                            |              |                               |         |
|----------------------------|--------------|-------------------------------|---------|
| Start Time                 | 00d 02:15:03 |                               |         |
| %                          | 0.00         | %                             | 0.00    |
| Received Octets            | 349139       | Transmitted Octets            | 1468353 |
| Received Errors            | 0            | Transmitted Errors            | 0       |
| Received Unicast Packets   | 2465         | Transmitted Unicast Packets   | 2782    |
| Received Multicast Packets | 475          | Transmitted Discarded Packets | 0       |
| Received Broadcast Packets | 0            | Transmitted Multicast Packets | 28      |
|                            |              | Transmitted Broadcast Packets | 0       |

Refresh

To show ingress or egress traffic statistics for a sample entry:

1. Click Interface, Port, Statistics, or Interface, Trunk, Statistics.
2. Select Show Details from the Action menu.
3. Select Input Previous Entry or Output Previous Entry from the options for Mode.
4. Select an interface from the Port or Trunk list.
5. Select an sampling entry from the Name list.

**Figure 39: Showing Ingress Statistics for a History Sample**

Interface > Port > History

Action: Show Details

Mode: ☐ Status ☐ Current Entry ☒ Input Previous Entries ☐ Output Previous Entries

Port: 1

Name: 15min

Input Previous Entry List Total: 10

| Start Time   | %    | Octets | Unicast | Multicast | Broadcast | Errors |
|--------------|------|--------|---------|-----------|-----------|--------|
| 00d 00:00:02 | 0.00 | 523808 | 3774    | 637       | 90        | 0      |
| 00d 00:15:03 | 0.00 | 466715 | 3147    | 508       | 1         | 0      |
| 00d 00:30:03 | 0.00 | 465432 | 3135    | 510       | 3         | 0      |
| 00d 00:45:03 | 0.00 | 464422 | 3136    | 502       | 0         | 0      |
| 00d 01:00:03 | 0.00 | 425154 | 2908    | 513       | 0         | 0      |
| 00d 01:15:03 | 0.00 | 355595 | 2427    | 515       | 4         | 0      |
| 00d 01:30:03 | 0.00 | 354092 | 2475    | 508       | 1         | 0      |
| 00d 01:45:03 | 0.00 | 353187 | 2478    | 503       | 0         | 0      |
| 00d 02:00:03 | 0.00 | 367193 | 2590    | 507       | 0         | 0      |
| 00d 02:15:03 | 0.00 | 374615 | 2645    | 507       | 0         | 0      |

Refresh

## Displaying Transceiver Data

Use the Interface > Port > Transceiver page to display identifying information, and operational for optical transceivers which support Digital Diagnostic Monitoring (DDM).

### Parameters

These parameters are displayed:

- ◆ **Port** – Port number. (Range: 49-52)
- ◆ **General** – Information on connector type and vendor-related parameters.
- ◆ **DDM Information** – Information on temperature, supply voltage, laser bias current, laser power, and received optical power.

The switch can display diagnostic information for SFP modules which support the SFF-8472 Specification for Diagnostic Monitoring Interface for Optical Transceivers. This information allows administrators to remotely diagnose problems with optical devices. This feature, referred to as Digital Diagnostic Monitoring (DDM) provides information on transceiver parameters.

### Web Interface

To display identifying information and functional parameters for optical transceivers:

1. Click Interface, Port, Transceiver.
2. Select a port from the scroll-down list.

Figure 40: Displaying Transceiver Data

Interface > Port > Transceiver

Port 49 ▼

General

Connector Type LC  
Fiber Type Multimode 50um (M5), Multimode 62.5um (M6)  
Eth Compliance Codes 1000BASE-SX  
Baud Rate 1300 MBd  
Vendor OUI 00-00-00  
Vendor Name SMC Networks  
Vendor PN SMC1GSFP-SX  
Vendor Rev V1.1  
Vendor SN A492101711  
Date Code 09-05-19

DDM Thresholds

☐ Trap  
☒ Auto Mode

|                 | Low Alarm | Low Warning | High Warning | High Alarm |
|-----------------|-----------|-------------|--------------|------------|
| Temperature(°C) | -123.00   | 0.00        | 70.00        | 75.00      |
| Voltage(Volts)  | 3.10      | 3.15        | 3.45         | 3.50       |
| Current(mA)     | 6.00      | 7.00        | 90.00        | 100.00     |
| Tx Power(dBm)   | -12.00    | -11.50      | -9.50        | -9.00      |
| Rx Power(dBm)   | -21.50    | -21.00      | -3.50        | -3.00      |

Restore Default [Click this button to restore default DDM thresholds values.](#)

Apply Revert

### Configuring Transceiver Thresholds

Use the Interface > Port > Transceiver page to configure thresholds for alarm and warning messages for optical transceivers which support Digital Diagnostic Monitoring (DDM). This page also displays identifying information for supported transceiver types, and operational parameters for transceivers which support DDM.

#### Parameters

These parameters are displayed:

- ◆ **Port** – Port number. (Range: 49-52)
- ◆ **General** – Information on connector type and vendor-related parameters.
- ◆ **DDM Information** – Information on temperature, supply voltage, laser bias current, laser power, and received optical power.

The switch can display diagnostic information for SFP modules which support the SFF-8472 Specification for Diagnostic Monitoring Interface for Optical Transceivers. This information allows administrators to remotely diagnose problems with optical devices. This feature, referred to as Digital Diagnostic Monitoring (DDM) provides information on transceiver parameters.

- ◆ **Trap** – Sends a trap when any of the transceiver's operation values falls outside of specified thresholds. (Default: Disabled)
- ◆ **Auto Mode** – Uses default threshold settings obtained from the transceiver to determine when an alarm or trap message should be sent. (Default: Enabled)
- ◆ **DDM Thresholds** – Information on alarm and warning thresholds. The switch can be configured to send a trap when the measured parameter falls outside of the specified thresholds.

The following alarm and warning parameters are supported:

- **High Alarm** – Sends an alarm message when the high threshold is crossed.
- **High Warning** – Sends a warning message when the high threshold is crossed.
- **Low Warning** – Sends a warning message when the low threshold is crossed.
- **Low Alarm** – Sends an alarm message when the low threshold is crossed.

The configurable ranges are:

- **Temperature:** -128.00-128.00 °C
- **Voltage:** 0.00-6.55 Volts
- **Current:** 0.00-131.00 mA
- **Power:** -40.00-8.20 dBm

The threshold value for Rx and Tx power is calculated as the power ratio in decibels (dB) of the measured power referenced to one milliwatt (mW).

Threshold values for alarm and warning messages can be configured as described below.

- A high-threshold alarm or warning message is sent if the current value is greater than or equal to the threshold, and the last sample value was less than the threshold. After a rising event has been generated, another such event will not be generated until the sampled value has fallen below the high threshold and reaches the low threshold.
- A low-threshold alarm or warning message is sent if the current value is less than or equal to the threshold, and the last sample value was greater than the threshold. After a falling event has been generated, another such event will not be generated until the sampled value has risen above the low threshold and reaches the high threshold.
- Threshold events are triggered as described above to avoid a hysteresis effect which would continuously trigger event messages if the power level were to fluctuate just above and below either the high threshold or the low threshold.

- Trap messages configured by this command are sent to any management station configured as an SNMP trap manager using the Administration > SNMP (Configure Trap) page.

### Web Interface

To configure threshold values for optical transceivers:

1. Click Interface, Port, Transceiver.
2. Select a port from the scroll-down list.
3. Set the switch to send a trap based on default or manual settings.
4. Set alarm and warning thresholds if manual configuration is used.
5. Click Apply.

**Figure 41: Configuring Transceiver Thresholds**

|                 | High Alarm | High Warning | Low Warning | Low Alarm |
|-----------------|------------|--------------|-------------|-----------|
| Temperature(°C) | 75.00      | 70.00        | 0.00        | -123.00   |
| Voltage(Volts)  | 3.50       | 3.45         | 3.15        | 3.10      |
| Current(mA)     | 100.00     | 90.00        | 7.00        | 6.00      |
| Tx Power(dBm)   | -9.00      | -9.50        | -11.50      | -12.00    |
| Rx Power(dBm)   | -3.00      | -3.50        | -21.00      | -21.50    |

Restore Default [Click this button to restore default DDM thresholds values.](#)

Apply Revert

### Performing Cable Diagnostics

Use the Interface > Port > Cable Test page to test the cable attached to a port. The cable test will check for any cable faults (short, open, etc.). If a fault is found, the switch reports the length to the fault. Otherwise, it reports the cable length. It can be used to determine the quality of the cable, connectors, and terminations. Problems such as opens, shorts, and cable impedance mismatch can be diagnosed with this test.

### Command Usage

- ◆ Cable diagnostics are performed using Time Domain Reflectometry (TDR). TDR detects a cable fault by sending a signal through the cable and reading the signal that is reflected back. TDR can only determine if a link is valid or faulty.
- ◆ Cable diagnostics can only be performed on twisted-pair media.
- ◆ This cable test is only accurate for Gigabit Ethernet cables 7 - 100 meters long.

- ◆ The test takes approximately 5 seconds. The switch displays the results of the test immediately upon completion, including common cable failures, as well as the status and approximate length to a fault.
- ◆ Potential conditions which may be listed by the diagnostics include those listed below. Note that TDR testing can only show Test failed or OK.
  - OK: Correctly terminated pair
  - ON: Open pair, no link partner
  - IE (Impedance mismatch): Terminating impedance is not in the reference range.
  - NS (Not Supported): This message is displayed for any Gigabit Ethernet ports linked up at a speed lower than 1000 Mbps.
  - UN: Unknown Error
- ◆ Ports are linked down while running cable diagnostics.

#### Parameters

These parameters are displayed:

- ◆ **Port** – Switch port identifier.
- ◆ **Type** – Displays media type. (GE – Gigabit Ethernet, Other – SFP)
- ◆ **Link Status** – Shows if the port link is up or down.
- ◆ **Test Result** – The results include common cable failures, as well as the status and approximate distance to a fault, or the approximate cable length if no fault is found.

To ensure more accurate measurement of the length to a fault, first disable power-saving mode on the link partner before running cable diagnostics.

For link-down ports, the reported distance to a fault is accurate to within +/- 2 meters. For link-up ports, the accuracy is +/- 10 meters.

- ◆ **Last Updated** – Shows the last time this port was tested.
- ◆ **Test** – Initiates cable test.

### Web Interface

To test the cable attached to a port:

1. Click Interface, Port, Cable Test.
2. Click Test for any port to start the cable test.

**Figure 42: Performing Cable Tests**

Interface > Port > Cable Test

Cable Test Port List Total: 52

| Port | Type  | Link Status | Test Result (Cable/Fault Distance in Meters) |                 |                 |                 | Last Updated | Action |
|------|-------|-------------|--|-----------------|-----------------|-----------------|--------------|--------|
|      |       |             | Pair A (meters)                              | Pair B (meters) | Pair C (meters) | Pair D (meters) |              |        |
| 1    | GE    | Up          | Not Tested                                   | Not Tested      | Not Tested      | Not Tested      |              | Test   |
| 2    | GE    | Down        | Not Tested                                   | Not Tested      | Not Tested      | Not Tested      |              | Test   |
| 3    | GE    | Down        | Not Tested                                   | Not Tested      | Not Tested      | Not Tested      |              | Test   |
| 4    | GE    | Down        | Not Tested                                   | Not Tested      | Not Tested      | Not Tested      |              | Test   |
| 5    | GE    | Down        | Not Tested                                   | Not Tested      | Not Tested      | Not Tested      |              | Test   |
| 6    | GE    | Down        | Not Tested                                   | Not Tested      | Not Tested      | Not Tested      |              | Test   |
| 7    | GE    | Down        | Not Tested                                   | Not Tested      | Not Tested      | Not Tested      |              | Test   |
| 8    | GE    | Down        | Not Tested                                   | Not Tested      | Not Tested      | Not Tested      |              | Test   |
| 9    | Other | Down        | Not Supported                                | Not Supported   | Not Supported   | Not Supported   |              | Test   |
| 10   | Other | Down        | Not Supported                                | Not Supported   | Not Supported   | Not Supported   |              | Test   |

Note: After every test action, wait several seconds and click the refresh button to display test results.

Refresh

## Trunk Configuration

This section describes how to configure static and dynamic trunks.

You can create multiple links between devices that work as one virtual, aggregate link. A port trunk offers a dramatic increase in bandwidth for network segments where bottlenecks exist, as well as providing a fault-tolerant link between two devices. You can create up to 16 trunks at a time on the switch.

The switch supports both static trunking and dynamic Link Aggregation Control Protocol (LACP). Static trunks have to be manually configured at both ends of the link, and the switches must comply with the Cisco EtherChannel standard. On the other hand, LACP configured ports can automatically negotiate a trunked link with LACP-configured ports on another device. You can configure any number of ports on the switch as LACP, as long as they are not already configured as part of a static trunk. If ports on another device are also configured as LACP, the switch and the other device will negotiate a trunk link between them. If an LACP trunk consists of more than eight ports, all other ports will be placed in standby mode. Should one link in the trunk fail, one of the standby ports will automatically be activated to replace it.




### Command Usage

Besides balancing the load across each port in the trunk, the other ports provide redundancy by taking over the load if a port in the trunk fails. However, before making any physical connections between devices, use the web interface or CLI to specify the trunk on the devices at both ends. When using a trunk, take note of the following points:

- ◆ Finish configuring trunks before you connect the corresponding network cables between switches to avoid creating a loop.
- ◆ You can create up to 16 trunks on a switch, with up to eight ports per trunk.
- ◆ The ports at both ends of a connection must be configured as trunk ports.
- ◆ When configuring static trunks on switches of different types, they must be compatible with the Cisco EtherChannel standard.
- ◆ The ports at both ends of a trunk must be configured in an identical manner, including communication mode (i.e., speed, duplex mode and flow control), VLAN assignments, and CoS settings.
- ◆ Any of the Gigabit ports on the front panel can be trunked together, including ports of different media types.
- ◆ All the ports in a trunk have to be treated as a whole when moved from/to, added or deleted from a VLAN.
- ◆ STP, VLAN, and IGMP settings can only be made for the entire trunk.

**Configuring a Static Trunk** Use the Interface > Trunk > Static page to create a trunk, assign member ports, and configure the connection parameters.

**Figure 43: Configuring Static Trunks**

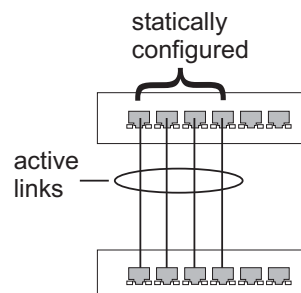

### Command Usage

- ◆ When configuring static trunks, you may not be able to link switches of different types, depending on the vendor's implementation. However, note that the static trunks on this switch are Cisco EtherChannel compatible.
- ◆ To avoid creating a loop in the network, be sure you add a static trunk via the configuration interface before connecting the ports, and also disconnect the ports before removing a static trunk via the configuration interface.

### Parameters

These parameters are displayed:

- ◆ **Trunk ID** – Trunk identifier. (Range: 1-16)
- ◆ **Member** – The initial trunk member. Use the Add Member page to configure additional members.
  - **Unit** – Unit identifier. (Range: 1)
  - **Port** – Port identifier. (Range: 1-52)

### Web Interface

To create a static trunk:

1. Click Interface, Trunk, Static.
2. Select Configure Trunk from the Step list.
3. Select Add from the Action list.
4. Enter a trunk identifier.
5. Set the unit and port for the initial trunk member.
6. Click Apply.

**Figure 44: Creating Static Trunks**

The screenshot shows a web interface for configuring static trunks. At the top, the breadcrumb navigation reads "Interface > Trunk > Static". Below this, there are two dropdown menus: "Step:" with "1. Configure Trunk" selected, and "Action:" with "Add" selected. The main configuration area contains a "Trunk ID (1-16)" label followed by an empty text input field. Below that, the "Member" section includes "Unit" and "Port" labels, each followed by a dropdown menu showing the value "1". At the bottom right of the form, there are two buttons: "Apply" and "Revert".

To add member ports to a static trunk:

1. Click Interface, Trunk, Static.
2. Select Configure Trunk from the Step list.
3. Select Add Member from the Action list.
4. Select a trunk identifier.
5. Set the unit and port for an additional trunk member.
6. Click Apply.

**Figure 45: Adding Static Trunks Members**

Interface > Trunk > Static

Step: 1. Configure Trunk Action: Add Member

Trunk 1

Member Unit 1 Port 2

Apply Revert

To configure connection parameters for a static trunk:

1. Click Interface, Trunk, Static.
2. Select Configure General from the Step list.
3. Select Configure from the Action list.
4. Modify the required interface settings. (Refer to [“Configuring by Port List” on page 106](#) for a description of the parameters.)
5. Click Apply.

**Figure 46: Configuring Connection Parameters for a Static Trunk**

Interface > Trunk > Static

Step: 2. Configure General Action: Configure

Static Trunk List Total: 1

| Trunk | Type       | Name | Admin                                       | Autonegotiation  | Speed Duplex | Flow Control                     | Link Up Down Trap                           |
|-------|------------|------|---|--|--------------|----------------------------------|---|
| 1     | 1000BASE-T |      | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled<br><input checked="" type="checkbox"/> 10h <input checked="" type="checkbox"/> 100h <input checked="" type="checkbox"/> 1000f <input type="checkbox"/> FC<br><input checked="" type="checkbox"/> 10f <input checked="" type="checkbox"/> 100f <input type="checkbox"/> Sym | 100full      | <input type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled |

Apply Revert

To display trunk connection parameters:

1. Click Interface, Trunk, Static.
2. Select Configure General from the Step list.
3. Select Show Information from the Action list.


**Figure 47: Showing Information for Static Trunks**

| Interface > Trunk > Static                          |            |      |         |             |                 |                 |                   |                   |                   |
|---|------------|------|---------|-------------|-----------------|-----------------|-------------------|-------------------|-------------------|
| Step: 2. Configure General Action: Show Information |            |      |         |             |                 |                 |                   |                   |                   |
| Static Trunk List Total: 1                          |            |      |         |             |                 |                 |                   |                   |                   |
| Trunk   | Type       | Name | Admin   | Oper Status | Shutdown Reason | Autonegotiation | Oper Speed Duplex | Oper Flow Control | Link Up Down Trap |
| 1   | 1000BASE-T |      | Enabled | Down        |                 | Enabled         | 1000full          | None              | Enabled           |

### Configuring a Dynamic Trunk

Use the Interface > Trunk > Dynamic pages to set the administrative key for an aggregation group, enable LACP on a port, configure protocol parameters for local and partner ports, or to set Ethernet connection parameters.

**Figure 48: Configuring Dynamic Trunks**

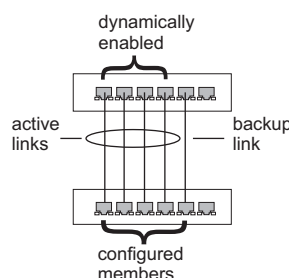

### Command Usage

- ◆ To avoid creating a loop in the network, be sure you enable LACP before connecting the ports, and also disconnect the ports before disabling LACP.
- ◆ If the target switch has also enabled LACP on the connected ports, the trunk will be activated automatically.
- ◆ A trunk formed with another switch using LACP will automatically be assigned the next available trunk ID.
- ◆ If more than eight ports attached to the same target switch have LACP enabled, the additional ports will be placed in standby mode, and will only be enabled if one of the active links fails.
- ◆ All ports on both ends of an LACP trunk must be configured for full duplex, and auto-negotiation.

- ◆ Ports are only allowed to join the same Link Aggregation Group (LAG) if (1) the LACP port system priority matches, (2) the LACP port admin key matches, and (3) the LAG admin key matches (if configured). However, if the LAG admin key is set, then the port admin key must be set to the same value for a port to be allowed to join that group.



**Note:** If the LACP admin key is not set when a channel group is formed (i.e., it has a null value of 0), the operational value of this key is set to the same value as the port admin key used by the interfaces that joined the group (see the “show lacp internal” command in the *CLI Reference Guide*).

### Parameters

These parameters are displayed:

#### *Configure Aggregator*

- ◆ **Admin Key** – LACP administration key is used to identify a specific link aggregation group (LAG) during local LACP setup on the switch.  
(Range: 0-65535)

If the port channel admin key is not set when a channel group is formed (i.e., it has the null value of 0), this key is set to the same value as the port admin key (see *Configure Aggregation Port - Actor/Partner*) used by the interfaces that joined the group. Note that when the LAG is no longer used, the port channel admin key is reset to 0.

If the port channel admin key is set to a non-default value, the operational key is based upon LACP PDUs received from the partner, and the channel admin key is reset to the default value. The trunk identifier will also be changed by this process.

- ◆ **Timeout Mode** – The timeout to wait for the next LACP data unit (LACPDU):
  - **Long Timeout** – Specifies a slow timeout of 90 seconds. (This is the default setting.)
  - **Short Timeout** – Specifies a fast timeout of 3 seconds.

The timeout is set in the LACP timeout bit of the Actor State field in transmitted LACPDU. When the partner switch receives an LACPDU set with a short timeout from the actor switch, the partner adjusts the transmit LACPDU interval to 1 second. When it receives an LACPDU set with a long timeout from the actor, it adjusts the transmit LACPDU interval to 30 seconds.

If the actor does not receive an LACPDU from its partner before the configured timeout expires, the partner port information will be deleted from the LACP group.

When a dynamic port-channel member leaves a port-channel, the default timeout value will be restored on that port.

When a dynamic port-channel is torn down, the configured timeout value will be retained. When the dynamic port-channel is constructed again, that timeout value will be used.

- ◆ **System Priority** – LACP system priority is used to determine link aggregation group (LAG) membership, and to identify this device to other switches during LAG negotiations.
- ◆ **System MAC Address** – The device MAC address assigned to each trunk.

#### *Configure Aggregation Port - General*

- ◆ **Port** – Port identifier. (Range:1-52)
- ◆ **LACP Status** – Enables or disables LACP on a port.

#### *Configure Aggregation Port - Actor/Partner*

- ◆ **Port** – Port number. (Range: 1-52)
- ◆ **Admin Key** – The LACP administration key must be set to the same value for ports that belong to the same LAG. (Range: 0-65535; Default – Actor: 1, Partner: 0)

Once the remote side of a link has been established, LACP operational settings are already in use on that side. Configuring LACP settings for the partner only applies to its administrative state, not its operational state.



**Note:** Configuring the partner admin-key does not affect remote or local switch operation. The local switch just records the partner admin-key for user reference.

By default, the actor's operational key is determined by the port's link speed (1000f - 4, 100f - 3, 10f - 2), and copied to the admin key.

- ◆ **System Priority** – LACP system priority is used to determine link aggregation group (LAG) membership, and to identify this device to other switches during LAG negotiations. (Range: 0-65535; Default: 32768)

System priority is combined with the switch's MAC address to form the LAG identifier. This identifier is used to indicate a specific LAG during LACP negotiations with other systems.

- ◆ **Port Priority** – If a link goes down, LACP port priority is used to select a backup link. (Range: 0-65535; Default: 32768)
  - Setting a lower value indicates a higher effective priority.
  - If an active port link goes down, the backup port with the highest priority is selected to replace the downed link. However, if two or more ports have the same LACP port priority, the port with the lowest physical port number will be selected as the backup port.

- If an LAG already exists with the maximum number of allowed port members, and LACP is subsequently enabled on another port using a higher priority than an existing member, the newly configured port will replace an existing port member that has a lower priority.



**Note:** Configuring LACP settings for a port only applies to its administrative state, not its operational state, and will only take effect the next time an aggregate link is established with that port.

**Note:** Configuring the port partner sets the remote side of an aggregate link; i.e., the ports on the attached device. The command attributes have the same meaning as those used for the port actor.

### Web Interface

To configure the admin key for a dynamic trunk:

1. Click Interface, Trunk, Dynamic.
2. Select Configure Aggregator from the Step list.
3. Set the Admin Key and timeout mode for the required LACP group.
4. Click Apply.

**Figure 49: Configuring the LACP Aggregator Admin Key**

Interface > Trunk > Dynamic

Step: 1. Configure Aggregator

Trunk List Total: 16

| Trunk | Admin Key (0-65535) | Timeout Mode | System Priority | System MAC Address |
|-------|---------------------|--------------|-----------------|--------------------|
| 1     | 0                   | Long Timeout | 32768           | CC-37-AB-BC-4F-FA  |
| 2     | 0                   | Long Timeout | 32768           | CC-37-AB-BC-4F-FA  |
| 3     | 0                   | Long Timeout | 32768           | CC-37-AB-BC-4F-FA  |
| 4     | 0                   | Long Timeout | 32768           | CC-37-AB-BC-4F-FA  |
| 5     | 0                   | Long Timeout | 32768           | CC-37-AB-BC-4F-FA  |

To enable LACP for a port:

1. Click Interface, Trunk, Dynamic.
2. Select Configure Aggregation Port from the Step list.
3. Select Configure from the Action list.
4. Click General.
5. Enable LACP on the required ports.

- Click Apply.

**Figure 50: Enabling LACP on a Port**

| Port | LACP Status                                 |
|------|---|
| 1    | <input type="checkbox"/> Enabled            |
| 2    | <input checked="" type="checkbox"/> Enabled |
| 3    | <input checked="" type="checkbox"/> Enabled |
| 4    | <input type="checkbox"/> Enabled            |
| 5    | <input type="checkbox"/> Enabled            |

To configure LACP parameters for group members:

- Click Interface, Trunk, Dynamic.
- Select Configure Aggregation Port from the Step list.
- Select Configure from the Action list.
- Click Actor or Partner.
- Configure the required settings.
- Click Apply.

**Figure 51: Configuring LACP Parameters on a Port**

| Port | Admin Key (0-65535) | System Priority (0-65535) | Port Priority (0-65535) |
|------|---------------------|---------------------------|-------------------------|
| 1    | 3                   | 32768                     | 32768                   |
| 2    | 4                   | 32768                     | 32768                   |
| 3    | 4                   | 32768                     | 32768                   |
| 4    | 4                   | 32768                     | 32768                   |
| 5    | 4                   | 32768                     | 32768                   |

To show the active members of a dynamic trunk:

- Click Interface, Trunk, Dynamic.
- Select Configure Trunk from the Step list.
- Select Show Member from the Action list.
- Select a Trunk.



**Figure 52: Showing Members of a Dynamic Trunk**

Interface > Trunk > Dynamic

Step: 3. Configure Trunk Action: Show Member

Trunk 1

Member List Total: 2

| Member (Unit/Port) |
|--------------------|
| 1/1                |
| 1/2                |

To configure connection parameters for a dynamic trunk:

1. Click Interface, Trunk, Dynamic.
2. Select Configure Trunk from the Step list.
3. Select Configure from the Action list.
4. Modify the required interface settings. (See ["Configuring by Port List" on page 106](#) for a description of the interface settings.)
5. Click Apply.

**Figure 53: Configuring Connection Settings for a Dynamic Trunk**

Interface > Trunk > Dynamic

Step: 3. Configure Trunk Action: Configure

Dynamic Trunk List Total: 1


| Trunk | Type       | Name | Admin                                       | Autonegotiation   | Speed Duplex | Flow Control   |
|-------|------------|------|---|---|--------------|--|
| 1     | 1000BASE-T |      | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled<br><input checked="" type="checkbox"/> 10h <input checked="" type="checkbox"/> 100h <input checked="" type="checkbox"/> 1000f<br><input checked="" type="checkbox"/> 10f <input checked="" type="checkbox"/> 100f <input type="checkbox"/> FC | 100full      | <input type="checkbox"/> Disabled<br><input checked="" type="checkbox"/> Enabled |

Apply Revert

To show connection parameters for a dynamic trunk:

1. Click Interface, Trunk, Dynamic.
2. Select Configure Trunk from the Step list.
3. Select Show from the Action list.

**Figure 54: Showing Connection Parameters for Dynamic Trunks**

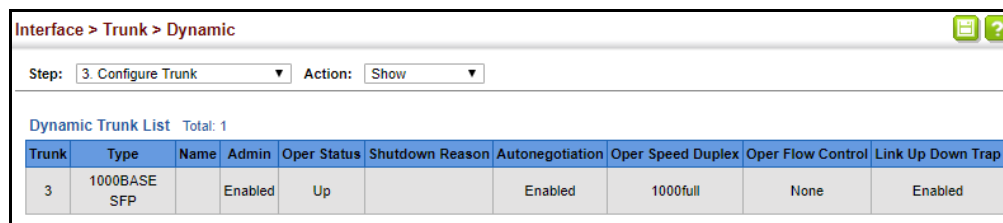

The screenshot shows a web interface for configuring network settings. At the top, there's a breadcrumb trail: "Interface > Trunk > Dynamic". Below this, there are two dropdown menus: "Step: 3. Configure Trunk" and "Action: Show". The main content area is titled "Dynamic Trunk List Total: 1". It contains a table with the following data:

| Trunk | Type         | Name | Admin   | Oper Status | Shutdown Reason | Autonegotiation | Oper Speed Duplex | Oper Flow Control | Link Up Down Trap |
|-------|--------------|------|---------|-------------|-----------------|-----------------|-------------------|-------------------|-------------------|
| 3     | 1000BASE SFP |      | Enabled | Up          |                 | Enabled         | 1000full          | None              | Enabled           |

## Displaying LACP Port Counters

Use the Interface > Trunk > Dynamic (Configure Aggregation Port - Show Information - Counters) page to display statistics for LACP protocol messages.

### Parameters

These parameters are displayed:

**Table 7: LACP Port Counters**

| Parameter           | Description  |
|---------------------|--|
| LACPDUs Sent        | Number of valid LACPDUs transmitted from this channel group.   |
| LACPDUs Received    | Number of valid LACPDUs received on this channel group.  |
| Marker Sent         | Number of valid Marker PDUs transmitted from this channel group.   |
| Marker Received     | Number of valid Marker PDUs received by this channel group.  |
| Marker Unknown Pkts | Number of frames received that either (1) Carry the Slow Protocols Ethernet Type value, but contain an unknown PDU, or (2) are addressed to the Slow Protocols group MAC Address, but do not carry the Slow Protocols Ethernet Type. |
| Marker Illegal Pkts | Number of frames that carry the Slow Protocols Ethernet Type value, but contain a badly formed PDU or an illegal value of Protocol Subtype.  |

### Web Interface

To display LACP port counters:

1. Click Interface, Trunk, Dynamic.
2. Select Configure Aggregation Port from the Step list.
3. Select Show Information from the Action list.
4. Click Counters.

5. Select a group member from the Port list.

**Figure 55: Displaying LACP Port Counters**

Interface > Trunk > Dynamic

Step: 2. Configure Aggregation Port Action: Show Information

☒ Counters ☐ Internal ☐ Neighbors

Port 1

Trunk ID 2

Port Counters Information

|                     |    |                     |    |
|---------------------|----|---------------------|----|
| LACPDUs Sent        | 29 | LACPDUs Received    | 25 |
| Marker Sent         | 0  | Marker Receive      | 0  |
| Marker Unknown Pkts | 0  | Marker Illegal Pkts | 0  |

Refresh

### Displaying LACP Settings and Status for the Local Side

Use the Interface > Trunk > Dynamic (Configure Aggregation Port - Show Information - Internal) page to display the configuration settings and operational state for the local side of a link aggregation.

### Parameters

These parameters are displayed:

**Table 8: LACP Internal Configuration Information**

| Parameter                  | Description  |
|----------------------------|--|
| LACP System Priority       | LACP system priority assigned to this port channel.  |
| LACP Port Priority         | LACP port priority assigned to this interface within the channel group.  |
| Admin Key                  | Current administrative value of the key for the aggregation port.  |
| Oper Key                   | Current operational value of the key for the aggregation port.   |
| LACPDUs Interval           | Number of seconds before invalidating received LACPDU information.   |
| Admin State,<br>Oper State | Administrative or operational values of the actor's state parameters: <ul style="list-style-type: none"> <li>Expired – The actor's receive machine is in the expired state;</li> <li>Defaulted – The actor's receive machine is using defaulted operational partner information, administratively configured for the partner.</li> <li>Distributing – If false, distribution of outgoing frames on this link is disabled; i.e., distribution is currently disabled and is not expected to be enabled in the absence of administrative changes or changes in received protocol information.</li> <li>Collecting – Collection of incoming frames on this link is enabled; i.e., collection is currently enabled and is not expected to be disabled in the absence of administrative changes or changes in received protocol information.</li> <li>Synchronization – The System considers this link to be IN_SYNC; i.e., it has been allocated to the correct Link Aggregation Group, the group has been associated with a compatible Aggregator, and the identity of the Link Aggregation Group is consistent with the System ID and operational Key information transmitted.</li> </ul> |

**Table 8: LACP Internal Configuration Information** (Continued)

| Parameter                                 | Description   |
|---|---|
| Admin State,<br>Oper State<br>(continued) | <ul style="list-style-type: none"><li>♦ Aggregation – The system considers this link to be aggregatable; i.e., a potential candidate for aggregation.</li><li>♦ Long timeout – Periodic transmission of LACPDUs uses a slow transmission rate.</li><li>♦ LACP-Activity – Activity control value with regard to this link. (0: Passive; 1: Active)</li></ul> |

### Web Interface

To display LACP settings and status for the local side:

1. Click Interface, Trunk, Dynamic.
2. Select Configure Aggregation Port from the Step list.
3. Select Show Information from the Action list.
4. Click Internal.
5. Select a group member from the Port list.

**Figure 56: Displaying LACP Port Internal Information**

The screenshot shows a web interface for configuring LACP. At the top, the breadcrumb 'Interface > Trunk > Dynamic' is visible. Below it, there are two dropdown menus: 'Step: 2. Configure Aggregation Port' and 'Action: Show Information'. Under these, there are three radio buttons: 'Counters', 'Internal' (which is selected), and 'Neighbors'. Below the radio buttons, there is a 'Port' dropdown menu set to '1' and a 'Trunk ID' field set to '2'. The main section is titled 'Port Internal Information' and contains a table of LACP parameters and their values.

|                      |   |
|----------------------|---|
| LACP System Priority | 32768   |
| LACP Port Priority   | 32768   |
| Admin Key            | 3   |
| Oper Key             | 3   |
| LACPDUs Interval     | 30 sec  |
| Admin State          | Defaulted, Aggregation, Long timeout, LACP-activity                                 |
| Oper State           | Distributing, Collecting, Synchronization, Aggregation, Long timeout, LACP-activity |

## Displaying LACP Settings and Status for the Remote Side

Use the Interface > Trunk > Dynamic (Configure Aggregation Port - Show Information - Neighbors) page to display the configuration settings and operational state for the remote side of a link aggregation.

### Parameters

These parameters are displayed:

**Table 9: LACP Remote Device Configuration Information**

| Parameter                 | Description   |
|---------------------------|---|
| Partner Admin System ID   | LAG partner's system ID assigned by the user.   |
| Partner Oper System ID    | LAG partner's system ID assigned by the LACP protocol.                                    |
| Partner Admin Port Number | Current administrative value of the port number for the protocol Partner.                 |
| Partner Oper Port Number  | Operational port number assigned to this aggregation port by the port's protocol partner. |
| Port Admin Priority       | Current administrative value of the port priority for the protocol partner.               |
| Port Oper Priority        | Priority value assigned to this aggregation port by the partner.                          |
| Admin Key                 | Current administrative value of the Key for the protocol partner.                         |
| Oper Key                  | Current operational value of the Key for the protocol partner.                            |
| Admin State               | Administrative values of the partner's state parameters. (See preceding table.)           |
| Oper State                | Operational values of the partner's state parameters. (See preceding table.)              |

### Web Interface

To display LACP settings and status for the remote side:

1. Click Interface, Trunk, Dynamic.
2. Select Configure Aggregation Port from the Step list.
3. Select Show Information from the Action list.
4. Click Neighbors.
5. Select a group member from the Port list.

Figure 57: Displaying LACP Port Remote Information

Interface > Trunk > Dynamic

Step: 2. Configure Aggregation Port Action: Show Information

☐ Counters ☐ Internal ☒ Neighbors

Port 3

Trunk ID 2

Port Neighbors Information

|                           |   |
|---------------------------|---|
| Partner Admin System ID   | 32768, 00-00-00-00-00-00  |
| Partner Oper System ID    | 32768, 00-12-CF-61-24-2F  |
| Partner Admin Port Number | 3   |
| Partner Oper Port Number  | 3   |
| Port Admin Priority       | 32768   |
| Port Oper Priority        | 32768   |
| Admin Key                 | 0   |
| Oper Key                  | 3   |
| Admin State               | Defaulted, Distributing, Collecting, Synchronization, Long timeout                  |
| Oper State                | Distributing, Collecting, Synchronization, Aggregation, Long timeout, LACP-activity |

**Configuring Load Balancing** Use the Interface > Trunk > Load Balance page to set the load-distribution method used among ports in aggregated links.

#### Command Usage

- ◆ This command applies to all static and dynamic trunks on the switch.
- ◆ To ensure that the switch traffic load is distributed evenly across all links in a trunk, select the source and destination addresses used in the load-balance calculation to provide the best result for trunk connections:
  - **Destination IP Address:** All traffic with the same destination IP address is output on the same link in a trunk. This mode works best for switch-to-router trunk links where traffic through the switch is destined for many different hosts. Do not use this mode for switch-to-server trunk links where the destination IP address is the same for all traffic.
  - **Destination MAC Address:** All traffic with the same destination MAC address is output on the same link in a trunk. This mode works best for switch-to-switch trunk links where traffic through the switch is destined for many different hosts. Do not use this mode for switch-to-router trunk links where the destination MAC address is the same for all traffic.
  - **Source and Destination IP Address:** All traffic with the same source and destination IP address is output on the same link in a trunk. This mode works best for switch-to-router trunk links where traffic through the switch is received from and destined for many different hosts.

- **Source and Destination MAC Address:** All traffic with the same source and destination MAC address is output on the same link in a trunk. This mode works best for switch-to-switch trunk links where traffic through the switch is received from and destined for many different hosts.
- **Source IP Address:** All traffic with the same source IP address is output on the same link in a trunk. This mode works best for switch-to-router or switch-to-server trunk links where traffic through the switch is received from many different hosts.
- **Source MAC Address:** All traffic with the same source MAC address is output on the same link in a trunk. This mode works best for switch-to-switch trunk links where traffic through the switch is received from many different hosts.

### Parameters

These parameters are displayed for the load balance mode:


- ◆ **Destination IP Address** - Load balancing based on destination IP address.
- ◆ **Destination MAC Address** - Load balancing based on destination MAC address.
- ◆ **Source and Destination IP Address** - Load balancing based on source and destination IP address.
- ◆ **Source and Destination MAC Address** - Load balancing based on source and destination MAC address.
- ◆ **Source IP Address** - Load balancing based on source IP address.
- ◆ **Source MAC Address** - Load balancing based on source MAC address.

### Web Interface

To display the load-distribution method used by ports in aggregated links:

1. Click Interface, Trunk, Load Balance.
2. Select the required method from the Load Balance Mode list.
3. Click Apply.

**Figure 58: Configuring Load Balancing**

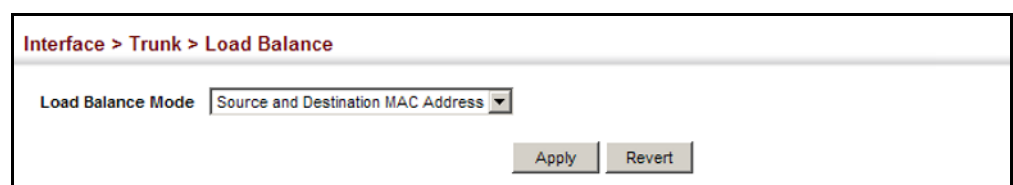

## Saving Power

Use the Interface > Green Ethernet page to enable power savings mode on the selected port.

### Command Usage

- ◆ IEEE 802.3 defines the Ethernet standard and subsequent power requirements based on cable connections operating at 100 meters. Enabling power saving mode can reduce power used for cable lengths of 60 meters or less, with more significant reduction for cables of 20 meters or less, and continue to ensure signal integrity.
- ◆ The power-saving methods provided by this switch include:
  - Power saving when there is no link partner:

Under normal operation, the switch continuously auto-negotiates to find a link partner, keeping the MAC interface powered up even if no link connection exists. When using power-savings mode, the switch checks for energy on the circuit to determine if there is a link partner. If none is detected, the switch automatically turns off the transmitter, and most of the receive circuitry (entering Sleep Mode). In this mode, the low-power energy-detection circuit continuously checks for energy on the cable. If none is detected, the MAC interface is also powered down to save additional energy. If energy is detected, the switch immediately turns on both the transmitter and receiver functions, and powers up the MAC interface.
  - Power saving when there is a link partner:

Traditional Ethernet connections typically operate with enough power to support at least 100 meters of cable even though average network cable length is shorter. When cable length is shorter, power consumption can be reduced since signal attenuation is proportional to cable length. When power-savings mode is enabled, the switch analyzes cable length to determine whether or not it can reduce the signal amplitude used on a particular link.



**Note:** Power savings can only be implemented on Gigabit Ethernet ports when using twisted-pair cabling. Power-savings mode on a active link only works when connection speed is 1 Gbps, and line length is less than 60 meters.

---

### Parameters

These parameters are displayed:

- ◆ **Port** – Power saving mode only applies to the Gigabit Ethernet ports using copper media.




- ◆ **Power Saving Status** – Adjusts the power provided to ports based on the length of the cable used to connect to other devices. Only sufficient power is used to maintain connection requirements. (Default: Enabled on Gigabit Ethernet RJ-45 ports)

### Web Interface

To enable power savings:

1. Click Interface, Green Ethernet.
2. Mark the Enabled check box for a port.
3. Click Apply.

**Figure 59: Enabling Power Savings**

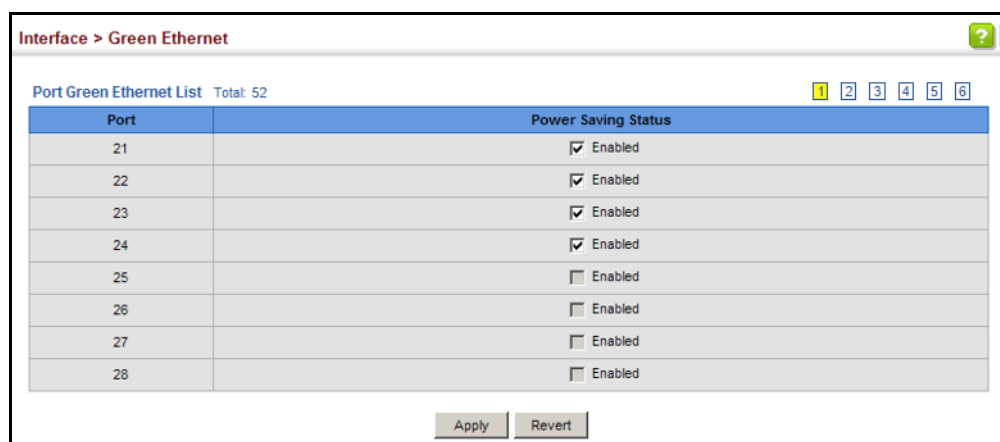


| Port | Power Saving Status                         |
|------|---|
| 21   | <input checked="" type="checkbox"/> Enabled |
| 22   | <input checked="" type="checkbox"/> Enabled |
| 23   | <input checked="" type="checkbox"/> Enabled |
| 24   | <input checked="" type="checkbox"/> Enabled |
| 25   | <input type="checkbox"/> Enabled            |
| 26   | <input type="checkbox"/> Enabled            |
| 27   | <input type="checkbox"/> Enabled            |
| 28   | <input type="checkbox"/> Enabled            |

## Configuring Local Port Mirroring

Use the Interface > Port > Mirror page to mirror traffic from any source port to a target port for real-time analysis. You can then attach a logic analyzer or RMON probe to the target port and study the traffic crossing the source port in a completely unobtrusive manner.

**Figure 60: Configuring Local Port Mirroring**

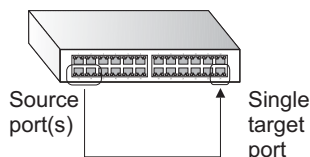

### Command Usage

- ◆ Traffic can be mirrored from one or more source ports to a destination port on the same switch (local port mirroring as described in this section), or from one or more source ports on remote switches to a destination port on this switch

(remote port mirroring as described in [“Configuring Remote Port Mirroring” on page 143](#)).

- ◆ Monitor port speed should match or exceed source port speed, otherwise traffic may be dropped from the monitor port.
- ◆ When traffic matches the rules for both port mirroring, and for mirroring of VLAN traffic or packets based on a MAC address, the matching packets will not be sent to target port specified for port mirroring.
- ◆ The destination port cannot be a trunk or trunk member port.
- ◆ Note that Spanning Tree BPDU packets are not mirrored to the target port.

### Parameters

These parameters are displayed:

- ◆ **Source Port** – The port whose traffic will be monitored.
- ◆ **Target Port** – The port that will mirror the traffic on the source port.
- ◆ **Type** – Allows you to select which traffic to mirror to the target port, Rx (receive), Tx (transmit), or Both. (Default: Both)

### Web Interface

To configure a local mirror session:

1. Click Interface, Port, Mirror.
2. Select Add from the Action List.
3. Specify the source port.
4. Specify the monitor port.
5. Specify the traffic type to be mirrored.
6. Click Apply.

**Figure 61: Configuring Local Port Mirroring**

The screenshot shows a web interface titled "Interface > Mirror". At the top, there is an "Action:" dropdown menu with "Add" selected. Below this, there are two rows of configuration fields. The first row is for "Source Port", with "Unit" and "Port" dropdown menus, both set to "1". The second row is for "Target Port", also with "Unit" and "Port" dropdown menus, both set to "1". Below these, there is a "Type" dropdown menu set to "Both". At the bottom right of the form, there are two buttons: "Apply" and "Revert".

To display the configured mirror sessions:

1. Click Interface, Port, Mirror.
2. Select Show from the Action List.

**Figure 62: Displaying Local Port Mirror Sessions**

Interface > Mirror

Action: Show

Mirror Session List Total: 2


|                          | Source (Unit/Port) | Target (Unit/Port) | Type |
|--------------------------|--------------------|--------------------|------|
| <input type="checkbox"/> | 1 / 7              | 1 / 8              | Both |
| <input type="checkbox"/> | 1 / 9              | 1 / 10             | Rx   |

Delete Revert

## Configuring Remote Port Mirroring

Use the Interface > RSPAN page to mirror traffic from remote switches for analysis at a destination port on the local switch. This feature, also called Remote Switched Port Analyzer (RSPAN), carries traffic generated on the specified source ports for each session over a user-specified VLAN dedicated to that RSPAN session in all participating switches. Monitored traffic from one or more sources is copied onto the RSPAN VLAN through IEEE 802.1Q trunk or hybrid ports that carry it to any RSPAN destination port monitoring the RSPAN VLAN as shown in the figure below.

**Figure 63: Configuring Remote Port Mirroring**

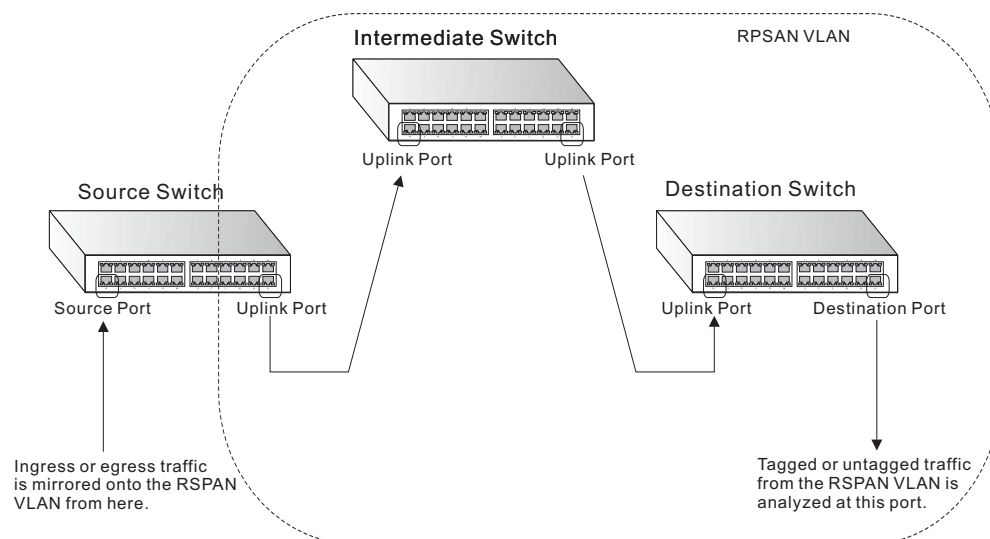

### Command Usage

- ◆ Traffic can be mirrored from one or more source ports to a destination port on the same switch (local port mirroring as described in [“Configuring Local Port Mirroring” on page 141](#)), or from one or more source ports on remote switches to a destination port on this switch (remote port mirroring as described in this section).

- ◆ *Configuration Guidelines*

Take the following step to configure an RSPAN session:

1. Use the VLAN Static List (see [“Configuring VLAN Groups” on page 161](#)) to reserve a VLAN for use by RSPAN (marking the “Remote VLAN” field on this page. (Default VLAN 1 is prohibited.)
2. Set up the source switch on the RSPAN configuration page by specifying the mirror session, the switch’s role (Source), the RSPAN VLAN, and the uplink port<sup>1</sup>. Then specify the source port(s), and the traffic type to monitor (Rx, Tx or Both).
3. Set up all intermediate switches on the RSPAN configuration page, entering the mirror session, the switch’s role (Intermediate), the RSPAN VLAN, and the uplink port(s).
4. Set up the destination switch on the RSPAN configuration page by specifying the mirror session, the switch’s role (Destination), the destination port<sup>1</sup>, whether or not the traffic exiting this port will be tagged or untagged, and the RSPAN VLAN. Then specify each uplink port where the mirrored traffic is being received.

- ◆ *RSPAN Limitations*

The following limitations apply to the use of RSPAN on this switch:

- *RSPAN Ports* – Only ports can be configured as an RSPAN source, destination, or uplink; static and dynamic trunks are not allowed. A port can only be configured as one type of RSPAN interface – source, destination, or uplink. Also, note that the source port and destination port cannot be configured on the same switch.
- *Local/Remote Mirror* – The destination of a local mirror session (created on the Interface > Port > Mirror page) cannot be used as the destination for RSPAN traffic.
- *Spanning Tree* – If the spanning tree is disabled, BPDUs will not be flooded onto the RSPAN VLAN.

---

1. Only 802.1Q trunk or hybrid (i.e., general use) ports can be configured as an RSPAN uplink or destination ports – access ports are not allowed (see [“Adding Static Members to VLANs” on page 163](#)).

- MAC address learning is not supported on RSPAN uplink ports when RSPAN is enabled on the switch. Therefore, even if spanning tree is enabled after RSPAN has been configured, MAC address learning will still not be re-started on the RSPAN uplink ports.
- *IEEE 802.1X* – RSPAN and 802.1X are mutually exclusive functions. When 802.1X is enabled globally, RSPAN uplink ports cannot be configured, even though RSPAN source and destination ports can still be configured. When RSPAN uplink ports are enabled on the switch, 802.1X cannot be enabled globally.
- *Port Security* – If port security is enabled on any port, that port cannot be set as an RSPAN uplink port, even though it can still be configured as an RSPAN source or destination port. Also, when a port is configured as an RSPAN uplink port, port security cannot be enabled on that port.

### Parameters

These parameters are displayed:

- ◆ **Session** – A number identifying this RSPAN session. (Range: 1-3)  
Only one active session is allowed.
- ◆ **Operation Status** – Indicates whether or not RSPAN is currently functioning.
- ◆ **Switch Role** – Specifies the role this switch performs in mirroring traffic.
  - **None** – This switch will not participate in RSPAN.
  - **Source** - Specifies this device as the source of remotely mirrored traffic.
  - **Intermediate** - Specifies this device as an intermediate switch, transparently passing mirrored traffic from one or more sources to one or more destinations.
  - **Destination** - Specifies this device as a switch configured with a destination port which is to receive mirrored traffic for this session.
- ◆ **Remote VLAN** – The VLAN to which traffic mirrored from the source port will be flooded. The VLAN specified in this field must first be reserved for the RSPAN application using the VLAN > Static page (see [page 161](#)).
- ◆ **Uplink Port** – A port on any switch participating in RSPAN through which mirrored traffic is passed on to or received from the RSPAN VLAN.  
Only one uplink port can be configured on a source switch, but there is no limitation on the number of uplink ports<sup>1</sup> configured on an intermediate or destination switch.

Only destination and uplink ports will be assigned by the switch as members of the RSPAN VLAN. Ports cannot be manually assigned to an RSPAN VLAN through the VLAN > Static page. Nor can GVRP dynamically add port members

to an RSPAN VLAN. Also, note that the VLAN > Static (Show) page will not display any members for an RSPAN VLAN, but will only show configured RSPAN VLAN identifiers.

- ◆ **Type** – Specifies the traffic type to be mirrored remotely. (Options: Rx, Tx, Both)
- ◆ **Destination Port** – Specifies the destination port<sup>1</sup> to monitor the traffic mirrored from the source ports. Only one destination port can be configured on the same switch per session, but a destination port can be configured on more than one switch for the same session. Also note that a destination port can still send and receive switched traffic, and participate in any Layer 2 protocols to which it has been assigned.
- ◆ **Tag** – Specifies whether or not the traffic exiting the destination port to the monitoring device carries the RSPAN VLAN tag.

### Web Interface

To configure a remote mirror session:

1. Click Interface, RSPAN.
2. Set the Switch Role to None, Source, Intermediate, or Destination.
3. Configure the required settings for each switch participating in the RSPAN VLAN.
4. Click Apply.

**Figure 64: Configuring Remote Port Mirroring (Source)**

The screenshot shows the 'Interface > RSPAN' configuration page. It includes fields for Session (1), Operation Status (Up), Switch Role (Source), Remote VLAN (2), and Uplink Port (4). Below these is a 'Source Port Configuration List' table with 52 total entries. The table has two columns: 'Source Port' and 'Type'.

| Source Port | Type |
|-------------|------|
| 1           | Rx   |
| 2           | Rx   |
| 3           | None |
| 4           | None |
| 5           | Tx   |

**Figure 65: Configuring Remote Port Mirroring (Intermediate)**

Interface > RSPAN

Session: 1

Operation Status: Up

Switch Role: Intermediate

Remote VLAN: 2

Uplink Port List Total: 52

| Port | Uplink                              |
|------|-------------------------------------|
| 1    | <input type="checkbox"/>            |
| 2    | <input type="checkbox"/>            |
| 3    | <input type="checkbox"/>            |
| 4    | <input checked="" type="checkbox"/> |
| 5    | <input type="checkbox"/>            |

**Figure 66: Configuring Remote Port Mirroring (Destination)**

Interface > RSPAN

Session: 1

Operation Status: Up

Switch Role: Destination

Destination Port: 1

Tag: Untagged

Remote VLAN: 2

Uplink Port List Total: 52

| Port | Uplink                              |
|------|-------------------------------------|
| 1    | <input type="checkbox"/>            |
| 2    | <input type="checkbox"/>            |
| 3    | <input type="checkbox"/>            |
| 4    | <input checked="" type="checkbox"/> |
| 5    | <input type="checkbox"/>            |

## Sampling Traffic Flows

The flow sampling (sFlow) feature embedded on this switch, together with a remote sFlow Collector, can provide network administrators with an accurate, detailed and real-time overview of the types and levels of traffic present on their network. The sFlow Agent samples 1 out of  $n$  packets from all data traversing the switch, re-encapsulates the samples as sFlow datagrams and transmits them to the sFlow Collector. This sampling occurs at the internal hardware level where all traffic is seen, whereas traditional probes will only have a partial view of traffic as it is sampled at the monitored interface. Moreover, the processor and memory load imposed by the sFlow agent is minimal since local analysis does not take place. The wire-speed transmission characteristic of the switch is thus preserved even at high traffic levels.



**Note:** The terms “collector”, “receiver” and “owner”, in the context of this chapter, all refer to a remote server capable of receiving the sFlow datagrams generated by the sFlow agent of the switch.

As the Collector receives streams from the various sFlow agents (other switches or routers) throughout the network, a timely, network-wide picture of utilization and traffic flows is created. Analysis of the sFlow stream(s) can reveal trends and information that can be leveraged in the following ways:

- ◆ Detecting, diagnosing, and fixing network problems
- ◆ Real-time congestion management
- ◆ Understanding application mix (P2P, Web, DNS, etc.) and changes
- ◆ Identification and tracing of unauthorized network activity
- ◆ Usage accounting
- ◆ Trending and capacity planning

### Configuring sFlow Receiver Settings

Use the Interface > sFlow (Configure Receiver – Add) page to create an sFlow receiver on the switch.

#### Parameters

These parameters are displayed:

- ◆ **Receiver Owner Name**<sup>2</sup> – The name of the receiver. (Range: 1-256 characters; Default: None)
- ◆ **Receiver Timeout** – The time that the sFlow process will continuously send samples to the Collector before resetting all sFlow port parameters. (Range: 0-10000000 seconds, where 0 indicates no time out)  
  
The sFlow parameters affected by this command include the sampling interval, the receiver’s name, address and UDP port, the time out, maximum header size, and maximum datagram size.
- ◆ **Receiver Destination**<sup>2</sup> – IP address of the sFlow Collector.
  - *ipv4-address* - IPv4 address of the sFlow collector. Valid IPv4 addresses consist of four decimal numbers, 0 to 255, separated by periods.
  - *ipv6-address* - IPv6 address of the sFlow collector. A full IPv6 address including the network prefix and host address bits. An IPv6 address consists of 8 colon-separated 16-bit hexadecimal values. One double colon may be

2. Sampling must be disabled by setting the time out to 0 before these fields can be configured.



used to indicate the appropriate number of zeros required to fill the undefined fields.

- ◆ **Receiver Socket Port<sup>2</sup>** – The UDP port on which the sFlow Collector is listening for sFlow streams. (Range: 1-65534)
- ◆ **Maximum Datagram Size** – Maximum size of the sFlow datagram payload. (Range: 200-1500 bytes)
- ◆ **Datagram Version** – Sends either v4 or v5 sFlow datagrams to the receiver.

### Web Interface

To configure an sFlow receiver:

1. Click Interface, sFlow.
2. Select Configure Receiver from the Step list.
3. Select Add from the Action list.
4. Fill in the parameters for the sFlow receiver and monitored traffic.
5. Click Apply.

Figure 67: Configuring an sFlow Receiver

Interface > sFlow

Step: 1. Configure Receiver Action: Add

Receiver Owner Name: stat\_server1

Receiver Timeout (30 - 10000000): 100 sec

Receiver Destination: 192.168.220.225

Receiver Socket Port (1 - 65535): 22500

Maximum Datagram Size (200 - 1500): 512 bytes

Datagram Version: ☒ v5


Apply Revert

### Web Interface

To show configured receivers:

1. Click Interface, sFlow.
2. Select Configure Receiver from the Step list.
3. Select Show from the Action list.

Figure 68: Showing sFlow Receivers

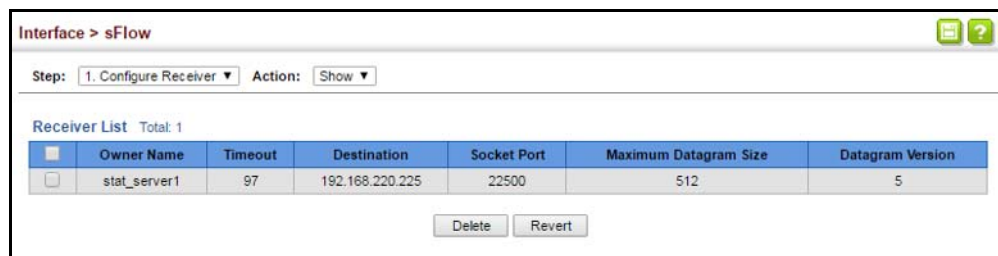

The screenshot shows a web interface titled "Interface > sFlow". At the top, there is a "Step:" dropdown menu set to "1. Configure Receiver" and an "Action:" dropdown menu set to "Show". Below this is a "Receiver List" section with a "Total: 1" indicator. The list contains a single entry with the following details:

|                          | Owner Name   | Timeout | Destination     | Socket Port | Maximum Datagram Size | Datagram Version |
|--------------------------|--------------|---------|-----------------|-------------|-----------------------|------------------|
| <input type="checkbox"/> | stat_server1 | 97      | 192.168.220.225 | 22500       | 512                   | 5                |

At the bottom of the table, there are "Delete" and "Revert" buttons.

### Configuring an sFlow Polling Instance

Use the Interface > sFlow (Configure Details – Add) page to enable an sFlow polling data source that polls periodically based on a specified time interval, or an sFlow data source instance that takes samples periodically based on the number of packets processed.

#### Parameters

These parameters are displayed in the web interface:

- ◆ **Receiver Owner Name** – The name of the receiver. (Range: 1-256 characters; Default: None)
- ◆ **Type** – Specifies the polling type as an sFlow polling data source for a specified interface that polls periodically based on a specified time interval, or an sFlow data source instance for a specific interface that takes samples periodically based on the number of packets processed.
- ◆ **Data Source** – The source from which the samples will be taken and sent to a collector.
- ◆ **Instance ID** – An instance ID used to identify the sampling source. (Range: 1)
- ◆ **Sampling Rate** – The number of packets out of which one sample will be taken. (Range: 2-65535 packets; Default: Disabled)
- ◆ **Maximum Header Size** – Maximum size of the sFlow datagram header. (Range: 64-256 bytes)

#### Web Interface

To configure an sFlow sampling or polling instance:

1. Click Interface, sFlow.
2. Select Configure Details from the Step list.
3. Select Add from the Action list.
4. Fill in the parameters for the sFlow instance, including sampling rate and maximum header size.

- Click Apply.

Figure 69: Configuring an sFlow Instance

The screenshot shows the 'Interface > sFlow' configuration page. The 'Step' dropdown is set to '2. Configure Details' and the 'Action' dropdown is set to 'Add'. The configuration fields are as follows:

- Receiver Owner Name: stat\_server1
- Type: ☒ Sampling ☐ Polling
- Data Source: Unit 1 Port 1
- Instance ID (1-1): 1
- Sampling Rate (2-65535): 256
- Maximum Header Size (64-256): 200 bytes

At the bottom right, there are 'Apply' and 'Revert' buttons.

### Web Interface

To show configured instances:

- Click Interface, sFlow.
- Select Configure Details from the Step list.
- Select Show from the Action list.
- Select the owner name from the scroll-down list.
- Select sFlow type as Sampling or Polling.

Figure 70: Showing sFlow Instances

The screenshot shows the 'Interface > sFlow' configuration page with the 'Step' dropdown set to '2. Configure Details' and the 'Action' dropdown set to 'Show'. The configuration fields are the same as in Figure 69. Below the configuration fields, there is a 'Sampling List' section with a 'Total: 1' indicator. The table below shows the configured instance:

|                          | Data Source (Unit/Port) | Instance ID | Rate | Maximum Header Size (bytes) |
|--------------------------|-------------------------|-------------|------|-----------------------------|
| <input type="checkbox"/> | 1/3                     | 1           | 256  | 200                         |

At the bottom right, there are 'Delete' and 'Revert' buttons.

## Traffic Segmentation

If tighter security is required for passing traffic from different clients through downlink ports on the local network and over uplink ports to the service provider, port-based traffic segmentation can be used to isolate traffic for individual clients. Data traffic on downlink ports is only forwarded to, and from, uplink ports.

Traffic belonging to each client is isolated to the allocated downlink ports. But the switch can be configured to either isolate traffic passing across a client's allocated uplink ports from the uplink ports assigned to other clients, or to forward traffic through the uplink ports used by other clients, allowing different clients to share access to their uplink ports where security is less likely to be compromised.

**Enabling Traffic Segmentation** Use the Interface > Traffic Segmentation (Configure Global) page to enable traffic segmentation.

### Parameters

These parameters are displayed:

- ◆ **Status** – Enables port-based traffic segmentation. (Default: Disabled)
- ◆ **Uplink-to-Uplink Mode** – Specifies whether or not traffic can be forwarded between uplink ports assigned to different client sessions.
  - **Blocking** – Blocks traffic between uplink ports assigned to different sessions.
  - **Forwarding** – Forwards traffic between uplink ports assigned to different sessions.

### Web Interface

To enable traffic segmentation:

1. Click Interface, Traffic Segmentation.
2. Select Configure Global from the Step list.
3. Mark the Status check box, and set the required uplink-to-uplink mode.
4. Click Apply.

**Figure 71: Enabling Traffic Segmentation**

The screenshot shows the 'Interface > Traffic Segmentation' configuration page. At the top, there's a breadcrumb 'Interface > Traffic Segmentation'. Below it, a 'Step:' dropdown menu is set to '1. Configure Global'. Under the 'Status' section, there is an unchecked checkbox labeled 'Enabled'. Below that, the 'Uplink-to-Uplink Mode' is set to 'Blocking' via a dropdown menu. At the bottom right, there are two buttons: 'Apply' and 'Revert'.

### Configuring Uplink and Downlink Ports

Use the Interface > Traffic Segmentation (Configure Session) page to assign the downlink and uplink ports to use in the segmented group. Ports designated as downlink ports can not communicate with any other ports on the switch except for the uplink ports. Uplink ports can communicate with any other ports on the switch and with any designated downlink ports.

### Command Usage

- ◆ When traffic segmentation is enabled, the forwarding state for the uplink and downlink ports assigned to different client sessions is shown below.

**Table 10: Traffic Segmentation Forwarding**

| Destination Source               | Session #1 Downlinks | Session #1 Uplinks   | Session #2 Downlinks | Session #2 Uplinks   | Normal Ports |
|----------------------------------|----------------------|----------------------|----------------------|----------------------|--------------|
| <b>Session #1 Downlink Ports</b> | Blocking             | Forwarding           | Blocking             | Blocking             | Blocking     |
| <b>Session #1 Uplink Ports</b>   | Forwarding           | Forwarding           | Blocking             | Blocking/Forwarding* | Forwarding   |
| <b>Session #2 Downlink Ports</b> | Blocking             | Blocking             | Blocking             | Forwarding           | Blocking     |
| <b>Session #2 Uplink Ports</b>   | Blocking             | Blocking/Forwarding* | Forwarding           | Forwarding           | Forwarding   |
| <b>Normal Ports</b>              | Forwarding           | Forwarding           | Forwarding           | Forwarding           | Forwarding   |

\* The forwarding state for uplink-to-uplink ports is configured on the Configure Global page (see [page 152](#)).

- ◆ When traffic segmentation is disabled, all ports operate in normal forwarding mode based on the settings specified by other functions such as VLANs and spanning tree protocol.
- ◆ A port cannot be configured in both an uplink and downlink list.
- ◆ A port can only be assigned to one traffic-segmentation session.
- ◆ A downlink port can only communicate with an uplink port in the same session. Therefore, if an uplink port is not configured for a session, the assigned downlink ports will not be able to communicate with any other ports.

- ◆ If a downlink port is not configured for the session, the assigned uplink ports will operate as normal ports.

### Parameters

These parameters are displayed:

- ◆ **Session ID** – Traffic segmentation session. (Range: 1-4)
- ◆ **Direction** – Adds an interface to the segmented group by setting the direction to uplink or downlink. (Default: Uplink)
- ◆ **Interface** – Displays a list of ports or trunks.
- ◆ **Port** – Port Identifier. (Range: 1-52)
- ◆ **Trunk** – Trunk Identifier. (Range: 1-16)

### Web Interface

To configure the members of the traffic segmentation group:

1. Click Interface, Traffic Segmentation.
2. Select Configure Session from the Step list.
3. Select Add from the Action list.
4. Enter the session ID, set the direction to uplink or downlink, and select the interface to add.
5. Click Apply.

**Figure 72: Configuring Members for Traffic Segmentation**

The screenshot shows a web interface titled "Interface > Traffic Segmentation". Below the title bar, there are two dropdown menus: "Step:" with "2. Configure Session" selected, and "Action:" with "Add" selected. The main configuration area contains the following fields:


- Session ID (1-4)**: A text input field.
- Direction**: A dropdown menu with "Uplink" selected.
- Interface**: A section with two radio button options:
  - Port (1-52)**: Selected. It includes two adjacent text input fields separated by a hyphen.
  - Trunk (1-16)**: Unselected. It includes two adjacent text input fields separated by a hyphen.

At the bottom right of the form are two buttons: "Apply" and "Revert".

To show the members of the traffic segmentation group:

1. Click Interface, Traffic Segmentation.
2. Select Configure Session from the Step list.
3. Select Show from the Action list.

**Figure 73: Showing Traffic Segmentation Members**

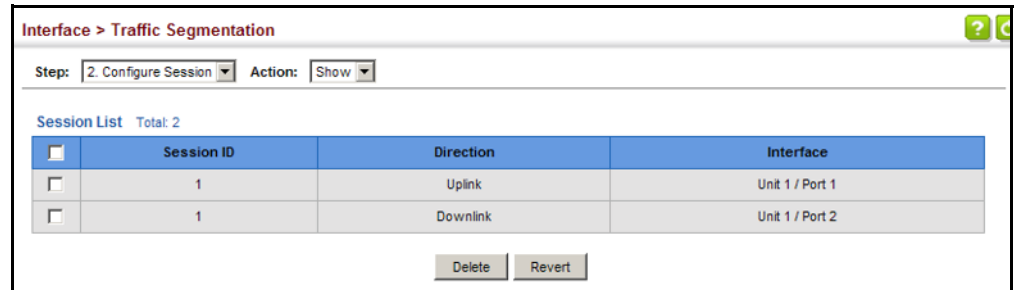

Interface > Traffic Segmentation

Step: 2. Configure Session Action: Show

Session List Total: 2

|                          | Session ID | Direction | Interface       |
|--------------------------|------------|-----------|-----------------|
| <input type="checkbox"/> | 1          | Uplink    | Unit 1 / Port 1 |
| <input type="checkbox"/> | 1          | Downlink  | Unit 1 / Port 2 |

Delete Revert





---

# VLAN Configuration

This chapter includes the following topics:

- ◆ [IEEE 802.1Q VLANs](#) – Configures static and dynamic VLANs.
- ◆ [IEEE 802.1Q Tunneling](#) – Configures QinQ tunneling to maintain customer-specific VLAN and Layer 2 protocol configurations across a service provider network, even when different customers use the same internal VLAN IDs.
- ◆ [L2PT Tunneling](#) – Configures Layer 2 Protocol Tunneling for the specified protocol.
- ◆ [Protocol VLANs](#)<sup>3</sup> – Configures VLAN groups based on specified protocols.
- ◆ [IP Subnet VLANs](#)<sup>3</sup> – Maps untagged ingress frames to a specified VLAN if the source address is found in the IP subnet-to-VLAN mapping table.
- ◆ [MAC-based VLANs](#)<sup>3</sup> – Maps untagged ingress frames to a specified VLAN if the source MAC address is found in the IP MAC address-to-VLAN mapping table.
- ◆ [VLAN Translation](#) – Maps VLAN IDs between the customer and the service provider.

---

## IEEE 802.1Q VLANs

In large networks, routers are used to isolate broadcast traffic for each subnet into separate domains. This switch provides a similar service at Layer 2 by using VLANs to organize any group of network nodes into separate broadcast domains. VLANs confine broadcast traffic to the originating group, and can eliminate broadcast storms in large networks. This also provides a more secure and cleaner network environment.

An IEEE 802.1Q VLAN is a group of ports that can be located anywhere in the network, but communicate as though they belong to the same physical segment.

VLANs help to simplify network management by allowing you to move devices to a new VLAN without having to change any physical connections. VLANs can be easily organized to reflect departmental groups (such as Marketing or R&D), usage

---

3. If a packet matches the rules defined by more than one of these functions, only one of them is applied, with the precedence being MAC-based, IP subnet-based, protocol-based, and then native port-based.

groups (such as e-mail), or multicast groups (used for multimedia applications such as video conferencing).

VLANs provide greater network efficiency by reducing broadcast traffic, and allow you to make network changes without having to update IP addresses or IP subnets. VLANs inherently provide a high level of network security since traffic must pass through a configured Layer 3 link to reach a different VLAN.

This switch supports the following VLAN features:

- ◆ Up to 4094 VLANs based on the IEEE 802.1Q standard
- ◆ Distributed VLAN learning across multiple switches using explicit or implicit tagging and GVRP protocol
- ◆ Port overlapping, allowing a port to participate in multiple VLANs
- ◆ End stations can belong to multiple VLANs
- ◆ Passing traffic between VLAN-aware and VLAN-unaware devices
- ◆ Priority tagging

### Assigning Ports to VLANs

Before enabling VLANs for the switch, you must first assign each port to the VLAN group(s) in which it will participate. By default all ports are assigned to VLAN 1 as untagged ports. Add a port as a tagged port if you want it to carry traffic for one or more VLANs, and any intermediate network devices or the host at the other end of the connection supports VLANs. Then assign ports on the other VLAN-aware network devices along the path that will carry this traffic to the same VLAN(s), either manually or dynamically using GVRP. However, if you want a port on this switch to participate in one or more VLANs, but none of the intermediate network devices nor the host at the other end of the connection supports VLANs, then you should add this port to the VLAN as an untagged port.




---

**Note:** VLAN-tagged frames can pass through VLAN-aware or VLAN-unaware network interconnection devices, but the VLAN tags should be stripped off before passing it on to any end-node host that does not support VLAN tagging.

---

**Figure 74: VLAN Compliant and VLAN Non-compliant Devices**

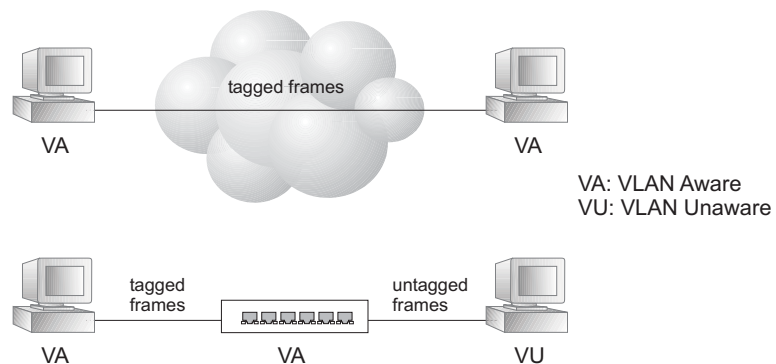

**VLAN Classification** – When the switch receives a frame, it classifies the frame in one of two ways. If the frame is untagged, the switch assigns the frame to an associated VLAN (based on the default VLAN ID of the receiving port). But if the frame is tagged, the switch uses the tagged VLAN ID to identify the port broadcast domain of the frame.

**Port Overlapping** – Port overlapping can be used to allow access to commonly shared network resources among different VLAN groups, such as file servers or printers. Note that if you implement VLANs which do not overlap, but still need to communicate, you can connect them by enabled routing on this switch.

**Untagged VLANs** – Untagged VLANs are typically used to reduce broadcast traffic and to increase security. A group of network users assigned to a VLAN form a broadcast domain that is separate from other VLANs configured on the switch. Packets are forwarded only between ports that are designated for the same VLAN. Untagged VLANs can be used to manually isolate user groups or subnets. However, you should use IEEE 802.3 tagged VLANs with GVRP whenever possible to fully automate VLAN registration.

**Automatic VLAN Registration** – GVRP (GARP VLAN Registration Protocol) defines a system whereby the switch can automatically learn the VLANs to which each end station should be assigned. If an end station (or its network adapter) supports the IEEE 802.1Q VLAN protocol, it can be configured to broadcast a message to your network indicating the VLAN groups it wants to join. When this switch receives these messages, it will automatically place the receiving port in the specified VLANs, and then forward the message to all other ports. When the message arrives at another switch that supports GVRP, it will also place the receiving port in the specified VLANs, and pass the message on to all other ports. VLAN requirements are propagated in this way throughout the network. This allows GVRP-compliant devices to be automatically configured for VLAN groups based solely on end station requests.


To implement GVRP in a network, first add the host devices to the required VLANs (using the operating system or other application software), so that these VLANs can be propagated onto the network. For both the edge switches attached directly to these hosts, and core switches in the network, enable GVRP on the links between these devices. You should also determine security boundaries in the network and

disable GVRP on the boundary ports to prevent advertisements from being propagated, or forbid those ports from joining restricted VLANs.



**Note:** If you have host devices that do not support GVRP, you should configure static or untagged VLANs for the switch ports connected to these devices (as described in [“Adding Static Members to VLANs” on page 163](#)). But you can still enable GVRP on these edge switches, as well as on the core switches in the network.

**Figure 75: Using GVRP**

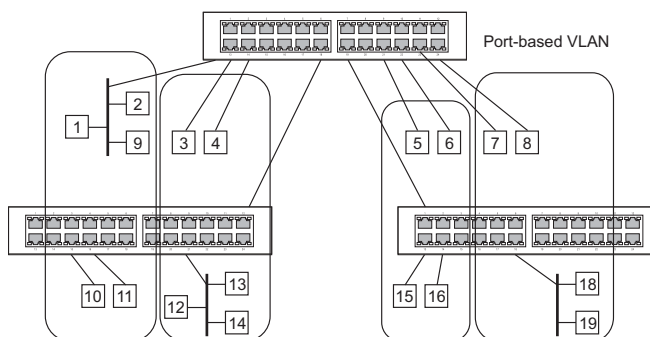

### Forwarding Tagged/Untagged Frames

If you want to create a small port-based VLAN for devices attached directly to a single switch, you can assign ports to the same untagged VLAN. However, to participate in a VLAN group that crosses several switches, you should create a VLAN for that group and enable tagging on all ports.

Ports can be assigned to multiple tagged or untagged VLANs. Each port on the switch is therefore capable of passing tagged or untagged frames. When forwarding a frame from this switch along a path that contains any VLAN-aware devices, the switch should include VLAN tags. When forwarding a frame from this switch along a path that does not contain any VLAN-aware devices (including the destination host), the switch must first strip off the VLAN tag before forwarding the frame. When the switch receives a tagged frame, it will pass this frame onto the VLAN(s) indicated by the frame tag. However, when this switch receives an untagged frame from a VLAN-unaware device, it first decides where to forward the frame, and then inserts a VLAN tag reflecting the ingress port's default VID.

## Configuring VLAN Groups

Use the VLAN > Static (Add) page to create or remove VLAN groups, set administrative status, or specify Remote VLAN type (see [“Configuring Remote Port Mirroring” on page 143](#)). To propagate information about VLAN groups used on this switch to external network devices, you must specify a VLAN ID for each of these groups.

### Parameters

These parameters are displayed:

#### Add

- ◆ **VLAN ID** – ID of VLAN or range of VLANs (1-4094).  
VLAN 1 is the default untagged VLAN.  
VLAN 4093 is dedicated for [Switch Clustering](#). Configuring this VLAN for other purposes may cause problems in the Clustering operation.
- ◆ **Status** – Enables or disables the specified VLAN.
- ◆ **Remote VLAN** – Reserves this VLAN for RSPAN (see [“Configuring Remote Port Mirroring” on page 143](#)).

#### Modify

- ◆ **VLAN ID** – ID of configured VLAN (1-4094).
- ◆ **VLAN Name** – Name of the VLAN (1 to 32 characters).
- ◆ **Status** – Enables or disables the specified VLAN.
- ◆ **L3 Interface** – Sets the interface to support Layer 3 configuration, and reserves memory space required to maintain additional information about this interface type. This parameter must be enabled before you can assign an IP address to a VLAN (see [“Setting the Switch’s IP Address \(IP Version 4\)” on page 635](#)).

#### Show

- ◆ **VLAN ID** – ID of configured VLAN.
- ◆ **VLAN Name** – Name of the VLAN.
- ◆ **Status** – Operational status of configured VLAN.
- ◆ **Remote VLAN** – Shows if RSPAN is enabled on this VLAN (see [“Configuring Remote Port Mirroring” on page 143](#)).
- ◆ **L3 Interface** – Shows if the interface supports Layer 3 configuration.

### Web Interface

To create VLAN groups:

1. Click VLAN, Static.
2. Select Add from the Action list.
3. Enter a VLAN ID or range of IDs.
4. Check Status to configure the VLAN as operational.
5. Specify whether the VLANs are to be used for remote port mirroring.
6. Click Apply.

**Figure 76: Creating Static VLANs**

The screenshot shows a web interface for configuring static VLANs. The title bar reads "VLAN > Static". Below the title bar, there is a dropdown menu labeled "Action:" with "Add" selected. The main configuration area contains three rows of settings: "VLAN ID (1-4094)" with a text input field containing "2" and a range selector "-"; "Status" with a checked checkbox labeled "Enabled"; and "Remote VLAN" with an unchecked checkbox labeled "Enabled". At the bottom right of the form, there are two buttons: "Apply" and "Revert".

To modify the configuration settings for VLAN groups:

1. Click VLAN, Static.
2. Select Modify from the Action list.
3. Select the identifier of a configured VLAN.
4. Modify the VLAN name or operational status as required.
5. Enable the L3 Interface field to specify that a VLAN will be used as a Layer 3 interface.

6. Click Apply.

**Figure 77: Modifying Settings for Static VLANs**

**VLAN > Static**

Action: Modify

VLAN ID (1-4094): 1

VLAN Name: R&D

Status: ☒ Enabled

L3 Interface: ☒ Enabled

Apply Revert

To show the configuration settings for VLAN groups:

1. Click VLAN, Static.
2. Select Show from the Action list.

**Figure 78: Showing Static VLANs**

**VLAN > Static**

Action: Show

Static VLAN List Total: 2

|                          | VLAN ID | VLAN Name   | Status  | Remote VLAN | L3 Interface |
|--------------------------|---------|-------------|---------|-------------|--------------|
| <input type="checkbox"/> | 1       | DefaultVlan | Enabled | Disabled    | Enabled      |
| <input type="checkbox"/> | 2       | R&D         | Enabled | Disabled    | Enabled      |

Delete Revert

### Adding Static Members to VLANs

Use the VLAN > Static (Edit Member by VLAN, Edit Member by Interface, or Edit Member by Interface Range) pages to configure port members for the selected VLAN index, interface, or a range of interfaces. Use the menus for editing port members to configure the VLAN behavior for specific interfaces, including the mode of operation (Hybrid or 1Q Trunk), the default VLAN identifier (PVID), accepted frame types, and ingress filtering. Assign ports as tagged if they are connected to 802.1Q VLAN compliant devices, or untagged they are not connected to any VLAN-aware devices. Or configure a port as forbidden to prevent the switch from automatically adding it to a VLAN via the GVRP protocol.

### Parameters

These parameters are displayed:

*Edit Member by VLAN*

- ◆ **VLAN** – ID of configured VLAN (1-4094).
- ◆ **Interface** – Displays a list of ports or trunks.

- ◆ **Port** – Port Identifier. (Range: 1-52)
- ◆ **Trunk** – Trunk Identifier. (Range: 1-16)
- ◆ **Mode** – Indicates VLAN membership mode for an interface. (Default: Hybrid)
  - **Access** – Sets the port to operate as an untagged interface. The port transmits and receives untagged frames on a single VLAN only.
  - **Hybrid** – Specifies a hybrid VLAN interface. The port may transmit tagged or untagged frames.
  - **1Q Trunk** – Specifies a port as an end-point for a VLAN trunk. A trunk is a direct link between two switches, so the port transmits tagged frames that identify the source VLAN. Note that frames belonging to the port's default VLAN (i.e., associated with the PVID) are also transmitted as tagged frames.
- ◆ **PVID** – VLAN ID assigned to untagged frames received on the interface. (Default: 1)

When using Access mode, and an interface is assigned to a new VLAN, its PVID is automatically set to the identifier for that VLAN. When using Hybrid mode, the PVID for an interface can be set to any VLAN for which it is an untagged member.
- ◆ **Acceptable Frame Type** – Sets the interface to accept all frame types, including tagged or untagged frames, or only tagged frames. When set to receive all frame types, any received frames that are untagged are assigned to the default VLAN. (Options: All, Tagged; Default: All)
- ◆ **Ingress Filtering** – Determines how to process frames tagged for VLANs for which the ingress port is not a member. (Default: Disabled)
  - Ingress filtering only affects tagged frames.
  - If ingress filtering is disabled and a port receives frames tagged for VLANs for which it is not a member, these frames will be flooded to all other ports (except for those VLANs explicitly forbidden on this port).
  - If ingress filtering is enabled and a port receives frames tagged for VLANs for which it is not a member, these frames will be discarded.
  - Ingress filtering does not affect VLAN independent BPDU frames, such as GVRP or STP. However, they do affect VLAN dependent BPDU frames, such as GMRP.
- ◆ **Membership Type** – Select VLAN membership for each interface by marking the appropriate radio button for a port or trunk:
  - **Tagged**: Interface is a member of the VLAN. All packets transmitted by the port will be tagged, that is, carry a tag and therefore carry VLAN or CoS information.



- **Untagged:** Interface is a member of the VLAN. All packets transmitted by the port will be untagged, that is, not carry a tag and therefore not carry VLAN or CoS information. Note that an interface must be assigned to at least one group as an untagged port.
- **Forbidden:** Interface cannot be included as a member of the VLAN, either manually or via GVRP. For more information, see [“Configuring Dynamic VLAN Registration” on page 167](#).  
  
This attribute cannot be configured if the specified VLAN does not exist on the switch.
- **None:** Interface is not a member of the VLAN. Packets associated with this VLAN will not be transmitted by the interface.



---

**Note:** VLAN 1 is the default untagged VLAN containing all ports on the switch using Hybrid mode.

---

#### *Edit Member by Interface*

All parameters are the same as those described under the preceding section for Edit Member by VLAN.

#### *Edit Member by Interface Range*

All parameters are the same as those described under the earlier section for Edit Member by VLAN, except for the items shown below.

- ◆ **Port Range** – Displays a list of ports. (Range: 1-52)
- ◆ **Trunk Range** – Displays a list of ports. (Range: 1-16)



---

**Note:** The PVID, acceptable frame type, and ingress filtering parameters for each interface within the specified range must be configured on either the Edit Member by VLAN or Edit Member by Interface page.

---

#### **Web Interface**

To configure static members by the VLAN index:

1. Click VLAN, Static.
2. Select Edit Member by VLAN from the Action list.
3. Select a VLAN from the scroll-down list.
4. Set the Interface type to display as Port or Trunk.

5. Modify the settings for any interface as required.
6. Click Apply.

**Figure 79: Configuring Static Members by VLAN Index**

The screenshot shows the 'VLAN > Static' configuration page. The 'Action' dropdown is set to 'Edit Member by VLAN'. The 'VLAN' dropdown is set to '1'. The 'Interface' radio buttons are set to 'Port'. Below the configuration fields is a table titled 'Static VLAN Port Member List' with a total of 52 members. The table has columns for Port, Mode, PVID (1-4094), Acceptable Frame Type, Ingress Filtering, and Membership Type (Tagged, Untagged, Forbidden, None). The table shows 5 ports, all configured as Hybrid mode with PVID 1, Acceptable Frame Type All, and Ingress Filtering Enabled. The Membership Type for all ports is Untagged.

| Port | Mode   | PVID<br>(1-4094) | Acceptable Frame Type | Ingress Filtering | Membership Type |          |           |      |
|------|--------|------------------|-----------------------|-------------------|-----------------|----------|-----------|------|
|      |        |                  |                       |                   | Tagged          | Untagged | Forbidden | None |
| 1    | Hybrid | 1                | All                   | Enabled           |                 |          |           |      |
| 2    | Hybrid | 1                | All                   | Enabled           |                 |          |           |      |
| 3    | Hybrid | 1                | All                   | Enabled           |                 |          |           |      |
| 4    | Hybrid | 1                | All                   | Enabled           |                 |          |           |      |
| 5    | Hybrid | 1                | All                   | Enabled           |                 |          |           |      |

To configure static members by interface:

1. Click VLAN, Static.
2. Select Edit Member by Interface from the Action list.
3. Select a port or trunk configure.
4. Modify the settings for any interface as required.
5. Click Apply.

**Figure 80: Configuring Static VLAN Members by Interface**

The screenshot shows the 'VLAN > Static' configuration page. The 'Action' dropdown is set to 'Edit Member by Interface'. The 'Interface' radio buttons are set to 'Port' with a dropdown set to '1'. The 'Mode' dropdown is set to 'Hybrid', 'PVID' is set to '1', 'Acceptable Frame Type' is set to 'All', and 'Ingress Filtering' is checked 'Enabled'. Below the configuration fields is a table titled 'Static VLAN Membership List' with a total of 2 members. The table has columns for VLAN and Membership Type (Tagged, Untagged, Forbidden, None). The table shows 2 VLANs, both configured with Untagged membership type.

| VLAN | Membership Type |          |           |      |
|------|-----------------|----------|-----------|------|
|      | Tagged          | Untagged | Forbidden | None |
| 1    |                 |          |           |      |
| 2    |                 |          |           |      |

At the bottom of the table are 'Apply' and 'Revert' buttons.

To configure static members by interface range:

1. Click VLAN, Static.
2. Select Edit Member by Interface Range from the Action list.
3. Set the Interface type to display as Port or Trunk.
4. Enter an interface range.
5. Modify the VLAN parameters as required. Remember that the PVID, acceptable frame type, and ingress filtering parameters for each interface within the specified range must be configured on either the Edit Member by VLAN or Edit Member by Interface page.
6. Click Apply.

**Figure 81: Configuring Static VLAN Members by Interface Range**

The screenshot shows the 'VLAN > Static' configuration page. At the top, the 'Action:' dropdown is set to 'Edit Member by Interface Range'. Below this, the 'Interface' section has radio buttons for 'Port' (selected) and 'Trunk'. The 'Port Range (1-52)' is represented by two input boxes separated by a hyphen. The 'Mode' is set to 'Hybrid' in a dropdown menu. The 'VLAN ID (1-4094)' is also represented by two input boxes separated by a hyphen. The 'Membership Type' section has radio buttons for 'Tagged' (selected), 'Untagged', 'Forbidden', and 'None'. At the bottom right, there are 'Apply' and 'Revert' buttons.

## Configuring Dynamic VLAN Registration

Use the VLAN > Dynamic page to enable GVRP globally on the switch, or to enable GVRP and adjust the protocol timers per interface.

### Parameters

These parameters are displayed:

#### *Configure General*

- ◆ **GVRP Status** – GVRP defines a way for switches to exchange VLAN information in order to register VLAN members on ports across the network. VLANs are dynamically configured based on join messages issued by host devices and propagated throughout the network. GVRP must be enabled to permit automatic VLAN registration, and to support VLANs which extend beyond the local switch. (Default: Disabled)

*Configure Interface*

- ◆ **Interface** – Displays a list of ports or trunks.
- ◆ **Port** – Port Identifier. (Range: 1-52)
- ◆ **Trunk** – Trunk Identifier. (Range: 1-16)
- ◆ **GVRP Status** – Enables/disables GVRP for the interface. GVRP must be globally enabled for the switch before this setting can take effect (using the Configure General page). When disabled, any GVRP packets received on this port will be discarded and no GVRP registrations will be propagated from other ports. (Default: Disabled)

GVRP cannot be enabled for ports set to Access mode (see [“Adding Static Members to VLANs” on page 163](#)).

- ◆ **GVRP Timers** – Timer settings must follow this rule:  
 $2 \times (\text{join timer}) < \text{leave timer} < \text{leaveAll timer}$ 
  - **Join** – The interval between transmitting requests/queries to participate in a VLAN group. (Range: 20-1000 centiseconds; Default: 20 centiseconds)
  - **Leave** – The interval a port waits before leaving a VLAN group. This time should be set to more than twice the join time. This ensures that after a Leave or LeaveAll message has been issued, the applicants can rejoin before the port actually leaves the group. (Range: 60-3000 centiseconds; Default: 60 centiseconds)
  - **LeaveAll** – The interval between sending out a LeaveAll query message for VLAN group participants and the port leaving the group. This interval should be considerably larger than the Leave Time to minimize the amount of traffic generated by nodes rejoining the group. (Range: 500-18000 centiseconds; Default: 1000 centiseconds)

*Show Dynamic VLAN – Show VLAN*

**VLAN ID** – Identifier of a VLAN this switch has joined through GVRP.

**VLAN Name** – Name of a VLAN this switch has joined through GVRP.

**Status** – Indicates if this VLAN is currently operational.  
(Display Values: Enabled, Disabled)

*Show Dynamic VLAN – Show VLAN Member*

- ◆ **VLAN** – Identifier of a VLAN this switch has joined through GVRP.
- ◆ **Interface** – Displays a list of ports or trunks which have joined the selected VLAN through GVRP.

### Web Interface

To configure GVRP on the switch:

1. Click VLAN, Dynamic.
2. Select Configure General from the Step list.
3. Enable or disable GVRP.
4. Click Apply.

**Figure 82: Configuring Global Status of GVRP**

The screenshot shows the 'VLAN > Dynamic' configuration page. The 'Step' dropdown is set to '1. Configure General'. Under 'GVRP Status', the 'Enabled' checkbox is checked. At the bottom right, there are 'Apply' and 'Revert' buttons.

To configure GVRP status and timers on a port or trunk:

1. Click VLAN, Dynamic.
2. Select Configure Interface from the Step list.
3. Set the Interface type to display as Port or Trunk.
4. Modify the GVRP status or timers for any interface.
5. Click Apply.

**Figure 83: Configuring GVRP for an Interface**


The screenshot shows the 'VLAN > Dynamic' configuration page with the 'Step' dropdown set to '2. Configure Interface'. The 'Interface' type is set to 'Port'. Below this, there is a 'Port List' table with 52 total ports. The table has columns for 'Port', 'GVRP Status', and 'GARP Timer (centiseconds)' with sub-columns for 'Join (20-1000)', 'Leave (60-3000)', and 'LeaveAll (500-18000)'. The first five rows of the table are visible, showing ports 1 through 5. Port 3 is the only one with 'GVRP Status' checked.

| Port | GVRP Status                                 | GARP Timer (centiseconds) |                 |                      |
|------|---|---------------------------|-----------------|----------------------|
|      |   | Join (20-1000)            | Leave (60-3000) | LeaveAll (500-18000) |
| 1    | <input type="checkbox"/> Enabled            | 20                        | 60              | 1000                 |
| 2    | <input type="checkbox"/> Enabled            | 20                        | 60              | 1000                 |
| 3    | <input checked="" type="checkbox"/> Enabled | 20                        | 60              | 1000                 |
| 4    | <input type="checkbox"/> Enabled            | 20                        | 60              | 1000                 |
| 5    | <input type="checkbox"/> Enabled            | 20                        | 60              | 1000                 |

To show the dynamic VLAN joined by this switch:

1. Click VLAN, Dynamic.
2. Select Show Dynamic VLAN from the Step list.
3. Select Show VLAN from the Action list.

**Figure 84: Showing Dynamic VLANs Registered on the Switch**

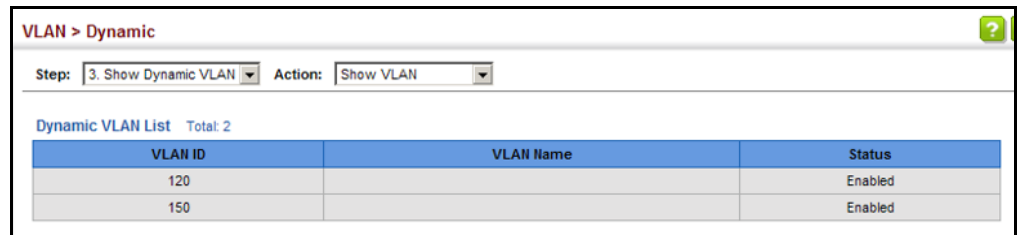


The screenshot shows the 'VLAN > Dynamic' configuration page. At the top, there is a breadcrumb 'VLAN > Dynamic' and a help icon. Below this, there are two dropdown menus: 'Step: 3. Show Dynamic VLAN' and 'Action: Show VLAN'. The main content area is titled 'Dynamic VLAN List' with a 'Total: 2' count. It contains a table with three columns: 'VLAN ID', 'VLAN Name', and 'Status'.

| VLAN ID | VLAN Name | Status  |
|---------|-----------|---------|
| 120     |           | Enabled |
| 150     |           | Enabled |

To show the members of a dynamic VLAN:

1. Click VLAN, Dynamic.
2. Select Show Dynamic VLAN from the Step list.
3. Select Show VLAN Members from the Action list.

**Figure 85: Showing the Members of a Dynamic VLAN**

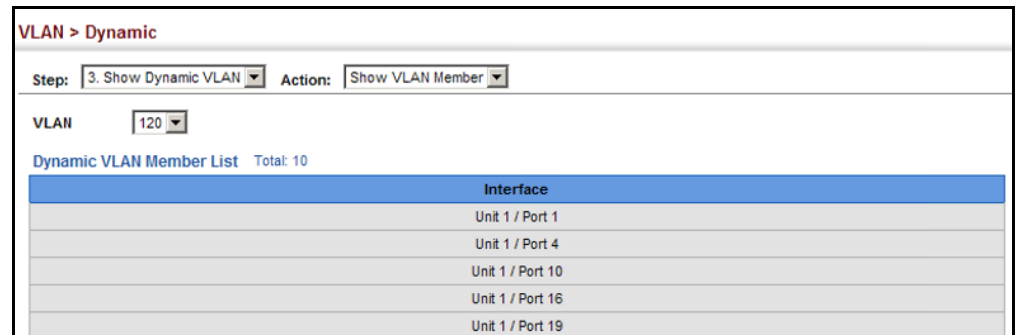

The screenshot shows the 'VLAN > Dynamic' configuration page. At the top, there is a breadcrumb 'VLAN > Dynamic' and a help icon. Below this, there are two dropdown menus: 'Step: 3. Show Dynamic VLAN' and 'Action: Show VLAN Member'. Below these, there is a 'VLAN' dropdown menu set to '120'. The main content area is titled 'Dynamic VLAN Member List' with a 'Total: 10' count. It contains a table with two columns: 'Interface'.

| Interface        |
|------------------|
| Unit 1 / Port 1  |
| Unit 1 / Port 4  |
| Unit 1 / Port 10 |
| Unit 1 / Port 16 |
| Unit 1 / Port 19 |

---

## IEEE 802.1Q Tunneling

IEEE 802.1Q Tunneling (QinQ) is designed for service providers carrying traffic for multiple customers across their networks. QinQ tunneling is used to maintain customer-specific VLAN and Layer 2 protocol configurations even when different customers use the same internal VLAN IDs. This is accomplished by inserting Service Provider VLAN (SPVLAN) tags into the customer's frames when they enter the service provider's network, and then stripping the tags when the frames leave the network.

A service provider's customers may have specific requirements for their internal VLAN IDs and number of VLANs supported. VLAN ranges required by different customers in the same service-provider network might easily overlap, and traffic passing through the infrastructure might be mixed. Assigning a unique range of VLAN IDs to each customer would restrict customer configurations, require intensive processing of VLAN mapping tables, and could easily exceed the maximum VLAN limit of 4096.


QinQ tunneling uses a single Service Provider VLAN (SPVLAN) for customers who have multiple VLANs. Customer VLAN IDs are preserved and traffic from different customers is segregated within the service provider's network even when they use the same customer-specific VLAN IDs. QinQ tunneling expands VLAN space by using a VLAN-in-VLAN hierarchy, preserving the customer's original tagged packets, and adding SPVLAN tags to each frame (also called double tagging).

A port configured to support QinQ tunneling must be set to tunnel port mode. The Service Provider VLAN (SPVLAN) ID for the specific customer must be assigned to the QinQ tunnel access port on the edge switch where the customer traffic enters the service provider's network. Each customer requires a separate SPVLAN, but this VLAN supports all of the customer's internal VLANs. The QinQ tunnel uplink port that passes traffic from the edge switch into the service provider's metro network must also be added to this SPVLAN. The uplink port can be added to multiple SPVLANs to carry inbound traffic for different customers onto the service provider's network.

When a double-tagged packet enters another trunk port in an intermediate or core switch in the service provider's network, the outer tag is stripped for packet processing. When the packet exits another trunk port on the same core switch, the same SPVLAN tag is again added to the packet.

When a packet enters the trunk port on the service provider's egress switch, the outer tag is again stripped for packet processing. However, the SPVLAN tag is not added when it is sent out the tunnel access port on the edge switch into the customer's network. The packet is sent as a normal IEEE 802.1Q-tagged frame, preserving the original VLAN numbers used in the customer's network.

**Figure 86: QinQ Operational Concept**

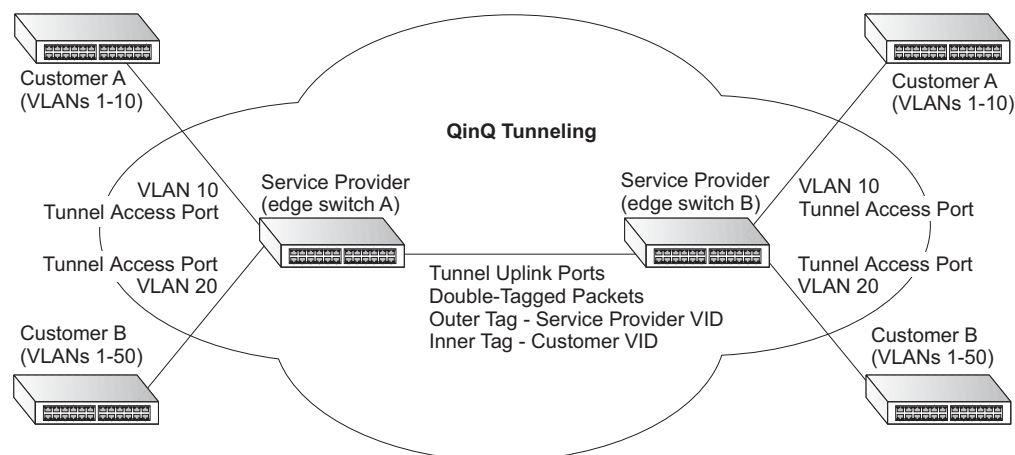

*Layer 2 Flow for Packets Coming into a Tunnel Access Port*

A QinQ tunnel port may receive either tagged or untagged packets. No matter how many tags the incoming packet has, it is treated as tagged packet.

The ingress process does source and destination lookups. If both lookups are successful, the ingress process writes the packet to memory. Then the egress process transmits the packet. Packets entering a QinQ tunnel port are processed in the following manner:

1. An SPVLAN tag is added to all outbound packets on the SPVLAN interface, no matter how many tags they already have. The switch constructs and inserts the outer tag (SPVLAN) into the packet based on the default VLAN ID and Tag Protocol Identifier (TPID, that is, the ether-type of the tag), unless otherwise defined as described under [“Creating CVLAN to SPVLAN Mapping Entries” on page 176](#). The priority of the inner tag is copied to the outer tag if it is a tagged or priority tagged packet.
2. After successful source and destination lookup, the ingress process sends the packet to the switching process with two tags. If the incoming packet is untagged, the outer tag is an SPVLAN tag, and the inner tag is a dummy tag (8100 0000). If the incoming packet is tagged, the outer tag is an SPVLAN tag, and the inner tag is a CVLAN tag.
3. After packet classification through the switching process, the packet is written to memory with one tag (an outer tag) or with two tags (both an outer tag and inner tag).
4. The switch sends the packet to the proper egress port.
5. If the egress port is an untagged member of the SPVLAN, the outer tag will be stripped. If it is a tagged member, the outgoing packets will have two tags.



### *Layer 2 Flow for Packets Coming into a Tunnel Uplink Port*

An uplink port receives one of the following packets:

- ◆ Untagged
- ◆ One tag (CVLAN or SPVLAN)
- ◆ Double tag (CVLAN + SPVLAN)

The ingress process does source and destination lookups. If both lookups are successful, the ingress process writes the packet to memory. Then the egress process transmits the packet. Packets entering a QinQ uplink port are processed in the following manner:

1. If incoming packets are untagged, the PVID VLAN native tag is added.
2. If the ether-type of an incoming packet (single or double tagged) is not equal to the TPID of the uplink port, the VLAN tag is determined to be a Customer VLAN (CVLAN) tag. The uplink port's PVID VLAN native tag is added to the packet. This outer tag is used for learning and switching packets within the service provider's network. The TPID must be configured on a per port basis, and the verification cannot be disabled.
3. If the ether-type of an incoming packet (single or double tagged) is equal to the TPID of the uplink port, no new VLAN tag is added. If the uplink port is not the member of the outer VLAN of the incoming packets, the packet will be dropped when ingress filtering is enabled. If ingress filtering is not enabled, the packet will still be forwarded. If the VLAN is not listed in the VLAN table, the packet will be dropped.
4. After successful source and destination lookups, the packet is double tagged. The switch uses the TPID of 0x8100 to indicate that an incoming packet is double-tagged. If the outer tag of an incoming double-tagged packet is equal to the port TPID and the inner tag is 0x8100, it is treated as a double-tagged packet. If a single-tagged packet has 0x8100 as its TPID, and port TPID is not 0x8100, a new VLAN tag is added and it is also treated as double-tagged packet.
5. If the destination address lookup fails, the packet is sent to all member ports of the outer tag's VLAN.
6. After packet classification, the packet is written to memory for processing as a single-tagged or double-tagged packet.
7. The switch sends the packet to the proper egress port.
8. If the egress port is an untagged member of the SPVLAN, the outer tag will be stripped. If it is a tagged member, the outgoing packet will have two tags.

### *Configuration Limitations for QinQ*

- ◆ The native VLAN of uplink ports should not be used as the SPVLAN. If the SPVLAN is the uplink port's native VLAN, the uplink port must be an untagged member of the SPVLAN. Then the outer SPVLAN tag will be stripped when the packets are sent out. Another reason is that it causes non-customer packets to be forwarded to the SPVLAN.
- ◆ Static trunk port groups are compatible with QinQ tunnel ports as long as the QinQ configuration is consistent within a trunk port group.
- ◆ The native VLAN (VLAN 1) is not normally added to transmitted frames. Avoid using VLAN 1 as an SPVLAN tag for customer traffic to reduce the risk of misconfiguration. Instead, use VLAN 1 as a management VLAN instead of a data VLAN in the service provider network.
- ◆ There are some inherent incompatibilities between Layer 2 and Layer 3 switching:
  - Tunnel ports do not support IP Access Control Lists.
  - Layer 3 Quality of Service (QoS) and other QoS features containing Layer 3 information are not supported on tunnel ports.
  - Spanning tree bridge protocol data unit (BPDU) filtering is automatically disabled on a tunnel port.

### *General Configuration Guidelines for QinQ*

1. Enable Tunnel Status, and set the Tag Protocol Identifier (TPID) value of the tunnel access port (in the Ethernet Type field). This step is required if the attached client is using a nonstandard 2-byte ethertype to identify 802.1Q tagged frames. The default ethertype value is 0x8100. (See [“Enabling QinQ Tunneling on the Switch” on page 175.](#))
2. Create a Service Provider VLAN, also referred to as an SPVLAN (see [“Configuring VLAN Groups” on page 161.](#))
3. Configure the QinQ tunnel access port to Access mode (see [“Adding an Interface to a QinQ Tunnel” on page 178.](#))
4. Configure the QinQ tunnel access port to join the SPVLAN as an untagged member (see [“Adding Static Members to VLANs” on page 163.](#))
5. Configure the SPVLAN ID as the native VID on the QinQ tunnel access port (see [“Adding Static Members to VLANs” on page 163.](#))
6. Configure the QinQ tunnel uplink port to Uplink mode (see [“Adding an Interface to a QinQ Tunnel” on page 178.](#))

7. Configure the QinQ tunnel uplink port to join the SPVLAN as a tagged member (see [“Adding Static Members to VLANs” on page 163](#)).

### Enabling QinQ Tunneling on the Switch

Use the VLAN > Tunnel (Configure Global) page to configure the switch to operate in IEEE 802.1Q (QinQ) tunneling mode, which is used for passing Layer 2 traffic across a service provider’s metropolitan area network. You can also globally set the Tag Protocol Identifier (TPID) value of the tunnel port if the attached client is using a nonstandard 2-byte ethertype to identify 802.1Q tagged frames.

#### Parameters

These parameters are displayed:

- ◆ **Tunnel Status** – Sets the switch to QinQ mode. (Default: Disabled)
- ◆ **Ethernet Type** – The Tag Protocol Identifier (TPID) specifies the ethertype of incoming packets on a tunnel port. (Range: hexadecimal 0800-FFFF; Default: 8100)

Use this field to set a custom 802.1Q ethertype value for the 802.1Q Tunnel TPID. This feature allows the switch to interoperate with third-party switches that do not use the standard 0x8100 ethertype to identify 802.1Q-tagged frames. For example, if 0x1234 is set as the custom 802.1Q ethertype on a trunk port, incoming frames containing that ethertype are assigned to the VLAN contained in the tag following the ethertype field, as they would be with a standard 802.1Q trunk. Frames arriving on the port containing any other ethertype are looked upon as untagged frames, and assigned to the native VLAN of that port.

The specified ethertype only applies to ports configured in Uplink mode (see [“Adding an Interface to a QinQ Tunnel” on page 178](#)). If the port is in normal mode, the TPID is always 8100. If the port is in Access mode, received packets are processed as untagged packets.

Avoid using well-known ethertypes for the TPID unless you can eliminate all side effects. For example, setting the TPID to 0800 hexadecimal (which is used for IPv4) will interfere with management access through the web interface.

#### Web Interface

To enable QinQ Tunneling on the switch:

1. Click VLAN, Tunnel.
2. Select Configure Global from the Step list.
3. Enable Tunnel Status, and specify the TPID if a client attached to a tunnel port is using a non-standard ethertype to identify 802.1Q tagged frames.
4. Click Apply.

Figure 87: Enabling QinQ Tunneling

VLAN > Tunnel

Step: 1. Configure Global

Tunnel Status ☒ Enabled

Ethernet Type   
(800-FFFF, hexadecimal value)

Apply Revert

### Creating CVLAN to SPVLAN Mapping Entries

Use the VLAN > Tunnel (Configure Service) page to create a CVLAN to SPVLAN mapping entry.

#### Command Usage

- ◆ The inner VLAN tag of a customer packet entering the edge router of a service provider's network is mapped to an outer tag indicating the service provider VLAN that will carry this traffic across the 802.1Q tunnel. By default, the outer tag is based on the default VID of the edge router's ingress port. This process is performed in a transparent manner as described under ["IEEE 802.1Q Tunneling" on page 171](#).
- ◆ When priority bits are found in the inner tag, these are also copied to the outer tag. This allows the service provider to differentiate service based on the indicated priority and appropriate methods of queue management at intermediate nodes across the tunnel.
- ◆ Rather than relying on standard service paths and priority queuing, QinQ VLAN mapping can be used to further enhance service by defining a set of differentiated service pathways to follow across the service provider's network for traffic arriving from specified inbound customer VLANs.
- ◆ Note that all customer interfaces should be configured as access interfaces (that is, a user-to-network interface) and service provider interfaces as uplink interfaces (that is, a network-to-network interface). Use the Configure Interface page described in the next section to set an interface to access or uplink mode.

#### Parameters

These parameters are displayed:

- ◆ **Port** – Port identifier. (Range: 1-52)
- ◆ **Customer VLAN ID** – VLAN ID for the inner VLAN tag. (Range: 1-4094)
- ◆ **Service VLAN ID** – VLAN ID for the outer VLAN tag. (Range: 1-4094)

## Web Interface

To configure a mapping entry:

1. Click VLAN, Tunnel.
2. Select Configure Service from the Step list.
3. Select Add from the Action list.
4. Select an interface from the Port list.
5. Specify the CVID to SVID mapping for packets exiting the specified port.
6. Click Apply.

**Figure 88: Configuring CVLAN to SPVLAN Mapping Entries**

The screenshot shows the 'VLAN > Tunnel' configuration page. The 'Step' dropdown is set to '2. Configure Service' and the 'Action' dropdown is set to 'Add'. The 'Port' dropdown is set to '1'. Below this, there are two input fields: 'Customer VLAN ID (1-4094)' and 'Service VLAN ID (1-4094)'. At the bottom right, there are 'Apply' and 'Revert' buttons.

To show the mapping table:

1. Click VLAN, Tunnel.
2. Select Configure Service from the Step list.
3. Select Show from the Action list.
4. Select an interface from the Port list.

**Figure 89: Showing CVLAN to SPVLAN Mapping Entries**

The screenshot shows the 'VLAN > Tunnel' configuration page with the 'Action' dropdown set to 'Show'. The 'Port' dropdown is set to '1'. Below the dropdowns, there is a table titled 'Tunnel Service Subscriptions List' with a 'Total: 2' indicator. The table has three columns: a checkbox column, 'Customer VLAN ID', and 'Service VLAN ID'. There are two rows of data. At the bottom right, there are 'Delete' and 'Revert' buttons.

|                          | Customer VLAN ID | Service VLAN ID |
|--------------------------|------------------|-----------------|
| <input type="checkbox"/> | 1                | 1               |
| <input type="checkbox"/> | 2                | 200             |

The preceding example sets the SVID to 99 in the outer tag for egress packets exiting port 1 when the packet's CVID is 2. For a more detailed example, see the "switchport dot1q-tunnel service match cvd" command in the *CLI Reference Guide*.

### **Adding an Interface to a QinQ Tunnel**

Follow the guidelines under ["Enabling QinQ Tunneling on the Switch"](#) in the preceding section to set up a QinQ tunnel on the switch. Then use the VLAN > Tunnel (Configure Interface) page to set the tunnel mode for any participating interface.

#### **Command Usage**

- ◆ Use the Configure Global page to set the switch to QinQ mode before configuring a tunnel access port or tunnel uplink port (see ["Enabling QinQ Tunneling on the Switch" on page 175](#)). Also set the Tag Protocol Identifier (TPID) value of the tunnel access port if the attached client is using a nonstandard 2-byte ethertype to identify 802.1Q tagged frames.
- ◆ Then use the Configure Interface page to set the access interface on the edge switch to Access mode, and set the uplink interface on the switch attached to the service provider network to Uplink mode.

#### **Parameters**

These parameters are displayed:

- ◆ **Interface** – Displays a list of ports or trunks.
- ◆ **Port** – Port Identifier. (Range: 1-52)
- ◆ **Trunk** – Trunk Identifier. (Range: 1-16)
- ◆ **Mode** – Sets the VLAN membership mode of the port.
  - **None** – The port operates in its normal VLAN mode. (This is the default.)
  - **Access** – Configures QinQ tunneling for a client access port to segregate and preserve customer VLAN IDs for traffic crossing the service provider network.
  - **Uplink** – Configures QinQ tunneling for an uplink port to another device within the service provider network.

#### **Web Interface**

To add an interface to a QinQ tunnel:

1. Click VLAN, Tunnel.
2. Select Configure Interface from the Step list.
3. Set the mode for any tunnel access port to Access and the tunnel uplink port to Uplink.

4. Click Apply.

**Figure 90: Adding an Interface to a QinQ Tunnel**

VLAN > Tunnel

Step: 3. Configure Interface

Interface: ☒ Port ☐ Trunk

802.1Q Tunnel Port List Total: 52

| Port | Mode   |
|------|--------|
| 1    | Uplink |
| 2    | Access |
| 3    | None   |
| 4    | None   |
| 5    | None   |

## L2PT Tunneling

When Layer 2 Protocol Tunneling (L2PT) is not used, protocol packets (e.g., STP) are flooded to 802.1Q access ports on the same edge switch, but filtered from 802.1Q tunnel ports. This creates disconnected protocol domains in the customer's network.

L2PT can be used to pass various types of protocol packets belonging to the same customer transparently across a service provider's network. In this way, normally segregated network segments can be configured to function inside a common protocol domain.

### Command Usage

- ◆ L2PT encapsulates protocol packets entering ingress ports on the service provider's edge switch, replacing the destination MAC address with a proprietary MAC address (for example, the spanning tree protocol uses 10-12-CF-00-00-02), a reserved address for other specified protocol types (as defined in IEEE 802.1ad – Provider Bridges), or a user-defined address. All intermediate switches carrying this traffic across the service provider's network treat these encapsulated packets in the same way as normal data, forwarding them to the tunnel's egress port. The egress port decapsulates these packets, restores the proper protocol and MAC address information, and then floods them onto the same VLANs at the customer's remote site (via all of the appropriate tunnel ports and access ports<sup>4</sup> connected to the same metro VLAN).
- ◆ The way in which L2PT processes packets is based on the following criteria – (1) packet is received on a QinQ uplink port, (2) packet is received on a QinQ access port, or (3) received packet is Cisco-compatible L2PT (i.e., as indicated by a proprietary MAC address).

4. Access ports in this context are 802.1Q trunk ports.

*Processing protocol packets defined in IEEE 802.1ad – Provider Bridges*

- ◆ When an IEEE 802.1ad protocol packet is received on an uplink port (i.e., an 802.1Q tunnel ingress port connecting the edge switch to the service provider network)
  - with the destination address 01-80-C2-00-00-00,0B~0F (C-VLAN tag), it is forwarded to all QinQ uplink ports and QinQ access ports in the same S-VLAN for which L2PT is enabled for that protocol.
  - with the destination address 01-80-C2-00-00-01~0A (S-VLAN tag), it is filtered, decapsulated, and processed locally by the switch if the protocol is supported.
- ◆ When a protocol packet is received on an access port (i.e., an 802.1Q trunk port connecting the edge switch to the local customer network)
  - with the destination address 01-80-C2-00-00-00,0B~0F (C-VLAN), and
    - L2PT is enabled on the port, the frame is forwarded to all QinQ uplink ports and QinQ access ports on which L2PT is enabled for that protocol in the same S-VLAN.
    - L2PT is disabled on the port, the frame is decapsulated and processed locally by the switch if the protocol is supported.
  - with destination address 01-80-C2-00-00-01~0A (S-VLAN), the frame is filtered, decapsulated, and processed locally by the switch if the protocol is supported.

*Processing Cisco-compatible protocol packets*

- ◆ When a Cisco-compatible L2PT packet is received on an uplink port, and
  - recognized as a CDP/VTP/STP/PVST+ protocol packet (where STP means STP/RSTP/MSTP), it is forwarded to the following ports in the same S-VLAN: (a) all access ports for which L2PT has been disabled, and (b) all uplink ports.
  - recognized as a Generic Bridge PDU Tunneling (GBPT) protocol packet (i.e., having the destination address 01-00-0C-CD-CD-D0), it is forwarded to the following ports in the same S-VLAN:
    - other access ports for which L2PT is enabled after decapsulating the packet and restoring the proper protocol and MAC address information.
    - all uplink ports.
- ◆ When a Cisco-compatible L2PT packet is received on an access port, and
  - recognized as a CDP/VTP/STP/PVST+ protocol packet, and
    - L2PT is enabled on this port, it is forwarded to the following ports in the same S-VLAN: (a) other access ports for which L2PT is enabled, and (b) uplink ports after rewriting the destination address to make it a



GBPT protocol packet (i.e., setting the destination address to 01-00-0C-CD-CD-D0).

- L2PT is disabled on this port, it is forwarded to the following ports in the same S-VLAN: (a) other access ports for which L2PT is disabled, and (b) all uplink ports.
- recognized as a GBPT protocol packet (i.e., having the destination address 01-00-0C-CD-CD-D0), and
  - L2PT is enabled on this port, it is forwarded to other access ports in the same S-VLAN for which L2PT is enabled
  - L2PT is disabled on this port, it is forwarded to the following ports in the same S-VLAN: (a) other access ports for which L2PT is disabled, and (b) all uplink ports.

#### *L2PT Functional Requirements*

- ◆ For L2PT to function properly, QinQ must be enabled on the switch (see [“Enabling QinQ Tunneling on the Switch”](#)), and the interface configured to 802.1Q uplink mode (see [“Adding an Interface to a QinQ Tunnel”](#)).

### **Configuring the L2PT Tunnel Address**

Use the VLAN > L2PT (Configure Global) page to configure the destination MAC address for Layer 2 Protocol Tunneling.

#### **Parameters**

These parameters are displayed:

**Tunnel MAC Address** – The switch rewrites the destination MAC address in all upstream L2PT protocol packets (e.g., STP BPDUs) to this value, and forwards them on to uplink ports. (Format xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx; Default: 01-12-CF-00-00-02, proprietary tunnel address)

#### **Web Interface**

To configure the destination MAC address for L2PT:

1. Click VLAN, L2PT.
2. Select Configure Global from the Step list.
3. Set the tunnel MAC address.
4. Click Apply.

Figure 91: Configuring the L2PT Tunnel Address

The screenshot shows a web interface for configuring L2PT. At the top, it says 'VLAN > L2PT'. Below that, there's a 'Step:' dropdown menu with '1. Configure Global' selected. The main section is 'Tunnel MAC Address', which has a text input field containing '01-12-CF-00-00-02'. To the right of the input field is a placeholder text '(XX-XX-XX-XX-XX of xxxxxxxxxxxx)'. At the bottom right of the form are two buttons: 'Apply' and 'Revert'.

### Enabling L2PT for Selected Interfaces

Use the VLAN > L2PT (Configure Interface) page to enable Layer 2 Protocol Tunneling on selected interfaces.

#### Parameters

These parameters are displayed:

- ◆ **Interface** – Port or trunk identifier.
- ◆ **CDP** – Cisco Discovery Protocol
- ◆ **LACP** – Link Aggreation Control Protocol
- ◆ **LLDP** – Link Layer Discovery Protocol
- ◆ **PVST+** – Cisco Per VLAN Spanning Tree Plus
- ◆ **Spanning Tree** – Spanning Tree (STP, RSTP, MSTP)
- ◆ **VTP** – Cisco VLAN Trunking Protocol

#### Web Interface

To enable the L2PT on selected interfaces:

1. Click VLAN, L2PT.
2. Select Configure Interface from the Step list.
3. Mark the protocols to be passed through the L2PT tunnel on the required interfaces.
4. Click Apply.

Figure 92: Enabling L2PT on Required Interfaces

VLAN > L2PT

Step: 2. Configure Interface ▾

L2PT Interface List Total: 52

| Interface | CDP                              | LACP                             | LLDP                             | PVST+                            | Spanning Tree                    | VTP                              |
|-----------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|
| Eth1/1    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled |
| Eth1/2    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled |
| Eth1/3    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled |
| Eth1/4    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled |
| Eth1/5    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled |

## Protocol VLANs

The network devices required to support multiple protocols cannot be easily grouped into a common VLAN. This may require non-standard devices to pass traffic between different VLANs in order to encompass all the devices participating in a specific protocol. This kind of configuration deprives users of the basic benefits of VLANs, including security and easy accessibility.

To avoid these problems, you can configure this switch with protocol-based VLANs that divide the physical network into logical VLAN groups for each required protocol. When a frame is received at a port, its VLAN membership can then be determined based on the protocol type being used by the inbound packets.

### Command Usage

- ◆ To configure protocol-based VLANs, follow these steps:
  1. First configure VLAN groups for the protocols you want to use (see [“Configuring VLAN Groups” on page 161](#)). Although not mandatory, we suggest configuring a separate VLAN for each major protocol running on your network. Do not add port members at this time.
  2. Create a protocol group for each of the protocols you want to assign to a VLAN using the Configure Protocol (Add) page.
  3. Then map the protocol for each interface to the appropriate VLAN using the Configure Interface (Add) page.
- ◆ When MAC-based, IP subnet-based, or protocol-based VLANs are supported concurrently, priority is applied in this sequence, and then port-based VLANs last.

## Configuring Protocol VLAN Groups

Use the VLAN > Protocol (Configure Protocol - Add) page to create protocol groups.

### Parameters

These parameters are displayed:

- ◆ **Frame Type** – Choose either Ethernet, RFC 1042, or LLC Other as the frame type used by this protocol.
- ◆ **Protocol Type** – Specifies the protocol type to match. The available options are IP, ARP, RARP and IPv6. If LLC Other is chosen for the Frame Type, the only available Protocol Type is IPX Raw.
- ◆ **Protocol Group ID** – Protocol Group ID assigned to the Protocol VLAN Group. (Range: 1-2147483647)



**Note:** Traffic which matches IP Protocol Ethernet Frames is mapped to the VLAN (VLAN 1) that has been configured with the switch's administrative IP. IP Protocol Ethernet traffic must not be mapped to another VLAN or you will lose administrative network connectivity to the switch. If lost in this manner, network access can be regained by removing the offending Protocol VLAN rule via the console. Alternately, the switch can be power-cycled, however all unsaved configuration changes will be lost.

### Web Interface

To configure a protocol group:

1. Click VLAN, Protocol.
2. Select Configure Protocol from the Step list.
3. Select Add from the Action list.
4. Select an entry from the Frame Type list.
5. Select an entry from the Protocol Type list.
6. Enter an identifier for the protocol group.
7. Click Apply.

**Figure 93: Configuring Protocol VLANs**

**VLAN > Protocol**

Step: 1. Configure Protocol Action: Add

Frame Type: Ethernet

Protocol Type: 08 06 (ARP)

Protocol Group ID (1-2147483647): 1

Apply Revert

To configure a protocol group:

1. Click VLAN, Protocol.
2. Select Configure Protocol from the Step list.
3. Select Show from the Action list.

**Figure 94: Displaying Protocol VLANs**

**VLAN > Protocol**

Step: 1. Configure Protocol Action: Show

Protocol to Group Mapping Table Total: 5

|                          | Frame Type | Protocol Type | Protocol Group ID |
|--------------------------|------------|---------------|-------------------|
| <input type="checkbox"/> | Ethernet   | 08 06         | 1                 |
| <input type="checkbox"/> | Ethernet   | 80 35         | 2                 |
| <input type="checkbox"/> | RFC 1042   | 08 00         | 1                 |
| <input type="checkbox"/> | RFC 1042   | 80 35         | 3                 |
| <input type="checkbox"/> | LLC Other  | FF FF         | 5                 |

Delete Revert

## Mapping Protocol Groups to Interfaces

Use the VLAN > Protocol (Configure Interface - Add) page to map a protocol group to a VLAN for each interface that will participate in the group.

### Command Usage

- ◆ When creating a protocol-based VLAN, only assign interfaces using this configuration screen. If you assign interfaces using any of the other VLAN menus such as the VLAN Static table ([page 163](#)), these interfaces will admit traffic of any protocol type into the associated VLAN.
- ◆ When a frame enters a port that has been assigned to a protocol VLAN, it is processed in the following manner:
  - If the frame is tagged, it will be processed according to the standard rules applied to tagged frames.

- If the frame is untagged and the protocol type matches, the frame is forwarded to the appropriate VLAN.
- If the frame is untagged but the protocol type does not match, the frame is forwarded to the default VLAN for this interface.

### Parameters

These parameters are displayed:

- ◆ **Interface** – Displays a list of ports or trunks.
- ◆ **Port** – Port Identifier. (Range: 1-52)
- ◆ **Trunk** – Trunk Identifier. (Range: 1-16)
- ◆ **Protocol Group ID** – Protocol Group ID assigned to the Protocol VLAN Group. (Range: 1-2147483647)
- ◆ **VLAN ID** – VLAN to which matching protocol traffic is forwarded. (Range: 1-4094)
- ◆ **Priority** – The priority assigned to untagged ingress traffic. (Range: 0-7, where 7 is the highest priority)

### Web Interface

To map a protocol group to a VLAN for a port or trunk:

1. Click VLAN, Protocol.
2. Select Configure Interface from the Step list.
3. Select Add from the Action list.
4. Select a port or trunk.
5. Enter the identifier for a protocol group.
6. Enter the corresponding VLAN to which the protocol traffic will be forwarded.
7. Set the priority to assign to untagged ingress frames.
8. Click Apply.

**Figure 95: Assigning Interfaces to Protocol VLANs**

**VLAN > Protocol**

Step: 2. Configure Interface Action: Add

Interface: ☒ Port 1 ☐ Trunk

Protocol Group ID: 1

VLAN ID (1-4094):

Priority (0-7):

Apply Revert

To show the protocol groups mapped to a port or trunk:

1. Click VLAN, Protocol.
2. Select Configure Interface from the Step list.
3. Select Show from the Action list.
4. Select a port or trunk.

**Figure 96: Showing the Interface to Protocol Group Mapping**

**VLAN > Protocol**

Step: 2. Configure Interface Action: Show

Interface: ☒ Port 1 ☐ Trunk

Port To Protocol Group Mapping Table Total: 1

|                          | Protocol Group ID | VLAN ID | Priority |
|--------------------------|-------------------|---------|----------|
| <input type="checkbox"/> | 1                 | 2       | 0        |

Delete Revert

## Configuring IP Subnet VLANs

Use the VLAN > IP Subnet page to configure IP subnet-based VLANs.

When using port-based classification, all untagged frames received by a port are classified as belonging to the VLAN whose VID (PVID) is associated with that port.

When IP subnet-based VLAN classification is enabled, the source address of untagged ingress frames are checked against the IP subnet-to-VLAN mapping table. If an entry is found for that subnet, these frames are assigned to the VLAN indicated in the entry. If no IP subnet is matched, the untagged frames are classified as belonging to the receiving port's VLAN ID (PVID).

### Command Usage

- ◆ Each IP subnet can be mapped to only one VLAN ID. An IP subnet consists of an IP address and a mask. The specified VLAN need not be an existing VLAN.
- ◆ When an untagged frame is received by a port, the source IP address is checked against the IP subnet-to-VLAN mapping table, and if an entry is found, the corresponding VLAN ID is assigned to the frame. If no mapping is found, the PVID of the receiving port is assigned to the frame.
- ◆ Packet forwarding within the IP subnet requires that the following conditions are satisfied:
  - Inbound packet must be an IP packet (EtherType 0x0800).
  - The interface must be configured as a member of the subnet VLAN.
  - The IP address and subnet mask of the inbound packet must fall within specified subnet VLAN

The above conditions mean that any ARP requests will not be forwarded within the subnet VLAN because they are EtherType 0x0806 and do not meet the requirements for an IP subnet VLAN. For example, ping requests must pass through and IP subnet VLAN.

Also, note that TCP/UDP port numbers are not considered when checking whether or not packets are forwarded within the subnet VLAN

- ◆ The IP subnet cannot be a broadcast or multicast IP address.
- ◆ When MAC-based, IP subnet-based, or protocol-based VLANs are supported concurrently, priority is applied in this sequence, and then port-based VLANs last.

### Parameters

These parameters are displayed:

- ◆ **IP Address** – The IP address for a subnet. Valid IP addresses consist of four decimal numbers, 0 to 255, separated by periods.
- ◆ **Subnet Mask** – This mask identifies the host address bits of the IP subnet.
- ◆ **VLAN** – VLAN to which matching IP subnet traffic is forwarded.  
(Range: 1-4094)
- ◆ **Priority** – The priority assigned to untagged ingress traffic.  
(Range: 0-7, where 7 is the highest priority; Default: 0)



### Web Interface

To map an IP subnet to a VLAN:

1. Click VLAN, IP Subnet.
2. Select Add from the Action list.
3. Enter an address in the IP Address field.
4. Enter a mask in the Subnet Mask field.
5. Enter the identifier in the VLAN field. Note that the specified VLAN need not already be configured.
6. Enter a value to assign to untagged frames in the Priority field.
7. Click Apply.

Figure 97: Configuring IP Subnet VLANs

The screenshot shows the 'VLAN > IP Subnet' configuration page. At the top, there is a breadcrumb 'VLAN > IP Subnet'. Below it, the 'Action:' dropdown is set to 'Add'. The form contains four input fields: 'IP Address' with the value '192.168.1.0', 'Subnet Mask' with '255.255.255.0', 'VLAN (1-4094)' with '10', and 'Priority (0-7)' with '1'. At the bottom right, there are 'Apply' and 'Revert' buttons.

To show the configured IP subnet VLANs:

1. Click VLAN, IP Subnet.
2. Select Show from the Action list.

Figure 98: Showing IP Subnet VLANs

The screenshot shows the 'VLAN > IP Subnet' configuration page with the 'Action:' dropdown set to 'Show'. Below the form, there is a table titled 'IP Subnet to VLAN Mapping Table' with a 'Total: 1' indicator. The table has five columns: a checkbox, 'IP Address', 'Subnet Mask', 'VLAN', and 'Priority'. One row is displayed with the values: checkbox (checked), '192.168.1.0', '255.255.255.0', '10', and '0'. At the bottom right, there are 'Delete' and 'Revert' buttons.

|                                     | IP Address  | Subnet Mask   | VLAN | Priority |
|-------------------------------------|-------------|---------------|------|----------|
| <input checked="" type="checkbox"/> | 192.168.1.0 | 255.255.255.0 | 10   | 0        |

## Configuring MAC-based VLANs

Use the VLAN > MAC-Based page to configure VLAN based on MAC addresses. The MAC-based VLAN feature assigns VLAN IDs to ingress untagged frames according to source MAC addresses.

When MAC-based VLAN classification is enabled, untagged frames received by a port are assigned to the VLAN which is mapped to the frame's source MAC address. When no MAC address is matched, untagged frames are assigned to the receiving port's native VLAN ID (PVID).

### Command Usage

- ◆ The MAC-to-VLAN mapping applies to all ports on the switch.
- ◆ Source MAC addresses can be mapped to only one VLAN ID.
- ◆ Configured MAC addresses cannot be broadcast or multicast addresses.
- ◆ When MAC-based, IP subnet-based, or protocol-based VLANs are supported concurrently, priority is applied in this sequence, and then port-based VLANs last.

### Parameters

These parameters are displayed:

- ◆ **MAC Address** – A source MAC address which is to be mapped to a specific VLAN. The MAC address must be specified in the format xx-xx-xx-xx-xx-xx.

- ◆ **Mask** – Identifies a range of MAC addresses. (Range: 00-00-00-00-00-00 to ff-ff-ff-ff-ff-ff)

The binary equivalent mask matching the characters in the front of the first non-zero character must all be 1s (e.g., 111, i.e., it cannot be 101 or 001...). A mask for the MAC address: 00-50-6e-00-5f-b1 translated into binary:

MAC: 00000000-01010000-01101110-00000000-01011111-10110001

could be: 11111111-11xxxxxx-xxxxxxxx-xxxxxxxx-xxxxxxxx-xxxxxxxx

So the mask in hexadecimal for this example could be:

ff-fx-xx-xx-xx-xx/ff-c0-00-00-00-00/ff-e0-00-00-00-00

- ◆ **VLAN** – VLAN to which ingress traffic matching the specified source MAC address is forwarded. (Range: 1-4094)
- ◆ **Priority** – The priority assigned to untagged ingress traffic. (Range: 0-7, where 7 is the highest priority; Default: 0)

### Web Interface

To map a MAC address to a VLAN:

1. Click VLAN, MAC-Based.
2. Select Add from the Action list.
3. Enter an address in the MAC Address field, and a mask to indicate a range of addresses if required.
4. Enter an identifier in the VLAN field. Note that the specified VLAN need not already be configured.
5. Enter a value to assign to untagged frames in the Priority field.
6. Click Apply.

**Figure 99: Configuring MAC-Based VLANs**

VLAN > MAC-Based

Action: Add ▼

MAC Address:  (xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx)

Mask:  (xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx)

VLAN (1-4094):

Priority (0-7):

Apply Revert

To show the MAC addresses mapped to a VLAN:

1. Click VLAN, MAC-Based.
2. Select Show from the Action list.

**Figure 100: Showing MAC-Based VLANs**

VLAN > MAC-Based ?

Action: Show ▼

MAC-Based VLAN List Total: 1

|                          | MAC Address       | Mask              | VLAN | Priority |
|--------------------------|-------------------|-------------------|------|----------|
| <input type="checkbox"/> | 00-AB-CD-11-22-33 | FF-FF-FF-FF-FF-FF | 10   | 0        |

Delete Revert

## Configuring VLAN Translation


Use the VLAN > Translation (Add) page to map VLAN IDs between the customer and service provider for networks that do not support IEEE 802.1Q tunneling.

### Command Usage

- ◆ QinQ tunneling uses double tagging to preserve the customer's VLAN tags on traffic crossing the service provider's network. However, if any switch in the path crossing the service provider's network does not support this feature, then the switches directly connected to that device can be configured to swap the customer's VLAN ID with the service provider's VLAN ID for upstream traffic, or the service provider's VLAN ID with the customer's VLAN ID for downstream traffic.

For example, assume that the upstream switch does not support QinQ tunneling. Select Port 1, and set the Old VLAN to 10 and the New VLAN to 100 to map VLAN 10 to VLAN 100 for upstream traffic entering port 1, and VLAN 100 to VLAN 10 for downstream traffic leaving port 1 as shown below.

**Figure 101: Configuring VLAN Translation**

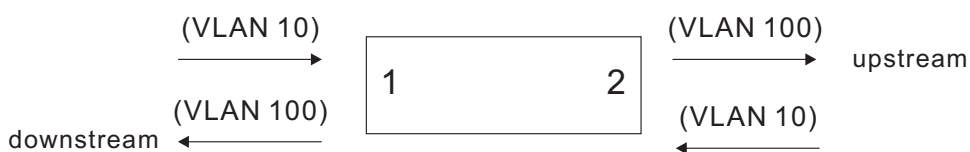

- ◆ The maximum number of VLAN translation entries is 8 per port, and up to 96 for the system. However, note that configuring a large number of entries may degrade the performance of other processes that also use the TCAM, such as IP Source Guard filter rules, Quality of Service (QoS) processes, QinQ, MAC-based VLANs, VLAN translation, or traps.
- ◆ If VLAN translation is set on an interface, and the same interface is also configured as a QinQ access port on the VLAN > Tunnel (Configure Interface) page, VLAN tag assignments will be determined by the QinQ process, not by VLAN translation.

### Parameters

These parameters are displayed:

- ◆ **Port** – Port identifier.
- ◆ **Old VLAN** – The original VLAN ID. (Range: 1-4094)
- ◆ **New VLAN** – The new VLAN ID. (Range: 1-4094)

### Web Interface

To configure VLAN translation:

1. Click VLAN, Translation.
2. Select Add from the Action list.
3. Select a port, and enter the original and new VLAN IDs.
4. Click Apply.

**Figure 102: Configuring VLAN Translation**

The screenshot shows the 'VLAN > Translation' configuration page. The 'Action' dropdown is set to 'Add'. A 'Port' dropdown is set to '1'. Below it, there are two input fields: 'Old VLAN (1-4094)' with the value '10' and 'New VLAN (1-4094)' with the value '100'. At the bottom right, there are 'Apply' and 'Revert' buttons.

To show the mapping entries for VLANs translation:

1. Click VLAN, Translation.
2. Select Show from the Action list.
3. Select a port.

**Figure 103: Showing the Entries for VLAN Translation**

The screenshot shows the 'VLAN > Translation' configuration page with the 'Action' dropdown set to 'Show' and the 'Port' dropdown set to '1'. Below the dropdowns, it says 'VLAN Translation Table Total: 1'. A table displays the translation entry:

|                          | Old VLAN | New VLAN |
|--------------------------|----------|----------|
| <input type="checkbox"/> | 10       | 100      |

At the bottom right, there are 'Delete' and 'Revert' buttons.



---

# Address Table Settings

Switches store the addresses for all known devices. This information is used to pass traffic directly between the inbound and outbound ports. All the addresses learned by monitoring traffic are stored in the dynamic address table. You can also manually configure static addresses that are bound to a specific port.

This chapter describes the following topics:

- ◆ [Dynamic Address Cache](#) – Shows dynamic entries in the address table.
- ◆ [Address Aging Time](#) – Sets timeout for dynamically learned entries.
- ◆ [MAC Address Learning](#) – Enables or disables address learning on an interface.
- ◆ [Static MAC Addresses](#) – Configures static entries in the address table.
- ◆ [MAC Notification Traps](#) – Issue trap when a dynamic MAC address is added or removed.

---

## Displaying the Dynamic Address Table

Use the MAC Address > Dynamic (Show Dynamic MAC) page to display the MAC addresses learned by monitoring the source address for traffic entering the switch. When the destination address for inbound traffic is found in the database, the packets intended for that address are forwarded directly to the associated port. Otherwise, the traffic is flooded to all ports.

### Parameters

These parameters are displayed:

- ◆ **Sort Key** - You can sort the information displayed based on MAC address, VLAN or interface (port or trunk).
- ◆ **MAC Address** – Physical address associated with this interface.
- ◆ **VLAN** – ID of configured VLAN (1-4094).
- ◆ **Interface** – Indicates a port or trunk.
- ◆ **Type** – Shows that the entries in this table are learned.  
(Values: Learned or Security, the last of which indicates Port Security)

- ◆ **Life Time** – Shows the time to retain the specified address.

### Web Interface

To show the dynamic address table:

1. Click MAC Address, Dynamic.
2. Select Show Dynamic MAC from the Action list.
3. Select the Sort Key (MAC Address, VLAN, or Interface).
4. Enter the search parameters (MAC Address, VLAN, or Interface).
5. Click Query.

**Figure 104: Displaying the Dynamic MAC Address Table**

The screenshot shows the 'MAC Address > Dynamic' web interface. At the top, there is a breadcrumb 'MAC Address > Dynamic' and a toolbar with icons. Below this, the 'Action' dropdown is set to 'Show Dynamic MAC'. The 'Query by:' section has a 'Sort Key' dropdown set to 'MAC Address'. There are three search criteria: 'MAC Address' (with a text input field and a placeholder '(xx-xx-xx-xx-xx-xx of xxxxxxxxxxxx)'), 'VLAN' (with a dropdown set to '1'), and 'Interface' (with radio buttons for 'Port' and 'Trunk', and a dropdown set to '1'). A 'Query' button is located below the search criteria. Below the search section, the 'Dynamic MAC Address List' is displayed with a 'Total: 7' count. The table has five columns: 'MAC Address', 'VLAN', 'Interface', 'Type', and 'Life Time'. The table contains seven rows of data.

| MAC Address       | VLAN | Interface       | Type  | Life Time         |
|-------------------|------|-----------------|-------|-------------------|
| 00-60-61-B1-84-4A | 1    | Unit 1 / Port 1 | Learn | Delete on Timeout |
| 00-E0-0C-10-90-01 | 1    | Unit 1 / Port 1 | Learn | Delete on Timeout |
| 00-E0-4C-68-12-66 | 1    | Unit 1 / Port 1 | Learn | Delete on Timeout |
| 00-E0-4C-68-14-79 | 1    | Unit 1 / Port 1 | Learn | Delete on Timeout |
| CC-37-AB-A1-06-C0 | 1    | Unit 1 / Port 3 | Learn | Delete on Timeout |
| CC-37-AB-A1-06-C3 | 1    | Unit 1 / Port 3 | Learn | Delete on Timeout |
| CC-37-AB-BB-DE-60 | 1    | Unit 1 / Port 1 | Learn | Delete on Timeout |

## Clearing the Dynamic Address Table

Use the MAC Address > Dynamic (Clear Dynamic MAC) page to remove any learned entries from the forwarding database.

### Parameters

These parameters are displayed:

- ◆ **Clear by** – All entries can be cleared; or you can clear the entries for a specific MAC address, all the entries in a VLAN, or all the entries associated with a port or trunk.



### Web Interface

To clear the entries in the dynamic address table:

1. Click MAC Address, Dynamic.
2. Select Clear Dynamic MAC from the Action list.
3. Select the method by which to clear the entries (i.e., All, MAC Address, VLAN, or Interface).
4. Enter information in the additional fields required for clearing entries by MAC Address, VLAN, or Interface.
5. Click Clear.

**Figure 105: Clearing Entries in the Dynamic MAC Address Table**

The screenshot shows a web interface for configuring MAC Address settings. The breadcrumb trail is 'MAC Address > Dynamic'. Below this, there is a 'Step:' dropdown menu currently set to 'Clear Dynamic MAC'. Underneath, there is a 'Clear by:' dropdown menu set to 'All'. A 'Clear' button is located at the bottom right of the form area.

---

## Changing the Aging Time

Use the MAC Address > Dynamic (Configure Aging) page to set the aging time for entries in the dynamic address table. The aging time is used to age out dynamically learned forwarding information.

### Parameters

These parameters are displayed:

- ◆ **Aging Status** – Enables/disables the function.
- ◆ **Aging Time** – The time after which a learned entry is discarded. (Range: 6-7200 seconds; Default: 300 seconds)

### Web Interface

To set the aging time for entries in the dynamic address table:

1. Click MAC Address, Dynamic.
2. Select Configure Aging from the Action list.
3. Modify the aging status if required.

4. Specify a new aging time.
5. Click Apply.

**Figure 106: Setting the Address Aging Time**

The screenshot shows a web interface for configuring MAC address settings. The title bar reads "MAC Address > Dynamic". Below this, there is a section titled "Action:" with a dropdown menu currently set to "Configure Aging". Underneath, the "Aging Status" is shown as "Enabled" with a checked checkbox. The "Aging Time (6-7200)" is set to "300" in a text box, followed by the unit "sec". At the bottom right of the configuration area, there are two buttons: "Apply" and "Revert".

---

## Configuring MAC Address Learning

Use the MAC Address > Learning Status page to enable or disable MAC address learning on an interface.

### Command Usage

- ◆ When MAC address learning is disabled, the switch immediately stops learning new MAC addresses on the specified interface. Only incoming traffic with source addresses stored in the static address table (see [“Setting Static Addresses” on page 199](#)) will be accepted as authorized to access the network through that interface.
- ◆ Dynamic addresses stored in the address table when MAC address learning is disabled are flushed from the system, and no dynamic addresses are subsequently learned until MAC address learning has been re-enabled. Any device not listed in the static address table that attempts to use the interface after MAC learning has been disabled will be prevented from accessing the switch.
- ◆ Also note that MAC address learning cannot be disabled if any of the following conditions exist:
  - 802.1X Port Authentication has been globally enabled on the switch (see [“Configuring 802.1X Global Settings” on page 333](#)).
  - Security Status (see [“Configuring Port Security” on page 329](#)) is enabled on the same interface.

### Parameters

These parameters are displayed:

- ◆ **Interface** – Displays a list of ports or trunks.
- ◆ **Port** – Port Identifier. (Range: 1-52)
- ◆ **Trunk** – Trunk Identifier. (Range: 1-16)
- ◆ **Status** – The status of MAC address learning. (Default: Enabled)

### Web Interface

To enable or disable MAC address learning:

1. Click MAC Address, Learning Status.
2. Set the learning status for any interface.
3. Click Apply.

**Figure 107: Configuring MAC Address Learning**

MAC Address > Learning Status

Interface: ☒ Port ☐ Trunk

Port Learning Status List Total: 52

| Port | Status                                      |
|------|---|
| 1    | <input checked="" type="checkbox"/> Enabled |
| 2    | <input checked="" type="checkbox"/> Enabled |
| 3    | <input checked="" type="checkbox"/> Enabled |
| 4    | <input checked="" type="checkbox"/> Enabled |
| 5    | <input checked="" type="checkbox"/> Enabled |

## Setting Static Addresses

Use the MAC Address > Static page to configure static MAC addresses. A static address can be assigned to a specific interface on this switch. Static addresses are bound to the assigned interface and will not be moved. When a static address is seen on another interface, the address will be ignored and will not be written to the address table.

### Command Usage

The static address for a host device can be assigned to a specific port within a specific VLAN. Use this command to add static addresses to the MAC Address Table. Static addresses have the following characteristics:

- ◆ Static addresses are bound to the assigned interface and will not be moved. When a static address is seen on another interface, the address will be ignored and will not be written to the address table.

- ◆ Static addresses will not be removed from the address table when a given interface link is down.
- ◆ A static address cannot be learned on another port until the address is removed from the table.

### Parameters

These parameters are displayed:

#### *Add Static Address*

- ◆ **VLAN** – ID of configured VLAN. (Range: 1-4094)
- ◆ **Interface** – Port or trunk associated with the device assigned a static address.
- ◆ **MAC Address** – Physical address of a device mapped to this interface. Enter an address in the form of xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx.
- ◆ **Static Status** – Sets the time to retain the specified address.
  - Delete-on-reset - Assignment lasts until the switch is reset.
  - Permanent - Assignment is permanent. (This is the default.)

#### *Show Static Address*

The following additional fields are displayed on this web page:

**Type** – Displays the address configuration method. (Values: CPU, Config, or Security, the last of which indicates Port Security)

**Life Time** – The duration for which this entry applies. (Values: Delete On Reset, Delete On Timeout, Permanent)

### Web Interface

To configure a static MAC address:

1. Click MAC Address, Static.
2. Select Add from the Action list.
3. Specify the VLAN, the port or trunk to which the address will be assigned, the MAC address, and the time to retain this entry.
4. Click Apply.

**Figure 108: Configuring Static MAC Addresses**

MAC Address > Static

Action: Add

VLAN: 1

Interface: ☒ Port 1 ☐ Trunk

MAC Address: 00-12-cf-94-34-da (xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx)

Static Status: Permanent

Apply Revert

To show the static addresses in MAC address table:

1. Click MAC Address, Static.
2. Select Show from the Action list.

**Figure 109: Displaying Static MAC Addresses**

MAC Address > Static

Action: Show

Static MAC Address to Interface Mapping Table Total: 2

|                          | MAC Address       | VLAN | Interface       | Type   | Life Time       |
|--------------------------|-------------------|------|-----------------|--------|-----------------|
| <input type="checkbox"/> | 00-00-0C-00-00-FD | 1    | CPU             | CPU    | Delete on Reset |
| <input type="checkbox"/> | 00-12-CF-94-34-DA | 1    | Unit 1 / Port 1 | Config | Permanent       |

Delete Revert

## Issuing MAC Address Traps

Use the MAC Address > MAC Notification pages to send SNMP traps (i.e., SNMP notifications) when a dynamic MAC address is added or removed.

### Parameters

These parameters are displayed:

#### Configure Global

- ◆ **MAC Notification Traps** – Issues a trap when a dynamic MAC address is added or removed. (Default: Disabled)
- ◆ **MAC Notification Trap Interval** – Specifies the interval between issuing two consecutive traps. (Range: 1-3600 seconds; Default: 1 second)

#### Configure Interface

- ◆ **Port** – Port Identifier. (Range: 1-52)

- ◆ **MAC Notification Trap** – Enables MAC authentication traps on the current interface. (Default: Disabled)

MAC authentication traps must be enabled at the global level for this attribute to take effect.

### Web Interface

To enable MAC address traps at the global level:

1. Click MAC Address, MAC Notification.
2. Select Configure Global from the Step list.
3. Configure MAC notification traps and the transmission interval.
4. Click Apply.

**Figure 110: Issuing MAC Address Traps (Global Configuration)**

The screenshot shows the 'MAC Address > MAC Notification' configuration page. The 'Step' dropdown is set to '1. Configure Global'. Below this, there is a section for 'MAC Notification Traps' with a checkbox labeled 'Enabled' which is currently unchecked. Below that is a field for 'MAC Notification Trap Interval (1-3600)' with a value of '1' and a unit of 'sec'. At the bottom right, there are 'Apply' and 'Revert' buttons.

To enable MAC address traps at the interface level:

1. Click MAC Address, MAC Notification.
2. Select Configure Interface from the Step list.
3. Enable MAC notification traps for the required ports.
4. Click Apply.

**Figure 111: Issuing MAC Address Traps (Interface Configuration)**

The screenshot shows the 'MAC Address > MAC Notification' configuration page, Step 2: Configure Interface. The 'Step' dropdown is set to '2. Configure Interface'. Below this, there are radio buttons for 'Interface' with 'Port' selected and 'Trunk' unselected. Below that is a 'Port List' section with a 'Total: 52' and a table with 6 columns. The table has a header row with 'Port' and 'MAC Notification Trap'. The first five rows of the table show ports 1 through 5, each with a checkbox labeled 'Enabled' which is currently unchecked. There are numbered tabs 1 through 6 at the top right of the table area.

| Port | MAC Notification Trap            |
|------|----------------------------------|
| 1    | <input type="checkbox"/> Enabled |
| 2    | <input type="checkbox"/> Enabled |
| 3    | <input type="checkbox"/> Enabled |
| 4    | <input type="checkbox"/> Enabled |
| 5    | <input type="checkbox"/> Enabled |

---

# Spanning Tree Algorithm

This chapter describes the following basic topics:

- ◆ [Loopback Detection](#) – Configures detection and response to loopback BPDUs.
- ◆ [Global Settings for STA](#) – Configures global bridge settings for STP, RSTP and MSTP.
- ◆ [Interface Settings for STA](#) – Configures interface settings for STA, including priority, path cost, link type, and designation as an edge port.
- ◆ [Global Settings for MSTP](#) – Sets the VLANs and associated priority assigned to an MST instance
- ◆ [Interface Settings for MSTP](#) – Configures interface settings for MSTP, including priority and path cost.

---

## Overview


The Spanning Tree Algorithm (STA) can be used to detect and disable network loops, and to provide backup links between switches, bridges or routers. This allows the switch to interact with other bridging devices (that is, an STA-compliant switch, bridge or router) in your network to ensure that only one route exists between any two stations on the network, and provide backup links which automatically take over when a primary link goes down.

The spanning tree algorithms supported by this switch include these versions:

- ◆ STP – Spanning Tree Protocol (IEEE 802.1D)
- ◆ RSTP – Rapid Spanning Tree Protocol (IEEE 802.1w)
- ◆ MSTP – Multiple Spanning Tree Protocol (IEEE 802.1s)

**STP** – STP uses a distributed algorithm to select a bridging device (STP-compliant switch, bridge or router) that serves as the root of the spanning tree network. It selects a root port on each bridging device (except for the root device) which incurs the lowest path cost when forwarding a packet from that device to the root device. Then it selects a designated bridging device from each LAN which incurs the lowest path cost when forwarding a packet from that LAN to the root device. All ports connected to designated bridging devices are assigned as designated ports. After determining the lowest cost spanning tree, it enables all root ports and designated ports, and disables all other ports. Network packets are therefore only forwarded between root ports and designated ports, eliminating any possible network loops.

**Figure 112: STP Root Ports and Designated Ports**

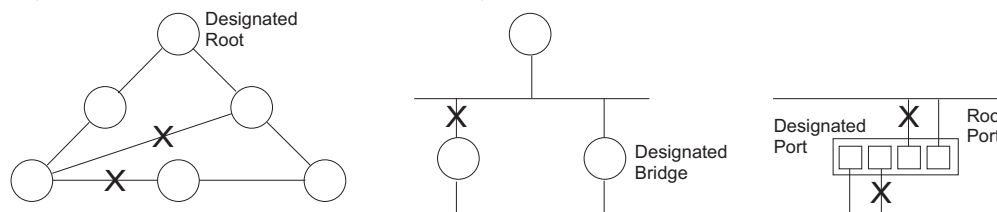


Once a stable network topology has been established, all bridges listen for Hello BPDUs (Bridge Protocol Data Units) transmitted from the Root Bridge. If a bridge does not get a Hello BPDU after a predefined interval (Maximum Age), the bridge assumes that the link to the Root Bridge is down. This bridge will then initiate negotiations with other bridges to reconfigure the network to reestablish a valid network topology.

**RSTP** – RSTP is designed as a general replacement for the slower, legacy STP. RSTP is also incorporated into MSTP. RSTP achieves much faster reconfiguration (i.e., around 1 to 3 seconds, compared to 30 seconds or more for STP) by reducing the number of state changes before active ports start learning, predefining an alternate route that can be used when a node or port fails, and retaining the forwarding database for ports insensitive to changes in the tree structure when reconfiguration occurs.

**MSTP** – When using STP or RSTP, it may be difficult to maintain a stable path between all VLAN members. Frequent changes in the tree structure can easily isolate some of the group members. MSTP (which is based on RSTP for fast convergence) is designed to support independent spanning trees based on VLAN groups. Using multiple spanning trees can provide multiple forwarding paths and enable load balancing. One or more VLANs can be grouped into a Multiple Spanning Tree Instance (MSTI). MSTP builds a separate Multiple Spanning Tree (MST) for each instance to maintain connectivity among each of the assigned VLAN groups. MSTP then builds a Internal Spanning Tree (IST) for the Region containing all commonly configured MSTP bridges.


**Figure 113: MSTP Region, Internal Spanning Tree, Multiple Spanning Tree**

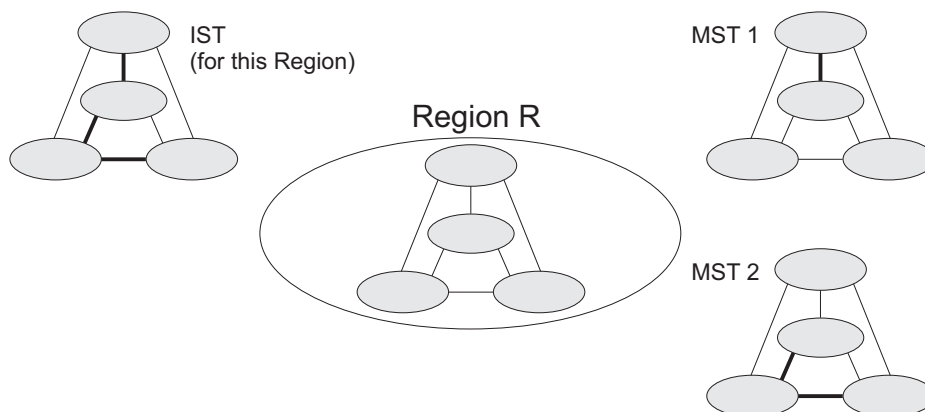



An MST Region consists of a group of interconnected bridges that have the same MST Configuration Identifiers (including the Region Name, Revision Level and Configuration Digest – see “[Configuring Multiple Spanning Trees](#)” on page 221). An MST Region may contain multiple MSTP Instances. An Internal Spanning Tree (IST) is used to connect all the MSTP switches within an MST region. A Common Spanning Tree (CST) interconnects all adjacent MST Regions, and acts as a virtual bridge node for communications with STP or RSTP nodes in the global network.

**Figure 114: Spanning Tree – Common Internal, Common, Internal**

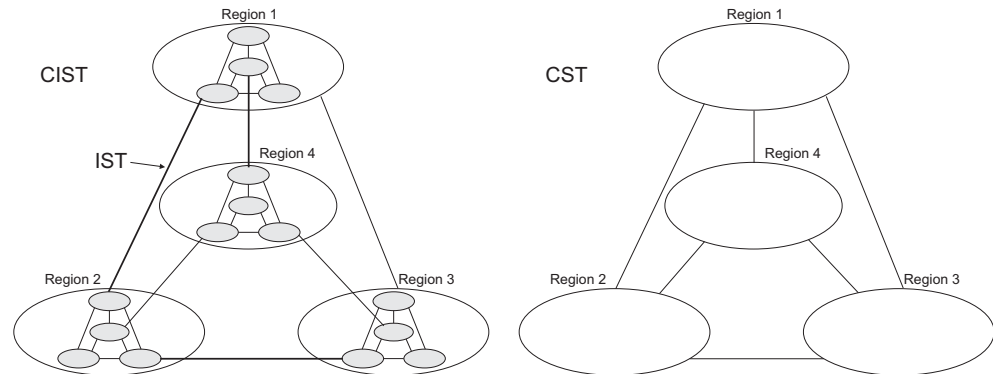

MSTP connects all bridges and LAN segments with a single Common and Internal Spanning Tree (CIST). The CIST is formed as a result of the running spanning tree algorithm between switches that support the STP, RSTP, MSTP protocols.

Once you specify the VLANs to include in a Multiple Spanning Tree Instance (MSTI), the protocol will automatically build an MSTI tree to maintain connectivity among each of the VLANs. MSTP maintains contact with the global network because each instance is treated as an RSTP node in the Common Spanning Tree (CST).

## Configuring Loopback Detection

Use the Spanning Tree > Loopback Detection page to configure loopback detection on an interface. When loopback detection is enabled and a port or trunk receives it's own BPDU, the detection agent drops the loopback BPDU, sends an SNMP trap, and places the interface in discarding mode. This loopback state can be released manually or automatically. If the interface is configured for automatic loopback release, then the port will only be returned to the forwarding state if one of the following conditions is satisfied:

- ◆ The interface receives any other BPDU except for it's own, or;
- ◆ The interfaces's link status changes to link down and then link up again, or;
- ◆ The interface ceases to receive it's own BPDUs in a forward delay interval.



**Note:** If loopback detection is not enabled and an interface receives it's own BPDU, then the interface will drop the loopback BPDU according to IEEE Standard 802.1w-2001 9.3.4 (Note 1).

**Note:** Loopback detection will not be active if Spanning Tree is disabled on the switch.

**Note:** When configured for manual release mode, then a link down/up event will not release the port from the discarding state.

---

### Parameters

These parameters are displayed:

- ◆ **Interface** – Displays a list of ports or trunks.
- ◆ **Status** – Enables loopback detection on this interface. (Default: Disabled)
- ◆ **Trap** – Enables SNMP trap notification for loopback events on this interface. (Default: Disabled)
- ◆ **Release Mode** – Configures the interface for automatic or manual loopback release. (Default: Auto)
- ◆ **Release** – Allows an interface to be manually released from discard mode. This is only available if the interface is configured for manual release mode.
- ◆ **Action** – Sets the response for loopback detection to block user traffic or shut down the interface. (Default: Shutdown)
- ◆ **Shutdown Interval** – The duration to shut down the interface. (Range: 60-86400 seconds; Default: 60 seconds)

If an interface is shut down due to a detected loopback, and the release mode is set to “Auto,” the selected interface will be automatically enabled when the shutdown interval has expired.

If an interface is shut down due to a detected loopback, and the release mode is set to “Manual,” the interface can be re-enabled using the Release button.

### Web Interface

To configure loopback detection:

1. Click Spanning Tree, Loopback Detection.
2. Click Port or Trunk to display the required interface type.
3. Modify the required loopback detection attributes.
4. Click Apply

**Figure 115: Configuring Port Loopback Detection**

Spanning Tree > Loopback Detection

Interface ☒ Port ☐ Trunk

Loopback Detection Port List Total: 52

| Port | Status                                      | Trap  | Release Mode | Release | Action     | Shutdown Interval (60-86400 sec) |
|------|---|---|--------------|---------|------------|----------------------------------|
| 1    | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | Manual ▼     | Release | Shutdown ▼ | 60                               |
| 2    | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | Auto ▼       | Release | Shutdown ▼ | 60                               |
| 3    | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | Auto ▼       | Release | Shutdown ▼ | 60                               |
| 4    | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | Auto ▼       | Release | Shutdown ▼ | 60                               |
| 5    | <input type="checkbox"/> Enabled            | <input type="checkbox"/> Enabled            | Auto ▼       | Release | Shutdown ▼ | 60                               |
| 6    | <input type="checkbox"/> Enabled            | <input type="checkbox"/> Enabled            | Auto ▼       | Release | Shutdown ▼ | 60                               |
| 7    | <input type="checkbox"/> Enabled            | <input type="checkbox"/> Enabled            | Auto ▼       | Release | Shutdown ▼ | 60                               |
| 8    | <input type="checkbox"/> Enabled            | <input type="checkbox"/> Enabled            | Auto ▼       | Release | Shutdown ▼ | 60                               |
| 10   | <input type="checkbox"/> Enabled            | <input type="checkbox"/> Enabled            | Auto ▼       | Release | Shutdown ▼ | 60                               |

Apply Revert

## Configuring Global Settings for STA

Use the Spanning Tree > STA (Configure Global - Configure) page to configure global settings for the spanning tree that apply to the entire switch.

### Command Usage

#### ◆ Spanning Tree Protocol<sup>5</sup>

This option uses RSTP set to STP forced compatibility mode. It uses RSTP for the internal state machine, but sends only 802.1D BPDUs. This creates one spanning tree instance for the entire network. If multiple VLANs are implemented on a network, the path between specific VLAN members may be inadvertently disabled to prevent network loops, thus isolating group members. When operating multiple VLANs, we recommend selecting the MSTP option.

#### ◆ Rapid Spanning Tree Protocol<sup>5</sup>

RSTP supports connections to either STP or RSTP nodes by monitoring the incoming protocol messages and dynamically adjusting the type of protocol messages the RSTP node transmits, as described below:

- STP Mode – If the switch receives an 802.1D BPDU (i.e., STP BPDU) after a port's migration delay timer expires, the switch assumes it is connected to an 802.1D bridge and starts using only 802.1D BPDUs.

5. STP and RSTP BPDUs are transmitted as untagged frames, and will cross any VLAN boundaries.

- RSTP Mode – If RSTP is using 802.1D BPDUs on a port and receives an RSTP BPDU after the migration delay expires, RSTP restarts the migration delay timer and begins using RSTP BPDUs on that port.

◆ **Multiple Spanning Tree Protocol**

MSTP generates a unique spanning tree for each instance. This provides multiple pathways across the network, thereby balancing the traffic load, preventing wide-scale disruption when a bridge node in a single instance fails, and allowing for faster convergence of a new topology for the failed instance.

- To allow multiple spanning trees to operate over the network, you must configure a related set of bridges with the same MSTP configuration, allowing them to participate in a specific set of spanning tree instances.
- A spanning tree instance can exist only on bridges that have compatible VLAN instance assignments.
- Be careful when switching between spanning tree modes. Changing modes stops all spanning-tree instances for the previous mode and restarts the system in the new mode, temporarily disrupting user traffic.

**Parameters**

These parameters are displayed:

*Basic Configuration of Global Settings*

- ◆ **Spanning Tree Status** – Enables/disables STA on this switch. (Default: Enabled)
- ◆ **Spanning Tree Type** – Specifies the type of spanning tree used on this switch:
  - **STP**: Spanning Tree Protocol (IEEE 802.1D); i.e., when this option is selected, the switch will use RSTP set to STP forced compatibility mode).
  - **RSTP**: Rapid Spanning Tree (IEEE 802.1w); RSTP is the default.
  - **MSTP**: Multiple Spanning Tree (IEEE 802.1s)
- ◆ **Priority** – Bridge priority is used in selecting the root device, root port, and designated port. The device with the highest priority becomes the STA root device. However, if all devices have the same priority, the device with the lowest MAC address will then become the root device. (Note that lower numeric values indicate higher priority.)
  - Default: 32768
  - Range: 0-61440, in steps of 4096
  - Options: 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, 61440

- ◆ **BPDU Flooding** – Configures the system to flood BPDUs to all other ports on the switch or just to all other ports in the same VLAN when spanning tree is disabled globally on the switch or disabled on a specific port.
  - To VLAN: Floods BPDUs to all other ports within the receiving port's native VLAN (i.e., as determined by port's PVID). This is the default.
  - To All: Floods BPDUs to all other ports on the switch.

The setting has no effect if BPDU flooding is disabled on a port (see ["Configuring Interface Settings for STA"](#)).

- ◆ **Cisco Prestandard Status** – Configures spanning tree operation to be compatible with Cisco prestandard versions. (Default: Disabled)

Cisco prestandard versions prior to Cisco IOS Release 12.2(25)SEC do not fully follow the IEEE standard, causing some state machine procedures to function incorrectly. This command forces the spanning tree protocol to function in a manner compatible with Cisco prestandard versions.

#### *Advanced Configuration Settings*

The following attributes are based on RSTP, but also apply to STP since the switch uses a backwards-compatible subset of RSTP to implement STP, and also apply to MSTP which is based on RSTP according to the standard:

- ◆ **Path Cost Method** – The path cost is used to determine the best path between devices. The path cost method is used to determine the range of values that can be assigned to each interface.
  - Long: Specifies 32-bit based values that range from 1-200,000,000. (This is the default.)
  - Short: Specifies 16-bit based values that range from 1-65535.
- ◆ **Transmission Limit** – The maximum transmission rate for BPDUs is specified by setting the minimum interval between the transmission of consecutive protocol messages. (Range: 1-10; Default: 3)

#### *When the Switch Becomes Root*

- ◆ **Hello Time** – Interval (in seconds) at which the root device transmits a configuration message.
  - Default: 2
  - Minimum: 1
  - Maximum: The lower of 10 or  $[(\text{Max. Message Age} / 2) - 1]$
- ◆ **Maximum Age** – The maximum time (in seconds) a device can wait without receiving a configuration message before attempting to reconverge. All device ports (except for designated ports) should receive configuration messages at regular intervals. Any port that ages out STA information (provided in the last configuration message) becomes the designated port for the attached LAN. If it is a root port, a new root port is selected from among the device ports attached

to the network. (References to “ports” in this section mean “interfaces,” which includes both ports and trunks.)

- Default: 20
- Minimum: The higher of 6 or  $[2 \times (\text{Hello Time} + 1)]$
- Maximum: The lower of 40 or  $[2 \times (\text{Forward Delay} - 1)]$

- ◆ **Forward Delay** – The maximum time (in seconds) this device will wait before changing states (i.e., discarding to learning to forwarding). This delay is required because every device must receive information about topology changes before it starts to forward frames. In addition, each port needs time to listen for conflicting information that would make it return to a discarding state; otherwise, temporary data loops might result.

- Default: 15
- Minimum: The higher of 4 or  $[(\text{Max. Message Age} / 2) + 1]$
- Maximum: 30

RSTP does not depend on the forward delay timer in most cases. It is able to confirm that a port can transition to the forwarding state without having to rely on any timer configuration. To achieve fast convergence, RSTP relies on the use of edge ports, and automatic detection of point-to-point link types, both of which allow a port to directly transition to the forwarding state.

#### *Configuration Settings for MSTP*

- ◆ **Max Instance Numbers** – The maximum number of MSTP instances to which this switch can be assigned.
- ◆ **Configuration Digest** – An MD5 signature key that contains the VLAN ID to MST ID mapping table. In other words, this key is a mapping of all VLANs to the CIST.
- ◆ **Region Revision**<sup>6</sup> – The revision for this MSTI. (Range: 0-65535; Default: 0)
- ◆ **Region Name**<sup>6</sup> – The name for this MSTI. (Maximum length: 32 characters; Default: switch’s MAC address)
- ◆ **Max Hop Count** – The maximum number of hops allowed in the MST region before a BPDU is discarded. (Range: 1-40; Default: 20)



---

**NOTE:** Region Revision and Region Name are both required to uniquely identify an MST region.

---

---

6. The MST name and revision number are both required to uniquely identify an MST region.

### Web Interface

To configure global STA settings:

1. Click Spanning Tree, STA.
2. Select Configure Global from the Step list.
3. Select Configure from the Action list.
4. Modify any of the required attributes. Note that the parameters displayed for the spanning tree types (STP, RSTP, MSTP) varies as described in the preceding section.
5. Click Apply

**Figure 116: Configuring Global Settings for STA (STP)**

The screenshot shows the 'Spanning Tree > STA' configuration page. At the top, there's a breadcrumb 'Spanning Tree > STA'. Below it, a 'Step' dropdown is set to '1. Configure Global' and an 'Action' dropdown is set to 'Configure'. The main configuration area is divided into several sections:

- Spanning Tree Status:** A checkbox labeled 'Enabled' is checked.
- Spanning Tree Type:** A dropdown menu is set to 'STP'.
- Priority (0-61440, in steps of 4096):** A text input field contains the value '32768'.
- BPDU Flooding:** A dropdown menu is set to 'To VLAN'.
- Cisco Prestandard Status:** A checkbox labeled 'Enabled' is unchecked.
- Advanced:** This section contains three items:
  - Path Cost Method:** A dropdown menu is set to 'Long'.
  - Transmission Limit (1-10):** A text input field contains the value '3'.
- When the Switch Becomes Root:** This section contains three items:
  - Hello Time (1-10):** A text input field contains the value '2', followed by 'sec'.
  - Maximum Age (6-40):** A text input field contains the value '20', followed by 'sec'.
  - Forward Delay (4-30):** A text input field contains the value '15', followed by 'sec'.

At the bottom of the configuration area, there is a note: 'Note: 2 \* (Hello Time + 1) <= Max Age <= 2 \* (Forward Delay - 1)'. Below the note are two buttons: 'Apply' and 'Revert'.

Figure 117: Configuring Global Settings for STA (RSTP)

**Spanning Tree > STA**

Step: 1. Configure Global Action: Configure

Spanning Tree Status ☒ Enabled

Spanning Tree Type RSTP

Priority (0-61440, in steps of 4096) 32768

BPDU Flooding To VLAN

Cisco Prestandard Status ☐ Enabled

**Advanced:**

Path Cost Method Long

Transmission Limit (1-10) 3

**When the Switch Becomes Root:**

Hello Time (1-10) 2 sec

Maximum Age (6-40) 20 sec

Forward Delay (4-30) 15 sec

Note:  $2 * (\text{Hello Time} + 1) \leq \text{Max Age} \leq 2 * (\text{Forward Delay} - 1)$

Apply Revert

Figure 118: Configuring Global Settings for STA (MSTP)

**Spanning Tree > STA**

Step: 1. Configure Global Action: Configure

Spanning Tree Status ☒ Enabled

Spanning Tree Type MSTP

Priority (0-61440, in steps of 4096) 32768

BPDU Flooding To VLAN

Cisco Prestandard Status ☐ Enabled

**Advanced:**

Path Cost Method Long

Transmission Limit (1-10) 3

**When the Switch Becomes Root:**

Hello Time (1-10) 2 sec

Maximum Age (6-40) 20 sec

Forward Delay (4-30) 15 sec

Note:  $2 * (\text{Hello Time} + 1) \leq \text{Max Age} \leq 2 * (\text{Forward Delay} - 1)$

**MSTP Configuration**

Max Instance Numbers 64

Configuration Digest 0xAC36177F50283CD4B83821D8AB26DE62

Region Revision (0-65535) 0

Region Name 00 E0 0C 00 00 FD

Max Hop Count (1-40) 20

Apply Revert



---

## Displaying Global Settings for STA

Use the Spanning Tree > STA (Configure Global - Show Information) page to display a summary of the current bridge STA information that applies to the entire switch.

### Parameters

The parameters displayed are described in the preceding section, except for the following items:

- ◆ **Bridge ID** – A unique identifier for this bridge, consisting of the bridge priority, the MST Instance ID 0 for the Common Spanning Tree when spanning tree type is set to MSTP, and MAC address (where the address is taken from the switch system).
- ◆ **Designated Root** – The priority and MAC address of the device in the Spanning Tree that this switch has accepted as the root device.
- ◆ **Root Port** – The number of the port on this switch that is closest to the root. This switch communicates with the root device through this port. If there is no root port, then this switch has been accepted as the root device of the Spanning Tree network.
- ◆ **Root Path Cost** – The path cost from the root port on this switch to the root device.
- ◆ **Configuration Changes** – The number of times the Spanning Tree has been reconfigured.
- ◆ **Last Topology Change** – Time since the Spanning Tree was last reconfigured.

### Web Interface

To display global STA settings:

1. Click Spanning Tree, STA.
2. Select Configure Global from the Step list.
3. Select Show Information from the Action list.

Figure 119: Displaying Global Settings for STA

Spanning Tree > STA

Step: 1. Configure Global Action: Show Information

Spanning Tree Information

|                       |   |                    |                    |
|-----------------------|---|--------------------|--------------------|
| Spanning Tree Status  | Enabled                                 | Spanning Tree Type | RSTP               |
| Designated Root       | 32768.0000E89382A0                      | Bridge ID          | 32768.0000E89382A0 |
| Root Port             | 0                                       | Max Age            | 20 sec             |
| Root Path Cost        | 0                                       | Hello Time         | 2 sec              |
| Configuration Changes | 2                                       | Forward Delay      | 15 sec             |
| Last Topology Change  | 0 days, 3 hours, 51 minutes, 11 seconds |                    |                    |

## Configuring Interface Settings for STA

Use the Spanning Tree > STA (Configure Interface - Configure) page to configure RSTP and MSTP attributes for specific interfaces, including port priority, path cost, link type, and edge port. You may use a different priority or path cost for ports of the same media type to indicate the preferred path, link type to indicate a point-to-point connection or shared-media connection, and edge port to indicate if the attached device can support fast forwarding. (References to “ports” in this section means “interfaces,” which includes both ports and trunks.)

### Parameters

These parameters are displayed:

- ◆ **Interface** – Displays a list of ports or trunks.
- ◆ **Spanning Tree** – Enables/disables STA on this interface. (Default: Enabled)
- ◆ **BPDU Flooding** – Enables/disables the flooding of BPDUs to other ports when global spanning tree is disabled ([page 207](#)) or when spanning tree is disabled on a specific port. When flooding is enabled, BPDUs are flooded to all other ports on the switch or to all other ports within the receiving port’s native VLAN as specified by the Spanning Tree BPDU Flooding attribute ([page 207](#)). (Default: Enabled)
- ◆ **Priority** – Defines the priority used for this port in the Spanning Tree Protocol. If the path cost for all ports on a switch are the same, the port with the highest priority (i.e., lowest value) will be configured as an active link in the Spanning Tree. This makes a port with higher priority less likely to be blocked if the Spanning Tree Protocol is detecting network loops. Where more than one port is assigned the highest priority, the port with lowest numeric identifier will be enabled.
  - Default: 128
  - Range: 0-240, in steps of 16

- ◆ **Admin Path Cost** – This parameter is used by the STA to determine the best path between devices. Therefore, lower values should be assigned to ports attached to faster media, and higher values assigned to ports with slower media. Note that path cost takes precedence over port priority. (Range: 0 for auto-configuration, 1-65535 for the short path cost method<sup>7</sup>, 1-200,000,000 for the long path cost method)

By default, the system automatically detects the speed and duplex mode used on each port, and configures the path cost according to the values shown below. Path cost “0” is used to indicate auto-configuration mode. When the short path cost method is selected and the default path cost recommended by the IEEE 8021w standard exceeds 65,535, the default is set to 65,535.

**Table 11: Recommended STA Path Cost Range**


| Port Type        | IEEE 802.1D-1998 | IEEE 802.1w-2001   |
|------------------|------------------|--------------------|
| Ethernet         | 50-600           | 200,000-20,000,000 |
| Fast Ethernet    | 10-60            | 20,000-2,000,000   |
| Gigabit Ethernet | 3-10             | 2,000-200,000      |
| 10G Ethernet     | 1-5              | 200-20,000         |

**Table 12: Default STA Path Costs**

| Port Type        | Short Path Cost (IEEE 802.1D-1998) | Long Path Cost (IEEE 802.1D-2004) |
|------------------|------------------------------------|-----------------------------------|
| Ethernet         | 65,535                             | 1,000,000                         |
| Fast Ethernet    | 65,535                             | 100,000                           |
| Gigabit Ethernet | 10,000                             | 10,000                            |
| 10G Ethernet     | 1,000                              | 1,000                             |

Administrative path cost cannot be used to directly determine the root port on a switch. Connections to other devices use IEEE 802.1Q-2005 to determine the root port as in the following example.

**Figure 120: Determining the Root Port**

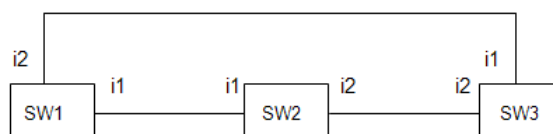

For BPDU messages received by i1 on SW3, the path cost is 0.  
For BPDU messages received by i2 on SW3, the path cost is that of i1 on SW2.

The root path cost for i1 on SW3 used to compete for the role of root port is 0 + path cost of i1 on SW3; 0 since i1 is directly connected to the root bridge.

7. Refer to “[Configuring Global Settings for STA](#)” on page 207 for information on setting the path cost method. The range displayed on the STA interface configuration page shows the maximum value for path cost. However, note that the switch still enforces the rules for path cost based on the specified path cost method (long or short).

If the path cost of i1 on SW2 is never configured/changed, it is 10000. Then the root path cost for i2 on SW3 used to compete for the role of root port is 10000 + path cost of i2 on SW3.

The path cost of i1 on SW3 is also 10000 if not configured/changed. Then even if the path cost of i2 on SW3 is configured/changed to 0, these ports will still have the same root path cost, and it will be impossible for i2 to become the root port just by changing its path cost on SW3.

For RSTP mode, the root port can be determined simply by adjusting the path cost of i1 on SW2. However, for MSTP mode, it is impossible to achieve this only by changing the path cost because external path cost is not added in the same region, and the regional root for i1 is SW1, but for i2 is SW2.

- ◆ **Admin Link Type** – The link type attached to this interface.
  - Point-to-Point – A connection to exactly one other bridge.
  - Shared – A connection to two or more bridges.
  - Auto – The switch automatically determines if the interface is attached to a point-to-point link or to shared media. (This is the default setting.)
- ◆ **Root Guard** – STA allows a bridge with a lower bridge identifier (or same identifier and lower MAC address) to take over as the root bridge at any time. Root Guard can be used to ensure that the root bridge is not formed at a suboptimal location. Root Guard should be enabled on any designated port connected to low-speed bridges which could potentially overload a slower link by taking over as the root port and forming a new spanning tree topology. It could also be used to form a border around part of the network where the root bridge is allowed. (Default: Disabled)
- ◆ **Admin Edge Port** – Since end nodes **cannot** cause forwarding loops, they can pass directly through to the spanning tree forwarding state. Specifying Edge Ports provides quicker convergence for devices such as workstations or servers, retains the current forwarding database to reduce the amount of frame flooding required to rebuild address tables during reconfiguration events, does not cause the spanning tree to initiate reconfiguration when the interface changes state, and also overcomes other STA-related timeout problems. However, remember that Edge Port should only be enabled for ports connected to an end-node device. (Default: Auto)
  - **Enabled** – Manually configures a port as an Edge Port.
  - **Disabled** – Disables the Edge Port setting.
  - **Auto** – The port will be automatically configured as an edge port if the edge delay time expires without receiving any RSTP or MSTP BPDUs. Note that edge delay time (802.1D-2004 17.20.4) equals the protocol migration time if a port's link type is point-to-point (which is 3 seconds as defined in IEEE 802.3D-2004 17.20.4); otherwise it equals the spanning tree's maximum age for configuration messages (see maximum age under [“Configuring Global Settings for STA” on page 207](#)).

An interface cannot function as an edge port under the following conditions:

- If spanning tree mode is set to STP ([page 207](#)), edge-port mode cannot automatically transition to operational edge-port state using the automatic setting.
- If loopback detection is enabled ([page 205](#)) and a loopback BPDU is detected, the interface cannot function as an edge port until the loopback state is released.
- If an interface is in forwarding state and its role changes, the interface cannot continue to function as an edge port even if the edge delay time has expired.
- If the port does not receive any BPDUs after the edge delay timer expires, its role changes to designated port and it immediately enters forwarding state (see [“Displaying Interface Settings for STA” on page 218](#)).

When edge port is set as auto, the operational state is determined automatically by the Bridge Detection State Machine described in 802.1D-2004, where the edge port state may change dynamically based on environment changes (e.g., receiving a BPDU or not within the required interval).

- ◆ **BPDU Guard** – This feature protects edge ports from receiving BPDUs. It prevents loops by shutting down an edge port when a BPDU is received instead of putting it into the spanning tree discarding state. In a valid configuration, configured edge ports should not receive BPDUs. If an edge port receives a BPDU an invalid configuration exists, such as a connection to an unauthorized device. The BPDU guard feature provides a secure response to invalid configurations because an administrator must manually enable the port. (Default: Disabled)

BPDU guard can only be configured on an interface if the edge port attribute is not disabled (that is, if edge port is set to enabled or auto).

- ◆ **BPDU Guard Auto Recovery** – Automatically re-enables an interface after the specified interval. (Range: 30-86400 seconds; Default: Disabled)
- ◆ **BPDU Guard Auto Recovery Interval** – The time to wait before re-enabling an interface. (Range: 30-86400 seconds; Default: 300 seconds)
- ◆ **BPDU Filter** – BPDU filtering allows you to avoid transmitting BPDUs on configured edge ports that are connected to end nodes. By default, STA sends BPDUs to all ports regardless of whether administrative edge is enabled on a port. BPDU filtering is configured on a per-port basis. (Default: Disabled)

BPDU filter can only be configured on an interface if the edge port attribute is not disabled (that is, if edge port is set to enabled or auto).

- ◆ **Migration** – If at any time the switch detects STP BPDUs, including Configuration or Topology Change Notification BPDUs, it will automatically set the selected interface to forced STP-compatible mode. However, you can also use the Protocol Migration button to manually re-check the appropriate BPDU format (RSTP or STP-compatible) to send on the selected interfaces. (Default: Disabled)

- ◆ **TC Propagate Stop** – Stops the propagation of topology change notifications (TCN). (Default: Disabled)

### Web Interface

To configure interface settings for STA:

1. Click Spanning Tree, STA.
2. Select Configure Interface from the Step list.
3. Select Configure from the Action list.
4. Modify any of the required attributes.
5. Click Apply.

**Figure 121: Configuring Interface Settings for STA**

| Port | Spanning Tree | BPDU Flooding | Priority (0-240, in steps of 16) | Admin Path Cost (0-200000000, 0: Auto) | Admin Link Type | Root Guard | Admin Edge Port | BPDU Guard | BPDU Guard Auto Recovery | BPDU Guard Auto Recovery Interval (30-86400) | BPDU Filter | Migration | TC Propagate Stop |
|------|---------------|---------------|----------------------------------|--|-----------------|------------|-----------------|------------|--------------------------|--|-------------|-----------|-------------------|
| 1    | Enabled       | Enabled       | 128                              | 0                                      | Auto            | Enabled    | Auto            | Enabled    | Enabled                  | 300  | Enabled     | Enabled   | Enabled           |
| 2    | Enabled       | Enabled       | 128                              | 0                                      | Auto            | Enabled    | Auto            | Enabled    | Enabled                  | 300  | Enabled     | Enabled   | Enabled           |
| 3    | Enabled       | Enabled       | 128                              | 0                                      | Auto            | Enabled    | Auto            | Enabled    | Enabled                  | 300  | Enabled     | Enabled   | Enabled           |
| 4    | Enabled       | Enabled       | 128                              | 0                                      | Auto            | Enabled    | Auto            | Enabled    | Enabled                  | 300  | Enabled     | Enabled   | Enabled           |
| 5    | Enabled       | Enabled       | 128                              | 0                                      | Auto            | Enabled    | Auto            | Enabled    | Enabled                  | 300  | Enabled     | Enabled   | Enabled           |

## Displaying Interface Settings for STA

Use the Spanning Tree > STA (Configure Interface - Show Information) page to display the current status of ports or trunks in the Spanning Tree.

### Parameters

These parameters are displayed:

- ◆ **Spanning Tree** – Shows if STA has been enabled on this interface.
- ◆ **BPDU Flooding** – Shows if BPDUs will be flooded to other ports when spanning tree is disabled globally on the switch or disabled on a specific port.
- ◆ **STA Status** – Displays current state of this port within the Spanning Tree:
  - **Discarding** - Port receives STA configuration messages, but does not forward packets.


- **Learning** - Port has transmitted configuration messages for an interval set by the Forward Delay parameter without receiving contradictory information. Port address table is cleared, and the port begins learning addresses.
- **Forwarding** - Port forwards packets, and continues learning addresses.

The rules defining port status are:

- A port on a network segment with no other STA compliant bridging device is always forwarding.
  - If two ports of a switch are connected to the same segment and there is no other STA device attached to this segment, the port with the smaller ID forwards packets and the other is discarding.
  - All ports are discarding when the switch is booted, then some of them change state to learning, and then to forwarding.
- 
- ◆ **Forward Transitions** – The number of times this port has transitioned from the Learning state to the Forwarding state.
  - ◆ **Designated Cost** – The cost for a packet to travel from this port to the root in the current Spanning Tree configuration. The slower the media, the higher the cost.
  - ◆ **Designated Bridge** – The bridge priority and MAC address of the device through which this port must communicate to reach the root of the Spanning Tree.
  - ◆ **Designated Port** – The port priority and number of the port on the designated bridging device through which this switch must communicate with the root of the Spanning Tree.
  - ◆ **Oper Path Cost** – The contribution of this port to the path cost of paths towards the spanning tree root which include this port.
  - ◆ **Oper Link Type** – The operational point-to-point status of the LAN segment attached to this interface. This parameter is determined by manual configuration or by auto-detection, as described for Admin Link Type in STA Port Configuration on [page 214](#).
  - ◆ **Oper Edge Port** – This parameter is initialized to the setting for Admin Edge Port in STA Port Configuration on [page 214](#) (i.e., true or false), but will be set to false if a BPDU is received, indicating that another bridge is attached to this port.
  - ◆ **Port Role** – Roles are assigned according to whether the port is part of the active topology, that is the best port connecting a non-root bridge to the root bridge (i.e., **root** port), connecting a LAN through the bridge to the root bridge (i.e., **designated** port), is the MSTI regional root (i.e., **master** port), or is an **alternate** or **backup** port that may provide connectivity if other bridges,

bridge ports, or LANs fail or are removed. The role is set to disabled (i.e., **disabled** port) if a port has no role within the spanning tree.

**Figure 122: STA Port Roles**

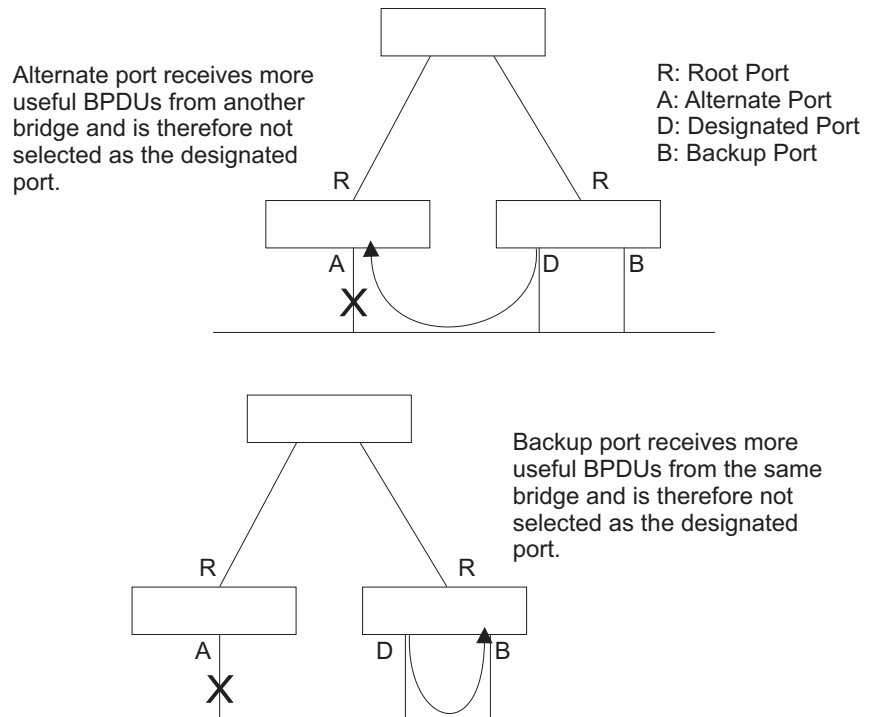

The criteria used for determining the port role is based on root bridge ID, root path cost, designated bridge, designated port, port priority, and port number, in that order and as applicable to the role under question.

### Web Interface

To display interface settings for STA:

1. Click Spanning Tree, STA.
2. Select Configure Interface from the Step list.
3. Select Show Information from the Action list.



**Figure 123: Displaying Interface Settings for STA**

Spanning Tree > STA

Step: 2. Configure Interface Action: Show Information

Interface ☒ Port ☐ Trunk

Spanning Tree Port List Total: 52

| Port | Spanning Tree | BPDU Flooding | STA Status | Forward Transitions | Designated Cost | Designated Bridge  | Designated Port | Oper Path Cost | Oper Link Type | Oper Edge Port | Port Role  |
|------|---------------|---------------|------------|---------------------|-----------------|--------------------|-----------------|----------------|----------------|----------------|------------|
| 1    | Enabled       | Enabled       | Forwarding | 3                   | 0               | 32768.00000C0000FD | 128.1           | 10000          | Point-to-Point | Disabled       | Designated |
| 2    | Enabled       | Enabled       | Discarding | 0                   | 0               | 32768.00000C0000FD | 128.2           | 10000          | Point-to-Point | Disabled       | Disabled   |
| 3    | Enabled       | Enabled       | Discarding | 0                   | 0               | 32768.00000C0000FD | 128.3           | 10000          | Point-to-Point | Disabled       | Disabled   |
| 4    | Enabled       | Enabled       | Discarding | 0                   | 0               | 32768.00000C0000FD | 128.4           | 10000          | Point-to-Point | Disabled       | Disabled   |
| 5    | Enabled       | Enabled       | Discarding | 0                   | 0               | 32768.00000C0000FD | 128.5           | 10000          | Point-to-Point | Disabled       | Disabled   |

## Configuring Multiple Spanning Trees

Use the Spanning Tree > MSTP (Configure Global) page to create an MSTP instance, or to add VLAN groups to an MSTP instance.

### Command Usage

MSTP generates a unique spanning tree for each instance. This provides multiple pathways across the network, thereby balancing the traffic load, preventing wide-scale disruption when a bridge node in a single instance fails, and allowing for faster convergence of a new topology for the failed instance.

By default all VLANs are assigned to the Internal Spanning Tree (MST Instance 0) that connects all bridges and LANs within the MST region. This switch supports up to 33 instances. You should try to group VLANs which cover the same general area of your network. However, remember that you must configure all bridges within the same MSTI Region (page 207) with the same set of instances, and the same instance (on each bridge) with the same set of VLANs. Also, note that RSTP treats each MSTI region as a single node, connecting all regions to the Common Spanning Tree.

To use multiple spanning trees:

1. Set the spanning tree type to MSTP (page 207).
2. Enter the spanning tree priority for the selected MST instance on the Spanning Tree > MSTP (Configure Global - Add) page.
3. Add the VLANs that will share this MSTI on the Spanning Tree > MSTP (Configure Global - Add Member) page.



**Note:** All VLANs are automatically added to the IST (Instance 0).

To ensure that the MSTI maintains connectivity across the network, you must configure a related set of bridges with the same MSTI settings.

### Parameters

These parameters are displayed:

- ◆ **MST ID** – Instance identifier to configure. (Range: 0-4094)
- ◆ **VLAN ID** – VLAN to assign to this MST instance. (Range: 1-4094)
- ◆ **Priority** – The priority of a spanning tree instance. (Range: 0-61440 in steps of 4096; Options: 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, 61440; Default: 32768)

### Web Interface

To create instances for MSTP:

1. Click Spanning Tree, MSTP.
2. Select Configure Global from the Step list.
3. Select Add from the Action list.
4. Specify the MST instance identifier and the initial VLAN member. Additional member can be added using the Spanning Tree > MSTP (Configure Global - Add Member) page. If the priority is not specified, the default value 32768 is used.
5. Click Apply.

**Figure 124: Creating an MST Instance**

Spanning Tree > MSTP

Step: 1. Configure Global Action: Add

MST ID (0-4094) 1

VLAN ID (1-4094) 1

Priority (0-61440, in steps of 4096)

Apply Revert

To show the MSTP instances:

1. Click Spanning Tree, MSTP.
2. Select Configure Global from the Step list.
3. Select Show from the Action list.

**Figure 125: Displaying MST Instances**

The screenshot shows the 'Spanning Tree > MSTP' configuration page. At the top, there is a 'Step' dropdown set to '1. Configure Global' and an 'Action' dropdown set to 'Show'. Below this, the 'MST List' is displayed with a 'Total: 2' count. The list contains two entries: MST ID 0 and MST ID 1. Each entry has a checkbox to its left. At the bottom right, there are 'Delete' and 'Revert' buttons.

| MST ID |
|--------|
| 0      |
| 1      |

To modify the priority for an MST instance:

1. Click Spanning Tree, MSTP.
2. Select Configure Global from the Step list.
3. Select Modify from the Action list.
4. Modify the priority for an MSTP Instance.
5. Click Apply.

**Figure 126: Modifying the Priority for an MST Instance**

The screenshot shows the 'Spanning Tree > MSTP' configuration page with the 'Action' dropdown set to 'Modify'. The 'MST Details List' is displayed with a 'Total: 2' count. The list has two columns: 'MST ID' and 'Priority (0-61440, in steps of 4096)'. For MST ID 0, the priority is 0. For MST ID 1, the priority is 32768. Each entry has a text input field for the priority. At the bottom right, there are 'Apply' and 'Revert' buttons.

| MST ID | Priority (0-61440, in steps of 4096) |
|--------|--------------------------------------|
| 0      | 0                                    |
| 1      | 32768                                |

To display global settings for MSTP:

1. Click Spanning Tree, MSTP.
2. Select Configure Global from the Step list.
3. Select Show Information from the Action list.

4. Select an MST ID. The attributes displayed on this page are described under [“Displaying Global Settings for STA” on page 213](#).

**Figure 127: Displaying Global Settings for an MST Instance**

The screenshot shows the 'Spanning Tree > MSTP' configuration page. At the top, there is a breadcrumb 'Spanning Tree > MSTP'. Below it, there are two dropdown menus: 'Step: 1. Configure Global' and 'Action: Show Information'. The main content area displays the global settings for MST ID 1. The settings are as follows:

| Spanning Tree > MSTP                                  |        |                       |  |
|---|--------|-----------------------|--|
| Step: 1. Configure Global    Action: Show Information |        |                       |  |
| MST ID: 1   |        |                       |  |
| Priority  | 0      | Designated Root       | 32768.0030F1245660                     |
| Bridge ID   | 20     | Root Port             | 2                                      |
| Max Age   | 15 sec | Root Path Cost        | 32768.000001010010                     |
| Hello Time  | 23 sec | Configuration Changes | 500000                                 |
| Forward Delay   | 2 sec  | Last Topology Change  | 0 days, 1 hours, 10 minutes, 0 seconds |

To add additional VLAN groups to an MSTP instance:

1. Click Spanning Tree, MSTP.
2. Select Configure Global from the Step list.
3. Select Add Member from the Action list.
4. Select an MST instance from the MST ID list.
5. Enter the VLAN group to add to the instance in the VLAN ID field. Note that the specified member does not have to be a configured VLAN.
6. Click Apply

**Figure 128: Adding a VLAN to an MST Instance**

The screenshot shows the 'Spanning Tree > MSTP' configuration page with the 'Add Member' action selected. The 'Step' dropdown is set to '1. Configure Global' and the 'Action' dropdown is set to 'Add Member'. The 'MST ID' is set to 1. The 'VLAN ID (1-4094)' field contains the value 1. At the bottom right, there are two buttons: 'Apply' and 'Revert'.

To show the VLAN members of an MSTP instance:

1. Click Spanning Tree, MSTP.
2. Select Configure Global from the Step list.
3. Select Show Member from the Action list.

**Figure 129: Displaying Members of an MST Instance**

The screenshot shows the 'Spanning Tree > MSTP' configuration page. At the top, there are two dropdown menus: 'Step: 1. Configure Global' and 'Action: Show Member'. Below these, there is a field for 'MST ID' set to '0'. A link 'Member List' is followed by 'Total: 4094'. To the right of the table are tabs numbered 1 through 10, with tab 1 selected. The table has two columns: a checkbox column and a 'VLAN' column. The first five rows show VLANs 1 through 5, each with an unchecked checkbox.

|                          | VLAN |
|--------------------------|------|
| <input type="checkbox"/> | 1    |
| <input type="checkbox"/> | 2    |
| <input type="checkbox"/> | 3    |
| <input type="checkbox"/> | 4    |
| <input type="checkbox"/> | 5    |

## Configuring Interface Settings for MSTP

Use the Spanning Tree > MSTP (Configure Interface - Configure) page to configure the STA interface settings for an MST instance.

### Parameters

These parameters are displayed:

- ◆ **MST ID** – Instance identifier to configure. (Default: 0)
- ◆ **Interface** – Displays a list of ports or trunks.
- ◆ **STA Status** – Displays the current state of this interface within the Spanning Tree. (See [“Displaying Interface Settings for STA” on page 218](#) for additional information.)
  - **Discarding** – Port receives STA configuration messages, but does not forward packets.
  - **Learning** – Port has transmitted configuration messages for an interval set by the Forward Delay parameter without receiving contradictory information. Port address table is cleared, and the port begins learning addresses.
  - **Forwarding** – Port forwards packets, and continues learning addresses.

- ◆ **Priority** – Defines the priority used for this port in the Spanning Tree Protocol. If the path cost for all ports on a switch are the same, the port with the highest priority (i.e., lowest value) will be configured as an active link in the Spanning Tree. This makes a port with higher priority less likely to be blocked if the Spanning Tree Protocol is detecting network loops. Where more than one port is assigned the highest priority, the port with lowest numeric identifier will be enabled. (Default: 128; Range: 0-240, in steps of 16)
- ◆ **Admin MST Path Cost** – This parameter is used by the MSTP to determine the best path between devices. Therefore, lower values should be assigned to ports attached to faster media, and higher values assigned to ports with slower media. (Path cost takes precedence over port priority.) Note that when the Path Cost Method is set to short (page 207), the maximum path cost is 65,535.

By default, the system automatically detects the speed and duplex mode used on each port, and configures the path cost according to the values shown below. Path cost “0” is used to indicate auto-configuration mode. When the short path cost method is selected and the default path cost recommended by the IEEE 8021w standard exceeds 65,535, the default is set to 65,535.

The recommended range is listed in [Table 11 on page 215](#).

The default path costs are listed in [Table 12 on page 215](#).

### Web Interface

To configure MSTP parameters for a port or trunk:

1. Click Spanning Tree, MSTP.
2. Select Configure Interface from the Step list.
3. Select Configure from the Action list.
4. Enter the priority and path cost for an interface
5. Click Apply.

**Figure 130: Configuring MSTP Interface Settings**

Spanning Tree > MSTP

Step: 2. Configure Interface Action: Configure

MST ID: 0

Interface: ☒ Port ☐ Trunk

Spanning Tree Port List Total: 52

| Port | STA Status | Priority (0-240, in steps of 16) | Admin MST Path Cost (0-200000000, 0: Auto) |
|------|------------|----------------------------------|--|
| 1    | Forwarding | 128                              | 0  |
| 2    | Discarding | 128                              | 0  |
| 3    | Discarding | 128                              | 0  |
| 4    | Discarding | 128                              | 0  |
| 5    | Discarding | 128                              | 0  |

To display MSTP parameters for a port or trunk:

1. Click Spanning Tree, MSTP.
2. Select Configure Interface from the Step list.
3. Select Show Information from the Action list.

**Figure 131: Displaying MSTP Interface Settings**

Spanning Tree > MSTP

Step: 2. Configure Interface Action: Show Information

MSTID: 0

Interface: ☒ Port ☐ Trunk

Spanning Tree Port List Total: 52

| Port | STA Status | Forward Transitions | Designated Cost | Designated Bridge    | Designated Port | Oper Path Cost | Oper Link Type | Oper Edge Port | Port Role |
|------|------------|---------------------|-----------------|----------------------|-----------------|----------------|----------------|----------------|-----------|
| 1    | Discarding | 3                   | 100000          | 32768.0.00E00C109000 | 128.1           | 100000         | Point-to-Point | Disabled       | Alternate |
| 2    | Forwarding | 142                 | 100000          | 32768.0.00E00C109000 | 128.7           | 10000          | Point-to-Point | Disabled       | Root      |
| 3    | Discarding | 70                  | 100000          | 32768.0.00E00C109000 | 128.7           | 10000          | Point-to-Point | Disabled       | Alternate |
| 4    | Discarding | 0                   | 110000          | 32768.0.CC37ABBC4C5A | 128.4           | 10000          | Point-to-Point | Disabled       | Disabled  |





---

# Congestion Control

The switch can set the maximum upload or download data transfer rate for any port. It can also control traffic storms by setting a maximum threshold for broadcast traffic or multicast traffic. It can also set bounding thresholds for broadcast and multicast storms which can be used to automatically trigger rate limits or to shut down a port.

Congestion Control includes following options:

- ◆ **Rate Limiting** – Sets the input and output rate limits for a port.
- ◆ **Storm Control** – Sets the traffic storm threshold for each interface.
- ◆ **Automatic Traffic Control** – Sets thresholds for broadcast and multicast storms which can be used to trigger configured rate limits or to shut down a port.

---

## Rate Limiting

Use the Traffic > Rate Limit page to apply rate limiting to ingress or egress ports. This function allows the network manager to control the maximum rate for traffic received or transmitted on an interface. Rate limiting is configured on interfaces at the edge of a network to limit traffic into or out of the network. Packets that exceed the acceptable amount of traffic are dropped.

Rate limiting can be applied to individual ports or trunks. When an interface is configured with this feature, the traffic rate will be monitored by the hardware to verify conformity. Non-conforming traffic is dropped, conforming traffic is forwarded without any changes.

### Parameters

These parameters are displayed:

- ◆ **Interface** – Displays the switch's ports or trunks.
- ◆ **Type** – Indicates the port type. (1000BASE-T, 1000BASE SFP, 10GBASE SFP+)
- ◆ **Status** – Enables or disables the rate limit. (Default: Disabled)
- ◆ **Rate** – Sets the rate limit level.  
(Range: 64 - 1,000,000 kbits per second for Gigabit Ethernet ports;  
64 - 10,000,000 kbits per second for 10 Gigabit Ethernet ports)


- ◆ **Resolution** – Indicates the resolution at which the rate can be configured.

### Web Interface

To configure rate limits:

1. Click Traffic, Rate Limit.
2. Set the interface type to Port or Trunk.
3. Enable the Rate Limit Status for the required interface.
4. Set the rate limit for required interfaces.
5. Click Apply.

**Figure 132: Configuring Rate Limits**

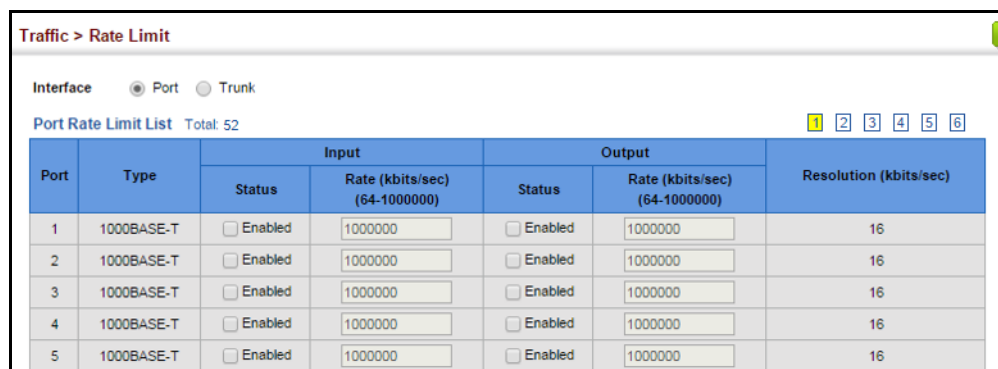

The screenshot shows the 'Traffic > Rate Limit' configuration page. At the top, there are radio buttons for 'Interface' type: 'Port' (selected) and 'Trunk'. Below this, it says 'Port Rate Limit List Total: 52'. There are six numbered tabs (1-6) at the top right. The main table has columns for Port, Type, Input Status, Input Rate (kbits/sec), Output Status, Output Rate (kbits/sec), and Resolution (kbits/sec). The table contains five rows of data, all with '1000BASE-T' type and 'Enabled' status, with a rate limit of 1000000 and a resolution of 16.

| Port | Type       | Input                                       |                                  | Output                                      |                                  | Resolution (kbits/sec) |
|------|------------|---|----------------------------------|---|----------------------------------|------------------------|
|      |            | Status                                      | Rate (kbits/sec)<br>(64-1000000) | Status                                      | Rate (kbits/sec)<br>(64-1000000) |                        |
| 1    | 1000BASE-T | <input checked="" type="checkbox"/> Enabled | 1000000                          | <input checked="" type="checkbox"/> Enabled | 1000000                          | 16                     |
| 2    | 1000BASE-T | <input checked="" type="checkbox"/> Enabled | 1000000                          | <input checked="" type="checkbox"/> Enabled | 1000000                          | 16                     |
| 3    | 1000BASE-T | <input checked="" type="checkbox"/> Enabled | 1000000                          | <input checked="" type="checkbox"/> Enabled | 1000000                          | 16                     |
| 4    | 1000BASE-T | <input checked="" type="checkbox"/> Enabled | 1000000                          | <input checked="" type="checkbox"/> Enabled | 1000000                          | 16                     |
| 5    | 1000BASE-T | <input checked="" type="checkbox"/> Enabled | 1000000                          | <input checked="" type="checkbox"/> Enabled | 1000000                          | 16                     |

## Storm Control

Use the Traffic > Storm Control page to configure broadcast, multicast, and unknown unicast storm control thresholds. Traffic storms may occur when a device on your network is malfunctioning, or if application programs are not well designed or properly configured. If there is too much traffic on your network, performance can be severely degraded or everything can come to complete halt.

You can protect your network from traffic storms by setting a threshold for broadcast, multicast or unknown unicast traffic. Any packets exceeding the specified threshold will then be dropped.

### Command Usage

- ◆ Broadcast Storm Control is enabled by default.
- ◆ When traffic exceeds the threshold specified for broadcast and multicast or unknown unicast traffic, packets exceeding the threshold are dropped until the rate falls back down beneath the threshold.

- ◆ Rate limits set by the storm control function are also used by automatic storm control when the control response is set to rate control on the Auto Traffic Control (Configure Interface) page.
- ◆ Using both rate limiting and storm control on the same interface may lead to unexpected results. It is therefore not advisable to use both of these features on the same interface.

### Parameters

These parameters are displayed:

- ◆ **Interface** – Displays a list of ports or trunks.
- ◆ **Type** – Indicates the port type. (1000BASE-T, 1000BASE SFP or 10GBASE SFP+)
- ◆ **Unknown Unicast** – Specifies storm control for unknown unicast traffic.
- ◆ **Multicast** – Specifies storm control for multicast traffic.
- ◆ **Broadcast** – Specifies storm control for broadcast traffic.
- ◆ **Status** – Enables or disables storm control. (Default: disabled for broadcast, multicast and unknown unicast storm control)
- ◆ **Rate** – Threshold level in packets per second.  
(Range: 1-1048574 pps; Default: Disabled for unknown unicast and multicast traffic, 500 pps for broadcast traffic)
- ◆ **Resolution** – Indicates the resolution at which the rate can be configured.

### Web Interface

To configure broadcast storm control:

1. Click Traffic, Storm Control.
2. Set the interface type to Port or Trunk.
3. Set the Status field to enable or disable storm control.
4. Set the required threshold beyond which the switch will start dropping packets.
5. Click Apply.

**Figure 133: Configuring Storm Control**

| Traffic > Storm Control   |            |   |                                   |   |                                   |   |                                   |                          |
|---|------------|---|-----------------------------------|---|-----------------------------------|---|-----------------------------------|--------------------------|
| Interface <input checked="" type="radio"/> Port <input type="radio"/> Trunk |            |   |                                   |   |                                   |   |                                   |                          |
| Port Storm Control List Total: 52   |            |   |                                   |   |                                   |   |                                   |                          |
| Port  | Type       | Unknown Unicast                             |                                   | Multicast                                   |                                   | Broadcast                                   |                                   | Resolution (packets/sec) |
|   |            | Status                                      | Rate (packets/sec)<br>(1-1048574) | Status                                      | Rate (packets/sec)<br>(1-1048574) | Status                                      | Rate (packets/sec)<br>(1-1048574) |                          |
| 1   | 1000BASE-T | <input checked="" type="checkbox"/> Enabled | 500                               | <input checked="" type="checkbox"/> Enabled | 500                               | <input checked="" type="checkbox"/> Enabled | 500                               | 1                        |
| 2   | 1000BASE-T | <input checked="" type="checkbox"/> Enabled | 500                               | <input checked="" type="checkbox"/> Enabled | 500                               | <input checked="" type="checkbox"/> Enabled | 500                               | 1                        |
| 3   | 1000BASE-T | <input checked="" type="checkbox"/> Enabled | 500                               | <input checked="" type="checkbox"/> Enabled | 500                               | <input checked="" type="checkbox"/> Enabled | 500                               | 1                        |
| 4   | 1000BASE-T | <input checked="" type="checkbox"/> Enabled | 500                               | <input checked="" type="checkbox"/> Enabled | 500                               | <input checked="" type="checkbox"/> Enabled | 500                               | 1                        |
| 5   | 1000BASE-T | <input checked="" type="checkbox"/> Enabled | 500                               | <input checked="" type="checkbox"/> Enabled | 500                               | <input checked="" type="checkbox"/> Enabled | 500                               | 1                        |

## Automatic Traffic Control

Use the Traffic > Auto Traffic Control pages to configure bounding thresholds for broadcast and multicast storms which can automatically trigger rate limits or shut down a port.


### CLI References

- ◆ [“Automatic Traffic Control Commands” on page 785](#)

### Command Usage

ATC includes storm control for broadcast or multicast traffic. The control response for either of these traffic types is the same, as shown in the following diagrams.

**Figure 134: Storm Control by Limiting the Traffic Rate**

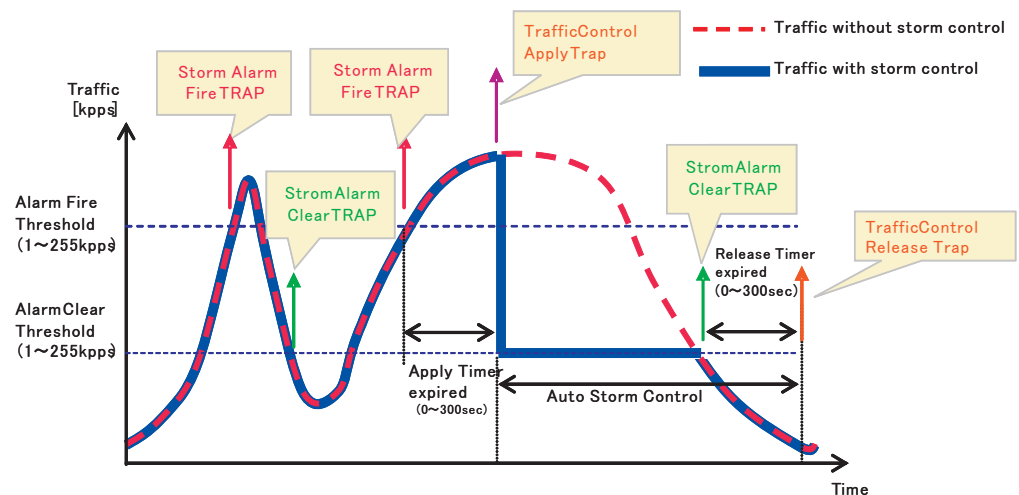


The key elements of this diagram are described below:

- ◆ **Alarm Fire Threshold** – The highest acceptable traffic rate. When ingress traffic exceeds the threshold, ATC sends a Storm Alarm Fire Trap and logs it.

- ◆ When traffic exceeds the alarm fire threshold and the apply timer expires, a traffic control response is applied, and a Traffic Control Apply Trap is sent and logged.
- ◆ Alarm Clear Threshold – The lower threshold beneath which a control response can be automatically terminated after the release timer expires. When ingress traffic falls below this threshold, ATC sends a Storm Alarm Clear Trap and logs it.
- ◆ When traffic falls below the alarm clear threshold after the release timer expires, traffic control (for rate limiting) will be stopped and a Traffic Control Release Trap sent and logged. Note that if the control action has shut down a port, it can only be manually re-enabled using Manual Control Release (see [page 235](#)).
- ◆ The traffic control response of rate limiting can be released automatically or manually. The control response of shutting down a port can only be released manually.

**Figure 135: Storm Control by Shutting Down a Port**

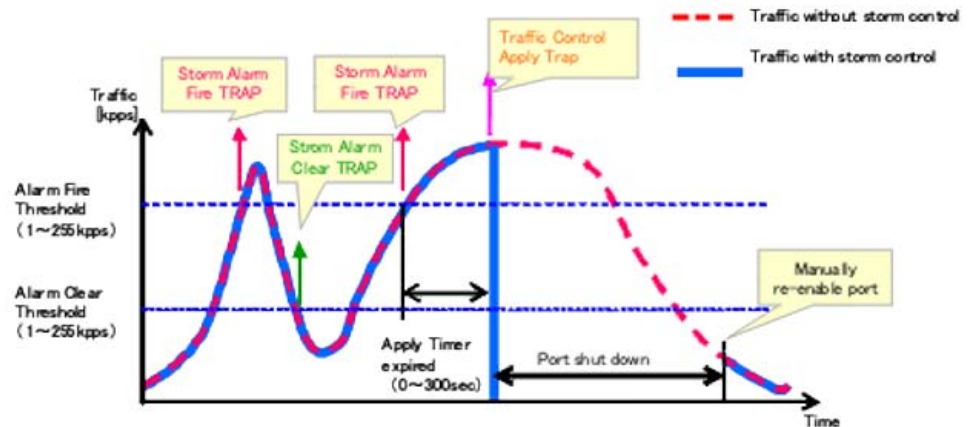

The key elements of this diagram are the same as that described in the preceding diagram, except that automatic release of the control response is not provided. When traffic control is applied, you must manually re-enable the port.

#### Functional Limitations

Automatic storm control is a software level control function. Traffic storms can also be controlled at the hardware level using Port Broadcast Control or Port Multicast Control (as described on [page 230](#)). However, only one of these control types can be applied to a port. Enabling automatic storm control on a port will disable hardware-level storm control on that port.

**Setting the ATC Timers** Use the Traffic > Auto Traffic Control (Configure Global) page to set the time at which to apply the control response after ingress traffic has exceeded the upper threshold, and the time at which to release the control response after ingress traffic has fallen beneath the lower threshold.

### CLI References

- ◆ [“auto-traffic-control apply-timer” on page 788](#)
- ◆ [“auto-traffic-control release-timer” on page 788](#)

### Command Usage

- ◆ After the apply timer expires, the settings in the Traffic > Automatic Traffic Control (Configure Interface) page are used to determine if a control action will be triggered (as configured under the Action field) or a trap message sent (as configured under the Trap Storm Fire field).
- ◆ The release timer only applies to a Rate Control response set in the Action field of the ATC (Interface Configuration) page. When a port has been shut down by a control response, it must be manually re-enabled using the Manual Control Release (see [page 235](#)).

### Parameters

These parameters are displayed:

- ◆ **Broadcast Apply Timer** – The interval after the upper threshold has been exceeded at which to apply the control response to broadcast storms. (Range: 1-300 seconds; Default: 300 seconds)
- ◆ **Broadcast Release Timer** – The time at which to release the control response after ingress traffic has fallen beneath the lower threshold for broadcast storms. (Range: 1-900 seconds; Default: 900 seconds)
- ◆ **Multicast Apply Timer** – The interval after the upper threshold has been exceeded at which to apply the control response to multicast storms. (Range: 1-300 seconds; Default: 300 seconds)
- ◆ **Multicast Release Timer** – The time at which to release the control response after ingress traffic has fallen beneath the lower threshold for multicast storms. (Range: 1-900 seconds; Default: 900 seconds)

### Web Interface

To configure the response timers for automatic storm control:

1. Click Traffic, Auto Traffic Control.
2. Select Configure Global from the Step field.
3. Set the apply and release timers for broadcast and multicast storms.
4. Click Apply.

**Figure 136: Configuring ATC Timers**

Traffic > Auto Traffic Control

Step: 1. Configure Global ▼

|                                 |                                  |     |
|---------------------------------|----------------------------------|-----|
| Broadcast Apply Timer (5-300)   | <input type="text" value="300"/> | sec |
| Broadcast Release Timer (5-900) | <input type="text" value="900"/> | sec |
| Multicast Apply Timer (5-300)   | <input type="text" value="300"/> | sec |
| Multicast Release Timer (5-900) | <input type="text" value="900"/> | sec |

### Configuring ATC Thresholds and Responses

Use the Traffic > Auto Traffic Control (Configure Interface) page to set the storm control mode (broadcast or multicast), the traffic thresholds, the control response, to automatically release a response of rate limiting, or to send related SNMP trap messages.

### CLI References

[“Automatic Traffic Control Commands” on page 785](#)

### Parameters

These parameters are displayed:

- ◆ **Storm Control** – Specifies automatic storm control for broadcast traffic or multicast traffic.
- ◆ **Port** – Port identifier.
- ◆ **State** – Enables automatic traffic control for broadcast or multicast storms. (Default: Disabled)
- ◆ Automatic storm control is a software level control function. Traffic storms can also be controlled at the hardware level using the [Storm Control](#) menu. However, only one of these control types can be applied to a port. Enabling automatic storm control on a port will disable hardware-level storm control on that port.
- ◆ **Action** – When the Alarm Fire Threshold (upper threshold) is exceeded and the apply timer expires, one of the following control responses will be triggered.
  - **Rate Control** – The rate of ingress traffic is limited to the level set by the Alarm Clear Threshold. Rate limiting is discontinued only after the traffic rate has fallen beneath the Alarm Clear Threshold (lower threshold), and the release timer has expired. (This is the default response.)
  - **Shutdown** – The port is administratively disabled. A port disabled by automatic traffic control can only be manually re-enabled using the Manual Control Release attribute.

- ◆ **Auto Release Control** – Automatically stops a traffic control response of rate limiting when traffic falls below the alarm clear threshold and the release timer expires as illustrated in [Figure 134 on page 232](#). When traffic control stops, the event is logged by the system and a Traffic Release Trap can be sent. (Default: Disabled)
- ◆ If automatic control release is not enabled and a control response of rate limiting has been triggered, you can manually stop the rate limiting response using the Manual Control Release attribute. If the control response has shut down a port, it can also be re-enabled using Manual Control Release.
- ◆ **Alarm Fire Threshold** – The upper threshold for ingress traffic beyond which a storm control response is triggered after the Apply Timer expires. (Range: 1-255 kilo-packets per second; Default: 250 kpps)
- ◆ Once the traffic rate exceeds the upper threshold and the Apply Timer expires, a trap message will be sent if configured by the Trap Storm Fire attribute.
- ◆ **Alarm Clear Threshold** – The lower threshold for ingress traffic beneath which a control response for rate limiting will be released after the Release Timer expires, if so configured by the Auto Release Control attribute. (Range: 1-255 kilo-packets per second; Default: 250 kpps)
- ◆ If rate limiting has been configured as a control response and Auto Control Release is enabled, rate limiting will be discontinued after the traffic rate has fallen beneath the lower threshold, and the Release Timer has expired. Note that if a port has been shut down by a control response, it will not be re-enabled by automatic traffic control. It can only be manually re-enabled using Manual Control Release.
- ◆ Once the traffic rate falls beneath the lower threshold and the Release Timer expires, a trap message will be sent if configured by the Trap Storm Clear attribute.
- ◆ **Trap Storm Fire** – Sends a trap when traffic exceeds the upper threshold for automatic storm control. (Default: Disabled)
- ◆ **Trap Storm Clear** – Sends a trap when traffic falls beneath the lower threshold after a storm control response has been triggered. (Default: Disabled)
- ◆ **Trap Traffic Apply** – Sends a trap when traffic exceeds the upper threshold for automatic storm control and the apply timer expires. (Default: Disabled)
- ◆ **Trap Traffic Release** – Sends a trap when traffic falls beneath the lower threshold after a storm control response has been triggered and the release timer expires. (Default: Disabled)
- ◆ **Manual Control Release** – Manually releases a control response of rate-limiting or port shutdown any time after the specified action has been triggered.



## Web Interface

To configure the response timers for automatic storm control:

1. Click Traffic, Auto Traffic Control.
2. Select Configure Interface from the Step field.
3. Enable or disable ATC as required, set the control response, specify whether or not to automatically release the control response of rate limiting, set the upper and lower thresholds, and specify which trap messages to send.
4. Click Apply.

**Figure 137: Configuring ATC Interface Attributes**

Traffic > Auto Traffic Control

Step: 2. Configure Interface

Storm Control ☒ Broadcast ☐ Multicast

Auto Traffic Control Broadcast List Total: 52

| Port | State                            | Action       | Auto Release Control             | Alarm Fire Threshold (kpps) (1-255) | Alarm Clear Threshold (kpps) (1-255) | Trap Storm Fire                  | Trap Storm Clear                 | Trap Traffic Apply               | Trap Traffic Release             | Manual Control Release |
|------|----------------------------------|--------------|----------------------------------|-------------------------------------|--------------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|------------------------|
| 1    | <input type="checkbox"/> Enabled | Rate Control | <input type="checkbox"/> Enabled | 128                                 | 128                                  | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | Release                |
| 2    | <input type="checkbox"/> Enabled | Rate Control | <input type="checkbox"/> Enabled | 128                                 | 128                                  | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | Release                |
| 3    | <input type="checkbox"/> Enabled | Rate Control | <input type="checkbox"/> Enabled | 128                                 | 128                                  | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | Release                |
| 4    | <input type="checkbox"/> Enabled | Rate Control | <input type="checkbox"/> Enabled | 128                                 | 128                                  | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | Release                |
| 5    | <input type="checkbox"/> Enabled | Rate Control | <input type="checkbox"/> Enabled | 128                                 | 128                                  | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | Release                |



Class of Service (CoS) allows you to specify which data packets have greater precedence when traffic is buffered in the switch due to congestion. This switch supports CoS with eight priority queues for each port. Data packets in a port's high-priority queue will be transmitted before those in the lower-priority queues. You can set the default priority for each interface, and configure the mapping of frame priority tags to the switch's priority queues.

This chapter describes the following basic topics:

- ◆ **Layer 2 Queue Settings** – Configures each queue, including the default priority, queue mode, queue weight, and mapping of packets to queues based on CoS tags.
- ◆ **Layer 3/4 Priority Settings** – Selects the method by which inbound packets are processed (DSCP or CoS), and sets the per-hop behavior and drop precedence for internal processing.

---

## Layer 2 Queue Settings

This section describes how to configure the default priority for untagged frames, set the queue mode, set the weights assigned to each queue, and map class of service tags to queues.

### Setting the Default Priority for Interfaces

Use the Traffic > Priority > Default Priority page to specify the default port priority for each interface on the switch. All untagged packets entering the switch are tagged with the specified default port priority, and then sorted into the appropriate priority queue at the output port.

### Command Usage

- ◆ This switch provides eight priority queues for each port. It uses Weighted Round Robin to prevent head-of-queue blockage, but can be configured to process each queue in strict order, or use a combination of strict and weighted queueing.
- ◆ The default priority applies for an untagged frame received on a port set to accept all frame types (i.e, receives both untagged and tagged frames). This priority does not apply to IEEE 802.1Q VLAN tagged frames. If the incoming frame is an IEEE 802.1Q VLAN tagged frame, the IEEE 802.1p User Priority bits will be used.

- ◆ If the output port is an untagged member of the associated VLAN, these frames are stripped of all VLAN tags prior to transmission.

### Parameters

These parameters are displayed:

- ◆ **Interface** – Displays a list of ports or trunks.
- ◆ **CoS** – The priority that is assigned to untagged frames received on the specified interface. (Range: 0-7; Default: 0)

### Web Interface

To configure the queue mode:

1. Click Traffic, Priority, Default Priority.
2. Select the interface type to display (Port or Trunk).
3. Modify the default priority for any interface.
4. Click Apply.

**Figure 138: Setting the Default Port Priority**

The screenshot shows the 'Traffic > Priority > Default Priority' configuration page. At the top, there are tabs for 'Port' (selected) and 'Trunk'. Below the tabs, it says 'Port to CoS Mapping Table' with a 'Total: 52'. A table with 6 columns is visible, with the first two columns being 'Port' and 'CoS (0-7)'. The table lists ports 1 through 5, each with a '0' in the 'CoS (0-7)' column. To the right of the table, there are numbered tabs 1 through 6, with tab 1 being active.

| Port | CoS (0-7) |
|------|-----------|
| 1    | 0         |
| 2    | 0         |
| 3    | 0         |
| 4    | 0         |
| 5    | 0         |

### Selecting the Queue Mode

Use the Traffic > Priority > Queue page to set the queue mode for the egress queues on any interface. The switch can be set to service the queues based on a strict rule that requires all traffic in a higher priority queue to be processed before the lower priority queues are serviced, or Weighted Round-Robin (WRR) queuing which specifies a scheduling weight for each queue. It can also be configured to use a combination of strict and weighted queuing.

### Command Usage

- ◆ Strict priority requires all traffic in a higher priority queue to be processed before lower priority queues are serviced.
- ◆ WRR queuing specifies a relative weight for each queue. WRR uses a predefined relative weight for each queue that determines the percentage of service time

the switch services each queue before moving on to the next queue. This prevents the head-of-line blocking that can occur with strict priority queuing.

- ◆ If Strict and WRR mode is selected, a combination of strict service is used for the high priority queues and weighted service for the remaining queues. The queues assigned to use strict priority should be specified using the Strict Mode field parameter.
- ◆ A weight can be assigned to each of the weighted queues (and thereby to the corresponding traffic priorities). This weight sets the frequency at which each queue is polled for service, and subsequently affects the response time for software applications assigned a specific priority value.

Service time is shared at the egress ports by defining scheduling weights for WRR, or one of the queuing modes that use a combination of strict and weighted queuing.

- ◆ The specified queue mode applies to all interfaces.

### Parameters

These parameters are displayed:

- ◆ **Queue Mode**
  - **Strict** – Services the egress queues in sequential order, transmitting all traffic in the higher priority queues before servicing lower priority queues. This ensures that the highest priority packets are always serviced first, ahead of all other traffic.
  - **WRR** – Weighted Round-Robin shares bandwidth at the egress ports by using scheduling weights, and servicing each queue in a round-robin fashion. (This is the default setting.)
  - **Strict and WRR** – Uses strict priority on the high-priority queues and WRR on the remaining queues.
- ◆ **Queue ID** – The ID of the priority queue. (Range: 0-7)
- ◆ **Strict Mode** – If “Strict and WRR” mode is selected, then a combination of strict service is used for the high priority queues and weighted service for the remaining queues. Use this parameter to specify the queues assigned to use strict priority when using the strict-weighted queuing mode. (Default: Disabled)
- ◆ **Weight** – Sets a weight for each queue which is used by the WRR scheduler. (Range: 1-127; Default: Weights 1, 2, 4, 6, 8, 10, 12 and 14 are assigned to queues 0 - 7 respectively)

### Web Interface

To configure the queue mode:

1. Click Traffic, Priority, Queue.
2. Set the queue mode for the port selected.
3. If the weighted queue mode is selected, the queue weight can be modified if required.
4. If the queue mode that uses a combination of strict and weighted queueing is selected, the queues which are serviced first must be specified by enabling strict mode parameter in the table.
5. Click Apply.

**Figure 139: Setting the Queue Mode (Strict)**

The screenshot shows the 'Traffic > Priority > Queue' configuration page. The 'Port' dropdown is set to '1'. The 'Queue Mode' dropdown is set to 'Strict'. There are 'Apply' and 'Revert' buttons at the bottom right.

**Figure 140: Setting the Queue Mode (WRR)**

The screenshot shows the 'Traffic > Priority > Queue' configuration page. The 'Port' dropdown is set to '1'. The 'Queue Mode' dropdown is set to 'WRR'. Below the dropdowns is a 'Queue Setting Table' with a 'Total: 8' label. The table has two columns: 'Queue ID' and 'Weight (1-127)'. The table contains 8 rows with Queue IDs from 0 to 7 and corresponding weights from 1 to 14. There are 'Apply' and 'Revert' buttons at the bottom right.

| Queue ID | Weight (1-127) |
|----------|----------------|
| 0        | 1              |
| 1        | 2              |
| 2        | 4              |
| 3        | 6              |
| 4        | 8              |
| 5        | 10             |
| 6        | 12             |
| 7        | 14             |

**Figure 141: Setting the Queue Mode (Strict and WRR)**

Traffic > Priority > Queue

Port: 1

Queue Mode: Strict and WRR

Queue Setting Table Total: 8

| Queue ID | Strict Mode | Weight (1-127) |
|----------|-------------|----------------|
| 0        | Disabled    | 1              |
| 1        | Disabled    | 2              |
| 2        | Disabled    | 4              |
| 3        | Disabled    | 6              |
| 4        | Disabled    | 8              |
| 5        | Disabled    | 10             |
| 6        | Disabled    | 12             |
| 7        | Disabled    | 14             |

Apply Revert

## Layer 3/4 Priority Settings

### Mapping Layer 3/4 Priorities to CoS Values

The switch supports several common methods of prioritizing layer 3/4 traffic to meet application requirements. Traffic priorities can be specified in the IP header of a frame, using the priority bits in the Type of Service (ToS) octet, or the number of the TCP/UDP port. If priority bits are used, the ToS octet may contain three bits for IP Precedence or six bits for Differentiated Services Code Point (DSCP) service. When these services are enabled, the priorities are mapped to a Class of Service value by the switch, and the traffic then sent to the corresponding output queue.

Because different priority information may be contained in the traffic, this switch maps priority values to the output queues in the following manner – The precedence for priority mapping is DSCP Priority and then Default Port Priority.



**Note:** The default settings used for mapping priority values from ingress traffic to internal DSCP values are used to determine the hardware queues used for egress traffic, not to replace the priority values. These defaults are designed to optimize priority services for the majority of network applications. It should not be necessary to modify any of the default settings, unless a queuing problem occurs with a particular application.

### Setting Priority Processing to DSCP or CoS

The switch allows a choice between using DSCP or CoS priority processing methods. Use the Priority > Trust Mode page to select the required processing method.

#### Command Usage

- ◆ If the QoS mapping mode is set to DSCP, and the ingress packet type is IPv4, then priority processing will be based on the DSCP value in the ingress packet.
- ◆ If the QoS mapping mode is set to DSCP, and a non-IP packet is received, the packet's CoS and CFI (Canonical Format Indicator) values are used for priority processing if the packet is tagged. For an untagged packet, the default port priority (see [page 239](#)) is used for priority processing.
- ◆ If the QoS mapping mode is set to CoS, and the ingress packet type is IPv4, then priority processing will be based on the CoS and CFI values in the ingress packet.

For an untagged packet, the default port priority (see [page 239](#)) is used for priority processing.

#### Parameters

These parameters are displayed:

- ◆ **Port** – Port identifier. (Range: 1-52)
- ◆ **Trust Mode**
  - **CoS** – Maps layer 3/4 priorities using Class of Service values. (This is the default setting.)
  - **DSCP** – Maps layer 3/4 priorities using Differentiated Services Code Point values.

#### Web Interface

To configure the trust mode:

1. Click Traffic, Priority, Trust Mode.
2. Set the trust mode for any port.
3. Click Apply.



**Figure 142: Setting the Trust Mode**

| Port | Trust Mode |
|------|------------|
| 1    | CoS ▼      |
| 2    | CoS ▼      |
| 3    | CoS ▼      |
| 4    | CoS ▼      |
| 5    | CoS ▼      |

### Mapping CoS Priorities to Per-hop Behavior

Use the Traffic > Priority > CoS to Queue page to map CoS/CFI values in incoming packets to per-hop behavior for priority processing.

#### Command Usage

- ◆ The default mapping of CoS/CFI to Queue/CFI values is shown below.

**Table 13: Default Mapping of CoS/CFI Values to Queue/CFI**

| CoS | CFI | 0     | 1     |
|-----|-----|-------|-------|
| 0   |     | (2,0) | (2,0) |
| 1   |     | (0,0) | (0,0) |
| 2   |     | (1,0) | (1,0) |
| 3   |     | (3,0) | (3,0) |
| 4   |     | (4,0) | (4,0) |
| 5   |     | (5,0) | (5,0) |
| 6   |     | (6,0) | (6,0) |
| 7   |     | (7,0) | (7,0) |

- ◆ Enter the per-hop behavior for CoS/CFI paired values.
- ◆ If a packet arrives with a 802.1Q header but it is not an IP packet, then the CoS/CFI-to-Queue mapping table is used to generate priority for processing. Note that priority tags in the original packet are not modified by this command.

#### Parameters

These parameters are displayed:

- ◆ **Port** – Specifies a port.
- ◆ **CoS** – CoS value in ingress packets. (Range: 0-7)
- ◆ **CFI** – Canonical Format Indicator. Set to this parameter to “0” to indicate that the MAC address information carried in the frame is in canonical format. (Range: 0-1)
- ◆ **Queue** – Per-hop behavior, or the priority used for this router hop. (Range: 0-7)

## Web Interface

To map CoS/CFI values to Queue precedence:

1. Click Traffic, Priority, CoS to Queue.
2. Set the Queue for any of the CoS/CFI combinations.
3. Click Apply.

**Figure 143: Configuring CoS to Queue Mapping**

Traffic > Priority > CoS to Queue

Port: 1

CoS to Queue Mapping Table Total: 16

| CoS | CFI | Queue (0-7) |
|-----|-----|-------------|
| 5   | 0   | 5           |
| 5   | 1   | 5           |
| 6   | 0   | 6           |
| 6   | 1   | 6           |
| 7   | 0   | 7           |
| 7   | 1   | 7           |

Restore Default Click this button to restore default queue values.

Apply Revert

## Mapping DSCP Priorities to Per-hop Behavior

Use the Traffic > Priority > DSCP to Queue page to map DSCP values in incoming packets to per-hop behavior for priority processing.

The DSCP is six bits wide, allowing coding for up to 64 different forwarding behaviors. The DSCP replaces the ToS bits, but it retains backward compatibility with the three precedence bits so that non-DSCP compliant, ToS-enabled devices, will not conflict with the DSCP mapping. Based on network policies, different kinds of traffic can be marked for different kinds of forwarding.

## Command Usage

- ◆ Enter per-hop behavior for any of the DSCP values 0 - 63.
- ◆ This map is only used when the priority mapping mode is set to DSCP (see [page 244](#)), and the ingress packet type is IPv4. Any attempt to configure the DSCP-to-Queue map will not be accepted by the switch, unless the trust mode has been set to DSCP.
- ◆ Two QoS domains can have different DSCP definitions, so the DSCP-to-Queue map can be used to modify one set of DSCP values to match the definition of another domain. The mutation map should be applied at the receiving port at the boundary of a QoS administrative domain.

### Parameters

These parameters are displayed:

- ◆ **Port** – Specifies a port.
- ◆ **DSCP** – DSCP value in ingress packets. (Range: 0-63)
- ◆ **Queue** – Per-hop behavior, or the priority used for this router hop. (Range: 0-7)

**Table 14: Default Mapping of DSCP Values to Queue/CFI**

|                | ingress-dscp1 | 0   | 1   | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   |
|----------------|---------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| ingress-dscp10 |               |     |     |     |     |     |     |     |     |     |     |
| 0              |               | 2,0 | 2,0 | 2,0 | 2,0 | 2,0 | 2,0 | 2,0 | 2,0 | 0,0 | 0,0 |
| 1              |               | 0,0 | 0,0 | 0,0 | 0,0 | 0,0 | 0,0 | 1,0 | 1,0 | 1,0 | 1,0 |
| 2              |               | 1,0 | 1,0 | 1,0 | 1,0 | 3,0 | 3,0 | 3,0 | 3,0 | 3,0 | 3,0 |
| 3              |               | 3,0 | 3,0 | 4,0 | 4,0 | 4,0 | 4,0 | 4,0 | 4,0 | 4,0 | 4,0 |
| 4              |               | 5,0 | 5,0 | 5,0 | 5,0 | 5,0 | 5,0 | 5,0 | 5,0 | 6,0 | 6,0 |
| 5              |               | 6,0 | 6,0 | 6,0 | 6,0 | 6,0 | 6,0 | 7,0 | 7,0 | 7,0 | 7,0 |
| 6              |               | 7,0 | 7,0 | 7,0 | 7,0 |     |     |     |     |     |     |

The ingress DSCP is composed of ingress-dscp10 (most significant digit in the left column) and ingress-dscp1 (least significant digit in the top row (in other words,  $\text{ingress-dscp} = \text{ingress-dscp10} * 10 + \text{ingress-dscp1}$ ); and the corresponding queue/cfi is shown at the intersecting cell in the table.

### Web Interface

To map DSCP values to internal PHB/drop precedence:

1. Click Traffic, Priority, DSCP to Queue.
2. Select the port to configure.
3. Set the queue for any DSCP value.
4. Click Apply.

Figure 144: Configuring DSCP to Queue Mapping

Traffic > Priority > DSCP to Queue

Port 1 ▾

DSCP to Queue Mapping Table Total: 64 1 2 3 4 5 6 7

| DSCP | Queue (0-7)                    |
|------|--------------------------------|
| 0    | <input type="text" value="2"/> |
| 1    | <input type="text" value="2"/> |
| 2    | <input type="text" value="2"/> |
| 3    | <input type="text" value="2"/> |
| 4    | <input type="text" value="2"/> |
| 5    | <input type="text" value="2"/> |
| 6    | <input type="text" value="2"/> |
| 7    | <input type="text" value="2"/> |
| 8    | <input type="text" value="0"/> |
| 9    | <input type="text" value="0"/> |

Restore Default [Click this button to restore default queue values.](#)

Apply Revert

This chapter describes the following tasks required to apply QoS policies:

- ◆ **Class Map** – Creates a map which identifies a specific class of traffic.
- ◆ **Policy Map** – Sets the boundary parameters used for monitoring inbound traffic, and the action to take for conforming and non-conforming traffic.
- ◆ **Binding to a Port** – Applies a policy map to an ingress port.

---

## Overview

The commands described in this section are used to configure Quality of Service (QoS) classification criteria and service policies. Differentiated Services (DiffServ) provides policy-based management mechanisms used for prioritizing network resources to meet the requirements of specific traffic types on a per hop basis. Each packet is classified upon entry into the network based on access lists, IP Precedence, DSCP values, VLAN lists, CoS values, or source ports. Using access lists allows you select traffic based on Layer 2, Layer 3, or Layer 4 information contained in each packet. Based on configured network policies, different kinds of traffic can be marked for different kinds of forwarding.

All switches or routers that access the Internet rely on class information to provide the same forwarding treatment to packets in the same class. Class information can be assigned by end hosts, or switches or routers along the path. Priority can then be assigned based on a general policy, or a detailed examination of the packet. However, note that detailed examination of packets should take place close to the network edge so that core switches and routers are not overloaded.

Switches and routers along the path can use class information to prioritize the resources allocated to different traffic classes. The manner in which an individual device handles traffic in the DiffServ architecture is called per-hop behavior. All devices along a path should be configured in a consistent manner to construct a consistent end-to-end QoS solution.



**Note:** You can configure up to 16 rules per class map. You can also include multiple classes in a policy map.

**Note:** You should create a class map before creating a policy map. Otherwise, you will not be able to select a class map from the policy rule settings screen (see [page 253](#)).

### Command Usage

To create a service policy for a specific category or ingress traffic, follow these steps:

1. Use the Configure Class (Add) page to designate a class name for a specific category of traffic.
2. Use the Configure Class (Add Rule) page to edit the rules for each class which specify a type of traffic based on an access list, a DSCP or IP Precedence value, a VLAN, a CoS value, or a source port.
3. Use the Configure Policy (Add) page to designate a policy name for a specific manner in which ingress traffic will be handled.
4. Use the Configure Policy (Add Rule) page to add one or more classes to the policy map. Assign policy rules to each class by “setting” the QoS value (CoS or PHB) to be assigned to the matching traffic class. The policy rule can also be configured to monitor the maximum throughput and burst rate. Then specify the action to take for conforming traffic, or the action to take for a policy violation.
5. Use the Configure Interface page to assign a policy map to a specific interface.



---

**Note:** Up to 16 classes can be included in a policy map.

---

---

## Configuring a Class Map

A class map is used for matching packets to a specified class. Use the Traffic > DiffServ (Configure Class) page to configure a class map.

### Command Usage

- ◆ The class map is used with a policy map ([page 253](#)) to create a service policy ([page 257](#)) for a specific interface that defines packet classification, service tagging, and bandwidth policing. Note that one or more class maps can be assigned to a policy map.
- ◆ Up to 32 class maps can be configured.

### Parameters

These parameters are displayed:

*Add*

- ◆ **Class Name** – Name of the class map. (Range: 1-32 characters)
- ◆ **Type** – Only one match command is permitted per class map, so the match-any field refers to the lone criteria specified by this command.

- ◆ **Description** – A brief description of a class map. (Range: 1-64 characters)

#### Add Rule

- ◆ **Class Name** – Name of the class map.
- ◆ **Type** – Only one match command is permitted per class map, so the match-any field refers to the lone criteria specified by this command.
- ◆ **ACL** – Name of an access control list. Any type of ACL can be specified, including standard or extended IPv4/IPv6 ACLs and MAC ACLs.
- ◆ **IP DSCP** – A DSCP value. (Range: 0-63)
- ◆ **IP Precedence** – An IP Precedence value. (Range: 0-7)
- ◆ **IPv6 DSCP** – A DSCP value contained in an IPv6 packet. (Range: 0-63)
- ◆ **VLAN ID** – A VLAN. (Range:1-4094)
- ◆ **CoS** – A CoS value. (Range: 0-7)
- ◆ **Source Port** – A source port. (Range: 1-52)

#### Web Interface

To configure a class map:

1. Click Traffic, DiffServ.
2. Select Configure Class from the Step list.
3. Select Add from the Action list.
4. Enter a class name.
5. Enter a description.
6. Click Add.


**Figure 145: Configuring a Class Map**

The screenshot shows a web interface for configuring a class map. At the top, it says "Traffic > DiffServ". Below that, there are two dropdown menus: "Step:" with "1. Configure Class" selected, and "Action:" with "Add" selected. The main form has three fields: "Class Name" with the value "rd-class", "Type" with a dropdown menu showing "Match Any", and "Description" with the value "class for software group". At the bottom right, there are two buttons: "Apply" and "Revert".

To show the configured class maps:

1. Click Traffic, DiffServ.
2. Select Configure Class from the Step list.
3. Select Show from the Action list.

**Figure 146: Showing Class Maps**

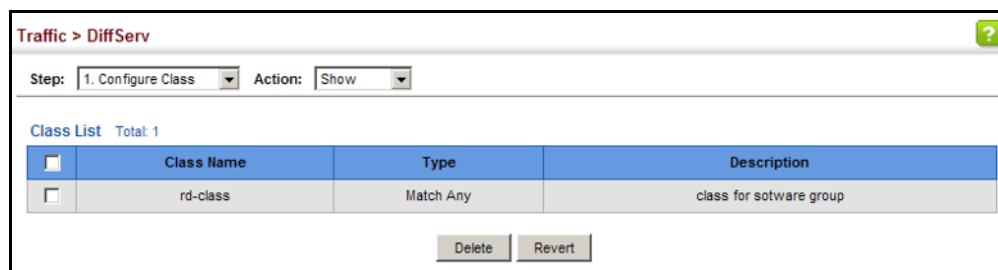

Traffic > DiffServ

Step: 1. Configure Class Action: Show

Class List Total: 1


| <input type="checkbox"/> | Class Name | Type      | Description             |
|--------------------------|------------|-----------|-------------------------|
| <input type="checkbox"/> | rd-class   | Match Any | class for sotware group |

Delete Revert

To edit the rules for a class map:

1. Click Traffic, DiffServ.
2. Select Configure Class from the Step list.
3. Select Add Rule from the Action list.
4. Select the name of a class map.
5. Specify type of traffic for this class based on an access list, a DSCP or IP Precedence value, VLAN, CoS value, or source port. You can specify up to 16 items to match when assigning ingress traffic to a class map.
6. Click Apply.

**Figure 147: Adding Rules to a Class Map**

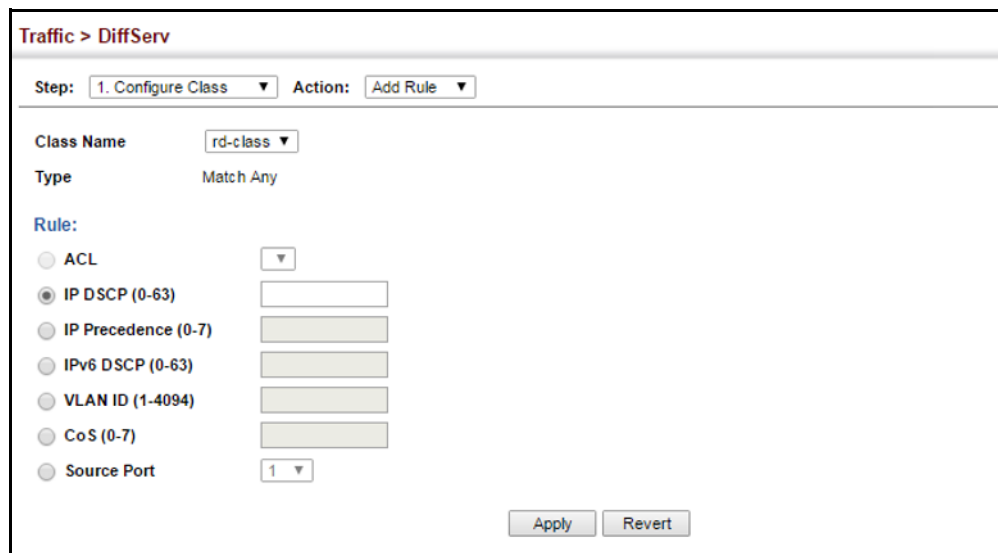

Traffic > DiffServ

Step: 1. Configure Class Action: Add Rule

Class Name: rd-class

Type: Match Any

Rule:

☐ ACL

☒ IP DSCP (0-63)

☐ IP Precedence (0-7)

☐ IPv6 DSCP (0-63)

☐ VLAN ID (1-4094)

☐ CoS (0-7)

☐ Source Port

Apply Revert



To show the rules for a class map:

1. Click Traffic, DiffServ.
2. Select Configure Class from the Step list.
3. Select Show Rule from the Action list.

**Figure 148: Showing the Rules for a Class Map**

The screenshot shows the 'Traffic > DiffServ' configuration page. The 'Step' dropdown is set to '1. Configure Class' and the 'Action' dropdown is set to 'Show Rule'. The 'Class Name' is 'rd-class' and the 'Type' is 'Match Any'. Below this, the 'Rule List' shows a total of 2 rules. The rules are listed in a table with checkboxes for each rule.

| Rule            |
|-----------------|
| IP DSCP 3       |
| IP Precedence 3 |

At the bottom of the rule list, there are 'Delete' and 'Revert' buttons.

## Creating QoS Policies

Use the Traffic > DiffServ (Configure Policy) page to create a policy map that can be attached to multiple interfaces. A policy map is used to group one or more class map statements ([page 250](#)), modify service tagging, and enforce bandwidth policing. A policy map can then be bound by a service policy to one or more interfaces ([page 257](#)).

Configuring QoS policies requires several steps. A class map must first be configured which indicates how to match the inbound packets according to an access list, a DSCP or IP Precedence value, or a member of specific VLAN, a CoS value, or a source port. A policy map must then be configured to indicate the boundary parameters used for monitoring inbound traffic, and the action to take for conforming and non-conforming traffic. A policy map may contain one or more classes based on previously defined class maps.

In addition, the flow rate of inbound traffic can be monitored and the response to conforming and non-conforming traffic set.

### Parameters

These parameters are displayed:

*Add*

- ◆ **Policy Name** – Name of policy map. (Range: 1-32 characters)
- ◆ **Description** – A brief description of a policy map. (Range: 1-64 characters)

*Add Rule*

- ◆ **Policy Name** – Name of policy map.
- ◆ **Class Name** – Name of a class map that defines a traffic classification upon which a policy can act. A policy map can contain up to 32 class maps.
- ◆ **Action** – This attribute is used to set an internal QoS value in hardware for matching packets.
  - **Set CoS** – Configures the service provided to ingress traffic by setting an internal CoS value for a matching packet (as specified in rule settings for a class map). (Range: 0-7)  
See [Table 13, “Default Mapping of CoS/CFI Values to Queue/CFI,” on page 245](#)).
  - **Set IP DSCP** – Configures the service provided to ingress traffic by setting an IP DSCP value for a matching packet (as specified in rule settings for a class map). (Range: 0-63)
- ◆ **Meter** – Check this to define the maximum throughput.
- ◆ **Meter Mode** (Rate Limit) – Applies rate limiting to ingress or egress ports. This function allows the network manager to control the maximum rate for traffic received or transmitted on an interface. Rate limiting is configured on interfaces at the edge of a network to limit traffic into or out of the network. Packets that exceed the acceptable amount of traffic are dropped.
- ◆ **Rate** – Sets the rate limit level. (Range: 16-10000000 kbits per second)

### Web Interface

To configure a policy map:

1. Click Traffic, DiffServ.
2. Select Configure Policy from the Step list.
3. Select Add from the Action list.
4. Enter a policy name.
5. Enter a description.
6. Click Add.

**Figure 149: Configuring a Policy Map**

**Traffic > DiffServ**

Step: 2. Configure Policy Action: Add

Policy Name:

Description:

Apply Revert

To show the configured policy maps:

1. Click Traffic, DiffServ.
2. Select Configure Policy from the Step list.
3. Select Show from the Action list.

**Figure 150: Showing Policy Maps**

**Traffic > DiffServ**

Step: 2. Configure Policy Action: Show

Policy List Total: 1

| <input type="checkbox"/> | Policy Name | Description            |
|--------------------------|-------------|------------------------|
| <input type="checkbox"/> | rd-policy   | for the software group |

Delete Revert

To edit the rules for a policy map:

1. Click Traffic, DiffServ.
2. Select Configure Policy from the Step list.
3. Select Add Rule from the Action list.
4. Select the name of a policy map.
5. Set the CoS or per-hop behavior for matching packets to specify the quality of service to be assigned to the matching traffic class. Enter a rate limit if required.
6. Click Apply.

**Figure 151: Adding Rules to a Policy Map**

**Traffic > DiffServ**

Step: **2. Configure Policy** Action: **Add Rule**

Policy Name: **rd-policy**

**Rule:**

Class Name: **rd-class**

☐ Action: **Set** **CoS (0-7)**

☐ Meter

Meter Mode: **Rate (16-1000000)** Rate Limit: **kbps**

**Apply** **Revert**

To show the rules for a policy map:

1. Click Traffic, DiffServ.
2. Select Configure Policy from the Step list.
3. Select Show Rule from the Action list.

**Figure 152: Showing the Rules for a Policy Map**

The screenshot shows the 'Traffic > DiffServ' configuration page. The 'Step' is set to '2. Configure Policy' and the 'Action' is 'Show Rule'. The 'Policy Name' is 'rd-policy'. Below this is a 'Rule List' table with the following data:

|                          | Class Name | Action | Meter      |             |
|--------------------------|------------|--------|------------|-------------|
|                          |            |        | Meter Mode | Rate (kbps) |
| <input type="checkbox"/> | rd-class   |        | Rate Limit | 160         |

At the bottom of the table are 'Delete' and 'Revert' buttons.

## Attaching a Policy Map to a Port

Use the Traffic > DiffServ (Configure Interface) page to bind a policy map to a port.

### Command Usage

First define a class map, define a policy map, and then bind the service policy to the required interface.

### Parameters

These parameters are displayed:

- ◆ **Port** – Specifies a port.
- ◆ **Ingress** – Applies the selected rule to ingress traffic.
- ◆ **Egress** – Applies the selected rule to egress traffic.

### Web Interface

To bind a policy map to a port:

1. Click Traffic, DiffServ.
2. Select Configure Interface from the Step list.
3. Check the box under the Ingress or Egress field to enable a policy map for a port.
4. Select a policy map from the scroll-down box.

5. Click Apply.

**Figure 153: Attaching a Policy Map to a Port**

Traffic > DiffServ

Step: 3. Configure Interface ▼

Port Service Policy List Total: 52

| Port | Ingress                              | Egress                               |
|------|--------------------------------------|--------------------------------------|
| 1    | <input type="checkbox"/> rd-policy ▼ | <input type="checkbox"/> rd-policy ▼ |
| 2    | <input type="checkbox"/> rd-policy ▼ | <input type="checkbox"/> rd-policy ▼ |
| 3    | <input type="checkbox"/> rd-policy ▼ | <input type="checkbox"/> rd-policy ▼ |
| 4    | <input type="checkbox"/> rd-policy ▼ | <input type="checkbox"/> rd-policy ▼ |
| 5    | <input type="checkbox"/> rd-policy ▼ | <input type="checkbox"/> rd-policy ▼ |
| 6    | <input type="checkbox"/> rd-policy ▼ | <input type="checkbox"/> rd-policy ▼ |
| 7    | <input type="checkbox"/> rd-policy ▼ | <input type="checkbox"/> rd-policy ▼ |
| 8    | <input type="checkbox"/> rd-policy ▼ | <input type="checkbox"/> rd-policy ▼ |
| 9    | <input type="checkbox"/> rd-policy ▼ | <input type="checkbox"/> rd-policy ▼ |
| 10   | <input type="checkbox"/> rd-policy ▼ | <input type="checkbox"/> rd-policy ▼ |

Apply Revert

---

# VoIP Traffic Configuration

This chapter covers the following topics:

- ◆ **Global Settings** – Enables VOIP globally, sets the Voice VLAN, and the aging time for attached ports.
- ◆ **Telephony OUI List** – Configures the list of phones to be treated as VOIP devices based on the specified Organization Unit Identifier (OUI).
- ◆ **Port Settings** – Configures the way in which a port is added to the Voice VLAN, the filtering of non-VoIP packets, the method of detecting VoIP traffic, and the priority assigned to voice traffic.

---

## Overview

When IP telephony is deployed in an enterprise network, it is recommended to isolate the Voice over IP (VoIP) network traffic from other data traffic. Traffic isolation can provide higher voice quality by preventing excessive packet delays, packet loss, and jitter. This is best achieved by assigning all VoIP traffic to a single Voice VLAN.

The use of a Voice VLAN has several advantages. It provides security by isolating the VoIP traffic from other data traffic. End-to-end QoS policies and high priority can be applied to VoIP VLAN traffic across the network, guaranteeing the bandwidth it needs. VLAN isolation also protects against disruptive broadcast and multicast traffic that can seriously affect voice quality.

The switch allows you to specify a Voice VLAN for the network and set a CoS priority for the VoIP traffic. The VoIP traffic can be detected on switch ports by using the source MAC address of packets, or by using LLDP (IEEE 802.1AB) to discover connected VoIP devices. When VoIP traffic is detected on a configured port, the switch automatically assigns the port as a tagged member the Voice VLAN. Alternatively, switch ports can be manually configured.

## Configuring VoIP Traffic

Use the Traffic > VoIP (Configure Global) page to configure the switch for VoIP traffic. First enable automatic detection of VoIP devices attached to the switch ports, then set the Voice VLAN ID for the network. The Voice VLAN aging time can also be set to remove a port from the Voice VLAN when VoIP traffic is no longer received on the port.

### Command Usage

All ports are set to VLAN hybrid mode by default. Prior to enabling VoIP for a port (by setting the VoIP mode to Auto or Manual as described below), first ensure that VLAN membership is not set to access mode (see [“Adding Static Members to VLANs” on page 163](#)).

### Parameters

These parameters are displayed:

- ◆ **Auto Detection Status** – Enables the automatic detection of VoIP traffic on switch ports. (Default: Disabled)
- ◆ **Voice VLAN** – Sets the Voice VLAN ID for the network. Only one Voice VLAN is supported and it must already be created on the switch. (Range: 1-4094)
- ◆ **Voice VLAN Aging Time** – The time after which a port is removed from the Voice VLAN when VoIP traffic is no longer received on the port. (Range: 5-43200 minutes; Default: 1440 minutes)



**Note:** The Voice VLAN ID cannot be modified when the global Auto Detection Status is enabled.

---

### Web Interface

To configure global settings for a Voice VLAN:

1. Click Traffic, VoIP.
2. Select Configure Global from the Step list.
3. Enable Auto Detection.
4. Specify the Voice VLAN ID.
5. Adjust the Voice VLAN Aging Time if required.
6. Click Apply.



**Figure 154: Configuring a Voice VLAN**

Traffic > VoIP

Step: 1. Configure Global

Auto Detection Status ☒ Enabled

Voice VLAN 1234

Voice VLAN Aging Time (5-43200) 3000 sec

Apply Revert

## Configuring Telephony OUI

VoIP devices attached to the switch can be identified by the vendor's Organizational Unique Identifier (OUI) in the source MAC address of received packets. OUI numbers are assigned to vendors and form the first three octets of device MAC addresses. The MAC OUI numbers for VoIP equipment can be configured on the switch so that traffic from these devices is recognized as VoIP. Use the Traffic > VoIP (Configure OUI) page to configure this feature.

### Parameters

These parameters are displayed:

- ◆ **Telephony OUI** – Specifies a MAC address range to add to the list.  
(Format: xx-xx-xx-xx-xx-xx)
- ◆ **Mask** – Identifies a range of MAC addresses. Setting a mask of FF-FF-FF-00-00-00 identifies all devices with the same OUI (the first three octets). Other masks restrict the MAC address range. Setting a mask of FF-FF-FF-FF-FF-FF specifies a single MAC address. (Format: xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx;  
Default: FF-FF-FF-00-00-00)
- ◆ **Description** – User-defined text that identifies the VoIP devices.

### Web Interface

To configure MAC OUI numbers for VoIP equipment:

1. Click Traffic, VoIP.
2. Select Configure OUI from the Step list.
3. Select Add from the Action list.
4. Enter a MAC address that specifies the OUI for VoIP devices in the network.
5. Select a mask from the pull-down list to define a MAC address range.

6. Enter a description for the devices.
7. Click Apply.

**Figure 155: Configuring an OUI Telephony List**

**Traffic > VoIP**

Step: 2. Configure OUI Action: Add

Telephony OUI: 00-e0-bb-00-00-00 (xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx)

Mask: ff-ff-ff-00-00-00 (xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx)

Description: old phones

Apply Revert

To show the MAC OUI numbers used for VoIP equipment:

1. Click Traffic, VoIP.
2. Select Configure OUI from the Step list.
3. Select Show from the Action list.

**Figure 156: Showing an OUI Telephony List**

**Traffic > VoIP**

Step: 2. Configure OUI Action: Show

Telephony OUI List Total: 3

|                          | Telephony OUI     | Mask              | Description  |
|--------------------------|-------------------|-------------------|--------------|
| <input type="checkbox"/> | 00-E0-BB-00-00-00 | FF-FF-FF-00-00-00 | old phones   |
| <input type="checkbox"/> | 00-11-22-33-44-55 | FF-FF-FF-00-00-00 | new phones   |
| <input type="checkbox"/> | 00-98-76-54-32-10 | FF-FF-FF-FF-FF-FF | Chris' phone |

Delete Revert

## Configuring VoIP Traffic Ports

Use the Traffic > VoIP (Configure Interface) page to configure ports for VoIP traffic, you need to set the mode (Auto or Manual), specify the discovery method to use, and set the traffic priority. You can also enable security filtering to ensure that only VoIP traffic is forwarded on the Voice VLAN.

### Command Usage

All ports are set to VLAN hybrid mode by default. Prior to enabling VoIP for a port (by setting the VoIP mode to Auto or Manual as described below), first ensure that VLAN membership is not set to access mode (see [“Adding Static Members to VLANs” on page 163](#)).

## Parameters

These parameters are displayed:

- ◆ **Mode** – Specifies if the port will be added to the Voice VLAN when VoIP traffic is detected. (Default: None)
  - **None** – The Voice VLAN feature is disabled on the port. The port will not detect VoIP traffic or be added to the Voice VLAN.
  - **Auto** – The port will be added as a tagged member to the Voice VLAN when VoIP traffic is detected on the port. You must select a method for detecting VoIP traffic, either OUI or 802.1AB (LLDP). When OUI is selected, be sure to configure the MAC address ranges in the Telephony OUI list.
  - **Manual** – The Voice VLAN feature is enabled on the port, but the port must be manually added to the Voice VLAN.
- ◆ **Security** – Enables security filtering that discards any non-VoIP packets received on the port that are tagged with the voice VLAN ID. VoIP traffic is identified by source MAC addresses configured in the Telephony OUI list, or through LLDP that discovers VoIP devices attached to the switch. Packets received from non-VoIP sources are dropped. (Default: Disabled)
- ◆ **Discovery Protocol** – Selects a method to use for detecting VoIP traffic on the port. (Default: OUI)
  - **OUI** – Traffic from VoIP devices is detected by the Organizationally Unique Identifier (OUI) of the source MAC address. OUI numbers are assigned to vendors and form the first three octets of a device MAC address. MAC address OUI numbers must be configured in the Telephony OUI list so that the switch recognizes the traffic as being from a VoIP device.
  - **LLDP** – Uses LLDP (IEEE 802.1AB) to discover VoIP devices attached to the port. LLDP checks that the “telephone bit” in the system capability TLV is turned on. See [“Link Layer Discovery Protocol” on page 387](#) for more information on LLDP.
- ◆ **Priority** – Defines a CoS priority for port traffic on the Voice VLAN. The priority of any received VoIP packet is overwritten with the new priority when the Voice VLAN feature is active for the port. (Range: 0-6; Default: 6)
- ◆ **Remaining Age** – Number of minutes before this entry is aged out.

The Remaining Age starts to count down when the OUI’s MAC address expires from the MAC address table. Therefore, the MAC address aging time should be added to the overall aging time. For example, if you configure the MAC address table aging time to 30 seconds, and the voice VLAN aging time to 5 minutes, then after 5.5 minutes, a port will be removed from voice VLAN when VoIP traffic is no longer received on the port. Alternatively, if you clear the MAC address table manually, then the switch will also start counting down the Remaining Age.


When VoIP Mode is set to Auto, the Remaining Age will be displayed. Otherwise, if the VoIP Mode is Disabled or set to Manual, the remaining age will display "NA."

### Web Interface

To configure VoIP traffic settings for a port:

1. Click Traffic, VoIP.
2. Select Configure Interface from the Step list.
3. Configure any required changes to the VoIP settings each port.
4. Click Apply.

**Figure 157: Configuring Port Settings for a Voice VLAN**

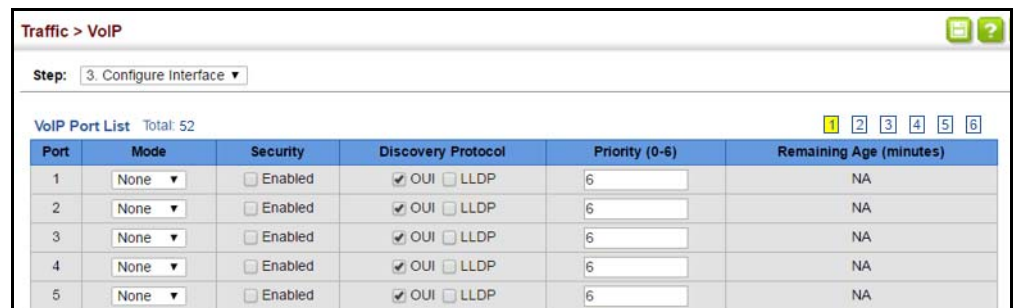

| Port | Mode | Security                         | Discovery Protocol  | Priority (0-6) | Remaining Age (minutes) |
|------|------|----------------------------------|---|----------------|-------------------------|
| 1    | None | <input type="checkbox"/> Enabled | <input checked="" type="checkbox"/> OUI <input type="checkbox"/> LLDP | 6              | NA                      |
| 2    | None | <input type="checkbox"/> Enabled | <input checked="" type="checkbox"/> OUI <input type="checkbox"/> LLDP | 6              | NA                      |
| 3    | None | <input type="checkbox"/> Enabled | <input checked="" type="checkbox"/> OUI <input type="checkbox"/> LLDP | 6              | NA                      |
| 4    | None | <input type="checkbox"/> Enabled | <input checked="" type="checkbox"/> OUI <input type="checkbox"/> LLDP | 6              | NA                      |
| 5    | None | <input type="checkbox"/> Enabled | <input checked="" type="checkbox"/> OUI <input type="checkbox"/> LLDP | 6              | NA                      |

---

## Security Measures

You can configure this switch to authenticate users logging into the system for management access using local or remote authentication methods. Port-based authentication using IEEE 802.1X can also be configured to control either management access to the uplink ports or client access to the data ports. This switch provides secure network management access using the following options:

- ◆ [AAA](#) – Use local or remote authentication to configure access rights, specify authentication servers, configure remote authentication and accounting.
- ◆ [User Accounts](#) – Manually configure access rights on the switch for specified users.
- ◆ [Web Authentication](#) – Allows stations to authenticate and access the network in situations where 802.1X or Network Access authentication methods are infeasible or impractical.
- ◆ [Network Access](#) - Configure MAC authentication, intrusion response, dynamic VLAN assignment, and dynamic QoS assignment.
- ◆ [HTTPS](#) – Provide a secure web connection.
- ◆ [SSH](#) – Provide a secure shell (for secure Telnet access).
- ◆ [ACL](#) – Access Control Lists provide packet filtering for IP frames (based on address, protocol, Layer 4 protocol port number or TCP control code).
- ◆ [IP Filter](#) – Filters management access to the web, SNMP or Telnet interface.
- ◆ [Port Security](#) – Configure secure addresses for individual ports.
- ◆ [Port Authentication](#) – Use IEEE 802.1X port authentication to control access to specific ports.
- ◆ [DoS Protection](#) – Protects against Denial-of-Service attacks.
- ◆ [DHCP Snooping](#) – Filter IP traffic on insecure ports for which the source address cannot be identified via DHCP snooping.
- ◆ [DHCPv6 Snooping](#) – Filter IPv6 traffic on insecure ports for which the source address cannot be identified via DHCPv6 snooping.
- ◆ [IPv4 Source Guard](#) – Filters IPv4 traffic on insecure ports for which the source address cannot be identified via DHCPv4 snooping nor static source bindings.

- ◆ **IPv6 Source Guard** – Filters IPv6 traffic on insecure ports for which the source address cannot be identified via ND snooping, DHCPv6 snooping, nor static source bindings.
- ◆ **ARP Inspection** – Security feature that validates the MAC Address bindings for Address Resolution Protocol packets. Provides protection against ARP traffic with invalid MAC to IP Address bindings, which forms the basis for certain “man-in-the-middle” attacks.
- ◆ **Application Filter** – Discards CDP or PVST packets.



---

**Note:** The priority of execution for the filtering commands is Port Security, Port Authentication, Network Access, Web Authentication, Access Control Lists, IP Source Guard, and then DHCP Snooping.

---

---

## AAA (Authentication, Authorization and Accounting)

The authentication, authorization, and accounting (AAA) feature provides the main framework for configuring access control on the switch. The three security functions can be summarized as follows:

- ◆ **Authentication** — Identifies users that request access to the network.
- ◆ **Authorization** — Determines if users can access specific services.
- ◆ **Accounting** — Provides reports, auditing, and billing for services that users have accessed on the network.

The AAA functions require the use of configured RADIUS or TACACS+ servers in the network. The security servers can be defined as sequential groups that are applied as a method for controlling user access to specified services. For example, when the switch attempts to authenticate a user, a request is sent to the first server in the defined group, if there is no response the second server will be tried, and so on. If at any point a pass or fail is returned, the process stops.

The switch supports the following AAA features:

- ◆ Accounting for IEEE 802.1X authenticated users that access the network through the switch.
- ◆ Accounting for users that access management interfaces on the switch through the console and Telnet.
- ◆ Accounting for commands that users enter at specific CLI privilege levels.
- ◆ Authorization of users that access management interfaces on the switch through the console and Telnet.

To configure AAA on the switch, you need to follow this general process:

1. Configure RADIUS and TACACS+ server access parameters. See [“Configuring Local/Remote Logon Authentication” on page 267](#).
2. Define RADIUS and TACACS+ server groups to support the accounting and authorization of services.
3. Define a method name for each service to which you want to apply accounting or authorization and specify the RADIUS or TACACS+ server groups to use.
4. Apply the method names to port or line interfaces.



**Note:** This guide assumes that RADIUS and TACACS+ servers have already been configured to support AAA. The configuration of RADIUS and TACACS+ server software is beyond the scope of this guide, refer to the documentation provided with the RADIUS or TACACS+ server software.

### Configuring Local/Remote Logon Authentication

Use the Security > AAA > System Authentication page to specify local or remote authentication. Local authentication restricts management access based on user names and passwords manually configured on the switch. Remote authentication uses a remote access authentication server based on RADIUS or TACACS+ protocols to verify management access.

#### Command Usage

- ◆ By default, management access is always checked against the authentication database stored on the local switch. If a remote authentication server is used, you must specify the authentication sequence. Then specify the corresponding parameters for the remote authentication protocol using the Security > AAA > Server page. Local and remote logon authentication control management access via the console port, web browser, or Telnet.
- ◆ You can specify up to three authentication methods for any user to indicate the authentication sequence. For example, if you select (1) RADIUS, (2) TACACS and (3) Local, the user name and password on the RADIUS server is verified first. If the RADIUS server is not available, then authentication is attempted using the TACACS+ server, and finally the local user name and password is checked.

#### Parameters

These parameters are displayed:

- ◆ **Authentication Sequence** – Select the authentication, or authentication sequence required:
  - **Local** – User authentication is performed only locally by the switch.
  - **RADIUS** – User authentication is performed using a RADIUS server only.


- **TACACS** – User authentication is performed using a TACACS+ server only.
- [authentication sequence] – User authentication is performed by up to three authentication methods in the indicated sequence.

### Web Interface

To configure the method(s) of controlling management access:

1. Click Security, AAA, System Authentication.
2. Specify the authentication sequence (i.e., one to three methods).
3. Click Apply.

**Figure 158: Configuring the Authentication Sequence**

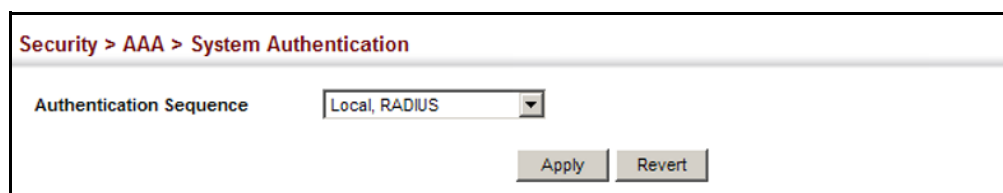


### Configuring Remote Logon Authentication Servers

Use the Security > AAA > Server page to configure the message exchange parameters for RADIUS or TACACS+ remote access authentication servers.

Remote Authentication Dial-in User Service (RADIUS) and Terminal Access Controller Access Control System Plus (TACACS+) are logon authentication protocols that use software running on a central server to control access to RADIUS-aware or TACACS-aware devices on the network. An authentication server contains a database of multiple user name/password pairs with associated privilege levels for each user that requires management access to the switch.

**Figure 159: Authentication Server Operation**

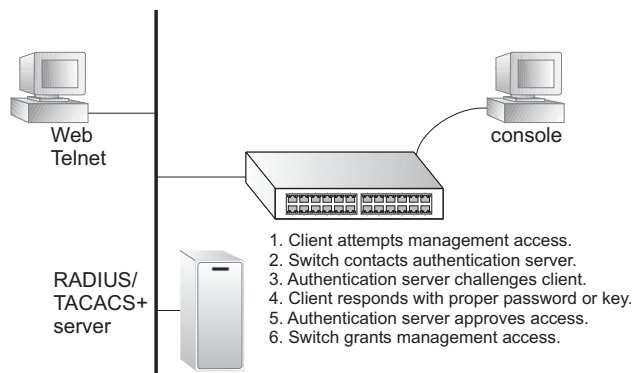

RADIUS uses UDP while TACACS+ uses TCP. UDP only offers best effort delivery, while TCP offers a more reliable connection-oriented transport. Also, note that



RADIUS encrypts only the password in the access-request packet from the client to the server, while TACACS+ encrypts the entire body of the packet.

### Command Usage

- ◆ If a remote authentication server is used, you must specify the message exchange parameters for the remote authentication protocol. Both local and remote logon authentication control management access via the console port, web browser, or Telnet.
- ◆ RADIUS and TACACS+ logon authentication assign a specific privilege level for each user name/password pair. The user name, password, and privilege level must be configured on the authentication server. The encryption methods used for the authentication process must also be configured or negotiated between the authentication server and logon client. This switch can pass authentication messages between the server and client that have been encrypted using MD5 (Message-Digest 5), TLS (Transport Layer Security), or TTLS (Tunneled Transport Layer Security).

### Parameters

These parameters are displayed:

#### *Configure Server*

- ◆ **RADIUS**
  - **Global** – Provides globally applicable RADIUS settings.
  - **Server Index** – Specifies one of five RADIUS servers that may be configured. The switch attempts authentication using the listed sequence of servers. The process ends when a server either approves or denies access to a user.
  - **Server IP Address** – Address of authentication server.  
(A Server Index entry must be selected to display this item.)
  - **Accounting Server UDP Port** – Network (UDP) port on authentication server used for accounting messages. (Range: 1-65535; Default: 1813)
  - **Authentication Server UDP Port** – Network (UDP) port on authentication server used for authentication messages. (Range: 1-65535; Default: 1812)
  - **Authentication Timeout** – The number of seconds the switch waits for a reply from the RADIUS server before it resends the request.  
(Range: 1-65535; Default: 5)
  - **Authentication Retries** – Number of times the switch tries to authenticate logon access via the authentication server. (Range: 1-30; Default: 2)
  - **Set Key** – Mark this box to set or modify the encryption key.

- **Authentication Key** – Encryption key used to authenticate logon access for client. Enclose any string containing blank spaces in double quotes. (Maximum length: 48 characters)
- **Confirm Authentication Key** – Re-type the string entered in the previous field to ensure no errors were made. The switch will not change the encryption key if these two fields do not match.

#### ◆ TACACS+

- **Global** – Provides globally applicable TACACS+ settings.
- **Server Index** – Specifies the index number of the server to be configured. The switch currently supports only one TACACS+ server.
- **Server IP Address** – Address of the TACACS+ server. (A Server Index entry must be selected to display this item.)
- **Authentication Server TCP Port** – Network (TCP) port of TACACS+ server used for authentication messages. (Range: 1-65535; Default: 49)
- **Authentication Timeout** – The number of seconds the switch waits for a reply from the TACACS+ server before it resends the request. (Range: 1-65535; Default: 5)
- **Authentication Retries** – Number of times the switch tries to authenticate logon access via the authentication server. (Range: 1-30; Default: 2)
- **Set Key** – Mark this box to set or modify the encryption key.
- **Authentication Key** – Encryption key used to authenticate logon access for client. Enclose any string containing blank spaces in double quotes. (Maximum length: 48 characters)
- **Confirm Authentication Key** – Re-type the string entered in the previous field to ensure no errors were made. The switch will not change the encryption key if these two fields do not match.

#### *Configure Group*

- ◆ **Server Type** – Select RADIUS or TACACS+ server.
- ◆ **Group Name** - Defines a name for the RADIUS or TACACS+ server group. (Range: 1-64 characters)
- ◆ **Sequence at Priority** - Specifies the server and sequence to use for the group. (Range: 1-5 for RADIUS; 1 for TACACS)

When specifying the priority sequence for a sever, the server index must already be defined (see [“Configuring Local/Remote Logon Authentication” on page 267](#)).

### Web Interface

To configure the parameters for RADIUS or TACACS+ authentication:

1. Click Security, AAA, Server.
2. Select Configure Server from the Step list.
3. Select RADIUS or TACACS+ server type.
4. Select Global to specify the parameters that apply globally to all specified servers, or select a specific Server Index to specify the parameters that apply to a specific server.
5. To set or modify the authentication key, mark the Set Key box, enter the key, and then confirm it
6. Click Apply.

**Figure 160: Configuring Remote Authentication Server (RADIUS)**

Security > AAA > Server

Step: 1. Configure Server ▼

Server Type ☒ RADIUS ☐ TACACS+

☐ Global | Server Index: ☒ 1 ☐ 2 ☐ 3 ☐ 4 ☐ 5

Server IP Address

Accounting Server UDP Port (1-65535)

Authentication Server UDP Port (1-65535)

Authentication Timeout (1-65535)  sec

Authentication Retries (1-30)

☒ Set Key

Authentication Key

Confirm Authentication Key

**Figure 161: Configuring Remote Authentication Server (TACACS+)**

**Security > AAA > Server**

Step: 1. Configure Server

Server Type ☐ RADIUS ☒ TACACS+

☐ Global | Server Index: ☒ 1

Server IP Address

Authentication Server TCP Port (1-65535)

Authentication Timeout (1-540)  sec

Authentication Retries (1-30)

☒ Set Key

Authentication Key

Confirm Authentication Key

To configure the RADIUS or TACACS+ server groups to use for accounting and authorization:

1. Click Security, AAA, Server.
2. Select Configure Group from the Step list.
3. Select Add from the Action list.
4. Select RADIUS or TACACS+ server type.
5. Enter the group name, followed by the index of the server to use for each priority level.
6. Click Apply.

**Figure 162: Configuring AAA Server Groups**

**Security > AAA > Server**

Step: 2. Configure Group Action: Add

Server Type ☒ RADIUS ☐ TACACS+

RADIUS Group Name

Sequence At Priority 1

Sequence At Priority 2

Sequence At Priority 3

Sequence At Priority 4

Sequence At Priority 5

To show the RADIUS or TACACS+ server groups used for accounting and authorization:

1. Click Security, AAA, Server.
2. Select Configure Group from the Step list.
3. Select Show from the Action list.

**Figure 163: Showing AAA Server Groups**

Security > AAA > Server

Step: 2. Configure Group Action: Show

Server Type ☒ RADIUS ☐ TACACS+

RADIUS Group List Total: 3

| <input type="checkbox"/> | Group Name | Member Index |
|--------------------------|------------|--------------|
| <input type="checkbox"/> | radius     | 1, 2, 3, 5   |
| <input type="checkbox"/> | radius1    | 3, 5, 1      |
| <input type="checkbox"/> | radius2    | 1, 2, 5      |

Delete Revert

### Configuring AAA Accounting

Use the Security > AAA > Accounting page to enable accounting of requested services for billing or security purposes, and also to display the configured accounting methods, the methods applied to specific interfaces, and basic accounting information recorded for user sessions.

#### Command Usage

AAA authentication through a RADIUS or TACACS+ server must be enabled before accounting is enabled.

#### Parameters

These parameters are displayed:

##### Configure Global

- ◆ **Periodic Update** - Specifies the interval at which the local accounting service updates information for all users on the system to the accounting server. (Range: 1-2147483647 minutes)

##### Configure Method

- ◆ **Accounting Type** – Specifies the service as:
  - **802.1X** – Accounting for end users.
  - **Command** – Administrative accounting to apply to commands entered at specific CLI privilege levels.

- **Exec** – Administrative accounting for local console, Telnet, or SSH connections.
- ◆ **Privilege Level** – The CLI privilege levels (0-15). This parameter only applies to Command accounting.
- ◆ **Method Name** – Specifies an accounting method for service requests. The “default” methods are used for a requested service if no other methods have been defined. (Range: 1-64 characters)  
  
Note that the method name is only used to describe the accounting method configured on the specified RADIUS or TACACS+ servers. No information is sent to the servers about the method to use.
- ◆ **Accounting Notice** – Records user activity from log-in to log-off point.
- ◆ **Server Group Name** - Specifies the accounting server group. (Range: 1-64 characters)  
  
The group names “radius” and “tacacs+” specifies all configured RADIUS and TACACS+ hosts (see [“Configuring Local/Remote Logon Authentication” on page 267](#)). Any other group name refers to a server group configured on the Security > AAA > Server (Configure Group) page.

#### *Configure Service*

- ◆ **Accounting Type** – Specifies the service as 802.1X, Command or Exec as described in the preceding section.
- ◆ **802.1X**
  - **Method Name** – Specifies a user defined accounting method to apply to an interface. This method must be defined in the Configure Method page. (Range: 1-64 characters)
- ◆ **Command**
  - **Privilege Level** – The CLI privilege levels (0-15).
  - **Console Method Name** – Specifies a user-defined method name to apply to commands entered at the specified CLI privilege level through the console interface.
  - **VTY Method Name** – Specifies a user-defined method name to apply to commands entered at the specified CLI privilege level through Telnet or SSH.
- ◆ **Exec**
  - **Console Method Name** – Specifies a user defined method name to apply to console connections.

- **VTY Method Name** – Specifies a user defined method name to apply to Telnet and SSH connections.

#### *Show Information – Summary*

- ◆ **Accounting Type** - Displays the accounting service.
- ◆ **Method Name** - Displays the user-defined or default accounting method.
- ◆ **Server Group Name** - Displays the accounting server group.
- ◆ **Interface** - Displays the port, console or Telnet interface to which these rules apply. (This field is null if the accounting method and associated server group has not been assigned to an interface.)

#### *Show Information – Statistics*

- ◆ **User Name** - Displays a registered user name.
- ◆ **Accounting Type** - Displays the accounting service.
- ◆ **Interface** - Displays the receive port number through which this user accessed the switch.
- ◆ **Time Elapsed** - Displays the length of time this entry has been active.

### Web Interface

To configure global settings for AAA accounting:

1. Click Security, AAA, Accounting.
2. Select Configure Global from the Step list.
3. Enter the required update interval.
4. Click Apply.

**Figure 164: Configuring Global Settings for AAA Accounting**

Security > AAA > Accounting

Step: 1. Configure Global

Periodic Update (1-2147483647) ☒ 1 min

Apply Revert

To configure the accounting method applied to various service types and the assigned server group:

1. Click Security, AAA, Accounting.
2. Select Configure Method from the Step list.
3. Select Add from the Action list.
4. Select the accounting type (802.1X, Command, Exec).
5. Specify the name of the accounting method and server group name.
6. Click Apply.

**Figure 165: Configuring AAA Accounting Methods**

The screenshot displays the 'Security > AAA > Accounting' configuration page. At the top, the breadcrumb path is shown. Below it, the 'Step' is set to '2. Configure Method' and the 'Action' is 'Add'. The main configuration area contains the following fields:

- Accounting Type:** A dropdown menu with '802.1X' selected.
- Method Name:** A text input field containing 'default'.
- Accounting Notice:** A dropdown menu with 'Start-Stop' selected.
- Server Group Name:** A radio button group with 'radius' selected and an empty text input field below it.

At the bottom right, there are 'Apply' and 'Revert' buttons.

To show the accounting method applied to various service types and the assigned server group:

1. Click Security, AAA, Accounting.
2. Select Configure Method from the Step list.
3. Select Show from the Action list.



**Figure 166: Showing AAA Accounting Methods**

The screenshot shows the 'Security > AAA > Accounting' configuration page. The 'Step' dropdown is set to '2. Configure Method' and the 'Action' dropdown is set to 'Show'. Below the navigation bar, there is a 'Method List' section with a 'Total: 18' count. The list contains 18 rows, each with a checkbox, an 'Accounting Type' (802.1X or Command 0-8), a 'Method Name' (all 'default'), an 'Accounting Notice' (all 'Start-Stop'), and a 'Server Group Name' (radius or tacacs+). At the bottom right of the list are 'Delete' and 'Revert' buttons.

|                          | Accounting Type | Method Name | Accounting Notice | Server Group Name |
|--------------------------|-----------------|-------------|-------------------|-------------------|
| <input type="checkbox"/> | 802.1X          | default     | Start-Stop        | radius            |
| <input type="checkbox"/> | Command 0       | default     | Start-Stop        | tacacs+           |
| <input type="checkbox"/> | Command 1       | default     | Start-Stop        | tacacs+           |
| <input type="checkbox"/> | Command 2       | default     | Start-Stop        | tacacs+           |
| <input type="checkbox"/> | Command 3       | default     | Start-Stop        | tacacs+           |
| <input type="checkbox"/> | Command 4       | default     | Start-Stop        | tacacs+           |
| <input type="checkbox"/> | Command 5       | default     | Start-Stop        | tacacs+           |
| <input type="checkbox"/> | Command 6       | default     | Start-Stop        | tacacs+           |
| <input type="checkbox"/> | Command 7       | default     | Start-Stop        | tacacs+           |
| <input type="checkbox"/> | Command 8       | default     | Start-Stop        | tacacs+           |

To configure the accounting method applied to specific interfaces, console commands entered at specific privilege levels, and local console, Telnet, or SSH connections:

1. Click Security, AAA, Accounting.
2. Select Configure Service from the Step list.
3. Select the accounting type (802.1X, Command, Exec).
4. Enter the required accounting method.
5. Click Apply.

**Figure 167: Configuring AAA Accounting Service for 802.1X Service**

The screenshot shows the 'Security > AAA > Accounting' configuration page. The 'Step' dropdown is set to '3. Configure Service'. Under 'Accounting Type', the '802.1X' radio button is selected. Below this is a 'Port Method List' section with a 'Total: 28' count. The list has two columns: 'Port' and 'Method Name'. The first three rows show ports 1, 2, and 3 with 'default' in the 'Method Name' field. The next two rows show ports 4 and 5 with empty 'Method Name' fields.

| Port | Method Name |
|------|-------------|
| 1    | default     |
| 2    | default     |
| 3    | default     |
| 4    |             |
| 5    |             |

**Figure 168: Configuring AAA Accounting Service for Command Service**

Security > AAA > Accounting

Step: 3. Configure Service

Accounting Type ☐ 802.1X ☒ Command ☐ EXEC

Command Method List Total: 16

| Privilege Level | Console Method Name | VTY Method Name |
|-----------------|---------------------|-----------------|
| 0               | default             | default         |
| 1               | default             | default         |
| 2               | default             | default         |
| 3               | default             | default         |
| 4               | command4Method      | default         |
| 5               | default             | command5Method  |

**Figure 169: Configuring AAA Accounting Service for Exec Service**

Security > AAA > Accounting

Step: 3. Configure Service

Accounting Type ☐ 802.1X ☐ Command ☒ EXEC

Console Method Name default

VTY Method Name default

Apply Revert

To display a summary of the configured accounting methods and assigned server groups for specified service types:

1. Click Security, AAA, Accounting.
2. Select Show Information from the Step list.
3. Click Summary.

**Figure 170: Displaying a Summary of Applied AAA Accounting Methods**

Security > AAA > Accounting

Step: 4. Show Information

☒ Summary ☐ Statistics

Method List Total: 18

| Accounting Type | Method Name | Server Group Name | Interface |
|-----------------|-------------|-------------------|-----------|
| 802.1X          | default     | radius            |           |
| Command 0       | default     | tacacs+           |           |
| Command 1       | default     | tacacs+           |           |
| Command 2       | default     | tacacs+           |           |
| Command 3       | default     | tacacs+           |           |
| Command 4       | default     | tacacs+           |           |
| Command 5       | default     | tacacs+           |           |
| Command 6       | default     | tacacs+           |           |
| Command 7       | default     | tacacs+           |           |
| Command 8       | default     | tacacs+           |           |

To display basic accounting information and statistics recorded for user sessions:

1. Click Security, AAA, Accounting.
2. Select Show Information from the Step list.
3. Click Statistics.

**Figure 171: Displaying Statistics for AAA Accounting Sessions**

Security > AAA > Accounting

Step: 4. Show Information

☐ Summary ☒ Statistics

Accounting Statistics Total: 2

| User Name | Accounting Type | Interface | Time Elapsed |
|-----------|-----------------|-----------|--------------|
| Bob       | 802.1X          | Eth1/1    | 3:44:55      |
| Ted       | 802.1X          | Eth1/5    | 1:24:51      |

## Configuring AAA Authorization

Use the Security > AAA > Authorization page to enable authorization of requested services, and also to display the configured authorization methods, and the methods applied to specific interfaces.

### Command Usage

- ◆ This feature performs authorization to determine if a user is allowed to run an Exec shell.
- ◆ AAA authentication through a RADIUS or TACACS+ server must be enabled before authorization is enabled.

#### Parameters

These parameters are displayed:

#### *Configure Method*

- ◆ **Authorization Type** – Specifies the service as:
  - **Command** – Administrative authorization to apply to commands entered at specific CLI privilege levels.
  - **Exec** – Administrative authorization for local console, Telnet, or SSH connections.
- ◆ **Method Name** – Specifies an authorization method for service requests. The “default” method is used for a requested service if no other methods have been defined. (Range: 1-64 characters)
- ◆ **Server Group Name** - Specifies the authorization server group. (Range: 1-64 characters)

The group name “tacacs+” specifies all configured TACACS+ hosts (see [“Configuring Local/Remote Logon Authentication” on page 267](#)). Any other group name refers to a server group configured on the TACACS+ Group Settings page. Authorization is only supported for TACACS+ servers.

#### *Configure Service*

- ◆ **Authorization Type** – Specifies the service as Exec, indicating administrative authorization for local console, Telnet, or SSH connections.
- ◆ **Console Method Name** – Specifies a user defined method name to apply to console connections.
- ◆ **VTY Method Name** – Specifies a user defined method name to apply to Telnet and SSH connections.

#### *Show Information*

- ◆ **Authorization Type** - Displays the authorization service.
- ◆ **Method Name** - Displays the user-defined or default accounting method.
- ◆ **Server Group Name** - Displays the authorization server group.
- ◆ **Interface** - Displays the console or Telnet interface to which these rules apply. (This field is null if the authorization method and associated server group has not been assigned to an interface.)

### Web Interface

To configure the authorization method applied to the EXEC service type and the assigned server group:

1. Click Security, AAA, Authorization.
2. Select Configure Method from the Step list.
3. Specify the name of the authorization method and server group name.
4. Click Apply.

**Figure 172: Configuring AAA Authorization Methods**

The screenshot shows the 'Security > AAA > Authorization' web interface. The 'Step' dropdown is set to '1. Configure Method' and the 'Action' dropdown is set to 'Add'. The 'Authorization Type' is set to 'EXEC'. The 'Method Name' text box contains 'default'. The 'Server Group Name' section has a radio button selected for 'tacacs+' and an empty text box for another option. 'Apply' and 'Revert' buttons are at the bottom right.

To show the authorization method applied to the EXEC service type and the assigned server group:

1. Click Security, AAA, Authorization.
2. Select Configure Method from the Step list.
3. Select Show from the Action list.

**Figure 173: Showing AAA Authorization Methods**

The screenshot shows the 'Security > AAA > Authorization' web interface with the 'Action' dropdown set to 'Show'. Below the configuration fields is a table titled 'Method List' with 'Total: 2' items. The table has columns for 'Authorization Type', 'Method Name', and 'Server Group Name'. At the bottom are 'Delete' and 'Revert' buttons.

|                          | Authorization Type | Method Name | Server Group Name |
|--------------------------|--------------------|-------------|-------------------|
| <input type="checkbox"/> | EXEC               | default     | tacacs+           |
| <input type="checkbox"/> | EXEC               | aaa         | tacacs1           |

To configure the authorization method applied to local console, Telnet, or SSH connections:

1. Click Security, AAA, Authorization.
2. Select Configure Service from the Step list.
3. Enter the required authorization method.
4. Click Apply.

**Figure 174: Configuring AAA Authorization Methods for Exec Service**

Security > AAA > Authorization

Step: 2. Configure Service

Authorization Type: EXEC

Console Method Name: tps-auth

VTY Method Name: tps-auth

Apply Revert

To display the configured authorization method and assigned server groups for The Exec service type:

1. Click Security, AAA, Authorization.
2. Select Show Information from the Step list.

**Figure 175: Displaying the Applied AAA Authorization Method**

Security > AAA > Authorization

Step: 3. Show Information

Method List Total: 3

| Authorization Type | Method Name | Server Group Name | Interface |
|--------------------|-------------|-------------------|-----------|
| EXEC               | default     | tacacs+           |           |
| EXEC               | console     | tacacs+           | Console   |
| EXEC               | telnet      | tacacs+           | Telnet    |

## Configuring User Accounts

Use the Security > User Accounts page to control management access to the switch based on manually configured user names and passwords.

### Command Usage

- ◆ The default guest name is “guest” with the password “guest.” The default administrator name is “admin” with the password “admin.”
- ◆ The guest only has read access for most configuration parameters. However, the administrator has write access for all parameters governing the onboard agent. You should therefore assign a new administrator password as soon as possible, and store it in a safe place.

### Parameters

These parameters are displayed:

- ◆ **User Name** – The name of the user.  
(Maximum length: 32 characters; maximum number of users: 16)
- ◆ **Access Level** – Specifies command access privileges. (Range: 0-15)  

Level 0, 8 and 15 are designed for users (guest), managers (network maintenance), and administrators (top-level access). The other levels can be used to configured specialized access profiles.

Level 0-7 provide the same default access to a limited number of commands which display the current status of the switch, as well as several database clear and reset functions. These commands are equivalent to those available under Normal Exec command mode in the CLI.

Level 8-14 provide the same default access privileges, including additional commands beyond those provided for Levels 0-7 (equivalent to CLI Normal Exec command mode), and a subset of the configuration commands provided for Level 15 (equivalent to CLI Privileged Exec command mode).

Level 15 provides full access to all commands.

The privilege level associated with any command can be changed using the “privilege” command described in the *CLI Reference Guide*.

Any privilege level can access all of the commands assigned to lower privilege levels. For example, privilege level 8 can access all commands assigned to privilege levels 7-0 according to default settings, and to any other commands assigned to levels 7-0 using the “privilege” command described in the *CLI Reference Guide*.
- ◆ **Password Type** – Specifies the following options:
  - **No Password** – No password is required for this user to log in.
  - **Plain Password** – Plain text unencrypted password.

- **Encrypted Password** – Encrypted password.

The encrypted password is required for compatibility with legacy password settings (i.e., plain text or encrypted) when reading the configuration file during system bootup or when downloading the configuration file from a TFTP or FTP server. There is no need for you to manually configure encrypted passwords.

- ◆ **Password** – Specifies the user password. (Range: 0-32 characters, case sensitive)
- ◆ **Confirm Password** – Re-type the string entered in the previous field to ensure no errors were made. The switch will not change the password if these two fields do not match.

### Web Interface

To configure user accounts:

1. Click Security, User Accounts.
2. Select Add or Modify from the Action list.
3. Specify or select a user name, select the user's access level, then enter a password if required and confirm it.
4. Click Apply.

**Figure 176: Configuring User Accounts**

The screenshot displays the 'Security > User Accounts' web interface. At the top, there is a breadcrumb trail 'Security > User Accounts'. Below this, an 'Action:' label is followed by a dropdown menu set to 'Add'. The main form area contains several fields: 'User Name' with the text 'bob', 'Access Level' with a dropdown set to '0', 'Password Type' with a dropdown set to 'Encrypted Password', 'Password' with a masked input field (dots), and 'Confirm Password' with another masked input field (dots). At the bottom right of the form, there are two buttons: 'Apply' and 'Revert'.

To show user accounts:

1. Click Security, User Accounts.
2. Select Show from the Action list.



**Figure 177: Showing User Accounts**

| Security > User Accounts                |           |              |
|---|-----------|--------------|
| Action: <span>Show</span>               |           |              |
| User Account List Total: 3              |           |              |
| <input type="checkbox"/>                | User Name | Access Level |
| <input type="checkbox"/>                | admin     | 15           |
| <input type="checkbox"/>                | guest     | 0            |
| <input type="checkbox"/>                | bob       | 15           |
| <span>Delete</span> <span>Revert</span> |           |              |

## Web Authentication

Web authentication allows stations to authenticate and access the network in situations where 802.1X or Network Access authentication are infeasible or impractical. The web authentication feature allows unauthenticated hosts to request and receive a DHCP assigned IP address and perform DNS queries. All other traffic, except for HTTP protocol traffic, is blocked. The switch intercepts HTTP protocol traffic and redirects it to a switch-generated web page that facilitates user name and password authentication via RADIUS. Once authentication is successful, the web browser is forwarded on to the originally requested web page. Successful authentication is valid for all hosts connected to the port.



**Note:** RADIUS authentication must be activated and configured properly for the web authentication feature to work properly. (See [“Configuring Local/Remote Logon Authentication”](#) on page 267.)

**Note:** Web authentication cannot be configured on trunk ports.

### Configuring Global Settings for Web Authentication

Use the Security > Web Authentication (Configure Global) page to edit the global parameters for web authentication.

#### Parameters

These parameters are displayed:

- ◆ **Web Authentication Status** – Enables web authentication for the switch. (Default: Disabled)  
  
Note that this feature must also be enabled for any port where required under the Configure Interface menu.
- ◆ **Session Timeout** – Configures how long an authenticated session stays active before it must re-authenticate itself. (Range: 300-3600 seconds; Default: 3600 seconds)

- ◆ **Quiet Period** – Configures how long a host must wait to attempt authentication again after it has exceeded the maximum allowable failed login attempts. (Range: 1-180 seconds; Default: 60 seconds)
- ◆ **Login Attempts** – Configures the amount of times a supplicant may attempt and fail authentication before it must wait the configured quiet period. (Range: 1-3 attempts; Default: 3 attempts)

### Web Interface

To configure global parameters for web authentication:

1. Click Security, Web Authentication.
2. Select Configure Global from the Step list.
3. Enable web authentication globally on the switch, and adjust any of the protocol parameters as required.
4. Click Apply.

Figure 178: Configuring Global Settings for Web Authentication

The screenshot shows the 'Security > Web Authentication' configuration page. At the top, there is a breadcrumb trail 'Security > Web Authentication'. Below it is a 'Step:' dropdown menu with '1. Configure Global' selected. The main configuration area contains the following settings:

|                            |                                       |
|----------------------------|---------------------------------------|
| Web Authentication Status  | <input type="checkbox"/> Enabled      |
| Session Timeout (300-3600) | <input type="text" value="3600"/> sec |
| Quiet Period (1-180)       | <input type="text" value="60"/> sec   |
| Login Attempts (1-3)       | <input type="text" value="3"/>        |

At the bottom right of the configuration area are two buttons: 'Apply' and 'Revert'.

### Configuring Interface Settings for Web Authentication

Use the Security > Web Authentication (Configure Interface) page to enable web authentication on a port, and display information for any connected hosts.

#### Parameters

These parameters are displayed:

- ◆ **Port** – Indicates the port being configured.
- ◆ **Status** – Configures the web authentication status for the port.
- ◆ **Host IP Address** – Indicates the IP address of each connected host.
- ◆ **Remaining Session Time** – Indicates the remaining time until the current authorization session for the host expires.
- ◆ **Apply** – Enables web authentication if the Status box is checked.

- ◆ **Revert** – Restores the previous configuration settings.
- ◆ **Re-authenticate** – Ends all authenticated web sessions for selected host IP addresses in the Authenticated Host List, and forces the users to re-authenticate.
- ◆ **Revert** – Restores the previous configuration settings.

### Web Interface

To enable web authentication for a port:

1. Click Security, Web Authentication.
2. Select Configure Interface from the Step list.
3. Set the status box to enabled for any port that requires web authentication, and click Apply.
4. Mark the check box for any host addresses that need to be re-authenticated, and click Re-authenticate.

Figure 179: Configuring Interface Settings for Web Authentication

Security > Web Authentication

Step: 2. Configure Interface

Port: 1

Status: ☒ Enabled

Apply Revert

Authenticated Host List Total: 2

|                          | Host IP Address | Remaining Session Time (sec) |
|--------------------------|-----------------|------------------------------|
| <input type="checkbox"/> | 10.1.1.1        | 300                          |
| <input type="checkbox"/> | 10.2.2.2        | 100                          |

Re-authenticate Revert

## Network Access (MAC Address Authentication)

Some devices connected to switch ports may not be able to support 802.1X authentication due to hardware or software limitations. This is often true for devices such as network printers, IP phones, and some wireless access points. The switch enables network access from these devices to be controlled by authenticating device MAC addresses with a central RADIUS server.



**Note:** RADIUS authentication must be activated and configured properly for the MAC Address authentication feature to work properly. (See [“Configuring Remote Logon Authentication Servers”](#) on page 268.)

**Note:** MAC authentication cannot be configured on trunk ports.

### Command Usage

- ◆ MAC address authentication controls access to the network by authenticating the MAC address of each host that attempts to connect to a switch port. Traffic received from a specific MAC address is forwarded by the switch only if the source MAC address is successfully authenticated by a central RADIUS server. While authentication for a MAC address is in progress, all traffic is blocked until authentication is completed. On successful authentication, the RADIUS server may optionally assign VLAN and quality of service settings for the switch port.
- ◆ When enabled on a port, the authentication process sends a Password Authentication Protocol (PAP) request to a configured RADIUS server. The user name and password are both equal to the MAC address being authenticated. On the RADIUS server, PAP user name and passwords must be configured in the MAC address format XX-XX-XX-XX-XX-XX (all in upper case).
- ◆ Authenticated MAC addresses are stored as dynamic entries in the switch secure MAC address table and are removed when the aging time expires. The maximum number of secure MAC addresses supported for the switch system is 1024.
- ◆ Configured static MAC addresses are added to the secure address table when seen on a switch port. Static addresses are treated as authenticated without sending a request to a RADIUS server.
- ◆ When port status changes to down, all MAC addresses mapped to that port are cleared from the secure MAC address table. Static VLAN assignments are not restored.
- ◆ The RADIUS server may optionally return a VLAN identifier list to be applied to the switch port. The following attributes need to be configured on the RADIUS server.
  - **Tunnel-Type** = VLAN
  - **Tunnel-Medium-Type** = 802
  - **Tunnel-Private-Group-ID** = 1u,2t [*VLAN ID list*]

The VLAN identifier list is carried in the RADIUS "Tunnel-Private-Group-ID" attribute. The VLAN list can contain multiple VLAN identifiers in the format "1u,2t,3u" where "u" indicates an untagged VLAN and "t" a tagged VLAN.
- ◆ The RADIUS server may optionally return dynamic QoS assignments to be applied to a switch port for an authenticated user. The "Filter-ID" attribute (attribute 11) can be configured on the RADIUS server to pass the following QoS information:

**Table 15: Dynamic QoS Profiles**

| Profile    | Attribute Syntax                                   | Example                       |
|------------|--|-------------------------------|
| DiffServ   | <b>service-policy-in</b> = <i>policy-map-name</i>  | service-policy-in=p1          |
| Rate Limit | <b>rate-limit-input</b> = <i>rate</i>              | rate-limit-input=100 (kbps)   |
|            | <b>rate-limit-output</b> = <i>rate</i>             | rate-limit-output=200 (kbps)  |
| 802.1p     | <b>switchport-priority-default</b> = <i>value</i>  | switchport-priority-default=2 |
| IP ACL     | <b>ip-access-group-in</b> = <i>ip-acl-name</i>     | ip-access-group-in=ipv4acl    |
| IPv6 ACL   | <b>ipv6-access-group-in</b> = <i>ipv6-acl-name</i> | ipv6-access-group-in=ipv6acl  |
| MAC ACL    | <b>mac-access-group-in</b> = <i>mac-acl-name</i>   | mac-access-group-in=macAcl    |

- ◆ Multiple profiles can be specified in the Filter-ID attribute by using a semicolon to separate each profile.  
For example, the attribute “service-policy-in=pp1;rate-limit-input=100” specifies that the diffserv profile name is “pp1,” and the ingress rate limit profile value is 100 kbps.
- ◆ If duplicate profiles are passed in the Filter-ID attribute, then only the first profile is used.  
For example, if the attribute is “service-policy-in=p1;service-policy-in=p2,” then the switch applies only the DiffServ profile “p1.”
- ◆ Any unsupported profiles in the Filter-ID attribute are ignored.  
For example, if the attribute is “map-ip-dscp=2:3;service-policy-in=p1,” then the switch ignores the “map-ip-dscp” profile.
- ◆ When authentication is successful, the dynamic QoS information may not be passed from the RADIUS server due to one of the following conditions (authentication result remains unchanged):
  - The Filter-ID attribute cannot be found to carry the user profile.
  - The Filter-ID attribute is empty.
  - The Filter-ID attribute format for dynamic QoS assignment is unrecognizable (can not recognize the whole Filter-ID attribute).
- ◆ Dynamic QoS assignment fails and the authentication result changes from success to failure when the following conditions occur:
  - Illegal characters found in a profile value (for example, a non-digital character in an 802.1p profile value).
  - Failure to configure the received profiles on the authenticated port.
- ◆ When the last user logs off on a port with a dynamic QoS assignment, the switch restores the original QoS configuration for the port.

- ◆ When a user attempts to log into the network with a returned dynamic QoS profile that is different from users already logged on to the same port, the user is denied access.
- ◆ While a port has an assigned dynamic QoS profile, any manual QoS configuration changes only take effect after all users have logged off the port.

### Configuring Global Settings for Network Access

MAC address authentication is configured on a per-port basis, however there are two configurable parameters that apply globally to all ports on the switch. Use the Security > Network Access (Configure Global) page to configure MAC address authentication aging and reauthentication time.

#### Parameters

These parameters are displayed:

- ◆ **Aging Status** – Enables aging for authenticated MAC addresses stored in the secure MAC address table. (Default: Disabled)  
  
This parameter applies to authenticated MAC addresses configured by the MAC Address Authentication process described in this section, as well as to any secure MAC addresses authenticated by 802.1X, regardless of the 802.1X Operation Mode (Single-Host, Multi-Host, or MAC-Based authentication as described on [page 334](#)).  
  
Authenticated MAC addresses are stored as dynamic entries in the switch's secure MAC address table and are removed when the aging time expires.  
  
The maximum number of secure MAC addresses supported for the switch system is 1024.
- ◆ **Reauthentication Time** – Sets the time period after which the switch removes an authenticated MAC address from the secure table. When the reauthentication time expires for a secure MAC address, it is removed from the secure MAC address table, and the switch will only perform the authentication process the next time it receives the MAC address packet. (Range: 120-1000000 seconds; Default: 1800 seconds)

#### Web Interface

To configure aging status and reauthentication time for MAC address authentication:

1. Click Security, Network Access.
2. Select Configure Global from the Step list.
3. Enable or disable aging for secure addresses, and modify the reauthentication time as required.
4. Click Apply.

**Figure 180: Configuring Global Settings for Network Access**

The screenshot shows a web interface for configuring network access. At the top, it says "Security > Network Access". Below that is a "Step:" dropdown menu set to "1. Configure Global". The main configuration area has two settings: "Aging Status" with a checked checkbox and the text "Enabled", and "Reauthentication Time (120-1000000)" with a text input field containing "30000" and the unit "sec". At the bottom right are "Apply" and "Revert" buttons.

### Configuring Network Access for Ports

Use the Security > Network Access (Configure Interface - General) page to configure MAC authentication on switch ports, including enabling address authentication, setting the maximum MAC count, and enabling dynamic VLAN or dynamic QoS assignments.

#### Parameters

These parameters are displayed:

##### ◆ MAC Authentication

- **Status** – Enables MAC authentication on a port. (Default: Disabled)
- **Intrusion** – Sets the port response to a host MAC authentication failure to either block access to the port or to pass traffic through. (Options: Block, Pass; Default: Block)
- **Max MAC Count**<sup>8</sup> – Sets the maximum number of MAC addresses that can be authenticated on a port via MAC authentication; that is, the Network Access process described in this section. (Range: 1-1024; Default: 1024)

- ◆ **Network Access Max MAC Count**<sup>8</sup> – Sets the maximum number of MAC addresses that can be authenticated on a port interface via all forms of authentication (including Network Access and IEEE 802.1X). (Range: 1-2048; Default: 1024)

- ◆ **Guest VLAN** – Specifies the VLAN to be assigned to the port when 802.1X Authentication or MAC authentication fails. (Range: 0-4094, where 0 means disabled; Default: Disabled)

The VLAN must already be created and active (see [“Configuring VLAN Groups” on page 161](#)). Also, when used with 802.1X authentication, intrusion action must be set for “Guest VLAN” (see [“Configuring Port Authenticator Settings for 802.1X” on page 334](#)).

A port can only be assigned to the guest VLAN in case of failed authentication, and switchport mode is set to Hybrid. (See [“Adding Static Members to VLANs” on page 163](#).)

8. The maximum number of MAC addresses per port is 1024, and the maximum number of secure MAC addresses supported for the switch system is 1024. When the limit is reached, all new MAC addresses are treated as authentication failures.

- ◆ **Dynamic VLAN** – Enables dynamic VLAN assignment for an authenticated port. When enabled, any VLAN identifiers returned by the RADIUS server through the 802.1X authentication process are applied to the port, providing the VLANs have already been created on the switch. (GVRP is not used to create the VLANs.) (Default: Enabled)

The VLAN settings specified by the first authenticated MAC address are implemented for a port. Other authenticated MAC addresses on the port must have the same VLAN configuration, or they are treated as authentication failures.

If dynamic VLAN assignment is enabled on a port and the RADIUS server returns no VLAN configuration (to the 802.1X authentication process), the authentication is still treated as a success, and the host is assigned to the default untagged VLAN.

When the dynamic VLAN assignment status is changed on a port, all authenticated addresses mapped to that port are cleared from the secure MAC address table.

- ◆ **Dynamic QoS** – Enables dynamic QoS assignment for an authenticated port. (Default: Disabled)
- ◆ **MAC Filter ID** – Allows a MAC Filter to be assigned to the port. MAC addresses or MAC address ranges present in a selected MAC Filter are exempt from authentication on the specified port (as described under "[Configuring a MAC Address Filter](#)"). (Range: 1-64; Default: None)

#### Web Interface

To configure MAC authentication on switch ports:

1. Click Security, Network Access.
2. Select Configure Interface from the Step list.
3. Click the General button.
4. Make any configuration changes required to enable address authentication on a port, set the maximum number of secure addresses supported, the guest VLAN to use when MAC Authentication or 802.1X Authentication fails, and the dynamic VLAN and QoS assignments.
5. Click Apply.



**Figure 181: Configuring Interface Settings for Network Access**

Security > Network Access

Step: 2. Configure Interface

General Link Detection

Port List Total: 52

| Port | MAC Authentication               |           |                        | Network Access<br>Max MAC Count<br>(1-2048) | Guest VLAN<br>(0-4094,<br>0: Disabled) | Dynamic VLAN                                | Dynamic QoS                      | MAC Filter ID<br>(1-64)  |
|------|----------------------------------|-----------|------------------------|---|--|---|----------------------------------|--------------------------|
|      | Status                           | Intrusion | Max MAC Count (1-1024) |   |  |   |                                  |                          |
| 1    | <input type="checkbox"/> Enabled | Block ▼   | 1024                   | 1024  | 0                                      | <input checked="" type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> |
| 2    | <input type="checkbox"/> Enabled | Block ▼   | 1024                   | 1024  | 0                                      | <input checked="" type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> |
| 3    | <input type="checkbox"/> Enabled | Block ▼   | 1024                   | 1024  | 0                                      | <input checked="" type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> |
| 4    | <input type="checkbox"/> Enabled | Block ▼   | 1024                   | 1024  | 0                                      | <input checked="" type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> |
| 5    | <input type="checkbox"/> Enabled | Block ▼   | 1024                   | 1024  | 0                                      | <input checked="" type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> |

**Configuring Port Link Detection** Use the Security > Network Access (Configure Interface - Link Detection) page to send an SNMP trap and/or shut down a port when a link event occurs.

#### Parameters

These parameters are displayed:

- ◆ **Link Detection Status** – Configures whether Link Detection is enabled or disabled for a port.
- ◆ **Condition** – The link event type which will trigger the port action.
  - **Link up** – Only link up events will trigger the port action.
  - **Link down** – Only link down events will trigger the port action.
  - **Link up and down** – All link up and link down events will trigger the port action.
- ◆ **Action** – The switch can respond in three ways to a link up or down trigger event.
  - **Trap** – An SNMP trap is sent.
  - **Trap and shutdown** – An SNMP trap is sent and the port is shut down.
  - **Shutdown** – The port is shut down.

### Web Interface

To configure link detection on switch ports:

1. Click Security, Network Access.
2. Select Configure Interface from the Step list.
3. Click the Link Detection button.
4. Modify the link detection status, trigger condition, and the response for any port.
5. Click Apply.

**Figure 182: Configuring Link Detection for Network Access**

Security > Network Access

Step: 2. Configure Interface

General Link Detection

Port List Total: 52

| Port | Link Detection Status                       | Condition        | Action |
|------|---|------------------|--------|
| 1    | <input type="checkbox"/> Enabled            | Link down        | Trap   |
| 2    | <input checked="" type="checkbox"/> Enabled | Link up and down | Trap   |
| 3    | <input type="checkbox"/> Enabled            | Link down        | Trap   |
| 4    | <input type="checkbox"/> Enabled            | Link down        | Trap   |
| 5    | <input type="checkbox"/> Enabled            | Link down        | Trap   |

### Configuring a MAC Address Filter

Use the Security > Network Access (Configure MAC Filter) page to designate specific MAC addresses or MAC address ranges as exempt from authentication. MAC addresses present in MAC Filter tables activated on a port are treated as pre-authenticated on that port.

### Command Usage

- ◆ Specified MAC addresses are exempt from authentication.
- ◆ Up to 65 filter tables can be defined.
- ◆ There is no limitation on the number of entries used in a filter table.

### Parameters

These parameters are displayed:

- ◆ **Filter ID** – Adds a filter rule for the specified filter. (Range: 1-64)
- ◆ **MAC Address** – The filter rule will check ingress packets against the entered MAC address or range of MAC addresses (as defined by the MAC Address Mask).

- ◆ **MAC Address Mask** – The filter rule will check for the range of MAC addresses defined by the MAC bit mask. If you omit the mask, the system will assign the default mask of an exact match. (Range: 000000000000 - FFFFFFFF; Default: FFFFFFFF)

### Web Interface

To add a MAC address filter for MAC authentication:

1. Click Security, Network Access.
2. Select Configure MAC Filter from the Step list.
3. Select Add from the Action list.
4. Enter a filter ID, MAC address, and optional mask.
5. Click Apply.

**Figure 183: Configuring a MAC Address Filter for Network Access**

Security > Network Access

Step: 3. Configure MAC Filter Action: Add

Filter ID (1-64) 22

MAC Address 11-22-33-44-55-66 (xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx)

MAC Address Mask FFFFFFFFFF (xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx)

Apply Revert

To show the MAC address filter table for MAC authentication:

1. Click Security, Network Access.
2. Select Configure MAC Filter from the Step list.
3. Select Show from the Action list.

**Figure 184: Showing the MAC Address Filter Table for Network Access**

Security > Network Access

Step: 3. Configure MAC Filter Action: Show

MAC Filter List Total: 1

|                          | Filter ID | MAC Address       | MAC Address Mask  |
|--------------------------|-----------|-------------------|-------------------|
| <input type="checkbox"/> | 22        | 11-22-33-44-55-66 | FF-FF-FF-FF-FF-FF |

Delete Revert

### Displaying Secure MAC Address Information

Use the Security > Network Access (Show Information) page to display the authenticated MAC addresses stored in the secure MAC address table. Information on the secure MAC entries can be displayed and selected entries can be removed from the table.

#### Parameters

These parameters are displayed:

- ◆ **Query By** – Specifies parameters to use in the MAC address query.
  - **Sort Key** – Sorts the information displayed based on MAC address, port interface, or attribute.
  - **MAC Address** – Specifies a specific MAC address.
  - **Interface** – Specifies a port interface.
  - **Attribute** – Displays static or dynamic addresses.
- ◆ **Authenticated MAC Address List**
  - **MAC Address** – The authenticated MAC address.
  - **Interface** – The port interface associated with a secure MAC address.
  - **RADIUS Server** – The IP address of the RADIUS server that authenticated the MAC address.
  - **Time** – The time when the MAC address was last authenticated.
  - **Attribute** – Indicates a static or dynamic address.

#### Web Interface

To display the authenticated MAC addresses stored in the secure MAC address table:

1. Click Security, Network Access.
2. Select Show Information from the Step list.
3. Use the sort key to display addresses based MAC address, interface, or attribute.
4. Restrict the displayed addresses by entering a specific address in the MAC Address field, specifying a port in the Interface field, or setting the address type to static or dynamic in the Attribute field.
5. Click Query.

**Figure 185: Showing Addresses Authenticated for Network Access**

Security > Network Access

Step: 4. Show Information

Query by:

Sort Key: MAC Address

☐ MAC Address  (xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx)

☐ Interface

☐ Attribute

Query

Authenticated MAC Address List Total: 8

| <input type="checkbox"/> | MAC Address       | Interface        | RADIUS Server | Time                      | Attribute |
|--------------------------|-------------------|------------------|---------------|---------------------------|-----------|
| <input type="checkbox"/> | 00-00-86-45-F2-23 | Unit 1 / Port 23 | 10.2.2.10     | 2008y 20m 12d 11h 16m 12s | Dynamic   |
| <input type="checkbox"/> | 00-00-E8-5E-E1-DD | Unit 1 / Port 23 | 10.2.2.10     | 2008y 20m 12d 11h 32m 24s | Dynamic   |
| <input type="checkbox"/> | 00-00-E8-81-93-30 | Unit 1 / Port 23 | 10.2.2.10     | 2008y 20m 12d 11h 40m 32s | Dynamic   |
| <input type="checkbox"/> | 00-01-80-31-B8-30 | Unit 1 / Port 23 | 10.2.2.10     | 2008y 20m 12d 11h 18m 51s | Dynamic   |
| <input type="checkbox"/> | 00-01-80-36-95-D8 | Unit 1 / Port 23 | 10.2.2.10     | 2008y 20m 12d 11h 32m 22s | Dynamic   |
| <input type="checkbox"/> | 00-01-80-3B-D3-7F | Unit 1 / Port 23 | 10.2.2.10     | 2008y 20m 12d 11h 22m 28s | Dynamic   |
| <input type="checkbox"/> | 00-01-80-3C-3C-19 | Unit 2 / Port 23 | 10.2.2.10     | 2008y 20m 12d 11h 15m 19s | Dynamic   |
| <input type="checkbox"/> | 00-01-80-3C-3E-B3 | Unit 2 / Port 23 | 10.2.2.10     | 2008y 20m 12d 11h 17m 40s | Dynamic   |

Delete Revert

## Configuring HTTPS

You can configure the switch to enable the Secure Hypertext Transfer Protocol (HTTPS) over the Secure Socket Layer (SSL), providing secure access (i.e., an encrypted connection) to the switch's web interface.

### Configuring Global Settings for HTTPS

Use the Security > HTTPS (Configure Global) page to enable or disable HTTPS and specify the TCP port used for this service.

#### Command Usage

- ◆ Both the HTTP and HTTPS service can be enabled independently on the switch. However, you cannot configure both services to use the same TCP port. (HTTP can only be configured through the CLI using the "ip http server" command described in the *CLI Reference Guide*.)
- ◆ If you enable HTTPS, you must indicate this in the URL that you specify in your browser: `https://device[:port_number]`
- ◆ When you start HTTPS, the connection is established in this way:
  - The client authenticates the server using the server's digital certificate.
  - The client and server negotiate a set of security protocols to use for the connection.

- The client and server generate session keys for encrypting and decrypting data.
- ◆ The client and server establish a secure encrypted connection.  
A padlock icon should appear in the status bar for Internet Explorer 11, Mozilla Firefox 54, or Google Chrome 59, or more recent versions.
- ◆ The following web browsers and operating systems currently support HTTPS:

**Table 16: HTTPS System Support**

| Web Browser                    | Operating System        |
|--------------------------------|-------------------------|
| Internet Explorer 9.x or later | Windows 7, 8, 10        |
| Mozilla Firefox 39 or later    | Windows 7, 8, 10, Linux |
| Google Chrome 44 or later      | Windows 7, 8, 10        |

- ◆ To specify a secure-site certificate, see [“Replacing the Default Secure-site Certificate” on page 299](#).



**Note:** Users are automatically logged off of the HTTP server or HTTPS server if no input is detected for 600 seconds.

**Note:** Connection to the web interface is not supported for HTTPS using an IPv6 link local address.

### Parameters

These parameters are displayed:

- ◆ **HTTPS Status** – Allows you to enable/disable the HTTPS server feature on the switch. (Default: Enabled)
- ◆ **HTTPS Port** – Specifies the TCP port number used for HTTPS connection to the switch’s web interface. (Default: Port 443)

### Web Interface

To configure HTTPS:

1. Click Security, HTTPS.
2. Select Configure Global from the Step list.
3. Enable HTTPS and specify the port number if required.
4. Click Apply.

**Figure 186: Configuring HTTPS**

### Replacing the Default Secure-site Certificate

Use the Security > HTTPS (Copy Certificate) page to replace the default secure-site certificate.

When you log onto the web interface using HTTPS (for secure access), a Secure Sockets Layer (SSL) certificate appears for the switch. By default, the certificate that the web browser displays will be associated with a warning that the site is not recognized as a secure site. This is because the certificate has not been signed by an approved certification authority. If you want this warning to be replaced by a message confirming that the connection to the switch is secure, you must obtain a unique certificate and a private key and password from a recognized certification authority.



**Caution:** For maximum security, we recommend you obtain a unique Secure Sockets Layer certificate at the earliest opportunity. This is because the default certificate for the switch is not unique to the hardware you have purchased.

When you have obtained these, place them on your TFTP server and transfer them to the switch to replace the default (unrecognized) certificate with an authorized one.



**Note:** The switch must be reset for the new certificate to be activated. To reset the switch, see [“Resetting the System” on page 101](#) or type “reload” at the command prompt: `Console#reload`

### Parameters

These parameters are displayed:

- ◆ **TFTP Server IP Address** – IP address of TFTP server which contains the certificate file.
- ◆ **Certificate Source File Name** – Name of certificate file stored on the TFTP server.

- ◆ **Private Key Source File Name** – Name of private key file stored on the TFTP server.
- ◆ **Private Password** – Password stored in the private key file. This password is used to verify authorization for certificate use, and is verified when downloading the certificate to the switch.
- ◆ **Confirm Password** – Re-type the string entered in the previous field to ensure no errors were made. The switch will not download the certificate if these two fields do not match.
- ◆ **Delete** – Deletes the HTTPS secure site certificate. You must reboot the switch to load the default certificate.

### Web Interface

To replace the default secure-site certificate:

1. Click Security, HTTPS.
2. Select Copy Certificate from the Step list.
3. Fill in the TFTP server, certificate and private key file name, and private password.
4. Click Apply.

**Figure 187: Downloading the Secure-Site Certificate**

The screenshot shows the 'Security > HTTPS' configuration page. At the top, there is a breadcrumb 'Security > HTTPS'. Below it, an 'Action:' dropdown menu is set to 'Copy Certificate'. The main form contains five input fields: 'TFTP Server IP Address' with the value '192.168.0.4', 'Certificate Source File Name' with 'site-certificate', 'Private Key Source File Name' with 'private-key', 'Private Password' with masked characters '\*\*\*\*\*', and 'Confirm Password' also with '\*\*\*\*\*'. At the bottom right of the form are 'Apply' and 'Revert' buttons. At the bottom left, there is a 'Delete' button followed by a link that says 'Click this button to delete current certificate.'



## Configuring the Secure Shell

The Berkeley-standard includes remote access tools originally designed for Unix systems. Some of these tools have also been implemented for Microsoft Windows and other environments. These tools, including commands such as *rlogin* (remote login), *rsh* (remote shell), and *rcp* (remote copy), are not secure from hostile attacks.

Secure Shell (SSH) includes server/client applications intended as a secure replacement for the older Berkeley remote access tools. SSH can also provide remote management access to this switch as a secure replacement for Telnet. When the client contacts the switch via the SSH protocol, the switch generates a public-key that the client uses along with a local user name and password for access authentication. SSH also encrypts all data transfers passing between the switch and SSH-enabled management station clients, and ensures that data traveling over the network arrives unaltered.



**Note:** You need to install an SSH client on the management station to access the switch for management via the SSH protocol.

**Note:** The switch supports both SSH Version 1.5 and 2.0 clients.

### Command Usage

The SSH server on this switch supports both password and public key authentication. If password authentication is specified by the SSH client, then the password can be authenticated either locally or via a RADIUS or TACACS+ remote authentication server, as specified on the System Authentication page (page 267). If public key authentication is specified by the client, then you must configure authentication keys on both the client and the switch as described in the following section. Note that regardless of whether you use public key or password authentication, you still have to generate authentication keys on the switch (SSH Host Key Settings) and enable the SSH server (Authentication Settings).

To use the SSH server, complete these steps:

1. *Generate a Host Key Pair* – On the SSH Host Key Settings page, create a host public/private key pair.
2. *Provide Host Public Key to Clients* – Many SSH client programs automatically import the host public key during the initial connection setup with the switch. Otherwise, you need to manually create a known hosts file on the management station and place the host public key in it. An entry for a public key in the known hosts file would appear similar to the following example:

```
10.1.0.54 1024 35 15684995401867669259333946775054617325313674890836547254
15020245593199868544358361651999923329781766065830956 10825913212890233
76546801726272571413428762941301196195566782
595664104869574278881462065194174677298486546861571773939016477935594230357741
309802273708779454524083971752646358058176716709574804776117
```

3. *Import Client's Public Key to the Switch* – See “[Importing User Public Keys](#)” on [page 306](#) to copy a file containing the public key for all the SSH client's granted management access to the switch. (Note that these clients must be configured locally on the switch via the User Accounts page as described on [page 283](#).) The clients are subsequently authenticated using these keys. The current firmware only accepts public key files based on standard UNIX format as shown in the following example for an RSA Version 1 key:

```
1024 35
134108168560989392104094492015542534763164192187295892114317388005553616163105
177594083868631109291232226828519254374603100937187721199696317813662774141689
851320491172048303392543241016379975923714490119380060902539484084827178194372
288402533115952134861022902978982721353267131629432532818915045306393916643
steve@192.168.1.19
```

4. *Set the Optional Parameters* – On the SSH Settings page, configure the optional parameters, including the authentication timeout, the number of retries, and the server key size.
5. *Enable SSH Service* – On the SSH Settings page, enable the SSH server on the switch.
6. *Authentication* – One of the following authentication methods is employed:  
*Password Authentication (for SSH v1.5 or V2 Clients)*
  - a. The client sends its password to the server.
  - b. The switch compares the client's password to those stored in memory.
  - c. If a match is found, the connection is allowed.



---

**Note:** To use SSH with only password authentication, the host public key must still be given to the client, either during initial connection or manually entered into the known host file. However, you do not need to configure the client's keys.

---

*Public Key Authentication* – When an SSH client attempts to contact the switch, the SSH server uses the host key pair to negotiate a session key and encryption method. Only clients that have a private key corresponding to the public keys stored on the switch can access it. The following exchanges take place during this process:

*Authenticating SSH v1.5 Clients*

- a. The client sends its RSA public key to the switch.
- b. The switch compares the client's public key to those stored in memory.
- c. If a match is found, the switch uses its secret key to generate a random 256-bit string as a challenge, encrypts this string with the user's public key, and sends it to the client.
- d. The client uses its private key to decrypt the challenge string, computes the MD5 checksum, and sends the checksum back to the switch.

- e. The switch compares the checksum sent from the client against that computed for the original string it sent. If the two checksums match, this means that the client's private key corresponds to an authorized public key, and the client is authenticated.

#### *Authenticating SSH v2 Clients*

- a. The client first queries the switch to determine if DSA public key authentication using a preferred algorithm is acceptable.
- b. If the specified algorithm is supported by the switch, it notifies the client to proceed with the authentication process. Otherwise, it rejects the request.
- c. The client sends a signature generated using the private key to the switch.
- d. When the server receives this message, it checks whether the supplied key is acceptable for authentication, and if so, it then checks whether the signature is correct. If both checks succeed, the client is authenticated.



**Note:** The SSH server supports up to eight client sessions. The maximum number of client sessions includes both current Telnet sessions and SSH sessions.

**Note:** The SSH server can be accessed using any configured IPv4 or IPv6 interface address on the switch.

## Configuring the SSH Server

Use the Security > SSH (Configure Global) page to enable the SSH server and configure basic settings for authentication.



**Note:** You must generate DSA and RSA host keys before enabling the SSH server. See [“Generating the Host Key Pair” on page 304](#).

### Parameters

These parameters are displayed:

- ◆ **SSH Server Status** – Allows you to enable/disable the SSH server on the switch. (Default: Disabled)
- ◆ **Version** – The Secure Shell version number. Version 2.0 is displayed, but the switch supports management access via either SSH Version 1.5 or 2.0 clients.
- ◆ **Authentication Timeout** – Specifies the time interval in seconds that the SSH server waits for a response from a client during an authentication attempt. (Range: 1-120 seconds; Default: 120 seconds)
- ◆ **Authentication Retries** – Specifies the number of authentication attempts that a client is allowed before authentication fails and the client has to restart the authentication process. (Range: 1-5 times; Default: 3)

- ◆ **Server-Key Size** – Specifies the SSH server key size. (Range: 512-896 bits; Default:768)
  - The server key is a private key that is never shared outside the switch.
  - The host key is shared with the SSH client, and is fixed at 1024 bits.

### Web Interface

To configure the SSH server:

1. Click Security, SSH.
2. Select Configure Global from the Step list.
3. Enable the SSH server.
4. Adjust the authentication parameters as required.
5. Click Apply.

**Figure 188: Configuring the SSH Server**

The screenshot shows a web interface for configuring the SSH server. The title bar says "Security > SSH". Below it, a "Step:" dropdown menu is set to "1. Configure Global". The main configuration area has the following settings:

|                                |   |
|--------------------------------|---|
| SSH Server Status              | <input checked="" type="checkbox"/> Enabled |
| Version                        | 2.0   |
| Authentication Timeout (1-120) | <input type="text" value="120"/> sec        |
| Authentication Retries (1-5)   | <input type="text" value="3"/>              |
| Server-Key Size (512-896)      | <input type="text" value="768"/>            |

At the bottom right, there are two buttons: "Apply" and "Revert".

### Generating the Host Key Pair

Use the Security > SSH (Configure Host Key - Generate) page to generate a host public/private key pair used to provide secure communications between an SSH client and the switch. After generating this key pair, you must provide the host public key to SSH clients and import the client's public key to the switch as described in the section ["Importing User Public Keys" on page 306](#).



**Note:** A host key pair must be configured on the switch before you can enable the SSH server. See ["Configuring the SSH Server" on page 303](#).

### Parameters

These parameters are displayed:

- ◆ **Host-Key Type** – The key type used to generate the host key pair (i.e., public and private keys). (Range: RSA (Version 1), DSA (Version 2), Both; Default: Both)

The SSH server uses RSA or DSA for key exchange when the client first establishes a connection with the switch, and then negotiates with the client to select either DES (56-bit) or 3DES (168-bit) for data encryption.



**Note:** The switch uses only RSA Version 1 for SSHv1.5 clients and DSA Version 2 for SSHv2 clients.

### Web Interface

To generate the SSH host key pair:

1. Click Security, SSH.
2. Select Configure Host Key from the Step list.
3. Select Generate from the Action list.
4. Select the host-key type from the drop-down box.
5. Click Apply.

**Figure 189: Generating the SSH Host Key Pair**

A screenshot of a web interface titled "Security > SSH". It features a "Step:" dropdown menu set to "2. Configure Host Key" and an "Action:" dropdown menu set to "Generate". Below these, there is a "Host-Key Type" label followed by a dropdown menu currently showing "Both". At the bottom right of the form area, there are two buttons: "Apply" and "Revert".

| Security > SSH          |                         |
|-------------------------|-------------------------|
| Step:                   | 2. Configure Host Key ▼ |
| Action:                 | Generate ▼              |
| Host-Key Type           | Both ▼                  |
| <div>Apply Revert</div> |                         |

To display or clear the SSH host key pair:

1. Click Security, SSH.
2. Select Configure Host Key from the Step list.
3. Select Show from the Action list.
4. Select the option to save the host key from memory to flash by clicking Save, or select the host-key type to clear and click Clear.

**Figure 190: Showing the SSH Host Key Pair**

**Security > SSH**

Step: 2. Configure Host Key Action: Show

**Public-Key of Host-Key**

☐ **RSA**

```
1024 65537
133939690967068772691132582542091118069946187790543050435991419159456328108424510227003
175806564056474112418102266589753060303978654741958937882157740680884883800146758464583
403760868973720460189697876570213012247127554124148560753905598712710960791931537404447
966097709515788354636277697671184100501439926741
```

☐ **DSA**

```
ssh-dss
AAAAB3NzaC1kc3MAAACBALY4Beu1CFOPsrgqEeW89esSV0snL8VSBwmiY7r6n8GksbwJJ6wLA9z+4kUAFKbFG
3WLVHMAldj62o3W777PSPGzgyHlCD4KEWHNHu0oLuGozeZ5HzpDH76zkYwfzIUuKwS7FntQTD+//1wPCmNyi
cQdwJICTnRs1YYpVh4YKYfAAAAFQDwt5uUQHcC8qaFQ3DhNFPZ9wCK5wAAAIACzKDORA5vv91v6WMYBbc9GX6
PH4V+15Lm+Eg87jiOUAYxUGat1q8071h16RRR5XH44CIOCHC4VJjhSI873weYD/IULCZSAEa9GczPpWhZ9EA1
```

Clear

Save Click this button to Save All Host-Key from Memory to Flash.

### Importing User Public Keys

Use the Security > SSH (Configure User Key - Copy) page to upload a user's public key to the switch. This public key must be stored on the switch for the user to be able to log in using the public key authentication mechanism. If the user's public key does not exist on the switch, SSH will revert to the interactive password authentication mechanism to complete authentication.

#### Parameters

These parameters are displayed:

- ◆ **User Name** – This drop-down box selects the user who's public key you wish to manage. Note that you must first create users on the User Accounts page (see ["Configuring User Accounts" on page 283](#)).
- ◆ **User Key Type** – The type of public key to upload.
  - RSA: The switch accepts a RSA version 1 encrypted public key.
  - DSA: The switch accepts a DSA version 2 encrypted public key.

The SSH server uses RSA or DSA for key exchange when the client first establishes a connection with the switch, and then negotiates with the client to select either DES (56-bit) or 3DES (168-bit) for data encryption.

The switch uses only RSA Version 1 for SSHv1.5 clients and DSA Version 2 for SSHv2 clients.

- ◆ **TFTP Server IP Address** – The IP address of the TFTP server that contains the public key file you wish to import.
- ◆ **Source File Name** – The public key file to upload.

### Web Interface

To copy the SSH user's public key:

1. Click Security, SSH.
2. Select Configure User Key from the Step list.
3. Select Copy from the Action list.
4. Select the user name and the public-key type from the respective drop-down boxes, input the TFTP server IP address and the public key source file name.
5. Click Apply.

**Figure 191: Copying the SSH User's Public Key**

The screenshot shows a web interface for configuring SSH settings. The breadcrumb is "Security > SSH". The "Step:" dropdown is set to "3. Configure User Key" and the "Action:" dropdown is set to "Copy". Below these are four input fields: "User Name" with a dropdown menu showing "steve", "User-Key Type" with a dropdown menu showing "RSA", "TFTP Server IP Address" with a text box containing "192.168.0.61", and "Source File Name" with a text box containing "rsa.pub". At the bottom right are two buttons: "Apply" and "Revert".

To display or clear the SSH user's public key:

1. Click Security, SSH.
2. Select Configure User Key from the Step list.
3. Select Show from the Action list.
4. Select a user from the User Name list.
5. Select the host-key type to clear.
6. Click Clear.

Figure 192: Showing the SSH User's Public Key

Security > SSH

Step: 3. Configure User Key Action: Show

User Name admin

Public-Key of User-Key

☐ RSA 1024 65537  
1480220937772193109967882191897869076673078824151724992407025121828690162016474445339  
1667942450570093339422932545152202043583189918588264701199521464739810320305865029839  
8473670516025543210438660758858919850241166441730463579799255182511108846314033955899  
732895735202234665421721768844978831196756189309582533

☐ DSA ssh-dss  
AAAAB3NzaC1kc3MAAACBAKM4i8EgUe89W+vh1+y4z12YpyK8cpCNz30rhCriv1ClKmdgE/fiZPsqYH/ClAB/  
sJ1rNax0sJTUxtb8e2GLk+x8UmQJVuSDdklwZ9ZRoFwWAl0Yyi57V1TK3tUnT9ocCbVJNGckJkXdluac4OP09  
tAPEAuXBuAWGpDAGSmg6pHAAAFQCPzwn0rSaLiTq53jxtsj0RILZwAAIBiL0Cr7GC7ARztGE9dRkt9oh9  
uhuiAzcXrAc2TmxhjGsEtMlAtxKm+r1O6pnz2aX9KEzMEwJEMuDphOTRnSpMv39XtSW1aSXWtKoGAcQgDsFqK

Clear

## Access Control Lists

Access Control Lists (ACL) provide packet filtering for IPv4/IPv6 frames (based on address, protocol, Layer 4 protocol port number or TCP control code), IPv6 frames (based on address, DSCP traffic class, or next header type), or any frames (based on MAC address or Ethernet type). To filter incoming packets, first create an access list, add the required rules, and then bind the list to a specific port.

### Configuring Access Control Lists –

An ACL is a sequential list of permit or deny conditions that apply to IP addresses, MAC addresses, or other more specific criteria. This switch tests ingress or egress packets against the conditions in an ACL one by one. A packet will be accepted as soon as it matches a permit rule, or dropped as soon as it matches a deny rule. If no rules match, the packet is accepted.

### Command Usage

The following restrictions apply to ACLs:

- ◆ The maximum number of ACLs is 512.
- ◆ The maximum number of rules per system is 2048 rules.
- ◆ An ACL can have up to 2048 rules. However, due to resource restrictions, the average number of rules bound to the ports should not exceed 20.
- ◆ The maximum number of rules that can be bound to the ports is 64 for each of the following list types: MAC ACLs, IP ACLs (including Standard and Extended ACLs), IPv6 Standard ACLs, and IPv6 Extended ACLs.

The maximum number of rules (Access Control Entries, or ACEs) stated above is the worst case scenario. In practice, the switch compresses the ACEs in TCAM (a hardware table used to store ACEs), but the actual maximum number of ACEs



possible depends on too many factors to be precisely determined. It depends on the amount of hardware resources reserved at runtime for this purpose.

Auto ACE Compression is a software feature used to compress all the ACEs of an ACL to utilize hardware resources more efficiently. Without compression, one ACE would occupy a fixed number of entries in TCAM. So if one ACL includes 25 ACEs, the ACL would need  $(25 * n)$  entries in TCAM, where “n” is the fixed number of TCAM entries needed for one ACE. When compression is employed, before writing the ACE into TCAM, the software compresses the ACEs to reduce the number of required TCAM entries. For example, one ACL may include 128 ACEs which classify a continuous IP address range like 192.168.1.0~255. If compression is disabled, the ACL would occupy  $(128 * n)$  entries of TCAM, using up nearly all of the hardware resources. When using compression, the 128 ACEs are compressed into one ACE classifying the IP address as 192.168.1.0/24, which requires only “n” entries in TCAM. The above example is an ideal case for compression. The worst case would be if no any ACE can be compressed, in which case the used number of TCAM entries would be the same as without compression. It would also require more time to process the ACEs.

- ◆ If no matches are found down to the end of the list, the traffic is denied. For this reason, frequently hit entries should be placed at the top of the list. There is an implied deny for traffic that is not explicitly permitted. Also, note that a single-entry ACL with only one deny entry has the effect of denying all traffic. You should therefore use at least one permit statement in an ACL or all traffic will be blocked.

Because the switch stops testing after the first match, the order of the conditions is critical. If no conditions match, the packet will be denied.

The order in which active ACLs are checked is as follows:

1. User-defined rules in IP and MAC ACLs for ingress or egress ports are checked in parallel.
2. Rules within an ACL are checked in the configured order, from top to bottom.
3. If the result of checking an IP ACL is to permit a packet, but the result of a MAC ACL on the same packet is to deny it, the packet will be denied (because the decision to deny a packet has a higher priority for security reasons). A packet will also be denied if the IP ACL denies it and the MAC ACL accepts it.

### Showing TCAM Utilization

Use the Security > ACL (Configure ACL - Show TCAM) page to show utilization parameters for TCAM (Ternary Content Addressable Memory), including the number policy control entries in use, the number of free entries, and the overall percentage of TCAM in use.

### Command Usage

Policy control entries (PCEs) are used by various system functions which rely on rule-based searches, including Access Control Lists (ACLs), IP Source Guard filter

rules, Quality of Service (QoS) processes, QinQ, MAC-based VLANs, VLAN translation, or traps.

For example, when binding an ACL to a port, each rule in an ACL will use two PCEs; and when setting an IP Source Guard filter rule for a port, the system will also use two PCEs.

### Parameters

These parameters are displayed:

- ◆ **Pool Capability Code** – Abbreviation for processes shown in the TCAM List.
- ◆ **Unit** – Stack unit identifier.
- ◆ **Device** – Memory chip used for indicated pools.
- ◆ **Pool** – Rule slice (or call group). Each slice has a fixed number of rules that are used for the specified features.
- ◆ **Total** – The maximum number of policy control entries allocated to the each pool.
- ◆ **Used** – The number of policy control entries used by the operating system.
- ◆ **Free** – The number of policy control entries available for use.
- ◆ **Capability** – The processes assigned to each pool.

### Web Interface

To show information on TCAM utilization:

1. Click Security, ACL.
2. Select Configure ACL from the Step list.
3. Select Show TCAM from the Action list.

Figure 193: Showing TCAM Utilization

Security > ACL

Step: 1. Configure ACL Action: Show TCAM

**Pool Capability Code:**

AM - MAC ACL, A4 - IPv4 ACL, A6S - IPv6 Standard ACL,  
 A6E - IPv6 extended ACL, DM - MAC diffServ, D4 - IPv4 diffServ,  
 D6S - IPv6 standard diffServ, D6E - IPv6 extended diffServ,  
 AEM - Egress MAC ACL, AE4 - Egress IPv4 ACL,  
 AE6S - Egress IPv6 standard ACL, AE6E - Egress IPv6 extended ACL,  
 DEM - Egress MAC diffServ, DE4 - Egress IPv4 diffServ,  
 DE6S - Egress IPv6 standard diffServ,  
 DE6E - Egress IPv6 extended diffServ, W - Web authentication,  
 I - IP source guard, I6 - IPv6 source guard, C - CPU interface,  
 L - Link local, MV - Mac based VLAN, PV - Protocol based VLAN,  
 VV - Voice VLAN, IPSV - IP subnet VLAN, VX - VLAN translation,  
 R - Routing, Reserved - Reserved, ALL - All supported function,

**TCAM List** Total: 18

| Unit | Device | Pool | Total | Used | Free | Capability |
|------|--------|------|-------|------|------|------------|
| 1    | 0      | 0    | 128   | 128  | 0    | R          |
| 1    | 0      | 1    | 64    | 0    | 64   | A6S A6E    |
| 1    | 0      | 2    | 128   | 0    | 128  | A4         |
| 1    | 0      | 3    | 128   | 0    | 128  | AM         |
| 1    | 0      | 4    | 64    | 0    | 64   | D6S D6E    |
| 1    | 0      | 5    | 128   | 0    | 128  | D4 W IPSV  |
| 1    | 0      | 6    | 128   | 0    | 128  | DM         |
| 1    | 0      | 7    | 128   | 0    | 128  | MV PV VV   |
| 1    | 0      | 8    | 64    | 0    | 64   | I          |
| 1    | 0      | 9    | 64    | 0    | 64   | I6         |
| 1    | 0      | 10   | 64    | 64   | 0    | C          |
| 1    | 0      | 11   | 64    | 64   | 0    | C L        |
| 1    | 0      | 12   | 64    | 0    | 64   | AE6S AE6E  |
| 1    | 0      | 13   | 128   | 0    | 128  | AE4        |
| 1    | 0      | 14   | 128   | 0    | 128  | AEM        |
| 1    | 0      | 15   | 64    | 0    | 64   | DE6S DE6E  |

## Setting the ACL Name and Type

Use the Security > ACL (Configure ACL - Add) page to create an ACL.

### Parameters

These parameters are displayed:

- ◆ **ACL Name** – Name of the ACL. (Maximum length: 32 characters)
- ◆ **Type** – The following filter modes are supported:
  - **IP Standard:** IPv4 ACL mode filters packets based on the source IPv4 address.
  - **IP Extended:** IPv4 ACL mode filters packets based on the source or destination IPv4 address, as well as the protocol type and protocol port number. If the “TCP” protocol is specified, then you can also filter packets based on the TCP control code.
  - **IPv6 Standard:** IPv6 ACL mode filters packets based on the source IPv6 address.

- **IPv6 Extended:** IPv6 ACL mode filters packets based on the source or destination IP address, as well as DSCP, and the next header type.
- **MAC** – MAC ACL mode filters packets based on the source or destination MAC address and the Ethernet frame type (RFC 1060).
- **ARP** – ARP ACL specifies static IP-to-MAC address bindings used for ARP inspection (see [“ARP Inspection” on page 371](#)).

### Web Interface

To configure the name and type of an ACL:

1. Click Security, ACL.
2. Select Configure ACL from the Step list.
3. Select Add from the Action list.
4. Fill in the ACL Name field, and select the ACL type.
5. Click Apply.

**Figure 194: Creating an ACL**

The screenshot shows a web interface titled "Security > ACL". Below the title, there are two dropdown menus: "Step:" with "1. Configure ACL" selected, and "Action:" with "Add" selected. Below these, there are two input fields: "ACL Name" with the text "R&D" entered, and "Type" with "IP Standard" selected from a dropdown. At the bottom right of the form, there are two buttons: "Apply" and "Revert".

To show a list of ACLs:

1. Click Security, ACL.
2. Select Configure ACL from the Step list.
3. Select Show from the Action list.

**Figure 195: Showing a List of ACLs**

Security > ACL

Step: 1. Configure ACL Action: Show

ACL List Total: 10

| ACL Name        | Type          |
|-----------------|---------------|
| aciStandard1    | IP Standard   |
| aciStandard2    | IP Standard   |
| aciExtended1    | IP Extended   |
| aciExtended2    | IP Extended   |
| aciMAC1         | MAC           |
| aciMAC2         | MAC           |
| aciMAC2         | MAC           |
| aciIPv6Standard | IPv6 Standard |
| aciIPv6Extended | IPv6 Extended |
| aciARP          | ARP           |

Delete Revert

### Configuring a Standard IPv4 ACL

Use the Security > ACL (Configure ACL - Add Rule - IP Standard) page to configure a Standard IPv4 ACL.

#### Parameters

These parameters are displayed:

- ◆ **Type** – Selects the type of ACLs to show in the Name list.
- ◆ **Name** – Shows the names of ACLs matching the selected type.
- ◆ **Action** – An ACL can contain any combination of permit or deny rules.
- ◆ **Address Type** – Specifies the source IP address. Use “Any” to include all possible addresses, “Host” to specify a specific host address in the Address field, or “IP” to specify a range of addresses with the Address and Subnet Mask fields. (Options: Any, Host, IP; Default: Any)
- ◆ **Source IP Address** – Source IP address.
- ◆ **Source Subnet Mask** – A subnet mask containing four integers from 0 to 255, each separated by a period. The mask uses 1 bits to indicate “match” and 0 bits to indicate “ignore.” The mask is bitwise ANDed with the specified source IP address, and compared with the address for each IP packet entering the port(s) to which this ACL has been assigned.
- ◆ **Time Range** – Name of a time range.

### Web Interface

To add rules to an IPv4 Standard ACL:

1. Click Security, ACL.
2. Select Configure ACL from the Step list.
3. Select Add Rule from the Action list.
4. Select IP Standard from the Type list.
5. Select the name of an ACL from the Name list.
6. Specify the action (i.e., Permit or Deny).
7. Select the address type (Any, Host, or IP).
8. If you select "Host," enter a specific address. If you select "IP," enter a subnet address and the mask for an address range.
9. Click Apply.

**Figure 196: Configuring a Standard IPv4 ACL**

The screenshot shows the 'Security > ACL' configuration page. At the top, there's a breadcrumb 'Security > ACL'. Below it, the 'Step' is set to '1. Configure ACL' and the 'Action' is 'Add Rule'. The 'Type' section has radio buttons for 'IP Standard' (selected), 'IP Extended', 'MAC', 'IPv6 Standard', 'IPv6 Extended', and 'ARP'. The 'Name' field is a dropdown menu showing 'R&D'. The 'Action' field is a dropdown menu showing 'Permit'. The 'Address Type' field is a dropdown menu showing 'Host'. The 'Source IP Address' field contains '10.1.1.21'. The 'Source Subnet Mask' field contains '255.255.255.255'. There is a checked checkbox for 'Time-Range' and a dropdown menu for 'Time-Range' showing 'R&D'. At the bottom right, there are 'Apply' and 'Revert' buttons.

**Configuring an Extended IPv4 ACL** Use the Security > ACL (Configure ACL - Add Rule - IP Extended) page to configure an Extended IPv4 ACL.

### Parameters

These parameters are displayed:

- ◆ **Type** – Selects the type of ACLs to show in the Name list.
- ◆ **Name** – Shows the names of ACLs matching the selected type.

- ◆ **Action** – An ACL can contain any combination of permit or deny rules.
- ◆ **Source/Destination Address Type** – Specifies the source or destination IP address type. Use “Any” to include all possible addresses, “Host” to specify a specific host address in the Address field, or “IP” to specify a range of addresses with the Address and Subnet Mask fields. (Options: Any, Host, IP; Default: Any)
- ◆ **Source/Destination IP Address** – Source or destination IP address.
- ◆ **Source/Destination Subnet Mask** – Subnet mask for source or destination address. (See the description for Subnet Mask on [page 313](#).)
- ◆ **Source/Destination Port** – Source/destination port number for the specified protocol type. (Range: 0-65535)
- ◆ **Source/Destination Port Bit Mask** – Decimal number representing the port bits to match. (Range: 0-65535)
- ◆ **Protocol** – Specifies the protocol type to match as TCP, UDP or Others, where others indicates a specific protocol number (0-255). (Options: TCP, UDP, Others; Default: Others)

The following items are under TCP

- **Control Code** – Decimal number (representing a bit string) that specifies flag bits in byte 14 of the TCP header. (Range: 0-63)
- **Control Code Bit Mask** – Decimal number representing the code bits to match. (Range: 0-63)

The control bit mask is a decimal number (for an equivalent binary bit mask) that is applied to the control code. Enter a decimal number, where the equivalent binary bit “1” means to match a bit and “0” means to ignore a bit. The following bits may be specified:

- 1 (fin) – Finish
- 2 (syn) – Synchronize
- 4 (rst) – Reset
- 8 (psh) – Push
- 16 (ack) – Acknowledgement
- 32 (urg) – Urgent pointer

For example, use the code value and mask below to catch packets with the following flags set:

- SYN flag valid, use control-code 2, control bit mask 2
- Both SYN and ACK valid, use control-code 18, control bit mask 18
- SYN valid and ACK invalid, use control-code 2, control bit mask 18

- ◆ **Service Type** – Packet priority settings based on the following criteria:
  - **Precedence** – IP precedence level. (Range: 0-7)
  - **DSCP** – DSCP priority level. (Range: 0-63)
- ◆ **Time Range** – Name of a time range.

#### Web Interface

To add rules to an IPv4 Extended ACL:

1. Click Security, ACL.
2. Select Configure ACL from the Step list.
3. Select Add Rule from the Action list.
4. Select IP Extended from the Type list.
5. Select the name of an ACL from the Name list.
6. Specify the action (i.e., Permit or Deny).
7. Select the address type (Any, Host, or IP).
8. If you select "Host," enter a specific address. If you select "IP," enter a subnet address and the mask for an address range.
9. Set any other required criteria, such as service type, protocol type, or control code.
10. Click Apply.



**Figure 197: Configuring an Extended IPv4 ACL**

The screenshot shows the 'Security > ACL' configuration page. The 'Step' is '1. Configure ACL' and the 'Action' is 'Add Rule'. The 'Type' is 'IP Extended'. The 'Name' is 'ipe'. The 'Action' is 'Permit'. The 'Source Address Type' is 'IP' with 'Source IP Address' '10.7.1.0' and 'Source Subnet Mask' '255.255.255.0'. The 'Destination Address Type' is 'Any' with 'Destination IP Address' '0.0.0.0' and 'Destination Subnet Mask' '0.0.0.0'. The 'Protocol' is 'Others'. The 'Service Type' is 'Precedence (0-7)'. The 'Time-Range' is 'R&D'.

### Configuring a Standard IPv6 ACL

Use the Security > ACL (Configure ACL - Add Rule - IPv6 Standard) page to configure a Standard IPv6 ACL.

#### Parameters

These parameters are displayed:

- ◆ **Type** – Selects the type of ACLs to show in the Name list.
- ◆ **Name** – Shows the names of ACLs matching the selected type.
- ◆ **Action** – An ACL can contain any combination of permit or deny rules.
- ◆ **Source Address Type** – Specifies the source IP address. Use “Any” to include all possible addresses, “Host” to specify a specific host address in the Address field, or “IPv6-Prefix” to specify a range of addresses. (Options: Any, Host, IPv6-Prefix; Default: Any)
- ◆ **Source IPv6 Address** – An IPv6 source address or network class. The address must be formatted according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields.
- ◆ **Source Prefix-Length** – A decimal value indicating how many contiguous bits (from the left) of the address comprise the prefix (i.e., the network portion of the address). (Range: 0-128 bits)
- ◆ **Time Range** – Name of a time range.

### Web Interface

To add rules to a Standard IPv6 ACL:

1. Click Security, ACL.
2. Select Configure ACL from the Step list.
3. Select Add Rule from the Action list.
4. Select IPv6 Standard from the Type list.
5. Select the name of an ACL from the Name list.
6. Specify the action (i.e., Permit or Deny).
7. Select the source address type (Any, Host, or IPv6-prefix).
8. If you select "Host," enter a specific address. If you select "IPv6-prefix," enter a subnet address and the prefix length.
9. Click Apply.

**Figure 198: Configuring a Standard IPv6 ACL**

The screenshot shows the 'Security > ACL' configuration page. At the top, there's a breadcrumb 'Security > ACL'. Below it, the 'Step' is set to '1. Configure ACL' and the 'Action' is 'Add Rule'. The 'Type' section has radio buttons for 'IP Standard', 'IP Extended', 'MAC', 'IPv6 Standard' (which is selected), 'IPv6 Extended', and 'ARP'. The 'Name' field is set to 'R&D#6S'. The 'Action' dropdown is set to 'Permit'. The 'Source Address Type' dropdown is set to 'Host'. The 'Source IPv6 Address' field contains '2009:DB9:2229::79'. The 'Source Prefix Length (0-128)' field contains '128'. There is a checkbox for 'Time-Range' which is unchecked, and a dropdown for 'R&D' is visible. At the bottom right, there are 'Apply' and 'Revert' buttons.

**Configuring an Extended IPv6 ACL** Use the Security > ACL (Configure ACL - Add Rule - IPv6 Extended) page to configure an Extended IPv6 ACL.

### Parameters

These parameters are displayed:

- ◆ **Type** – Selects the type of ACLs to show in the Name list.
- ◆ **Name** – Shows the names of ACLs matching the selected type.

- ◆ **Action** – An ACL can contain any combination of permit or deny rules.
- ◆ **Source Address Type** – Specifies the source IP address type. Use “Any” to include all possible addresses, “Host” to specify a specific host address in the Address field, or “IPv6-Prefix” to specify a range of addresses. (Options: Any, Host, IPv6-Prefix; Default: Any)
- ◆ **Destination Address Type** – Specifies the destination IP address type. Use “Any” to include all possible addresses, or “IPv6-Prefix” to specify a range of addresses. (Options: Any, IPv6-Prefix; Default: Any)
- ◆ **Source/Destination IPv6 Address** – An IPv6 address or network class. The address must be formatted according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields.
- ◆ **Source/Destination Prefix-Length** – A decimal value indicating how many contiguous bits (from the left) of the address comprise the prefix; i.e., the network portion of the address. (Range: 0-128 bits for the source prefix; 0-8 bits for the destination prefix)
- ◆ **DSCP** – DSCP traffic class. (Range: 0-63)
- ◆ **Next Header** – Identifies the type of header immediately following the IPv6 header. (Range: 0-255)  
  
Optional internet-layer information is encoded in separate headers that may be placed between the IPv6 header and the upper-layer header in a packet. There are a small number of such extension headers, each identified by a distinct Next Header value. IPv6 supports the values defined for the IPv4 Protocol field in RFC 1700, and includes these commonly used headers:  
  
 0 : Hop-by-Hop Options (RFC 2460)  
 6 : TCP Upper-layer Header (RFC 1700)  
 17 : UDP Upper-layer Header (RFC 1700)  
 43 : Routing (RFC 2460)  
 44 : Fragment (RFC 2460)  
 50 : Encapsulating Security Payload (RFC 2406)  
 51 : Authentication (RFC 2402)  
 60 : Destination Options (RFC 2460)
- ◆ **Source Port** – Protocol<sup>9</sup> source port number. (Range: 0-65535)
- ◆ **Source Port Bit Mask** – Decimal number representing the port bits to match. (Range: 0-65535)
- ◆ **Destination Port** – Protocol<sup>9</sup> destination port number. (Range: 0-65535)

---

9. Includes TCP, UDP or other protocol types.

- ◆ **Destination Port Bit Mask** – Decimal number representing the port bits to match. (Range: 0-65535)
- ◆ **Time Range** – Name of a time range.

### Web Interface

To add rules to an Extended IPv6 ACL:

1. Click Security, ACL.
2. Select Configure ACL from the Step list.
3. Select Add Rule from the Action list.
4. Select IPv6 Extended from the Type list.
5. Select the name of an ACL from the Name list.
6. Specify the action (i.e., Permit or Deny).
7. Select the address type (Any or IPv6-prefix).
8. If you select “Host,” enter a specific address. If you select “IPv6-prefix,” enter a subnet address and prefix length.
9. Set any other required criteria, such as DSCP or next header type.
10. Click Apply.

**Figure 199: Configuring an Extended IPv6 ACL**

The screenshot displays the 'Security > ACL' configuration page. At the top, there are tabs for 'Step: 1. Configure ACL' and 'Action: Add Rule'. The main configuration area includes the following fields:

- Action:** A dropdown menu set to 'Permit'.
- Source Address Type:** A dropdown menu set to 'Any'.
- Source IPv6 Address:** A text input field containing '::'.
- Source Prefix Length (0-128):** A text input field containing '0'.
- Destination Address Type:** A dropdown menu set to 'Any'.
- Destination IPv6 Address:** A text input field containing '::'.
- Destination Prefix Length (0-128):** A text input field containing '0'.
- DSCP (0-63):** A text input field.
- Next-Header (0-255):** A text input field.
- Source Port (0-65535):** A text input field.
- Source Port Bit Mask (0-65535):** A text input field.
- Destination Port (0-65535):** A text input field.
- Destination Port Bit Mask (0-65535):** A text input field.
- Time-Range:** A checkbox that is unchecked, followed by a dropdown menu set to 'R&D'.

At the bottom right of the configuration area, there are two buttons: 'Apply' and 'Revert'.

**Configuring a MAC ACL** Use the Security > ACL (Configure ACL - Add Rule - MAC) page to configure a MAC ACL based on hardware addresses, packet format, and Ethernet type.

#### Parameters

These parameters are displayed:

- ◆ **Type** – Selects the type of ACLs to show in the Name list.
- ◆ **Name** – Shows the names of ACLs matching the selected type.
- ◆ **Action** – An ACL can contain any combination of permit or deny rules.
- ◆ **Source/Destination Address Type** – Use “Any” to include all possible addresses, “Host” to indicate a specific MAC address, or “MAC” to specify an address range with the Address and Bit Mask fields. (Options: Any, Host, MAC; Default: Any)
- ◆ **Source/Destination MAC Address** – Source or destination MAC address.
- ◆ **Source/Destination Bit Mask** – Hexadecimal mask for source or destination MAC address.
- ◆ **Packet Format** – This attribute includes the following packet types:
  - **Any** – Any Ethernet packet type.
  - **Untagged-eth2** – Untagged Ethernet II packets.
  - **Untagged-802.3** – Untagged Ethernet 802.3 packets.
  - **Tagged-eth2** – Tagged Ethernet II packets.
  - **Tagged-802.3** – Tagged Ethernet 802.3 packets.
- ◆ **VID** – VLAN ID. (Range: 1-4094)
- ◆ **VID Bit Mask** – VLAN bit mask. (Range: 0-4095)
- ◆ **Ethernet Type** – This option can only be used to filter Ethernet II formatted packets. (Range: 0-ffff hex.)
 

A detailed listing of Ethernet protocol types can be found in RFC 1060. A few of the more common types include 0800 (IP), 0806 (ARP), 8137 (IPX).
- ◆ **Ethernet Type Bit Mask** – Protocol bit mask. (Range: 0-ffff hex)
- ◆ **Internet Protocol** – Layer 3 or 4 information to match.
  - **No** – Not applied.
  - **IPv4** – See “Configuring an Extended IPv4 ACL” on page 314.
  - **IPv6** – See “Configuring an Extended IPv6 ACL” on page 318.
- ◆ **CoS** – CoS value. (Range: 0-7, where 7 is the highest priority)

- ◆ **CoS Bit Mask** – CoS bitmask. (Range: 0-7)
- ◆ **Time Range** – Name of a time range.

### Web Interface

To add rules to a MAC ACL:

1. Click Security, ACL.
2. Select Configure ACL from the Step list.
3. Select Add Rule from the Action list.
4. Select MAC from the Type list.
5. Select the name of an ACL from the Name list.
6. Specify the action (i.e., Permit or Deny).
7. Select the address type (Any, Host, or MAC).
8. If you select “Host,” enter a specific address (e.g., 11-22-33-44-55-66). If you select “MAC,” enter a base address and a hexadecimal bit mask for an address range.
9. Set any other required criteria, such as VID, Ethernet type, or packet format.
10. Click Apply.

**Figure 200: Configuring a MAC ACL**

The screenshot displays the 'Configure ACL' web interface. At the top, 'Step: 1. Configure ACL' and 'Action: Add Rule' are selected. The 'Type' section has radio buttons for IP Standard, IP Extended, MAC (selected), IPv6 Standard, IPv6 Extended, and ARP. Below this is a 'Name' dropdown. The 'Action' section has a 'Permit' dropdown. The 'Source Address Type' is set to 'Any'. The 'Source MAC Address' and 'Source Bit Mask' fields contain '00-00-00-00-00-00'. The 'Destination Address Type' is set to 'Any'. The 'Destination MAC Address' and 'Destination Bit Mask' fields contain '00-00-00-00-00-00'. The 'Packet Format' is set to 'Any'. There are input fields for 'VID (1-4094)', 'VID Bit Mask (0-4095)', 'Ethernet Type (0000-FFFF, hexadecimal value)', and 'Ethernet Type Bit Mask (0000-FFFF, hexadecimal value)'. The 'Internet Protocol' section has radio buttons for No (selected), IPv4, and IPv6. There are input fields for 'CoS (0-7)' and 'CoS Bit Mask (0-7)'. A 'Time-Range' checkbox is present. At the bottom right are 'Apply' and 'Revert' buttons.

**Configuring an ARP ACL** Use the Security > ACL (Configure ACL - Add Rule - ARP) page to configure ACLs based on ARP message addresses. ARP Inspection can then use these ACLs to filter suspicious traffic (see [“Configuring Global Settings for ARP Inspection” on page 372](#)).

#### Parameters

These parameters are displayed:

- ◆ **Type** – Selects the type of ACLs to show in the Name list.
- ◆ **Name** – Shows the names of ACLs matching the selected type.
- ◆ **Action** – An ACL can contain any combination of permit or deny rules.
- ◆ **Packet Type** – Indicates an ARP request, ARP response, or either type. (Range: IP, Request, Response; Default: IP)
- ◆ **Source/Destination IP Address Type** – Specifies the source or destination IPv4 address. Use “Any” to include all possible addresses, “Host” to specify a specific host address in the Address field, or “IP” to specify a range of addresses with the Address and Mask fields. (Options: Any, Host, IP; Default: Any)
- ◆ **Source/Destination IP Address** – Source or destination IP address.
- ◆ **Source/Destination IP Subnet Mask** – Subnet mask for source or destination address. (See the description for Subnet Mask on [page 313](#).)
- ◆ **Source/Destination MAC Address Type** – Use “Any” to include all possible addresses, “Host” to indicate a specific MAC address, or “MAC” to specify an address range with the Address and Mask fields. (Options: Any, Host, MAC; Default: Any)
- ◆ **Source/Destination MAC Address** – Source or destination MAC address.
- ◆ **Source/Destination MAC Bit Mask** – Hexadecimal mask for source or destination MAC address.
- ◆ **Log** – Logs a packet when it matches the access control entry.

#### Web Interface

To add rules to an ARP ACL:

1. Click Security, ACL.
2. Select Configure ACL from the Step list.
3. Select Add Rule from the Action list.
4. Select ARP from the Type list.

5. Select the name of an ACL from the Name list.
6. Specify the action (i.e., Permit or Deny).
7. Select the packet type (Request, Response, All).
8. Select the address type (Any, Host, or IP).
9. If you select "Host," enter a specific address (e.g., 11-22-33-44-55-66). If you select "IP," enter a base address and a hexadecimal bit mask for an address range.
10. Enable logging if required.
11. Click Apply.

**Figure 201: Configuring a ARP ACL**

The screenshot shows the 'Security > ACL' configuration page. At the top, there's a 'Step' dropdown set to '1. Configure ACL' and an 'Action' dropdown set to 'Add Rule'. Below this, the 'Type' is set to 'ARP' (selected with a radio button). The 'Name' field contains 'R&F#7ARP'. The 'Action' is set to 'Permit'. The 'Packet Type' is set to 'IP'. The 'Source IP Address Type' is set to 'Any', and the 'Destination IP Address Type' is also set to 'Any'. Both source and destination IP addresses are set to '0.0.0.0', and their subnet masks are also '0.0.0.0'. The 'Source MAC Address Type' is set to 'Any', and the 'Destination MAC Address Type' is also set to 'Any'. Both source and destination MAC addresses are set to '00-00-00-00-00-00', and their bit masks are also '00-00-00-00-00-00'. There is a 'Log' checkbox which is currently unchecked. At the bottom right, there are 'Apply' and 'Revert' buttons.

### Binding a Port to an Access Control List

After configuring ACLs, use the Security > ACL (Configure Interface – Configure) page to bind the ports that need to filter traffic to the appropriate ACLs.

#### Parameters

These parameters are displayed:

- ◆ **Type** – Selects the type of ACLs to bind to a port.
- ◆ **Port** – Port identifier.
- ◆ **ACL** – ACL used for ingress or egress packets.
- ◆ **Time Range** – Name of a time range.



- ◆ **Counter** – Enables counter for ACL statistics.

### Web Interface

To bind an ACL to a port:

1. Click Security, ACL.
2. Select Configure Interface from the Step list.
3. Select Configure from the Action list.
4. Select IP, MAC or IPv6 from the Type options.
5. Select a port.
6. Select the name of an ACL from the ACL list.
7. Click Apply.

**Figure 202: Binding a Port to an ACL**

The screenshot shows the 'Security > ACL' configuration page. At the top, the 'Step' is '2. Configure Interface' and the 'Action' is 'Configure'. Below this, the 'Type' is set to 'IP' (radio button selected), with 'MAC' and 'IPv6' as options. The 'Port' is set to '1'. Under the 'Ingress' section, the 'ACL' dropdown is set to 'rd', and the 'Counter' checkbox is unchecked. The 'Egress' section has identical settings. At the bottom right, there are 'Apply' and 'Revert' buttons.

### Showing ACL Hardware Counters

Use the Security > ACL > Configure Interface (Show Hardware Counters) page to show statistics for ACL hardware counters.

### Parameters

These parameters are displayed:

- ◆ **Port** – Port identifier. (Range: 1-52)
- ◆ **Type** – Selects the type of ACL.

- ◆ **Direction** – Displays statistics for ingress or egress traffic.
- ◆ **Query** – Displays statistics for selected criteria.
- ◆ **ACL Name** – The ACL bound this port.
- ◆ **Action** – Shows if action is to permit or deny specified packets.
- ◆ *Rules* – Shows the rules for the ACL bound to this port.
- ◆ **Time-Range** – Name of a time range.
- ◆ **Hit** – Shows the number of packets matching this ACL.
- ◆ **Clear Counter** – Clears the hit counter for the specified ACL.

### Web Interface

To show statistics for ACL hardware counters:

1. Click Security, ACL.
2. Select Configure Interface from the Step list.
3. Select Show Hardware Counters from the Action list.
4. Select a port.
5. Select ingress or egress traffic.

**Figure 203: Showing ACL Statistics**

The screenshot shows the 'Security > ACL' web interface. At the top, there's a breadcrumb 'Security > ACL' and a help icon. Below this, there are two dropdown menus: 'Step: 2. Configure Interface' and 'Action: Show Hardware Counter'. The main configuration area includes three dropdown menus: 'Port' (set to 1), 'Type' (set to IP Standard), and 'Direction' (set to Ingress). A 'Query' button is located to the right of these settings. Below the configuration area, the 'ACL Name' is listed as 'rd'. A 'Total: 1' label is positioned above a table. The table has five columns: 'Action', 'Source IP Address', 'Time-Range', 'Hit', and 'Clear Counter'. The first row of data shows 'Permit' for Action, 'Any' for Source IP Address, an empty cell for Time-Range, '14' for Hit, and a 'Clear' button for Clear Counter.

| Action | Source IP Address | Time-Range | Hit | Clear Counter          |
|--------|-------------------|------------|-----|------------------------|
| Permit | Any               |            | 14  | <button>Clear</button> |

---

## Filtering IP Addresses for Management Access

Use the Security > IP Filter page to create a list of up to 15 IP addresses or IP address groups that are allowed management access to the switch through the web interface, SNMP, or Telnet.

### Command Usage

- ◆ The management interfaces are open to all IP addresses by default. Once you add an entry to a filter list, access to that interface is restricted to the specified addresses.
- ◆ If anyone tries to access a management interface on the switch from an invalid address, the switch will reject the connection, enter an event message in the system log, and send a trap message to the trap manager.
- ◆ IP address can be configured for SNMP, web and Telnet access respectively. Each of these groups can include up to five different sets of addresses, either individual addresses or address ranges.
- ◆ When entering addresses for the same group (i.e., SNMP, web or Telnet), the switch will not accept overlapping address ranges. When entering addresses for different groups, the switch will accept overlapping address ranges.
- ◆ You cannot delete an individual address from a specified range. You must delete the entire range, and reenter the addresses.
- ◆ You can delete an address range just by specifying the start address, or by specifying both the start address and end address.

### Parameters

These parameters are displayed:

- ◆ **Mode**
  - **Web** – Configures IP address(es) for the web group.
  - **SNMP** – Configures IP address(es) for the SNMP group.
  - **Telnet** – Configures IP address(es) for the Telnet group.
  - **All** – Configures IP address(es) for all groups.
- ◆ **Start IP Address** – A single IP address, or the starting address of a range.
- ◆ **End IP Address** – The end address of a range.

### Web Interface

To create a list of IP addresses authorized for management access:

1. Click Security, IP Filter.
2. Select Add from the Action list.
3. Select the management interface to filter (Web, SNMP, Telnet, All).
4. Enter the IP addresses or range of addresses that are allowed management access to an interface.
5. Click Apply

**Figure 204: Creating an IP Address Filter for Management Access**

The screenshot shows the 'Security > IP Filter' web interface. At the top, the breadcrumb 'Security > IP Filter' is displayed. Below it, the 'Action:' dropdown is set to 'Add'. The 'Mode' section has four radio buttons: 'Web' (selected), 'SNMP', 'Telnet', and 'All'. Below the mode selection, there are two input fields: 'Start IP Address' with the value '10.1.2.3' and 'End IP Address' which is empty. At the bottom right, there are 'Apply' and 'Revert' buttons.

To show a list of IP addresses authorized for management access:

1. Click Security, IP Filter.
2. Select Show from the Action list.

**Figure 205: Showing IP Addresses Authorized for Management Access**

The screenshot shows the 'Security > IP Filter' web interface with the 'Action:' dropdown set to 'Show'. The 'Mode' section has four radio buttons: 'Web', 'SNMP' (selected), 'Telnet', and 'All'. Below the mode selection, the text 'SNMP IP Filter List Total: 1' is displayed. A table with two columns, 'Start IP Address' and 'End IP Address', shows a single entry with the value '10.1.2.3' in both columns. At the bottom right, there are 'Delete' and 'Revert' buttons.

|                          | Start IP Address | End IP Address |
|--------------------------|------------------|----------------|
| <input type="checkbox"/> | 10.1.2.3         | 10.1.2.3       |

## Configuring Port Security

Use the Security > Port Security page to configure the maximum number of device MAC addresses that can be learned by a switch port, stored in the address table, and authorized to access the network.

When port security is enabled on a port, the switch stops learning new MAC addresses on the specified port when it has reached a configured maximum number. Only incoming traffic with source addresses already stored in the address table will be authorized to access the network through that port. If a device with an unauthorized MAC address attempts to use the switch port, the intrusion will be detected and the switch can automatically take action by disabling the port and sending a trap message.

### Command Usage

- ◆ The default maximum number of MAC addresses allowed on a secure port is zero (that is, disabled). To use port security, you must configure the maximum number of addresses allowed on a port.
- ◆ To configure the maximum number of address entries which can be learned on a port, and then specify the maximum number of dynamic addresses allowed. The switch will learn up to the maximum number of allowed address pairs <source MAC address, VLAN> for frames received on the port. When the port has reached the maximum number of MAC addresses, the port will stop learning new addresses. The MAC addresses already in the address table will be retained and will not be aged out.

Note that you can manually add additional secure addresses to a port using the Static Address Table ([page 199](#)).

- ◆ When the port security state is changed from enabled to disabled, all dynamically learned entries are cleared from the address table.
- ◆ If port security is enabled, and the maximum number of allowed addresses are set to a non-zero value, any device not in the address table that attempts to use the port will be prevented from accessing the switch.
- ◆ If a port is disabled (shut down) due to a security violation, it must be manually re-enabled from the Interface > Port > General page ([page 106](#)).
- ◆ A secure port has the following restrictions:
  - It cannot be used as a member of a static or dynamic trunk.
  - It should not be connected to a network interconnection device.
  - RSPAN and port security are mutually exclusive functions. If port security is enabled on a port, that port cannot be set as an RSPAN uplink port. Also, when a port is configured as an RSPAN uplink port, source port, or destination port, port security cannot be enabled on that port.

### Parameters

These parameters are displayed:

- ◆ **Port** – Port identifier.
- ◆ **Security Status** – Enables or disables port security on a port.  
(Default: Disabled)
- ◆ **Port Status** – The operational status:
  - Secure/Down – Port security is disabled.
  - Secure/Up – Port security is enabled.
  - Shutdown – Port is shut down due to a response to a port security violation.
- ◆ **Action** – Indicates the action to be taken when a port security violation is detected:
  - **None**: No action should be taken. (This is the default.)
  - **Trap**: Send an SNMP trap message.
  - **Shutdown**: Disable the port.
  - **Trap and Shutdown**: Send an SNMP trap message and disable the port.
- ◆ **Max MAC Count** – The maximum number of MAC addresses that can be learned on a port. (Range: 0 - 1024, where 0 means disabled)  
  
The maximum address count is effective when port security is enabled or disabled.
- ◆ **Current MAC Count** – The number of MAC addresses currently associated with this interface.
- ◆ **MAC Filter** – Shows if MAC address filtering has been set under Security > Network Access (Configure MAC Filter) as described on [page 294](#).
- ◆ **MAC Filter ID** – The identifier for a MAC address filter.
- ◆ **Last Intrusion MAC** – The last unauthorized MAC address detected.
- ◆ **Last Time Detected Intrusion MAC** – The last time an unauthorized MAC address was detected.

## Web Interface

To configure port security:

1. Click Security, Port Security.
2. Mark the check box in the Security Status column to enable security, set the action to take when an invalid address is detected on a port, and set the maximum number of MAC addresses allowed on the port.
3. Click Apply

**Figure 206: Configuring Port Security**

| Port | Security Status                  | Port Status | Action              | Max MAC Count (0-1024) | Current MAC Count | MAC Filter | MAC Filter ID | Last Intrusion MAC | Last Time Detected Intrusion MAC |
|------|----------------------------------|-------------|---------------------|------------------------|-------------------|------------|---------------|--------------------|----------------------------------|
| 1    | <input type="checkbox"/> Enabled | Secure/Down | Trap and Shutdown ▼ | 0                      | 0                 | Disabled   | 0             | NA                 | NA                               |
| 2    | <input type="checkbox"/> Enabled | Secure/Down | Trap ▼              | 0                      | 0                 | Disabled   | 1             | NA                 | NA                               |
| 3    | <input type="checkbox"/> Enabled | Secure/Down | None ▼              | 0                      | 0                 | Disabled   | 0             | NA                 | NA                               |
| 4    | <input type="checkbox"/> Enabled | Secure/Down | None ▼              | 0                      | 0                 | Disabled   | 0             | NA                 | NA                               |
| 5    | <input type="checkbox"/> Enabled | Secure/Down | None ▼              | 0                      | 0                 | Disabled   | 0             | NA                 | NA                               |

## Configuring 802.1X Port Authentication


Network switches can provide open and easy access to network resources by simply attaching a client PC. Although this automatic configuration and access is a desirable feature, it also allows unauthorized personnel to easily intrude and possibly gain access to sensitive network data.

The IEEE 802.1X (dot1X) standard defines a port-based access control procedure that prevents unauthorized access to a network by requiring users to first submit credentials for authentication. Access to all switch ports in a network can be centrally controlled from a server, which means that authorized users can use the same credentials for authentication from any point within the network.

This switch uses the Extensible Authentication Protocol over LANs (EAPOL) to exchange authentication protocol messages with the client, and a remote RADIUS authentication server to verify user identity and access rights. When a client (i.e., Supplicant) connects to a switch port, the switch (i.e., Authenticator) responds with an EAPOL identity request. The client provides its identity (such as a user name) in an EAPOL response to the switch, which it forwards to the RADIUS server. The RADIUS server verifies the client identity and sends an access challenge back to the client. The EAP packet from the RADIUS server contains not only the challenge, but the authentication method to be used. The client can reject the authentication method and request another, depending on the configuration of the client software and the RADIUS server. The encryption method used to pass authentication messages can be MD5 (Message-Digest 5), TLS (Transport Layer

Security), PEAP (Protected Extensible Authentication Protocol), or TTLS (Tunneled Transport Layer Security). The client responds to the appropriate method with its credentials, such as a password or certificate. The RADIUS server verifies the client credentials and responds with an accept or reject packet. If authentication is successful, the switch allows the client to access the network. Otherwise, non-EAP traffic on the port is blocked or assigned to a guest VLAN based on the “intrusion-action” setting. In “multi-host” mode, only one host connected to a port needs to pass authentication for all other hosts to be granted network access. Similarly, a port can become unauthorized for all hosts if one attached host fails re-authentication or sends an EAPOL logoff message.

**Figure 207: Configuring Port Authentication**

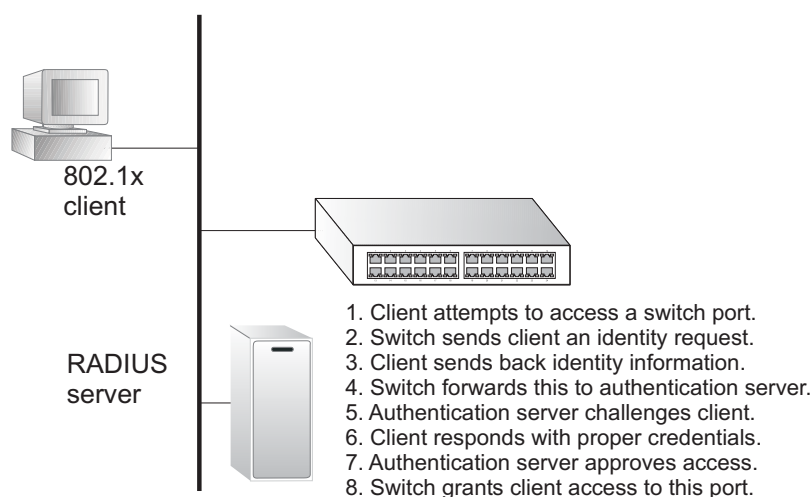

The operation of 802.1X on the switch requires the following:

- ◆ The switch must have an IP address assigned.
- ◆ RADIUS authentication must be enabled on the switch and the IP address of the RADIUS server specified.
- ◆ 802.1X must be enabled globally for the switch.
- ◆ Each switch port that will be used must be set to dot1X “Auto” mode.
- ◆ Each client that needs to be authenticated must have dot1X client software installed and properly configured.
- ◆ The RADIUS server and 802.1X client support EAP. (The switch only supports EAPOL in order to pass the EAP packets from the server to the client.)
- ◆ The RADIUS server and client also have to support the same EAP authentication type – MD5, PEAP, TLS, or TTLS. Native support for these encryption methods is provided in Windows 7, 8 and 10.



**Configuring 802.1X Global Settings** Use the Security > Port Authentication (Configure Global) page to configure IEEE 802.1X port authentication. The 802.1X protocol must be enabled globally for the switch system before port settings are active.

#### Parameters

These parameters are displayed:

- ◆ **System Authentication Control** – Sets the global setting for 802.1X. (Default: Disabled)
- ◆ **Default** – Sets all configurable 802.1X global and port settings to their default values.

#### Web Interface

To configure global settings for 802.1X:

1. Click Security, Port Authentication.
2. Select Configure Global from the Step list.
3. Enable 802.1X globally for the switch.
4. Enable EAPOL Pass Through to allow EAP frames to be passed on to another authenticator device in the network.
5. Click Apply

**Figure 208: Configuring Global Settings for 802.1X Port Authentication**

Security > Port Authentication

Step: 1. Configure Global ▼

|                               |   |
|-------------------------------|---|
| System Authentication Control | <input checked="" type="checkbox"/> Enabled |
| EAPOL Pass Through            | <input checked="" type="checkbox"/> Enabled |

Apply Revert

Default [Click this button to set 802.1X global/port settings to default values.](#)

### Configuring Port Authenticator Settings for 802.1X

Use the Security > Port Authentication (Configure Interface – Authenticator) page to configure 802.1X port settings for the switch as the local authenticator. When 802.1X is enabled, you need to configure the parameters for the authentication process that runs between the client and the switch (i.e., authenticator), as well as the client identity lookup process that runs between the switch and authentication server.

#### Command Usage

- ◆ When the switch functions as a local authenticator between supplicant devices attached to the switch and the authentication server, configure the parameters for the exchange of EAP messages between the authenticator and clients on the Authenticator configuration page.
- ◆ This switch can be configured to serve as the authenticator on selected ports by setting the Control Mode to Auto on this configuration page, and as a supplicant on other ports by the setting the control mode to Force-Authorized on this page and enabling the PAE supplicant on the Supplicant configuration page.

#### Parameters

These parameters are displayed:

- ◆ **Port** – Port number.
- ◆ **Status** – Indicates if authentication is enabled or disabled on the port. The status is disabled if the control mode is set to Force-Authorized.
- ◆ **Authorized** – Displays the 802.1X authorization status of connected clients.
  - **Yes** – Connected client is authorized.
  - **N/A** – Connected client is not authorized, or port is not connected.
- ◆ **Control Mode** – Sets the authentication mode to one of the following options:
  - **Auto** – Requires a dot1x-aware client to be authorized by the authentication server. Clients that are not dot1x-aware will be denied access.
  - **Force-Authorized** – Forces the port to grant access to all clients, either dot1x-aware or otherwise. (This is the default setting.)
  - **Force-Unauthorized** – Forces the port to deny access to all clients, either dot1x-aware or otherwise.
- ◆ **Operation Mode** – Allows single or multiple hosts (clients) to connect to an 802.1X-authorized port. (Default: Single-Host)
  - **Single-Host** – Allows only a single host to connect to this port.

- **Multi-Host** – Allows multiple host to connect to this port.

In this mode, only one host connected to a port needs to pass authentication for all other hosts to be granted network access. Similarly, a port can become unauthorized for all hosts if one attached host fails re-authentication or sends an EAPOL logoff message.

- **MAC-Based** – Allows multiple hosts to connect to this port, with each host needing to be authenticated.

In this mode, each host connected to a port needs to pass authentication. The number of hosts allowed access to a port operating in this mode is limited only by the available space in the secure address table (i.e., up to 1024 addresses).

- ◆ **Max Count** – The maximum number of hosts that can connect to a port when the Multi-Host operation mode is selected. (Range: 1-1024; Default: 5)
- ◆ **Max Request** – Sets the maximum number of times the switch port will retransmit an EAP request packet to the client before it times out the authentication session. (Range: 1-10; Default 2)
- ◆ **Quiet Period** – Sets the time that a switch port waits after the Max Request Count has been exceeded before attempting to acquire a new client. (Range: 1-65535 seconds; Default: 60 seconds)
- ◆ **Tx Period** – Sets the time period during an authentication session that the switch waits before re-transmitting an EAP packet. (Range: 1-65535; Default: 30 seconds)
- ◆ **Supplicant Timeout** – Sets the time that a switch port waits for a response to an EAP request from a client before re-transmitting an EAP packet. (Range: 1-65535; Default: 30 seconds)

This command attribute sets the timeout for EAP-request frames other than EAP-request/identity frames. If dot1x authentication is enabled on a port, the switch will initiate authentication when the port link state comes up. It will send an EAP-request/identity frame to the client to request its identity, followed by one or more requests for authentication information. It may also send other EAP-request frames to the client during an active connection as required for reauthentication.

- ◆ **Server Timeout** – Sets the time that a switch port waits for a response to an EAP request from an authentication server before re-transmitting an EAP packet. (Default: 0 seconds)

A RADIUS server must be set before the correct operational value of 10 seconds will be displayed in this field. (See [“Configuring Remote Logon Authentication Servers”](#) on page 268.)

- ◆ **Re-authentication Status** – Sets the client to be re-authenticated after the interval specified by the Re-authentication Period. Re-authentication can be used to detect if a new device is plugged into a switch port. (Default: Disabled)
- ◆ **Re-authentication Period** – Sets the time period after which a connected client must be re-authenticated. (Range: 1-65535 seconds; Default: 3600 seconds)
- ◆ **Re-authentication Max Retries** – The maximum number of times the switch port will retransmit an EAP request/identity packet to the client before it times out the authentication session. (Range: 1-10; Default: 2)
- ◆ **Intrusion Action** – Sets the port's response to a failed authentication.
  - **Block Traffic** – Blocks all non-EAP traffic on the port. (This is the default setting.)
  - **Guest VLAN** – All traffic for the port is assigned to a guest VLAN. The guest VLAN must be separately configured (See ["Configuring VLAN Groups" on page 161](#)) and mapped on each port (See ["Configuring Network Access for Ports" on page 291](#)).

#### *Supplicant List*

- ◆ **Supplicant** – MAC address of authorized client.

#### *Authenticator PAE State Machine*

- ◆ **State** – Current state (including initialize, disconnected, connecting, authenticating, authenticated, aborting, held, force\_authorized, force\_unauthorized).
- ◆ **Reauth Count** – Number of times connecting state is re-entered.
- ◆ **Current Identifier** – Identifier sent in each EAP Success, Failure or Request packet by the Authentication Server.

#### *Backend State Machine*

- ◆ **State** – Current state (including request, response, success, fail, timeout, idle, initialize).
- ◆ **Request Count** – Number of EAP Request packets sent to the Supplicant without receiving a response.
- ◆ **Identifier (Server)** – Identifier carried in the most recent EAP Success, Failure or Request packet received from the Authentication Server.

#### *Reauthentication State Machine*

- ◆ **State** – Current state (including initialize, reauthenticate).

### Web Interface

To configure port authenticator settings for 802.1X:

1. Click Security, Port Authentication.
2. Select Configure Interface from the Step list.
3. Modify the authentication settings for each port as required.
4. Click Apply

**Figure 209: Configuring Interface Settings for 802.1X Port Authenticator**

Security > Port Authentication

Step: 2. Configure Interface

Port: 1
Status: Disabled
Authorized: Yes
Control Mode: Force-Authorized
Operation Mode: Single-Host
Max Count (1-1024): 5
Max Request (1-10): 2
Quiet Period (1-65535): 60 sec
Tx Period (1-65535): 30 sec
Supplicant Timeout (1-65535): 30 sec
Server Timeout: 0 sec
Re-authentication Status: ☐ Enabled
Re-authentication Period (1-65535): 3600 sec
Re-authentication Max Retries (1-10): 2
Intrusion Action: Block Traffic

Supplicant List Total: 1

| Supplicant        | Authenticator PAE State Machine |              |                    | Backend State Machine |               |                     | Reauthentication State Machine |
|-------------------|---------------------------------|--------------|--------------------|-----------------------|---------------|---------------------|--------------------------------|
|                   | State                           | Reauth Count | Current Identifier | State                 | Request Count | Identifier (Server) | State                          |
| 00-00-00-00-00-00 | Initialize                      | 0            | 0                  | Initialize            | 0             | 0                   | Initialize                     |

Apply Revert

**Displaying 802.1X Statistics** Use the Security > Port Authentication (Show Statistics) page to display statistics for dot1x protocol exchanges for any port.

#### Parameters

These parameters are displayed:

**Table 17: 802.1X Statistics**

| Parameter            | Description  |
|----------------------|--|
| <i>Authenticator</i> |  |
| Rx EAPOL Start       | The number of EAPOL Start frames that have been received by this Authenticator.  |
| Rx EAPOL Logoff      | The number of EAPOL Logoff frames that have been received by this Authenticator.   |
| Rx EAPOL Invalid     | The number of EAPOL frames that have been received by this Authenticator in which the frame type is not recognized.        |
| Rx EAPOL Total       | The number of valid EAPOL frames of any type that have been received by this Authenticator.                                |
| Rx Last EAPOLVer     | The protocol version number carried in the most recent EAPOL frame received by this Authenticator.                         |
| Rx Last EAPOLSrc     | The source MAC address carried in the most recent EAPOL frame received by this Authenticator.                              |
| Rx EAP Resp/Id       | The number of EAP Resp/Id frames that have been received by this Authenticator.  |
| Rx EAP Resp/Oth      | The number of valid EAP Response frames (other than Resp/Id frames) that have been received by this Authenticator.         |
| Rx EAP LenError      | The number of EAPOL frames that have been received by this Authenticator in which the Packet Body Length field is invalid. |
| Tx EAP Req/Id        | The number of EAP Req/Id frames that have been transmitted by this Authenticator.  |
| Tx EAP Req/Oth       | The number of EAP Request frames (other than Rq/Id frames) that have been transmitted by this Authenticator.               |
| Tx EAPOL Total       | The number of EAPOL frames of any type that have been transmitted by this Authenticator.                                   |
| <i>Supplicant</i>    |  |
| Rx EAPOL Invalid     | The number of EAPOL frames that have been received by this Supplicant in which the frame type is not recognized.           |
| Rx EAPOL Total       | The number of valid EAPOL frames of any type that have been received by this Supplicant.                                   |
| Rx Last EAPOLVer     | The protocol version number carried in the most recent EAPOL frame received by this Supplicant.                            |
| Rx Last EAPOLSrc     | The source MAC address carried in the most recent EAPOL frame received by this Supplicant.                                 |
| Rx EAP Resp/Id       | The number of EAP Resp/Id frames that have been received by this Supplicant.   |
| Rx EAP Resp/Oth      | The number of valid EAP Response frames (other than Resp/Id frames) that have been received by this Supplicant.            |

**Table 17: 802.1X Statistics** (Continued)

| Parameter       | Description   |
|-----------------|---|
| Rx EAP LenError | The number of EAPOL frames that have been received by this Supplicant in which the Packet Body Length field is invalid. |
| Tx EAPOL Total  | The number of EAPOL frames of any type that have been transmitted by this Supplicant.                                   |
| Tx EAPOL Start  | The number of EAPOL Start frames that have been transmitted by this Supplicant.   |
| Tx EAPOL Logoff | The number of EAPOL Logoff frames that have been transmitted by this Supplicant.  |
| Tx EAP Req/Id   | The number of EAP Req/Id frames that have been transmitted by this Supplicant.  |
| Tx EAP Req/Oth  | The number of EAP Request frames (other than Req/Id frames) that have been transmitted by this Supplicant.              |

### Web Interface

To display port authenticator statistics for 802.1X:

1. Click Security, Port Authentication.
2. Select Show Statistics from the Step list.

**Figure 210: Showing Statistics for 802.1X Port Authenticator**

Security > Port Authentication

Step: 3. Show Statistics

Port 1

Port Authentication Authenticator Statistics

|                   |                   |                 |   |
|-------------------|-------------------|-----------------|---|
| Rx EAPOL Start    | 0                 | Rx EAP Resp/Id  | 0 |
| Rx EAPOL Logoff   | 0                 | Rx EAP Resp/Oth | 0 |
| Rx EAPOL Invalid  | 0                 | Rx EAP LenError | 0 |
| Rx EAPOL Total    | 0                 | Tx EAP Req/Id   | 0 |
| Rx Last EAPOLVer  | 0                 | Tx EAP Req/Oth  | 0 |
| Rx Last EAPOL Src | 00-00-00-00-00-00 | Tx EAPOL Total  | 0 |

Refresh

---

## DoS Protection

Use the Security > DoS Protection page to protect against denial-of-service (DoS) attacks. A DoS attack is an attempt to block the services provided by a computer or network resource. This kind of attack tries to prevent an Internet site or service from functioning efficiently or at all. In general, DoS attacks are implemented by either forcing the target to reset, to consume most of its resources so that it can no longer provide its intended service, or to obstruct the communication media between the intended users and the target so that they can no longer communicate adequately. This section describes how to protect against DoS attacks.

### Parameters

These parameters are displayed:

- ◆ **Echo/Chargen Attack** – Attacks in which the echo service repeats anything sent to it, and the chargen (character generator) service generates a continuous stream of data. When used together, they create an infinite loop and result in a denial-of-service. (Default: Disabled)
- ◆ **Echo/Chargen Attack Rate** – Maximum allowed rate. (Range: 64-2000 kbits/second; Default: 1000 kbits/second)
- ◆ **Smurf Attack** – Attacks in which a perpetrator generates a large amount of spoofed ICMP Echo Request traffic to the broadcast destination IP address (255.255.255.255), all of which uses a spoofed source address of the intended victim. The victim should crash due to the many interrupts required to send ICMP Echo response packets. (Default: Enabled)
- ◆ **TCP Flooding Attack** – Attacks in which a perpetrator sends a succession of TCP SYN requests (with or without a spoofed-Source IP) to a target and never returns ACK packets. These half-open connections will bind resources on the target, and no new connections can be made, resulting in a denial of service. (Default: Disabled)
- ◆ **TCP Flooding Attack Rate** – Maximum allowed rate. (Range: 64-2000 kbits/second; Default: 1000 kbits/second)
- ◆ **TCP Null Scan** – A TCP NULL scan message is used to identify listening TCP ports. The scan uses a series of strangely configured TCP packets which contain a sequence number of 0 and no flags. If the target's TCP port is closed, the target replies with a TCP RST (reset) packet. If the target TCP port is open, it simply discards the TCP NULL scan. (Default: Enabled)
- ◆ **TCP-SYN/FIN Scan** – A TCP SYN/FIN scan message is used to identify listening TCP ports. The scan uses a series of strangely configured TCP packets which contain SYN (synchronize) and FIN (finish) flags. If the target's TCP port is closed, the target replies with a TCP RST (reset) packet. If the target TCP port is open, it simply discards the TCP SYN FIN scan. (Default: Enabled)



- ◆ **TCP Xmas Scan** – A so-called TCP XMAS scan message is used to identify listening TCP ports. This scan uses a series of strangely configured TCP packets which contain a sequence number of 0 and the URG, PSH and FIN flags. If the target's TCP port is closed, the target replies with a TCP RST packet. If the target TCP port is open, it simply discards the TCP XMAS scan. (Default: Enabled)
- ◆ **UDP Flooding Attack** – Attacks in which a perpetrator sends a large number of UDP packets (with or without a spoofed-Source IP) to random ports on a remote host. The target will determine that application is listening at that port, and reply with an ICMP Destination Unreachable packet. It will be forced to send many ICMP packets, eventually leading it to be unreachable by other clients. (Default: Disabled)
- ◆ **UDP Flooding Attack Rate** – Maximum allowed rate. (Range: 64-2000 kbits/second; Default: 1000 kbits/second)
- ◆ **WinNuke Attack** – Attacks in which affected the Microsoft Windows 3.1x/95/NT operating systems. In this type of attack, the perpetrator sends the string of OOB out-of-band (OOB) packets contained a TCP URG flag to the target computer on TCP port 139 (NetBIOS), casing it to lock up and display a “Blue Screen of Death.” This did not cause any damage to, or change data on, the computer’s hard disk, but any unsaved data would be lost. Microsoft made patches to prevent the WinNuke attack, but the OOB packets. (Default: Disabled)
- ◆ **WinNuke Attack Rate** – Maximum allowed rate. (Range: 64-2000 kbits/second; Default: 1000 kbits/second)

### Web Interface

To protect against DoS attacks:

1. Click Security, DoS Protection.
2. Enable protection for specific DoS attacks, and set the maximum allowed rate as required.
3. Click Apply

**Figure 211: Protecting Against DoS Attacks**

| Security > DoS Protection          |   |
|------------------------------------|---|
| Echo/Chargen Attack                | <input checked="" type="checkbox"/> Enabled |
| Echo/Chargen Attack Rate (64-2000) | 1000 kbps                                   |
| Smurf Attack                       | <input checked="" type="checkbox"/> Enabled |
| TCP Flooding Attack                | <input checked="" type="checkbox"/> Enabled |
| TCP Flooding Attack Rate (64-2000) | 1000 kbps                                   |
| TCP Null Scan                      | <input checked="" type="checkbox"/> Enabled |
| TCP SYN/FIN Scan                   | <input checked="" type="checkbox"/> Enabled |
| TCP Xmas Scan                      | <input checked="" type="checkbox"/> Enabled |
| UDP Flooding Attack                | <input checked="" type="checkbox"/> Enabled |
| UDP Flooding Attack Rate (64-2000) | 1000 kbps                                   |
| WinNuke Attack                     | <input checked="" type="checkbox"/> Enabled |
| WinNuke Attack Rate (64-2000)      | 1000 kbps                                   |

Apply Revert

## DHCP Snooping

The addresses assigned to DHCP clients on insecure ports can be carefully controlled using the dynamic bindings registered with DHCP Snooping (or using the static bindings configured with IP Source Guard). DHCP snooping allows a switch to protect a network from rogue DHCP servers or other devices which send port-related information to a DHCP server. This information can be useful in tracking an IP address back to a physical port.

### Command Usage

#### *DHCP Snooping Process*

- ◆ Network traffic may be disrupted when malicious DHCP messages are received from an outside source. DHCP snooping is used to filter DHCP messages received on a non-secure interface from outside the network or fire wall. When DHCP snooping is enabled globally and enabled on a VLAN interface, DHCP messages received on an untrusted interface from a device not listed in the DHCP snooping table will be dropped.
- ◆ Table entries are only learned for trusted interfaces. An entry is added or removed dynamically to the DHCP snooping table when a client receives or releases an IP address from a DHCP server. Each entry includes a MAC address, IP address, lease time, VLAN identifier, and port identifier.
- ◆ The rate limit for the number of DHCP messages that can be processed by the switch is 100 packets per second. Any DHCP packets in excess of this limit are dropped.
- ◆ When DHCP snooping is enabled, DHCP messages entering an untrusted interface are filtered based upon dynamic entries learned via DHCP snooping.

- ◆ Filtering rules are implemented as follows:
  - If the global DHCP snooping is disabled, all DHCP packets are forwarded.
  - If DHCP snooping is enabled globally, and also enabled on the VLAN where the DHCP packet is received, all DHCP packets are forwarded for a *trusted* port. If the received packet is a DHCP ACK message, a dynamic DHCP snooping entry is also added to the binding table.
  - If DHCP snooping is enabled globally, and also enabled on the VLAN where the DHCP packet is received, but the port is *not trusted*, it is processed as follows:
    - If the DHCP packet is a reply packet from a DHCP server (including OFFER, ACK or NAK messages), the packet is dropped.
    - If the DHCP packet is from a client, such as a DECLINE or RELEASE message, the switch forwards the packet only if the corresponding entry is found in the binding table.
    - If the DHCP packet is from a client, such as a DISCOVER, REQUEST, INFORM, DECLINE or RELEASE message, the packet is forwarded if MAC address verification is disabled. However, if MAC address verification is enabled, then the packet will only be forwarded if the client's hardware address stored in the DHCP packet is the same as the source MAC address in the Ethernet header.
    - If the DHCP packet is not a recognizable type, it is dropped.
  - If a DHCP packet from a client passes the filtering criteria above, it will only be forwarded to trusted ports in the same VLAN.
  - If a DHCP packet is from server is received on a trusted port, it will be forwarded to both trusted and untrusted ports in the same VLAN.
  - If the DHCP snooping is globally disabled, all dynamic bindings are removed from the binding table.
  - *Additional considerations when the switch itself is a DHCP client* – The port(s) through which the switch submits a client request to the DHCP server must be configured as trusted. Note that the switch will not add a dynamic entry for itself to the binding table when it receives an ACK message from a DHCP server. Also, when the switch sends out DHCP client packets for itself, no filtering takes place. However, when the switch receives any messages from a DHCP server, any packets received from untrusted ports are dropped.

### *DHCP Snooping Option 82*

- ◆ DHCP provides a relay mechanism for sending information about its DHCP clients or the relay agent itself to the DHCP server. Also known as DHCP Option 82, it allows compatible DHCP servers to use the information when assigning IP addresses, or to set other services or policies for clients. It is also an effective tool in preventing malicious network attacks from attached clients on DHCP services, such as IP Spoofing, Client Identifier Spoofing, MAC Address Spoofing, and Address Exhaustion.
- ◆ DHCP Snooping must be enabled for Option 82 information to be inserted into request packets.
- ◆ When the DHCP Snooping Information Option 82 is enabled, the requesting client (or an intermediate relay agent that has used the information fields to describe itself) can be identified in the DHCP request packets forwarded by the switch and in reply packets sent back from the DHCP server. This information may specify the MAC address or IP address of the requesting device (that is, the switch in this context).

By default, the switch also fills in the Option 82 circuit-id field with information indicating the local interface over which the switch received the DHCP client request, including the port and VLAN ID. This allows DHCP client-server exchange messages to be forwarded between the server and client without having to flood them to the entire VLAN.

- ◆ If DHCP Snooping Information Option 82 is enabled on the switch, information may be inserted into a DHCP request packet received over any VLAN (depending on DHCP snooping filtering rules). The information inserted into the relayed packets includes the circuit-id and remote-id, as well as the gateway Internet address.
- ◆ When the switch receives DHCP packets from clients that already include DHCP Option 82 information, the switch can be configured to set the action policy for these packets. The switch can either drop the DHCP packets, keep the existing information, or replace it with the switch's relay information.

### **DHCP Snooping Global Configuration**

Use the Security > DHCP Snooping (Configure Global) page to enable DHCP Snooping globally on the switch, or to configure MAC Address Verification.

#### **Parameters**

These parameters are displayed:

#### *General*

- ◆ **DHCP Snooping Status** – Enables DHCP snooping globally. (Default: Disabled)
- ◆ **DHCP Snooping MAC-Address Verification** – Enables or disables MAC address verification. If the source MAC address in the Ethernet header of the

packet is not same as the client's hardware address in the DHCP packet, the packet is dropped. (Default: Enabled)

- ◆ **DHCP Snooping Rate Limit** – Sets the maximum number of DHCP packets that can be trapped by the switch for DHCP snooping. (Range: 1-2048 packets/second)

#### Information

- ◆ **DHCP Snooping Information Option Status** – Enables or disables DHCP Option 82 information relay. (Default: Disabled)
- ◆ **DHCP Snooping Information Option Sub-option Format** – Enables or disables use of sub-type and sub-length fields in circuit-ID (CID) and remote-ID (RID) in Option 82 information. (Default: Enabled)
- ◆ **DHCP Snooping Information Option Remote ID** – Specifies the MAC address, IP address, or arbitrary identifier of the requesting device (i.e., the switch in this context).
  - **MAC Address** – Inserts a MAC address in the remote ID sub-option for the DHCP snooping agent (i.e., the MAC address of the switch's CPU). This attribute can be encoded in Hexadecimal or ASCII.
  - **IP Address** – Inserts an IP address in the remote ID sub-option for the DHCP snooping agent (i.e., the IP address of the management interface). This attribute can be encoded in Hexadecimal or ASCII.
  - *string* – An arbitrary string inserted into the remote identifier field. (Range: 1-32 characters)
- ◆ **DHCP Snooping Information Option Remote ID TR101 VLAN Field** – Adds ":VLAN" in TR101 field for untagged packets.  
 The format for TR101 option 82 is: "<IP> eth <SID>/<PORT>[:<VLAN>]". Note that the SID (Switch ID) is always 0. By default the PVID is added to the end of the TR101 field for untagged packets. For tagged packets, the VLAN ID is always added.
- ◆ **DHCP Snooping Information Option TR101 Board ID** – Sets the board identifier used in Option 82 information based on TR-101 syntax. (Range: 0-9; Default: undefined)
- ◆ **DHCP Snooping Information Option Policy** – Specifies how to handle DHCP client request packets which already contain Option 82 information.
  - **Drop** – Drops the client's request packet instead of relaying it.
  - **Keep** – Retains the Option 82 information in the client request, and forwards the packets to trusted ports.
  - **Replace** – Replaces the Option 82 information circuit-id and remote-id fields in the client's request with information about the relay agent itself,

inserts the relay agent's address (when DHCP snooping is enabled), and forwards the packets to trusted ports. (This is the default policy.)

### Web Interface

To configure global settings for DHCP Snooping:

1. Click IP Service, DHCP, Snooping.
2. Select Configure Global from the Step list.
3. Select the required options for the general DHCP snooping process and for the DHCP snooping information option.
4. Click Apply

**Figure 212: Configuring Global Settings for DHCP Snooping**

Security > DHCP Snooping

Step: 1. Configure Global ▼

**General**

DHCP Snooping Status ☐ Enabled

DHCP Snooping MAC-Address Verification ☒ Enabled

**Information**

DHCP Snooping Information Option Status ☐ Enabled

DHCP Snooping Information Option Sub-option Format

DHCP Snooping Information Option Remote ID

DHCP Snooping Information Option Remote ID TR101 VLAN Field ☒ Enabled

DHCP Snooping Information Option TR101 Board ID

DHCP Snooping Information Option Policy

### DHCP Snooping VLAN Configuration

Use the Security > DHCP Snooping (Configure VLAN) page to enable or disable DHCP snooping on specific VLANs.

### Command Usage

- ◆ When DHCP snooping is enabled globally on the switch, and enabled on the specified VLAN, DHCP packet filtering will be performed on any untrusted ports within the VLAN.
- ◆ When the DHCP snooping is globally disabled, DHCP snooping can still be configured for specific VLANs, but the changes will not take effect until DHCP snooping is globally re-enabled.

- ◆ When DHCP snooping is globally enabled, and DHCP snooping is then disabled on a VLAN, all dynamic bindings learned for this VLAN are removed from the binding table.

### Parameters

These parameters are displayed:

- ◆ **VLAN** – ID of a configured VLAN. (Range: 1-4094)
- ◆ **DHCP Snooping Status** – Enables or disables DHCP snooping for the selected VLAN. When DHCP snooping is enabled globally on the switch, and enabled on the specified VLAN, DHCP packet filtering will be performed on any untrusted ports within the VLAN. (Default: Disabled)

### Web Interface

To configure global settings for DHCP Snooping:

1. Click IP Service, DHCP, Snooping.
2. Select Configure VLAN from the Step list.
3. Enable DHCP Snooping on any existing VLAN.
4. Click Apply

**Figure 213: Configuring DHCP Snooping on a VLAN**

The screenshot shows a web interface for configuring DHCP Snooping. The breadcrumb trail at the top is 'IP Service > DHCP > Snooping'. Below this, there is a 'Step:' dropdown menu currently showing '2. Configure VLAN'. Underneath, there is a 'VLAN' dropdown menu set to '1'. Below that, the 'DHCP Snooping Status' is shown with a green checkmark and the text 'Enabled'. At the bottom right of the configuration area, there are two buttons: 'Apply' and 'Revert'.

### Configuring Ports for DHCP Snooping

Use the Security > DHCP Snooping (Configure Interface) page to configure switch ports as trusted or untrusted.

### Command Usage

- ◆ A trusted interface is an interface that is configured to receive only messages from within the network. An untrusted interface is an interface that is configured to receive messages from outside the network or fire wall.
- ◆ When DHCP snooping is enabled both globally and on a VLAN, DHCP packet filtering will be performed on any untrusted ports within the VLAN.
- ◆ When an untrusted port is changed to a trusted port, all the dynamic DHCP snooping bindings associated with this port are removed.

- ◆ Set all ports connected to DHCP servers within the local network or fire wall to trusted state. Set all other ports outside the local network or fire wall to untrusted state.
- ◆ The format for TR101 option 82 is: "<IP> eth <SID>/<PORT>[:<VLAN>]". Note that the SID (Switch ID) is always 0. By default the PVID is added to the end of the TR101 field for untagged packets. For tagged packets, the VLAN ID is always added.

### Parameters

These parameters are displayed:

- ◆ **Trust Status** – Enables or disables a port as trusted. (Default: Disabled)
- ◆ **Max Number** – The maximum number of DHCP clients which can be supported per interface. (Range: 1-32; Default: 16)
- ◆ **Circuit ID** – Specifies DHCP Option 82 circuit ID suboption information.
  - **Mode** – Specifies the default string "VLAN-Unit-Port" or an arbitrary string. (Default: VLAN-Unit-Port)
  - **Value** – An arbitrary string inserted into the circuit identifier field. (Range: 1-32 characters)
  - **TR101 VLAN Field** – Adds ":VLAN" in TR101 field for untagged packets.

### Web Interface

To configure global settings for DHCP Snooping:

1. Click IP Service, DHCP, Snooping.
2. Select Configure Interface from the Step list.
3. Set any ports within the local network or firewall to trusted.
4. Specify the mode used for sending circuit ID information, and an arbitrary string if required.
5. Click Apply



**Figure 214: Configuring the Port Mode for DHCP Snooping**

Security > DHCP Snooping

Step: 3. Configure Interface

Interface: ☒ Port ☐ Trunk

DHCP Snooping Port List Total: 52

| Port | Trust Status                                | Max Number (1-32) | Circuit ID     |       |   |
|------|---|-------------------|----------------|-------|---|
|      |   |                   | Mode           | Value | TR101 VLAN Field                            |
| 1    | <input checked="" type="checkbox"/> Enabled | 16                | VLAN-Unit-Port |       | <input checked="" type="checkbox"/> Enabled |
| 2    | <input checked="" type="checkbox"/> Enabled | 16                | VLAN-Unit-Port |       | <input checked="" type="checkbox"/> Enabled |
| 3    | <input checked="" type="checkbox"/> Enabled | 16                | VLAN-Unit-Port |       | <input checked="" type="checkbox"/> Enabled |
| 4    | <input checked="" type="checkbox"/> Enabled | 16                | VLAN-Unit-Port |       | <input checked="" type="checkbox"/> Enabled |
| 5    | <input checked="" type="checkbox"/> Enabled | 16                | VLAN-Unit-Port |       | <input checked="" type="checkbox"/> Enabled |

### Displaying DHCP Snooping Binding Information

Use the Security > DHCP Snooping (Show Information) page to display entries in the binding table.

#### Parameters

These parameters are displayed:


- ◆ **MAC Address** – Physical address associated with the entry.
- ◆ **IP Address** – IP address corresponding to the client.
- ◆ **Lease Time** – The time for which this IP address is leased to the client.
- ◆ **Type** – Entry types include:
  - **DHCP-Snooping** – Dynamically snooped.
  - **Static-DHCPSPNP** – Statically configured.
- ◆ **VLAN** – VLAN to which this entry is bound.
- ◆ **Interface** – Port or trunk to which this entry is bound.
- ◆ **Store** – Writes all dynamically learned snooping entries to flash memory. This function can be used to store the currently learned dynamic DHCP snooping entries to flash memory. These entries will be restored to the snooping table when the switch is reset. However, note that the lease time shown for a dynamic entry that has been restored from flash memory will no longer be valid.
- ◆ **Clear** – Removes all dynamically learned snooping entries from flash memory.

### Web Interface

To display the binding table for DHCP Snooping:

1. Click IP Service, DHCP, Snooping.
2. Select Show Information from the Step list.
3. Use the Store or Clear function if required.

**Figure 215: Displaying the Binding Table for DHCP Snooping**

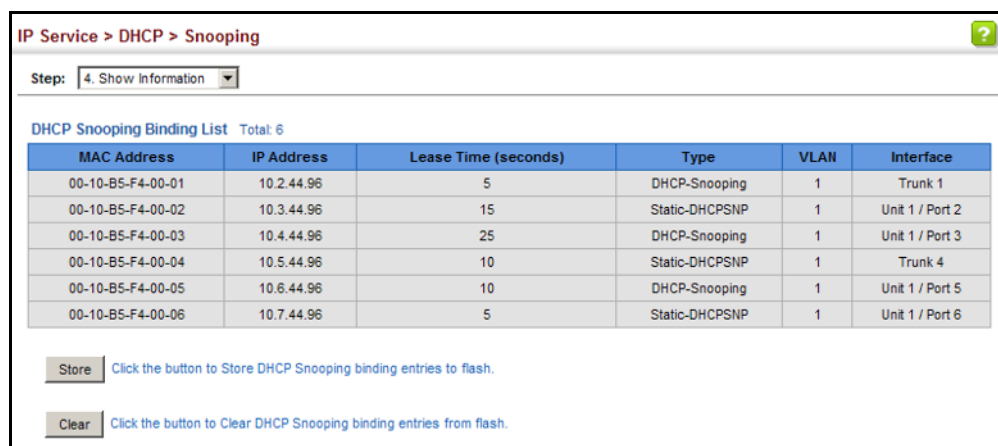

The screenshot shows the web interface for displaying the DHCP Snooping Binding List. The breadcrumb path is "IP Service > DHCP > Snooping". The "Step" dropdown is set to "4. Show Information". The table title is "DHCP Snooping Binding List" with a "Total: 6" count. The table has six columns: MAC Address, IP Address, Lease Time (seconds), Type, VLAN, and Interface. Below the table are "Store" and "Clear" buttons with descriptive text.

| MAC Address       | IP Address | Lease Time (seconds) | Type            | VLAN | Interface       |
|-------------------|------------|----------------------|-----------------|------|-----------------|
| 00-10-B5-F4-00-01 | 10.2.44.96 | 5                    | DHCP-Snooping   | 1    | Trunk 1         |
| 00-10-B5-F4-00-02 | 10.3.44.96 | 15                   | Static-DHCPSPNP | 1    | Unit 1 / Port 2 |
| 00-10-B5-F4-00-03 | 10.4.44.96 | 25                   | DHCP-Snooping   | 1    | Unit 1 / Port 3 |
| 00-10-B5-F4-00-04 | 10.5.44.96 | 10                   | Static-DHCPSPNP | 1    | Trunk 4         |
| 00-10-B5-F4-00-05 | 10.6.44.96 | 10                   | DHCP-Snooping   | 1    | Unit 1 / Port 5 |
| 00-10-B5-F4-00-06 | 10.7.44.96 | 5                    | Static-DHCPSPNP | 1    | Unit 1 / Port 6 |

**Store** Click the button to Store DHCP Snooping binding entries to flash.

**Clear** Click the button to Clear DHCP Snooping binding entries from flash.

## DHCPv6 Snooping

The addresses assigned to DHCPv6 clients on insecure ports can be carefully controlled using the dynamic bindings registered with DHCPv6 Snooping (or using the static bindings configured with IPv6 Source Guard). DHCPv6 snooping allows a switch to protect a network from rogue DHCPv6 servers or other devices which send port-related information to a DHCPv6 server. This information can be useful in tracking an IP address back to a physical port.

### Command Usage

#### *DHCP Snooping Process*

- ◆ Network traffic may be disrupted when malicious DHCPv6 messages are received from an outside source. DHCPv6 snooping is used to filter DHCPv6 messages received on a unsecure interface from outside the network or fire wall. When DHCPv6 snooping is enabled globally and enabled on a VLAN interface, DHCPv6 messages received on an untrusted interface from a device not listed in the DHCPv6 snooping table will be dropped.
- ◆ When enabled, DHCPv6 messages entering an untrusted interface are filtered based upon dynamic entries learned via DHCPv6 snooping.

- ◆ Table entries are only learned for trusted interfaces. Each entry includes a MAC address, IPv6 address, lease time, binding type, VLAN identifier, and port identifier.
- ◆ When DHCPv6 snooping is enabled, the rate limit for the number of DHCPv6 messages that can be processed by the switch is 100 packets per second. Any DHCPv6 packets in excess of this limit are dropped.
- ◆ Filtering rules are implemented as follows:
  - If global DHCPv6 snooping is disabled, all DHCPv6 packets are forwarded.
  - If DHCPv6 snooping is enabled globally, and also enabled on the VLAN where the DHCPv6 packet is received, DHCPv6 packets are forwarded for a *trusted* port as described below.
  - If DHCPv6 snooping is enabled globally, and also enabled on the VLAN where the DHCP packet is received, but the port is *not trusted*, DHCP packets are processed according to message type as follows:

*DHCP Client Packet*

- Request: Update entry in binding cache, recording client's DHCPv6 Unique Identifier (DUID), server's DUID, Identity Association (IA) type, IA Identifier, and address (4 message exchanges to get IPv6 address), and forward to trusted port.
- Solicit: Add new entry in binding cache, recording client's DUID, IA type, IA ID (2 message exchanges to get IPv6 address with rapid commit option, otherwise 4 message exchanges), and forward to trusted port.
- Decline: If no matching entry is found in binding cache, drop this packet.
- Renew, Rebind, Release, Confirm: If no matching entry is found in binding cache, drop this packet.
- If the DHCPv6 packet is not a recognizable type, it is dropped.

If a DHCPv6 packet from a client passes the filtering criteria above, it will only be forwarded to trusted ports in the same VLAN.

*DHCP Server Packet*

- If a DHCP server packet is received on an *untrusted* port, drop this packet and add a log entry in the system.
- If a DHCPv6 Reply packet is received from a server on a *trusted* port, it will be processed in the following manner:

**A.** Check if IPv6 address in IA option is found in binding table:

- If yes, continue to C.
  - If not, continue to B.
  - Check if IPv6 address in IA option is found in binding cache:
  - If yes, continue to C.
  - If not, check failed, and forward packet to trusted port.
- B.** Check status code in IA option:
- If successful, and entry is in binding table, update lease time and forward to original destination.
  - If successful, and entry is in binding cache, move entry from binding cache to binding table, update lease time and forward to original destination.
  - Otherwise, remove binding entry. and check failed.
  - If a DHCPv6 Relay packet is received, check the relay message option in Relay-Forward or Relay-Reply packet, and process client and server packets as described above.
- ◆ If DHCPv6 snooping is globally disabled, all dynamic bindings are removed from the binding table.
  - ◆ *Additional considerations when the switch itself is a DHCPv6 client* – The port(s) through which the switch submits a client request to the DHCPv6 server must be configured as trusted. Note that the switch will not add a dynamic entry for itself to the binding table when it receives an ACK message from a DHCPv6 server. Also, when the switch sends out DHCPv6 client packets for itself, no filtering takes place. However, when the switch receives any messages from a DHCPv6 server, any packets received from untrusted ports are dropped.

**DHCPv6 Snooping Global Configuration** Use the IP Service > DHCPv6 > Snooping (Configure Global) page to enable DHCPv6 Snooping globally on the switch, or to configure MAC Address Verification.

#### Parameters

These parameters are displayed:

- ◆ **DHCPv6 Snooping Status** – Enables DHCPv6 snooping globally. (Default: Disabled)
- ◆ **DHCPv6 Snooping Option Remote ID** – Enables the insertion of remote-id option 37 information into DHCPv6 client messages. Remote-id option information such as the port attached to the client, DUID, and VLAN ID is used

by the DHCPv6 server to assign preassigned configuration data specific to the DHCPv6 client. (Default: Disabled)

- DHCPv6 provides a relay mechanism for sending information about the switch and its DHCPv6 clients to the DHCPv6 server. Known as DHCPv6 Option 37, it allows compatible DHCPv6 servers to use the information when assigning IP addresses, or to set other services or policies for clients.
  - When DHCPv6 Snooping Information Option 37 is enabled, the requesting client (or an intermediate relay agent that has used the information fields to describe itself) can be identified in the DHCPv6 request packets forwarded by the switch and in reply packets sent back from the DHCPv6 server.
  - When the DHCPv6 Snooping Option 37 is enabled, clients can be identified by the switch port to which they are connected rather than just their MAC address. DHCPv6 client-server exchange messages are then forwarded directly between the server and client without having to flood them to the entire VLAN.
  - DHCPv6 snooping must be enabled for the DHCPv6 Option 37 information to be inserted into packets. When enabled, the switch will either drop, keep or remove option 37 information in incoming DHCPv6 packets. Packets are processed as follows:
    - If an incoming packet is a DHCPv6 request packet with option 37 information, it will modify the option 37 information according to the settings specified.
    - If an incoming packet is a DHCPv6 request packet without option 37 information, enabling the DHCPv6 snooping information option will add option 37 information to the packet.
    - If an incoming packet is a DHCPv6 reply packet with option 37 information, enabling the DHCPv6 snooping information option will remove option 37 information from the packet.
  - When this switch inserts Option 37 information in DHCPv6 client request packets, the switch's MAC address (hexadecimal) is used for the remote ID.
- ◆ **DHCPv6 Snooping Option Policy** – Sets the remote-id option policy for DHCPv6 client packets that include Option 37 information.
- When the switch receives DHCPv6 packets from clients that already include DHCP Option 37 information, the switch can be configured to set the action policy for these packets. The switch can either drop the DHCPv6 packets, keep the existing information, or replace it with the switch's relay agent information.
- **Drop** – Drops the client's request packet instead of relaying it. (This is the default policy.)
  - **Keep** – Retains the Option 82 information in the client request, and forwards the packets to trusted ports.

- **Replace** – Replaces the Option 37 remote-ID in the client's request with the relay agent's remote-ID (when DHCPv6 snooping is enabled), and forwards the packets to trusted ports.

### Web Interface

To configure global settings for DHCPv6 Snooping:

1. Click IP Service, DHCPv6, Snooping.
2. Select Configure Global from the Step list.
3. Select the required options for the DHCPv6 snooping process and for the DHCPv6 snooping information options.
4. Click Apply

Figure 216: Configuring Global Settings for DHCPv6 Snooping

The screenshot shows a web interface for configuring DHCPv6 Snooping. The breadcrumb path is "Security > DHCP Snooping6". Below this, there is a "Step:" dropdown menu set to "1. Configure Global". The main configuration area contains three settings: "DHCPv6 Snooping Status" with an "Enabled" checkbox, "DHCPv6 Snooping Option Remote ID" with an "Enabled" checkbox, and "DHCPv6 Snooping Option Policy" with a "Drop" dropdown menu. At the bottom right of the configuration area are "Apply" and "Revert" buttons.

### DHCPv6 Snooping VLAN Configuration

Use the IP Service > DHCPv6 > Snooping (Configure VLAN) page to enable or disable DHCPv6 snooping on specific VLANs.

### Command Usage

- ◆ When DHCPv6 snooping enabled globally and enabled on a VLAN, DHCPv6 packet filtering will be performed on any untrusted ports within the VLAN.
- ◆ When the DHCPv6 snooping is globally disabled, DHCPv6 snooping can still be configured for specific VLANs, but the changes will not take effect until DHCPv6 snooping is globally re-enabled.
- ◆ When DHCPv6 snooping is enabled globally, and then disabled on a VLAN, all dynamic bindings learned for this VLAN are removed from the binding table.

### Parameters

These parameters are displayed:

- ◆ **VLAN** – ID of a configured VLAN. (Range: 1-4094)

### Web Interface

To configure global settings for DHCPv6 Snooping:

1. Click IP Service, DHCPv6, Snooping.
2. Select Configure VLAN from the Step list.
3. Select Add from the Action list.
4. Select a VLAN on which to enable DHCPv6 Snooping.
5. Click Apply

**Figure 217: Configuring DHCPv6 Snooping on a VLAN**

Security > DHCP Snooping6

Step: 2. Configure VLAN Action: Add

VLAN ID (1-4094) 1 -

Apply Revert

To show the VLANs for which DHCPv6 Snooping is enabled:

1. Click IP Service, DHCPv6, Snooping.
2. Select Configure VLAN from the Step list.
3. Select Show from the Action list.

**Figure 218: Showing VLANs Enabled for DHCPv6 Snooping**

Security > DHCP Snooping6

Step: 2. Configure VLAN Action: Show

DHCPv6 Snooping VLAN List Total: 1

|                          | VLAN |
|--------------------------|------|
| <input type="checkbox"/> | 1    |

Apply Revert

### Configuring Interfaces for DHCPv6 Snooping

Use the IP Service > DHCP > Snooping6 (Configure Interface) page to configure switch interfaces as trusted or untrusted, and set the maximum number of entries which can be stored in the binding database for an interface.

### Command Usage

- ◆ A trusted interface is an interface that is configured to receive only messages from within the network. An untrusted interface is an interface that is configured to receive messages from outside the network or fire wall.

- ◆ Set all interfaces connected to DHCPv6 servers within the local network or fire wall to trusted, and all other interfaces outside the local network or fire wall to untrusted.
- ◆ When DHCPv6 snooping is enabled globally and enabled on a VLAN, DHCPv6 packet filtering will be performed on any untrusted ports within the VLAN according to the default status, or as specifically configured for an interface.
- ◆ When an untrusted port is changed to a trusted port, all the dynamic DHCPv6 snooping bindings associated with this port are removed.
- ◆ *Additional considerations when the switch itself is a DHCPv6 client* – The port(s) through which it submits a client request to the DHCPv6 server must be configured as trusted.

### Parameters

These parameters are displayed:

- ◆ **Interface** – Port or trunk identifier.
- ◆ **Trust Status** – Enables or disables an interface as trusted. (Default: Disabled)
- ◆ **Max Binding** – Sets the maximum number of entries which can be stored in the binding database for an interface. (Range: 1-5; Default: 5)
- ◆ **Current Binding** – Shows the maximum number of entries which can be stored in the binding database for an interface.

### Web Interface

To configure the trust status and maximum bindings for DHCPv6 Snooping:

1. Click IP Service, DHCPv6, Snooping.
2. Select Configure Interface from the Step list.
3. Set any interfaces within the local network or firewall to trusted.
4. Set the maximum number of entries which can stored for an interface.
5. Click Apply



Figure 219: Configuring the Trust State for DHCPv6 Snooping

| Security > DHCP Snooping6                |   |                     |                 |
|--|---|---------------------|-----------------|
| Step: 3. Configure Interface ▾           |   |                     |                 |
| DHCPv6 Snooping Interface List Total: 52 |   |                     |                 |
| Interface                                | Trust Status                                | Max Binding (1 - 5) | Current Binding |
| Eth 1/1                                  | <input checked="" type="checkbox"/> Enabled | 3                   | 0               |
| Eth 1/2                                  | <input type="checkbox"/> Enabled            | 5                   | 0               |
| Eth 1/3                                  | <input type="checkbox"/> Enabled            | 5                   | 0               |
| Eth 1/4                                  | <input type="checkbox"/> Enabled            | 5                   | 0               |
| Eth 1/5                                  | <input type="checkbox"/> Enabled            | 5                   | 0               |

### Displaying DHCPv6 Snooping Binding Information

Use the IP Service > DHCPv6 > Snooping (Show Information – Binding) page to display entries in the binding table.

#### Parameters

These parameters are displayed:

- ◆ **Link-layer Address** – IPv6 link-layer address associated with the entry.
- ◆ **IPv6 Address** – IPv6 address corresponding to the client.
- ◆ **Lifetime** – The time (number of seconds) for which this IPv6 address is leased to the client.
- ◆ **VLAN** – VLAN to which this entry is bound.
- ◆ **Interface** – Port or trunk to which this entry is bound.
- ◆ **Type** – Entry types include:
  - **NA** – Non-temporary address.
  - **TA** – Temporary address.
- ◆ **Clear** – Removes all dynamically learned snooping entries from RAM.

#### Web Interface

To display the binding table for DHCPv6 Snooping:

1. Click IP Service, DHCPv6, Snooping.
2. Select Show Information from the Step list.
3. Click Binding.
4. Use the Clear function if required.

Figure 220: Displaying the Binding Table for DHCPv6 Snooping



The screenshot shows the 'Security > DHCP Snooping6' configuration page. The 'Step' dropdown is set to '4. Show Information'. The 'Binding' radio button is selected, and the 'Statistics' radio button is unselected. Below the radio buttons, the title 'DHCPv6 Snooping Binding List' is followed by 'Total: 3'. A table displays the binding information with columns: Link-layer Address, IPv6 Address, Lifetime, VLAN, Interface, and Type. There are three rows of data. A 'Clear' button is located at the bottom right of the table.

|                          | Link-layer Address | IPv6 Address                            | Lifetime | VLAN | Interface | Type |
|--------------------------|--------------------|---|----------|------|-----------|------|
| <input type="checkbox"/> | 00-13-49-AA-39-26  | 2001:b021:1435:5612:ab3c:6792:a452:6712 | 2591998  | 1    | Eth 1/5   | NA   |
| <input type="checkbox"/> | 00-12-CF-01-02-03  | 2001:b000::1                            | 2591912  | 1    | Eth 1/3   | NA   |
| <input type="checkbox"/> | 00-12-CF-01-02-04  | 2001:b000::3                            | 2591555  | 1    | Trunk 2   | TA   |

### Displaying DHCPv6 Snooping Statistics

Use the IP Service > DHCPv6 > Snooping (Show Information – Statistics) page to display information on client, server, and relay packets.

#### Parameters

These parameters are displayed:

- ◆ **State** – Packet states include received, sent and dropped.
- ◆ *Types*
  - **Client Packet** – Includes Solicit, Request, Confirm, Renew, Rebind, Decline, Release and Information-request.
  - **Server Packet** – Includes Advertise, Reply, and Reconfigure.
  - **Relay Packet** – Includes Relay-forward and Relay-reply.

#### Web Interface

To display statistics for DHCPv6 Snooping:

1. Click IP Service, DHCPv6, Snooping.
2. Select Show Information from the Step list.
3. Click Statistics.
4. Use the Clear function if required.

Figure 221: Displaying Statistics for DHCPv6 Snooping

Security > DHCP Snooping6

Step: 4. Show Information ▼

☐ Binding ☒ Statistics

**DHCPv6 Snooping Statistics**

Client Packet: Solicit, Request, Confirm, Renew, Rebind, Decline, Release, Information-request

Server Packet: Advertise, Reply, Reconfigure

Relay Packet: Relay-forward, Relay-reply

| State    | Client | Server | Relay | Total |
|----------|--------|--------|-------|-------|
| Received | 0      | 0      | 0     | 0     |
| Sent     | 0      | 0      | 0     | 0     |
| Dropped  | 0      | 0      | 0     | 0     |

Clear

## IPv4 Source Guard

IPv4 Source Guard is a security feature that filters IP traffic on network interfaces based on manually configured entries in the IP Source Guard table, or dynamic entries in the DHCP Snooping table when enabled (see [“DHCP Snooping” on page 342](#)). IP source guard can be used to prevent traffic attacks caused when a host tries to use the IPv4 address of a neighbor to access the network. This section describes how to configure IPv4 Source Guard.

### Configuring Ports for IPv4 Source Guard

Use the Security > IP Source Guard > General page to set the filtering type based on source IP address, or source IP address and MAC address pairs. It also specifies lookup within the ACL binding table or the MAC address binding table, as well as the maximum number of allowed binding entries for the lookup tables.

IP Source Guard is used to filter traffic on an insecure port which receives messages from outside the network or fire wall, and therefore may be subject to traffic attacks caused by a host trying to use the IP address of a neighbor.

### Command Usage

#### Filter Type

- ◆ Setting source guard mode to SIP (Source IP) or SIP-MAC (Source IP and MAC) enables this function on the selected port. Use the SIP option to check the VLAN ID, source IP address, and port number against all entries in the binding table. Use the SIP-MAC option to check these same parameters, plus the source MAC address. If no matching entry is found, the packet is dropped.



**Note:** Multicast addresses cannot be used by IP Source Guard.

- ◆ When enabled, traffic is filtered based upon dynamic entries learned via DHCP snooping (see [“DHCP Snooping” on page 342](#)), or static addresses configured in the source guard binding table.
- ◆ If IP source guard is enabled, an inbound packet’s IP address (SIP option) or both its IP address and corresponding MAC address (SIP-MAC option) will be checked against the binding table. If no matching entry is found, the packet will be dropped.
- ◆ An entry with same MAC address and a different VLAN ID cannot be added to the binding table.
- ◆ Filtering rules are implemented as follows:
  - If DHCP snooping is disabled (see [page 344](#)), IP source guard will check the VLAN ID, source IP address, port number, and source MAC address (for the SIP-MAC option). If a matching entry is found in the binding table and the entry type is static IP source guard binding, the packet will be forwarded.
  - If DHCP snooping is enabled, IP source guard will check the VLAN ID, source IP address, port number, and source MAC address (for the SIP-MAC option). If a matching entry is found in the binding table and the entry type is static IP source guard binding, or dynamic DHCP snooping binding, the packet will be forwarded.
  - If IP source guard is enabled on an interface for which IP source bindings have not yet been configured (neither by static configuration in the IP source guard binding table nor dynamically learned from DHCP snooping), the switch will drop all IP traffic on that port, except for DHCP packets allowed by DHCP snooping.

### Parameters

These parameters are displayed:

- ◆ **Filter Type** – Configures the switch to filter inbound traffic based source IP address, or source IP address and corresponding MAC address. (Default: None)
  - **Disabled** – Disables IP source guard filtering on the port.
  - **SIP** – Enables traffic filtering based on IP addresses stored in the binding table.
  - **SIP-MAC** – Enables traffic filtering based on IP addresses and corresponding MAC addresses stored in the binding table.
- ◆ **Filter Table** – Sets the source guard learning model to search for addresses in the ACL binding table or the MAC address binding table. (Default: ACL binding table)

- ◆ **Max Binding Entry** – The maximum number of entries that can be bound to an interface. (ACL Table: 1-5, default: 5; MAC Table: 1-32, default: 16)

This parameter sets the maximum number of address entries that can be mapped to an interface in the binding table, including both dynamic entries discovered by DHCP snooping (see [“DHCP Snooping” on page 342](#)) and static entries set by IP source guard (see [“Configuring Static Bindings for IPv4 Source Guard” on page 361](#)).

### Web Interface

To set the IP Source Guard filter for ports:

1. Click Security, IP Source Guard, General.
2. Set the required filtering type, set the table type to use ACL or MAC address binding, and then set the maximum binding entries for each port.
3. Click Apply.

**Figure 222: Setting the Filter Type for IPv4 Source Guard**

| Port | Filter Type | Filter Table | ACL Table Max Binding Entry (1-5) | MAC Table Max Binding Entry (1-32) |
|------|-------------|--------------|-----------------------------------|------------------------------------|
| 1    | SIP         | ACL          | 5                                 | 16                                 |
| 2    | Disabled    | ACL          | 5                                 | 16                                 |
| 3    | Disabled    | ACL          | 5                                 | 16                                 |
| 4    | Disabled    | ACL          | 5                                 | 16                                 |
| 5    | Disabled    | ACL          | 5                                 | 16                                 |
| 6    | Disabled    | ACL          | 5                                 | 16                                 |
| 7    | Disabled    | ACL          | 5                                 | 16                                 |
| 8    | Disabled    | ACL          | 5                                 | 16                                 |
| 9    | Disabled    | ACL          | 5                                 | 16                                 |
| 10   | Disabled    | ACL          | 5                                 | 16                                 |

### Configuring Static Bindings for IPv4 Source Guard

Use the Security > IP Source Guard > Static Binding (Configure ACL Table and Configure MAC Table) pages to bind a static address to a port. Table entries include a MAC address, IP address, lease time, entry type (Static, Dynamic), VLAN identifier, and port identifier. All static entries are configured with an infinite lease time, which is indicated with a value of zero in the table.

### Command Usage

- ◆ Table entries include a MAC address, IP address, lease time, entry type (Static-IP-SG-Binding, Dynamic-DHCP-Binding), VLAN identifier, and port identifier.
- ◆ Static addresses entered in the source guard binding table are automatically configured with an infinite lease time.

- ◆ When source guard is enabled, traffic is filtered based upon dynamic entries learned via DHCP snooping, or static addresses configured in the source guard binding table.
- ◆ An entry with same MAC address and a different VLAN ID cannot be added to the binding table.
- ◆ Static bindings are processed as follows:
  - A valid static IP source guard entry will be added to the binding table in ACL mode if one of the following conditions is true:
    - If there is no entry with the same VLAN ID and MAC address, a new entry is added to the binding table using the type “static IP source guard binding.”
    - If there is an entry with the same VLAN ID and MAC address, and the type of entry is static IP source guard binding, then the new entry will replace the old one.
    - If there is an entry with the same VLAN ID and MAC address, and the type of the entry is dynamic DHCP snooping binding, then the new entry will replace the old one and the entry type will be changed to static IP source guard binding.
  - A valid static IP source guard entry will be added to the binding table in MAC mode if one of the following conditions are true:
    - If there is no binding entry with the same IP address and MAC address, a new entry will be added to the binding table using the type of static IP source guard binding entry.
    - If there is a binding entry with same IP address and MAC address, then the new entry shall replace the old one.
  - Only unicast addresses are accepted for static bindings.

### Parameters

These parameters are displayed:

#### *Add – Configure ACL Table*

- ◆ **Port** – The port to which a static entry is bound.
- ◆ **VLAN** – ID of a configured VLAN (Range: 1-4094)
- ◆ **MAC Address** – A valid unicast MAC address.
- ◆ **IP Address** – A valid unicast IP address, including classful types A, B or C.

#### *Add – Configure MAC Table*

- ◆ **MAC Address** – A valid unicast MAC address.

- ◆ **VLAN** – ID of a configured VLAN or a range of VLANs. (Range: 1-4094)
- ◆ **IP Address** – A valid unicast IP address, including classful types A, B or C.
- ◆ **Port** – The port to which a static entry is bound. Specify a physical port number or list of port numbers. Separate nonconsecutive port numbers with a comma and no spaces; or use a hyphen to designate a range of port numbers. (Range: 1-52)

Show

- ◆ **MAC Address** – Physical address associated with the entry.
- ◆ **IP Address** – IP address corresponding to the client.
- ◆ **VLAN** – VLAN to which this entry is bound.
- ◆ **Interface** – The port to which this entry is bound.

### Web Interface

To configure static bindings for IP Source Guard:

1. Click Security, IP Source Guard, Static Binding.
2. Select Configure ACL Table or Configure MAC Table from the Step list.
3. Select Add from the Action list.
4. Enter the required bindings for each port.
5. Click Apply

**Figure 223: Configuring Static Bindings for IPv4 Source Guard**

Security > IP Source Guard > Static Binding

Step: 1. Configure ACL Table ▼ Action: Add ▼

Port: 1 ▼

VLAN: 1 ▼

MAC Address: 00-10-b5-f4-d0-01 (xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx)

IP Address: 10.2.44.95


Apply Revert

To display static bindings for IP Source Guard:

1. Click Security, IP Source Guard, Static Binding.
2. Select Configure ACL Table or Configure MAC Table from the Step list.

3. Select Show from the Action list.

**Figure 224: Displaying Static Bindings for IPv4 Source Guard**

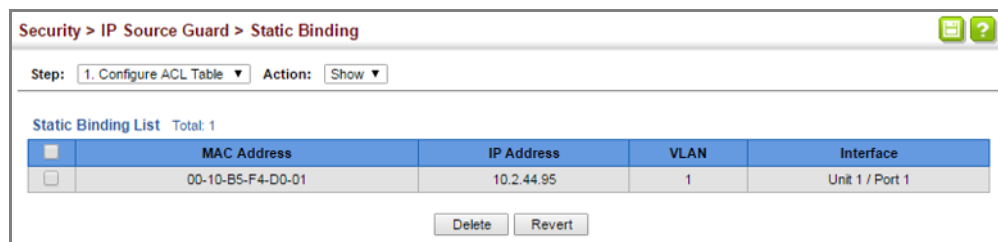

### Displaying Information for Dynamic IPv4 Source Guard Bindings

Use the Security > IP Source Guard > Dynamic Binding page to display the source-guard binding table for a selected interface.

#### Parameters

These parameters are displayed:

*Query by*

- ◆ **Port** – A port on this switch.
- ◆ **VLAN** – ID of a configured VLAN (Range: 1-4094)
- ◆ **MAC Address** – A valid unicast MAC address.
- ◆ **IP Address** – A valid unicast IP address, including classful types A, B or C.

*Dynamic Binding List*

- ◆ **VLAN** – VLAN to which this entry is bound.
- ◆ **MAC Address** – Physical address associated with the entry.
- ◆ **Interface** – Port to which this entry is bound.
- ◆ **IP Address** – IP address corresponding to the client.
- ◆ **Type** – Dynamic DHCPv4 binding, stateful address.

#### Web Interface

To display the binding table for IP Source Guard:

1. Click Security, IP Source Guard, Dynamic Binding.
2. Mark the search criteria, and enter the required values.
3. Click Query



**Figure 225: Showing the IPv4 Source Guard Binding Table**

Security > IP Source Guard > Dynamic Binding

Query by:

☐ Port

☐ VLAN

☐ MAC Address  (xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx)

☐ IP Address

Dynamic Binding List Total: 3

| VLAN | MAC Address       | Interface       | IP Address | Type |
|------|-------------------|-----------------|------------|------|
| 1    | 00-10-B5-F4-00-01 | Unit 1 / Port 2 | 10.2.44.96 | DHCP |
| 1    | 00-10-B5-F4-00-02 | Unit 1 / Port 4 | 10.2.44.97 | DHCP |
| 2    | 00-10-B5-F4-00-03 | Unit 1 / Port 7 | 10.2.44.98 | DHCP |

## IPv6 Source Guard

IPv6 Source Guard is a security feature that filters IPv6 traffic on non-routed, Layer 2 network interfaces based on manually configured entries in the IPv6 Source Guard table, or dynamic entries in the Neighbor Discovery Snooping table or DHCPv6 Snooping table when either snooping protocol is enabled (refer to the DHCPv6 Snooping commands in the *CLI Reference Guide*). IPv6 source guard can be used to prevent traffic attacks caused when a host tries to use the IPv6 address of a neighbor to access the network. This section describes how to configure IPv6 Source Guard.

### Configuring Ports for IPv6 Source Guard

Use the Security > IPv6 Source Guard > Port Configuration page to filter inbound traffic based on the source IPv6 address stored in the binding table.

IPv6 Source Guard is used to filter traffic on an insecure port which receives messages from outside the network or fire wall, and therefore may be subject to traffic attacks caused by a host trying to use the IPv6 address of a neighbor.

### Command Usage

- ◆ Setting source guard mode to SIP (Source IP) enables this function on the selected port. Use the SIP option to check the VLAN ID, IPv6 global unicast source IP address, and port number against all entries in the binding table.
- ◆ After IPv6 source guard is enabled on an interface, the switch initially blocks all IPv6 traffic received on that interface, except for ND packets allowed by ND snooping and DHCPv6 packets allowed by DHCPv6 snooping. A port access control list (ACL) is applied to the interface. Traffic is then filtered based upon dynamic entries learned via ND snooping or DHCPv6 snooping, or static addresses configured in the source guard binding table. The port allows only IPv6 traffic with a matching entry in the binding table and denies all other IPv6 traffic.

- ◆ Table entries include a MAC address, IPv6 global unicast address, entry type (Static-IPv6-SG-Binding, Dynamic-ND-Binding, Dynamic-DHCPv6-Binding), VLAN identifier, and port identifier.
- ◆ Static addresses entered in the source guard binding table (using the Static Binding page) are automatically configured with an infinite lease time. Dynamic entries learned via DHCPv6 snooping are configured by the DHCPv6 server itself.
- ◆ If IPv6 source guard is enabled, an inbound packet's source IPv6 address will be checked against the binding table. If no matching entry is found, the packet will be dropped.
- ◆ Filtering rules are implemented as follows:
  - If ND snooping and DHCPv6 snooping are disabled, IPv6 source guard will check the VLAN ID, source IPv6 address, and port number. If a matching entry is found in the binding table and the entry type is static IPv6 source guard binding, the packet will be forwarded.
  - If ND snooping or DHCP snooping is enabled, IPv6 source guard will check the VLAN ID, source IP address, and port number. If a matching entry is found in the binding table and the entry type is static IPv6 source guard binding, dynamic ND snooping binding, or dynamic DHCPv6 snooping binding, the packet will be forwarded.
  - If IPv6 source guard is enabled on an interface for which IPv6 source bindings (dynamically learned via ND snooping or DHCPv6 snooping, or manually configured) are not yet configured, the switch will drop all IPv6 traffic on that port, except for ND packets and DHCPv6 packets allowed by DHCPv6 snooping.
  - Only IPv6 global unicast addresses are accepted for static bindings.

### Parameters

These parameters are displayed:

- ◆ **Port** – Port identifier.
- ◆ **Filter Type** – Configures the switch to filter inbound traffic based on the following options. (Default: Disabled)
  - **Disabled** – Disables IPv6 source guard filtering on the port.
  - **SIP** – Enables traffic filtering based on IPv6 global unicast source IPv6 addresses stored in the binding table.
- ◆ **Max Binding Entry** – The maximum number of entries that can be bound to an interface. (Range: 1-5; Default: 5)
  - This parameter sets the maximum number of IPv6 global unicast source IPv6 address entries that can be mapped to an interface in the binding table, including both dynamic entries discovered by ND snooping, DHCPv6 snooping (refer to the DHCPv6 Snooping commands in the *CLI Reference*

Guide), and static entries set by IPv6 Source Guard (see [“Configuring Static Bindings for IPv6 Source Guard” on page 367](#)).

- IPv6 source guard maximum bindings must be set to a value higher than DHCPv6 snooping maximum bindings and ND snooping maximum bindings.
- If IPv6 source guard, ND snooping, and DHCPv6 snooping are enabled on a port, the dynamic bindings used by ND snooping, DHCPv6 snooping, and IPv6 source guard static bindings cannot exceed the maximum allowed bindings set by this parameter. In other words, no new entries will be added to the IPv6 source guard binding table.
- If IPv6 source guard is enabled on a port, and the maximum number of allowed bindings is changed to a lower value, precedence is given to deleting entries learned through DHCPv6 snooping, ND snooping, and then manually configured IPv6 source guard static bindings, until the number of entries in the binding table reaches the newly configured maximum number of allowed bindings.

### Web Interface

To set the IPv6 Source Guard filter for ports:

1. Click Security, IPv6 Source Guard, Port Configuration.
2. Set the required filtering type for each port.
3. Click Apply

**Figure 226: Setting the Filter Type for IPv6 Source Guard**

| Port | Filter Type | Max Binding Entry (1-5) |
|------|-------------|-------------------------|
| 1    | Disabled ▼  | 5                       |
| 2    | Disabled ▼  | 5                       |
| 3    | Disabled ▼  | 5                       |
| 4    | Disabled ▼  | 5                       |
| 5    | Disabled ▼  | 5                       |

### Configuring Static Bindings for IPv6 Source Guard

Use the Security > IPv6 Source Guard > Static Binding page to bind a static address to a port. Table entries include a MAC address, IPv6 global unicast address, entry type (Static-IPv6-SG-Binding, Dynamic-ND-Binding, Dynamic-DHCPv6-Binding), VLAN identifier, and port identifier.

### Command Usage

- ◆ Traffic filtering is based only on the source IPv6 address, VLAN ID, and port number.

- ◆ Static addresses entered in the source guard binding table are automatically configured with an infinite lease time.
- ◆ When source guard is enabled, traffic is filtered based upon dynamic entries learned via ND snooping, DHCPv6 snooping, or static addresses configured in the source guard binding table.
- ◆ An entry with same MAC address and a different VLAN ID cannot be added to the binding table .
- ◆ Static bindings are processed as follows:
  - If there is no entry with same and MAC address and IPv6 address, a new entry is added to binding table using static IPv6 source guard binding.
  - If there is an entry with same MAC address and IPv6 address, and the type of entry is static IPv6 source guard binding, then the new entry will replace the old one.
  - If there is an entry with same MAC address and IPv6 address, and the type of the entry is either a dynamic ND snooping binding or DHCPv6 snooping binding, then the new entry will replace the old one and the entry type will be changed to static IPv6 source guard binding.
  - Only unicast addresses are accepted for static bindings.

#### Parameters

These parameters are displayed:

##### *Add*

- ◆ **Port** – The port to which a static entry is bound.
- ◆ **VLAN** – ID of a configured VLAN (Range: 1-4094)
- ◆ **MAC Address** – A valid unicast MAC address.
- ◆ **IPv6 Address** – A valid global unicast IPv6 address. This address must be entered according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields.

##### *Show*

- ◆ **VLAN** – VLAN to which this entry is bound.
- ◆ **MAC Address** – Physical address associated with the entry.
- ◆ **Interface** – The port to which this entry is bound.
- ◆ **IPv6 Address** – IPv6 address corresponding to the client.

- ◆ **Type** – Shows the entry type:
  - **DHCP** – Dynamic DHCPv6 binding, stateful address.
  - **ND** – Dynamic Neighbor Discovery binding, stateless address.
  - **STA** – Static IPv6 Source Guard binding.

### Web Interface

To configure static bindings for IPv6 Source Guard:

1. Click Security, IPv6 Source Guard, Static Binding.
2. Select Add from the Action list.
3. Enter the required bindings for each port.
4. Click Apply

**Figure 227: Configuring Static Bindings for IPv6 Source Guard**

Security > IPv6 Source Guard > Static Binding

Action: Add ▼

Port: 1 ▼

VLAN: 1 ▼

MAC Address: 00-10-b5-f4-00-01 (xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx)

IPv6 Address: 2001::1

Apply Revert

To display static bindings for IPv6 Source Guard:

1. Click Security, IPv6 Source Guard, Static Binding.
2. Select Show from the Action list.

**Figure 228: Displaying Static Bindings for IPv6 Source Guard**

Security > IPv6 Source Guard > Static Binding

Action: Show ▼

Static Binding List Total: 3

|                          | VLAN | MAC Address       | Interface | IPv6 Address           | Type |
|--------------------------|------|-------------------|-----------|------------------------|------|
| <input type="checkbox"/> | 1    | 00-10-B5-F4-00-01 | Eth 1/2   | 2001:DB8:2222:7272::26 | STA  |
| <input type="checkbox"/> | 1    | 00-10-B5-F4-00-02 | Eth 1/4   | 2001:DB8:2222:7272::56 | DHCP |
| <input type="checkbox"/> | 2    | 00-10-B5-F4-00-03 | Eth 1/7   | 2001:DB8:2222:7272::36 | ND   |

Delete Revert

### Displaying Information for Dynamic IPv6 Source Guard Bindings

Use the Security > IPv6 Source Guard > Dynamic Binding page to display the source-guard binding table for a selected interface.

#### Parameters

These parameters are displayed:

##### *Query by*

- ◆ **Port** – A port on this switch.
- ◆ **VLAN** – ID of a configured VLAN (Range: 1-4094)
- ◆ **MAC Address** – A valid unicast MAC address.
- ◆ **IPv6 Address** – A valid global unicast IPv6 address.

##### *Dynamic Binding List*

- ◆ **VLAN** – VLAN to which this entry is bound.
- ◆ **MAC Address** – Physical address associated with the entry.
- ◆ **Interface** – Port to which this entry is bound.
- ◆ **IPv6 Address** – IPv6 address corresponding to the client.
- ◆ **Type** – Shows the entry type:
  - **DHCP** – Dynamic DHCPv6 binding, stateful address.
  - **ND** – Dynamic Neighbor Discovery binding, stateless address.
  - **STA** – Static IPv6 Source Guard binding.

#### Web Interface

To display the binding table for IPv6 Source Guard:

1. Click Security, IPv6 Source Guard, Dynamic Binding.
2. Mark the search criteria, and enter the required values.
3. Click Query

Figure 229: Showing the IPv6 Source Guard Binding Table

Security > IPv6 Source Guard > Dynamic Binding

Query by:

☐ Port

☐ VLAN

☐ MAC Address

☐ IPv6 Address

Dynamic Binding List Total: 3

| VLAN | MAC Address       | Interface | IPv6 Address | Type |
|------|-------------------|-----------|--------------|------|
| 1    | 00-10-B5-F4-00-01 | Eth 1/2   | 2001::de     | ND   |
| 1    | 00-10-B5-F4-00-02 | Eth 1/4   | 2001::ee     | ND   |
| 2    | 00-10-B5-F4-00-03 | Pch 1     | 2001::fe     | ND   |

## ARP Inspection

ARP Inspection is a security feature that validates the MAC Address bindings for Address Resolution Protocol packets. It provides protection against ARP traffic with invalid MAC-to-IP address bindings, which forms the basis for certain “man-in-the-middle” attacks. This is accomplished by intercepting all ARP requests and responses and verifying each of these packets before the local ARP cache is updated or the packet is forwarded to the appropriate destination. Invalid ARP packets are dropped.

ARP Inspection determines the validity of an ARP packet based on valid IP-to-MAC address bindings stored in a trusted database – the DHCP snooping binding database (see [“DHCP Snooping Global Configuration” on page 344](#)). This database is built by DHCP snooping if it is enabled globally on the switch and on the required VLANs. ARP Inspection can also validate ARP packets against user-configured ARP access control lists (ACLs) for hosts with statically configured addresses (see [“Configuring an ARP ACL” on page 323](#)).

### Command Usage

#### *Enabling & Disabling ARP Inspection*

- ◆ ARP Inspection is controlled on a global and VLAN basis.
- ◆ By default, ARP Inspection is disabled both globally and on all VLANs.
  - If ARP Inspection is globally enabled, then it becomes active only on the VLANs where it has been enabled.
  - When ARP Inspection is enabled globally, all ARP request and reply packets on inspection-enabled VLANs are redirected to the CPU and their switching behavior handled by the ARP Inspection engine.

- If ARP Inspection is disabled globally, then it becomes inactive for all VLANs, including those where inspection is enabled.
  - When ARP Inspection is disabled, all ARP request and reply packets will bypass the ARP Inspection engine and their switching behavior will match that of all other packets.
  - Disabling and then re-enabling global ARP Inspection will not affect the ARP Inspection configuration of any VLANs.
  - When ARP Inspection is disabled globally, it is still possible to configure ARP Inspection for individual VLANs. These configuration changes will only become active after ARP Inspection is enabled globally again.
- ◆ The ARP Inspection engine in the current firmware version does not support ARP Inspection on trunk ports.

### **Configuring Global Settings for ARP Inspection**

Use the Security > ARP Inspection (Configure General) page to enable ARP inspection globally for the switch, to validate address information in each packet, and configure logging.

### **Command Usage**

#### *ARP Inspection Validation*

- ◆ By default, ARP Inspection Validation is disabled.
- ◆ Specifying at least one of the following validations enables ARP Inspection Validation globally. Any combination of the following checks can be active concurrently.
- Destination MAC – Checks the destination MAC address in the Ethernet header against the target MAC address in the ARP body. This check is performed for ARP responses. When enabled, packets with different MAC addresses are classified as invalid and are dropped.
  - IP – Checks the ARP body for invalid and unexpected IP addresses. These addresses include 0.0.0.0, 255.255.255.255, and all IP multicast addresses. Sender IP addresses are checked in all ARP requests and responses, while target IP addresses are checked only in ARP responses.
  - Source MAC – Checks the source MAC address in the Ethernet header against the sender MAC address in the ARP body. This check is performed on both ARP requests and responses. When enabled, packets with different MAC addresses are classified as invalid and are dropped.



### *ARP Inspection Logging*

- ◆ By default, logging is active for ARP Inspection, and cannot be disabled.
- ◆ The administrator can configure the log facility rate.
- ◆ When the switch drops a packet, it places an entry in the log buffer, then generates a system message on a rate-controlled basis. After the system message is generated, the entry is cleared from the log buffer.
- ◆ Each log entry contains flow information, such as the receiving VLAN, the port number, the source and destination IP addresses, and the source and destination MAC addresses.
- ◆ If multiple, identical invalid ARP packets are received consecutively on the same VLAN, then the logging facility will only generate one entry in the log buffer and one corresponding system message.
- ◆ If the log buffer is full, the oldest entry will be replaced with the newest entry.

### **Parameters**

These parameters are displayed:

- ◆ **ARP Inspection Status** – Enables ARP Inspection globally. (Default: Disabled)
- ◆ **ARP Inspection Validation** – Enables extended ARP Inspection Validation if any of the following options are enabled. (Default: Disabled)
  - **Dst-MAC** – Validates the destination MAC address in the Ethernet header against the target MAC address in the body of ARP responses.
  - **IP** – Checks the ARP body for invalid and unexpected IP addresses. Sender IP addresses are checked in all ARP requests and responses, while target IP addresses are checked only in ARP responses.
  - **Allow Zeros** – Allows sender IP address to be 0.0.0.0.
  - **Src-MAC** – Validates the source MAC address in the Ethernet header against the sender MAC address in the ARP body. This check is performed on both ARP requests and responses.
- ◆ **Log Message Number** – The maximum number of entries saved in a log message. (Range: 0-256; Default: 5)
- ◆ **Log Interval** – The interval at which log messages are sent. (Range: 0-86400 seconds; Default: 1 second)

### Web Interface

To configure global settings for ARP Inspection:

1. Click Security, ARP Inspection.
2. Select Configure General from the Step list.
3. Enable ARP inspection globally, enable any of the address validation options, and adjust any of the logging parameters if required.
4. Click Apply.

**Figure 230: Configuring Global Settings for ARP Inspection**

The screenshot shows the 'Security > ARP Inspection' configuration page. At the top, there's a breadcrumb 'Security > ARP Inspection' and a 'Step:' dropdown menu set to '1. Configure General'. Below this, the 'ARP Inspection Status' is set to 'Enabled' with a checkbox. Under 'ARP Inspection Validation', there are four checkboxes: 'Dst-MAC', 'IP', 'Allow Zeros', and 'Src-MAC'. The 'Log Message Number (0-256)' is set to '20' in a text box. The 'Log Interval (0-86400)' is set to '10' in a text box, followed by 'sec'. At the bottom right, there are 'Apply' and 'Revert' buttons.

### Configuring VLAN Settings for ARP Inspection

Use the Security > ARP Inspection (Configure VLAN) page to enable ARP inspection for any VLAN and to specify the ARP ACL to use.

#### Command Usage

##### *ARP Inspection VLAN Filters (ACLs)*

- ◆ By default, no ARP Inspection ACLs are configured and the feature is disabled.
- ◆ ARP Inspection ACLs are configured within the ARP ACL configuration page (see [page 323](#)).
- ◆ ARP Inspection ACLs can be applied to any configured VLAN.
- ◆ ARP Inspection uses the DHCP snooping bindings database for the list of valid IP-to-MAC address bindings. ARP ACLs take precedence over entries in the DHCP snooping bindings database. The switch first compares ARP packets to any specified ARP ACLs.
- ◆ If *Static* is specified, ARP packets are only validated against the selected ACL – packets are filtered according to any matching rules, packets not matching any rules are dropped, and the DHCP snooping bindings database check is bypassed.

- ◆ If *Static* is not specified, ARP packets are first validated against the selected ACL; if no ACL rules match the packets, then the DHCP snooping bindings database determines their validity.

### Parameters

These parameters are displayed:

- ◆ **VLAN** – VLAN identifier. (Range: 1-4094)
- ◆ **DAI Status** – Enables Dynamic ARP Inspection for the selected VLAN. (Default: Disabled)
- ◆ **ACL Name** – Allows selection of any configured ARP ACLs. (Default: None)
- ◆ **Static** – When an ARP ACL is selected, and static mode also selected, the switch only performs ARP Inspection and bypasses validation against the DHCP Snooping Bindings database. When an ARP ACL is selected, but static mode is not selected, the switch first performs ARP Inspection and then validation against the DHCP Snooping Bindings database. (Default: Disabled)

### Web Interface

To configure VLAN settings for ARP Inspection:

1. Click Security, ARP Inspection.
2. Select Configure VLAN from the Step list.
3. Enable ARP inspection for the required VLANs, select an ARP ACL filter to check for configured addresses, and select the Static option to bypass checking the DHCP snooping bindings database if required.
4. Click Apply.

**Figure 231: Configuring VLAN Settings for ARP Inspection**

Security > ARP Inspection

Step: 2. Configure VLAN

ARP Inspection VLAN List Total: 3

| VLAN | DAI Status                                  | ACL Name                                      | ACL Status                                 |
|------|---|---|--|
| 1    | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> arp_acl_1 | <input checked="" type="checkbox"/> Static |
| 2    | <input type="checkbox"/> Enabled            | <input type="checkbox"/> arp_acl_1            | <input type="checkbox"/> Static            |
| 3    | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> arp_acl_2 | <input type="checkbox"/> Static            |

Apply Revert

### Configuring Interface Settings for ARP Inspection

Use the Security > ARP Inspection (Configure Interface) page to specify the ports that require ARP inspection, and to adjust the packet inspection rate. \$\$\$

#### Parameters

These parameters are displayed:

- ◆ **Interface** – Port or trunk identifier.
- ◆ **Trust Status** – Configures the port as trusted or untrusted. (Default: Untrusted)

By default, all untrusted ports are subject to ARP packet rate limiting, and all trusted ports are exempt from ARP packet rate limiting.

Packets arriving on trusted interfaces bypass all ARP Inspection and ARP Inspection Validation checks and will always be forwarded, while those arriving on untrusted interfaces are subject to all configured ARP inspection tests.

- ◆ **Packet Rate Limit** – Sets the maximum number of ARP packets that can be processed by CPU per second on trusted or untrusted ports. (Range: 0-2048; Default: 15)

Setting the rate limit to “0” means that there is no restriction on the number of ARP packets that can be processed by the CPU.

The switch will drop all ARP packets received on a port which exceeds the configured ARP-packets-per-second rate limit.

#### Web Interface

To configure interface settings for ARP Inspection:

1. Click Security, ARP Inspection.
2. Select Configure Interface from the Step list.
3. Specify any untrusted ports which require ARP inspection, and adjust the packet inspection rate.
4. Click Apply.

**Figure 232: Configuring Interface Settings for ARP Inspection**

| Port | Trust Status                     | Packet Rate Limit (0-2048 pps)         |
|------|----------------------------------|--|
| 1    | <input type="checkbox"/> Enabled | <input checked="" type="checkbox"/> 15 |
| 2    | <input type="checkbox"/> Enabled | <input checked="" type="checkbox"/> 15 |
| 3    | <input type="checkbox"/> Enabled | <input checked="" type="checkbox"/> 15 |
| 4    | <input type="checkbox"/> Enabled | <input checked="" type="checkbox"/> 15 |
| 5    | <input type="checkbox"/> Enabled | <input checked="" type="checkbox"/> 15 |

**Displaying ARP Inspection Statistics** Use the Security > ARP Inspection (Show Information - Show Statistics) page to display statistics about the number of ARP packets processed, or dropped for various reasons.

### Parameters

These parameters are displayed:

**Table 18: ARP Inspection Statistics**

| Parameter   | Description   |
|---|---|
| Received ARP packets before ARP inspection rate limit           | Count of ARP packets received but not exceeding the ARP Inspection rate limit.      |
| Dropped ARP packets in the process of ARP inspection rate limit | Count of ARP packets exceeding (and dropped by) ARP rate limiting.                  |
| ARP packets dropped by additional validation (IP)               | Count of ARP packets that failed the IP address test.                               |
| ARP packets dropped by additional validation (Dst-MAC)          | Count of packets that failed the destination MAC address test.                      |
| Total ARP packets processed by ARP inspection                   | Count of all ARP packets processed by the ARP Inspection engine.                    |
| ARP packets dropped by additional validation (Src-MAC)          | Count of packets that failed the source MAC address test.                           |
| ARP packets dropped by ARP ACLs                                 | Count of ARP packets that failed validation against ARP ACL rules.                  |
| ARP packets dropped by DHCP snooping                            | Count of packets that failed validation against the DHCP Snooping Binding database. |

### Web Interface

To display statistics for ARP Inspection:

1. Click Security, ARP Inspection.
2. Select Show Information from the Step list.
3. Select Show Statistics from the Action list.

**Figure 233: Displaying Statistics for ARP Inspection**

| Security > ARP Inspection                                   |                     |
|---|---------------------|
| Step:   | 4. Show Information |
| Action:   | Show Statistics     |
| Received ARP packets before ARP inspection rate limit       | 1000                |
| Dropped ARP packets in processing ARP inspection rate limit | 5                   |
| Total ARP packets processed by ARP inspection               | 200                 |
| ARP packets dropped by additional validation (Src-MAC)      | 300                 |
| ARP packets dropped by additional validation (Dst-MAC)      | 2000                |
| ARP packets dropped by additional validation (IP)           | 100                 |
| ARP packets dropped by ARP ACLs                             | 5                   |
| ARP packets dropped by DHCP snooping                        | 5                   |

### Displaying the ARP Inspection Log

Use the Security > ARP Inspection (Show Information - Show Log) page to show information about entries stored in the log, including the associated VLAN, port, and address components.

#### Parameters

These parameters are displayed:

**Table 19: ARP Inspection Log**

| Parameter        | Description                                |
|------------------|--|
| VLAN ID          | The VLAN where this packet was seen.       |
| Port             | The port where this packet was seen.       |
| Src. IP Address  | The source IP address in the packet.       |
| Dst. IP Address  | The destination IP address in the packet.  |
| Src. MAC Address | The source MAC address in the packet.      |
| Dst. MAC Address | The destination MAC address in the packet. |

#### Web Interface

To display the ARP Inspection log:

1. Click Security, ARP Inspection.
2. Select Show Information from the Step list.
3. Select Show Log from the Action list.

**Figure 234: Displaying the ARP Inspection Log**

| Security > ARP Inspection                  |      |                 |                 |                   |                   |
|--|------|-----------------|-----------------|-------------------|-------------------|
| Step: 4. Show Information Action: Show Log |      |                 |                 |                   |                   |
| ARP Inspection Log List Total: 2           |      |                 |                 |                   |                   |
| VLAN ID                                    | Port | Src. IP Address | Dst. IP Address | Src. MAC Address  | Dst. MAC Address  |
| 1  | 15   | 192.168.1.1     | 192.168.1.5     | 11-22-33-44-55-66 | AA-BB-CC-DD-EE-FF |
| 1  | 17   | 192.168.1.3     | 192.168.1.23    | 11-4E-33-75-55-BB | A0-3B-C9-DD-4E-1F |

## Application Filter

Use the Security > Application Filter page to forward CDP or PVST packets.

### Command Usage

If this feature is not enabled, the switch will handle CDP or PVST packets as normal packets. In other words, they are forwarded to other ports in the same VLAN that are also configured to forward the specified packet type.

### Parameters

These parameters are displayed:

- ◆ **Port** – Port identifier (Range: 1-52)
- ◆ **CDP** – Cisco Discovery Protocol
- ◆ **PVST** – Per-VLAN Spanning Tree

### Web Interface

To discard or forward CDP or PVST packets:

1. Click Security, Application Filter.
2. Set the packet type to be discarded or forwarded as required.
3. Click Apply.

**Figure 235: Configuring Discarding or Forwarding of CDP/PVST Packets**

| Security > Application Filter     |           |           |             |  |  |
|-----------------------------------|-----------|-----------|-------------|--|--|
| Application Filter List Total: 52 |           |           | 1 2 3 4 5 6 |  |  |
| Port                              | CDP       | PVST      |             |  |  |
| 1                                 | Default ▼ | Default ▼ |             |  |  |
| 2                                 | Default ▼ | Default ▼ |             |  |  |
| 3                                 | Default ▼ | Default ▼ |             |  |  |
| 4                                 | Default ▼ | Default ▼ |             |  |  |
| 5                                 | Default ▼ | Default ▼ |             |  |  |





# Basic Administration Protocols

This chapter describes basic administration tasks including:

- ◆ **Event Logging** – Sets conditions for logging event messages to system memory or flash memory, configures conditions for sending trap messages to remote log servers, and configures trap reporting to remote hosts using Simple Mail Transfer Protocol (SMTP).
- ◆ **Link Layer Discovery Protocol (LLDP)** – Configures advertisement of basic information about the local switch, or discovery of information about neighboring devices on the local broadcast domain.
- ◆ **Power over Ethernet** – Sets the priority and power budget for each port.
- ◆ **Simple Network Management Protocol (SNMP)** – Configures switch management through SNMPv1, SNMPv2c or SNMPv3.
- ◆ **Remote Monitoring (RMON)** – Configures local collection of detailed statistics or events which can be subsequently retrieved through SNMP.
- ◆ **Switch Clustering** – Configures centralized management by a single unit over a group of switches connected to the same local network.
- ◆ **Time Range** – Sets a time range during which various functions are applied, including applied ACLs.
- ◆ **Ethernet Ring Protection Switching (ERPS)** – Configures a protection switching mechanism and protocol for Ethernet layer network rings.
- ◆ **Connectivity Fault Management (CFM)** – This protocol provides proactive connectivity monitoring using continuity check messages, fault verification through loop back messages, and fault isolation by examining end-to-end connections between provider edge devices or between customer edge devices.
- ◆ **Operation, Administration and Maintenance (OAM)** – Provides remote management tools required to monitor and maintain the links to subscriber CPEs (Customer Premise Equipment).
- ◆ **UniDirectional Link Detection (UDLD)** – Detects general loopback conditions caused by hardware problems or faulty protocol settings.
- ◆ **Loopback Detection (LBD)** – Detects general loopback conditions caused by hardware problems or faulty protocol settings.

## Configuring Event Logging

The switch allows you to control the logging of error messages, including the type of events that are recorded in switch memory, logging to a remote System Log (syslog) server, and displays a list of recent event messages.

**System Log Configuration** Use the Administration > Log > System (Configure Global) page to enable or disable event logging, and specify which levels are logged to RAM or flash memory.

Severe error messages that are logged to flash memory are permanently stored in the switch to assist in troubleshooting network problems. Up to 4096 log entries can be stored in the flash memory, with the oldest entries being overwritten first when the available log memory (256 kilobytes) has been exceeded.

The System Logs page allows you to configure and limit system messages that are logged to flash or RAM memory. The default is for event levels 0 to 3 to be logged to flash and levels 0 to 7 to be logged to RAM.

### Parameters

These parameters are displayed:

- ◆ **System Log Status** – Enables/disables the logging of debug or error messages to the logging process. (Default: Enabled)
- ◆ **Flash Level** – Limits log messages saved to the switch's permanent flash memory for all levels up to the specified level. For example, if level 3 is specified, all messages from level 0 to level 3 will be logged to flash. (Range: 0-7, Default: 3)

**Table 20: Logging Levels**

| Level | Severity Name | Description  |
|-------|---------------|--|
| 7     | Debugging     | Debugging messages   |
| 6     | Informational | Informational messages only  |
| 5     | Notice        | Normal but significant condition, such as cold start                                     |
| 4     | Warning       | Warning conditions (e.g., return false, unexpected return)                               |
| 3     | Error         | Error conditions (e.g., invalid input, default used)                                     |
| 2     | Critical      | Critical conditions (e.g., memory allocation, or free memory error - resource exhausted) |
| 1     | Alert         | Immediate action needed  |
| 0     | Emergency     | System unusable  |

\* There are only Level 2, 5 and 6 error messages for the current firmware release.

- ◆ **RAM Level** – Limits log messages saved to the switch's temporary RAM memory for all levels up to the specified level. For example, if level 7 is specified, all messages from level 0 to level 7 will be logged to RAM. (Range: 0-7, Default: 7)



**Note:** The Flash Level must be equal to or less than the RAM Level.

**Note:** All log messages are retained in RAM and Flash after a warm restart (i.e., power is reset through the command interface).

**Note:** All log messages are retained in Flash and purged from RAM after a cold restart (i.e., power is turned off and then on through the power source).

- ◆ **Command Log Status** – Records the commands executed from the CLI, including the execution time and information about the CLI user including the user name, user interface (console port, telnet or SSH), and user IP address. The severity level for this record type is 6 (a number that indicates the facility used by the syslog server to dispatch log messages to an appropriate service).

### Web Interface

To configure the logging of error messages to system memory:

1. Click Administration, Log, System.
2. Select Configure Global from the Step list.
3. Enable or disable system logging, set the level of event messages to be logged to flash memory and RAM.
4. Click Apply.

**Figure 236: Configuring Settings for System Memory Logs**

Administration > Log > System

Step: 1. Configure Global ▼

Status ☒ Enabled

History Flash Level 3 - Error ▼

History RAM Level 7 - Debugging ▼

Command Log Status ☐ Enabled

Note: The Flash Level must be equal to or less than the RAM Level.

Apply Revert


To show the error messages logged to system or flash memory:

1. Click Administration, Log, System.
2. Select Show System Logs from the Step list.

3. Click RAM to display log messages stored in system memory, or Flash to display messages stored in flash memory.

This page allows you to scroll through the logged system and event messages. The switch can store up to 2048 log entries in temporary random access memory (RAM; i.e., memory flushed on power reset) and up to 4096 entries in permanent flash memory.

**Figure 237: Showing Error Messages Logged to System Memory**

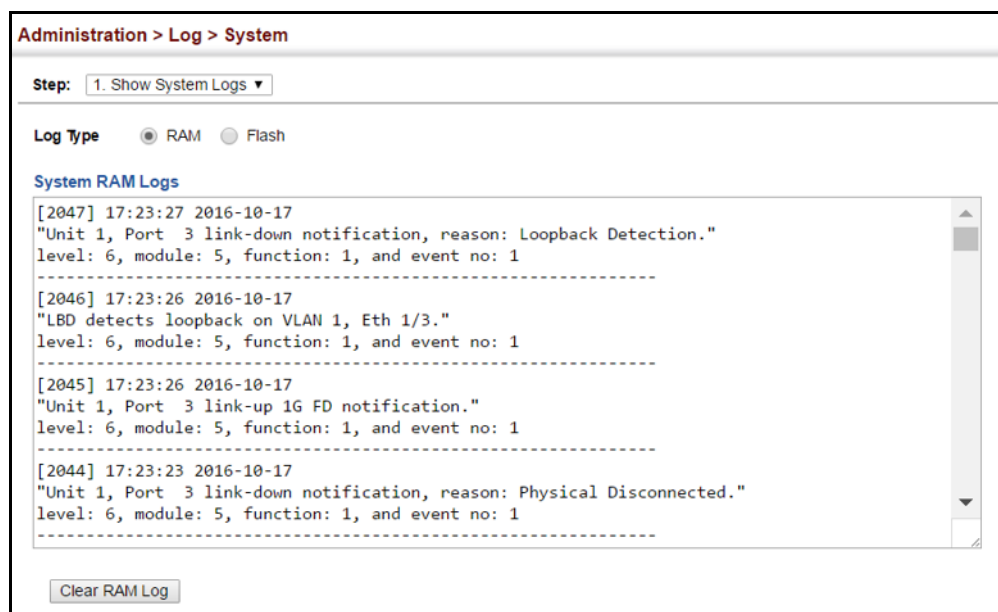

### Remote Log Configuration

Use the Administration > Log > Remote page to send log messages to syslog servers or other management stations. You can also limit the event messages sent to only those messages below a specified level.

#### Parameters

These parameters are displayed:

- ◆ **Remote Log Status** – Enables/disables the logging of debug or error messages to the remote logging process. (Default: Disabled)
- ◆ **Logging Facility** – Sets the facility type for remote logging of syslog messages. There are eight facility types specified by values of 16 to 23. The facility type is used by the syslog server to dispatch log messages to an appropriate service.  
  
The attribute specifies the facility type tag sent in syslog messages (see RFC 3164). This type has no effect on the kind of messages reported by the switch. However, it may be used by the syslog server to process messages, such as sorting or storing messages in the corresponding database. (Range: 16-23, Default: 23)
- ◆ **Logging Trap Level** – Limits log messages that are sent to the remote syslog server for all levels up to the specified level. For example, if level 3 is specified,

all messages from level 0 to level 3 will be sent to the remote server.  
(Range: 0-7, Default: 7)

- ◆ **Server IP Address** – Specifies the IPv4 or IPv6 address of a remote server which will be sent syslog messages.
- ◆ **Port** - Specifies the UDP port number used by the remote server.  
(Range: 1-65535; Default: 514)

### Web Interface

To configure the logging of error messages to remote servers:

1. Click Administration, Log, Remote.
2. Enable remote logging, specify the facility type to use for the syslog messages. and enter the IP address of the remote servers.
3. Click Apply.

**Figure 238: Configuring Settings for Remote Logging of Error Messages**

Administration > Log > Remote

|                     |                                  |      |     |
|---------------------|----------------------------------|------|-----|
| Remote Log Status   | <input type="checkbox"/> Enabled |      |     |
| Logging Facility    | 23 - Local use 7                 |      |     |
| Logging Trap Level  | 0 - System unusable              |      |     |
| Server IP Address 1 | 192.168.0.4                      | Port | 514 |
| Server IP Address 2 |                                  | Port |     |
| Server IP Address 3 |                                  | Port |     |
| Server IP Address 4 |                                  | Port |     |
| Server IP Address 5 |                                  | Port |     |

### Sending Simple Mail Transfer Protocol Alerts

Use the Administration > Log > SMTP page to alert system administrators of problems by sending SMTP (Simple Mail Transfer Protocol) email messages when triggered by logging events of a specified level. The messages are sent to specified SMTP servers on the network and can be retrieved using POP or IMAP clients.

### Parameters

These parameters are displayed:

- ◆ **SMTP Status** – Enables/disables the SMTP function. (Default: Enabled)
- ◆ **Severity** – Sets the syslog severity threshold level (see table on [page 382](#)) used to trigger alert messages. All events at this level or higher will be sent to the

configured email recipients. For example, using Level 7 will report all events from level 7 to level 0. (Default: Level 7)

- ◆ **Email Source Address** – Sets the email address used for the “From” field in alert messages. You may use a symbolic email address that identifies the switch, or the address of an administrator responsible for the switch. (Range: 1-41 characters)
- ◆ **Email Destination Address** – Specifies the email recipients of alert messages. You can specify up to five recipients.
- ◆ **Server IP Address** – Specifies a list of up to three recipient SMTP servers. IPv4 or IPv6 addresses may be specified. The switch attempts to connect to the listed servers in sequential order if the first server fails to respond.

For host name-to-IP address translation to function properly, host name lookup must be enabled ([“Configuring General DNS Service Parameters” on page 685](#)), and one or more DNS servers specified (see [“Configuring a List of Name Servers” on page 688](#), or [“Configuring Static DNS Host to Address Entries” on page 689](#)).

### Web Interface

To configure SMTP alert messages:

1. Click Administration, Log, SMTP.
2. Enable SMTP, specify a source email address, and select the minimum severity level. Specify the source and destination email addresses, and one or more SMTP servers.
3. Click Apply.

**Figure 239: Configuring SMTP Alert Messages**

Administration > Log > SMTP

|                              |   |
|------------------------------|---|
| SMTP Status                  | <input checked="" type="checkbox"/> Enabled |
| Severity                     | 3 - Error ▼                                 |
| E-mail Source Address        | big-wheels@matel.com                        |
| E-mail Destination Address 1 | chris@matel.com                             |
| E-mail Destination Address 2 |   |
| E-mail Destination Address 3 |   |
| E-mail Destination Address 4 |   |
| E-mail Destination Address 5 |   |
| Server IP Address 1          | 192.168.1.4                                 |
| Server IP Address 2          |   |
| Server IP Address 3          |   |

## Link Layer Discovery Protocol

Link Layer Discovery Protocol (LLDP) is used to discover basic information about neighboring devices on the local broadcast domain. LLDP is a Layer 2 protocol that uses periodic broadcasts to advertise information about the sending device. Advertised information is represented in Type Length Value (TLV) format according to the IEEE 802.1AB standard, and can include details such as device identification, capabilities and configuration settings. LLDP also defines how to store and maintain information gathered about the neighboring network nodes it discovers.

Link Layer Discovery Protocol - Media Endpoint Discovery (LLDP-MED) is an extension of LLDP intended for managing endpoint devices such as Voice over IP phones and network switches. The LLDP-MED TLVs advertise information such as network policy, power, inventory, and device location details. LLDP and LLDP-MED information can be used by SNMP applications to simplify troubleshooting, enhance network management, and maintain an accurate network topology.

### Setting LLDP Timing Attributes

Use the Administration > LLDP (Configure Global) page to set attributes for general functions such as globally enabling LLDP on the switch, setting the message ageout time, and setting the frequency for broadcasting general advertisements or reports about changes in the LLDP MIB.

#### Parameters

These parameters are displayed:

- ◆ **LLDP** – Enables LLDP globally on the switch. (Default: Enabled)

- ◆ **Transmission Interval** – Configures the periodic transmit interval for LLDP advertisements. (Range: 5-32768 seconds; Default: 30 seconds)
- ◆ **Hold Time Multiplier** – Configures the time-to-live (TTL) value sent in LLDP advertisements as shown in the formula below. (Range: 2-10; Default: 4)

The time-to-live tells the receiving LLDP agent how long to retain all information pertaining to the sending LLDP agent if it does not transmit updates in a timely manner.

TTL in seconds is based on the following rule:  
minimum value ((Transmission Interval \* Holdtime Multiplier), or 65535)

Therefore, the default TTL is  $4 * 30 = 120$  seconds.
- ◆ **Delay Interval** – Configures a delay between the successive transmission of advertisements initiated by a change in local LLDP MIB variables. (Range: 1-8192 seconds; Default: 2 seconds)

The transmit delay is used to prevent a series of successive LLDP transmissions during a short period of rapid changes in local LLDP MIB objects, and to increase the probability that multiple, rather than single changes, are reported in each transmission.

This attribute must comply with the rule:  
 $(4 * \text{Delay Interval}) \leq \text{Transmission Interval}$
- ◆ **Reinitialization Delay** – Configures the delay before attempting to re-initialize after LLDP ports are disabled or the link goes down. (Range: 1-10 seconds; Default: 2 seconds)

When LLDP is re-initialized on a port, all information in the remote systems LLDP MIB associated with this port is deleted.
- ◆ **Notification Interval** – Configures the allowed interval for sending SNMP notifications about LLDP MIB changes. (Range: 5-3600 seconds; Default: 5 seconds)

This parameter only applies to SNMP applications which use data stored in the LLDP MIB for network monitoring or management.

Information about changes in LLDP neighbors that occur between SNMP notifications is not transmitted. Only state changes that exist at the time of a notification are included in the transmission. An SNMP agent should therefore periodically check the value of `IldpStatsRemTableLastChangeTime` to detect any `IldpRemTablesChange` notification-events missed due to throttling or transmission loss.
- ◆ **MED Fast Start Count** – Configures the amount of LLDP MED Fast Start LLDPDUs to transmit during the activation process of the LLDP-MED Fast Start mechanism. (Range: 1-10 packets; Default: 4 packets)

The MED Fast Start Count parameter is part of the timer which ensures that the LLDP-MED Fast Start mechanism is active for the port. LLDP-MED Fast Start is



critical to the timely startup of LLDP, and therefore integral to the rapid availability of Emergency Call Service.

### Web Interface

To configure LLDP timing attributes:

1. Click Administration, LLDP.
2. Select Configure Global from the Step list.
3. Enable LLDP, and modify any of the timing parameters as required.
4. Click Apply.

**Figure 240: Configuring LLDP Timing Attributes**

Administration > LLDP

Step: 1. Configure Global

LLDP ☒ Enabled

Transmission Interval (5-32768)  sec

Hold Time Multiplier (2-10)

Delay Interval (1-8192)  sec

Reinitialization Delay (1-10)  sec

Notification Interval (5-3600)  sec

MED Fast Start Count (1-10)

Note: The Transmission Interval must be greater than or equal to 4 times the Delay Interval.

Apply Revert

### Configuring LLDP Interface Attributes

Use the Administration > LLDP (Configure Interface - Configure General) page to specify the message attributes for individual interfaces, including whether messages are transmitted, received, or both transmitted and received, whether SNMP notifications are sent, and the type of information advertised.

### Parameters

These parameters are displayed:

- ◆ **Admin Status** – Enables LLDP message transmit and receive modes for LLDP Protocol Data Units. (Options: Tx only, Rx only, TxRx, Disabled; Default: TxRx)
- ◆ **SNMP Notification** – Enables the transmission of SNMP trap notifications about LLDP and LLDP-MED changes. (Default: Enabled)

This option sends out SNMP trap notifications to designated target stations at the interval specified by the Notification Interval in the preceding section. Trap notifications include information about state changes in the LLDP MIB (IEEE 802.1AB), the LLDP-MED MIB (ANSI/TIA-1057), or vendor-specific LLDP-EXT-DOT1 and LLDP-EXT-DOT3 MIBs.

For information on defining SNMP trap destinations, see [“Specifying Trap Managers” on page 433](#).

Information about additional changes in LLDP neighbors that occur between SNMP notifications is not transmitted. Only state changes that exist at the time of a trap notification are included in the transmission. An SNMP agent should therefore periodically check the value of `IldpStatsRemTableLastChangeTime` to detect any `IldpRemTablesChange` notification-events missed due to throttling or transmission loss.

- ◆ **MED Notification** – Enables the transmission of SNMP trap notifications about LLDP-MED changes. (Default: Disabled)
- ◆ **Basic Optional TLVs** – Configures basic information included in the TLV field of advertised messages.

- **Management Address** – The management address protocol packet includes the IPv4 address of the switch. If no management address is available, the address should be the MAC address for the CPU or for the port sending this advertisement. (Default: Enabled)

The management address TLV may also include information about the specific interface associated with this address, and an object identifier indicating the type of hardware component or protocol entity associated with this address. The interface number and OID are included to assist SNMP applications in the performance of network discovery by indicating enterprise specific or other starting points for the search, such as the Interface or Entity MIB.

Since there are typically a number of different addresses associated with a Layer 3 device, an individual LLDP PDU may contain more than one management address TLV.

Every management address TLV that reports an address that is accessible on a port and protocol VLAN through the particular port should be accompanied by a port and protocol VLAN TLV that indicates the VLAN identifier (VID) associated with the management address reported by this TLV.

- **Port Description** – The port description is taken from the `ifDescr` object in RFC 2863, which includes information about the manufacturer, the product name, and the version of the interface hardware/software. (Default: Enabled)
- **System Capabilities** – The system capabilities identifies the primary function(s) of the system and whether or not these primary functions are enabled. The information advertised by this TLV is described in IEEE 802.1AB. (Default: Enabled)
- **System Description** – The system description is taken from the `sysDescr` object in RFC 3418, which includes the full name and version identification

of the system's hardware type, software operating system, and networking software. (Default: Enabled)

- **System Name** – The system name is taken from the sysName object in RFC 3418, which contains the system's administratively assigned name. To configure the system name, see [“Displaying System Information” on page 72](#). (Default: Enabled)
- ◆ **802.1 Organizationally Specific TLVs** – Configures IEEE 802.1 information included in the TLV field of advertised messages.
  - **Protocol Identity** – The protocols that are accessible through this interface (see [“Protocol VLANs” on page 183](#)). (Default: Enabled)
  - **VLAN ID** – The port's default VLAN identifier (PVID) indicates the VLAN with which untagged or priority-tagged frames are associated (see [“IEEE 802.1Q VLANs” on page 157](#)). (Default: Enabled)
  - **VLAN Name** – The name of all VLANs to which this interface has been assigned (see [“IEEE 802.1Q VLANs” on page 157](#)). (Default: Enabled)
  - **Port and Protocol VLAN ID** – The port-based protocol VLANs configured on this interface (see [“Protocol VLANs” on page 183](#)). (Default: Enabled)
- ◆ **802.3 Organizationally Specific TLVs** – Configures IEEE 802.3 information included in the TLV field of advertised messages.
  - **Link Aggregation** – The link aggregation capabilities, aggregation status of the link, and the IEEE 802.3 aggregated port identifier if this interface is currently a link aggregation member. (Default: Enabled)
  - **Max Frame Size** – The maximum frame size. (See [“Configuring Support for Jumbo Frames” on page 74](#) for information on configuring the maximum frame size for this switch. (Default: Enabled)
  - **MAC/PHY Configuration/Status** – The MAC/PHY configuration and status which includes information about auto-negotiation support/capabilities, and operational Multistation Access Unit (MAU) type. (Default: Enabled)
  - **PoE** - Power-over-Ethernet capabilities, including whether or not PoE is supported, currently enabled, if the port pins through which power is delivered can be controlled, the port pins selected to deliver power, and the power class. (Default: Enabled)
- ◆ **MED TLVs** – Configures general information included in the MED TLV field of advertised messages.
  - **Capabilities** – This option advertises LLDP-MED TLV capabilities, allowing Media Endpoint and Connectivity Devices to efficiently discover which LLDP-MED related TLVs are supported on the switch. (Default: Enabled)

- **Extended Power** – This option advertises extended Power-over-Ethernet capability details, such as power availability from the switch, and power state of the switch, including whether the switch is operating from primary or backup power (the Endpoint Device could use this information to decide to enter power conservation mode). Note that this device does not support PoE capabilities. (Default: Enabled)
- **Inventory** – This option advertises device details useful for inventory management, such as manufacturer, model, software version and other pertinent information. (Default: Enabled)
- **Location** – This option advertises location identification details. (Default: Enabled)
- **Network Policy** – This option advertises network policy configuration information, aiding in the discovery and diagnosis of VLAN configuration mismatches on a port. Improper network policy configurations frequently result in voice quality degradation or complete service disruption. (Default: Enabled)
- ◆ **MED-Location Civic Address** – Configures information for the location of the attached device included in the MED TLV field of advertised messages, including the country and the device type.
  - **Country** – The two-letter ISO 3166 country code in capital ASCII letters. (Example: DK, DE or US)
  - **Device entry refers to** – The type of device to which the location applies:
    - Location of the DHCP server.
    - Location of the network element believed to be the closest to client.
    - Location of the client. (This is the default.)

### Web Interface

To configure LLDP interface attributes:

1. Click Administration, LLDP.
2. Select Configure Interface from the Step list.
3. Select Configure General from the Action list.
4. Select an interface from the Port or Trunk list.
5. Set the LLDP transmit/receive mode, specify whether or not to send SNMP trap messages, and select the information to advertise in LLDP messages.
6. Click Apply.

**Figure 241: Configuring LLDP Interface Attributes**

The screenshot shows the 'Administration > LLDP' configuration page. At the top, there's a breadcrumb 'Administration > LLDP' and a green help icon. Below that, a 'Step:' dropdown is set to '2. Configure Interface' and an 'Action:' dropdown is set to 'Configure General'. The main configuration area includes:

- Interface:** Radio buttons for 'Port' (selected) and 'Trunk'. A dropdown shows '1'.
- Admin Status:** A dropdown menu showing 'Tx Rx'.
- SNMP Notification:** A checkbox labeled 'Enabled'.
- MED Notification:** A checkbox labeled 'Enabled'.
- Basic Optional TLVs:** A group of checkboxes: 'Management Address', 'Port Description', 'System Capabilities', 'System Description', and 'System Name'.
- 802.1 Organizationally Specific TLVs:** A group of checkboxes: 'Protocol Identity' (checked), 'VLAN ID' (checked), 'VLAN Name' (checked), and 'Port and Protocol VLAN ID' (checked).
- 802.3 Organizationally Specific TLVs:** A group of checkboxes: 'Link Aggregation', 'Max Frame Size', 'MAC/PHY Configuration/Status', and 'PoE'.
- MED TLVs:** A group of checkboxes: 'Capabilities', 'Extended Power', 'Inventory', 'Location', and 'Network Policy'.
- MED-Location Civic Address:** A section with a 'Country' dropdown set to 'US' and a 'Device entry refers to' dropdown set to 'Location of the client'.

At the bottom, there's a note: 'Note: The country string shall be a two-letter ISO 3166 country code, e.g. US'. Below the note are 'Apply' and 'Revert' buttons.

### Configuring LLDP Interface Civic-Address

Use the Administration > LLDP (Configure Interface – Add CA-Type) page to specify the physical location of the device attached to an interface.

#### Command Usage

- ◆ Use the Civic Address type (CA-Type) to advertise the physical location of the device attached to an interface, including items such as the city, street number, building and room information. The address location is specified as a type and value pair, with the civic address type defined in RFC 4776. The following table describes some of the CA type numbers and provides examples.

**Table 21: LLDP MED Location CA Types**

| CA Type | Description                                     | CA Value Example |
|---------|---|------------------|
| 1       | National subdivisions (state, canton, province) | California       |
| 2       | County, parish                                  | Orange           |
| 3       | City, township                                  | Irvine           |
| 4       | City division, borough, city district           | West Irvine      |
| 5       | Neighborhood, block                             | Riverside        |
| 6       | Group of streets below the neighborhood level   | Exchange         |
| 18      | Street suffix or type                           | Avenue           |
| 19      | House number                                    | 320              |
| 20      | House number suffix                             | A                |

**Table 21: LLDP MED Location CA Types** (Continued)

| CA Type | Description                | CA Value Example |
|---------|----------------------------|------------------|
| 21      | Landmark or vanity address | Tech Center      |
| 26      | Unit (apartment, suite)    | Apt 519          |
| 27      | Floor                      | 5                |
| 28      | Room                       | 509B             |

- ◆ Any number of CA type and value pairs can be specified for the civic address location, as long as the total does not exceed 250 characters.

### Parameters

These parameters are displayed:

- ◆ **CA-Type** – Descriptor of the data civic address value. (Range: 0-255)
- ◆ **CA-Value** – Description of a location. (Range: 1-32 characters)

### Web Interface

To specify the physical location of the attached device:

1. Click Administration, LLDP.
2. Select Configure Interface from the Step list.
3. Select Add or Modify CA-Type from the Action list.
4. Select an interface from the Port or Trunk list.
5. Specify a CA-Type and CA-Value pair.
6. Click Apply.

**Figure 242: Configuring the Civic Address for an LLDP Interface**

The screenshot shows a web interface for configuring LLDP. The breadcrumb navigation at the top reads 'Administration > LLDP'. Below this, there are two dropdown menus: 'Step:' set to '2. Configure Interface' and 'Action:' set to 'Add CA-Type'. The main configuration area has two radio buttons for 'Interface': 'Port' (selected) and 'Trunk'. Next to 'Port' is a dropdown menu showing '1'. Below these are two text input fields: 'CA-Type (0-255)' containing the value '1' and 'CA-Value' containing the value 'California'. At the bottom right of the form are two buttons: 'Apply' and 'Revert'.

To show the physical location of the attached device:

1. Click Administration, LLDP.
2. Select Configure Interface from the Step list.
3. Select Show CA-Type from the Action list.
4. Select an interface from the Port or Trunk list.

**Figure 243: Showing the Civic Address for an LLDP Interface**

The screenshot shows the 'Administration > LLDP' configuration page. The 'Step' dropdown is set to '2. Configure Interface' and the 'Action' dropdown is set to 'Show CA-Type'. Under the 'Interface' section, 'Port 1' is selected. Below this, a table titled 'LLDP MED-Location Civic Address Type List' with 'Total: 1' is displayed. The table has two columns: 'CA-Type' and 'CA-Value'. The first row shows '1' for CA-Type and 'California' for CA-Value. At the bottom of the table are 'Delete' and 'Revert' buttons.

| CA-Type | CA-Value   |
|---------|------------|
| 1       | California |

### Displaying LLDP Local Device Information

Use the Administration > LLDP (Show Local Device Information) page to display information about the switch, such as its MAC address, chassis ID, management IP address, and port information.

### Parameters

These parameters are displayed:

#### General Settings

- ◆ **Chassis Type** – Identifies the chassis containing the IEEE 802 LAN entity associated with the transmitting LLDP agent. There are several ways in which a chassis may be identified and a chassis ID subtype is used to indicate the type of component being referenced by the chassis ID field.

**Table 22: Chassis ID Subtype**

| ID Basis          | Reference   |
|-------------------|---|
| Chassis component | EntPhysicalAlias when entPhysClass has a value of 'chassis(3)' (IETF RFC 2737)                  |
| Interface alias   | IfAlias (IETF RFC 2863)   |
| Port component    | EntPhysicalAlias when entPhysicalClass has a value 'port(10)' or 'backplane(4)' (IETF RFC 2737) |
| MAC address       | MAC address (IEEE Std 802-2001)   |
| Network address   | networkAddress  |
| Interface name    | ifName (IETF RFC 2863)  |
| Locally assigned  | locally assigned  |

- ◆ **Chassis ID** – An octet string indicating the specific identifier for the particular chassis in this system.
- ◆ **System Name** – A string that indicates the system’s administratively assigned name (see [“Displaying System Information” on page 72](#)).
- ◆ **System Description** – A textual description of the network entity. This field is also displayed by the **show system** command.
- ◆ **System Capabilities Supported** – The capabilities that define the primary function(s) of the system.

**Table 23: System Capabilities**

| ID Basis            | Reference                       |
|---------------------|---------------------------------|
| Other               | —                               |
| Repeater            | IETF RFC 2108                   |
| Bridge              | IETF RFC 2674                   |
| WLAN Access Point   | IEEE 802.11 MIB                 |
| Router              | IETF RFC 1812                   |
| Telephone           | IETF RFC 2011                   |
| DOCSIS cable device | IETF RFC 2669 and IETF RFC 2670 |
| End Station Only    | IETF RFC 2011                   |

- ◆ **System Capabilities Enabled** – The primary function(s) of the system which are currently enabled. Refer to the preceding table.
- ◆ **Management Address** – The management address associated with the local system. If no management address is available, the address should be the MAC address for the CPU or for the port sending this advertisement.

#### *Interface Settings*

The attributes listed below apply to both port and trunk interface types. When a trunk is listed, the descriptions apply to the first port of the trunk.

- ◆ **Port/Trunk Description** – A string that indicates the port or trunk description. If RFC 2863 is implemented, the ifDescr object should be used for this field.
- ◆ **Port/Trunk ID** – A string that contains the specific identifier for the port or trunk from which this LLDPDU was transmitted.

#### *Interface Details*

The attributes listed below apply to both port and trunk interface types. When a trunk is listed, the descriptions apply to the first port of the trunk.

- ◆ **Local Port/Trunk** – Local interface on this switch.



- ◆ **Port/Trunk ID Type** – There are several ways in which a port may be identified. A port ID subtype is used to indicate how the port is being referenced in the Port ID TLV.

**Table 24: Port ID Subtype**

| ID Basis          | Reference   |
|-------------------|---|
| Interface alias   | IfAlias (IETF RFC 2863)   |
| Chassis component | EntPhysicalAlias when entPhysClass has a value of 'chassis(3)' (IETF RFC 2737)                  |
| Port component    | EntPhysicalAlias when entPhysicalClass has a value 'port(10)' or 'backplane(4)' (IETF RFC 2737) |
| MAC address       | MAC address (IEEE Std 802-2001)   |
| Network address   | networkAddress  |
| Interface name    | ifName (IETF RFC 2863)  |
| Agent circuit ID  | agent circuit ID (IETF RFC 3046)  |
| Locally assigned  | locally assigned  |

- ◆ **Port/Trunk ID** – A string that contains the specific identifier for the local interface based on interface subtype used by this switch.
- ◆ **Port/Trunk Description** – A string that indicates the port or trunk description. If RFC 2863 is implemented, the ifDescr object should be used for this field.
- ◆ **MED Capability** – The supported set of capabilities that define the primary function(s) of the interface:
  - LLDP-MED Capabilities
  - Network Policy
  - Location Identification
  - Extended Power via MDI – PSE
  - Extended Power via MDI – PD
  - Inventory

### Web Interface

To display LLDP information for the local device:

1. Click Administration, LLDP.
2. Select Show Local Device Information from the Step list.
3. Select General, Port, Port Details, Trunk, or Trunk Details.

**Figure 244: Displaying Local Device Information for LLDP (General)**

Administration > LLDP

Step: 3. Show Local Device Information

☒ General ☐ Port ☐ Port Details ☐ Trunk ☐ Trunk Details

LLDP Local Device Information

|                               |                     |
|-------------------------------|---------------------|
| Chassis Type                  | MAC Address         |
| Chassis ID                    | A8-2B-B5-0D-55-D8   |
| System Name                   |                     |
| System Description            | GEP-5271            |
| System Capabilities Supported | Bridge              |
| System Capabilities Enabled   | Bridge              |
| Management Address            | 192.168.2.99 (IPv4) |

**Figure 245: Displaying Local Device Information for LLDP (Port)**

Administration > LLDP

Step: 3. Show Local Device Information

☐ General ☒ Port ☐ Port Details ☐ Trunk ☐ Trunk Details

LLDP Local Device Port List Total: 52

| Port | Port Description                | Port ID           |
|------|---------------------------------|-------------------|
| 1    | Ethernet Port on unit 1, port 1 | CC-37-AB-BC-4C-5B |
| 2    | Ethernet Port on unit 1, port 2 | CC-37-AB-BC-4C-5C |
| 3    | Ethernet Port on unit 1, port 3 | CC-37-AB-BC-4C-5D |
| 4    | Ethernet Port on unit 1, port 4 | CC-37-AB-BC-4C-5E |
| 5    | Ethernet Port on unit 1, port 5 | CC-37-AB-BC-4C-5F |

**Figure 246: Displaying Local Device Information for LLDP (Port Details)**

Administration > LLDP

Step: 3. Show Local Device Information

☐ General ☐ Port ☒ Port Details ☐ Trunk ☐ Trunk Details

Port 1

LLDP Local Port Information Details

|                  |   |
|------------------|---|
| Port ID Type     | MAC Address   |
| Port ID          | 00-00-E8-94-40-01   |
| Port Description | Ethernet Port on unit 1, port 1   |
| MED Capability   | LLDP-MED Capabilities, Network Policy, Location Identification, Inventory |

## Displaying LLDP Remote Device Information

Use the Administration > LLDP (Show Remote Device Information) page to display information about devices connected directly to the switch's ports which are advertising information through LLDP, or to display detailed information about an LLDP-enabled device connected to a specific port on the local switch.

### Parameters

These parameters are displayed:

#### *Port*

- ◆ **Local Port** – The local port to which a remote LLDP-capable device is attached.
- ◆ **Chassis ID** – An octet string indicating the specific identifier for the particular chassis in this system.
- ◆ **Port ID** – A string that contains the specific identifier for the port from which this LLDPDU was transmitted.
- ◆ **System Name** – A string that indicates the system's administratively assigned name.

#### *Port Details*

- ◆ **Port** – Port identifier on local switch.
- ◆ **Remote Index** – Index of remote device attached to this port.
- ◆ **Local Port** – The local port to which a remote LLDP-capable device is attached.
- ◆ **Chassis Type** – Identifies the chassis containing the IEEE 802 LAN entity associated with the transmitting LLDP agent. There are several ways in which a chassis may be identified and a chassis ID subtype is used to indicate the type of component being referenced by the chassis ID field. (See [Table 22, "Chassis ID Subtype," on page 395.](#))
- ◆ **Chassis ID** – An octet string indicating the specific identifier for the particular chassis in this system.
- ◆ **Port Type** – Indicates the basis for the identifier that is listed in the Port ID field. See [Table 24, "Port ID Subtype," on page 397.](#)
- ◆ **Port ID** – A string that contains the specific identifier for the port from which this LLDPDU was transmitted.
- ◆ **Port Description** – A string that indicates the port's description. If RFC 2863 is implemented, the ifDescr object should be used for this field.
- ◆ **System Name** – A string that indicates the system's assigned name.
- ◆ **System Description** – A textual description of the network entity.

- ◆ **System Capabilities Supported** – The capabilities that define the primary function(s) of the system. (See [Table 23, "System Capabilities," on page 396.](#))
- ◆ **System Capabilities Enabled** – The primary function(s) of the system which are currently enabled. (See [Table 23, "System Capabilities," on page 396.](#))
- ◆ **Management Address List** – The management addresses for this device. Since there are typically a number of different addresses associated with a Layer 3 device, an individual LLDP PDU may contain more than one management address TLV.  
  
If no management address is available, the address should be the MAC address for the CPU or for the port sending this advertisement.

*Port Details – 802.1 Extension Information*

- ◆ **Remote Port VID** – The port's default VLAN identifier (PVID) indicates the VLAN with which untagged or priority-tagged frames are associated.
- ◆ **Remote Port-Protocol VLAN List** – The port-based protocol VLANs configured on this interface, whether the given port (associated with the remote system) supports port-based protocol VLANs, and whether the port-based protocol VLANs are enabled on the given port associated with the remote system.
- ◆ **Remote VLAN Name List** – VLAN names associated with a port.
- ◆ **Remote Protocol Identity List** – Information about particular protocols that are accessible through a port. This object represents an arbitrary local integer value used by this agent to identify a particular protocol identity, and an octet string used to identify the protocols associated with a port of the remote system.

*Port Details – 802.3 Extension Port Information*

- ◆ **Remote Port Auto-Neg Supported** – Shows whether the given port (associated with remote system) supports auto-negotiation.
- ◆ **Remote Port Auto-Neg Adv-Capability** – The value (bitmap) of the ifMauAutoNegCapAdvertisedBits object (defined in IETF RFC 3636) which is associated with a port on the remote system.

**Table 25: Remote Port Auto-Negotiation Advertised Capability**

| Bit | Capability                  |
|-----|-----------------------------|
| 0   | other or unknown            |
| 1   | 10BASE-T half duplex mode   |
| 2   | 10BASE-T full duplex mode   |
| 3   | 100BASE-T4                  |
| 4   | 100BASE-TX half duplex mode |

**Table 25: Remote Port Auto-Negotiation Advertised Capability** (Continued)

| Bit | Capability   |
|-----|--|
| 5   | 100BASE-TX full duplex mode                          |
| 6   | 100BASE-T2 half duplex mode                          |
| 7   | 100BASE-T2 full duplex mode                          |
| 8   | PAUSE for full-duplex links                          |
| 9   | Asymmetric PAUSE for full-duplex links               |
| 10  | Symmetric PAUSE for full-duplex links                |
| 11  | Asymmetric and Symmetric PAUSE for full-duplex links |
| 12  | 1000BASE-X, -LX, -SX, -CX half duplex mode           |
| 13  | 1000BASE-X, -LX, -SX, -CX full duplex mode           |
| 14  | 1000BASE-T half duplex mode                          |
| 15  | 1000BASE-T full duplex mode                          |

- ◆ **Remote Port Auto-Neg Status** – Shows whether port auto-negotiation is enabled on a port associated with the remote system.
- ◆ **Remote Port MAU Type** – An integer value that indicates the operational MAU type of the sending device. This object contains the integer value derived from the list position of the corresponding dot3MauType as listed in IETF RFC 3636 and is equal to the last number in the respective dot3MauType OID.

*Port Details – 802.3 Extension Power Information*

- ◆ **Remote Power Class** – The port Class of the given port associated with the remote system (PSE – Power Sourcing Equipment or PD – Powered Device).
- ◆ **Remote Power MDI Status** – Shows whether MDI power is enabled on the given port associated with the remote system.
- ◆ **Remote Power Pairs** – “Signal” means that the signal pairs only are in use, and “Spare” means that the spare pairs only are in use.
- ◆ **Remote Power MDI Supported** – Shows whether MDI power is supported on the given port associated with the remote system.
- ◆ **Remote Power Pair Controllable** – Indicates whether the pair selection can be controlled for sourcing power on the given port associated with the remote system.
- ◆ **Remote Power Classification** – This classification is used to tag different terminals on the Power over LAN network according to their power consumption. Devices such as IP telephones, WLAN access points and others, will be classified according to their power requirements.

*Port Details – 802.3 Extension Trunk Information*

- ◆ **Remote Link Aggregation Capable** – Shows if the remote port is not in link aggregation state and/or it does not support link aggregation.
- ◆ **Remote Link Aggregation Status** – The current aggregation status of the link.
- ◆ **Remote Link Port ID** – This object contains the IEEE 802.3 aggregated port identifier, aAggPortID (IEEE 802.3-2002, 30.7.2.1.1), derived from the ifNumber of the ifIndex for the port component associated with the remote system. If the remote port is not in link aggregation state and/or it does not support link aggregation, this value should be zero.

*Port Details – 802.3 Extension Frame Information*

- ◆ **Remote Max Frame Size** – An integer value indicating the maximum supported frame size in octets on the port component associated with the remote system.

*Port Details – LLDP-MED Capability<sup>10</sup>*

- ◆ **Device Class** – Any of the following categories of endpoint devices:
  - Class 1 – The most basic class of endpoint devices.
  - Class 2 – Endpoint devices that supports media stream capabilities.
  - Class 3 – Endpoint devices that directly supports end users of the IP communication systems.
  - Network Connectivity Device – Devices that provide access to the IEEE 802 based LAN infrastructure for LLDP-MED endpoint devices. These may be any LAN access device including LAN switch/router, IEEE 802.1 bridge, IEEE 802.3 repeater, IEEE 802.11 wireless access point, or any device that supports the IEEE 802.1AB and MED extensions defined by this Standard and can relay IEEE 802 frames via any method.
- ◆ **Supported Capabilities** – The supported set of capabilities that define the primary function(s) of the port:
  - LLDP-MED Capabilities
  - Network Policy
  - Location Identification
  - Extended Power via MDI – PSE
  - Extended Power via MDI – PD
  - Inventory
- ◆ **Current Capabilities** – The set of capabilities that define the primary function(s) of the port which are currently enabled.

---

10. These fields are only displayed for end-node devices advertising LLDP-MED TLVs.

*Port Details – Network Policy<sup>10</sup>*

- ◆ **Application Type** – The primary application(s) defined for this network policy:
  - Voice
  - Voice Signaling
  - Guest Signaling
  - Guest Voice Signaling
  - Softphone Voice
  - Video Conferencing
  - Streaming Video
  - Video Signaling
- ◆ **Tagged Flag** – Indicates whether the specified application type is using a tagged or untagged VLAN.
- ◆ **Layer 2 Priority** – The Layer 2 priority to be used for the specified application type. This field may specify one of eight priority levels (0-7), where a value of 0 represents use of the default priority.
- ◆ **Unknown Policy Flag** – Indicates that an endpoint device wants to explicitly advertise that this policy is required by the device, but is currently unknown.
- ◆ **VLAN ID** – The VLAN identifier (VID) for the port as defined in IEEE 802.1Q. A value of zero indicates that the port is using priority tagged frames, meaning that only the IEEE 802.1D priority level is significant and the default PVID of the ingress port is used instead.
- ◆ **DSCP Value** – The DSCP value to be used to provide Diffserv node behavior for the specified application type. This field may contain one of 64 code point values (0-63). A value of 0 represents use of the default DSCP value as defined in RFC 2475.

*Port Details – Location Identification<sup>10</sup>*

- ◆ **Location Data Format** – Any of these location ID data formats:
  - Coordinate-based LCI<sup>11</sup> – Defined in RFC 3825, includes latitude resolution, latitude, longitude resolution, longitude, altitude type, altitude resolution, altitude, and datum.
  - Civic Address LCI<sup>11</sup> – Includes What, Country code, CA type, CA length and CA value. “What” is described as the field entry “Device entry refers to” under [“Configuring LLDP Interface Attributes.”](#) The other items and described under [“Configuring LLDP Interface Civic-Address.”](#)

---

11. Location Configuration Information

- **ECS ELIN** – Emergency Call Service Emergency Location Identification Number supports traditional PSAP-based Emergency Call Service in North America.
- ◆ **Country Code** – The two-letter ISO 3166 country code in capital ASCII letters. (Example: DK, DE or US)
- ◆ **What** – The type of device to which the location applies as described for the field entry “Device entry refers to” under “[Configuring LLDP Interface Attributes](#).”

*Port Details – Extended Power-via-MDI*

- ◆ **Power Type** – Power Sourcing Entity (PSE) or Power Device (PD).
- ◆ **Power Priority** – Shows power priority for a port. (Unknown, Low, High, Critical)
- ◆ **Power Source** – Shows information based on the type of device:
  - **PD** – Unknown, PSE, Local, PSE and Local
  - **PSE** – Unknown, Primary Power Source, Backup Power Source - Power conservation mode
- ◆ **Power Value** – The total power in watts required by a PD device from a PSE device, or the total power a PSE device is capable of sourcing over a maximum length cable based on its current configuration. This parameter supports a maximum power required or available value of 102.3 Watts to allow for future expansion. (Range: 0 - 102.3 Watts)

*Port Details – Inventory<sup>10</sup>*

- ◆ **Hardware Revision** – The hardware revision of the end-point device.
- ◆ **Software Revision** – The software revision of the end-point device.
- ◆ **Manufacture Name** – The manufacturer of the end-point device
- ◆ **Asset ID** – The asset identifier of the end-point device. End-point devices are typically assigned asset identifiers to facilitate inventory management and assets tracking.
- ◆ **Firmware Revision** – The firmware revision of the end-point device.
- ◆ **Serial Number** – The serial number of the end-point device.
- ◆ **Model Name** – The model name of the end-point device.



## Web Interface

To display LLDP information for a remote port:

1. Click Administration, LLDP.
2. Select Show Remote Device Information from the Step list.
3. Select Port, Port Details, Trunk, or Trunk Details.
4. When the next page opens, select a port on this switch and the index for a remote device attached to this port.
5. Click Query.

**Figure 247: Displaying Remote Device Information for LLDP (Port)**

**Administration > LLDP**

Step: 4. Show Remote Device Information

☒ Port ☐ Port Details ☐ Trunk ☐ Trunk Details

LLDP Remote Device Port List Total: 1

| Local Port | Chassis ID        | Port ID           | System Name |
|------------|-------------------|-------------------|-------------|
| 1          | 70-72-CF-32-DD-FD | 70-72-CF-32-DD-FF | RD93        |

---

**Administration > LLDP**

Step: 4. Show Remote Device Information

☐ Port ☒ Port Details ☐ Trunk ☐ Trunk Details

Port: 1

Remote Index: 2

Query

**Figure 248: Displaying Remote Device Information for LLDP (Port Details)**

Administration > LLDP

Step: 4. Show Remote Device Information

☐ Port
☒ Port Details
☐ Trunk
☐ Trunk Details

Port: 1

Remote Index: 2

Query

LLDP Remote Device Port Information

Local Port: 1  
Chassis Type: A8-2B-B5-0D-55-D8  
Chassis ID: 1  
Port Type: MAC Address  
Port ID: A8-2B-B5-0D-55-D8  
Port Description: Ethernet Port on unit 1, port 15  
System Name: Ethernet Switch  
System Description: Bridge  
System Capabilities Supported: GEP-5271  
System Capabilities Enabled: Bridge

Management Address List Total: 3

| Address           | Address Type |
|-------------------|--------------|
| 192.168.2.3       | IPv4 Address |
| 2000::2009        | IPv6 Address |
| 00-01-02-03-04-05 | MAC Address  |

802.1 Extension Information

Remote Port VID: 1

Remote Port-Protocol VLAN List Total: 1

| VLAN | Support | Status  |
|------|---------|---------|
| 1    | Yes     | Enabled |

Remote VLAN Name List Total: 1

| VLAN | Name        |
|------|-------------|
| 1    | DefaultVlan |

Remote Protocol Identity List Total: 1

| Remote Protocol Identity (Hex) |
|--------------------------------|
| 88-CC                          |

802.3 Extension Port Information

Remote Port Auto-Neg Supported: Yes  
Remote Port Auto-Neg Status: Enabled  
Remote Port Auto-Neg Adv-Capability: 0000  
Remote Port MAU Type: 6

802.3 Extension Power Information

Remote Power Class: PSE  
Remote Power MDI Status: Enabled  
Remote Power Pairs: Spare  
Remote Power MDI Supported: Yes  
Remote Power Pair Controlable: No  
Remote Power Classification: Class1

802.3 Extension Trunk Information

Remote Link Aggregation Capable: Yes  
Remote Link Aggregation Status: Disabled  
Remote Link Port ID: 0

802.3 Extension Frame Information

Remote Max Frame Size: 1518

Additional information displayed by an end-point device which advertises LLDP-MED TLVs is shown in the following figure.

**Figure 249: Displaying Remote Device Information for LLDP (End Node)**

Administration > LLDP

Step: 4. Show Remote Device Information

LLDP-MED Capability

Device Class

Network Connectivity

Supported Capabilities

LLDP-MED Capabilities, Network Policy, Location Identification, Inventory

Current Capabilities

LLDP-MED Capabilities, Network Policy, Location Identification, Inventory

Network Policy

Application Type

Guest Voice Signaling

Unknown Policy Flag

Disabled

Tagged Flag

Disabled

VLAN ID

7

Layer 2 Priority

2

DSCP Value

62

Location Identification

Location Data Format

Coordinate-based LCI

Country Code

TW

What

2

Location Identification

Location Data Format

Civic Address LCI

Country Code

US

What

2

Extended Power-via-MDI

Power Type

PSE

Power Source

Unknown

Power Priority

Unknown

Power Value

0 W Watts

Inventory

Hardware Revision

R01

Firmware Revision

1.2.2.1

Software Revision

1.2.2.1

Serial Number

LN10230092

Manufacture Name

Model Name

L

Asset ID

## Displaying Device Statistics

Use the Administration > LLDP (Show Device Statistics) page to display statistics for LLDP-capable devices attached to the switch, and for LLDP protocol messages transmitted or received on all local interfaces.

### Parameters

These parameters are displayed:

#### General Statistics on Remote Devices

- ◆ **Neighbor Entries List Last Updated** – The time the LLDP neighbor entry list was last updated.
- ◆ **New Neighbor Entries Count** – The number of LLDP neighbors for which the remote TTL has not yet expired.
- ◆ **Neighbor Entries Deleted Count** – The number of LLDP neighbors which have been removed from the LLDP remote systems MIB for any reason.

- ◆ **Neighbor Entries Dropped Count** – The number of times which the remote database on this switch dropped an LLDPDU because of insufficient resources.
- ◆ **Neighbor Entries Age-out Count** – The number of times that a neighbor's information has been deleted from the LLDP remote systems MIB because the remote TTL timer has expired.

*Port/Trunk*


- ◆ **Frames Discarded** – Number of frames discarded because they did not conform to the general validation rules as well as any specific usage rules defined for the particular TLV.
- ◆ **Frames Invalid** – A count of all LLDPDUs received with one or more detectable errors.
- ◆ **Frames Received** – Number of LLDP PDUs received.
- ◆ **Frames Sent** – Number of LLDP PDUs transmitted.
- ◆ **TLVs Unrecognized** – A count of all TLVs not recognized by the receiving LLDP local agent.
- ◆ **TLVs Discarded** – A count of all LLDPDUs received and then discarded due to insufficient memory space, missing or out-of-sequence attributes, or any other reason.
- ◆ **Neighbor Ageouts** – A count of the times that a neighbor's information has been deleted from the LLDP remote systems MIB because the remote TTL timer has expired.

**Web Interface**

To display statistics for LLDP-capable devices attached to the switch:

1. Click Administration, LLDP.
2. Select Show Device Statistics from the Step list.
3. Select General, Port, or Trunk.

**Figure 250: Displaying LLDP Device Statistics (General)**

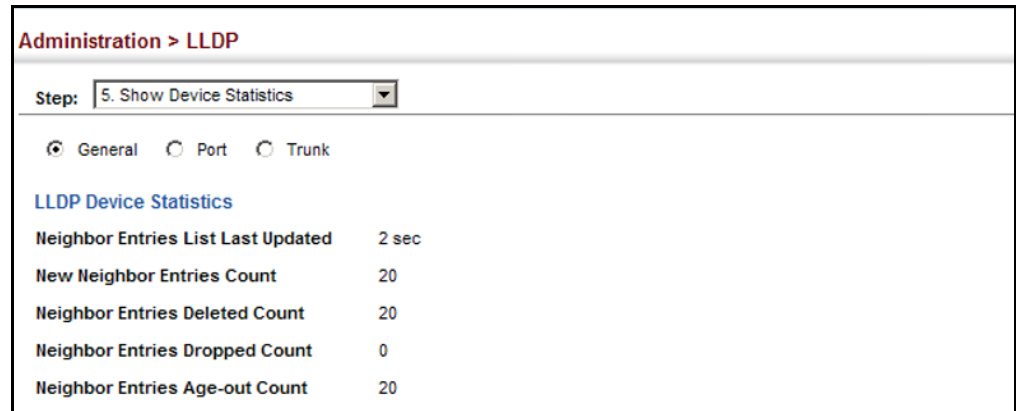

**Administration > LLDP**


Step: 5. Show Device Statistics

☒ General ☐ Port ☐ Trunk

**LLDP Device Statistics**

|                                    |       |
|------------------------------------|-------|
| Neighbor Entries List Last Updated | 2 sec |
| New Neighbor Entries Count         | 20    |
| Neighbor Entries Deleted Count     | 20    |
| Neighbor Entries Dropped Count     | 0     |
| Neighbor Entries Age-out Count     | 20    |

**Figure 251: Displaying LLDP Device Statistics (Port)**

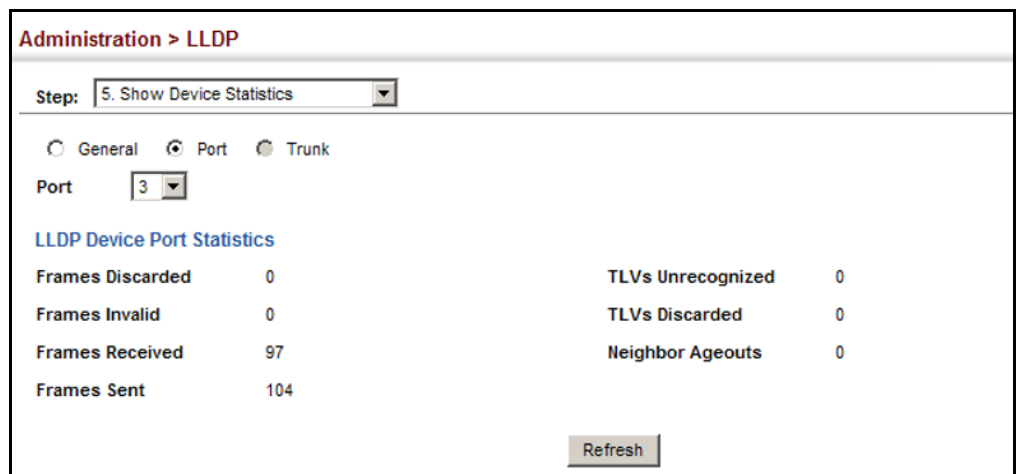

**Administration > LLDP**

Step: 5. Show Device Statistics

☐ General ☒ Port ☐ Trunk

Port: 3

**LLDP Device Port Statistics**

|                  |     |                   |   |
|------------------|-----|-------------------|---|
| Frames Discarded | 0   | TLVs Unrecognized | 0 |
| Frames Invalid   | 0   | TLVs Discarded    | 0 |
| Frames Received  | 97  | Neighbor Ageouts  | 0 |
| Frames Sent      | 104 |                   |   |

Refresh

## Power over Ethernet

The switch can provide DC power to a wide range of connected devices, eliminating the need for an additional power source and cutting down on the amount of cables attached to each device. Once configured to supply power, an automatic detection process is initialized by the switch that is authenticated by a PoE signature from the connected device. Detection and authentication prevent damage to non-compliant devices (prior to IEEE 802.3af).

The switch's power management enables individual port power to be controlled within the switch's power budget. Port power can be automatically turned on and off for connected devices, and a per-port power priority can be set so that the switch never exceeds its power budget. When a device is connected to a switch port, its power requirements are detected by the switch before power is supplied. If the power required by a device exceeds the power budget of the port or the whole switch, power is not supplied.

Ports can be set to one of three power priority levels, critical, high or low. To control the power supply within the switch's budget, ports set at critical to high priority have power enabled in preference to those ports set at low priority. For example, when a device connected to a port is set to critical priority, the switch supplies the required power, if necessary by denying power to ports set for a lower priority during bootup.

### Setting the Switch's Overall PoE Power Budget

Use the Administration > PoE > PSE (Configure Global) page to set the maximum PoE power budget for the switch (power available to all RJ-45 ports). The maximum power budget is fixed at the maximum available setting, which prevents overload conditions at the power source. If the power demand from devices connected to the switch exceeds the power budget, the switch uses port power priority settings to limit the supplied power.

#### Parameters

These parameters are displayed:

- ◆ **PoE Maximum Available Power** – The power budget for the switch. If devices connected to the switch require more power than the switch budget, the port power priority settings are used to control the supplied power. Overall allocated power cannot exceed this setting.
- ◆ **PoE Maximum Allocation Power** – Status of the PoE power service provided to the switch ports.
- ◆ **PoE Power Consumption** – Sets a power budget for the switch.
  - 50000-370000 milliwatts; Default: 370000 mW
- ◆ **Compatible Mode** – Allows the switch to detect and provide power to powered devices that were designed prior to the IEEE 802.3af PoE standard. (Default: Disabled)

The switch automatically detects attached PoE devices by periodically transmitting test voltages that over the Gigabit Ethernet copper-media ports. When an IEEE 802.3af or 802.3at compatible device is plugged into one of these ports, the powered device reflects the test voltage back to the switch, which may then turn on the power to this device. When the compatibility mode is enabled, this switch can detect IEEE 802.3af or 802.3at compliant devices and the more recent 802.3af non-compliant devices that also reflect the test voltages back to the switch. It cannot detect other legacy devices that do not reflect back the test voltages.

For legacy devices to be supported by this switch, they must be able to accept power over the data pairs connected to the RJ-45 ports

## Web Interface

To set the overall PoE power budget for switch:

1. Click Administration, PoE.
2. Select Configure Global from the Step list.
3. Set the maximum PoE power allocated to the switch.
4. Click Apply.

**Figure 252: Setting the Switch's PoE Budget**

Administration > PoE > PSE

Step: 1. Configure Global ▼

PoE Maximum Available Power 370000 milliwatts

PoE Maximum Allocation Power (50000-370000) 370000 milliwatts

Compatible Mode ☐ Enabled

Maximum Allocation Mode Class ▼

Apply Revert

## Setting The Port PoE Power Budget

Use the Administration > PoE (Configure Interface) page to set the PoE power allocation priority and maximum power provided to a port.

## Command Usage

- ◆ This switch supports both the IEEE 802.3af PoE and IEEE 802.3at-2009 PoE Plus standards. To ensure that the correct power is supplied to powered devices (PD) compliant with these standards, the first detection pulse from the switch is based on 802.3af to which the 802.3af PDs will respond normally. It then sends a second PoE Plus pulse that causes an 802.3at PD to respond as a Class 4 device and draw Class 4 current. Afterwards, the switch exchanges information with the PD such as duty-cycle, peak and average power needs.
- ◆ The total PoE power delivered by all ports cannot exceed the maximum power budget of 180W. All the RJ-45 ports support both the IEEE 802.3af and IEEE 802.3at standards. The maximum number of ports which can supply power simultaneously at the specified levels are shown in the following table.

**Table 26: Maximum Number of Ports Providing Simultaneous Power**

| Switch   | 30W (802.3af) | 7.5W (802.3af) |
|----------|---------------|----------------|
| GEP-5271 | 11            | 24             |

- ◆ If a device is connected to a switch port and the switch detects that it requires more than the power budget set for the port or to the overall switch, no power is supplied to the device (i.e., port power remains off).

- ◆ If the power demand from devices connected to all switch ports exceeds the power budget set for the switch, the port power priority settings are used to control the supplied power. For example:
  - If a device is connected to a low-priority port and causes the switch to exceed its budget, power to this port is not turned on.
  - If a device is connected to a critical or high-priority port and would cause the switch to exceed its power budget as determined during bootup, power is provided to the port only if the switch can drop power to one or more lower-priority ports and thereby remain within its overall budget.
  - If a device is connected to a port after the switch has finished booting up and would cause the switch to exceed its budget, power will not be provided to that port regardless of its priority setting.
  - If priority is not set for any ports, and PoE consumption exceeds the maximum power provided by the switch, power is shut down starting from the higher-numbered ports.

### Parameters

These parameters are displayed:

- ◆ **Port** – The port number on the switch. (Range: 1-48)
- ◆ **Admin Status** – Enables PoE power on a port. Power is automatically supplied when a device is detected on a port, providing that the power demanded does not exceed the switch or port power budget. (Default: Enabled)
- ◆ **Mode** – Shows whether or not PoE power is being supplied to a port.
- ◆ **Time Range Name** – Name of a time range. If a time range is set, then PoE will be provided to an interface during the specified period.
- ◆ **Time Range Status** – Indicates if a time range has been applied to an interface, and whether it is currently active or inactive.
- ◆ **Priority** – Sets the power priority for a port. (Options: Low, High or Critical; Default: Low)
- ◆ **Power Allocation** – Sets the power budget for a port. (Range: 3400-34200 milliwatts; Default: 34200 milliwatts)
- ◆ **Power Consumption** – Current power consumption on a port.

### Web Interface

To set the PoE power budget for a port:

1. Click Administration, PoE, PSE.
2. Select Configure Interface from the Step list.



3. Enable PoE power on selected ports. Set the priority and the power budget.
4. Click Apply.

Figure 253: Setting a Port's PoE Budget

Administration > PoE > PSE

Step: 2. Configure Interface

PoE Port List Total: 48

| Port | Admin Status | Mode | Time-Range Name | Time-Range Status | Class | Priority | Power Allocation | Power Consumption (milliwatts) |
|------|--------------|------|-----------------|-------------------|-------|----------|------------------|--------------------------------|
| 1    | Enabled      | off  |                 | NA                | -     | Low      | Class            | 0                              |
| 2    | Enabled      | off  |                 | NA                | -     | Low      | Class            | 0                              |
| 3    | Enabled      | off  |                 | NA                | -     | Low      | Class            | 0                              |
| 4    | Enabled      | off  |                 | NA                | -     | Low      | Class            | 0                              |
| 5    | Enabled      | off  |                 | NA                | -     | Low      | Class            | 0                              |
| 6    | Enabled      | off  |                 | NA                | -     | Low      | Class            | 0                              |
| 7    | Enabled      | off  |                 | NA                | -     | Low      | Class            | 0                              |
| 8    | Enabled      | off  |                 | NA                | -     | Low      | Class            | 0                              |
| 9    | Enabled      | off  |                 | NA                | -     | Low      | Class            | 0                              |
| 10   | Enabled      | off  |                 | NA                | -     | Low      | Class            | 0                              |

Apply Revert

## Simple Network Management Protocol

Simple Network Management Protocol (SNMP) is a communication protocol designed specifically for managing devices on a network. Equipment commonly managed with SNMP includes switches, routers and host computers. SNMP is typically used to configure these devices for proper operation in a network environment, as well as to monitor them to evaluate performance or detect potential problems.

Managed devices supporting SNMP contain software, which runs locally on the device and is referred to as an agent. A defined set of variables, known as managed objects, is maintained by the SNMP agent and used to manage the device. These objects are defined in a Management Information Base (MIB) that provides a standard presentation of the information controlled by the agent. SNMP defines both the format of the MIB specifications and the protocol used to access this information over the network.

The switch includes an onboard agent that supports SNMP versions 1, 2c, and 3. This agent continuously monitors the status of the switch hardware, as well as the traffic passing through its ports. A network management station can access this information using network management software. Access to the onboard agent from clients using SNMP v1 and v2c is controlled by community strings. To communicate with the switch, the management station must first submit a valid community string for authentication.

Access to the switch from clients using SNMPv3 provides additional security features that cover message integrity, authentication, and encryption; as well as controlling user access to specific areas of the MIB tree.

The SNMPv3 security structure consists of security models, with each model having its own security levels. There are three security models defined, SNMPv1, SNMPv2c, and SNMPv3. Users are assigned to “groups” that are defined by a security model and specified security levels. Each group also has a defined security access to set of MIB objects for reading and writing, which are known as “views.” The switch has a default view (all MIB objects) and default groups defined for security models v1 and v2c. The following table shows the security models and levels available and the system default settings.

**Table 27: SNMPv3 Security Models and Levels**

| Model | Level        | Group                | Read View           | Write View          | Notify View         | Security  |
|-------|--------------|----------------------|---------------------|---------------------|---------------------|---|
| v1    | noAuthNoPriv | public (read only)   | defaultview         | none                | none                | Community string only   |
| v1    | noAuthNoPriv | private (read/write) | defaultview         | defaultview         | none                | Community string only   |
| v1    | noAuthNoPriv | <i>user defined</i>  | <i>user defined</i> | <i>user defined</i> | <i>user defined</i> | Community string only   |
| v2c   | noAuthNoPriv | public (read only)   | defaultview         | none                | none                | Community string only   |
| v2c   | noAuthNoPriv | private (read/write) | defaultview         | defaultview         | none                | Community string only   |
| v2c   | noAuthNoPriv | <i>user defined</i>  | <i>user defined</i> | <i>user defined</i> | <i>user defined</i> | Community string only   |
| v3    | noAuthNoPriv | <i>user defined</i>  | <i>user defined</i> | <i>user defined</i> | <i>user defined</i> | A user name match only  |
| v3    | AuthNoPriv   | <i>user defined</i>  | <i>user defined</i> | <i>user defined</i> | <i>user defined</i> | Provides user authentication via MD5 or SHA algorithms  |
| v3    | AuthPriv     | <i>user defined</i>  | <i>user defined</i> | <i>user defined</i> | <i>user defined</i> | Provides user authentication via MD5 or SHA algorithms and data privacy using DES 56-bit encryption |



**Note:** The predefined default groups and view can be deleted from the system. You can then define customized groups and views for the SNMP clients that require access.

## Command Usage

### *Configuring SNMPv1/2c Management Access*

To configure SNMPv1 or v2c management access to the switch, follow these steps:

1. Use the Administration > SNMP (Configure Global) page to enable SNMP on the switch, and to enable trap messages. Refer to: [“Configuring Global Settings for SNMP” on page 415](#)

2. Use the Administration > SNMP (Configure Community - Add) page to configure the community strings authorized for management access. Refer to: ["Setting Community Access Strings" on page 416](#)
3. Use the Administration > SNMP (Configure Trap) page to specify trap managers so that key events are reported by this switch to your management station. Refer to: ["Specifying Trap Managers" on page 433](#)

#### *Configuring SNMPv3 Management Access*

1. Use the Administration > SNMP (Configure Global) page to enable SNMP on the switch, and to enable trap messages. Refer to: ["Configuring Global Settings for SNMP" on page 415](#)
2. Use the Administration > SNMP (Configure Trap) page to specify trap managers so that key events are reported by this switch to your management station. Refer to: ["Specifying Trap Managers" on page 433](#)
3. Use the Administration > SNMP (Configure Engine) page to change the local engine ID. If you want to change the default engine ID, it must be changed before configuring other parameters. Refer to: ["Setting the Local Engine ID" on page 417](#)
4. Use the Administration > SNMP (Configure View) page to specify read and write access views for the switch MIB tree. Refer to: ["Setting SNMPv3 Views" on page 420](#)
5. Use the Administration > SNMP (Configure User) page to configure SNMP user groups with the required security model (i.e., SNMP v1, v2c or v3) and security level (i.e., authentication and privacy). Refer to: ["Configuring SNMPv3 Groups" on page 422](#)
6. Use the Administration > SNMP (Configure Group) page to assign SNMP users to groups, along with their specific authentication and privacy passwords. Refer to: ["Configuring Local SNMPv3 Users" on page 428](#)

#### **Configuring Global Settings for SNMP**

Use the Administration > SNMP (Configure Global) page to enable SNMPv3 service for all management clients (i.e., versions 1, 2c, 3), and to enable trap messages.

##### **Parameters**

These parameters are displayed:

- ◆ **Agent Status** – Enables SNMP on the switch. (Default: Enabled)
- ◆ **Authentication Traps**<sup>12</sup> – Issues a notification message to specified IP trap managers whenever an invalid community string is submitted during the SNMP access authentication process. (Default: Enabled)

---

12. These are legacy notifications and therefore when used for SNMPv3 hosts, they must be enabled in conjunction with the corresponding entries in the Notification View ([page 420](#)).

### Web Interface

To configure global settings for SNMP:

1. Click Administration, SNMP.
2. Select Configure Global from the Step list.
3. Enable SNMP and the required trap types.
4. Click Apply

**Figure 254: Configuring Global Settings for SNMP**

The screenshot shows a web interface for configuring SNMP. The title bar reads 'Administration > SNMP'. Below it, a 'Step:' dropdown menu is set to '1. Configure Global'. The main content area has two rows: 'Agent Status' with a checked checkbox and the text 'Enabled', and 'Authentication Traps' with a checked checkbox and the text 'Enabled'. At the bottom right, there are two buttons: 'Apply' and 'Revert'.

### Setting Community Access Strings

Use the Administration > SNMP (Configure Community) page to configure up to five community strings authorized for management access by clients using SNMP v1 and v2c. For security reasons, you should consider removing the default strings.

### Parameters

These parameters are displayed:

- ◆ **Community String** – A community string that acts like a password and permits access to the SNMP protocol.

Range: 1-32 characters, case sensitive

Default strings: "public" (Read-Only), "private" (Read/Write)

- ◆ **Access Mode** – Specifies the access rights for the community string:
  - **Read-Only** – Authorized management stations are only able to retrieve MIB objects.
  - **Read/Write** – Authorized management stations are able to both retrieve and modify MIB objects.

### Web Interface

To set a community access string:

1. Click Administration, SNMP.
2. Select Configure Community from the Step list.

3. Select Add from the Action list.
4. Add new community strings as required, and select the corresponding access rights from the Access Mode list.
5. Click Apply

**Figure 255: Setting Community Access Strings**

Administration > SNMP

Step: 2. Configure Community Action: Add

Community String spidermain

Access Mode Read/Write

Apply Revert

To show the community access strings:

1. Click Administration, SNMP.
2. Select Configure Community from the Step list.
3. Select Show from the Action list.

**Figure 256: Showing Community Access Strings**

Administration > SNMP

Step: 2. Configure Community Action: Show

SNMP Community String List Total: 3

|                          | Community String | Access Mode |
|--------------------------|------------------|-------------|
| <input type="checkbox"/> | public           | Read-Only   |
| <input type="checkbox"/> | private          | Read/Write  |
| <input type="checkbox"/> | spidermain       | Read/Write  |

Delete Revert

### Setting the Local Engine ID

Use the Administration > SNMP (Configure Engine - Set Engine ID) page to change the local engine ID. An SNMPv3 engine is an independent SNMP agent that resides on the switch. This engine protects against message replay, delay, and redirection. The engine ID is also used in combination with user passwords to generate the security keys for authenticating and encrypting SNMPv3 packets.

### Command Usage

A local engine ID is automatically generated that is unique to the switch. This is referred to as the default engine ID. If the local engine ID is deleted or changed, all SNMP users will be cleared. You will need to reconfigure all existing users.

### Parameters

These parameters are displayed:

- ◆ **Engine ID** – A new engine ID can be specified by entering 9 to 64 hexadecimal characters (5 to 32 octets in hexadecimal format). If an odd number of characters are specified, a trailing zero is added to the value to fill in the last octet. For example, the value “123456789” is equivalent to “1234567890”.
- ◆ **Engine Boots** – The number of times that the engine has (re-)initialized since the SNMP Engine ID was last configured.

### Web Interface

To configure the local SNMP engine ID:

1. Click Administration, SNMP.
2. Select Configure Engine from the Step list.
3. Select Set Engine ID from the Action list.
4. Enter an ID of a least 9 hexadecimal characters.
5. Click Apply

**Figure 257: Configuring the Local Engine ID for SNMP**

The screenshot shows a web interface for configuring SNMP. At the top, it says "Administration > SNMP". Below this, there are two dropdown menus: "Step:" with "2. Configure Engine" selected, and "Action:" with "Set Engine ID" selected. Below these, there are two input fields: "Engine ID" with the value "800001030300000c0000fd0000" entered, and "Engine Boots" with the value "5" entered. At the bottom right, there are two buttons: "Default" and "Save".

### Specifying a Remote Engine ID

Use the Administration > SNMP (Configure Engine - Add Remote Engine) page to configure a engine ID for a remote management station. To allow management access from an SNMPv3 user on a remote device, you must first specify the engine identifier for the SNMP agent on the remote device where the user resides. The remote engine ID is used to compute the security digest for authentication and encryption of packets passed between the switch and a user on the remote host.

### Command Usage

SNMP passwords are localized using the engine ID of the authoritative agent. For informs, the authoritative SNMP agent is the remote agent. You therefore need to configure the remote agent's SNMP engine ID before you can send proxy requests or informs to it. (See [“Configuring Remote SNMPv3 Users” on page 430.](#))

### Parameters

These parameters are displayed:

- ◆ **Remote Engine ID** – The engine ID can be specified by entering 9 to 64 hexadecimal characters (5 to 32 octets in hexadecimal format). If an odd number of characters are specified, a trailing zero is added to the value to fill in the last octet. For example, the value “123456789” is equivalent to “1234567890”.
- ◆ **Remote IP Host** – The IPv4 address of a remote management station which is using the specified engine ID.

### Web Interface

To configure a remote SNMP engine ID:

1. Click Administration, SNMP.
2. Select Configure Engine from the Step list.
3. Select Add Remote Engine from the Action list.
4. Enter an ID of a least 9 hexadecimal characters, and the IP address of the remote host.
5. Click Apply

**Figure 258: Configuring a Remote Engine ID for SNMP**

The screenshot shows a web interface titled "Administration > SNMP". It features a "Step:" dropdown menu set to "2. Configure Engine" and an "Action:" dropdown menu set to "Add Remote Engine". Below these, there are two input fields: "Remote Engine ID" with the value "5432100000" and "Remote IP Host" with the value "192.168.1.19". At the bottom right, there are two buttons: "Apply" and "Revert".

To show the remote SNMP engine IDs:

1. Click Administration, SNMP.
2. Select Configure Engine from the Step list.
3. Select Show Remote Engine from the Action list.

**Figure 259: Showing Remote Engine IDs for SNMP**

The screenshot shows the 'Administration > SNMP' configuration page. At the top, there is a 'Step:' dropdown menu set to '3. Configure Engine' and an 'Action:' dropdown menu set to 'Show Remote Engine'. Below this, the 'SNMPv3 Remote Engine List' is displayed with a 'Total: 1' count. The list contains one entry with the following details:

|                          | Remote Engine ID | Remote IP Host |
|--------------------------|------------------|----------------|
| <input type="checkbox"/> | 5432100000       | 192.168.1.19   |

At the bottom of the list, there are two buttons: 'Delete' and 'Revert'.

**Setting SNMPv3 Views** Use the Administration > SNMP (Configure View) page to configure SNMPv3 views which are used to restrict user access to specified portions of the MIB tree. The predefined view “defaultview” includes access to the entire MIB tree.

### Parameters

These parameters are displayed:

#### Add View

- ◆ **View Name** – The name of the SNMP view. (Range: 1-32 characters)
- ◆ **OID Subtree** – Specifies the initial object identifier of a branch within the MIB tree. Wild cards can be used to mask a specific portion of the OID string. Use the Add OID Subtree page to configure additional object identifiers. (Range: 1-64 characters)
- ◆ **Type** – Indicates if the object identifier of a branch within the MIB tree is included or excluded from the SNMP view.

#### Add OID Subtree

- ◆ **View Name** – Lists the SNMP views configured in the Add View page. (Range: 1-32 characters)
- ◆ **OID Subtree** – Adds an additional object identifier of a branch within the MIB tree to the selected View. Wild cards can be used to mask a specific portion of the OID string. (Range: 1-64 characters)
- ◆ **Type** – Indicates if the object identifier of a branch within the MIB tree is included or excluded from the SNMP view.

### Web Interface

To configure an SNMP view of the switch’s MIB database:

1. Click Administration, SNMP.
2. Select Configure View from the Step list.



3. Select Add View from the Action list.
4. Enter a view name and specify the initial OID subtree in the switch's MIB database to be included or excluded in the view. Use the Add OID Subtree page to add additional object identifier branches to the view.
5. Click Apply

**Figure 260: Creating an SNMP View**

Administration > SNMP

Step: 3. Configure View Action: Add View

View Name: ifEntry.a

OID Subtree: 1.3.6.1.2.1.2.2.1.1.\*

Type: Included

Apply Revert

To show the SNMP views of the switch's MIB database:

1. Click Administration, SNMP.
2. Select Configure View from the Step list.
3. Select Show View from the Action list.

**Figure 261: Showing SNMP Views**

Administration > SNMP

Step: 3. Configure View Action: Show View

SNMPv3 View List Total: 2

| <input type="checkbox"/> | View Name   |
|--------------------------|-------------|
| <input type="checkbox"/> | ifEntry.a   |
| <input type="checkbox"/> | defaultview |

Delete Revert

To add an object identifier to an existing SNMP view of the switch's MIB database:

1. Click Administration, SNMP.
2. Select Configure View from the Step list.
3. Select Add OID Subtree from the Action list.
4. Select a view name from the list of existing views, and specify an additional OID subtree in the switch's MIB database to be included or excluded in the view.

5. Click Apply

**Figure 262: Adding an OID Subtree to an SNMP View**

The screenshot shows the 'Administration > SNMP' configuration page. The 'Step' dropdown is set to '3. Configure View' and the 'Action' dropdown is set to 'Add OID Subtree'. The 'View Name' dropdown is set to 'ifEntry.a'. The 'OID Subtree' text field contains '1.3.6.1.2.1.2.2.1.2.\*'. The 'Type' dropdown is set to 'Included'. At the bottom right, there are 'Apply' and 'Revert' buttons.

To show the OID branches configured for the SNMP views of the switch's MIB database:

1. Click Administration, SNMP.
2. Select Configure View from the Step list.
3. Select Show OID Subtree from the Action list.
4. Select a view name from the list of existing views.

**Figure 263: Showing the OID Subtree Configured for SNMP Views**

The screenshot shows the 'Administration > SNMP' configuration page. The 'Step' dropdown is set to '3. Configure View' and the 'Action' dropdown is set to 'Show OID Subtree'. The 'View Name' dropdown is set to 'ifEntry.a'. Below the dropdowns, there is a section titled 'SNMPv3 View OID Subtree List' with a 'Total: 2' indicator. A table displays the configured OID subtrees:

|                          | OID Subtree           | Type     |
|--------------------------|-----------------------|----------|
| <input type="checkbox"/> | 1.3.6.1.2.1.2.2.1.1.* | Included |
| <input type="checkbox"/> | 1.3.6.1.2.1.2.2.1.2.* | Included |

At the bottom right, there are 'Delete' and 'Revert' buttons.

### Configuring SNMPv3 Groups

Use the Administration > SNMP (Configure Group) page to add an SNMPv3 group which can be used to set the access policy for its assigned users, restricting them to specific read, write, and notify views. You can use the pre-defined default groups or create new groups to map a set of SNMP users to SNMP views.

#### Parameters

These parameters are displayed:

- ◆ **Group Name** – The name of the SNMP group to which the user is assigned. (Range: 1-32 characters)

- ◆ **Security Model** – The user security model; SNMP v1, v2c or v3.
- ◆ **Security Level** – The following security levels are only used for the groups assigned to the SNMP security model:
  - **noAuthNoPriv** – There is no authentication or encryption used in SNMP communications. (This is the default security level.)
  - **AuthNoPriv** – SNMP communications use authentication, but the data is not encrypted.
  - **AuthPriv** – SNMP communications use both authentication and encryption.
- ◆ **Read View** – The configured view for read access. (Range: 1-32 characters)
- ◆ **Write View** – The configured view for write access. (Range: 1-32 characters)
- ◆ **Notify View** – The configured view for notifications. (Range: 1-32 characters)

**Table 28: Supported Notification Messages**

| Model                   | Level               | Group   |
|-------------------------|---------------------|---|
| <i>RFC 1493 Traps</i>   |                     |   |
| newRoot                 | 1.3.6.1.2.1.17.0.1  | The newRoot trap indicates that the sending agent has become the new root of the Spanning Tree; the trap is sent by a bridge soon after its election as the new root, e.g., upon expiration of the Topology Change Timer immediately subsequent to its election.  |
| topologyChange          | 1.3.6.1.2.1.17.0.2  | A topologyChange trap is sent by a bridge when any of its configured ports transitions from the Learning state to the Forwarding state, or from the Forwarding state to the Discarding state. The trap is not sent if a newRoot trap is sent for the same transition.   |
| <i>SNMPv2 Traps</i>     |                     |   |
| coldStart               | 1.3.6.1.6.3.1.1.5.1 | A coldStart trap signifies that the SNMPv2 entity, acting in an agent role, is reinitializing itself and that its configuration may have been altered.  |
| warmStart               | 1.3.6.1.6.3.1.1.5.2 | A warmStart trap signifies that the SNMPv2 entity, acting in an agent role, is reinitializing itself such that its configuration is unaltered.  |
| linkDown*               | 1.3.6.1.6.3.1.1.5.3 | A linkDown trap signifies that the SNMP entity, acting in an agent role, has detected that the ifOperStatus object for one of its communication links is about to enter the down state from some other state (but not from the notPresent state). This other state is indicated by the included value of ifOperStatus.        |
| linkUp*                 | 1.3.6.1.6.3.1.1.5.4 | A linkUp trap signifies that the SNMP entity, acting in an agent role, has detected that the ifOperStatus object for one of its communication links left the down state and transitioned into some other state (but not into the notPresent state). This other state is indicated by the included value of ifOperStatus.      |
| authenticationFailure*  | 1.3.6.1.6.3.1.1.5.5 | An authenticationFailure trap signifies that the SNMPv2 entity, acting in an agent role, has received a protocol message that is not properly authenticated. While all implementations of the SNMPv2 must be capable of generating this trap, the snmpEnableAuthenTraps object indicates whether this trap will be generated. |
| <i>RMON Events (V2)</i> |                     |   |
| risingAlarm             | 1.3.6.1.2.1.16.0.1  | The SNMP trap that is generated when an alarm entry crosses its rising threshold and generates an event that is configured for sending SNMP traps.  |
| fallingAlarm            | 1.3.6.1.2.1.16.0.2  | The SNMP trap that is generated when an alarm entry crosses its falling threshold and generates an event that is configured for sending SNMP traps.   |

**Table 28: Supported Notification Messages** (Continued)

| Model                         | Level                             | Group  |
|-------------------------------|-----------------------------------|--|
| <i>Private Traps</i>          |                                   |  |
| swPowerStatusChangeTrap       | 1.3.6.1.4.1.259.10.1.46.2.1.0.1   | This trap is sent when the power state changes.  |
| swPortSecurityTrap            | 1.3.6.1.4.1.259.10.1.46.2.1.0.36  | This trap is sent when the port is being intruded. This trap will only be sent when the portSecActionTrap is enabled.    |
| swIpFilterRejectTrap          | 1.3.6.1.4.1.259.10.1.46.2.1.0.40  | This trap is sent when an incorrect IP address is rejected by the IP Filter.   |
| swAtcBcastStormAlarmFireTrap  | 1.3.6.1.4.1.259.10.1.46.2.1.0.70  | When broadcast traffic is detected as a storm, this trap is fired.   |
| swAtcBcastStormAlarmClearTrap | 1.3.6.1.4.1.259.10.1.46.2.1.0.71  | When a broadcast storm is detected as normal traffic, this trap is fired.  |
| swAtcBcastStormTcApplyTrap    | 1.3.6.1.4.1.259.10.1.46.2.1.0.72  | When ATC is activated, this trap is fired.   |
| swAtcBcastStormTcReleaseTrap  | 1.3.6.1.4.1.259.10.1.46.2.1.0.73  | When ATC is released, this trap is fired.  |
| swAtcMcastStormAlarmFireTrap  | 1.3.6.1.4.1.259.10.1.46.2.1.0.74  | When multicast traffic is detected as the storm, this trap is fired.   |
| swAtcMcastStormAlarmClearTrap | 1.3.6.1.4.1.259.10.1.46.2.1.0.75  | When multicast storm is detected as normal traffic, this trap is fired.  |
| swAtcMcastStormTcApplyTrap    | 1.3.6.1.4.1.259.10.1.46.2.1.0.76  | When ATC is activated, this trap is fired.   |
| swAtcMcastStormTcReleaseTrap  | 1.3.6.1.4.1.259.10.1.46.2.1.0.77  | When ATC is released, this trap is fired.  |
| stpBpduGuardPortShutdownTrap  | 1.3.6.1.4.1.259.10.1.46.2.1.0.91  | This trap will be sent when an interface is shut down because of BPDU guard.   |
| swLoopbackDetectionTrap       | 1.3.6.1.4.1.259.10.1.46.2.1.0.95  | This trap is sent when loopback BPDUs have been detected.  |
| dot1agCfmMepUpTrap            | 1.3.6.1.4.1.259.10.1.46.2.1.0.97  | This trap is sent when a new remote MEP is discovered.   |
| dot1agCfmMepDownTrap          | 1.3.6.1.4.1.259.10.1.46.2.1.0.98  | This trap is sent when port status or interface status TLV received from remote MEP indicates it is not up.              |
| dot1agCfmConfigFailTrap       | 1.3.6.1.4.1.259.10.1.46.2.1.0.99  | This trap is sent when a MEP receives a CCM with MPID which already exists on the same MA in this switch.                |
| dot1agCfmLoopFindTrap         | 1.3.6.1.4.1.259.10.1.46.2.1.0.100 | This trap is sent when a MEP receives its own CCMs.  |
| dot1agCfmMepUnknownTrap       | 1.3.6.1.4.1.259.10.1.46.2.1.0.101 | This trap is sent when a CCM is received from an unexpected MEP.   |
| dot1agCfmMepMissingTrap       | 1.3.6.1.4.1.259.10.1.46.2.1.0.102 | This trap is sent when the cross-check enable timer expires and no CCMs were received from an expected (configured) MEP. |
| dot1agCfmMaUpTrap             | 1.3.6.1.4.1.259.10.1.46.2.1.0.103 | This trap is sent when all expected remote MEPs are up.  |
| autoUpgradeTrap               | 1.3.6.1.4.1.259.10.1.46.2.1.0.104 | This trap is sent when auto upgrade is executed.   |
| swCpuUtiRisingNotification    | 1.3.6.1.4.1.259.10.1.46.2.1.0.107 | This notification indicates that the CPU utilization has risen from cpuUtiFallingThreshold to cpuUtiRisingThreshold.     |

**Table 28: Supported Notification Messages** (Continued)

| Model                                    | Level                             | Group   |
|--|-----------------------------------|---|
| swCpuUtiFallingNotification              | 1.3.6.1.4.1.259.10.1.46.2.1.0.108 | This notification indicates that the CPU utilization has fallen from <code>cpuUtiRisingThreshold</code> to <code>cpuUtiFallingThreshold</code> .  |
| swMemoryUtiRisingThreshold Notification  | 1.3.6.1.4.1.259.10.1.46.2.1.0.109 | This notification indicates that the memory utilization has risen from <code>memoryUtiFallingThreshold</code> to <code>memoryUtiRisingThreshold</code> .  |
| swMemoryUtiFallingThreshold Notification | 1.3.6.1.4.1.259.10.1.46.2.1.0.110 | This notification indicates that the memory utilization has fallen from <code>memoryUtiRisingThreshold</code> to <code>memoryUtiFallingThreshold</code> .   |
| dhcpRogueServerAttackTrap                | 1.3.6.1.4.1.259.10.1.46.2.1.0.114 | This trap is sent when receiving a DHCP packet from a rogue server.   |
| macNotificationTrap                      | 1.3.6.1.4.1.259.10.1.46.2.1.0.138 | This trap is sent when there are changes of the dynamic MAC addresses on the switch.  |
| lbdDetectionTrap                         | 1.3.6.1.4.1.259.10.1.46.2.1.0.141 | This trap is sent when a loopback condition is detected by LBD.   |
| lbdRecoveryTrap                          | 1.3.6.1.4.1.259.10.1.46.2.1.0.142 | This trap is sent when a recovery is done by LBD.   |
| sfpThresholdAlarmWarnTrap                | 1.3.6.1.4.1.259.10.1.46.2.1.0.189 | This trap is sent when the sfp's A/D quantity is not within alarm/warning thresholds.   |
| userAuthenticationFailureTrap            | 1.3.6.1.4.1.259.10.1.46.2.1.0.199 | This trap will be triggered if authentication fails.  |
| userAuthenticationSuccessTrap            | 1.3.6.1.4.1.259.10.1.46.2.1.0.200 | This trap will be triggered if authentication is successful.  |
| loginTrap                                | 1.3.6.1.4.1.259.10.1.46.2.1.0.201 | This trap is sent when user logs in.  |
| logoutTrap                               | 1.3.6.1.4.1.259.10.1.46.2.1.0.202 | This trap is sent when user logs out.   |
| fileCopyTrap                             | 1.3.6.1.4.1.259.10.1.46.2.1.0.208 | This trap is sent when file copy is executed.<br>If the copy action is triggered by the system, the login user information ( <code>trapVarLoginUserName/</code><br><code>trapVarSessionType/</code><br><code>trapVarLoginInetAddressTypes/</code><br><code>trapVarLoginInetAddress</code> ) will be a null value. |
| userauthCreateUserTrap                   | 1.3.6.1.4.1.259.10.1.46.2.1.0.209 | This trap is sent when a user account is created.   |
| userauthDeleteUserTrap                   | 1.3.6.1.4.1.259.10.1.46.2.1.0.210 | This trap is sent when a user account is deleted.   |
| userauthModifyUserPrivilegeTrap          | 1.3.6.1.4.1.259.10.1.46.2.1.0.211 | This trap is sent when user privilege is modified.  |
| cpuGuardControlTrap                      | 1.3.6.1.4.1.259.10.1.46.2.1.0.213 | This trap is sent when CPU utilization rises above the high-watermark the first time or when CPU utilization rises from below the low-watermark to above the high-watermark.  |
| cpuGuardReleaseTrap                      | 1.3.6.1.4.1.259.10.1.46.2.1.0.214 | This trap is sent when CPU utilization falls from above the high-watermark to below the low-watermark.  |

\* These are legacy notifications and therefore must be enabled in conjunction with the corresponding traps on the SNMP Configuration menu.

## Web Interface

To configure an SNMP group:

1. Click Administration, SNMP.
2. Select Configure Group from the Step list.
3. Select Add from the Action list.
4. Enter a group name, assign a security model and level, and then select read, write, and notify views.
5. Click Apply

**Figure 264: Creating an SNMP Group**

Administration > SNMP

Step: 4. Configure Group Action: Add

Group Name:

Security Model:

Security Level:

Read View: ☒ ifEntry.a ☐

Write View: ☒ ifEntry.a ☐

Notify View: ☒ ifEntry.a ☐

Apply Revert

To show SNMP groups:

1. Click Administration, SNMP.
2. Select Configure Group from the Step list.
3. Select Show from the Action list.

**Figure 265: Showing SNMP Groups**

Administration > SNMP

Step: 4. Configure Group Action: Show

SNMPv3 Group List Total: 4

|                          | Group Name | Model | Level        | Read View   | Write View             | Notify View             |
|--------------------------|------------|-------|--------------|-------------|------------------------|-------------------------|
| <input type="checkbox"/> | public     | v1    | noAuthNoPriv | defaultview | No writeview specified | No notifyview specified |
| <input type="checkbox"/> | public     | v2c   | noAuthNoPriv | defaultview | No writeview specified | No notifyview specified |
| <input type="checkbox"/> | private    | v1    | noAuthNoPriv | defaultview | defaultview            | No notifyview specified |
| <input type="checkbox"/> | private    | v2c   | noAuthNoPriv | defaultview | defaultview            | No notifyview specified |

Delete Revert

## **Configuring Local SNMPv3 Users**

Use the Administration > SNMP (Configure User - Add SNMPv3 Local User) page to authorize management access for SNMPv3 clients, or to identify the source of SNMPv3 trap messages sent from the local switch. Each SNMPv3 user is defined by a unique name. Users must be configured with a specific security level and assigned to a group. The SNMPv3 group restricts users to a specific read, write, and notify view.

### **Parameters**

These parameters are displayed:

- ◆ **User Name** – The name of user connecting to the SNMP agent.  
(Range: 1-32 characters)
- ◆ **Group Name** – The name of the SNMP group to which the user is assigned.  
(Range: 1-32 characters)
- ◆ **Security Model** – The user security model; SNMP v1, v2c or v3.
- ◆ **Security Level** – The following security levels are only used for the groups assigned to the SNMP security model:
  - **noAuthNoPriv** – There is no authentication or encryption used in SNMP communications. (This is the default security level.)
  - **AuthNoPriv** – SNMP communications use authentication, but the data is not encrypted.
  - **AuthPriv** – SNMP communications use both authentication and encryption.
- ◆ **Authentication Protocol** – The method used for user authentication.  
(Options: MD5, SHA; Default: MD5)
- ◆ **Authentication Password** – A minimum of eight plain text characters is required. (Range: 8-32 characters)
- ◆ **Privacy Protocol** – The encryption algorithm use for data privacy; only 56-bit DES is currently available.
- ◆ **Privacy Password** – A minimum of eight plain text characters is required.

### **Web Interface**

To configure a local SNMPv3 user:

1. Click Administration, SNMP.
2. Select Configure User from the Step list.
3. Select Add SNMPv3 Local User from the Action list.



4. Enter a name and assign it to a group. If the security model is set to SNMPv3 and the security level is authNoPriv or authPriv, then an authentication protocol and password must be specified. If the security level is authPriv, a privacy password must also be specified.

5. Click Apply

**Figure 266: Configuring Local SNMPv3 Users**

Administration > SNMP

Step: 5. Configure User Action: Add SNMPv3 Local User

**SNMPv3 User**

User Name:

Group Name: ☐ public ☒ r&d

Security Model:

Security Level:

**User Authentication**

Authentication Protocol:

Authentication Password:

**Data Privacy**

Privacy Protocol:

Privacy Password:

To show local SNMPv3 users:

1. Click Administration, SNMP.
2. Select Configure User from the Step list.
3. Select Show SNMPv3 Local User from the Action list.

**Figure 267: Showing Local SNMPv3 Users**

Administration > SNMP

Step: 5. Configure User Action: Show SNMPv3 Local User

SNMPv3 Local User List Total: 1

| <input type="checkbox"/> | User Name | Group Name | Model | Level    | Authentication | Privacy |
|--------------------------|-----------|------------|-------|----------|----------------|---------|
| <input type="checkbox"/> | chris     | r&d        | v3    | authPriv | MD5            | DES56   |

To change a local SNMPv3 local user group:

1. Click Administration, SNMP.

2. Select Change SNMPv3 Local User Group from the Action list.
3. Select the User Name.
4. Enter a new group name.
5. Click Apply

**Figure 268: Changing a Local SNMPv3 User Group**

The screenshot shows a web interface for configuring SNMPv3 users. The breadcrumb is 'Administration > SNMP'. The 'Step' dropdown is set to '5. Configure User' and the 'Action' dropdown is set to 'Change SNMPv3 Local User Group'. Under 'User Name', a dropdown menu shows 'chris'. Under 'Group Name', there are two radio buttons: 'bart' (selected) and 'public'. At the bottom right are 'Apply' and 'Revert' buttons.

### Configuring Remote SNMPv3 Users

Use the Administration > SNMP (Configure User - Add SNMPv3 Remote User) page to identify the source of SNMPv3 inform messages sent from the local switch. Each SNMPv3 user is defined by a unique name. Users must be configured with a specific security level and assigned to a group. The SNMPv3 group restricts users to a specific read, write, and notify view.

#### Command Usage

- ◆ To grant management access to an SNMPv3 user on a remote device, you must first specify the engine identifier for the SNMP agent on the remote device where the user resides. The remote engine ID is used to compute the security digest for authentication and encryption of packets passed between the switch and the remote user. (See [“Specifying Trap Managers” on page 433](#) and [“Specifying a Remote Engine ID” on page 418.](#))

#### Parameters

These parameters are displayed:

- ◆ **User Name** – The name of user connecting to the SNMP agent.  
(Range: 1-32 characters)
- ◆ **Group Name** – The name of the SNMP group to which the user is assigned.  
(Range: 1-32 characters)
- ◆ **Remote IP** – IPv4 address of the remote device where the user resides.
- ◆ **Security Model** – The user security model; SNMP v1, v2c or v3. (Default: v3)
- ◆ **Security Level** – The following security levels are only used for the groups assigned to the SNMP security model:

- **noAuthNoPriv** – There is no authentication or encryption used in SNMP communications. (This is the default security level.)
- **AuthNoPriv** – SNMP communications use authentication, but the data is not encrypted.
- **AuthPriv** – SNMP communications use both authentication and encryption.
- ◆ **Authentication Protocol** – The method used for user authentication. (Options: MD5, SHA; Default: MD5)
- ◆ **Authentication Password** – A minimum of eight plain text characters is required.
- ◆ **Privacy Protocol** – The encryption algorithm use for data privacy; only 56-bit DES is currently available.
- ◆ **Privacy Password** – A minimum of eight plain text characters is required.

#### Web Interface

To configure a remote SNMPv3 user:

1. Click Administration, SNMP.
2. Select Configure User from the Step list.
3. Select Add SNMPv3 Remote User from the Action list.
4. Enter a name and assign it to a group. Enter the IP address to identify the source of SNMPv3 inform messages sent from the local switch. If the security model is set to SNMPv3 and the security level is authNoPriv or authPriv, then an authentication protocol and password must be specified. If the security level is authPriv, a privacy password must also be specified.
5. Click Apply

**Figure 269: Configuring Remote SNMPv3 Users**

**Administration > SNMP**

Step: **5. Configure User** Action: **Add SNMPv3 Remote User**

**SNMPv3 User**

User Name:

Group Name: ☐ public ☒ r&d

Remote IP:

Security Model:

Security Level:

**User Authentication**

Authentication Protocol:

Authentication Password:

**Data Privacy**

Privacy Protocol:

Privacy Password:

To show remote SNMPv3 users:

1. Click Administration, SNMP.
2. Select Configure User from the Step list.
3. Select Show SNMPv3 Remote User from the Action list.

**Figure 270: Showing Remote SNMPv3 Users**

**Administration > SNMP**

Step: **5. Configure User** Action: **Show SNMPv3 Remote User**

**SNMPv3 Remote User List** Total: 1

| <input type="checkbox"/> | User Name | Group Name | Engine ID  | Model | Level    | Authentication | Privacy |
|--------------------------|-----------|------------|------------|-------|----------|----------------|---------|
| <input type="checkbox"/> | mark      | r&d        | 5432100000 | v3    | authPriv | MD5            | DES56   |

## Specifying Trap Managers

Use the Administration > SNMP (Configure Trap) page to specify the host devices to be sent traps and the types of traps to send. Traps indicating status changes are issued by the switch to the specified trap managers. You must specify trap managers so that key events are reported by this switch to your management station (using network management software). You can specify up to five management stations that will receive authentication failure messages and other trap messages from the switch.

### Command Usage

- ◆ Notifications are issued by the switch as trap messages by default. The recipient of a trap message does not send a response to the switch. Traps are therefore not as reliable as inform messages, which include a request for acknowledgement of receipt. Informs can be used to ensure that critical information is received by the host. However, note that informs consume more system resources because they must be kept in memory until a response is received. Informs also add to network traffic. You should consider these effects when deciding whether to issue notifications as traps or informs.

To send an inform to a SNMPv2c host, complete these steps:

1. Enable the SNMP agent ([page 415](#)).
2. Create a view with the required notification messages ([page 420](#)).
3. Configure the group (matching the community string specified on the Configure Trap - Add page) to include the required notify view ([page 422](#)).
4. Enable trap informs as described in the following pages.

To send an inform to a SNMPv3 host, complete these steps:

1. Enable the SNMP agent ([page 415](#)).
2. Create a remote SNMPv3 user to use in the message exchange process ([page 428](#)). If the user specified in the trap configuration page does not exist, an SNMPv3 group will be automatically created using the name of the specified remote user, and default settings for the read, write, and notify view.
3. Create a view with the required notification messages ([page 420](#)).
4. Create a group that includes the required notify view ([page 422](#)).
5. Enable trap informs as described in the following pages.

### Parameters

These parameters are displayed:

#### *SNMP Version 1*

- ◆ **IP Address** – IPv4 or IPv6 address of a new management station to receive notification message (i.e., the targeted recipient).
- ◆ **Version** – Specifies whether to send notifications as SNMP v1, v2c, or v3 traps. (Default: v1)

- ◆ **Community String** – Specifies a valid community string for the new trap manager entry. (Range: 1-32 characters, case sensitive)

Although you can set this string in the Configure Trap – Add page, we recommend defining it in the Configure User – Add Community page.

- ◆ **UDP Port** – Specifies the UDP port number used by the trap manager. (Default: 162)

#### *SNMP Version 2c*

- ◆ **IP Address** – IPv4 or IPv6 address of a new management station to receive notification message (i.e., the targeted recipient).
- ◆ **Version** – Specifies whether to send notifications as SNMP v1, v2c, or v3 traps.
- ◆ **Notification Type**

- **Traps** – Notifications are sent as trap messages.
- **Inform** – Notifications are sent as inform messages. Note that this option is only available for version 2c and 3 hosts. (Default: traps are used)
  - **Timeout** – The number of seconds to wait for an acknowledgment before resending an inform message. (Range: 0-2147483647 centiseconds; Default: 1500 centiseconds)
  - **Retry times** – The maximum number of times to resend an inform message if the recipient does not acknowledge receipt. (Range: 0-255; Default: 3)

- ◆ **Community String** – Specifies a valid community string for the new trap manager entry. (Range: 1-32 characters, case sensitive)

Although you can set this string in the Configure Trap – Add page, we recommend defining it in the Configure User – Add Community page.

- ◆ **UDP Port** – Specifies the UDP port number used by the trap manager. (Default: 162)

#### *SNMP Version 3*

- ◆ **IP Address** – IPv4 or IPv6 address of a new management station to receive notification message (i.e., the targeted recipient).
- ◆ **Version** – Specifies whether to send notifications as SNMP v1, v2c, or v3 traps.
- ◆ **Notification Type**
  - **Traps** – Notifications are sent as trap messages.

- **Inform** – Notifications are sent as inform messages. Note that this option is only available for version 2c and 3 hosts. (Default: traps are used)
- **Timeout** – The number of seconds to wait for an acknowledgment before resending an inform message. (Range: 0-2147483647 centiseconds; Default: 1500 centiseconds)
- **Retry times** – The maximum number of times to resend an inform message if the recipient does not acknowledge receipt. (Range: 0-255; Default: 3)
- ◆ **Local User Name** – The name of a local user which is used to identify the source of SNMPv3 trap messages sent from the local switch. (Range: 1-32 characters)  
  
If an account for the specified user has not been created ([page 428](#)), one will be automatically generated.
- ◆ **Remote User Name** – The name of a remote user which is used to identify the source of SNMPv3 inform messages sent from the local switch. (Range: 1-32 characters)  
  
If an account for the specified user has not been created ([page 430](#)), one will be automatically generated.
- ◆ **UDP Port** – Specifies the UDP port number used by the trap manager. (Default: 162)
- ◆ **Security Level** – When trap version 3 is selected, you must specify one of the following security levels. (Default: noAuthNoPriv)
  - **noAuthNoPriv** – There is no authentication or encryption used in SNMP communications.
  - **AuthNoPriv** – SNMP communications use authentication, but the data is not encrypted.
  - **AuthPriv** – SNMP communications use both authentication and encryption.

### Web Interface

To configure trap managers:

1. Click Administration, SNMP.
2. Select Configure Trap from the Step list.
3. Select Add from the Action list.
4. Fill in the required parameters based on the selected SNMP version.

5. Click Apply

**Figure 271: Configuring Trap Managers (SNMPv1)**

**Administration > SNMP**

Step: 6. Configure Trap Action: Add

IP Address 192.168.0.3

Version v1

Community String private

UDP Port (1-65535) 162

Apply Revert

**Figure 272: Configuring Trap Managers (SNMPv2c)**

**Administration > SNMP**

Step: 6. Configure Trap Action: Add

IP Address 192.168.2.9

Version v2c

Notification Type Inform

Timeout (0-2147483647) centiseconds

Retry Times (0-255)

Community String venus

UDP Port (1-65535)

Apply Revert

**Figure 273: Configuring Trap Managers (SNMPv3)**

**Administration > SNMP**

Step: 6. Configure Trap Action: Add

IP Address 192.168.2.9

Version v3

Notification Type Inform

Timeout (0-2147483647) centiseconds

Retry Times (0-255)

Remote User Name

UDP Port (1-65535)

Security Level authPriv

Apply Revert



To show configured trap managers:

1. Click Administration, SNMP.
2. Select Configure Trap from the Step list.
3. Select Show from the Action list.

**Figure 274: Showing Trap Managers**

Administration > SNMP

Step: 6. Configure Trap Action: Show

SNMP Trap Manager List Total: 5

| <input type="checkbox"/> | IP Address  | Version | Community String/User Name | UDP Port | Security Level | Timeout | Retry Times |
|--------------------------|-------------|---------|----------------------------|----------|----------------|---------|-------------|
| <input type="checkbox"/> | 192.168.0.4 | v3      | steve                      | 162      | noAuthNoPriv   |         |             |
| <input type="checkbox"/> | 192.168.0.5 | v3      | bobby                      | 162      | noAuthNoPriv   |         |             |
| <input type="checkbox"/> | 192.168.0.6 | v3      | betty                      | 162      | authNoPriv     |         |             |
| <input type="checkbox"/> | 192.168.2.9 | v2c     | venus                      | 162      |                | 1600    | 5           |
| <input type="checkbox"/> | 192.168.5.8 | v3      | margaret                   | 162      | authPriv       | 1600    | 5           |

Delete

Revert

### Creating SNMP Notification Logs

Use the Administration > SNMP (Configure Notify Filter - Add) page to create an SNMP notification log.

### Command Usage

- ◆ Systems that support SNMP often need a mechanism for recording Notification information as a hedge against lost notifications, whether there are Traps or Informs that may be exceeding retransmission limits. The Notification Log MIB (NLM, RFC 3014) provides an infrastructure in which information from other MIBs may be logged.
- ◆ Given the service provided by the NLM, individual MIBs can now bear less responsibility to record transient information associated with an event against the possibility that the Notification message is lost, and applications can poll the log to verify that they have not missed any important Notifications.
- ◆ If notification logging is not configured, when the switch reboots, some SNMP traps (such as warm start) cannot be logged.
- ◆ To avoid this problem, notification logging should be configured as described in this section, and these commands stored in the startup configuration file using the System > File (Copy – Running-Config) page as described on [page 79](#). Then when the switch reboots, SNMP traps (such as warm start) can now be logged.
- ◆ Based on the default settings used in RFC 3014, a notification log can contain up to 256 entries, and the entry aging time is 1440 minutes. Information recorded in a notification log, and the entry aging time can only be configured using SNMP from a network management station.

- ◆ When a trap host is created using the Administration > SNMP (Configure Trap – Add) page described on [page 433](#), a default notify filter will be created.

### Parameters

These parameters are displayed:

- ◆ **IP Address** – The IPv4 or IPv6 address of a remote device. The specified target host must already have been configured using the Administration > SNMP (Configure Trap – Add) page.

The notification log is stored locally. It is not sent to a remote device. This remote host parameter is only required to complete mandatory fields in the SNMP Notification MIB.

- ◆ **Filter Profile Name** – Notification log profile name. (Range: 1-32 characters)

### Web Interface

To create an SNMP notification log:

1. Click Administration, SNMP.
2. Select Configure Notify Filter from the Step list.
3. Select Add from the Action list.
4. Fill in the IP address of a configured trap manager and the filter profile name.
5. Click Apply


**Figure 275: Creating SNMP Notification Logs**

The screenshot shows a web interface titled "Administration > SNMP". Below the title, there are two dropdown menus: "Step:" with "7. Configure Notify Filter" selected, and "Action:" with "Add" selected. Below these, there are two text input fields: "IP Address" with the value "192.168.0.99" and "Filter Profile Name" with the value "R&D". At the bottom right, there are two buttons: "Apply" and "Revert".

To show configured SNMP notification logs:

1. Click Administration, SNMP.
2. Select Configure Notify Filter from the Step list.
3. Select Show from the Action list.

**Figure 276: Showing SNMP Notification Logs**

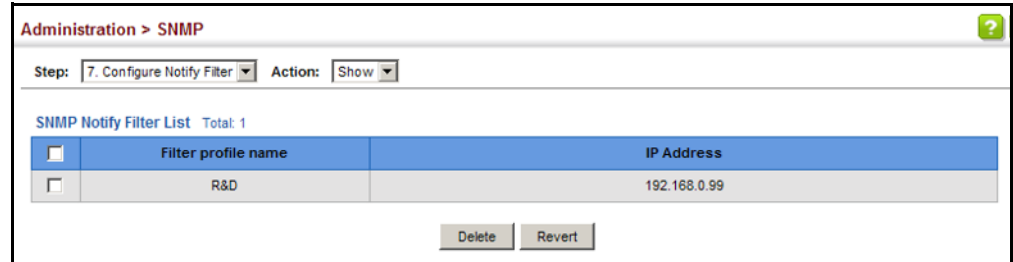

### Showing SNMP Statistics

Use the Administration > SNMP (Show Statistics) page to show counters for SNMP input and output protocol data units.

#### Parameters

The following counters are displayed:

- ◆ **SNMP packets input** – The total number of messages delivered to the SNMP entity from the transport service.
- ◆ **Bad SNMP version errors** – The total number of SNMP messages which were delivered to the SNMP entity and were for an unsupported SNMP version.
- ◆ **Unknown community name** – The total number of SNMP messages delivered to the SNMP entity which used a SNMP community name not known to said entity.
- ◆ **Illegal operation for community name supplied** – The total number of SNMP messages delivered to the SNMP entity which represented an SNMP operation which was not allowed by the SNMP community named in the message.
- ◆ **Encoding errors** – The total number of ASN.1 or BER errors encountered by the SNMP entity when decoding received SNMP messages.
- ◆ **Number of requested variables** – The total number of MIB objects which have been retrieved successfully by the SNMP protocol entity as the result of receiving valid SNMP Get-Request and Get-Next PDUs.
- ◆ **Number of altered variables** – The total number of MIB objects which have been altered successfully by the SNMP protocol entity as the result of receiving valid SNMP Set-Request PDUs.
- ◆ **Get-request PDUs** – The total number of SNMP Get-Request PDUs which have been accepted and processed, or generated, by the SNMP protocol entity.
- ◆ **Get-next PDUs** – The total number of SNMP Get-Next PDUs which have been accepted and processed, or generated, by the SNMP protocol entity.
- ◆ **Set-request PDUs** – The total number of SNMP Set-Request PDUs which have been accepted and processed, or generated, by the SNMP protocol entity.

- ◆ **SNMP packets output** – The total number of SNMP Messages which were passed from the SNMP protocol entity to the transport service.
- ◆ **Too big errors** – The total number of SNMP PDUs which were generated by the SNMP protocol entity and for which the value of the error-status field is “tooBig.”
- ◆ **No such name errors** – The total number of SNMP PDUs which were delivered to, or generated by, the SNMP protocol entity and for which the value of the error-status field is “noSuchName.”
- ◆ **Bad values errors** – The total number of SNMP PDUs which were delivered to, or generated by, the SNMP protocol entity and for which the value of the error-status field is “badValue.”
- ◆ **General errors** – The total number of SNMP PDUs which were delivered to, or generated by, the SNMP protocol entity and for which the value of the error-status field is “genErr.”
- ◆ **Response PDUs** – The total number of SNMP Get-Response PDUs which have been accepted and processed by, or generated by, the SNMP protocol entity.
- ◆ **Trap PDUs** – The total number of SNMP Trap PDUs which have been accepted and processed by, or generated by, the SNMP protocol entity.

### Web Interface

To show SNMP statistics:

1. Click Administration, SNMP.
2. Select Show Statistics from the Step list.

**Figure 277: Showing SNMP Statistics**

| Administration > SNMP                         |   |                     |   |
|---|---|---------------------|---|
| Step: 8. Show Statistics                      |   |                     |   |
| SNMP Statistics                               |   |                     |   |
| SNMP packets Input                            | 0 | SNMP packets Output | 0 |
| Bad SNMP version errors                       | 0 | Too big errors      | 0 |
| Unknown community name                        | 0 | No such name errors | 0 |
| Illegal operation for community name supplied | 0 | Bad values errors   | 0 |
| Encoding errors                               | 0 | General errors      | 0 |
| Number of requested variables                 | 0 | Response PDUs       | 0 |
| Number of altered variables                   | 0 | Trap PDUs           | 0 |
| Get-request PDUs                              | 0 |                     |   |
| Get-next PDUs                                 | 0 |                     |   |
| Set-request PDUs                              | 0 |                     |   |
| Refresh                                       |   |                     |   |

## Remote Monitoring

Remote Monitoring allows a remote device to collect information or respond to specified events on an independent basis. This switch is an RMON-capable device which can independently perform a wide range of tasks, significantly reducing network management traffic. It can continuously run diagnostics and log information on network performance. If an event is triggered, it can automatically notify the network administrator of a failure and provide historical information about the event. If it cannot connect to the management agent, it will continue to perform any specified tasks and pass data back to the management station the next time it is contacted.

The switch supports mini-RMON, which consists of the Statistics, History, Event and Alarm groups. When RMON is enabled, the system gradually builds up information about its physical interfaces, storing this information in the relevant RMON database group. A management agent then periodically communicates with the switch using the SNMP protocol. However, if the switch encounters a critical event, it can automatically send a trap message to the management agent which can then respond to the event if so configured.

### Configuring RMON Alarms

Use the Administration > RMON (Configure Global - Add - Alarm) page to define specific criteria that will generate response events. Alarms can be set to test data over any specified time interval, and can monitor absolute or changing values (such as a statistical counter reaching a specific value, or a statistic changing by a certain amount over the set interval). Alarms can be set to respond to rising or falling thresholds. (However, note that after an alarm is triggered it will not be triggered again until the statistical value crosses the opposite bounding threshold and then back across the trigger threshold.

### Command Usage

- ◆ If an alarm is already defined for an index, the entry must be deleted before any changes can be made.

### Parameters

These parameters are displayed:

- ◆ **Index** – Index to this entry. (Range: 1-65535)
- ◆ **Variable** – The object identifier of the MIB variable to be sampled. Only variables of the type etherStatsEntry.n.n may be sampled.

Note that etherStatsEntry.n uniquely defines the MIB variable, and etherStatsEntry.n.n defines the MIB variable, plus the etherStatsIndex. For example, 1.3.6.1.2.1.16.1.1.1.6.1 denotes etherStatsBroadcastPkts, plus the etherStatsIndex of 1.

- ◆ **Interval** – The polling interval. (Range: 1-31622400 seconds)

- ◆ **Sample Type** – Tests for absolute or relative changes in the specified variable.
  - **Absolute** – The variable is compared directly to the thresholds at the end of the sampling period.
  - **Delta** – The last sample is subtracted from the current value and the difference is then compared to the thresholds.
- ◆ **Rising Threshold** – If the current value is greater than or equal to the rising threshold, and the last sample value was less than this threshold, then an alarm will be generated. After a rising event has been generated, another such event will not be generated until the sampled value has fallen below the rising threshold, reaches the falling threshold, and again moves back up to the rising threshold. (Range: 0-2147483647)
- ◆ **Rising Event Index** – The index of the event to use if an alarm is triggered by monitored variables reaching or crossing above the rising threshold. If there is no corresponding entry in the event control table, then no event will be generated. (Range: 0-65535)
- ◆ **Falling Threshold** – If the current value is less than or equal to the falling threshold, and the last sample value was greater than this threshold, then an alarm will be generated. After a falling event has been generated, another such event will not be generated until the sampled value has risen above the falling threshold, reaches the rising threshold, and again moves back down to the failing threshold. (Range: 0-2147483647)
- ◆ **Falling Event Index** – The index of the event to use if an alarm is triggered by monitored variables reaching or crossing below the falling threshold. If there is no corresponding entry in the event control table, then no event will be generated. (Range: 0-65535)
- ◆ **Owner** – Name of the person who created this entry. (Range: 1-32 characters)

### Web Interface

To configure an RMON alarm:

1. Click Administration, RMON.
2. Select Configure Global from the Step list.
3. Select Add from the Action list.
4. Click Alarm.
5. Enter an index number, the MIB object to be polled (etherStatsEntry.n.n), the polling interval, the sample type, the thresholds, and the event to trigger.
6. Click Apply

**Figure 278: Configuring an RMON Alarm**

**Administration > RMON**

Step: 1. Configure Global Action: Add

☒ Alarm ☐ Event

Index (1-65535)

Variable

Interval (1-31622400)  sec

Sample Type

Rising Threshold (0-2147483647)

Rising Event Index (0-65535)

Falling Threshold (0-2147483647)

Falling Event Index (0-65535)

Owner

To show configured RMON alarms:

1. Click Administration, RMON.
2. Select Configure Global from the Step list.
3. Select Show from the Action list.
4. Click Alarm.

**Figure 279: Showing Configured RMON Alarms**

**Administration > RMON**

Step: 1. Configure Global Action: Show

☒ Alarm ☐ Event

RMON Alarm List Total: 52

|                          | Index | Status | Variable                 | Interval | Type  | Last Value | Rising Threshold | Rising Event Index | Falling Threshold | Falling Event Index | Owner |
|--------------------------|-------|--------|--------------------------|----------|-------|------------|------------------|--------------------|-------------------|---------------------|-------|
| <input type="checkbox"/> | 1     | Valid  | 1.3.6.1.2.1.16.1.1.1.6.1 | 30       | Delta | 0          | 892800           | 0                  | 446400            | 0                   |       |
| <input type="checkbox"/> | 2     | Valid  | 1.3.6.1.2.1.16.1.1.1.6.2 | 30       | Delta | 0          | 892800           | 0                  | 446400            | 0                   |       |
| <input type="checkbox"/> | 3     | Valid  | 1.3.6.1.2.1.16.1.1.1.6.3 | 30       | Delta | 0          | 892800           | 0                  | 446400            | 0                   |       |
| <input type="checkbox"/> | 4     | Valid  | 1.3.6.1.2.1.16.1.1.1.6.4 | 30       | Delta | 0          | 892800           | 0                  | 446400            | 0                   |       |
| <input type="checkbox"/> | 5     | Valid  | 1.3.6.1.2.1.16.1.1.1.6.5 | 30       | Delta | 0          | 892800           | 0                  | 446400            | 0                   |       |

## Configuring RMON Events

Use the Administration > RMON (Configure Global - Add - Event) page to set the action to take when an alarm is triggered. The response can include logging the alarm or sending a message to a trap manager. Alarms and corresponding events provide a way of immediately responding to critical network problems.

### Command Usage

- ◆ If an alarm is already defined for an index, the entry must be deleted before any changes can be made.
- ◆ One default event is configured as follows:  
event Index = 1  
Description: RMON\_TRAP\_LOG  
Event type: log & trap  
Event community name is public  
Owner is RMON\_SNMP

### Parameters

These parameters are displayed:

- ◆ **Index** – Index to this entry. (Range: 1-65535)
- ◆ **Type** – Specifies the type of event to initiate:
  - **None** – No event is generated.
  - **Log** – Generates an RMON log entry when the event is triggered. Log messages are processed based on the current configuration settings for event logging (see [“System Log Configuration” on page 382](#)).
  - **Trap** – Sends a trap message to all configured trap managers (see [“Specifying Trap Managers” on page 433](#)).
  - **Log and Trap** – Logs the event and sends a trap message.
- ◆ **Community** – A password-like community string sent with the trap operation to SNMP v1 and v2c hosts.  
  
Although the community string can be set on this configuration page, it is recommended that it be defined on the SNMP trap configuration page (see [“Setting Community Access Strings” on page 426](#)) prior to configuring it here. (Range: 1-32 characters)
- ◆ **Description** – A comment that describes this event. (Range: 1-127 characters)
- ◆ **Owner** – Name of the person who created this entry. (Range: 1-32 characters)




### Web Interface

To configure an RMON event:

1. Click Administration, RMON.
2. Select Configure Global from the Step list.
3. Select Add from the Action list.
4. Click Event.
5. Enter an index number, the type of event to initiate, the community string to send with trap messages, the name of the person who created this event, and a brief description of the event.
6. Click Apply

**Figure 280: Configuring an RMON Event**

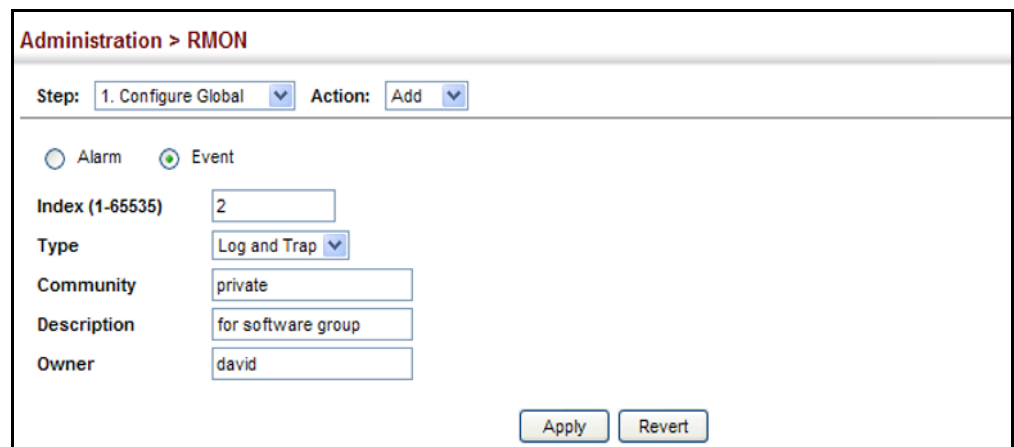

The screenshot shows the 'Administration > RMON' web interface. At the top, there is a 'Step:' dropdown menu set to '1. Configure Global' and an 'Action:' dropdown menu set to 'Add'. Below this, there are two radio buttons: 'Alarm' (unselected) and 'Event' (selected). The form contains several input fields: 'Index (1-65535)' with the value '2', 'Type' with a dropdown menu set to 'Log and Trap', 'Community' with the value 'private', 'Description' with the value 'for software group', and 'Owner' with the value 'david'. At the bottom right of the form, there are two buttons: 'Apply' and 'Revert'.

To show configured RMON events:

1. Click Administration, RMON.
2. Select Configure Global from the Step list.
3. Select Show from the Action list.
4. Click Event.

**Figure 281: Showing Configured RMON Events**

The screenshot shows the 'Administration > RMON' configuration page. At the top, there is a breadcrumb 'Administration > RMON' and a green help icon. Below this, there are two dropdown menus: 'Step: 1. Configure Global' and 'Action: Show'. Underneath, there are two radio buttons: 'Alarm' (unselected) and 'Event' (selected). The main section is titled 'RMON Event List Total: 4'. It contains a table with 8 columns: Index, Status, Type, Community, Description, Owner, and Last Fired. There are four rows of data. At the bottom of the table, there are 'Delete' and 'Revert' buttons.

|                          | Index | Status | Type         | Community    | Description  | Owner        | Last Fired |
|--------------------------|-------|--------|--------------|--------------|--------------|--------------|------------|
| <input type="checkbox"/> | 1     | Valid  | None         |              | None         | None         | 00:00:00   |
| <input type="checkbox"/> | 2     | Valid  | Log          |              | Log          | Log          | 00:00:00   |
| <input type="checkbox"/> | 3     | Valid  | Trap         | Trap         | Trap         | Trap         | 00:00:00   |
| <input type="checkbox"/> | 4     | Valid  | Log and Trap | Log and Trap | Log and Trap | Log and Trap | 00:00:00   |

## Configuring RMON History Samples

Use the Administration > RMON (Configure Interface - Add - History) page to collect statistics on a physical interface to monitor network utilization, packet types, and errors. A historical record of activity can be used to track down intermittent problems. The record can be used to establish normal baseline activity, which may reveal problems associated with high traffic levels, broadcast storms, or other unusual events. It can also be used to predict network growth and plan for expansion before your network becomes too overloaded.

### Command Usage

- ◆ Each index number equates to a port on the switch.
- ◆ If history collection is already enabled on an interface, the entry must be deleted before any changes can be made.
- ◆ The information collected for each sample includes:  
input octets, packets, broadcast packets, multicast packets, undersize packets, oversize packets, fragments, jabbers, CRC alignment errors, collisions, drop events, and network utilization.  
For a description of the statistics displayed on the Show Details page, refer to ["Showing Port or Trunk Statistics" on page 110](#).
- ◆ The switch reserves two index entries for each port. If a default index entry is re-assigned to another port using the Add page, this index will not appear in the Show nor Show Details page for the port to which is normally assigned. For example, if control entry 15 is assigned to port 5, this index entry will be removed from the Show and Show Details page for port 8.

### Parameters

These parameters are displayed:

- ◆ **Port** – The port number on the switch.
- ◆ **Index** - Index to this entry. (Range: 1-65535)

- ◆ **Interval** - The polling interval. (Range: 1-3600 seconds; Default: 1800 seconds)
- ◆ **Buckets** - The number of buckets requested for this entry. (Range: 1-65536; Default: 8)  
The number of buckets granted are displayed on the Show page.
- ◆ **Owner** - Name of the person who created this entry. (Range: 1-32 characters)

### Web Interface

To periodically sample statistics on a port:

1. Click Administration, RMON.
2. Select Configure Interface from the Step list.
3. Select Add from the Action list.
4. Click History.
5. Select a port from the list as the data source.
6. Enter an index number, the sampling interval, the number of buckets to use, and the name of the owner for this entry.
7. Click Apply

**Figure 282: Configuring an RMON History Sample**

The screenshot shows the 'Administration > RMON' web interface. At the top, there is a breadcrumb trail 'Administration > RMON'. Below it, there are two dropdown menus: 'Step: 2. Configure Interface' and 'Action: Add'. Underneath these, there are two radio buttons: 'History' (selected) and 'Statistics'. Below the radio buttons, there is a 'Port' dropdown menu set to '2'. Further down, there are four input fields: 'Index (1-65535)' with the value '100', 'Interval (1-3600)' with the value '60' and a 'sec' unit label, 'Buckets (1-65535)' with the value '10', and 'Owner' with the value 'david'. At the bottom right, there are two buttons: 'Apply' and 'Revert'.

To show configured RMON history samples:

1. Click Administration, RMON.
2. Select Configure Interface from the Step list.
3. Select Show from the Action list.

4. Select a port from the list.
5. Click History.

**Figure 283: Showing Configured RMON History Samples**

Administration > RMON

Step: 2. Configure Interface Action: Show

☒ History ☐ Statistics

Port: 1

RMON History Port List Total: 2

| <input type="checkbox"/> | Index | Status | Interval | Requested Buckets | Granted Buckets | Owner |
|--------------------------|-------|--------|----------|-------------------|-----------------|-------|
| <input type="checkbox"/> | 1     | Valid  | 1800     | 8                 | 8               |       |
| <input type="checkbox"/> | 2     | Valid  | 30       | 8                 | 8               |       |

Buttons: Delete, Revert

To show collected RMON history samples:

1. Click Administration, RMON.
2. Select Configure Interface from the Step list.
3. Select Show Details from the Action list.
4. Select a port from the list.
5. Click History.

**Figure 284: Showing Collected RMON History Samples**

Administration > RMON

Step: 2. Configure Interface Action: Show Details

☒ History ☐ Statistics

Port: 1

RMON History Deatils Port List Total: 9

| History Index | Sample Index | Interval Start | Octets | Packets | Broadcast Packets | Multicast Packets | Undersize Packets | Oversize Packets | Fragments | Jabbers | CRC Align Errors | Collisions | Drop Events | Network Utilization |
|---------------|--------------|----------------|--------|---------|-------------------|-------------------|-------------------|------------------|-----------|---------|------------------|------------|-------------|---------------------|
| 1             | 1            | 00:00:01       | 756105 | 3218    | 91                | 894               | 0                 | 0                | 0         | 0       | 0                | 0          | 0           | 0                   |
| 2             | 71           | 00:35:01       | 21490  | 76      | 0                 | 15                | 0                 | 0                | 0         | 0       | 0                | 0          | 0           | 0                   |
| 2             | 72           | 00:35:31       | 46521  | 120     | 0                 | 15                | 0                 | 0                | 0         | 0       | 0                | 0          | 0           | 0                   |
| 2             | 73           | 00:36:01       | 21682  | 79      | 0                 | 15                | 0                 | 0                | 0         | 0       | 0                | 0          | 0           | 0                   |
| 2             | 74           | 00:36:31       | 21554  | 77      | 0                 | 15                | 0                 | 0                | 0         | 0       | 0                | 0          | 0           | 0                   |

## Configuring RMON Statistical Samples

Use the Administration > RMON (Configure Interface - Add - Statistics) page to collect statistics on a port, which can subsequently be used to monitor the network for common errors and overall traffic rates.

### Command Usage

- ◆ If statistics collection is already enabled on an interface, the entry must be deleted before any changes can be made.
- ◆ The information collected for each entry includes:  
input octets, packets, broadcast packets, multicast packets, undersize packets, oversize packets, CRC alignment errors, jabbers, fragments, collisions, drop events, and frames of various sizes.

### Parameters

These parameters are displayed:

- ◆ **Port** – The port number on the switch.
- ◆ **Index** - Index to this entry. (Range: 1-65535)
- ◆ **Owner** - Name of the person who created this entry. (Range: 1-32 characters)

### Web Interface

To enable regular sampling of statistics on a port:

1. Click Administration, RMON.
2. Select Configure Interface from the Step list.
3. Select Add from the Action list.
4. Click Statistics.
5. Select a port from the list as the data source.
6. Enter an index number, and the name of the owner for this entry
7. Click Apply

**Figure 285: Configuring an RMON Statistical Sample**

Administration > RMON

Step: 2. Configure Interface Action: Add

☐ History ☒ Statistics

Port 2

Index (1-65535) 100

Owner mary

Apply Revert

To show configured RMON statistical samples:

1. Click Administration, RMON.
2. Select Configure Interface from the Step list.
3. Select Show from the Action list.
4. Select a port from the list.
5. Click Statistics.

**Figure 286: Showing Configured RMON Statistical Samples**

Administration > RMON

Step: 2. Configure Interface Action: Show

☐ History ☒ Statistics

Port 2

RMON Statistics Port List Total: 2


|                          | Index | Status | Owner |
|--------------------------|-------|--------|-------|
| <input type="checkbox"/> | 1     | Valid  | abc   |
| <input type="checkbox"/> | 2     | Valid  | test  |

Delete Revert

To show collected RMON statistical samples:

1. Click Administration, RMON.
2. Select Configure Interface from the Step list.
3. Select Show Details from the Action list.
4. Select a port from the list.
5. Click Statistics.

**Figure 287: Showing Collected RMON Statistical Samples**

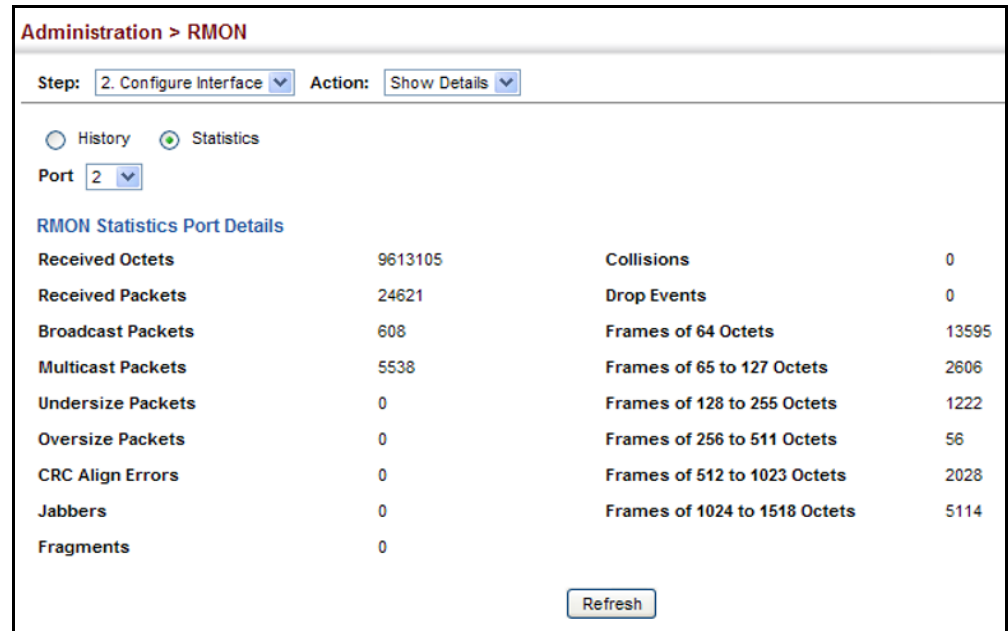

## Switch Clustering

Switch clustering is a method of grouping switches together to enable centralized management through a single unit. Switches that support clustering can be grouped together regardless of physical location or switch type, as long as they are connected to the same local network.

### Command Usage

- ◆ A switch cluster has a primary unit called the “Commander” which is used to manage all other “Member” switches in the cluster. The management station can use either Telnet or the web interface to communicate directly with the Commander through its IP address, and then use the Commander to manage Member switches through the cluster’s “internal” IP addresses.
- ◆ Clustered switches must be in the same Ethernet broadcast domain. In other words, clustering only functions for switches which can pass information between the Commander and potential Candidates or active Members through VLAN 4093.
- ◆ Once a switch has been configured to be a cluster Commander, it automatically discovers other cluster-enabled switches in the network. These “Candidate” switches only become cluster Members when manually selected by the administrator through the management station.
- ◆ There can be up to 100 candidates and 36 member switches in one cluster.
- ◆ A switch can only be a member of one cluster.

- ◆ The cluster VLAN 4093 is not configured by default. Before using clustering, take the following actions to set up this VLAN:
  1. Create VLAN 4093 (see [“Configuring VLAN Groups” on page 161](#)).
  2. Add the participating ports to this VLAN (see [“Adding Static Members to VLANs” on page 163](#)), and set them to hybrid mode, tagged members, PVID = 1, and acceptable frame type = all.
- ◆ After the Commander and Members have been configured, any switch in the cluster can be managed from the web agent by choosing the desired Member ID from the Show Member page.

### Configuring General Settings for Clusters

Use the Administration > Cluster (Configure Global) page to create a switch cluster.

#### Command Usage

First be sure that clustering is enabled on the switch (the default is disabled), then set the switch as a Cluster Commander. Set a Cluster IP Pool that does not conflict with the network IP subnet. Cluster IP addresses are assigned to switches when they become Members and are used for communication between Member switches and the Commander.

#### Parameters

These parameters are displayed:

- ◆ **Cluster Status** – Enables or disables clustering on the switch. (Default: Disabled)
- ◆ **Commander Status** – Enables or disables the switch as a cluster Commander. (Default: Disabled)
- ◆ **IP Pool** – An “internal” IP address pool that is used to assign IP addresses to Member switches in the cluster. Internal cluster IP addresses are in the form 10.x.x.member-ID. Only the base IP address of the pool needs to be set since Member IDs can only be between 1 and 36. Note that you cannot change the cluster IP pool when the switch is currently in Commander mode. Commander mode must first be disabled. (Default: 10.254.254.1)
- ◆ **Role** – Indicates the current role of the switch in the cluster; either Commander, Member, or Candidate. (Default: Candidate)
- ◆ **Number of Members** – The current number of Member switches in the cluster.
- ◆ **Number of Candidates** – The current number of Candidate switches discovered in the network that are available to become Members.



### Web Interface

To configure a switch cluster:

1. Click Administration, Cluster.
2. Select Configure Global from the Step list.
3. Set the required attributes for a Commander or a managed candidate.
4. Click Apply

**Figure 288: Configuring a Switch Cluster**

The screenshot shows the 'Administration > Cluster' configuration page. At the top, there is a breadcrumb 'Administration > Cluster' and a 'Step:' dropdown menu set to '1. Configure Global'. Below this, the configuration parameters are listed in a table-like format:

|                      |   |
|----------------------|---|
| Cluster Status       | <input checked="" type="checkbox"/> Enabled |
| Commander Status     | <input checked="" type="checkbox"/> Enabled |
| IP Pool              | <input type="text" value="10.254.254.1"/>   |
| Role                 | Commander                                   |
| Number of Members    | 2   |
| Number of Candidates | 3   |

At the bottom right of the form, there are two buttons: 'Apply' and 'Revert'.

**Cluster Member Configuration** Use the Administration > Cluster (Configure Member - Add) page to add Candidate switches to the cluster as Members.

### Parameters

These parameters are displayed:

- ◆ **Member ID** – Specify a Member ID number for the selected Candidate switch. (Range: 1-36)
- ◆ **MAC Address** – Select a discovered switch MAC address from the Candidate Table, or enter a specific MAC address of a known switch.

### Web Interface

To configure cluster members:

1. Click Administration, Cluster.
2. Select Configure Member from the Step list.
3. Select Add from the Action list.
4. Select one of the cluster candidates discovered by this switch, or enter the MAC address of a candidate.
5. Click Apply.

**Figure 289: Configuring a Cluster Members**

Administration > Cluster

Step: 2. Configure Member Action: Add

Member ID (1-36)

MAC Address

☒ Candidate 11-22-33-44-55-11

☐

Apply Revert

To show the cluster members:

1. Click Administration, Cluster.
2. Select Configure Member from the Step list.
3. Select Show from the Action list.

**Figure 290: Showing Cluster Members**

Administration > Cluster

Step: 2. Configure Member Action: Show

Cluster Member List Total: 2


|                          | Member ID | Role          | IP Address   | MAC Address       | Description |
|--------------------------|-----------|---------------|--------------|-------------------|-------------|
| <input type="checkbox"/> | 1         | Active Member | 10.254.254.2 | 70-72-CF-91-1C-B2 | ECS4620-52P |
| <input type="checkbox"/> | 2         | Active Member | 10.254.254.3 | 70-72-CF-5B-DA-D4 | ECS3510-28T |

Delete Revert

To show cluster candidates:

1. Click Administration, Cluster.
2. Select Configure Member from the Step list.
3. Select Show Candidate from the Action list.

**Figure 291: Showing Cluster Candidates**

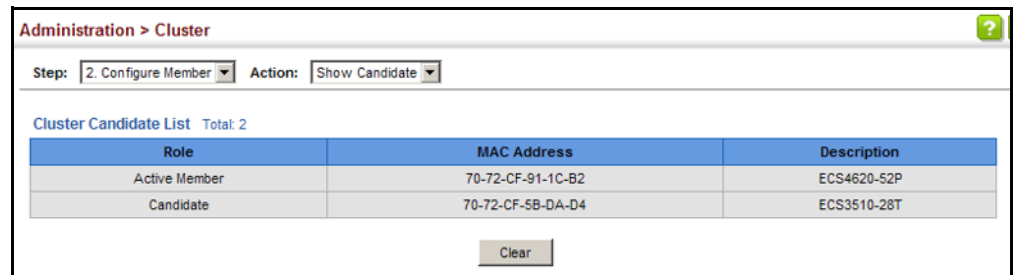

| Administration > Cluster        |                        |             |
|---------------------------------|------------------------|-------------|
| Step: 2. Configure Member       | Action: Show Candidate |             |
| Cluster Candidate List Total: 2 |                        |             |
| Role                            | MAC Address            | Description |
| Active Member                   | 70-72-CF-91-1C-B2      | ECS4620-52P |
| Candidate                       | 70-72-CF-5B-DA-D4      | ECS3510-28T |
| Clear                           |                        |             |

**Managing Cluster Members** Use the Administration > Cluster (Show Member) page to manage another switch in the cluster.

#### Parameters

These parameters are displayed:


- ◆ **Member ID** – The ID number of the Member switch. (Range: 1-36)
- ◆ **Role** – Indicates the current status of the switch in the cluster.
- ◆ **IP Address** – The internal cluster IP address assigned to the Member switch.
- ◆ **MAC Address** – The MAC address of the Member switch.
- ◆ **Description** – The system description string of the Member switch.
- ◆ **Operate** – Remotely manage a cluster member.

### Web Interface

To manage a cluster member:

1. Click Administration, Cluster.
2. Select Show Member from the Step list.
3. Select an entry from the Cluster Member List.
4. Click Operate.

**Figure 292: Managing a Cluster Member**

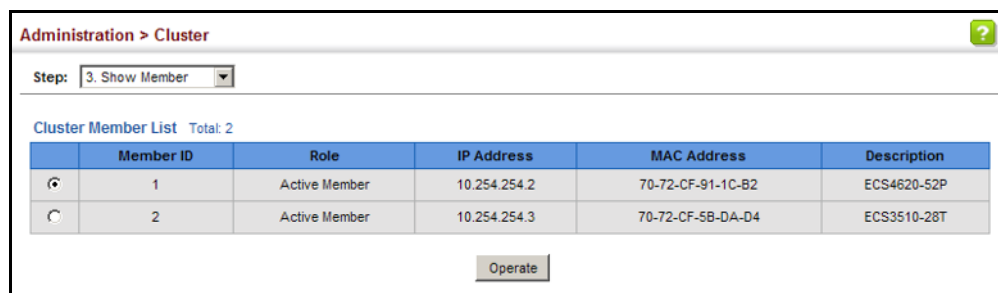

|  | Member ID | Role          | IP Address   | MAC Address       | Description |
|--|-----------|---------------|--------------|-------------------|-------------|
|  | 1         | Active Member | 10.254.254.2 | 70-72-CF-91-1C-B2 | ECS4620-52P |
|  | 2         | Active Member | 10.254.254.3 | 70-72-CF-5B-DA-D4 | ECS3510-28T |

Operate

## Setting a Time Range

Use the Administration > Time Range page to set a time range during which various functions are applied, including applied ACLs or PoE.

### Command Usage

- ◆ If both an absolute rule and one or more periodic rules are configured for the same time range (i.e., named entry), that entry will only take effect if the current time is within the absolute time range and one of the periodic time ranges.
- ◆ A maximum of eight rules can be configured for a time range.

### Parameters

These parameters are displayed:

*Add*

- ◆ **Time-Range Name** – Name of a time range. (Range: 1-32 characters)

*Add Rule*

- ◆ **Time-Range** – Name of a time range.

### ◆ Mode

- **Absolute** – Specifies a specific time or time range.
  - **Start/End** – Specifies the hours, minutes, month, day, and year at which to start or end.
- **Periodic** – Specifies a periodic interval.
  - **Start/To** – Specifies the days of the week, hours, and minutes at which to start or end.

### Web Interface

To configure a time range:

1. Click Administration, Time Range.
2. Select Add from the Action list.
3. Enter the name of a time range.
4. Click Apply.

**Figure 293: Setting the Name of a Time Range**

The screenshot shows the 'Administration > Time Range' page. At the top, there's a breadcrumb 'Administration > Time Range'. Below it, an 'Action:' dropdown menu is set to 'Add'. Underneath, there's a label 'Time-Range Name' followed by a text input field containing the text 'r&d'. At the bottom right, there are two buttons: 'Apply' and 'Revert'.

To show a list of time ranges:

1. Click Administration, Time Range.
2. Select Show from the Action list.

**Figure 294: Showing a List of Time Ranges**

The screenshot shows the 'Administration > Time Range' page with the 'Action:' dropdown set to 'Show'. Below the dropdown, it says 'Time-Range List Total: 1'. There is a table with one row. The table has two columns: a checkbox column and a 'Time-Range Name' column. The row contains a checked checkbox and the text 'r&d'. At the bottom right, there are two buttons: 'Delete' and 'Revert'.

|                                     | Time-Range Name |
|-------------------------------------|-----------------|
| <input checked="" type="checkbox"/> | r&d             |

To configure a rule for a time range:

1. Click Administration, Time Range.
2. Select Add Rule from the Action list.
3. Select the name of time range from the drop-down list.
4. Select a mode option of Absolute or Periodic.
5. Fill in the required parameters for the selected mode.
6. Click Apply.

**Figure 295: Add a Rule to a Time Range**

The screenshot shows the 'Administration > Time Range' page. At the top, there's a breadcrumb 'Administration > Time Range'. Below it, the 'Action:' dropdown is set to 'Add Rule'. The 'Time-Range' dropdown is set to 'r&d'. The 'Mode' dropdown is set to 'Periodic'. There are two columns of input fields: 'Start' and 'To'. Under 'Start', 'Days of the week' is 'Weekend', 'Hours (0-23)' is '5', and 'Minutes (0-59)' is '0'. Under 'To', 'Days of the week' is 'Sunday', 'Hours (0-23)' is '6', and 'Minutes (0-59)' is '0'. At the bottom right, there are 'Apply' and 'Revert' buttons.

To show the rules configured for a time range:

1. Click Administration, Time Range.
2. Select Show Rule from the Action list.

**Figure 296: Showing the Rules Configured for a Time Range**

The screenshot shows the 'Administration > Time Range' page. At the top, there's a breadcrumb 'Administration > Time Range'. Below it, the 'Action:' dropdown is set to 'Show Rule'. The 'Time-Range' dropdown is set to 'r&d'. Below this, there's a section titled 'Time-Range Rule List' with a 'Total: 1' indicator. It contains a table with the following data:

|                          | Mode     | Start         | End           |
|--------------------------|----------|---------------|---------------|
| <input type="checkbox"/> | Periodic | Weekend 05:00 | Weekend 06:00 |

At the bottom right, there are 'Delete' and 'Revert' buttons.

## Ethernet Ring Protection Switching



**Note:** Information in this section is based on ITU-T G.8032/Y.1344.

The ITU G.8032 recommendation specifies a protection switching mechanism and protocol for Ethernet layer network rings. Ethernet rings can provide wide-area multipoint connectivity more economically due to their reduced number of links. The mechanisms and protocol defined in G.8032 achieve highly reliable and stable protection; and never form loops, which would fatally affect network operation and service availability.

The G.8032 recommendation, also referred to as Ethernet Ring Protection Switching (ERPS), can be used to increase the availability and robustness of Ethernet rings. An Ethernet ring built using ERPS can provide resilience at a lower cost and than that provided by SONET or EAPS rings.

ERPS is more economical than EAPS in that only one physical link is required between each node in the ring. However, since it can tolerate only one break in the ring, it is not as robust as EAPS. ERPS supports up to 255 nodes in the ring structure. ERPS requires a higher convergence time when more than 16 nodes are used, but should always run under than 500 ms.

### *Operational Concept*

Loop avoidance in the ring is achieved by guaranteeing that, at any time, traffic may flow on all but one of the ring links. This particular link is called the ring protection link (RPL), and under normal conditions this link is blocked to traffic. One designated node, the RPL owner, is responsible for blocking traffic over the RPL. When a ring failure occurs, the RPL owner is responsible for unblocking the RPL, allowing this link to be used for traffic.

Ring nodes may be in one of two states:

Idle – normal operation, no link/node faults detected in ring

Protection – Protection switching in effect after identifying a signal fault


In Idle state, the physical topology has all nodes connected in a ring. The logical topology guarantees that all nodes are connected without a loop by blocking the RPL. Each link is monitored by its two adjacent nodes using Connectivity Fault Management (CFM) protocol messages.

Protection switching (opening the RPL to traffic) occurs when a signal failure message generated by the Connectivity Fault Management (CFM) protocol is declared on one of the ring links, and the detected failure has a higher priority than any other request; or a Ring – Automatic Protection Switching protocol request (R-APS, as defined in Y.1731) is received which has a higher priority than any other local request.

A link/node failure is detected by the nodes adjacent to the failure. These nodes block the failed link and report the failure to the ring using R-APS (SF) messages. This message triggers the RPL owner to unblock the RPL, and all nodes to flush their forwarding database. The ring is now in protection state, but it remains connected in a logical topology.

When the failed link recovers, the traffic is kept blocked on the nodes adjacent to the recovered link. The nodes adjacent to the recovered link transmit R-APS (NR - no request) message indicating they have no local request. When the RPL owner receives an R-APS (NR) message it starts the Wait-To-Recover (WTR) timer. Once WTR timer expires, the RPL owner blocks the RPL and transmits an R-APS (NR, RB - ring blocked) message. Nodes receiving this message flush the forwarding database and unblock their previously blocked ports. The ring is now returned to Idle state.

**Figure 297: ERPS Ring Components**

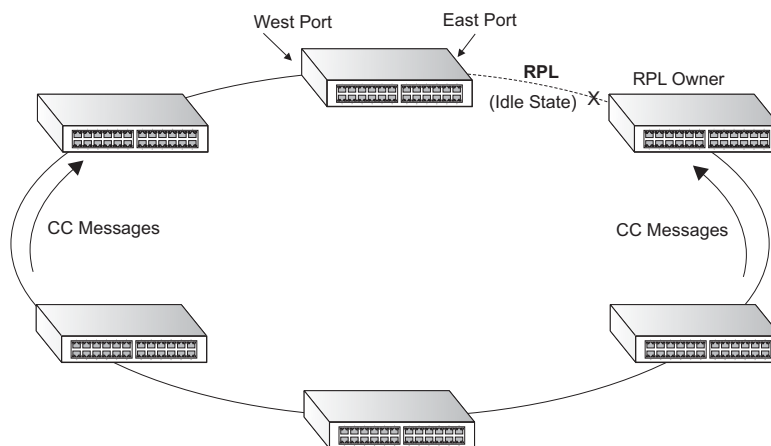

Multi-ring/Ladder Network – ERPSv2 also supports multipoint-to-multipoint connectivity within interconnected rings, called a “multi-ring/ladder network” topology. This arrangement consists of conjoined rings connected by one or more interconnection points, and is based on the following criteria:

- ◆ The R-APS channels are not shared across Ethernet Ring interconnections.
- ◆ On each ring port, each traffic channel and each R-APS channel are controlled (e.g., for blocking or flushing) by the Ethernet Ring Protection Control Process (ERP Control Process) of only one ring.
- ◆ Each Major Ring or Sub-Ring must have its own RPL.

[Figure 298 on page 461](#) (Normal Condition) depicts an example of a multi-ring/ladder network. If the network is in normal operating condition, the RPL owner node of each ring blocks the transmission and reception of traffic over the RPL for that ring. This figure presents the configuration when no failure exists on any ring link.

In the figure for the Normal Condition there are two interconnected rings. Ring ERP1 is composed of ring nodes A, B, C and D and the ring links between these nodes. Ring ERP2 is composed of ring nodes C, D, E and F and the ring links C-to-F, F-to-E, E-to-D. The ring link between D and C is used for traffic on rings ERP1 and ERP2. On their own ERP2 ring links do not form a closed loop. A closed loop may be




formed by the ring links of ERP2 and the ring link between the interconnection nodes that is controlled by ERP1. ERP2 is a sub-ring. Ring node A is the RPL owner node for ERP1, and ring node E is the RPL owner node for ERP2. These ring nodes (A and E) are responsible for blocking the traffic channel on the RPL for ERP1 and ERP2 respectively. There is no restriction on which ring link on an ring may be set as the RPL. For example the RPL of ERP1 could be set as the link between ring node C and D.

Ring nodes C and D, that are common to both ERP1 and ERP2, are called interconnection nodes. The ring link between the interconnection nodes are controlled and protected by the ring it belongs to. In the example for the Normal Condition, the ring link between ring nodes C and D is part of ERP1, and, as such, are controlled and protected by ERP1. Ethernet characteristic information traffic corresponding to the traffic channel may be transferred over a common Ethernet connection for ERP1 and ERP2 through the interconnection nodes C and D. Interconnection nodes C and D have separate ERP Control Processes for each Ethernet Ring.

[Figure 298 on page 461](#) (Signal Fail Condition) illustrates a situation where protection switching has occurred due to an SF condition on the ring link between interconnection nodes C and D. The failure of this ring link triggers protection only on the ring to which it belongs, in this case ERP1. The traffic and R-APS channels are blocked bi-directionally on the ports where the failure is detected and bi-directionally unblocked at the RPL connection point on ERP1. The traffic channels remain bi-directionally blocked at the RPL connection point on ERP2. This prevents the formation of a loop.

**Figure 298: Ring Interconnection Architecture (Multi-ring/Ladder Network)**

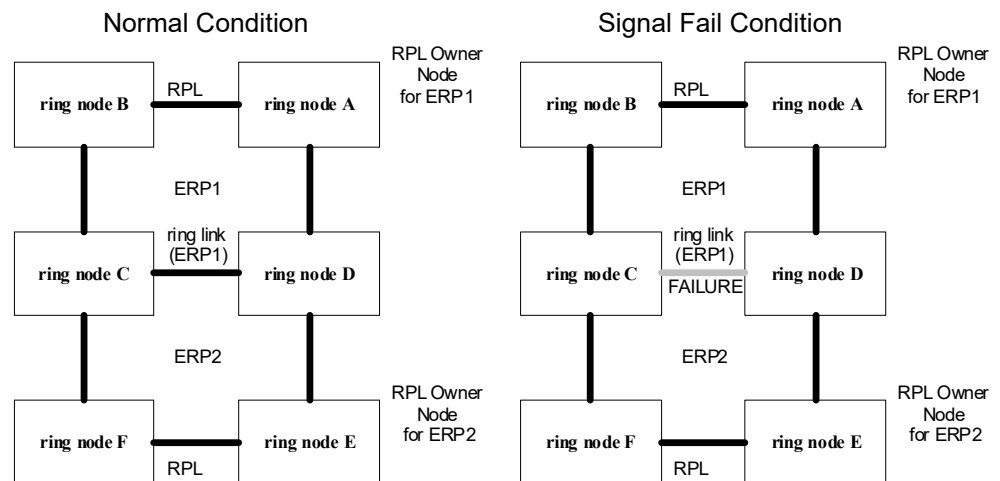

#### Configuration Guidelines for ERPS

1. Create an ERPS ring ([Configure Domain – Add](#)): The ring name is used as an index in the G.8032 database.
2. Configure the east and west interfaces ([Configure Domain – Configure Details](#)): Each node on the ring connects to it through two ring ports. Configure one

port connected to the next node in the ring to the east (or clockwise direction) and another port facing west in the ring.

3. Configure the RPL owner ([Configure Domain – Configure Details](#)): Configure one node in the ring as the Ring Protection Link (RPL) owner. When this switch is configured as the RPL owner, the west ring port is set as being connected to the RPL. Under normal operations (Idle state), the RPL is blocked to ensure that a loop cannot form in the ring. If a signal failure brings down any other link in the ring, the RPL will be unblocked (Protection state) to ensure proper connectivity among all ring nodes until the failure is recovered.
4. Configure ERPS timers ([Configure Domain – Configure Details](#)): Set the Guard timer to prevent ring nodes from receiving outdated R-APS messages, the Hold-off timer to filter out intermittent link faults, and the WTR timer to verify that the ring has stabilized before blocking the RPL after recovery from a signal failure.
5. Configure the ERPS Control VLAN ([Configure Domain – Configure Details](#)): Specify the Control VLAN (CVLAN) used to pass R-APS ring maintenance commands. The CVLAN must NOT be configured with an IP address. In addition, only ring ports may be added to the CVLAN (prior to configuring the VLAN as a CVLAN). No other ports can be members of this VLAN (once set as a CVLAN). Also, the ring ports of the CVLAN must be tagged. Failure to observe these restrictions can result in a loop in the network.
6. Enable ERPS ([Configure Global](#)): Before enabling a ring as described in the next step, first globally enable ERPS on the switch. If ERPS has not yet been enabled or has been disabled, no ERPS rings will work.
7. Enable an ERPS ring ([Configure Domain – Configure Details](#)): Before an ERPS ring can work, it must be enabled. When configuration is completed and the ring enabled, R-APS messages will start flowing in the control VLAN, and normal traffic will begin to flow in the data VLANs. A ring can be stopped by disabling the Admin Status on any node.
8. Display ERPS status information ([Configure Domain – Show](#)): Display ERPS status information for all configured rings.

#### *Configuration Limitations for ERPS*

The following configuration limitations apply to ERPS:

- ◆ The switch supports up to six ERPS rings – each ring must have one Control VLAN, and at most 255 Data VLANs.
- ◆ Ring ports can not be a member of a trunk, nor an LACP-enabled port.
- ◆ Dynamic VLANs are not supported as protected data ports.
- ◆ Exclusive use of **STP** or **ERPS** on any port.

- ◆ The switch takes about 350 ms to detect link-up on 1000Base-T copper ports, so the convergence time on this port type is more than 50 ms.
- ◆ One VLAN must be added to an ERPS domain as the CVLAN. This can be designated as any VLAN, other than the management VLAN. The CVLAN should only contain ring ports, and must not be configured with an IP address.

### ERPS Global Configuration

Use the Administration > ERPS (Configure Global) page to globally enable or disable ERPS on the switch.

#### Parameters

These parameters are displayed:

- ◆ **ERPS Status** – Enables ERPS on the switch. (Default: Disabled)  
ERPS must be enabled globally on the switch before it can be enabled on an ERPS ring (by setting the Admin Status on the [Configure Domain – Configure Details](#) page).

#### Web Interface

To globally enable ERPS on the switch:

1. Click Administration, ERPS.
2. Select Configure Global from the Step list.
3. Mark the ERPS Status check box.
4. Click Apply.

**Figure 299: Setting ERPS Global Status**

The screenshot shows a web interface for configuring ERPS. At the top, it says "Administration > ERPS". Below that, there is a "Step:" dropdown menu with "1. Configure Global" selected. The main section has a label "ERPS Status" followed by a checked checkbox and the word "Enabled". At the bottom right, there are two buttons: "Apply" and "Revert".

### ERPS Ring Configuration

Use the Administration > ERPS (Configure Domain) pages to configure ERPS rings.

#### Command Usage

##### *Ring Initialization*

An ERPS ring containing one Control VLAN and one or more protected Data VLANs must be configured, and the global ERPS function enabled on the switch (see [“ERPS Global Configuration” on page 463](#)) before a ring can start running. Once enabled,

the RPL owner node and non-owner node state machines will start, and the ring will enter the active state.

#### *Limitations*

When configuring a ring port, note that these ports cannot be part of a spanning tree, nor can they be members of a static or dynamic trunk.

#### **Parameters**

These parameters are displayed:

##### *Add*

- ◆ **Domain Name** – Name of an ERPS ring. (Range: 1-12 characters)
- ◆ **Domain ID** – ERPS ring identifier used in R-APS messages. (Range: 1-255)

##### *Show*

- ◆ **Domain Name** – Name of a configured ERPS ring.
- ◆ **ID** – ERPS ring identifier used in R-APS messages.
- ◆ **Admin Status** – Shows whether ERPS is enabled on the switch.
- ◆ **Ver** – Shows the ERPS version.
- ◆ **MEG Level** – The maintenance entity group (MEG) level providing a communication channel for ring automatic protection switching (R-APS) information.
- ◆ **Control VLAN** – Shows the Control VLAN ID.
- ◆ **Node State** – Shows the following ERPS states:
  - **Init** – The ERPS ring has started but has not yet determined the status of the ring.
  - **Idle** – If all nodes in a ring are in this state, it means that all the links in the ring are up. This state will switch to protection state if a link failure occurs.
  - **Protection** – If a node in this state, it means that a link failure has occurred. This state will switch to idle state if all the failed links recover.
- ◆ **Type** – Shows node type as None, RPL Owner or RPL Neighbor.
- ◆ **Revertive** – Shows if revertive or non-revertive recovery is selected.
- ◆ **W/E** – Shows information on the west and east ring port for this node.
- ◆ **West Port** – Shows the west ring port for this node.
- ◆ **East Port** – Shows the east ring port for this node.

- ◆ **Interface** – The port or trunk which is configured as a ring port.
- ◆ **Port State** – The operational state:
  - Blocking – The transmission and reception of traffic is blocked and the forwarding of R-APS messages is blocked, but the transmission of locally generated R-APS messages is allowed and the reception of all R-APS messages is allowed.
  - Forwarding – The transmission and reception of traffic is allowed; transmission, reception and forwarding of R-APS messages is allowed.
  - Unknown – The interface is not in a known state (includes the domain being disabled).
- ◆ **Local SF** – A signal fault generated on a link to the local node.
- ◆ **Local FS** – Shows if a forced switch command was issued on this interface.
- ◆ **Local MS** – Shows if a manual switch command was issued on this interface.
- ◆ **MEP** – The CFM MEP used to monitor the status on this link.
- ◆ **RPL** – Shows if this node is connected to the RPL.

#### *Configure Details*

- ◆ **Domain Name** – Name of a configured ERPS ring. (Range: 1-12 characters)  
Service Instances within each ring are based on a unique maintenance association for the specific users, distinguished by the ring name, maintenance level, maintenance association's name, and assigned VLAN. Up to 6 ERPS rings can be configured on the switch.
- ◆ **Domain ID** – ERPS ring identifier used in R-APS messages. (Range: 1-255; Default: None)  
R-APS information is carried in an R-APS PDUs. The last octet of the MAC address is designated as the Ring ID (01-19-A7-00-00-[Ring ID]). If use of the default MAC address is disabled for the R-APS Def MAC parameter, then the Domain ID will be used in R-APS PDUs.
- ◆ **Admin Status** – Activates the current ERPS ring. (Default: Disabled)  
Before enabling a ring, the global ERPS function should be enabled see ([“ERPS Global Configuration” on page 463](#)), the east and west ring ports configured on each node, the RPL owner specified, and the control VLAN configured.  
Once enabled, the RPL owner node and non-owner node state machines will start, and the ring will enter idle state if no signal failures are detected.
- ◆ **Version** – Specifies compatibility with the following ERPS versions:
  - 1 - ERPS version 1 based on ITU-T G.8032/Y.1344.

- 2 - ERPS version 2 based on ITU-T G.8032/Y.1344 Version 2. (This is the default setting.)

In addition to the basic features provided by version 1, version 2 also supports:

- Multi-ring/ladder network support
- Revertive/Non-revertive recovery
- Forced Switch (FS) and Manual Switch (MS) commands for manually blocking a particular ring port
- Flush FDB (forwarding database) logic which reduces amount of flush FDB operations in the ring
- Support of multiple ERP instances on a single ring

Version 2 is backward compatible with Version 1. If version 2 is specified, the inputs and commands are forwarded transparently. If set to version 1, MS and FS operator commands are filtered, and the switch set to revertive mode.

The version number is automatically set to "1" when a ring node, supporting only the functionalities of G.8032v1, exists on the same ring with other nodes that support G.8032v2.

When ring nodes running G.8032v1 and G.8032v2 co-exist on a ring, the ring ID of each node is configured as "1".

In version 1, the MAC address 01-19-A7-00-00-01 is used for the node identifier. The R-APS Def MAC parameter has no effect.

- ◆ **MEG Level** – The maintenance entity group (MEG) level which provides a communication channel for ring automatic protection switching (R-APS) information. (Range: 0-7)

This parameter is used to ensure that received R-APS PDUs are directed for this ring. A unique level should be configured for each local ring if there are many R-APS PDUs passing through this switch.

- ◆ **Control VLAN** – A dedicated VLAN used for sending and receiving E-APS protocol messages. (Range: 1-4094)

Configure one control VLAN for each ERPS ring. First create the VLAN to be used as the control VLAN (see ["Configuring VLAN Groups" on page 161](#)), add the ring ports for the east and west interface as tagged members to this VLAN (see ["Adding Static Members to VLANs" on page 163](#)), and then use this parameter to add it to the ring.

The following restrictions are recommended to avoid creating a loop in the network or other problems which may occur under some situations:

- The Control VLAN must not be configured as a Layer 3 interface (with an IP address), a dynamic VLAN (with GVRP enabled), nor as a private VLAN.
- In addition, only ring ports may be added to the Control VLAN. No other ports can be members of this VLAN.
- Also, the ring ports of the Control VLAN must be tagged.

Once the ring has been activated, the configuration of the control VLAN cannot be modified. Use the Admin Status parameter to stop the ERPS ring before making any configuration changes to the control VLAN.

- ◆ **Node State** – Refer to the parameters for the Show page.
- ◆ **Node Type** – Shows ERPS node type as one of the following:
  - **None** – Node is neither Ring Protection Link (RPL) owner nor neighbor. (This is the default setting.)
  - **RPL Owner** – Specifies a ring node to be the RPL owner.
    - Only one RPL owner can be configured on a ring. The owner blocks traffic on the RPL during Idle state, and unblocks it during Protection state (that is, when a signal fault is detected on the ring or the protection state is enabled with the Forced Switch or Manual Switch commands on the Configure Operation page).
    - The east and west connections to the ring must be specified for all ring nodes. When this switch is configured as the RPL owner, the west ring port is automatically set as being connected to the RPL.
  - **RPL Neighbor** – Specifies a ring node to be the RPL neighbor.
    - The RPL neighbor node, when configured, is a ring node adjacent to the RPL that is responsible for blocking its end of the RPL under normal conditions (i.e., the ring is established and no requests are present in the ring) in addition to the block at the other end by the RPL Owner Node. The RPL neighbor node may participate in blocking or unblocking its end of the RPL, but is not responsible for activating the reversion behavior.
    - Only one RPL owner can be configured on a ring. If the switch is set as the RPL owner for an ERPS domain, the west ring port is set as one end of the RPL. If the switch is set as the RPL neighbor for an ERPS domain, the east ring port is set as the other end of the RPL.
    - The east and west connections to the ring must be specified for all ring nodes. When this switch is configured as the RPL neighbor, the east ring port is set as being connected to the RPL.
    - Note that is not mandatory to declare a RPL neighbor.
- ◆ **Revertive** – Sets the method of recovery to Idle State through revertive or non-revertive mode. (Default: Enabled)
  - Revertive behavior allows the switch to automatically return the RPL from Protection state to Idle state through the exchange of protocol messages. Non-revertive behavior for Protection, Forced Switch (FS), and Manual Switch (MS) states are basically the same. Non-revertive behavior requires

the RPL to be restored from Protection state to Idle state using the Clear command (Configure Operation page).

- **Recovery for Protection Switching** – A ring node that has one or more ring ports in an SF (Signal Fail) condition, upon detecting the SF condition cleared, keeps at least one of its ring ports blocked for the traffic channel and for the R-APS channel, until the RPL is blocked as a result of ring protection reversion, or until there is another higher priority request (e.g., an SF condition) in the ring.

A ring node that has one ring port in an SF condition and detects the SF condition cleared, continuously transmits the R-APS (NR – no request) message with its own Node ID as the priority information over both ring ports, informing that no request is present at this ring node and initiates a guard timer. When another recovered ring node (or nodes) holding the link block receives this message, it compares the Node ID information with its own Node ID. If the received R-APS (NR) message has the higher priority, this ring node unblocks its ring ports. Otherwise, the block remains unchanged. As a result, there is only one link with one end blocked.

The ring nodes stop transmitting R-APS (NR) messages when they accept an R-APS (NR, RB – RPL Blocked), or when another higher priority request is received.

- **Recovery with Revertive Mode** – When all ring links and ring nodes have recovered and no external requests are active, reversion is handled in the following way:
  - a.** The reception of an R-APS (NR) message causes the RPL Owner Node to start the WTR (Wait-to-Restore) timer.
  - b.** The WTR timer is cancelled if during the WTR period a higher priority request than NR is accepted by the RPL Owner Node or is declared locally at the RPL Owner Node.
  - c.** When the WTR timer expires, without the presence of any other higher priority request, the RPL Owner Node initiates reversion by blocking its traffic channel over the RPL, transmitting an R-APS (NR, RB) message over both ring ports, informing the ring that the RPL is blocked, and performing a flush FDB action.
  - d.** The acceptance of the R-APS (NR, RB) message causes all ring nodes to unblock any blocked non-RPL link that does not have an SF condition. If it is an R-APS (NR, RB) message without a DNF (do not flush) indication, all ring nodes flush the FDB.
- **Recovery with Non-revertive Mode** – In non-revertive operation, the ring does not automatically revert when all ring links and ring nodes have recovered and no external requests are active. Non-revertive operation is handled in the following way:
  - a.** The RPL Owner Node does not generate a response on reception of an R-APS (NR) messages.



- b.** When other healthy ring nodes receive the NR (Node ID) message, no action is taken in response to the message.
  - c.** When the operator issues the Clear command (Configure Operation page) for non-revertive mode at the RPL Owner Node, the non-revertive operation is cleared, the RPL Owner Node blocks its RPL port, and transmits an R-APS (NR, RB) message in both directions, repeatedly.
  - d.** Upon receiving an R-APS (NR, RB) message, any blocking node should unblock its non-failed ring port. If it is an R-APS (NR, RB) message without a DNF indication, all ring nodes flush the FDB.
- Recovery for Forced Switching – A Forced Switch command is removed by issuing the Clear command (Configure Operation page) to the same ring node where Forced Switch mode is in effect. The clear command removes any existing local operator commands, and triggers reversion if the ring is in revertive behavior mode.

The ring node where the Forced Switch was cleared continuously transmits the R-APS (NR) message on both ring ports, informing other nodes that no request is present at this ring node. The ring nodes stop transmitting R-APS (NR) messages when they accept an RAPS (NR, RB) message, or when another higher priority request is received.

If the ring node where the Forced Switch was cleared receives an R-APS (NR) message with a Node ID higher than its own Node ID, it unblocks any ring port which does not have an SF condition and stops transmitting R-APS (NR) message over both ring ports.

- Recovery with revertive mode is handled as follows:
  - a.** The reception of an R-APS (NR) message causes the RPL Owner Node to start the WTB timer.
  - b.** The WTB timer is cancelled if during the WTB period a higher priority request than NR is accepted by the RPL Owner Node or is declared locally at the RPL Owner Node.
  - c.** When the WTB timer expires, in the absence of any other higher priority request, the RPL Owner Node initiates reversion by blocking the traffic channel over the RPL, transmitting an R-APS (NR, RB) message over both ring ports, informing the ring that the RPL is blocked, and flushes the FDB.
  - d.** The acceptance of the R-APS (NR, RB) message causes all ring nodes to unblock any blocked non-RPL that does not have an SF condition. If it is an R-APS (NR, RB) message without a DNF indication, all ring nodes flush their FDB. This action unblocks the ring port which was blocked as a result of an operator command.

- Recovery with non-revertive mode is handled as follows:
  - a. The RPL Owner Node, upon reception of an R-APS(NR) message and in the absence of any other higher priority request does not perform any action.
  - b. Then, after the operator issues the Clear command (Configure Operation page) at the RPL Owner Node, this ring node blocks the ring port attached to the RPL, transmits an R-APS (NR, RB) message on both ring ports, informing the ring that the RPL is blocked, and flushes its FDB.
  - c. The acceptance of the R-APS (NR, RB) message triggers all ring nodes to unblock any blocked non-RPL which does not have an SF condition. If it is an R-APS (NR, RB) message without a DNF indication, all ring nodes flush their FDB. This action unblocks the ring port which was blocked as result of an operator command.
- Recovery for Manual Switching – A Manual Switch command is removed by issuing the Clear command (Configure Operation page) at the same ring node where the Manual Switch is in effect. The clear command removes any existing local operator commands, and triggers reversion if the ring is in revertive behavior mode.

The ring node where the Manual Switch was cleared keeps the ring port blocked for the traffic channel and for the R-APS channel, due to the previous Manual Switch command. This ring port is kept blocked until the RPL is blocked as a result of ring protection reversion, or until there is another higher priority request (e.g., an SF condition) in the ring.

The Ethernet Ring Node where the Manual Switch was cleared continuously transmits the R-APS (NR) message on both ring ports, informing that no request is present at this ring node. The ring nodes stop transmitting R-APS (NR) messages when they accept an RAPS (NR, RB) message, or when another higher priority request is received.

If the ring node where the Manual Switch was cleared receives an R-APS (NR) message with a Node ID higher than its own Node ID, it unblocks any ring port which does not have an SF condition and stops transmitting R-APS (NR) message on both ring ports.

- Recovery with revertive mode is handled as follows:
  - a. The RPL Owner Node, upon reception of an R-APS (NR) message and in the absence of any other higher priority request, starts the WTB timer and waits for it to expire. While the WTB timer is running, any latent R-APS (MS) message is ignored due to the higher priority of the WTB running signal.
  - b. When the WTB timer expires, it generates the WTB expire signal. The RPL Owner Node, upon reception of this signal,

initiates reversion by blocking the traffic channel on the RPL, transmitting an R-APS (NR, RB) message over both ring ports, informing the ring that the RPL is blocked, and flushes its FDB.

- c. The acceptance of the R-APS (NR, RB) message causes all ring nodes to unblock any blocked non-RPL that does not have an SF condition. If it is an R-APS (NR, RB) message without a DNF indication, all Ethernet Ring Nodes flush their FDB. This action unblocks the ring port which was blocked as a result of an operator command.
- Recovery with non-revertive mode is handled as follows:
      - a. The RPL Owner Node, upon reception of an R-APS (NR) message and in the absence of any other higher priority request does not perform any action.
      - b. Then, after the operator issues the Clear command (Configure Operation page) at the RPL Owner Node, this ring node blocks the ring port attached to the RPL, transmits an R-APS (NR, RB) message over both ring ports, informing the ring that the RPL is blocked, and flushes its FDB.
      - c. The acceptance of the R-APS (NR, RB) message triggers all ring nodes to unblock any blocked non-RPL which does not have an SF condition. If it is an R-APS (NR, RB) message without a DNF indication, all ring nodes flush their FDB. This action unblocks the ring port which was blocked as result of an operator command.
- ◆ **Major Domain** – The ERPS ring used for sending control packets.
 

This switch can support up to six rings. However, ERPS control packets can only be sent on one ring. This parameter is used to indicate that the current ring is a secondary ring, and to specify the major ring which will be used to send ERPS control packets.

The Ring Protection Link (RPL) is always the west port. So the physical port on a secondary ring must be the west port. In other words, if a domain has two physical ring ports, this ring can only be a major ring, not a secondary ring (or sub-domain) which can have only one physical ring port. The major domain therefore cannot be set if the east port is already configured.
- ◆ **Node ID** – A MAC address unique to the ring node. The MAC address must be specified in the format xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx. (Default: CPU MAC address)
 

The ring node identifier is used to identify a node in R-APS messages for both automatic and manual switching recovery operations.

For example, a node that has one ring port in SF condition and detects that the condition has been cleared, will continuously transmit R-APS (NR) messages with its own Node ID as priority information over both ring ports, informing its neighbors that no request is present at this node. When another recovered


node holding the link blocked receives this message, it compares the Node ID information with its own. If the received R-APS (NR) message has a higher priority, this unblocks its ring ports. Otherwise, the block remains unchanged.

The node identifier may also be used for debugging, such as to distinguish messages when a node is connected to more than one ring.

- ◆ **R-APS with VC** – Configures an R-APS virtual channel to connect two interconnection points on a sub-ring, allowing ERPS protocol traffic to be tunneled across an arbitrary Ethernet network. (Default: Enabled)
  - A sub-ring may be attached to a primary ring with or without a virtual channel. A virtual channel is used to connect two interconnection points on the sub-ring, tunneling R-APS control messages across an arbitrary Ethernet network topology. If a virtual channel is not used to cross the intermediate Ethernet network, data in the traffic channel will still flow across the network, but the all R-APS messages will be terminated at the interconnection points.
  - Sub-ring with R-APS Virtual Channel – When using a virtual channel to tunnel R-APS messages between interconnection points on a sub-ring, the R-APS virtual channel may or may not follow the same path as the traffic channel over the network. R-APS messages that are forwarded over the sub-ring's virtual channel are broadcast or multicast over the interconnected network. For this reason the broadcast/multicast domain of the virtual channel should be limited to the necessary links and nodes. For example, the virtual channel could span only the interconnecting rings or sub-rings that are necessary for forwarding R-APS messages of this sub-ring. Care must also be taken to ensure that the local RAPS messages of the sub-ring being transported over the virtual channel into the interconnected network can be uniquely distinguished from those of other interconnected ring R-APS messages. This can be achieved by, for example, by using separate VIDs for the virtual channels of different sub-rings.

Note that the R-APS virtual channel requires a certain amount of bandwidth to forward R-APS messages on the interconnected Ethernet network where a sub-ring is attached. Also note that the protection switching time of the sub-ring may be affected if R-APS messages traverse a long distance over an R-APS virtual channel.


**Figure 300: Sub-ring with Virtual Channel**

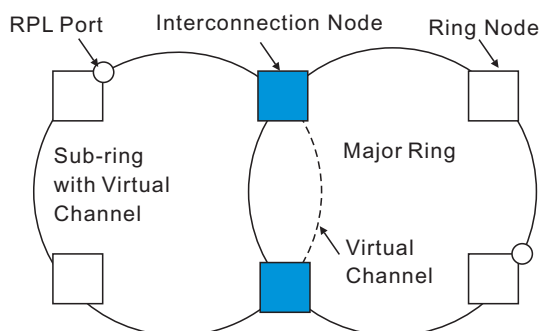

- **Sub-ring without R-APS Virtual Channel** – Under certain circumstances it may not be desirable to use a virtual channel to interconnect the sub-ring over an arbitrary Ethernet network. In this situation, the R-APS messages are terminated on the interconnection points. Since the sub-ring does not provide an R-APS channel nor R-APS virtual channel beyond the interconnection points, R-APS channel blocking is not employed on the normal ring links to avoid channel segmentation. As a result, a failure at any ring link in the sub-ring will cause the R-APS channel of the sub-ring to be segmented, thus preventing R-APS message exchange between some of the sub-ring's ring nodes.

No R-APS messages are inserted or extracted by other rings or sub-rings at the interconnection nodes where a sub-ring is attached. Hence there is no need for either additional bandwidth or for different VIDs/Ring IDs for the ring interconnection. Furthermore, protection switching time for a sub-ring is independent from the configuration or topology of the interconnected rings. In addition, this option always ensures that an interconnected network forms a tree topology regardless of its interconnection configuration. This means that it is not necessary to take precautions against forming a loop which is potentially composed of a whole interconnected network.

**Figure 301: Sub-ring without Virtual Channel**

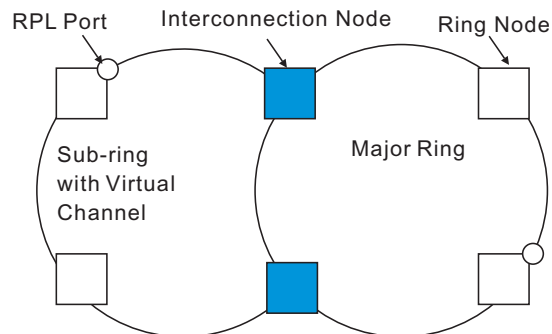

- ◆ **R-APS Def MAC** – Sets the switch's MAC address to be used as the node identifier in R-APS messages. (Default: Enabled)

When ring nodes running ERPSv1 and ERPSv2 co-exist on the same ring, the Ring ID of each ring node must be configured as "1".

If this command is disabled, the following strings are used as the node identifier:

- ERPSv1: 01-19-A7-00-00-01
- ERPSv2: 01-19-A7-00-00-[Ring ID]

- ◆ **Propagate TC** – Enables propagation of topology change messages from a secondary ring to the primary ring. (Default: Disabled)

When a secondary ring detects a topology change, it can pass a message about this event to the major ring. When the major ring receives this kind of message from a secondary ring, it can clear the MAC addresses on its ring ports to help


the second ring restore its connections more quickly through protection switching.

When the MAC addresses are cleared, data traffic may flood onto the major ring. The data traffic will become stable after the MAC addresses are learned again. The major ring will not be broken, but the bandwidth of data traffic on the major ring may suffer for a short period of time due to this flooding behavior.

- ◆ **Non-ERPS Device Protection** – Sends non-standard health-check packets when an owner node enters protection state without any link down event having been detected through Signal Fault messages. (Default: Disabled)
  - The RPL owner node detects a failed link when it receives R-APS (SF - signal fault) messages from nodes adjacent to the failed link. The owner then enters protection state by unblocking the RPL. However, using this standard recovery procedure may cause a non-ERPS device to become isolated when the ERPS device adjacent to it detects a continuity check message (CCM) loss event and blocks the link between the non-ERPS device and ERPS device.

CCMs are propagated by the Connectivity Fault Management (CFM) protocol. If the standard recovery procedure were used as shown in the following figure, and node E detected CCM loss, it would send an R-APS (SF) message to the RPL owner and block the link to node D, isolating that non-ERPS device.

**Figure 302: Non-ERPS Device Protection**

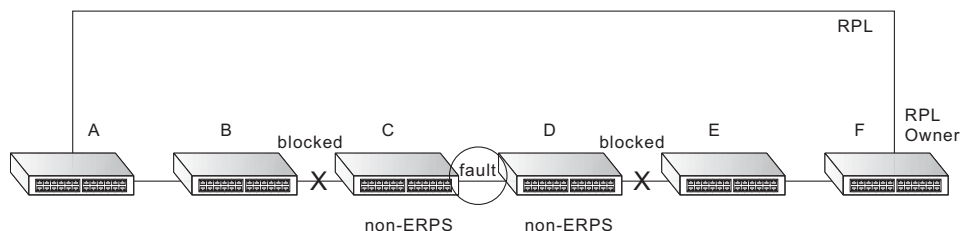

When non-ERPS device protection is enabled on the ring, the ring ports on the RPL owner node and non-owner nodes will not be blocked when signal loss is detected by CCM loss events.

- When non-ERPS device protection is enabled on an RPL owner node, it will send non-standard health-check packets to poll the ring health when it enters the protection state. It does not use the normal procedure of waiting to receive an R-APS (NR - no request) message from nodes adjacent to the recovered link. Instead, it waits to see if the non-standard health-check packets loop back. If they do, indicating that the fault has been resolved, the RPL will be blocked.

After blocking the RPL, the owner node will still transmit an R-APS (NR, RB - ring blocked) message. ERPS-compliant nodes receiving this message flush their forwarding database and unblock previously blocked ports. The ring is now returned to Idle state.

- ◆ **Holdoff Timer** – The hold-off timer is used to filter out intermittent link faults. Faults will only be reported to the ring protection mechanism if this timer expires. (Range: 0-10000 milliseconds, in steps of 100 milliseconds)

In order to coordinate timing of protection switches at multiple layers, a hold-off timer may be required. Its purpose is to allow, for example, a server layer protection switch to have a chance to fix the problem before switching at a client layer.

When a new defect or more severe defect occurs (new Signal Failure), this event will not be reported immediately to the protection switching mechanism if the provisioned hold-off timer value is non-zero. Instead, the hold-off timer will be started. When the timer expires, whether a defect still exists or not, the timer will be checked. If one does exist, that defect will be reported to the protection switching mechanism. The reported defect need not be the same one that started the timer.

- ◆ **Guard Timer** – The guard timer is used to prevent ring nodes from receiving outdated R-APS messages. During the duration of the guard timer, all received R-APS messages are ignored by the ring protection control process, giving time for old messages still circulating on the ring to expire. (Range: 10-2000 milliseconds, in steps of 10 milliseconds)

The guard timer duration should be greater than the maximum expected forwarding delay for an R-APS message to pass around the ring. A side-effect of the guard timer is that during its duration, a node will be unaware of new or existing ring requests transmitted from other nodes.

- ◆ **WTB Timer** – The Wait to Block (WTB) timer is used when clearing Forced Switch (FS) and Manual Switch (MS) commands. As multiple FS commands are allowed to co-exist in a ring, the WTB timer ensures that clearing of a single FS command does not trigger re-blocking of the RPL. When clearing an MS command, the WTB timer prevents the formation of a closed loop due to possible a timing anomaly where the RPL owner node receives an outdated remote MS request during the recovery process.

When recovering from an FS or MS command, the delay timer must be long enough to receive any latent remote FS or MS commands. This delay timer called the WTB timer is defined to be 5 seconds longer than the guard timer. This is enough time to allow a reporting ring node to transmit two R-APS messages and allow the ring to identify the latent condition.

This delay timer is activated on the RPL owner node. When the relevant delay timer expires, the RPL owner node initiates the reversion process by transmitting an R-APS (NR, RB) message. The delay timer, (i.e., WTR or WTB) is deactivated when any higher priority request preempts this delay timer.

The delay timers (i.e. WTR and WTB) may be started and stopped by the system. A request to start running the delay timer does not restart the delay timer. A request to stop the delay timer stops the delay timer and resets its value. The Clear command (Configure Operation page) can be used to stop the delay timer.



- ◆ **WTR Timer** – The wait-to-restore timer is used to verify that the ring has stabilized before blocking the RPL after recovery from a signal failure.  
(Range: 5-12 minutes)

If the switch goes into ring protection state due to a signal failure, after the failure condition is cleared, the RPL owner will start the wait-to-restore timer and wait until it expires to verify that the ring has stabilized before blocking the RPL and returning to the Idle (normal operating) state.

- ◆ **WTB Expire** – The time before the wait-to-block timer expires.
- ◆ **WTR Expire** – The time before the wait-to-restore timer expires.

- ◆ **West/East** – Connects to next ring node to the west/east.

Each node must be connected to two neighbors on the ring. For convenience, the ports connected are referred to as east and west ports. Alternatively, the closest neighbor to the east should be the next node in the ring in a clockwise direction, and the closest neighbor to the west should be the next node in the ring in a counter-clockwise direction.

- ◆ **Interface** – The port or trunk attached to the west or east ring port.

Note that a ring port cannot be configured as a member of a spanning tree, a dynamic trunk, or a static trunk.

- ◆ **Port State** – Once configured, this field shows the operational state of the ring ports for this node:

- Blocking – The transmission and reception of traffic is blocked and the forwarding of R-APS messages is blocked, but the transmission of locally generated R-APS messages is allowed and the reception of all R-APS messages is allowed.
- Forwarding – The transmission and reception of traffic is allowed; transmission, reception and forwarding of R-APS messages is allowed.
- Unknown – The interface is not in a known state.

- ◆ **Local SF** – Shows if a signal fault exists on a link to the local node.

- ◆ **Local FS** – Shows if a forced switch command was issued on this interface.

- ◆ **Local MS** – Shows if a manual switch command was issued on this interface.

- ◆ **MEP** – Specifies the CCM MEPs used to monitor the link on a ring node.

If a MEP is used to monitor the link status of an ERPS node with CFM continuity check messages, then the MEG Level parameter on this configuration page must match the authorized maintenance level of the CFM domain to which the specified MEP belongs. (See [“Configuring CFM Maintenance Domains” on page 490.](#))

To ensure complete monitoring of a ring node, specify the CFM MEPs used to monitor both the east and west ports of the ring node.



If CFM determines that a MEP node which has been configured to monitor a ring port with this command has gone down, this information is passed to ERPS, which in turn processes it as a ring node failure. For more information on how ERPS recovers from a node failure, refer to the description of the Revertive parameter on this configuration page.

- ◆ **RPL** – If node is connected to the RPL, this shows by which interface.

### Web Interface

To create an ERPS ring:

1. Click Administration, ERPS.
2. Select Configure Domain from the Step list.
3. Select Add from the Action list.
4. Enter a name and optional identifier for the ring.
5. Click Apply.

**Figure 303: Creating an ERPS Ring**

Administration > ERPS

Step: 2. Configure Domain Action: Add

Domain Name

Domain ID (1-255) ☒

Apply Revert

To configure the ERPS parameters for a ring:

1. Click Administration, ERPS.
2. Select Configure Domain from the Step list.
3. Select Configure Details from the Action list.
4. Configure the ERPS parameters for this node. Note that spanning tree protocol cannot be configured on the ring ports, nor can these ports be members of a static or dynamic trunk. And the control VLAN must be unique for each ring. Adjust the protocol timers as required. The RPL owner must be set on one of the rings. And the administrative status enabled once all of the other settings have been entered.
5. Click Apply.

**Figure 304: Creating an ERPS Ring**

**Administration > ERPS**

Step: 2. Configure Domain Action: Configure Details

Domain Name: rd1

Domain ID: 1

Admin Status: ☒ Enabled

Version: 2

MEG Level (0-7): 1

Control VLAN: ☒ 2

Node State: Idle

Node Type: RPL Owner

Revertive: ☒ Enabled

Major Domain: ☐ ☐

Node ID: 00-E0-0C-00-00-FD

R-APS with VC: ☒ Enabled

R-APS Def MAC: ☒ Enabled

Propagate TC: ☐ Enabled

Non-ERPS Dev Protect: ☐ Enabled

Holdoff Timer (0-10000): 0 ms

Guard Timer (10-2000): 500 ms

WTB Timer: 5500 ms

WTR Timer (5-12): 5 min

WTB Expire

WTR Expire

West: ☒ Enabled

Interface: Eth 1/10

Port State: Blocking

Local SF: No

Local FS: No

Local MS: No

MEP (1-8191): ☐

RPL: Yes

East: ☒ Enabled

Interface: Eth 1/12

Port State: Forwarding

Local SF: No

Local FS: No

Local MS: No

MEP (1-8191): ☐

RPL: No

Apply Revert

To show the configured ERPS rings:

1. Click Administration, ERPS.
2. Select Configure Domain from the Step list.
3. Select Show from the Action list.

**Figure 305: Showing Configured ERPS Rings**

**Administration > ERPS**

Step: 2. Configure Domain Action: Show

Domain List Total: 1

|                          | Domain Name | ID | Admin Status | Ver | MEG Level | Control VLAN | Node State | Type      | Revertive | W/E  | Interface | Port State | Local SF | Local FS | Local MS | MEP | RPL |
|--------------------------|-------------|----|--------------|-----|-----------|--------------|------------|-----------|-----------|------|-----------|------------|----------|----------|----------|-----|-----|
| <input type="checkbox"/> | rd1         | 1  | Enabled      | 2   | 1         | 2            | Idle       | RPL Owner | Yes       | West | Eth 1/10  | Blocking   | No       | No       | No       |     | Yes |
|                          |             |    |              |     |           |              |            |           |           | East | Eth 1/12  | Forwarding | No       | No       | No       |     | No  |

Delete Revert

## ERPS Forced and Manual Mode Operations

Use the Administration > ERPS (Configure Operation) page to block a ring port using Forced Switch or Manual Switch commands.

### Parameters

These parameters are displayed:

- ◆ **Domain Name** – Name of a configured ERPS ring.
- ◆ **Operation** – Specifies a Forced Switch (FS) or Manual Switch (MS) operation on the east or west ring port.
  - **Forced Switch** – Blocks specified ring port. (Options: West or East)
    - A ring with no pending request has a logical topology with the traffic channel blocked at the RPL and unblocked on all other ring links. In this situation, the FS command triggers protection switching as follows:
      - a. The ring node where an FS command was issued blocks the traffic channel and R-APS channel on the ring port to which the command was issued, and unblocks the other ring port.
      - b. The ring node where the FS command was issued transmits R-APS messages indicating FS over both ring ports. R-APS (FS) messages are continuously transmitted by this ring node while the local FS command is the ring node's highest priority command (see [Table 29 on page 480](#)). The R-APS (FS) message informs other ring nodes of the FS command and that the traffic channel is blocked on one ring port.
      - c. A ring node accepting an R-APS (FS) message, without any local higher priority requests unblocks any blocked ring port. This action subsequently unblocks the traffic channel over the RPL.
      - d. The ring node accepting an R-APS (FS) message, without any local higher priority requests stops transmission of R-APS messages.
      - e. The ring node receiving an R-APS (FS) message flushes its FDB.
    - Protection switching on a forced switch request is completed when the above actions are performed by each ring node. At this point, traffic flows around the ring are resumed. From this point on the following rules apply regarding processing of further forced switch commands:
      - While an existing forced switch request is present in a ring, any new forced switch request is accepted, except on a ring node having a prior local forced switch request. The ring nodes where further forced switch commands are issued block the traffic channel and R-APS channel on the ring port at which the forced switch was issued. The ring node where the forced switch command was issued transmits an R-APS message over both ring ports indicating FS. R-APS (FS) messages are continuously transmitted by this ring node while the local FS command is the ring node's highest priority

command. As such, two or more forced switches are allowed in the ring, which may inadvertently cause the segmentation of an ring. It is the responsibility of the operator to prevent this effect if it is undesirable.

Ring protection requests, commands and R-APS signals have the priorities as specified in the following table.

**Table 29: ERPS Request/State Priority**

| Request / State and Status | Type   | Priority |
|----------------------------|--------|----------|
| Clear                      | local  | highest  |
| FS                         | local  |          |
| R-APS (FS)                 | remote |          |
| local SF*                  | local  |          |
| local clear SF             | local  |          |
| R-APS (SF)                 | remote |          |
| R-APS (MS)                 | remote |          |
| MS                         | local  |          |
| WTR Expires                | local  |          |
| WTR Running                | local  |          |
| WTB Expires                | local  |          |
| WTB Running                | local  |          |
| R-APS (NR, RB)             | remote |          |
| R-APS (NR)                 | remote | lowest   |

\* If an Ethernet Ring Node is in the Forced Switch state, local SF is ignored.

- Recovery for forced switching under revertive and non-revertive mode is described under the Revertive parameter.
- When a ring is under an FS condition, and the node at which an FS command was issued is removed or fails, the ring remains in FS state because the FS command can only be cleared at node where the FS command was issued. This results in an unrecoverable FS condition.

When performing a maintenance procedure (e.g., replacing, upgrading) on a ring node (or a ring link), it is recommended that FS commands be issued at the two adjacent ring nodes instead of directly issuing a FS command at the ring node under maintenance in order to avoid falling into the above mentioned unrecoverable situation.

- **Manual Switch** – Blocks specified ring port, in the absence of a failure or an FS command. (Options: West or East)
  - A ring with no request has a logical topology with the traffic channel blocked at the RPL and unblocked on all other ring links. In this situation, the Manual Switch command triggers protection switching as follows:
    - a. If no other higher priority commands exist, the ring node, where a manual switch command was issued, blocks the traffic channel and R-APS channel on the ring port to which the command was issued, and unblocks the other ring port.
    - b. If no other higher priority commands exist, the ring node where the manual switch command was issued transmits R-APS messages over both ring ports indicating MS. R-APS (MS) message are continuously transmitted by this ring node while the local MS command is the ring node's highest priority command (see [Table 29 on page 480](#)). The R-APS (MS) message informs other ring nodes of the MS command and that the traffic channel is blocked on one ring port.
    - c. If no other higher priority commands exist and assuming the ring node was in Idle state before the manual switch command was issued, the ring node flushes its local FDB.
    - d. A ring node accepting an R-APS (MS) message, without any local higher priority requests unblocks any blocked ring port which does not have an SF condition. This action subsequently unblocks the traffic channel over the RPL.
    - e. A ring node accepting an R-APS (MS) message, without any local higher priority requests stops transmitting R-APS messages.
    - f. A ring node receiving an R-APS (MS) message flushes its FDB.
  - Protection switching on a manual switch request is completed when the above actions are performed by each ring node. At this point, traffic flows around the ring are resumed. From this point on, the following rules apply regarding processing of further manual switch commands:
    - a. While an existing manual switch request is present in the ring, any new manual switch request is rejected. The request is rejected at the ring node where the new request is issued and a notification is generated to inform the operator that the new MS request was not accepted.
    - b. A ring node with a local manual switch command which receives an R-APS (MS) message with a different Node ID clears its manual switch request and starts transmitting R-APS (NR) messages. The ring node keeps the ring port blocked due to the previous manual switch command.

- c.** An ring node with a local manual switch command that receives an R-APS message or a local request of higher priority than R-APS (MS) clear its manual switch request. The ring node then processes the new higher priority request.
- Recovery for manual switching under revertive and non-revertive mode is described under the Revertive parameter.
- **Clear** – Manually clears the protection state which has been invoked by a forced switch or manual switch command, and the node is operating under non-revertive mode; or before the WTR or WTB timer expires when the node is operating in revertive mode.
  - Two steps are required to make a ring operating in non-revertive mode return to Idle state from forced switch or manual switch state:
    - 1.** Issue a Clear command to remove the forced switch command on the node where a local forced switch command is active.
    - 2.** Issue a Clear command on the RPL owner node to trigger the reversion.
  - The Clear command will also stop the WTR and WTB delay timers and reset their values.
  - More detailed information about using this command for non-revertive mode is included under the Revertive parameter. (See the Command Usage section under [“ERPS Ring Configuration” on page 463.](#))

#### **Web Interface**

To block a ring port:

- 1.** Click Administration, ERPS.
- 2.** Select Configure Domain from the Step list.
- 3.** Select Configure Operation from the Action list.
- 4.** Select the domain name from the drop-down list.
- 5.** Specify a Forced Switch, Manual Switch, or Clear operation.
- 6.** Click Apply.

**Figure 306: Blocking an ERPS Ring Port**

Administration > ERPS

Step: 2. Configure Domain Action: Configure Operation

Domain Name rd1

Operation Clear

Apply Revert

## Connectivity Fault Management

Connectivity Fault Management (CFM) is an OAM protocol that includes proactive connectivity monitoring using continuity check messages, fault verification through loop back messages, and fault isolation by examining end-to-end connections between provider edge devices or between customer edge devices.

CFM is implemented as a service level protocol based on service instances which encompass only that portion of the metropolitan area network supporting a specific customer. CFM can also provide controlled management access to a hierarchy of maintenance domains (such as the customer, service provider, and equipment operator).

This switch supports functions for defining the CFM structure, including domains, maintenance associations, and maintenance access points. It also supports fault detection through continuity check messages for all known maintenance points, and cross-check messages which are used to verify a static list of remote maintenance points located on other devices (in the same maintenance association) against those found through continuity check messages. Fault verification is supported using loop back messages, and fault isolation with link trace messages. Fault notification is also provided by SNMP alarms which are automatically generated by maintenance points when connectivity faults or configuration errors are detected in the local maintenance domain.

### *Key Components of CFM*


CFM provides restricted management access to each Service Instance using a structured conceptual network based on these components:

- ◆ A Maintenance Domain defines a part of the network controlled by a single operator, and supports management access to the domain through Domain Service Access Points (DSAPs) configured on the domain boundary, as well as connectivity testing between these DSAPs.
- ◆ A Maintenance Association (MA) contains the DSAPs for an individual Service Instance. DSAPs are the primary maintenance points used to monitor connectivity across a maintenance domain, and are the entry points to the paths which interconnect the access points allocated to a service instance.

- ◆ A Maintenance Level allows maintenance domains to be nested in a hierarchical fashion, providing access to the specific network portions required by each operator. Domains at lower levels may be either hidden or exposed to operators managing domains at a higher level, allowing either course or fine fault resolution.
- ◆ Maintenance End Points (MEPs) which provide full CFM access to a Service Instance (i.e., a specific MA), and Maintenance Intermediate Points (MIPs) which are passive entities that merely validate received CFM messages, or respond to link trace and loop back requests. MIPs are the interconnection points that make up all possible paths between the DSAPs within an MA, and may also include interconnection points in lower-level domains if exposed by CFM settings.

The following figure shows a single Maintenance Domain, with DSAPs located on the domain boundary, and Internal Service Access Points (ISAPs) inside the domain through which frames may pass between the DSAPs.


**Figure 307: Single CFM Maintenance Domain**

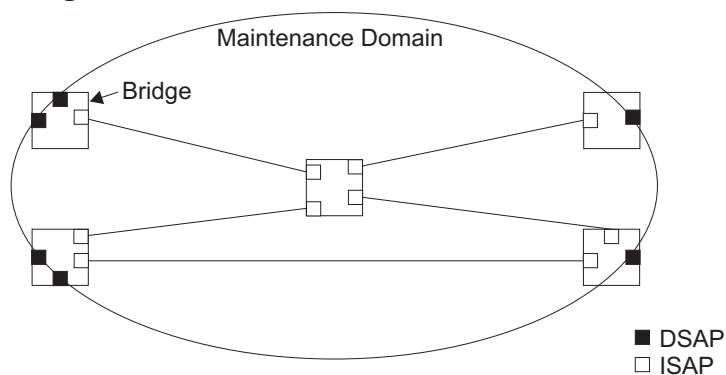

The figure below shows four maintenance associations contained within a hierarchical structure of maintenance domains. At the innermost level, there are two operator domains which include access points marked "O<sub>1</sub>" and "O<sub>2</sub>" respectively. The users of these domains can see their respective MEPs as well as all the MIPs within their domains. There is a service provider domain at the second level in the hierarchy. From the service provider's view, the access points marked "P" are visible, and all access points within the operator domains have also been made visible as MIPs according to common practice. And finally, there is a customer domain at the top of the hierarchy. Users at this level can only see the access points marked "C" on the outer domain boundary. Again, normal practice is to hide the internal structure of the network from outsiders to reduce security risks.



**Figure 308: Multiple CFM Maintenance Domains**

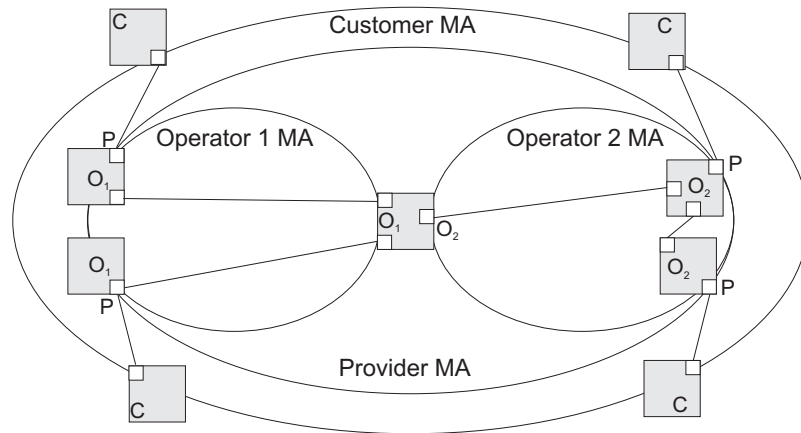

Note that the Service Instances within each domain shown above are based on a unique maintenance association for the specific users, distinguished by the domain name, maintenance level, maintenance association's name, and assigned VLAN.

#### *Basic CFM Operations*

CFM uses standard Ethernet frames for sending protocol messages. Both the source and destination address for these messages are based on unicast or multicast MAC addresses, and therefore confined to a single Layer 2 CFM service VLAN. For this reason, the transmission, forwarding, and processing of CFM frames is performed by bridges, not routers. Bridges that do not recognize CFM messages forward them as normal data. There are three basic types of CFM messages, including continuity check, link trace, and loop back.

Continuity check messages (CCMs) are multicast within a single Service Instance (i.e., a specific MA), allowing MEPs to discover other MEPs within the same MA, and MIPs to discover MEPs. Connectivity faults are indicated when a known MEP stops sending CCMs, or a remote MEP configured in a static list does not come up. Configuration errors, such as a cross-connect between different MAs, are indicated when a CCM is received with an incorrect MA identifier or maintenance level.

Loopback messages are used for fault verification. These messages can be sent using the MAC address of any destination MEP within the same MA. If the target MEP's identifier has been discovered through CCM messages, then a loop back message can also be sent using the MEP's identifier. A reply indicates that the destination is reachable.

Link trace messages are used for fault verification. These messages are multicast frames sent out to track the hop-by-hop path to a target MEP within the same MA. Responses provide information on the ingress, egress, and relay action taken at each hop along the path, providing vital information about connectivity problems. Responses allow the sender to discover all of the maintenance points that would be traversed by a data frame sent to the target MAC address.

SNMP traps can also be configured to provide an automated method of fault notification. If the fault notification generator detects one or more defects within

the configured time period, and fault alarms are enabled, a corresponding trap will be sent. No further fault alarms are sent until the fault notification generator has been reset by the passage of a configured time period without detecting any further faults. Upon receiving a fault alarm, you should inspect the related SNMP objects for the reporting MEP, diagnose the fault, correct it, and re-examine the MEP's SNMP objects to see whether the fault notification generator has been reset.

#### *Configuration Guidelines*

1. Configure the maintenance domains with the MD List (see ["Configuring CFM Maintenance Domains"](#)).
2. Configure the maintenance associations with MA List (see ["Configuring CFM Maintenance Associations"](#)).
3. Configure the local maintenance end points (MEPs) which will serve as the domain service access points for the specified maintenance association using the MEP List (see ["Configuring CFM Maintenance Associations"](#)).
4. Enter a static list of MEPs assigned to other devices within the same maintenance association using the Remote MEP List (see ["Configuring Remote Maintenance End Points"](#)). This allows CFM to automatically verify the functionality of these remote end points by cross-checking the static list configured on this device against information learned through continuity check messages.
5. Enable CFM globally on the switch using the Configure Global screen (see ["Configuring Global Settings for CFM"](#)).
6. Enable CFM on the local MEPs using the Configure Interface screen (see ["Configuring Interfaces for CFM"](#)).
7. Enable continuity check and cross-check operations, and configure AIS parameters using the Configure MA – Configure Details screen (see ["Configuring CFM Maintenance Associations"](#)).

Other configuration changes may be required for your particular environment, such as adjusting the interval at which continuity check messages are sent (see ["Configuring CFM Maintenance Associations"](#)), or setting the start-up delay for the cross-check operation (see ["Configuring Global Settings for CFM"](#)). You can also enable SNMP traps for events discovered by continuity check messages or cross-check messages (see ["Configuring Global Settings for CFM"](#)).

## Configuring Global Settings for CFM

Use the Administration > CFM (Configure Global) page to configure global settings for CFM, such as enabling the CFM process on the switch, setting the start-up delay for cross-check operations, configuring parameters for the link trace cache, and enabling traps for events discovered by continuity check messages or cross-check messages.

### Parameters

These parameters are displayed:

#### *Global Configuration*

- ◆ **CFM Status** – Enables CFM processing globally on the switch. (Default: Disabled)

To avoid generating an excessive number of traps, the complete CFM maintenance structure and process parameters should be configured prior to enabling CFM processing globally on the switch. Specifically, the maintenance domains, maintenance associations, and maintenance end-points (MEPs) should be configured on each participating bridge using the Configure MD page (see "[Configuring CFM Maintenance Domains](#)"), Configure MA page (see "[Configuring CFM Maintenance Associations](#)"), and the Configure MEP page (see "[Configuring Maintenance End Points](#)").

When CFM is enabled, hardware resources are allocated for CFM processing.

- ◆ **MEP Cross Check Start Delay** – Sets the maximum delay that a device waits for remote MEPs to come up before starting the cross-check operation. (Range: 1-65535 seconds; Default: 10 seconds)

This parameter sets the time to wait for a remote MEP to come up, and the switch starts cross-checking the list of statically configured remote MEPs in the local maintenance domain (Configure Remote MEP page, see "[Configuring Remote Maintenance End Points](#)") against the MEPs learned through continuity check messages (CCMs).

The cross-check start delay should be configured to a value greater than or equal to the continuity check message interval to avoid generating unnecessary traps (see "[Configuring CFM Maintenance Associations](#)").

#### *Link Trace Cache Settings*

- ◆ **Link Trace Cache** – Enables caching of CFM data learned through link trace messages. (Default: Enabled)

A link trace message is a multicast CFM frame initiated by a MEP, and forwarded from MIP to MIP, with each MIP generating a link trace reply, up to the point at which the link trace message reaches its destination or can no longer be forwarded.

Use this command attribute to enable the link trace cache to store the results of link trace operations initiated on this device. Use the CFM Transmit Link Trace page (see "[Transmitting Link Trace Messages](#)") to transmit a link trace message.

Link trace responses are returned from each MIP along the path and from the target MEP. Information stored in the cache includes the maintenance domain

name, MA name, MEPID, sequence number, and TTL value (see ["Displaying Fault Notification Settings"](#)).

- ◆ **Link Trace Cache Hold Time** – The hold time for CFM link trace cache entries. (Range: 1-65535 minutes; Default: 100 minutes)

Before setting the aging time for cache entries, the cache must first be enabled in the Link Trace Cache attribute field.

- ◆ **Link Trace Cache Size** – The maximum size for the link trace cache. (Range: 1-4095 entries; Default: 100 entries)

If the cache reaches the maximum number of specified entries, or the size is set to a value less than the current number of stored entries, no new entries are added. To add additional entries, the cache size must first be increased, or purged (see ["Displaying Fault Notification Settings"](#)).

#### *Continuity Check Errors*

- ◆ **Connectivity Check Config** – Sends a trap if this device receives a continuity check message (CCM) with the same maintenance end point identifier (MPID) as its own but with a different source MAC address, indicating that a CFM configuration error exists.
- ◆ **Connectivity Check Loop** – Sends a trap if this device receives a CCM with the same source MAC address and MPID as its own, indicating that a forwarding loop exists.
- ◆ **Connectivity Check MEP Down** – Sends a trap if this device loses connectivity with a remote maintenance end point (MEP), or connectivity has been restored to a remote MEP which has recovered from an error condition.
- ◆ **Connectivity Check MEP Up** – Sends a trap if a remote MEP is discovered and added to the local database, the port state of a previously discovered remote MEP changes, or a CCM is received from a remote MEP which has an expired entry in the archived database.

MEP Up traps are suppressed when cross-checking of MEPs is enabled<sup>13</sup> because cross-check traps include more detailed status information.

#### *Cross-check Errors*

- ◆ **Cross Check MA Up** – Sends a trap when all remote MEPs in an MA come up. An MA Up trap is sent if cross-checking is enabled<sup>13</sup>, and a CCM is received from all remote MEPs configured in the static list for this maintenance association<sup>14</sup>.
- ◆ **Cross Check MEP Missing** – Sends a trap if the cross-check timer expires and no CCMs have been received from a remote MEP configured in the static list.

---

13. Cross-checking must be enabled for this type of trap to be reported (see ["Configuring CFM Maintenance Associations"](#)).

14. See ["Configuring Maintenance End Points"](#).

A MEP Missing trap is sent if cross-checking is enabled<sup>13</sup>, and no CCM is received for a remote MEP configured in the static list<sup>14</sup>.

◆ **Cross Check MEP Unknown** – Sends a trap if an unconfigured MEP comes up.

A MEP Unknown trap is sent if cross-checking is enabled<sup>13</sup>, and a CCM is received from a remote MEP that is not configured in the static list<sup>14</sup>.

### Web Interface

To configure global settings for CFM:

1. Click Administration, CFM.
2. Select Configure Global from the Step list.
3. Before enabling CFM processing on the switch, first configure the required CFM domains, maintenance associations, and static MEPs. Then set the delay time to wait for a remote MEP comes up before the switch starts cross-checking the end points learned through CCMs against those stored in the static list.
4. Adjust the parameters for the link trace cache as required.
5. Enable the required traps for continuity check and cross-check errors. Remember that the “Connectivity Check” and “Cross Check” fields on the MA Configuration page must be enabled before related errors can be generated.
6. Click Apply.

**Figure 309: Configuring Global Settings for CFM**

The screenshot shows the 'Administration > CFM' web interface. At the top, there is a 'Step:' dropdown menu set to '1. Configure Global'. Below this, the 'Global Configuration' section contains the following settings:

- CFM Status:** ☒ Enabled
- MEP Cross Check Start Delay (1-65535):** 10 sec
- Link Trace Cache:** ☒ Enabled
- Link Trace Cache Hold Time (1-65535):** 100 min
- Link Trace Cache Size (1-4095):** 100 entries

Below the Global Configuration section is the 'SNMP Trap Configuration' section, which includes the following settings:

- Connectivity Check Config:** ☐ Enabled
- Connectivity Check Loop:** ☐ Enabled
- Connectivity Check MEP Down:** ☐ Enabled
- Connectivity Check MEP Up:** ☐ Enabled
- Cross Check MA Up:** ☐ Enabled
- Cross Check MEP Missing:** ☐ Enabled
- Cross Check MEP Unknown:** ☐ Enabled

At the bottom right of the form, there are two buttons: 'Apply' and 'Revert'.

## Configuring Interfaces for CFM

CFM processes are enabled by default for all physical interfaces, both ports and trunks. You can use the Administration > CFM (Configure Interface) page to change these settings.

### Command Usage


- ◆ An interface must be enabled before a MEP can be created (see ["Configuring Maintenance End Points"](#)).
- ◆ If a MEP has been configured on an interface, it must first be deleted before CFM can be disabled on that interface.
- ◆ When CFM is disabled, hardware resources previously used for CFM processing on that interface are released, and all CFM frames entering that interface are forwarded as normal data traffic.

### Web Interface

To enable CFM on an interface:

1. Click Administration, CFM.
2. Select Configure Interface from the Step list.
3. Select Port or Trunk.
4. Enable CFM on the required interface.
5. Click Apply.

**Figure 310: Configuring Interfaces for CFM**

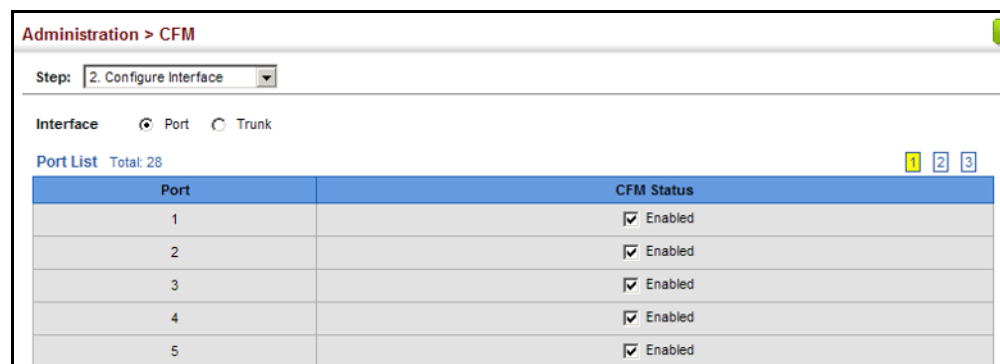

| Administration > CFM  |   |
|---|---|
| Step: 2. Configure Interface  |   |
| Interface <input checked="" type="radio"/> Port <input type="radio"/> Trunk |   |
| Port List Total: 28   |   |
| Port  | CFM Status                                  |
| 1   | <input checked="" type="checkbox"/> Enabled |
| 2   | <input checked="" type="checkbox"/> Enabled |
| 3   | <input checked="" type="checkbox"/> Enabled |
| 4   | <input checked="" type="checkbox"/> Enabled |
| 5   | <input checked="" type="checkbox"/> Enabled |

## Configuring CFM Maintenance Domains

Use the Administration > CFM (Configure MD) pages to create and configure a Maintenance Domain (MD) which defines a portion of the network for which connectivity faults can be managed. Domain access points are set up on the boundary of a domain to provide end-to-end connectivity fault detection, analysis, and recovery. Domains can be configured in a hierarchy to provide management access to the same basic network resources for different user levels.

## Command Usage

### *Configuring General Settings*

- ◆ Where domains are nested, an upper-level hierarchical domain must have a higher maintenance level than the ones it encompasses. The higher to lower level domain types commonly include entities such as customer, service provider, and operator.
- ◆ More than one domain can be configured at the same maintenance level, but a single domain can only be configured with one maintenance level.
- ◆ If MEPs (see ["Configuring Maintenance End Points"](#)) or MAs (see ["Configuring CFM Maintenance Associations"](#)) are configured for a domain, they must first be removed before you can remove the domain.

Maintenance domains are designed to provide a transparent method of verifying and resolving connectivity problems for end-to-end connections. By default, these connections run between the domain service access points (DSAPs) within each MA defined for a domain, and are manually configured (see ["Configuring Maintenance End Points"](#)).

In contrast, MIPs are interconnection points that make up all possible paths between the DSAPs within an MA. MIPs are automatically generated by the CFM protocol when the MIP Creation Type is set to "Default" or "Explicit," and the MIP creation state machine is invoked (as defined in IEEE 802.1ag). The default option allows MIPs to be created for all interconnection points within an MA, regardless of the domain's level in the maintenance hierarchy (e.g., customer, provider, or operator). While the explicit option only generates MIPs within an MA if its associated domain is not at the bottom of the maintenance hierarchy. This option is used to hide the structure of network at the lowest domain level.

The diagnostic functions provided by CFM can be used to detect connectivity failures between any pair of MEPs in an MA. Using MIPs allows these failures to be isolated to smaller segments of the network.

Allowing the CFM to generate MIPs exposes more of the network structure to users at higher domain levels, but can speed up the process of fault detection and recovery. This trade-off should be carefully considered when designing a CFM maintenance structure.

Also note that while MEPs are active agents which can initiate consistency check messages (CCMs), transmit loop back or link trace messages, and maintain the local CCM database, MIPs, on the other hand, are passive agents which can only validate received CFM messages, and respond to loop back and link trace messages.

The MIP creation method defined for an MA (see ["Configuring CFM Maintenance Associations"](#)) takes precedence over the method defined on the CFM Domain List.

### *Configuring Fault Notification*

- ◆ A fault alarm can generate an SNMP notification. It is issued when the MEP fault notification generator state machine detects that the configured time period (MEP Fault Notify Alarm Time) has passed with one or more defects indicated, and fault alarms are enabled at or above the specified priority level (MEP Fault Notify Lowest Priority). The state machine transmits no further fault alarms until it is reset by the passage of a configured time period (MEP Fault Notify Reset Time) without a defect indication. The normal procedure upon receiving a fault alarm is to inspect the reporting MEP's managed objects using an appropriate SNMP software tool, diagnose the fault, correct it, re-examine the MEP's managed objects to see whether the MEP fault notification generator state machine has been reset, and repeat those steps until the fault is resolved.
- ◆ Only the highest priority defect currently detected is reported in the fault alarm.

Priority levels include the following options:

**Table 30: Remote MEP Priority Levels**

| Priority Level | Level Name    | Description   |
|----------------|---------------|---|
| 1              | allDef        | All defects.  |
| 2              | macRemErrXcon | DefMACstatus, DefRemoteCCM, DefErrorCCM, or DefXconCCM. |
| 3              | remErrXcon    | DefErrorCCM, DefXconCCM or DefRemoteCCM.                |
| 4              | errXcon       | DefErrorCCM or DefXconCCM.                              |
| 5              | xcon          | DefXconCCM  |
| 6              | noXcon        | No defects DefXconCCM or lower are to be reported.      |

**Table 31: MEP Defect Descriptions**

| Defect       | Description  |
|--------------|--|
| DefMACstatus | Either some remote MEP is reporting its Interface Status TLV as not isUp, or all remote MEPs are reporting a Port Status TLV that contains some value other than psUp. |
| DefRemoteCCM | The MEP is not receiving valid CCMs from at least one of the remote MEPs.  |
| DefErrorCCM  | The MEP has received at least one invalid CCM whose CCM Interval has not yet timed out.  |
| DefXconCCM   | The MEP has received at least one CCM from either another MAID or a lower MD Level whose CCM Interval has not yet timed out.   |

### **Parameters**

These parameters are displayed:

### *Creating a Maintenance Domain*

- ◆ **MD Index** – Domain index. (Range: 1-65535)



- ◆ **MD Name** – Maintenance domain name. (Range: 1-43 alphanumeric characters)
- ◆ **MD Level** – Authorized maintenance level for this domain. (Range: 0-7)
- ◆ **MIP Creation Type** – Specifies the CFM protocol's creation method for maintenance intermediate points (MIPs) in this domain:
  - **Default** – MIPs can be created for any maintenance association (MA) configured in this domain on any bridge port through which the MA's VID can pass.
  - **Explicit** – MIPs can be created for any MA configured in this domain only on bridge ports through which the MA's VID can pass, and only if a maintenance end point (MEP) is created at some lower MA Level.
  - **None** – No MIP can be created for any MA configured in this domain.

*Configuring Detailed Settings for a Maintenance Domain*

- ◆ **MD Index** – Domain index. (Range: 1-65535)
- ◆ **MEP Archive Hold Time** – The time that data from a missing MEP is retained in the continuity check message (CCM) database before being purged. (Range: 1-65535 minutes; Default: 100 minutes)  

A change to the hold time only applies to entries stored in the database after this attribute is changed.
- ◆ **MEP Fault Notify Lowest Priority** – The lowest priority defect that is allowed to generate a fault alarm. (Range: 1-6, Default: 2)
- ◆ **MEP Fault Notify Alarm Time** – The time that one or more defects must be present before a fault alarm is issued. (Range: 3-10 seconds; Default: 3 seconds)
- ◆ **MEP Fault Notify Reset Time** – The time after a fault alarm has been issued, and no defect exists, before another fault alarm can be issued. (Range: 3-10 seconds; Default: 10 seconds)

**Web Interface**

To create a maintenance domain:

1. Click Administration, CFM.
2. Select Configure MD from the Step list.
3. Select Add from the Action list.
4. Specify the maintenance domains and authorized maintenance levels (thereby setting the hierarchical relationship with other domains).

5. Specify the manner in which MIPs can be created within each domain.
6. Click Apply.

**Figure 311: Configuring Maintenance Domains**

Administration > CFM

Step: 1. Configure MD Action: Add

MD Index (1-65535) 1

MD Name voip

MD Level (0-7) 3

MIP Creation Type Explicit

Apply Revert

To show the configured maintenance domains:

1. Click Administration, CFM.
2. Select Configure MD from the Step list.
3. Select Show from the Action list.

**Figure 312: Showing Maintenance Domains**

Administration > CFM

Step: 1. Configure MD Action: Show

CFM MD List Total: 1

|                          | MD Index | MD Name | MD Level | MIP Creation Type |
|--------------------------|----------|---------|----------|-------------------|
| <input type="checkbox"/> | 1        | voip    | 3        | Explicit          |

Delete Revert

To configure detailed settings for maintenance domains:

1. Click Administration, CFM.
2. Select Configure MD from the Step list.
3. Select Configure Details from the Action list.
4. Select an entry from the MD Index.
5. Specify the MEP archive hold and MEP fault notification parameters.
6. Click Apply

**Figure 313: Configuring Detailed Settings for Maintenance Domains**

The screenshot shows the 'Administration > CFM' configuration page. At the top, there is a breadcrumb trail 'Administration > CFM'. Below it, a 'Step:' dropdown is set to '3. Configure MD' and an 'Action:' dropdown is set to 'Configure Details'. The main configuration area contains the following fields:

|  |     |
|--|-----|
| MD Index                               | 1   |
| MEP Archive Hold Time (1-65535)        | 100 |
| MEP Fault Notify Lowest Priority (1-6) | 2   |
| MEP Fault Notify Alarm Time (3-10)     | 3   |
| MEP Fault Notify Reset Time (3-10)     | 10  |

At the bottom right of the form, there are two buttons: 'Apply' and 'Revert'.

### Configuring CFM Maintenance Associations

Use the Administration > CFM (Configure MA) pages to create and configure the Maintenance Associations (MA) which define a unique CFM service instance. Each MA can be identified by its parent MD, the MD's maintenance level, the VLAN assigned to the MA, and the set of maintenance end points (MEPs) assigned to it.

#### Command Usage

##### *Creating a Maintenance Association*

- ◆ Use the Configure MA – Add screen to create an MA within the selected MD, map it to a customer service instance (S-VLAN), and set the manner in which MIPs are created for this service instance. Then use the MEP List to assign domain service access points (DSAPs) to this service instance (see [“Configuring Maintenance End Points” on page 499](#)).
- ◆ An MA must be defined before any associated DSAPs or remote MEPs can be assigned (see [“Configuring Remote Maintenance End Points” on page 501](#)).
- ◆ Multiple domains at the same maintenance level cannot have an MA on the same VLAN (see [“Configuring CFM Maintenance Domains” on page 490](#)).
- ◆ Before removing an MA, first remove the MEPs assigned to it (see [“Configuring Maintenance End Points” on page 499](#)).
- ◆ For a detailed description of the MIP types, refer to the Command Usage section under [“Configuring CFM Maintenance Domains” on page 490](#).

##### *Configuring Detailed Settings for a Maintenance Association*

- ◆ CCMs are multicast periodically by a MEP in order to discover other MEPs in the same MA, and to assure connectivity to all other MEPs/MIPs in the MA.
- ◆ Each CCM received is checked to verify that the MEP identifier field sent in the message does not match its own MEP ID, which would indicate a duplicate MEP or network loop. If these error types are not found, the CCM is stored in the MEP's local database until aged out.

- ◆ If a maintenance point fails to receive three consecutive CCMs from any other MEP in the same MA, a connectivity failure is registered.
- ◆ If a maintenance point receives a CCM with an invalid MEPID or MA level or an MA level lower than its own, a failure is registered which indicates a configuration error or cross-connect error (i.e., overlapping MAs).
- ◆ The interval at which CCMs are issued should be configured to detect connectivity problems in a timely manner, as dictated by the nature and size of the MA.
- ◆ The maintenance of a MIP CCM database by a MIP presents some difficulty for bridges carrying a large number of Service Instances, and for whose MEPs are issuing CCMs at a high frequency. For this reason, slower CCM transmission rates may have to be used.

### Parameters

These parameters are displayed:

#### *Creating a Maintenance Association*

- ◆ **MD Index** – Domain index. (Range: 1-65535)
- ◆ **MA Index** – MA identifier. (Range: 1-2147483647)
- ◆ **MA Name** – MA name. (Range: 1-43<sup>15</sup> alphanumeric characters)  
Each MA name must be unique within the CFM domain.
- ◆ **Primary VLAN** – Service VLAN ID. (Range: 1-4094)  
This is the VLAN through which all CFM functions are executed for this MA.
- ◆ **MIP Creation Type** – Specifies the CFM protocol's creation method for maintenance intermediate points (MIPs) in this MA:
  - **Default** – MIPs can be created for this MA on any bridge port through which the MA's VID can pass.
  - **Explicit** – MIPs can be created for this MA only on bridge ports through which the MA's VID can pass, and only if a maintenance end point (MEP) is created at some lower MA Level.
  - **None** – No MIP can be created for this MA.

#### *Configuring Detailed Settings for a Maintenance Association*

- ◆ **MD Index** – Domain index. (Range: 1-65535)
- ◆ **MA Index** – MA identifier. (Range: 1-2147483647)

---

15. The total length of the MD name and MA name cannot exceed 44 characters.

- ◆ **MA Name Format** – Specifies the name format for the maintenance association as IEEE 802.1ag character based, or ITU-T SG13/SG15 Y.1731 defined ICC-based format.
  - **Character String** – IEEE 802.1ag defined character string format. This is an IETF RFC 2579 DisplayString.
  - **ICC Based** – ITU-T SG13/SG15 Y.1731 defined ICC based format.
- ◆ **Interval Level** – The delay between sending CCMs. The setting for this parameter is expressed as levels 4 through 7, which in turn map to specific intervals of time. (Options: 4 - 1 second, 5 - 10 seconds, 6 - 1 minute, 7 - 10 minutes)
- ◆ **Connectivity Check** – Enables transmission of CCMs. (Default: Enabled)
- ◆ **Cross Check** – Enables cross-checking between a static list of MEPs assigned to other devices within the same maintenance association and the MEPs learned through CCMs. (Default: Enabled)

Before starting the cross-check process, first configure the remote MEPs that exist on other devices inside the maintenance association using the Remote MEP List (see ["Configuring Remote Maintenance End Points"](#)). These remote MEPs are used in the cross-check operation to verify that all endpoints in the specified MA are operational.

The cross-check start delay, which sets the maximum delay this device waits for a remote MEP to come up before starting the cross-check operation, is a domain-level parameter. To set this parameter, use the CFM MD Configuration screen (see ["Configuring CFM Maintenance Domains"](#)).
- ◆ **AIS Status** – Enables/disables suppression of the Alarm Indication Signal (AIS). (Default: Enabled)
- ◆ **AIS Period** – Configures the period at which AIS is sent in an MA. (Range: 1 or 60 seconds; Default: 1 second)
- ◆ **AIS Transmit Level** – Configure the AIS maintenance level in an MA. (Range: 0-7; Default is 0)

AIS Level must follow this rule: AIS Level  $\geq$  Domain Level
- ◆ **AIS Suppress Alarm** – Enables/disables suppression of the AIS. (Default: Disabled)

### Web Interface

To create a maintenance association:

1. Click Administration, CFM.
2. Select Configure MA from the Step list.
3. Select Add from the Action list.

4. Select an entry from the MD Index list.
5. Specify the MAs assigned to each domain, the VLAN through which CFM messages are passed, and the manner in which MIPs can be created within each MA.
6. Click Apply.

**Figure 314: Creating Maintenance Associations**

Administration > CFM

Step: 4. Configure MA Action: Add

MD Index 1

MA Index (1-2147483647) 1

MA Name rd

Primary VLAN (1-4094) 1

MIP Creation Type Default

Apply Revert

To show the configured maintenance associations:

1. Click Administration, CFM.
2. Select Configure MA from the Step list.
3. Select Show from the Action list.
4. Select an entry from the MD Index list.

**Figure 315: Showing Maintenance Associations**

Administration > CFM

Step: 4. Configure MA Action: Show

MD Index 1

CFM MA List Total: 1

|                          | MA Index | MA Name | Primary VLAN | MIP Creation Type |
|--------------------------|----------|---------|--------------|-------------------|
| <input type="checkbox"/> | 1        | rd      | 1            | Default           |

Delete Revert

To configure detailed settings for maintenance associations:

1. Click Administration, CFM.
2. Select Configure MA from the Step list.
3. Select Configure Details from the Action list.

4. Select an entry from MD Index and MA Index.
5. Specify the CCM interval, enable the transmission of connectivity check and cross check messages, and configure the required AIS parameters.
6. Click Apply

**Figure 316: Configuring Detailed Settings for Maintenance Associations**

The screenshot shows the 'Administration > CFM' configuration page. At the top, there is a breadcrumb 'Administration > CFM'. Below it, a 'Step:' dropdown is set to '4. Configure MA' and an 'Action:' dropdown is set to 'Configure Details'. The main configuration area contains the following settings:

|                          |   |
|--------------------------|---|
| MD Index                 | 1   |
| MA Index                 | 1   |
| MA Name Format           | Character String                            |
| Interval Level (4-7)     | 4   |
| Connectivity Check       | <input checked="" type="checkbox"/> Enabled |
| Cross Check              | <input checked="" type="checkbox"/> Enabled |
| AIS Status               | <input checked="" type="checkbox"/> Enabled |
| AIS Period               | 1   |
| AIS Transmit Level (0-7) | 0   |
| AIS Suppress Alarm       | <input type="checkbox"/> Enabled            |

At the bottom right of the configuration area, there are two buttons: 'Apply' and 'Revert'.

### Configuring Maintenance End Points

Use the Administration > CFM (Configure MEP – Add) page to configure Maintenance End Points (MEPs). MEPs, also called Domain Service Access Points (DSAPs), must be configured at the domain boundary to provide management access for each maintenance association.

### Command Usage

- ◆ CFM elements must be configured in the following order: (1) maintenance domain at the same level as the MEP to be configured (see ["Configuring CFM Maintenance Domains"](#)), (2) maintenance association within the domain (see ["Configuring CFM Maintenance Associations"](#)), and (3) finally the MEPs using the MEP List.
- ◆ An interface may belong to more than one domain, or to different MAs in different domains.
- ◆ To change the MEP's MA or the direction it faces, first delete the MEP, and then create a new one.

### Parameters

These parameters are displayed:

- ◆ **MD Index** – Domain index. (Range: 1-65535)

- ◆ **MA Index** – MA identifier. (Range: 1-2147483647)
- ◆ **MEP ID** – Maintenance end point identifier. (Range: 1-8191)
- ◆ **MEP Direction** – Up indicates that the MEP faces inward toward the switch cross-connect matrix, and transmits CFM messages towards, and receives them from, the direction of the internal bridge relay mechanism. If the **Up** option is not selected, then the MEP is facing away from the switch, and transmits CFM messages towards, and receives them from, the direction of the physical medium.
- ◆ **Interface** – Indicates a port or trunk.

### Web Interface

To configure a maintenance end point:

1. Click Administration, CFM.
2. Select Configure MEP from the Step list.
3. Select Add from the Action list.
4. Select an entry from MD Index and MA Index.
5. Specify the MEPs assigned to each MA, set the MEP identifier, the direction in which the MEP faces, and the physical interface serving as the DSAP.
6. Click Apply.

**Figure 317: Configuring Maintenance End Points**

The screenshot shows a web interface titled "Administration > CFM". It features a "Step:" dropdown menu set to "3. Configure MEP" and an "Action:" dropdown menu set to "Add". Below these, there are several configuration fields: "MD Index" and "MA Index" are dropdown menus both set to "1"; "MEP ID (1-8191)" is a text input field containing "1"; "MEP Direction" has a checkbox labeled "Up" which is unchecked; and "Interface" has two radio buttons, "Port" (selected) and "Trunk", with a dropdown menu set to "1" next to the "Port" option. At the bottom right, there are "Apply" and "Revert" buttons.

To show the configured maintenance end points:

1. Click Administration, CFM.
2. Select Configure MEP from the Step list.
3. Select Show from the Action list.



4. Select an entry from MD Index and MA Index.

**Figure 318: Showing Maintenance End Points**

The screenshot shows the 'Administration > CFM' configuration page. At the top, there is a breadcrumb 'Administration > CFM' and a help icon. Below this, there are two dropdown menus: 'Step: 3. Configure MEP' and 'Action: Show'. Underneath, there are two more dropdown menus: 'MD Index' and 'MA Index', both set to '1'. Below these is a table titled 'CFM Maintenance Association End Point List' with a 'Total: 1' indicator. The table has four columns: a checkbox, 'MEP ID', 'MEP Direction', and 'Interface'. There is one row with a checked checkbox, 'MEP ID' 1, 'MEP Direction' 'Down', and 'Interface' 'Unit 1 / Port 1'. At the bottom of the table are 'Delete' and 'Revert' buttons.

|                                     | MEP ID | MEP Direction | Interface       |
|-------------------------------------|--------|---------------|-----------------|
| <input checked="" type="checkbox"/> | 1      | Down          | Unit 1 / Port 1 |

### Configuring Remote Maintenance End Points

Use the Administration > CFM (Configure Remote MEP – Add) page to specify remote maintenance end points (MEPs) set on other CFM-enabled devices within a common MA. Remote MEPs can be added to a static list in this manner to verify that each entry has been properly configured and is operational. When cross-checking is enabled, the list of statically configured remote MEPs is compared against the MEPs learned through continuity check messages (CCMs), and any discrepancies reported via SNMP traps.

### Command Usage

- ◆ All MEPs that exist on other devices inside a maintenance association should be statically configured to ensure full connectivity through the cross-check process.
- ◆ Remote MEPs can only be configured if local domain service access points (DSAPs) have already been created (see ["Configuring Maintenance End Points"](#)) at the same maintenance level and in the same MA. DSAPs are MEPs that exist on the edge of the domain, and act as primary service access points for end-to-end cross-check, loop-back, and link-trace functions.
- ◆ The MEP cross-check start delay which sets the maximum delay that a device waits for remote MEPs to come up before starting the cross-check operation can be configured on the Configure Global page (see ["Configuring Global Settings for CFM"](#)).
- ◆ SNMP traps for continuity check events discovered by cross-check operations can also be configured on the Configure Global page (see ["Configuring Global Settings for CFM"](#)).

### Parameters

These parameters are displayed:

- ◆ **MD Index** – Domain index. (Range: 1-65535)
- ◆ **MA Index** – MA identifier. (Range: 1-2147483647)

- ◆ **MEP ID** – Identifier for a maintenance end point which exists on another CFM-enabled device within the same MA. (Range: 1-8191)

### Web Interface

To configure a remote maintenance end point:

1. Click Administration, CFM.
2. Select Configure Remote MEP from the Step list.
3. Select Add from the Action list.
4. Select an entry from MD Index and MA Index.
5. Specify the remote MEPs which exist on other devices within the same MA.
6. Click Apply.

**Figure 319: Configuring Remote Maintenance End Points**

The screenshot shows a web interface titled "Administration > CFM". Below the title, there are two dropdown menus: "Step:" with "4. Configure Remote MEP" selected, and "Action:" with "Add" selected. Below these, there are three input fields: "MD Index" with a dropdown menu showing "1", "MA Index" with a dropdown menu showing "1", and "MEP ID (1-8191)" with a text input field containing "2". At the bottom right, there are two buttons: "Apply" and "Revert".

To show the configured remote maintenance end points:

1. Click Administration, CFM.
2. Select Configure MEP from the Step list.
3. Select Show from the Action list.
4. Select an entry from MD Index and MA Index.

**Figure 320: Showing Remote Maintenance End Points**

Administration > CFM

Step: 4. Configure Remote MEP Action: Show

MD Index: 1  
MA Index: 1

CFM Remote Maintenance Association End Point List Total: 1

|                          | MEP ID |
|--------------------------|--------|
| <input type="checkbox"/> | 2      |

Delete Revert

### Transmitting Link Trace Messages

Use the Administration > CFM (Transmit Link Trace) page to transmit link trace messages (LTMs). These messages can isolate connectivity faults by tracing the path through a network to the designated target node (i.e., a remote maintenance end point).

#### Command Usage

- ◆ LTMs can be targeted to MEPs, not MIPs. Before sending a link trace message, be sure you have configured the target MEP for the specified MA (see ["Configuring Remote Maintenance End Points"](#)).
- ◆ If MAC address of target MEP has not been learned by any local MEP, then the link trace may fail. Use the Show Remote MEP page (see ["Displaying Remote MEPs"](#)) to verify that a MAC address has been learned for the target MEP.
- ◆ LTMs are sent as multicast CFM frames, and forwarded from MIP to MIP, with each MIP generating a link trace reply, up to the point at which the LTM reaches its destination or can no longer be forwarded.
- ◆ LTMs are used to isolate faults. However, this task can be difficult in an Ethernet environment, since each node is connected through multipoint links. Fault isolation is even more challenging since the MAC address of the target node can age out in several minutes. This can cause the traced path to vary over time, or connectivity lost if faults cause the target MEP to be isolated from other MEPs in an MA.
- ◆ When using the command line or web interface, the source MEP used by to send a link trace message is chosen by the CFM protocol. However, when using SNMP, the source MEP can be specified by the user.
- ◆ Parameters controlling the link trace cache, including operational state, entry hold time, and maximum size can be configured on the Configure Global page (see ["Configuring Global Settings for CFM"](#)).

### Parameters

These parameters are displayed:

- ◆ **MD Index** – Domain index. (Range: 1-65535)
- ◆ **MA Index** – MA identifier. (Range: 1-2147483647)
- ◆ **Source MEP ID** – The identifier of a source MEP that will send the link trace message. (Range: 1-8191)
- ◆ **Target**
  - **MEP ID** – The identifier of a remote MEP that is the target of a link trace message. (Range: 1-8191)
  - **MAC Address** – MAC address of a remote MEP that is the target of a link trace message. This address can be entered in either of the following formats: xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx
- ◆ **TTL** – The time to live of the link trace message. (Range: 0-255 hops)

### Web Interface

To transmit link trace messages:

1. Click Administration, CFM.
2. Select Transmit Link Trace from the Step list.
3. Select an entry from MD Index and MA Index.
4. Specify the source MEP, the target MEP using either its MEP identifier or MAC address, and set the maximum number of hops allowed in the TTL field.
5. Click Apply.
6. Check the results in the Link Trace cache (see ["Displaying the Link Trace Cache"](#)).

**Figure 321: Transmitting Link Trace Messages**

The screenshot shows a web interface for 'Administration > CFM'. The 'Step' dropdown is set to '7. Transmit Link Trace'. The form contains the following fields:

- MD Index:** A dropdown menu with the value '1' selected.
- MA Index:** A dropdown menu with the value '1' selected.
- Source MEP ID (1-8191):** A text input field containing the value '1'.
- Target:** A section with two radio buttons. The first radio button, labeled 'MEP ID (1-8191)', is selected, and its corresponding text input field contains the value '2'. The second radio button is labeled 'MAC Address' and is unselected, with an empty text input field next to it.
- TTL (0-255):** A text input field containing the value '5'.

At the bottom right of the form, there are two buttons: 'Apply' and 'Revert'.

### Transmitting Loopback Messages

Use the Administration > CFM (Transmit Loopback) page to transmit Loopback Messages (LBMs). These messages can be used to isolate or verify connectivity faults by submitting a request to a target node (i.e., a remote MEP or MIP) to echo the message back to the source.

#### Command Usage

- ◆ Loopback messages can be used for fault verification and isolation after automatic detection of a fault or receipt of some other error report. Loopback messages can also be used to confirm the successful restoration or initiation of connectivity. The receiving maintenance point should respond to the loop back message with a loopback reply.
- ◆ The point from which the loopback message is transmitted (i.e., a local DSAP) and the target maintenance point must be within the same MA.
- ◆ If the continuity check database does not have an entry for the specified maintenance point, an error message will be displayed.
- ◆ When using the command line or web interface, the source MEP used by to send a loopback message is chosen by the CFM protocol. However, when using SNMP, the source MEP can be specified by the user.

#### Parameters

These parameters are displayed:

- ◆ **MD Index** – Domain index. (Range: 1-65535)
- ◆ **MA Index** – MA identifier. (Range: 1-2147483647)
- ◆ **Source MEP ID** – The identifier of a source MEP that will send the loopback message. (Range: 1-8191)

◆ **Target**

- **MEP ID** – The identifier of a remote MEP that is the target of a loopback message. (Range: 1-8191)
- **MAC Address** – MAC address of a remote MEP that is the target of a loopback message. This address can be entered in either of the following formats: xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx

◆ **Count** – The number of times the loopback message is sent. (Range: 1-1024)

◆ **Packet Size** – The size of the loopback message. (Range: 64-1518 bytes; Default: 64 bytes)

**Web Interface**

To transmit loopback messages:

1. Click Administration, CFM.
2. Select Transmit Loopback from the Step list.
3. Select an entry from MD Index and MA Index.
4. Specify the source MEP, the target MEP using either its MEP identifier or MAC address, set the number of times the loopback message is to be sent.
5. Click Apply.

**Figure 322: Transmitting Loopback Messages**

The screenshot shows a web interface titled "Administration > CFM". At the top, there is a "Step:" dropdown menu set to "8. Transmit Loopback". Below this, there are several input fields: "MD Index" and "MA Index" are both set to "1" via dropdown menus. "Source MEP ID (1-8191)" is an empty text box. "Target" has two radio button options: "MEP ID (1-8191)" (which is selected) and "MAC Address". Below these, "Counts (1-1024)" is an empty text box, and "Packet Size (64-1518)" is an empty text box followed by the word "bytes". A "Test" button is located to the right of the "Counts" and "Packet Size" fields. At the bottom, there is a "Result" section with a text area containing the following text: "Sending 200 Ethernet CFM loopback message, timeout is 5 sec. Received 0 Ethernet CFM loopback message in 1 sec. Received 0 Ethernet CFM loopback message in 5 secs.Success rate is 0% (0/5)."

## Transmitting Delay-Measure Requests

Use the Administration > CFM (Transmit Delay Measure) page to send periodic delay-measure requests to a specified MEP within a maintenance association.

### Command Usage

- ◆ Delay measurement can be used to measure frame delay and frame delay variation between MEPs.
- ◆ A local MEP must be configured for the same MA before you can use this function.
- ◆ If a MEP is enabled to generate frames with delay measurement (DM) information, it periodically sends DM frames to its peer MEP in the same MA, and expects to receive DM frames back from it.
- ◆ Frame delay measurement can be made only for two-way measurements, where the MEP transmits a frame with DM request information with the TxTimeStampf (Timestamp at the time of sending a frame with DM request information), and the receiving MEP responds with a frame with DM reply information with TxTimeStampf copied from the DM request information, RxTimeStampf (Timestamp at the time of receiving a frame with DM request information), and TxTimestampb (Timestamp at the time of transmitting a frame with DM reply information):  
  

$$\text{Frame Delay} = (\text{RxTimeStampb} - \text{TxTimeStampf}) - (\text{TxTimestampb} - \text{RxTimeStampf})$$
- ◆ The MEP can also make two-way frame delay variation measurements based on its ability to calculate the difference between two subsequent two-way frame delay measurements.

### Parameters

These parameters are displayed:

- ◆ **MD Index** – Domain index. (Range: 1-65535)
- ◆ **MA Index** – MA identifier. (Range: 1-2147483647)
- ◆ **Source MEP ID** – The identifier of a source MEP that will send the delay-measure message. (Range: 1-8191)
- ◆ **Target**
  - **MEP ID** – The identifier of a remote MEP that is the target of a delay-measure message. (Range: 1-8191)
  - **MAC Address** – MAC address of a remote MEP that is the target of a delay-measure message. This address can be entered in either of the following formats: xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx
- ◆ **Count** – The number of times to retry sending the message if no response is received before the specified timeout. (Range: 1-5; Default: 5)

- ◆ **Packet Size** – The size of the delay-measure message. (Range: 64-1518 bytes; Default: 64 bytes)
- ◆ **Interval** – The transmission delay between delay-measure messages. (Range: 1-5 seconds; Default: 1 second)
- ◆ **Timeout** – The timeout to wait for a response. (Range: 1-5 seconds; Default: 5 seconds)

### Web Interface

To transmit delay-measure messages:

1. Click Administration, CFM.
2. Select Transmit Delay Measure from the Step list.
3. Select an entry from MD Index and MA Index.
4. Specify the source MEP, the target MEP using either its MEP identifier or MAC address, set the number of times the delay-measure message is to be sent, the interval, and the timeout.
5. Click Apply.

**Figure 323: Transmitting Delay-Measure Messages**

Administration > CFM

Step: 7. Transmit Delay Measure

MD Index: 1  
MA Index: 3  
Source MEP ID (1-8191):  
Target: ☒ MEP ID (1-8191)   
☐ MAC Address   
Counts (1-5):  
Packet Size (64-1518): bytes  
Interval (1-5): ms  
Timeout (1-5): ms

Apply Revert

Result

Sending 5 Ethernet CFM delay measurement message, timeout is 5 sec.

| Sequence | Delay Time (ms.) | Delay Variation (ms.) |
|----------|------------------|-----------------------|
| 1        | < 10             | 0                     |
| 2        | 10               | 10                    |
| 3        | < 10             | 10                    |
| 4        | < 10             | 0                     |
| 5        | < 10             | 0                     |

Success rate is 100% (5/5), delay time min/avg/max=0/2/10 ms.  
Average frame delay variation is 4 ms.



**Displaying Local MEPs** Use the Administration > CFM > Show Information (Show Local MEP) page to show information for the MEPs configured on this device.

### Parameters

These parameters are displayed:

- ◆ **MEP ID** – Maintenance end point identifier.
- ◆ **MD Name** – Maintenance domain name.
- ◆ **Level** – Authorized maintenance level for this domain.
- ◆ **Direction** – Direction in which the MEP communicates CFM messages:
  - Down indicates that the MEP is facing away from the switch, and transmits CFM messages towards, and receives them from, the direction of the physical medium.
  - Up indicates that the MEP faces inward toward the switch cross-connect matrix, and transmits CFM messages towards, and receives them from, the direction of the internal bridge relay mechanism.
- ◆ **Primary VLAN** – Service VLAN ID.
- ◆ **Interface** – Physical interface of this entry (either a port or trunk).
- ◆ **CC Status** – Shows administrative status of CCMs.
- ◆ **MAC Address** – MAC address of this MEP entry.

### Web Interface

To show information for the MEPs configured on this device:

1. Click Administration, CFM.
2. Select Show Information from the Step list.
3. Select Show Local MEP from the Action list.

**Figure 324: Showing Information on Local MEPs**

Administration > CFM

Step: 10. Show Information Action: Show Local MEP

CFM Local Maintenance Association End Point Information Total: 1

| MEP ID | MD Name | Level | Direction | Primary VLAN | Interface       | CC Status | MAC Address       |
|--------|---------|-------|-----------|--------------|-----------------|-----------|-------------------|
| 1      | voip    | 3     | Down      | 1            | Unit 1 / Port 1 | Enabled   | 00-E0-0C-00-00-FE |

**Displaying Details for Local MEPs** Use the Administration > CFM > Show Information (Show Local MEP Details) page to show detailed CFM information about a local MEP in the continuity check database.

#### Parameters

These parameters are displayed:

- ◆ **MD Index** – Domain index. (Range: 1-65535)
- ◆ **MA Index** – MA identifier. (Range: 1-2147483647)
- ◆ **MEP ID** – Maintenance end point identifier. (Range: 1-8191)
- ◆ **MD Name** – The maintenance domain for this entry.
- ◆ **MA Name** – Maintenance association to which this remote MEP belongs.
- ◆ **MA Name Format** – The format of the Maintenance Association name, including Character String or ICC Based.
- ◆ **Level** – Maintenance level of the local maintenance point.
- ◆ **Direction** – The direction in which the MEP faces on the Bridge port (up or down).
- ◆ **Interface** – The port to which this MEP is attached.
- ◆ **CC Status** – Shows if the MEP will generate CCM messages.
- ◆ **MAC Address** – MAC address of the local maintenance point. (If a CCM for the specified remote MEP has never been received or the local MEP record times out, the address will be set to the initial value of all Fs.)
- ◆ **Defect Condition** – Shows the defect detected on the MEP.
- ◆ **Received RDI** – Receive status of remote defect indication (RDI) messages on the MEP.
- ◆ **AIS Status** – Shows if MEPs within the specified MA are enabled to send frames with AIS information following detection of defect conditions.
- ◆ **AIS Period** – The interval at which AIS information is sent.
- ◆ **AIS Transmit Level** – The maintenance level at which AIS information will be sent for the specified MEP.
- ◆ **Suppress Alarm** – Shows if the specified MEP is configured to suppress sending frames containing AIS information following the detection of defect conditions.

- ◆ **Suppressing Alarms** – Shows if the specified MEP is currently suppressing sending frames containing AIS information following the detection of defect conditions.

### Web Interface

To show detailed information for the MEPs configured on this device:

1. Click Administration, CFM.
2. Select Show Information from the Step list.
3. Select Show Local MEP Details from the Action list.
4. Select an entry from MD Index and MA Index.
5. Select a MEP ID.

**Figure 325: Showing Detailed Information on Local MEPs**

**Administration > CFM**

Step: 10. Show Information Action: Show Local MEP Details

---

MD Index 1

MA Index 1

MEP ID 1

Query

|                    |                   |
|--------------------|-------------------|
| MD Name            | md1               |
| MA Name            | ma1               |
| MA Name Format     | Character String  |
| Level              | 0                 |
| Direction          | Up                |
| Interface          | Unit 1 / Port 2   |
| CC Status          | Enabled           |
| MAC Address        | 00-1B-D5-50-91-FD |
| Defect Condition   | No Defect         |
| Received RDI       | False             |
| AIS Status         | Enabled           |
| AIS Period         | 60 sec            |
| AIS Transmit Level | Default           |
| Suppress Alarm     | Enabled           |
| Suppressing Alarms | Disabled          |

**Displaying Local MIPs** Use the Administration > CFM > Show Information (Show Local MIP) page to show the MIPs on this device discovered by the CFM protocol. (For a description of MIPs, refer to the Command Usage section under "[Configuring CFM Maintenance Domains](#)".)

#### Parameters

These parameters are displayed:

- ◆ **MD Name** – Maintenance domain name.
- ◆ **Level** – Authorized maintenance level for this domain.
- ◆ **MA Name** – Maintenance association name.
- ◆ **Primary VLAN** – Service VLAN ID.
- ◆ **Interface** – Physical interface of this entry (either a port or trunk).

#### Web Interface

To show information for the MIPs discovered by the CFM protocol:

1. Click Administration, CFM.
2. Select Show Information from the Step list.
3. Select Show Local MIP from the Action list.

**Figure 326: Showing Information on Local MIPs**

Administration > CFM

Step: 10. Show Information Action: Show Local MIP

CFM Local Maintenance Association Intermediate Point Information Total: 27

| MD Name | Level | MA Name | Primary VLAN | Interface        |
|---------|-------|---------|--------------|------------------|
| voip    | 3     | rd      | 1            | Unit 1 / Port 2  |
| voip    | 3     | rd      | 1            | Unit 1 / Port 3  |
| voip    | 3     | rd      | 1            | Unit 1 / Port 4  |
| voip    | 3     | rd      | 1            | Unit 1 / Port 5  |
| voip    | 3     | rd      | 1            | Unit 1 / Port 6  |
| voip    | 3     | rd      | 1            | Unit 1 / Port 7  |
| voip    | 3     | rd      | 1            | Unit 1 / Port 8  |
| voip    | 3     | rd      | 1            | Unit 1 / Port 9  |
| voip    | 3     | rd      | 1            | Unit 1 / Port 10 |

## Displaying Remote MEPs

Use the Administration > CFM > Show Information (Show Remote MEP) page to show MEPs located on other devices which have been discovered through continuity check messages, or statically configured in the MEP database and verified through cross-check messages.

### Parameters

These parameters are displayed:

- ◆ **MEP ID** – Maintenance end point identifier.
- ◆ **MA Name** – Maintenance association name.
- ◆ **Level** – Authorized maintenance level for this domain.
- ◆ **Primary VLAN** – Service VLAN ID.
- ◆ **MEP Up** – Indicates whether or not this MEP is functioning normally.
- ◆ **Remote MAC Address** – MAC address of the remote maintenance point. (If a CCM for the specified remote MEP has never been received or the remote MEP record times out, the address will be set to the initial value of all Fs.)

### Web Interface

To show information for remote MEPs:

1. Click Administration, CFM.
2. Select Show Information from the Step list.
3. Select Show Remote MEP from the Action list.

**Figure 327: Showing Information on Remote MEPs**

Administration > CFM

Step: 10. Show Information

Action: Show Remote MEP

CFM Remote Maintenance Association End Point Information Total: 1

| MEP ID | MA Name | Level | Primary VLAN | MEP Up | Remote MAC Address |
|--------|---------|-------|--------------|--------|--------------------|
| 1      | ma1     | 0     | 2            | Yes    | 00-01-02-03-04-05  |

Clear

## Displaying Details for Remote MEPs

Use the Administration > CFM > Show Information (Show Remote MEP Details) page to show detailed information for MEPs located on other devices which have been discovered through continuity check messages, or statically configured in the MEP database and verified through cross-check messages.

### Parameters

These parameters are displayed:

- ◆ **MD Index** – Domain index. (Range: 1-65535)
- ◆ **MA Index** – MA identifier. (Range: 1-2147483647)
- ◆ **MEP ID** – Maintenance end point identifier. (Range: 1-8191)
- ◆ **MD Name** – Maintenance domain name.
- ◆ **MA Name** – Maintenance association name.
- ◆ **Level** – Authorized maintenance level for this domain.
- ◆ **MAC Address** – MAC address of this MEP entry.
- ◆ **Primary VLAN** – Service VLAN ID.
- ◆ **Incoming Port** – Port to which this remote MEP is attached.
- ◆ **CC Lifetime** – Length of time to hold messages about this MEP in the CCM database.
- ◆ **Age of Last CC Message** – Length of time the last CCM message about this MEP has been in the CCM database.
- ◆ **Frame Loss** – Percentage of transmitted frames lost.
- ◆ **CC Packet Statistics** – The number of CCM packets received successfully and those with errors.
- ◆ **Port State** – Port states include:
  - Up – The port is functioning normally.
  - Blocked – The port has been blocked by the Spanning Tree Protocol.
  - No port state – Either no CCM has been received, or no port status TLV was received in the last CCM.
- ◆ **Interface State** – Interface states include:
  - No Status – Either no CCM has been received, or no interface status TLV was received in the last CCM.
  - Up – The interface is ready to pass packets.

- Down – The interface cannot pass packets.
- Testing – The interface is in some test mode.
- Unknown – The interface status cannot be determined for some reason.
- Dormant – The interface is not in a state to pass packets but is in a pending state, waiting for some external event.
- Not Present – Some component of the interface is missing.
- isLowerLayerDown – The interface is down due to state of the lower layer interfaces.


◆ **Crosscheck Status** – Shows if crosscheck function has been enabled.

### Web Interface

To show detailed information for remote MEPs:

1. Click Administration, CFM.
2. Select Show Information from the Step list.
3. Select Show Remote MEP Details from the Action list.
4. Select an entry from MD Index and MA Index.
5. Select a MEP ID.

**Figure 328: Showing Detailed Information on Remote MEPs**

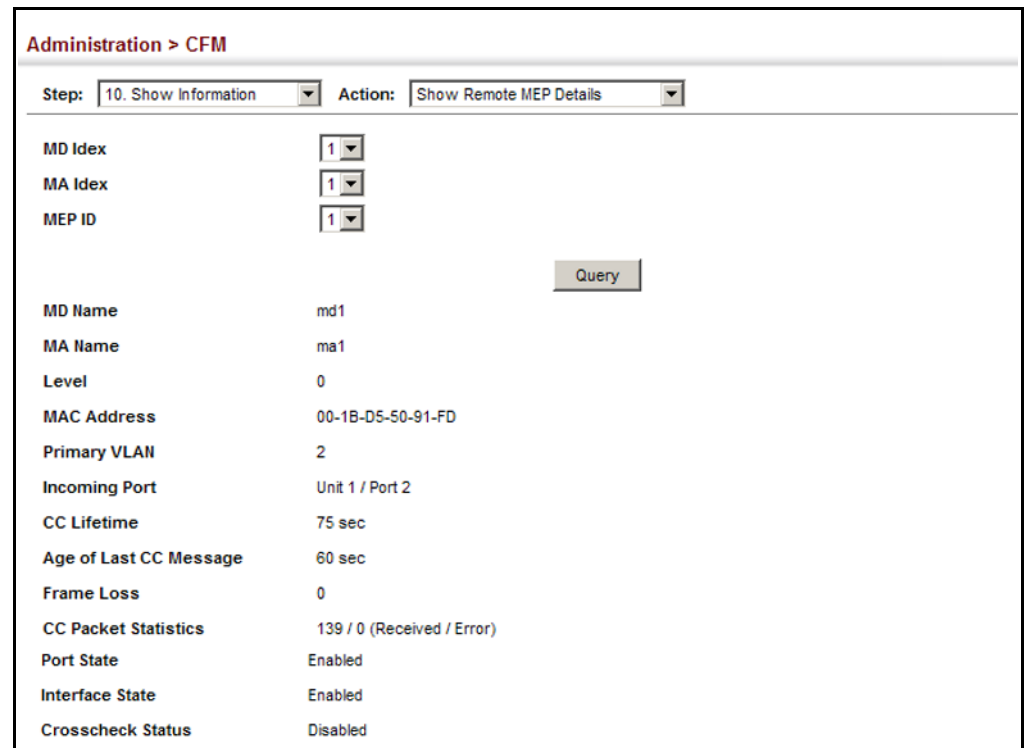

**Administration > CFM**

Step: 10. Show Information Action: Show Remote MEP Details

MD Index 1  
MA Index 1  
MEP ID 1

Query

|                        |                            |
|------------------------|----------------------------|
| MD Name                | md1                        |
| MA Name                | ma1                        |
| Level                  | 0                          |
| MAC Address            | 00-1B-D5-50-91-FD          |
| Primary VLAN           | 2                          |
| Incoming Port          | Unit 1 / Port 2            |
| CC Lifetime            | 75 sec                     |
| Age of Last CC Message | 60 sec                     |
| Frame Loss             | 0                          |
| CC Packet Statistics   | 139 / 0 (Received / Error) |
| Port State             | Enabled                    |
| Interface State        | Enabled                    |
| Crosscheck Status      | Disabled                   |

**Displaying the Link Trace Cache** Use the Administration > CFM > Show Information (Show Link Trace Cache) page to show information about link trace operations launched from this device.

#### Parameters

These parameters are displayed:

- ◆ **Hops** – The number hops taken to reach the target MEP.
- ◆ **MA** – Maintenance association name.
- ◆ **IP Address / Alias** – IP address or DNS alias of the target device's CPU.
- ◆ **Forwarded** – Shows whether or not this link trace message was forwarded. A message is not forwarded if received by the target MEP.
- ◆ **Ingress MAC Address** – MAC address of the ingress port on the target device.
- ◆ **Egress MAC Address** – MAC address of the egress port on the target device.
- ◆ **Ingress Action** – Action taken on the ingress port:
  - IngOk – The target data frame passed through to the MAC Relay Entity.
  - IngDown – The bridge port's MAC\_Operational parameter is false. This value could be returned, for example, by an operationally Down MEP that has another Down MEP at a higher MD level on the same bridge port that is causing the bridge port's MAC\_Operational parameter to be false.
  - IngBlocked – The ingress port can be identified, but the target data frame was not forwarded when received on this port due to active topology management, i.e., the bridge port is not in the forwarding state.
  - IngVid – The ingress port is not in the member set of the LTM's VIDs, and ingress filtering is enabled, so the target data frame was filtered by ingress filtering.
- ◆ **Egress Action** – Action taken on the egress port:
  - EgrOk – The targeted data frame was forwarded.
  - EgrDown – The Egress Port can be identified, but that bridge port's MAC\_Operational parameter is false.
  - EgrBlocked – The egress port can be identified, but the data frame was not passed through the egress port due to active topology management, i.e., the bridge port is not in the forwarding state.
  - EgrVid – The Egress Port can be identified, but the bridge port is not in the LTM's VID member set, and was therefore filtered by egress filtering.
- ◆ **Reply** – Reply action:
  - FDB – Target address found in forwarding database.
  - MPDB – Target address found in the maintenance point database.



- HIT – Target located on this device.

### Web Interface

To show information about link trace operations launched from this device:

1. Click Administration, CFM.
2. Select Show Information from the Step list.
3. Select Show Link Trace Cache from the Action list.

**Figure 329: Showing the Link Trace Cache**

The screenshot shows the 'Administration > CFM' web interface. At the top, there is a breadcrumb trail 'Administration > CFM' and a help icon. Below this, there are two dropdown menus: 'Step: 8. Show Information' and 'Action: Show Link Trace Cache'. The main content area is titled 'CFM Link Trace Cache Information Total: 2'. It contains a table with the following data:

| Hops | MA     | IP/Alias Address  | Forwarded     | Ingress MAC Address | Egress MAC Address | Ingress Action | Egress Action | Reply |
|------|--------|-------------------|---------------|---------------------|--------------------|----------------|---------------|-------|
| 1    | denver | 11-11-11-11-11-11 | Forwarded     | 11-11-11-11-11-12   | 11-11-11-11-11-13  | OK             | OK            | FDB   |
| 2    | boston | AA-BB-CC-00-04-00 | Not Forwarded |                     |                    |                |               |       |

Below the table, there is a 'Clear' button.

### Displaying Fault Notification Settings

Use the Administration > CFM > Show Information (Show Fault Notification Generator) page to display configuration settings for the fault notification generator.

### Parameters

These parameters are displayed:

- ◆ **MEP ID** – Maintenance end point identifier.
- ◆ **MD Name** – Maintenance domain name.
- ◆ **MA Name** – Maintenance association name.
- ◆ **Highest Defect** – The highest defect that will generate a fault alarm. (This is disabled by default.)
- ◆ **Lowest Alarm** – The lowest defect that will generate a fault alarm<sup>16</sup>.
- ◆ **Alarm Time** – The time a defect must exist before a fault alarm is issued<sup>16</sup>.
- ◆ **Reset Time** – The time after a fault alarm has been issued, and no defect exists, before another fault alarm can be issued<sup>16</sup>.


16. See "Configuring CFM Maintenance Domains" on page 490.

### Web Interface

To show configuration settings for the fault notification generator:

1. Click Administration, CFM.
2. Select Show Information from the Step list.
3. Select Show Fault Notification Generator from the Action list.

**Figure 330: Showing Settings for the Fault Notification Generator**

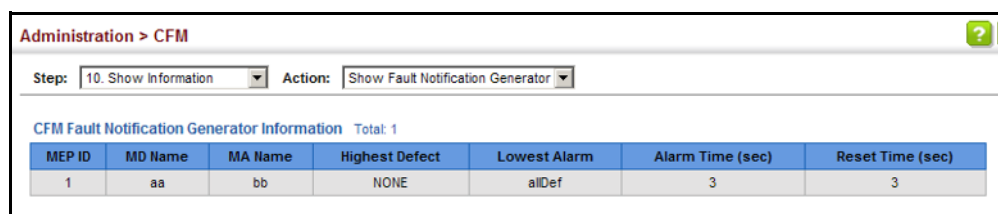

| CFM Fault Notification Generator Information Total: 1 |         |         |                |              |                  |                  |
|---|---------|---------|----------------|--------------|------------------|------------------|
| MEP ID  | MD Name | MA Name | Highest Defect | Lowest Alarm | Alarm Time (sec) | Reset Time (sec) |
| 1   | aa      | bb      | NONE           | allDef       | 3                | 3                |

### Displaying Continuity Check Errors

Use the Administration > CFM > Show Information (Show Continuity Check Error) page to display the CFM continuity check errors logged on this device.

#### Parameters

These parameters are displayed:

- ◆ **Level** – Maintenance level associated with this entry.
- ◆ **Primary VLAN** – VLAN in which this error occurred.
- ◆ **MEP ID** – Identifier of remote MEP.
- ◆ **Interface** – Port at which the error was recorded.
- ◆ **Remote MAC** – MAC address of remote MEP.
- ◆ **Reason** – Error types include:
  - **LEAK** – MA x is associated with a specific VID list<sup>17</sup>, one or more of the VIDs in this MA can pass through the bridge port, no MEP is configured facing outward (down) on any bridge port for this MA, and some other MA y, at a higher maintenance level, and associated with at least one of the VID(s) also in MA x, does have a MEP configured on the bridge port.
  - **VIDS** – MA x is associated with a specific VID list<sup>17</sup>, an MEP is configured facing inward (up) on this MA on the bridge port, and some other MA y, associated with at least one of the VID(s) also in MA x, also has an Up MEP configured facing inward (up) on some bridge port.

17. This definition is based on the IEEE 802.1ag standard. Current software for this switch only supports a single VLAN per MA. However, since it may interact with other devices which support multiple VLAN assignments per MA, this error message may be reported.

- **EXCESS\_LEV** – The number of different MD levels at which MIPs are to be created on this port exceeds the bridge's capabilities.
  - **OVERLAP\_LEV** – A MEP is created for one VID at one maintenance level, but a MEP is configured on another VID at an equivalent or higher level, exceeding the bridge's capabilities.
- ◆ **MA Name** – The maintenance association for this entry.

### Web Interface

To show CFM continuity check errors:

1. Click Administration, CFM.
2. Select Show Information from the Step list.
3. Select Show Continuity Check Error from the Action list.

**Figure 331: Showing Continuity Check Errors**

| CFM Continuity Check Error Information Total: 1 |              |        |                  |                   |        |         |
|---|--------------|--------|------------------|-------------------|--------|---------|
| Level   | Primary VLAN | MEP ID | Interface        | Remote MAC        | Reason | MA Name |
| 5   | 2            | 40     | Unit 1 / Port 10 | 00-01-02-03-04-05 | LEAK   | aa      |

## OAM Configuration

The switch provides OAM (Operation, Administration, and Maintenance) remote management tools required to monitor and maintain the links to subscriber CPEs (Customer Premise Equipment). This section describes functions including enabling OAM for selected ports, loopback testing, and displaying remote device information.

### Enabling OAM on Local Ports

Use the Administration > OAM > Interface page to enable OAM functionality on the selected port. Not all CPEs support operation and maintenance functions, so OAM is therefore disabled by default. If a CPE supports OAM, this functionality must first be enabled on the connected port to gain access to the configuration functions provided under the OAM menu.

### Parameters

These parameters are displayed:

- ◆ **Port** – Port identifier. (Range: 1-52)

- ◆ **Admin Status** – Enables or disables OAM functions. (Default: Disabled)
- ◆ **Operation State** – Shows the operational state between the local and remote OAM devices. This value is always “disabled” if OAM is disabled on the local interface.

**Table 32: OAM Operation State**

| State                         | Description  |
|-------------------------------|--|
| Disabled                      | OAM is disabled on this interface via the OAM Admin Status.  |
| Link Fault                    | The link has detected a fault or the interface is not operational.   |
| Passive Wait                  | This value is returned only by OAM entities in passive mode and indicates the OAM entity is waiting to see if the peer device is OAM capable.                                      |
| Active Send Local             | This value is used by active mode devices and indicates the OAM entity is actively trying to discover whether the peer has OAM capability but has not yet made that determination. |
| Send Local And Remote         | The local OAM entity has discovered the peer but has not yet accepted or rejected the configuration of the peer.   |
| Send Local And Remote OK      | OAM peering is allowed by the local device.  |
| OAM Peering Locally Rejected  | The local OAM entity rejects the peering.  |
| OAM Peering Remotely Rejected | The remote OAM entity rejects the peering.   |
| Operational                   | When the local OAM entity learns that both it and the remote OAM entity have accepted the peering, the state moves to this state.  |
| Non Oper Half Duplex          | This state is returned whenever Ethernet OAM is enabled but the interface is in half-duplex operation.   |

- ◆ **Mode** – Sets the OAM operation mode. (Default: Active)
  - **Active** – All OAM functions are enabled.
  - **Passive** – All OAM functions are enabled, except for OAM discovery, sending variable request OAMPDUs, and sending loopback control OAMPDUs.
- ◆ **Critical Link Event** – Controls reporting of critical link events to its OAM peer.
  - **Dying Gasp** – If an unrecoverable condition occurs, the local OAM entity (i.e., this switch) indicates this by immediately sending a trap message. (Default: Enabled)

Dying gasp events are caused by an unrecoverable failure, such as a power failure or device reset.



**Note:** When system power fails, the switch will always send a dying gasp trap message prior to power down.

- **Critical Event** – If a critical event occurs, the local OAM entity indicates this to its peer by setting the appropriate flag in the next OAMPDU to be sent and stores this information in its OAM event log. (Default: Enabled)

Critical events include various failures, such as abnormal voltage fluctuations, out-of-range temperature detected, fan failure, CRC error in flash memory, insufficient memory, or other hardware faults.

- ◆ **Errored Frame** – Controls reporting of errored frame link events.

An errored frame is a frame in which one or more bits are errored.

An errored frame link event occurs if the threshold is reached or exceeded within the specified period.

If reporting is enabled and an errored frame link event occurs, the local OAM entity (this switch) sends an Event Notification OAMPDU to the remote OAM entity. The Errored Frame Event TLV includes the number of errored frames detected during the specified period.

- **Status** – Enables reporting of errored frame link events. (Default: Enabled)
- **Window Size** – The period of time in which to check the reporting threshold for errored frame link events. (Range: 10-65535 in units of 10 milliseconds; Default: 10 units of 10 milliseconds, or the equivalent of 1 second)
- **Threshold Count** – The threshold for errored frame link events. (Range: 1-65535; Default: 1)

### Web Interface

To enable OAM functionality on the selected port:

1. Click Administration, OAM, Interface.
2. Set the OAM administrative status and operational mode for the required ports. Specify whether or not critical link events will be reported by the switch. Specify whether errored frame link events will be reported, as well as the required window size and threshold.
3. Click Apply.

**Figure 332: Enabling OAM for Local Ports**

Administration > OAM > Interface

OAM Port List Total: 52

| Port | Admin Status                     | Operation State | Mode   | Critical Link Event                         |   | Errored Frame                               |                                 |                           |
|------|----------------------------------|-----------------|--------|---|---|---|---------------------------------|---------------------------|
|      |                                  |                 |        | Dying Gasp                                  | Critical Event                              | Status                                      | Window Size (10-65535 1/10 sec) | Threshold Count (1-65535) |
| 1    | <input type="checkbox"/> Enabled | Link Fault      | Active | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | 10                              | 1                         |
| 2    | <input type="checkbox"/> Enabled | Link Fault      | Active | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | 10                              | 1                         |
| 3    | <input type="checkbox"/> Enabled | Disabled        | Active | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | 10                              | 1                         |
| 4    | <input type="checkbox"/> Enabled | Disabled        | Active | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | 10                              | 1                         |
| 5    | <input type="checkbox"/> Enabled | Disabled        | Active | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | 10                              | 1                         |
| 6    | <input type="checkbox"/> Enabled | Disabled        | Active | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | 10                              | 1                         |
| 7    | <input type="checkbox"/> Enabled | Link Fault      | Active | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | 10                              | 1                         |
| 8    | <input type="checkbox"/> Enabled | Disabled        | Active | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | 10                              | 1                         |
| 9    | <input type="checkbox"/> Enabled | Disabled        | Active | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | 10                              | 1                         |
| 10   | <input type="checkbox"/> Enabled | Disabled        | Active | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | <input checked="" type="checkbox"/> Enabled | 10                              | 1                         |

Apply Revert

### Displaying Statistics for OAM Messages

Use the Administration > OAM > Counters page to display statistics for the various types of OAM messages passed across each port.

#### Parameters

These parameters are displayed:

- ◆ **Port** – Port identifier. (Range: 1-52)
- ◆ **Clear** – Clears statistical counters for the selected ports.
- ◆ **OAMPDU** – Message types transmitted and received by the OAM protocol, including Information OAMPDU, unique Event OAMPDU, Loopback Control OAMPDU, and Organization Specific OAMPDU.

## Web Interface

To display statistics for OAM messages:

1. Click Administration, OAM, Counters.

**Figure 333: Displaying Statistics for OAM Messages**

Administration > OAM > Counters

OAM Port Counters Total: 52

|                          | Port | OAMPDU      |          |                    |          |                  |          |                       |          |
|--------------------------|------|-------------|----------|--------------------|----------|------------------|----------|-----------------------|----------|
|                          |      | Information |          | Event Notification |          | Loopback Control |          | Organization Specific |          |
|                          |      | Transmitted | Received | Transmitted        | Received | Transmitted      | Received | Transmitted           | Received |
| <input type="checkbox"/> | 1    | 0           | 0        | 0                  | 0        | 0                | 0        | 0                     | 0        |
| <input type="checkbox"/> | 2    | 0           | 0        | 0                  | 0        | 0                | 0        | 0                     | 0        |
| <input type="checkbox"/> | 3    | 0           | 0        | 0                  | 0        | 0                | 0        | 0                     | 0        |
| <input type="checkbox"/> | 4    | 0           | 0        | 0                  | 0        | 0                | 0        | 0                     | 0        |
| <input type="checkbox"/> | 5    | 0           | 0        | 0                  | 0        | 0                | 0        | 0                     | 0        |
| <input type="checkbox"/> | 6    | 0           | 0        | 0                  | 0        | 0                | 0        | 0                     | 0        |
| <input type="checkbox"/> | 7    | 0           | 0        | 0                  | 0        | 0                | 0        | 0                     | 0        |
| <input type="checkbox"/> | 8    | 0           | 0        | 0                  | 0        | 0                | 0        | 0                     | 0        |
| <input type="checkbox"/> | 9    | 0           | 0        | 0                  | 0        | 0                | 0        | 0                     | 0        |
| <input type="checkbox"/> | 10   | 0           | 0        | 0                  | 0        | 0                | 0        | 0                     | 0        |

Clear

## Displaying the OAM Event Log

Use the Administration > OAM > Event Log page to display link events for the selected port.

## Command Usage


- ◆ When a link event occurs, no matter whether the location is local or remote, this information is entered in OAM event log.
- ◆ When the log system becomes full, older events are automatically deleted to make room for new entries.
- ◆ The time of locally generated events can be accurately retrieved from the sysUpTime variable. For remotely generated events, the time of an event is indicated by the reception of an Event Notification OAMPDU from the peer.

## Web Interface

To display link events for the selected port:

1. Click Administration, OAM, Event Log.
2. Select a port from the drop-down list.

**Figure 334: Displaying the OAM Event Log**

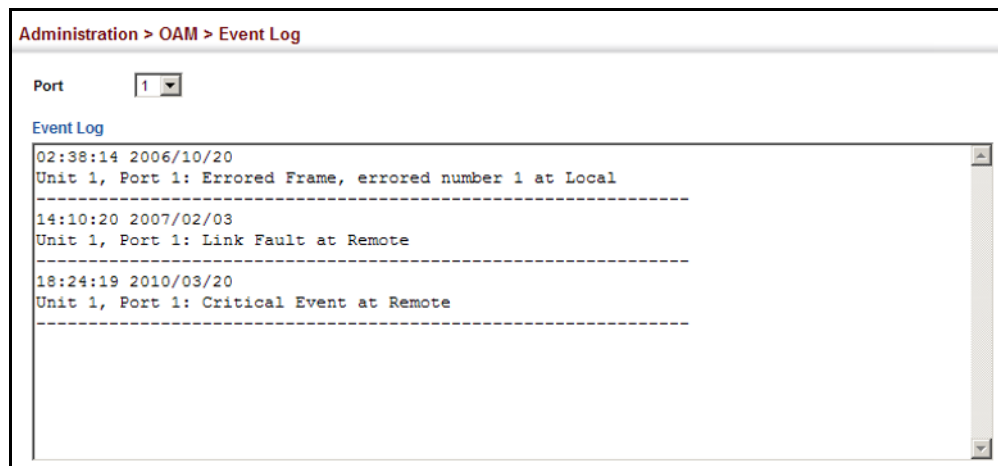

### Displaying the Status of Remote Interfaces

Use the Administration > OAM > Remote Interface page to display information about attached OAM-enabled devices.

#### Parameters

These parameters are displayed:

- ◆ **Port** – Port identifier. (Range: 1-52)
- ◆ **MAC Address** – MAC address of the OAM peer.
- ◆ **OUI** – Organizational Unit Identifier of the OAM peer.
- ◆ **Remote Loopback** – Shows if remote loopback is supported by the OAM peer.
- ◆ **Unidirectional Function** – Shows if this function is supported by the OAM peer.  
  
If supported, this indicates that the OAM entity supports the transmission of OAMPDUs on links that are operating in unidirectional mode (where traffic flows in one direction only). Some newer physical layer devices support the optional ability to encode and transmit data while one direction of the link is non-operational. This function allows OAM remote fault indication during fault conditions. This switch does not support the unidirectional function, but can parse error messages sent from a peer with unidirectional capability.
- ◆ **Link Monitor** – Shows if the OAM entity can send and receive Event Notification OAMPDUs.
- ◆ **MIB Variable Retrieval** – Shows if the OAM entity can send and receive Variable Request and Response OAMPDUs.



## Web Interface

To display information about attached OAM-enabled devices:

1. Click Administration, OAM, Remote Interface.

**Figure 335: Displaying Status of Remote Interfaces**

| Port | MAC Address       | OUI      | Remote Loopback | Unidirectional Function | Link Monitor | MIB Variable Retrieval |
|------|-------------------|----------|-----------------|-------------------------|--------------|------------------------|
| 1    | 00-00-00-00-00-00 | 00-00-00 | Disabled        | Disabled                | Disabled     | Disabled               |
| 2    | 00-00-00-00-00-00 | 00-00-00 | Disabled        | Disabled                | Disabled     | Disabled               |
| 3    | 00-00-00-00-00-00 | 00-00-00 | Disabled        | Disabled                | Disabled     | Disabled               |
| 4    | 00-00-00-00-00-00 | 00-00-00 | Disabled        | Disabled                | Disabled     | Disabled               |
| 5    | 00-00-00-00-00-00 | 00-00-00 | Disabled        | Disabled                | Disabled     | Disabled               |
| 6    | 00-00-00-00-00-00 | 00-00-00 | Disabled        | Disabled                | Disabled     | Disabled               |
| 7    | 00-00-00-00-00-00 | 00-00-00 | Disabled        | Disabled                | Disabled     | Disabled               |
| 8    | 00-00-00-00-00-00 | 00-00-00 | Disabled        | Disabled                | Disabled     | Disabled               |
| 9    | 00-00-00-00-00-00 | 00-00-00 | Disabled        | Disabled                | Disabled     | Disabled               |
| 10   | 00-00-00-00-00-00 | 00-00-00 | Disabled        | Disabled                | Disabled     | Disabled               |

## Configuring a Remote Loopback Test

Use the Administration > OAM > Remote Loopback (Remote Loopback Test) page to initiate a loop back test to the peer device attached to the selected port.

### Command Usage

- ◆ You can use this command to perform an OAM remote loop back test on the specified port. The port that you specify to run this test must be connected to a peer OAM device capable of entering into OAM remote loop back mode.
- ◆ During a remote loop back test, the remote OAM entity loops back every frame except for OAMPDUs and pause frames.
- ◆ OAM remote loopback can be used for fault localization and link performance testing. Statistics from both the local and remote DTE can be queried and compared at any time during loop back testing.
- ◆ To perform a loopback test, first enable Remote Loop Back Mode, click Test, and then click End. The number of packets transmitted and received will be displayed.

### Parameters

These parameters are displayed:

#### *Loopback Mode of Remote Device*

- ◆ **Port** – Port identifier. (Range: 1-52)
- ◆ **Loopback Mode** – Shows if loop back mode is enabled on the peer. This attribute must be enabled before starting the loopback test.

- ◆ **Loopback Status** – Shows if loopback testing is currently running.

*Loopback Test Parameters*

- ◆ **Packet Number** – Number of packets to send. (Range: 1-99999999; Default: 10000)
- ◆ **Packet Size** – Size of packets to send. (Range: 64-1518 bytes; Default: 64 bytes)
- ◆ **Test** – Starts the loop back test.
- ◆ **End** – Stops the loop back test.

*Loop Back Status of Remote Device*

- ◆ **Result** – Shows the loop back status on the peer. The loop back states shown in this field are described below.

**Table 33: Remote Loopback Status**

| State                | Description  |
|----------------------|--|
| No Loopback          | Operating in normal mode with no loopback in progress.   |
| Initiating Loopback  | The local OAM entity is starting the loopback process with its peer. It has yet to receive any acknowledgement that the remote OAM entity has received its loopback command request. |
| Remote Loopback      | The local OAM client knows that the remote OAM entity is in loopback mode.   |
| Terminating Loopback | The local OAM client is in the process of terminating the remote loopback.   |
| Local Loopback       | The remote OAM client has put the local OAM entity in loopback mode.   |
| Unknown              | This status may be returned if the OAM loopback is in a transition state but should not persist.   |

- **Packets Transmitted** – The number of loop back frames transmitted during the last loopback test on this interface.
- **Packets Received** – The number of loop back frames received during the last loopback test on this interface.
- **Loss Rate** – The percentage of packets for which there was no response.

**Web Interface**

To initiate a loop back test to the peer device attached to the selected port:

1. Click Administration, OAM, Remote Loop Back.
2. Select Remote Loopback Test from the Action list.

3. Select the port on which to initiate remote loop back testing, enable the Loop Back Mode attribute, and click Apply.
4. Set the number of packets to send and the packet size, and then click Test.

**Figure 336: Running a Remote Loop Back Test**

Administration > OAM > Remote Loopback

Action: Remote Loopback Test

Port: 2

Loopback Mode: ☒ Enabled

Loopback Status: Remote Loopback

Apply Revert

Packet Number (1-99999999):

Packet Size (64-1518): bytes

Test End

Result

10 packets transmitted. 10 packets received. Loss rate is 0.00 %

### Displaying Results of Remote Loopback Testing

Use the Administration > OAM > Remote Loopback (Show Test Result) page to display the results of remote loop back testing for each port for which this information is available.

#### Parameters

These parameters are displayed:


- ◆ **Port** – Port identifier. (Range: 1-52)
- ◆ **Packets Transmitted** – The number of loop back frames transmitted during the last loop back test on this interface.
- ◆ **Packets Received** – The number of loop back frames received during the last loop back test on this interface.
- ◆ **Loss Rate** – The percentage of packets transmitted for which there was no response.

#### Web Interface

To display the results of remote loop back testing for each port for which this information is available:

1. Click Administration, OAM, Remote Loopback.
2. Select Show Test Result from the Action list.

Figure 337: Displaying the Results of Remote Loop Back Testing

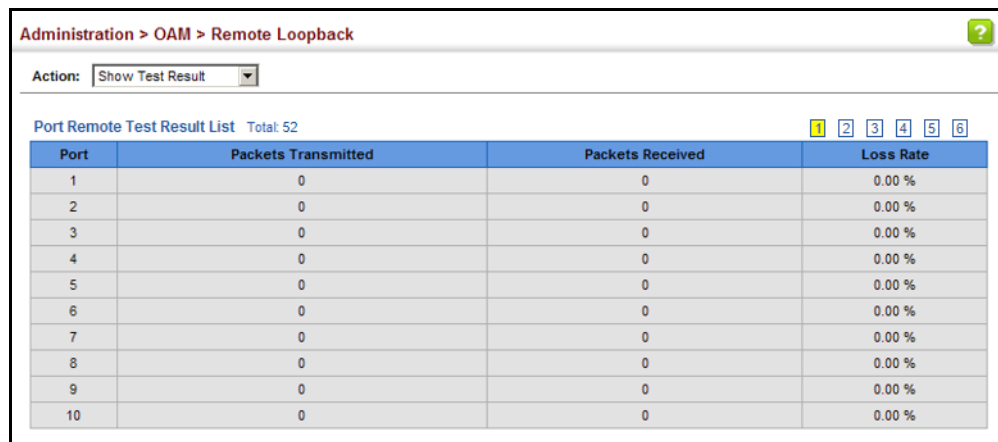

The screenshot shows a web interface for 'Administration > OAM > Remote Loopback'. Below the breadcrumb is an 'Action:' dropdown menu set to 'Show Test Result'. The main content area is titled 'Port Remote Test Result List' with a 'Total: 52' and a pagination bar showing '1' (selected), '2', '3', '4', '5', and '6'. Below this is a table with four columns: 'Port', 'Packets Transmitted', 'Packets Received', and 'Loss Rate'. The table contains 10 rows of data, all showing 0 packets transmitted and received, and a 0.00 % loss rate.

| Port | Packets Transmitted | Packets Received | Loss Rate |
|------|---------------------|------------------|-----------|
| 1    | 0                   | 0                | 0.00 %    |
| 2    | 0                   | 0                | 0.00 %    |
| 3    | 0                   | 0                | 0.00 %    |
| 4    | 0                   | 0                | 0.00 %    |
| 5    | 0                   | 0                | 0.00 %    |
| 6    | 0                   | 0                | 0.00 %    |
| 7    | 0                   | 0                | 0.00 %    |
| 8    | 0                   | 0                | 0.00 %    |
| 9    | 0                   | 0                | 0.00 %    |
| 10   | 0                   | 0                | 0.00 %    |

## UDLD Configuration

The switch can be configured to detect general loopback conditions caused by hardware problems or faulty protocol settings. When enabled, a control frame is transmitted on the participating ports, and the switch monitors inbound traffic to see if the frame is looped back.

### Usage Guidelines

- ◆ The default settings for the control frame transmit interval and recover time may be adjusted to improve performance for your specific environment. The shutdown mode may also need to be changed once you determine what kind of packets are being looped back.
- ◆ General loopback detection provided by the commands described in this section and loopback detection provided by the spanning tree protocol cannot both be enabled at the same time. If loopback detection is enabled for the spanning tree protocol, general loopback detection cannot be enabled on the same interface.
- ◆ When a loopback event is detected on an interface or when a interface is released from a shutdown state caused by a loopback event, a trap message is sent and the event recorded in the system log.
- ◆ Loopback detection must be enabled both globally and on an interface for loopback detection to take effect.

## Configuring UDLD Protocol Intervals

Use the Administration > UDLD > Configure Global page to configure the UniDirectional Link Detection message probe interval, detection interval, and recovery interval.

### Parameters

These parameters are displayed:

- ◆ **Message Interval** – Configures the message interval between UDLD probe messages for ports in the advertisement phase and determined to be bidirectional. (Range: 7-90 seconds; Default: 15 seconds)  
  
UDLD probe messages are sent after linkup or detection phases. During the detection phase, messages are exchanged at the maximum rate of one per second. After that, if the protocol reaches a stable state and determines that the link is bidirectional, the message interval is increased to a configurable value based on a curve known as  $M1(t)$ , a time-based function described in RFC 5171.  
  
If the link is deemed anything other than bidirectional at the end of the detection phase, this curve becomes a flat line with a fixed value of  $M_{fast}$  (7 seconds).  
  
If the link is instead deemed bidirectional, the curve will use  $M_{fast}$  for the first four subsequent message transmissions and then transition to an  $M_{slow}$  value for all other steady-state transmissions.  $M_{slow}$  is the value configured by this command.
- ◆ **Detection Interval** – Sets the amount of time the switch remains in detection state after discovering a neighbor. (Range: 5-255 seconds; Default: 5 seconds)  
  
When a neighbor device is discovered by UDLD, the switch enters “detection state” and remains in this state for specified detection-interval. After the detection-interval expires, the switch tries to decide whether or the link is unidirectional based on the information collected during the “detection state.”
- ◆ **Recovery Status** – Configures the switch to automatically recover from UDLD disabled port state after a period specified by the Recovery Interval. (Default: Disabled)  
  
When automatic recovery state is changed, any ports shut down by UDLD will be reset.
- ◆ **Recovery Interval** – Specifies the period after which to automatically recover from UDLD disabled port state. (Range: 30-86400 seconds; Default: 300 seconds)  
  
When the recovery interval is changed, any ports shut down by UDLD will be reset.

### Web Interface

To configure the UDLD message probe interval, detection interval, and recovery interval:

1. Click Administration, UDLD, Configure Global.
2. Select Configure Global from the Step list.
3. Configure the message and detection intervals.
4. Enable automatic recovery if required, and set the recovery interval.
5. Click Apply.

**Figure 338: Configuring UDLD Protocol Intervals**

Administration > UDLD

Step: 1. Configure Global

|                              |                                  |         |
|------------------------------|----------------------------------|---------|
| Message Interval (7-90)      | 15                               | seconds |
| Detection Interval (5-255)   | 5                                | seconds |
| Recovery Status              | <input type="checkbox"/> Enabled |         |
| Recovery Interval (30-86400) | 300                              | seconds |

Apply Revert

### Configuring UDLD Interface Settings

Use the Administration > UDLD (Configure Interface) page to enable UDLD and aggressive mode which reduces the shut-down delay after loss of bidirectional connectivity is detected.

### Parameters

These parameters are displayed:

- ◆ **Port** – Port identifier. (Range: 1-52)
- ◆ **UDLD** – Enables UDLD on a port. (Default: Disabled)
  - UDLD requires that all the devices connected to the same LAN segment be running the protocol in order for a potential mis-configuration to be detected and for prompt corrective action to be taken.
  - Whenever a UDLD device learns about a new neighbor or receives a resynchronization request from an out-of-synch neighbor, it (re)starts the detection process on its side of the connection and sends N echo messages in reply. (This mechanism implicitly assumes that N packets are sufficient to get through a link and reach the other end, even though some of them might get dropped during the transmission.)

Since this behavior must be the same on all the neighbors, the sender of the echoes expects to receive an echo in reply. If the detection process

ends without the proper echo information being received, the link is considered to be unidirectional.

- ◆ **Aggressive Mode** – Reduces the shut-down delay after loss of bidirectional connectivity is detected. (Default: Disabled)

UDLD can function in two modes: normal mode and aggressive mode.

- In normal mode, determination of link status at the end of the detection process is always based on information received in UDLD messages: whether that's information about the exchange of proper neighbor identification or the absence of such. Hence, albeit bound by a timer, normal mode determinations are always based on gleaned information, and as such are "event-based." If no such information can be obtained (e.g., because of a bidirectional loss of connectivity), UDLD follows a conservative approach to minimize false positives during the detection process and deems a port to be in "undetermined" state. In other words, normal mode will shut down a port only if it can explicitly determine that the associated link is faulty for an extended period of time.
- In aggressive mode, UDLD will also shut down a port if it loses bidirectional connectivity with the neighbor for the same extended period of time (as that mentioned above for normal mode) and subsequently fails repeated last-resort attempts to re-establish communication with the other end of the link. This mode of operation assumes that loss of communication with the neighbor is a meaningful network event in itself, and a symptom of a serious connectivity problem. Because this type of detection can be event-less, and lack of information cannot always be associated to an actual malfunction of the link, this mode is recommended only in certain scenarios (typically only on point-to-point links where no communication failure between two neighbors is admissible).

- ◆ **Operation State** – Shows the UDLD operational state (Disabled, Link down, Link up, Advertisement, Detection, Disabled port, Advertisement - Single neighbor, Advertisement - Multiple neighbors)

- ◆ **Port State** – Shows the UDLD port state (Unknown, Bidirectional, Unidirectional, Transmit-to-receive loop, Mismatch with neighbor state reported, Neighbor's echo is empty)

The state is Unknown if the link is down or not connected to a UDLD-capable device. The state is Bidirectional if the link has a normal two-way connection to a UDLD-capable device. All other states indicate mis-wiring.

- ◆ **Message Interval** – The interval between UDLD probe messages used for the indicated operational state.
- ◆ **Detection Interval** – The period the switch remains in detection state after discovering a neighbor.

## Web Interface

To enable UDLD and aggressive mode:

1. Click Administration, UDLD, Configure Interface.
2. Enable UDLD and aggressive mode on the required ports.
3. Click Apply.

**Figure 339: Configuring UDLD Interface Settings**

| Port | UDLD                             | Aggressive Mode                  | Operation State | Port State | Message Interval (seconds) | Detection Interval (seconds) |
|------|----------------------------------|----------------------------------|-----------------|------------|----------------------------|------------------------------|
| 1    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | Disabled        | Unknown    | 7                          | 5                            |
| 2    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | Disabled        | Unknown    | 7                          | 5                            |
| 3    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | Disabled        | Unknown    | 7                          | 5                            |
| 4    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | Disabled        | Unknown    | 7                          | 5                            |
| 5    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | Disabled        | Unknown    | 7                          | 5                            |

## Displaying UDLD Neighbor Information

Use the Administration > UDLD (Show Information) page to show UDLD neighbor information, including neighbor state, expiration time, and protocol intervals.

### Parameters

These parameters are displayed:

- ◆ **Port** – Port identifier. (Range: 1-28/52)
- ◆ **Entry** – Table entry number uniquely identifying the neighbor device discovered by UDLD on a port interface.
- ◆ **Device ID** – Device identifier of neighbor sending the UDLD packet.
- ◆ **Port ID** – The physical port the UDLD packet is sent from.
- ◆ **Device Name** – The device name of this neighbor.
- ◆ **Neighbor State** – Link status of neighbor device (Values: unknown, neighborsEcholsEmpty, bidirectional, mismatchWithneighborStateReported, unidirectional).
- ◆ **Expire** – The amount of time remaining before this entry will expire.
- ◆ **Message Interval** – The interval between UDLD probe messages for ports in advertisement phase.
- ◆ **Detection Interval** – The period the switch remains in detection state after discovering a neighbor.




### Web Interface

To display UDLD neighbor information:

1. Click Administration, UDLD, Show Information.
2. Select an interface from the Port list.

**Figure 340: Displaying UDLD Neighbor Information**

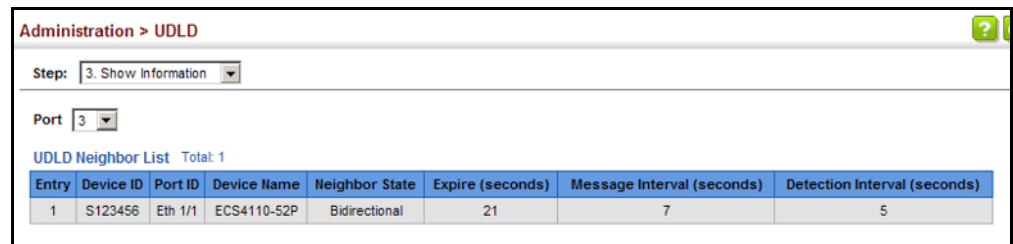

| Administration > UDLD       |           |         |             |                |                  |                            |                              |
|-----------------------------|-----------|---------|-------------|----------------|------------------|----------------------------|------------------------------|
| Step: 3. Show Information   |           |         |             |                |                  |                            |                              |
| Port 3                      |           |         |             |                |                  |                            |                              |
| UDLD Neighbor List Total: 1 |           |         |             |                |                  |                            |                              |
| Entry                       | Device ID | Port ID | Device Name | Neighbor State | Expire (seconds) | Message Interval (seconds) | Detection Interval (seconds) |
| 1                           | S123456   | Eth 1/1 | ECS4110-52P | Bidirectional  | 21               | 7                          | 5                            |

## LBD Configuration

The switch can be configured to detect general loopback conditions caused by hardware problems or faulty protocol settings. When loopback detection (LBD) is enabled, a control frame is transmitted on the participating ports, and the switch monitors inbound traffic to see if the frame is looped back.

### Usage Guidelines

- ◆ The default settings for the control frame transmit interval and recover time may be adjusted to improve performance for your specific environment. The shutdown mode may also need to be changed once you determine what kind of packets are being looped back.
- ◆ General loopback detection provided by the commands described in this section and loopback detection provided by the spanning tree protocol cannot both be enabled at the same time. If loopback detection is enabled for the spanning tree protocol, general loopback detection cannot be enabled on the same interface.
- ◆ When a loopback event is detected on an interface or when an interface is released from a shutdown state caused by a loopback event, a trap message is sent and the event recorded in the system log.
- ◆ Loopback detection must be enabled both globally and on an interface for loopback detection to take effect.

## Configuring Global Settings for LBD

Use the Administration > LBD (Configure Global) page to enable loopback detection globally, specify the interval at which to transmit control frames, the interval to wait before releasing an interface from shutdown state, the response to a detected loopback, and the traps to send.

### Parameters

These parameters are displayed:

- ◆ **Global Status** – Enables loopback detection globally on the switch. (Default: Enabled)
- ◆ **Transmit Interval** – Specifies the interval at which to transmit loopback detection control frames. (Range: 1-32767 seconds; Default: 10 seconds)
- ◆ **Recover Time** – Specifies the interval to wait before the switch automatically releases an interface from shutdown state. (Range: 60-1,000,000 seconds; Default: 60 seconds)

When the loopback detection mode is changed (enabled or disabled), any ports placed in shutdown state by the loopback detection process will be immediately restored to operation regardless of the remaining recover time.

If the recover time is not enabled (checkbox unmarked), all ports placed in shutdown state can be restored to operation using the Release button. To restore a specific port, re-enable Admin status on the Configure Interface page.

The recover-time is the maximum time when recovery is triggered after a loop is detected. The actual interval between recovery and detection will be less than or equal to the recover-time.

- ◆ **Action** – Specifies the protective action the switch takes when a loopback condition is detected. (Options: Block, None, Shutdown; Default: Shutdown)
  - **Block** – When the response to a detected loopback condition is set to block user traffic, and a loopback is detected on a port which is a member of a specific VLAN, packets belonging to that VLAN are dropped at the offending port. Under these conditions, loopback detection control frames may be untagged or tagged depending on the port's VLAN membership type. Ingress filtering for the port is enabled automatically if not already enabled by other commands. The port's original setting for ingress filtering will be restored when loopback detection is disabled.
  - **None** – No action is taken.
  - **Shutdown** – When the response to a detected loopback condition is set to shut down a port, and a port receives a control frame sent by itself, this means that the port is in looped state, and the VLAN in the frame payload is also in looped state with the wrong VLAN tag. The looped port is therefore shut down.

When the loopback detection response is changed, any ports placed in shutdown state by the loopback detection process will be immediately restored to operation regardless of the remaining recover time.

- ◆ **Trap** – Sends a trap when a loopback condition is detected, or when the switch recovers from a loopback condition. (Options: Both, Detect, None, Recover; Default: None)
  - **Both** – Sends an SNMP trap message when a loopback condition is detected, or when the switch recovers from a loopback condition.
  - **Detect** – Sends an SNMP trap message when a loopback condition is detected.
  - **None** – Does not send an SNMP trap for loopback detection or recovery.
  - **Recover** – Sends an SNMP trap message when the switch recovers from a loopback condition.
- ◆ **Release** – Releases all interfaces currently shut down by the loopback detection feature.

### Web Interface

To configure global settings for LBD:

1. Click Administration, LBD, Configure Global.
2. Make the required configuration changes.
3. Click Apply.

**Figure 341: Configuring Global Settings for LBD**

The screenshot shows the 'Administration > LBD' configuration page. At the top, there is a breadcrumb trail 'Administration > LBD' and a 'Step: 1. Configure Global' dropdown menu. The main configuration area contains the following settings:

- Global Status:** A checkbox labeled 'Enabled' is currently unchecked.
- Transmit Interval (1-32767):** A text input field containing the value '10', followed by the unit 'sec'.
- Recover Time (60-1000000):** A checked checkbox is followed by a text input field containing the value '60', followed by the unit 'sec'.
- Action:** A dropdown menu with 'Shutdown' selected.
- Trap:** A dropdown menu with 'None' selected.

At the bottom right of the configuration area are two buttons: 'Apply' and 'Revert'. At the bottom left, there is a 'Release' button followed by a link that says 'Click this button to release all looped ports manually'.

## Configuring Interface Settings for LBD

Use the Administration > LBD (Configure Interface) page to enable loopback detection on an interface, to display the loopback operational state, and the VLANs which are looped back.

### Parameters

These parameters are displayed:

- ◆ **Port** (Range: 1-52)
- ◆ **Trunk** (Range: 1-16)
- ◆ **Admin State**
- ◆ **Operation State**
- ◆ **Looped VLAN**

### Web Interface

To configure interface settings for LBD:

1. Click Administration, LBD, Configure Interface.
2. Make the required configuration changes.
3. Click Apply.

**Figure 342: Configuring Interface Settings for LBD**

| Administration > LBD  |   |                 |             |
|---|---|-----------------|-------------|
| Step: 2. Configure Interface  |   |                 |             |
| Interface <input checked="" type="radio"/> Port <input type="radio"/> Trunk |   |                 |             |
| Port List Total: 52   |   |                 |             |
| Port  | Admin State                                 | Operation State | Looped VLAN |
| 1   | <input checked="" type="checkbox"/> Enabled | Normal          | None        |
| 2   | <input checked="" type="checkbox"/> Enabled | Normal          | None        |
| 3   | <input checked="" type="checkbox"/> Enabled | Normal          | None        |
| 4   | <input checked="" type="checkbox"/> Enabled | Normal          | None        |
| 5   | <input checked="" type="checkbox"/> Enabled | Normal          | None        |

---

# Multicast Filtering

This chapter describes how to configure the following multicast services:


- ◆ [IGMP Snooping](#) – Configures snooping and query parameters.
- ◆ [IGMP Filtering and Throttling](#) – Filters specified multicast service, or throttles the maximum of multicast groups allowed on an interface.
- ◆ [MLD Snooping](#) – Configures snooping and query parameters for IPv6.
- ◆ [MLD Filtering and Throttling](#) – Filters specified multicast service, or throttles the maximum of multicast groups allowed on an interface.
- ◆ [Filtering MLD Query Packets on an Interface](#) – Configures the interface to drop MLD query packets.
- ◆ [Multicast VLAN Registration for IPv4](#) – Configures a single network-wide multicast VLAN shared by hosts residing in other standard or private VLAN groups, preserving security and data isolation.
- ◆ [Multicast VLAN Registration for IPv6](#) – Configures a single network-wide multicast VLAN shared by hosts residing in other standard or private VLAN groups, preserving security and data isolation.

---

## Overview

Multicasting is used to support real-time applications such as video conferencing or streaming audio. A multicast server does not have to establish a separate connection with each client. It merely broadcasts its service to the network, and any hosts that want to receive the multicast register with their local multicast switch/router. Although this approach reduces the network overhead required by a multicast server, the broadcast traffic must be carefully pruned at every multicast switch/router it passes through to ensure that traffic is only passed on to the hosts which subscribed to this service.

**Figure 343: Multicast Filtering Concept**

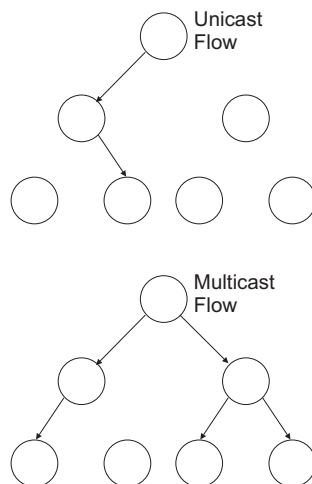

This switch can use Internet Group Management Protocol (IGMP) to filter multicast traffic. IGMP Snooping can be used to passively monitor or “snoop” on exchanges between attached hosts and an IGMP-enabled device, most commonly a multicast router. In this way, the switch can discover the ports that want to join a multicast group, and set its filters accordingly.

If there is no multicast router attached to the local subnet, multicast traffic and query messages may not be received by the switch. In this case (Layer 2) IGMP Query can be used to actively ask the attached hosts if they want to receive a specific multicast service. IGMP Query thereby identifies the ports containing hosts requesting to join the service and sends data out to those ports only. It then propagates the service request up to any neighboring multicast switch/router to ensure that it will continue to receive the multicast service.

The purpose of IP multicast filtering is to optimize a switched network’s performance, so multicast packets will only be forwarded to those ports containing multicast group hosts or multicast routers/switches, instead of flooding traffic to all ports in the subnet (VLAN).

---

## Layer 2 IGMP (Snooping and Query for IPv4)

IGMP Snooping and Query – If multicast routing is not supported on other switches in your network, you can use IGMP Snooping and IGMP Query ([page 540](#)) to monitor IGMP service requests passing between multicast clients and servers, and dynamically configure the switch ports which need to forward multicast traffic. IGMP Snooping conserves bandwidth on network segments where no node has expressed interest in receiving a specific multicast service. For switches that do not support multicast routing, or where multicast routing is already enabled on other switches in the local network segment, IGMP Snooping is the only service required to support multicast filtering.

When using IGMPv3 snooping, service requests from IGMP Version 1, 2 or 3 hosts are all forwarded to the upstream router as IGMPv3 reports. The primary enhancement provided by IGMPv3 snooping is in keeping track of information about the specific multicast sources which downstream IGMPv3 hosts have requested or refused. The switch maintains information about both multicast groups and channels, where a group indicates a multicast flow for which the hosts have *not* requested a specific source (the only option for IGMPv1 and v2 hosts unless statically configured on the switch), and a channel indicates a flow for which the hosts have requested service from a specific source. For IGMPv1/v2 hosts, the source address of a channel is always null (indicating that any source is acceptable), but for IGMPv3 hosts, it may include a specific address when requested.

Only IGMPv3 hosts can request service from a specific multicast source. When downstream hosts request service from a specific source for a multicast service, these sources are all placed in the Include list, and traffic is forwarded to the hosts from each of these sources. IGMPv3 hosts may also request that service be forwarded from any source except for those specified. In this case, traffic is filtered from sources in the Exclude list, and forwarded from all other available sources.



**Note:** When the switch is configured to use IGMPv3 snooping, the snooping version may be downgraded to version 2 or version 1, depending on the version of the IGMP query packets detected on each VLAN.

**Note:** IGMP snooping will not function unless a multicast router port is enabled on the switch. This can be accomplished in one of two ways. A static router port can be manually configured (see [“Specifying Static Interfaces for a Multicast Router” on page 544](#)). Using this method, the router port is never timed out, and will continue to function until explicitly removed. The other method relies on the switch to dynamically create multicast routing ports whenever multicast routing protocol packets or IGMP query packets are detected on a port.

**Note:** A maximum of up to 1023 multicast entries can be maintained for IGMP snooping. Once the table is full, no new entries are learned. Any subsequent multicast traffic not found in the table is dropped if unregistered-flooding is disabled (default behavior) and no router port is configured in the attached VLAN, or flooded throughout the VLAN if unregistered-flooding is enabled (see [“Configuring IGMP Snooping and Query Parameters” on page 540](#)).

**Static IGMP Router Interface** – If IGMP snooping cannot locate the IGMP querier, you can manually designate a known IGMP querier (i.e., a multicast router/switch) connected over the network to an interface on your switch ([page 544](#)). This interface will then join all the current multicast groups supported by the attached router/switch to ensure that multicast traffic is passed to all appropriate interfaces within the switch.

**Static IGMP Host Interface** – For multicast applications that you need to control more carefully, you can manually assign a multicast service to specific interfaces on the switch ([page 546](#)).

IGMP Snooping with Proxy Reporting – The switch supports last leave, and query suppression (as defined in DSL Forum TR-101, April 2006):

- ◆ When proxy reporting is disabled, all IGMP reports received by the switch are forwarded natively to the upstream multicast routers.
- ◆ Last Leave: Intercepts, absorbs and summarizes IGMP leaves coming from IGMP hosts. IGMP leaves are relayed upstream only when necessary, that is, when the last user leaves a multicast group.
- ◆ Query Suppression: Intercepts and processes IGMP queries in such a way that IGMP specific queries are never sent to client ports.

The only deviation from TR-101 is that the marking of IGMP traffic initiated by the switch with priority bits as defined in R-250 is not supported.

#### Configuring IGMP Snooping and Query Parameters

Use the Multicast > IGMP Snooping > General page to configure the switch to forward multicast traffic intelligently. Based on the IGMP query and report messages, the switch forwards multicast traffic only to the ports that request it. This prevents the switch from broadcasting the traffic to all ports and possibly disrupting network performance.

#### Command Usage

- ◆ **IGMP Snooping** – This switch can passively snoop on IGMP Query and Report packets transferred between IP multicast routers/switches and IP multicast host groups to identify the IP multicast group members. It simply monitors the IGMP packets passing through it, picks out the group registration information, and configures the multicast filters accordingly.



**Note:** If unknown multicast traffic enters a VLAN which has been configured with a router port, the traffic is forwarded to that port. However, if no router port exists on the VLAN, the traffic is dropped if unregistered data flooding is disabled (default behavior), or flooded throughout the VLAN if unregistered data flooding is enabled (see “Unregistered Data Flooding” in the Command Attributes section).

- ◆ **IGMP Querier** – A router, or multicast-enabled switch, can periodically ask their hosts if they want to receive multicast traffic. If there is more than one router/switch on the LAN performing IP multicasting, one of these devices is elected “querier” and assumes the role of querying the LAN for group members. It then propagates the service requests on to any upstream multicast switch/router to ensure that it will continue to receive the multicast service.



**Note:** Multicast routers use this information from IGMP snooping and query reports, along with a multicast routing protocol such as DVMRP or PIM, to support IP multicasting across the Internet.



## Parameters

These parameters are displayed:

- ◆ **IGMP Snooping Status** – When enabled, the switch will monitor network traffic to determine which hosts want to receive multicast traffic. This is referred to as IGMP Snooping. (Default: Disabled)

When IGMP snooping is enabled globally, the per VLAN interface settings for IGMP snooping take precedence (see [“Setting IGMP Snooping Status per Interface” on page 548](#)).

When IGMP snooping is disabled globally, snooping can still be configured per VLAN interface, but the interface settings will not take effect until snooping is re-enabled globally.

- ◆ **Proxy Reporting Status** – Enables IGMP Snooping with Proxy Reporting. (Default: Disabled)

When proxy reporting is enabled with this command, the switch performs “IGMP Snooping with Proxy Reporting” (as defined in DSL Forum TR-101, April 2006), including last leave, and query suppression.

Last leave sends out a proxy query when the last member leaves a multicast group, and query suppression means that specific queries are not forwarded from an upstream multicast router to hosts downstream from this device.

When proxy reporting is disabled, all IGMP reports received by the switch are forwarded natively to the upstream multicast routers.

- ◆ **TCN Flood** – Enables flooding of multicast traffic if a spanning tree topology change notification (TCN) occurs. (Default: Disabled)

When a spanning tree topology change occurs, the multicast membership information learned by switch may be out of date. For example, a host linked to one port before the topology change (TC) may be moved to another port after the change. To ensure that multicast data is delivered to all receivers, by default, a switch in a VLAN (with IGMP snooping enabled) that receives a Bridge Protocol Data Unit (BPDU) with TC bit set (by the root bridge) will enter into “multicast flooding mode” for a period of time until the topology has stabilized and the new locations of all multicast receivers are learned.

If a topology change notification (TCN) is received, and all the uplink ports are subsequently deleted, a time out mechanism is used to delete all of the currently learned multicast channels.

When a new uplink port starts up, the switch sends unsolicited reports for all currently learned channels out the new uplink port.

By default, the switch immediately enters into “multicast flooding mode” when a spanning tree topology change occurs. In this mode, multicast traffic will be flooded to all VLAN ports. If many ports have subscribed to different multicast groups, flooding may cause excessive packet loss on the link between the switch and the end host. Flooding may be disabled to avoid this, causing multicast traffic to be delivered only to those ports on which multicast group

members have been learned. Otherwise, the time spent in flooding mode can be manually configured to reduce excessive loading.

When the spanning tree topology changes, the root bridge sends a proxy query to quickly re-learn the host membership/port relations for multicast channels. The root bridge also sends an unsolicited Multicast Router Discover (MRD) request to quickly locate the multicast routers in this VLAN.

The proxy query and unsolicited MRD request are flooded to all VLAN ports except for the receiving port when the switch receives such packets.

- ◆ **TCN Query Solicit** – Sends out an IGMP general query solicitation when a spanning tree topology change notification (TCN) occurs. (Default: Disabled)

When the root bridge in a spanning tree receives a TCN for a VLAN where IGMP snooping is enabled, it issues a global IGMP leave message (or query solicitation). When a switch receives this solicitation, it floods it to all ports in the VLAN where the spanning tree change occurred. When an upstream multicast router receives this solicitation, it immediately issues an IGMP general query.

A query solicitation can be sent whenever the switch notices a topology change, even if it is not the root bridge in spanning tree.

- ◆ **Router Alert Option** – Discards any IGMPv2/v3 packets that do not include the Router Alert option. (Default: Disabled)

As described in Section 9.1 of RFC 3376 for IGMP Version 3, the Router Alert Option can be used to protect against DOS attacks. One common method of attack is launched by an intruder who takes over the role of querier, and starts overloading multicast hosts by sending a large number of group-and-source-specific queries, each with a large source list and the Maximum Response Time set to a large value.

To protect against this kind of attack, (1) routers should not forward queries. This is easier to accomplish if the query carries the Router Alert option. (2) Also, when the switch is acting in the role of a multicast host (such as when using proxy routing), it should ignore version 2 or 3 queries that do not contain the Router Alert option.

- ◆ **Unregistered Data Flooding** – Floods unregistered multicast traffic into the attached VLAN. (Default: Disabled)

Once the table used to store multicast entries for IGMP snooping and multicast routing is filled, no new entries are learned. If no router port is configured in the attached VLAN, and unregistered-flooding is disabled, any subsequent multicast traffic not found in the table is dropped, otherwise it is flooded throughout the VLAN.

- ◆ **Forwarding Priority** – Assigns a CoS priority to all multicast traffic. (Range: 0-7, where 7 is the highest priority; Default: Disabled)

This parameter can be used to set a high priority for low-latency multicast traffic such as a video-conference, or to set a low priority for normal multicast traffic not sensitive to latency.

- ◆ **Version Exclusive** – Discards any received IGMP messages which use a version different to that currently configured by the IGMP Version attribute. (Default: Disabled)
- ◆ **IGMP Unsolicited Report Interval** – Specifies how often the upstream interface should transmit unsolicited IGMP reports when proxy reporting is enabled. (Range: 1-65535 seconds, Default: 400 seconds)  
  
When a new upstream interface (that is, uplink port) starts up, the switch sends unsolicited reports for all currently learned multicast channels via the new upstream interface.  
  
This command only applies when proxy reporting is enabled.
- ◆ **Router Port Expire Time** – The time the switch waits after the previous querier stops before it considers it to have expired. (Range: 1-65535, Recommended Range: 300-500 seconds, Default: 300)
- ◆ **IGMP Snooping Version** – Sets the protocol version for compatibility with other devices on the network. This is the IGMP Version the switch uses to send snooping reports. (Range: 1-3; Default: 2)  
  
This attribute configures the IGMP report/query version used by IGMP snooping. Versions 1 - 3 are all supported, and versions 2 and 3 are backward compatible, so the switch can operate with other devices, regardless of the snooping version employed.
- ◆ **Querier Status** – When enabled, the switch can serve as the Querier, which is responsible for asking hosts if they want to receive multicast traffic. This feature is not supported for IGMPv3 snooping. (Default: Disabled)

### Web Interface

To configure general settings for IGMP Snooping and Query:

1. Click Multicast, IGMP Snooping, General.
2. Adjust the IGMP settings as required.
3. Click Apply.

**Figure 344: Configuring General Settings for IGMP Snooping**

Multicast > IGMP Snooping > General

|  |  |
|--|--|
| IGMP Snooping Status                       | <input type="checkbox"/> Enabled         |
| Proxy Reporting Status                     | <input type="checkbox"/> Enabled         |
| TCN Flood                                  | <input type="checkbox"/> Enabled         |
| TCN Query Solicit                          | <input type="checkbox"/> Enabled         |
| Router Alert Option                        | <input type="checkbox"/> Enabled         |
| Unregistered Data Flooding                 | <input type="checkbox"/> Enabled         |
| Version Exclusive                          | <input type="checkbox"/> Enabled         |
| IGMP Unsolicited Report Interval (1-65535) | <input type="text" value="400"/> seconds |
| Router Port Expire Time (1-65535)          | <input type="text" value="300"/> seconds |
| IGMP Snooping Version (1-3)                | <input type="text" value="2"/>           |
| Querier Status                             | <input type="checkbox"/> Enabled         |

### Specifying Static Interfaces for a Multicast Router

Use the Multicast > IGMP Snooping > Multicast Router (Add Static Multicast Router) page to statically attach an interface to a multicast router/switch.

Depending on network connections, IGMP snooping may not always be able to locate the IGMP querier. Therefore, if the IGMP querier is a known multicast router/switch connected over the network to an interface (port or trunk) on the switch, the interface (and a specified VLAN) can be manually configured to join all the current multicast groups supported by the attached router. This can ensure that multicast traffic is passed to all the appropriate interfaces within the switch.

### Command Usage

IGMP Snooping must be enabled globally on the switch (see [“Configuring IGMP Snooping and Query Parameters” on page 540](#)) before a multicast router port can take effect.

### Parameters

These parameters are displayed:

#### *Add Static Multicast Router*

- ◆ **VLAN** – Selects the VLAN which is to propagate all multicast traffic coming from the attached multicast router. (Range: 1-4094)
- ◆ **Interface** – Activates the Port or Trunk scroll down list.
- ◆ **Port or Trunk** – Specifies the interface attached to a multicast router.

#### *Show Static Multicast Router*

- ◆ **VLAN** – Selects the VLAN for which to display any configured static multicast routers.
- ◆ **Interface** – Shows the interface to which the specified static multicast routers are attached.

#### *Show Current Multicast Router*

- ◆ **VLAN** – Selects the VLAN for which to display any currently active multicast routers.
- ◆ **Interface** – Shows the interface to which an active multicast router is attached.
- ◆ **Type** – Shows if this entry is static or dynamic.
- ◆ **Expire** – Time until this dynamic entry expires.

#### **Web Interface**

To specify a static interface attached to a multicast router:

1. Click Multicast, IGMP Snooping, Multicast Router.
2. Select Add Static Multicast Router from the Action list.
3. Select the VLAN which will forward all the corresponding multicast traffic, and select the port or trunk attached to the multicast router.
4. Click Apply.

**Figure 345: Configuring a Static Interface for a Multicast Router**

The screenshot shows a web interface for configuring a static interface for a multicast router. The breadcrumb navigation at the top reads "Multicast > IGMP Snooping > Multicast Router". Below this, there is a section titled "Action:" with a dropdown menu set to "Add Static Multicast Router". Underneath, there is a "VLAN" field with a dropdown menu set to "1". Below that, there is an "Interface" section with two radio buttons: "Port" (which is selected) and "Trunk". The "Port" radio button is accompanied by a dropdown menu set to "1". The "Trunk" radio button is accompanied by a dropdown menu. At the bottom right of the form, there are two buttons: "Apply" and "Revert".

To show the static interfaces attached to a multicast router:

1. Click Multicast, IGMP Snooping, Multicast Router.
2. Select Show Static Multicast Router from the Action list.
3. Select the VLAN for which to display this information.

**Figure 346: Showing Static Interfaces Attached a Multicast Router**

The screenshot shows the 'Multicast > IGMP Snooping > Multicast Router' configuration page. The 'Action' dropdown is set to 'Show Static Multicast Router'. The 'VLAN' dropdown is set to '1'. Below this, the 'Static Multicast Router Interface List' is displayed with a 'Total: 6' count. The list contains six entries, each with a checkbox and an 'Interface' column. The interfaces are: Unit 1 / Port 1, Unit 1 / Port 2, Unit 1 / Port 3, Trunk 2, Trunk 5, and Unit 1 / Port 4. At the bottom right, there are 'Delete' and 'Revert' buttons.

|                          | Interface       |
|--------------------------|-----------------|
| <input type="checkbox"/> | Unit 1 / Port 1 |
| <input type="checkbox"/> | Unit 1 / Port 2 |
| <input type="checkbox"/> | Unit 1 / Port 3 |
| <input type="checkbox"/> | Trunk 2         |
| <input type="checkbox"/> | Trunk 5         |
| <input type="checkbox"/> | Unit 1 / Port 4 |

Multicast routers that are attached to ports on the switch use information obtained from IGMP, along with a multicast routing protocol (such as PIM) to support IP multicasting across the Internet. These routers may be dynamically discovered by the switch or statically assigned to an interface on the switch.

To show the all interfaces attached to a multicast router:

1. Click Multicast, IGMP Snooping, Multicast Router.
2. Select Current Multicast Router from the Action list.
3. Select the VLAN for which to display this information. Ports in the selected VLAN which are attached to a neighboring multicast router/switch are displayed.

**Figure 347: Showing Current Interfaces Attached a Multicast Router**

The screenshot shows the 'Multicast > IGMP Snooping > Multicast Router' configuration page. The 'Action' dropdown is set to 'Show Current Multicast Router'. The 'VLAN' dropdown is set to '1'. Below this, the 'Multicast Router Interface Information' is displayed with a 'Total: 2' count. The table has three columns: 'Interface', 'Type', and 'Expire'. The entries are: 'Eth 1 / 1' with 'Static' type, and 'Eth 1 / 4' with 'Dynamic' type and an 'Expire' time of '0:4:59'. A green question mark icon is visible in the top right corner of the page header.

| Interface | Type    | Expire |
|-----------|---------|--------|
| Eth 1 / 1 | Static  |        |
| Eth 1 / 4 | Dynamic | 0:4:59 |

### Assigning Interfaces to Multicast Services

Use the Multicast > IGMP Snooping > IGMP Member (Add Static Member) page to statically assign a multicast service to an interface.

Multicast filtering can be dynamically configured using IGMP Snooping and IGMP Query messages (see [“Configuring IGMP Snooping and Query Parameters” on page 540](#)). However, for certain applications that require tighter control, it may be necessary to statically configure a multicast service on the switch. First add all the

ports attached to participating hosts to a common VLAN, and then assign the multicast service to that VLAN group.

### Command Usage

- ◆ Static multicast addresses are never aged out.
- ◆ When a multicast address is assigned to an interface in a specific VLAN, the corresponding traffic can only be forwarded to ports within that VLAN.

### Parameters

These parameters are displayed:

- ◆ **VLAN** – Specifies the VLAN which is to propagate the multicast service. (Range: 1-4094)
- ◆ **Interface** – Activates the Port or Trunk scroll down list.
- ◆ **Port** or **Trunk** – Specifies the interface assigned to a multicast group.
- ◆ **Multicast IP** – The IP address for a specific multicast service.

### Web Interface

To statically assign an interface to a multicast service:

1. Click Multicast, IGMP Snooping, IGMP Member.
2. Select Add Static Member from the Action list.
3. Select the VLAN that will propagate the multicast service, specify the interface attached to a multicast service (through an IGMP-enabled switch or multicast router), and enter the multicast IP address.
4. Click Apply.

**Figure 348: Assigning an Interface to a Multicast Service**

The screenshot shows a web interface titled "Multicast > IGMP Snooping > IGMP Member". Below the title bar, there is a section labeled "Action:" with a dropdown menu set to "Add Static Member". Below this, there are three rows of configuration fields: "VLAN" with a dropdown menu set to "1", "Interface" with two radio buttons, "Port" (selected) with a dropdown menu set to "1", and "Trunk" (unselected) with a dropdown menu set to "1", and "Multicast IP" with a text input field containing "224.1.1.1". At the bottom right of the form, there are two buttons: "Apply" and "Revert".

To show the static interfaces assigned to a multicast service:

1. Click Multicast, IGMP Snooping, IGMP Member.
2. Select Show Static Member from the Action list.
3. Select the VLAN for which to display this information.

**Figure 349: Showing Static Interfaces Assigned to a Multicast Service**

|                          | Interface       | Multicast IP |
|--------------------------|-----------------|--------------|
| <input type="checkbox"/> | Unit 1 / Port 1 | 224.1.1.1    |
| <input type="checkbox"/> | Unit 1 / Port 2 | 224.1.2.2    |
| <input type="checkbox"/> | Unit 1 / Port 3 | 230.1.1.1    |
| <input type="checkbox"/> | Trunk 2         | 230.1.2.2    |
| <input type="checkbox"/> | Trunk 5         | 239.1.1.1    |
| <input type="checkbox"/> | Unit 1 / Port 4 | 239.2.2.2    |

Buttons: Delete, Revert

### Setting IGMP Snooping Status per Interface

Use the Multicast > IGMP Snooping > Interface (Configure VLAN) page to configure IGMP snooping attributes for a VLAN. To configure snooping globally, refer to [“Configuring IGMP Snooping and Query Parameters” on page 540](#).

### Command Usage

#### *Multicast Router Discovery*

There have been many mechanisms used in the past to identify multicast routers. This has lead to interoperability issues between multicast routers and snooping switches from different vendors. In response to this problem, the Multicast Router Discovery (MRD) protocol has been developed for use by IGMP snooping and multicast routing devices. MRD is used to discover which interfaces are attached to multicast routers, allowing IGMP-enabled devices to determine where to send multicast source and group membership messages. (MRD is specified in draft-ietf-magma-mrdisc-07.)

Multicast source data and group membership reports must be received by all multicast routers on a segment. Using the group membership protocol query messages to discover multicast routers is insufficient due to query suppression. MRD therefore provides a standardized way to identify multicast routers without relying on any particular multicast routing protocol.





**Note:** The default values recommended in the MRD draft are implemented in the switch.

Multicast Router Discovery uses the following three message types to discover multicast routers:

- ◆ Multicast Router Advertisement – Advertisements are sent by routers to advertise that IP multicast forwarding is enabled. These messages are sent unsolicited periodically on all router interfaces on which multicast forwarding is enabled. They are sent upon the occurrence of these events:
  - Upon the expiration of a periodic (randomized) timer.
  - As a part of a router's start up procedure.
  - During the restart of a multicast forwarding interface.
  - On receipt of a Solicitation message.
- ◆ Multicast Router Solicitation – Devices send Solicitation messages in order to solicit Advertisement messages from multicast routers. These messages are used to discover multicast routers on a directly attached link. Solicitation messages are also sent whenever a multicast forwarding interface is initialized or re-initialized. Upon receiving a solicitation on an interface with IP multicast forwarding and MRD enabled, a router will respond with an Advertisement.
- ◆ Multicast Router Termination – These messages are sent when a router stops IP multicast routing functions on an interface. Termination messages are sent by multicast routers when:
  - Multicast forwarding is disabled on an interface.
  - An interface is administratively disabled.
  - The router is gracefully shut down.

Advertisement and Termination messages are sent to the All-Snoopers multicast address. Solicitation messages are sent to the All-Routers multicast address.



**Note:** MRD messages are flooded to all ports in a VLAN where IGMP snooping or routing has been enabled. To ensure that older switches which do not support MRD can also learn the multicast router port, the switch floods IGMP general query packets, which do not have a null source address (0.0.0.0), to all ports in the attached VLAN. IGMP packets with a null source address are only flooded to all ports in the VLAN if the system is operating in multicast flooding mode, such as when a new VLAN or new router port is being established, or an spanning tree topology change has occurred. Otherwise, this kind of packet is only forwarded to known multicast routing ports.

#### Parameters

These parameters are displayed:

- ◆ **VLAN** – ID of configured VLANs. (Range: 1-4094)

- ◆ **IGMP Snooping Status** – When enabled, the switch will monitor network traffic on the indicated VLAN interface to determine which hosts want to receive multicast traffic. This is referred to as IGMP Snooping. (Default: Disabled)

When IGMP snooping is enabled globally (see [page 540](#)), the per VLAN interface settings for IGMP snooping take precedence.

When IGMP snooping is disabled globally, snooping can still be configured per VLAN interface, but the interface settings will not take effect until snooping is re-enabled globally.

- ◆ **Version Exclusive** – Discards any received IGMP messages (except for multicast protocol packets) which use a version different to that currently configured by the IGMP Version attribute. (Options: Enabled, Using Global Status; Default: Using Global Status)

If version exclusive is disabled on a VLAN, then this setting is based on the global setting configured on the Multicast > IGMP Snooping > General page. If it is enabled on a VLAN, then this setting takes precedence over the global setting.

- ◆ **Immediate Leave Status** – Immediately deletes a member port of a multicast service if a leave packet is received at that port and immediate leave is enabled for the parent VLAN. (Default: Disabled)

If immediate leave is not used, a multicast router (or querier) will send a group-specific query message when an IGMPv2 group leave message is received. The router/querier stops forwarding traffic for that group only if no host replies to the query within the specified time out period. Note that this time out is set to Last Member Query Interval \* Robustness Variable (fixed at 2) as defined in RFC 2236.

If immediate leave is enabled, the switch assumes that only one host is connected to the interface. Therefore, immediate leave should only be enabled on an interface if it is connected to only one IGMP-enabled device, either a service host or a neighbor running IGMP snooping.

This attribute is only effective if IGMP snooping is enabled, and IGMPv2 or IGMPv3 snooping is used.

If immediate leave is enabled, the following options are provided:

- **By Group** – The switch assumes that only one host is connected to the interface. Therefore, immediate leave should only be enabled on an interface if it is connected to only one IGMP-enabled device, either a service host or a neighbor running IGMP snooping.
- **By Host IP** – The switch will not send out a group-specific query when an IGMPv2/v3 leave message is received. But will check if there are other hosts

joining the multicast group. Only when all hosts on that port leave the group will the member port be deleted.

- ◆ **Multicast Router Discovery** – MRD is used to discover which interfaces are attached to multicast routers. (Default: Disabled)
- ◆ **General Query Suppression** – Suppresses general queries except for ports attached to downstream multicast hosts. (Default: Disabled)  
  
By default, general query messages are flooded to all ports, except for the multicast router through which they are received.  
  
If general query suppression is enabled, then these messages are forwarded only to downstream ports which have joined a multicast service.

- ◆ **Proxy Reporting** – Enables IGMP Snooping with Proxy Reporting. (Options: Enabled, Disabled, Using Global Status; Default: Using Global Status)  
  
When proxy reporting is enabled with this command, the switch performs “IGMP Snooping with Proxy Reporting” (as defined in DSL Forum TR-101, April 2006), including last leave, and query suppression.  
  
Last leave sends out a proxy query when the last member leaves a multicast group, and query suppression means that specific queries are not forwarded from an upstream multicast router to hosts downstream from this device.

#### *Rules Used for Proxy Reporting*

When IGMP Proxy Reporting is disabled, the switch will use a null IP address for the source of IGMP query and report messages unless a proxy query address has been set.

When IGMP Proxy Reporting is enabled, the source address is based on the following criteria:

- If a proxy query address is configured, the switch will use that address as the source IP address in general and group-specific query messages sent to downstream hosts, and in report and leave messages sent upstream from the multicast router port.
  - If a proxy query address is not configured, the switch will use the VLAN's IP address as the IP source address in general and group-specific query messages sent downstream, and use the source address of the last IGMP message received from a downstream host in report and leave messages sent upstream from the multicast router port.
- ◆ **Interface Version** – Sets the protocol version for compatibility with other devices on the network. This is the IGMP Version the switch uses to send snooping reports. (Options: 1-3, Using Global Version; Default: Using Global Version)  
  
This attribute configures the IGMP report/query version used by IGMP snooping. Versions 1 - 3 are all supported, and versions 2 and 3 are backward compatible, so the switch can operate with other devices, regardless of the snooping version employed.

- ◆ **Query Interval** – The interval between sending IGMP general queries. (Range: 2-31744 seconds; Default: 125 seconds)

An IGMP general query message is sent by the switch at the interval specified by this attribute. When this message is received by downstream hosts, all receivers build an IGMP report for the multicast groups they have joined.

This attribute applies when the switch is serving as the querier ([page 540](#)), or as a proxy host when IGMP snooping proxy reporting is enabled ([page 540](#)).

- ◆ **Query Response Interval** – The maximum time the system waits for a response to general queries. (Range: 10-31740 tenths of a second in multiples of 10; Default: 100 seconds)

This attribute applies when the switch is serving as the querier ([page 540](#)), or as a proxy host when IGMP snooping proxy reporting is enabled ([page 540](#)).

- ◆ **Last Member Query Interval** – The interval to wait for a response to a group-specific or group-and-source-specific query message. (Range: 1-31744 tenths of a second in multiples of 10; Default: 10 seconds)

When a multicast host leaves a group, it sends an IGMP leave message. When the leave message is received by the switch, it checks to see if this host is the last to leave the group by sending out an IGMP group-specific or group-and-source-specific query message, and starts a timer. If no reports are received before the timer expires, the group record is deleted, and a report is sent to the upstream multicast router.

A reduced value will result in reduced time to detect the loss of the last member of a group or source, but may generate more burst traffic.

This attribute will take effect only if IGMP snooping proxy reporting is enabled ([page 540](#)) or IGMP querier is enabled ([page 540](#)).

- ◆ **Last Member Query Count** – The number of IGMP proxy group-specific or group-and-source-specific query messages that are sent out before the system assumes there are no more local members. (Range: 1-255; Default: 2)

This attribute will take effect only if IGMP snooping proxy reporting or IGMP querier is enabled.

- ◆ **Proxy Query Address** – A static source address for locally generated query and report messages used by IGMP Proxy Reporting. (Range: Any valid IP unicast address; Default: 0.0.0.0)

IGMP Snooping uses a null IP address of 0.0.0.0 for the source of IGMP query messages which are proxied to downstream hosts to indicate that it is not the elected querier, but is only proxying these messages as defined in RFC 4541. The switch also uses a null address in IGMP reports sent to upstream ports.

Many hosts do not implement RFC 4541, and therefore do not understand query messages with the source address of 0.0.0.0. These hosts will therefore not reply to the queries, causing the multicast router to stop sending traffic to them.

To resolve this problem, the source address in proxied IGMP query messages can be replaced with any valid unicast address (other than the router's own address).

### Web Interface

To configure IGMP snooping on a VLAN:

1. Click Multicast, IGMP Snooping, Interface.
2. Select Configure VLAN from the Action list.
3. Select the VLAN to configure and update the required parameters.
4. Click Apply.

**Figure 350: Configuring IGMP Snooping on a VLAN**

**Multicast > IGMP Snooping > Interface**

Action: Configure VLAN

|                                      |   |
|--------------------------------------|---|
| VLAN                                 | <span>1</span>  |
| IGMP Snooping Status                 | <input checked="" type="checkbox"/> Enabled                     |
| Version Exclusive                    | <span>Using Global Status</span>                                |
| Immediate Leave Status               | <input type="checkbox"/> Enabled <span>By-Group</span>          |
| Multicast Router Discovery           | <input type="checkbox"/> Enabled                                |
| General Query Suppression            | <input type="checkbox"/> Enabled                                |
| Proxy Reporting                      | <span>Using Global Status</span>                                |
| Interface Version                    | <span>Using Global Version</span>                               |
| Query Interval (2-31744)             | <input type="text" value="125"/> seconds                        |
| Query Response Interval (10-31740)   | <input type="text" value="100"/> (1/10 seconds, multiple of 10) |
| Last Member Query Interval (1-31744) | <input type="text" value="10"/> (1/10 seconds, multiple of 10)  |
| Last Member Query Count (1-255)      | <input type="text" value="2"/>                                  |
| Proxy (Query) Address                | <input type="text" value="0.0.0.0"/>                            |

Apply Revert

To show the interface settings for IGMP snooping:

1. Click Multicast, IGMP Snooping, Interface.
2. Select Show VLAN Information from the Action list.

**Figure 351: Showing Interface Settings for IGMP Snooping**

| Multicast > IGMP Snooping > Interface |                      |                        |                |                         |                            |                         |                       |                                |                            |                           |                                |                          |
|---------------------------------------|----------------------|------------------------|----------------|-------------------------|----------------------------|-------------------------|-----------------------|--------------------------------|----------------------------|---------------------------|--------------------------------|--------------------------|
| Action: Show VLAN Information ▾       |                      |                        |                |                         |                            |                         |                       |                                |                            |                           |                                |                          |
| IGMP Snooping VLAN List Total: 1      |                      |                        |                |                         |                            |                         |                       |                                |                            |                           |                                |                          |
| VLAN                                  | IGMP Snooping Status | Immediate Leave Status | Query Interval | Query Response Interval | Last Member Query Interval | Last Member Query Count | Proxy (Query) Address | Proxy Reporting                | Multicast Router Discovery | General Query Suppression | Version Exclusive              | Interface Version        |
| 1                                     | Disabled             | Disabled               | 125            | 100                     | 10                         | 2                       | 0.0.0.0               | Using global status (Disabled) | Disabled                   | Disabled                  | Using global status (Disabled) | Using global version (2) |

### Filtering IGMP Packets on an Interface

Use the Multicast > IGMP Snooping > Interface (Configure Interface) page to configure an interface to drop IGMP query packets or multicast data packets, or enable IGMP authentication.

#### Parameters

These parameters are displayed:

- ◆ **Interface** – Port or Trunk identifier.
- ◆ **IGMP Query Drop** – Configures an interface to drop any IGMP query packets received on the specified interface. If this switch is acting as a Querier, this prevents it from being affected by messages received from another Querier.
- ◆ **Multicast Data Drop** – Configures an interface to stop multicast services from being forwarded to users attached to the downstream port (i.e., the interfaces specified by this command).
- ◆ **IGMP Authentication** – Enables IGMP authentication on the specified interface. When enabled and an IGMP JOIN request is received, an authentication request is sent to a configured RADIUS server.

#### Web Interface

To drop IGMP query packets or multicast data packets:

1. Click Multicast, IGMP Snooping, Interface.
2. Select Configure Interface from the Action list.
3. Select Port or Trunk interface.
4. Enable the required drop functions for any interface.
5. Click Apply.

**Figure 352: Dropping IGMP Query or Multicast Data Packets**

Multicast > IGMP Snooping > Interface

Action: Configure Interface

Interface ☒ Port ☐ Trunk

Port List Total: 52

| Port | IGMP Query Drop                  | Multicast Data Drop              | IGMP Authentication              |
|------|----------------------------------|----------------------------------|----------------------------------|
| 1    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled |
| 2    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled |
| 3    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled |
| 4    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled |
| 5    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled |

### Displaying Multicast Groups Discovered by IGMP Snooping

Use the Multicast > IGMP Snooping > Forwarding Entry page to display the forwarding entries learned through IGMP Snooping.

#### Command Usage

To display information about multicast groups, IGMP Snooping must first be enabled on the switch (see [page 540](#)).

#### Parameters

These parameters are displayed:

- ◆ **VLAN** – An interface on the switch that is forwarding traffic to downstream ports for the specified multicast group address.
- ◆ **Group Address** – IP multicast group address with subscribers directly attached or downstream from the switch, or a static multicast group assigned to this interface.
- ◆ **Interface** – A downstream port or trunk that is receiving traffic for the specified multicast group. This field may include both dynamically and statically configured multicast router ports.
- ◆ **Up Time** – Time that this multicast group has been known.
- ◆ **Expire** – Time until this entry expires.
- ◆ **Count** – The number of times this address has been learned by IGMP snooping.

## Web Interface

To show multicast groups learned through IGMP snooping:

1. Click Multicast, IGMP Snooping, Forwarding Entry.

**Figure 353: Showing Multicast Groups Learned by IGMP Snooping**

Multicast > IGMP Snooping > Forwarding Entry

IGMP Snooping Forwarding Entry List Total: 10

| VLAN | Group Address   | Source Address | Interface                | Up Time     | Expire | Count    |
|------|-----------------|----------------|--------------------------|-------------|--------|----------|
| 1    | 224.1.1.1       | *              | Eth 1 / 9 (Router Port)  | 00:00:06:46 |        | 2 (Port) |
|      |                 |                | Eth 1 / 11 (Member Port) | 00:00:06:46 | 03:46  | 1 (Host) |
| 1    | 224.1.1.2       | 192.168.1.2    | Eth 1 / 9 (Router Port)  |             | 02:24  | 1 (Port) |
| 2    | 224.1.1.3       | *              | Eth 1 / 9 (Router Port)  | 00:00:16:14 |        | 1 (Port) |
| 2    | 239.255.255.250 | *              | Eth 1 / 9 (Router Port)  | 00:00:08:47 |        | 2 (Port) |
|      |                 |                | Eth 1 / 11 (Member Port) | 00:00:08:47 | 03:46  | 1 (Host) |

Clear Click this button to clear all IGMP Snooping dynamic groups.

## Displaying IGMP Snooping Statistics

Use the Multicast > IGMP Snooping > Statistics pages to display IGMP snooping protocol-related statistics for the specified interface. There are four Action pages with separate statistics:

- Show Query Statistics
- Show VLAN Statistics
- Show Port Statistics
- Show Trunk Statistics

## Statistic Pages

These parameters are displayed:

Show VLAN Statistics

- ◆ **VLAN** – VLAN identifier. (Range: 1-4094)
- ◆ **Port** – Port identifier. (Range: 1-52)
- ◆ **Trunk** – Trunk identifier. (Range: 1-16)

Query Statistics

- ◆ **Other Querier** – IP address of remote querier on this interface.



- ◆ **Other Querier Expire** – Time after which remote querier is assumed to have expired.
- ◆ **Other Querier Uptime** – Time remote querier has been up.
- ◆ **Self Querier** – IP address of local querier on this interface.
- ◆ **Self Querier Expire** – Time after which local querier is assumed to have expired.
- ◆ **Self Querier Uptime** – Time local querier has been up.
- ◆ **General Query Received** – The number of general queries received on this interface.
- ◆ **General Query Sent** – The number of general queries sent from this interface.
- ◆ **Specific Query Received** – The number of specific queries received on this interface.
- ◆ **Specific Query Sent** – The number of specific queries sent from this interface.
- ◆ **Warn Rate Limit** – The rate at which received query messages of the wrong version type cause the Vx warning count to increment. Note that “0 sec” means that the Vx warning count is incremented for each wrong message version received.
- ◆ **V1 Warning Count** – The number of times the query version received (Version 1) does not match the version configured for this interface.
- ◆ **V2 Warning Count** – The number of times the query version received (Version 2) does not match the version configured for this interface.
- ◆ **V3 Warning Count** – The number of times the query version received (Version 3) does not match the version configured for this interface.

#### *VLAN, Port, and Trunk Statistics*

##### *Input Statistics*

- ◆ **Report** – The number of IGMP membership reports received on this interface.
- ◆ **Leave** – The number of leave messages received on this interface.
- ◆ **G Query** – The number of general query messages received on this interface.
- ◆ **G(-S)-S Query** – The number of group specific or group-and-source specific query messages received on this interface.

- ◆ **Drop** – The number of times a report, leave or query was dropped. Packets may be dropped due to invalid format, rate limiting, packet content not allowed, or IGMP group report received.
- ◆ **Join Success** – The number of times a multicast group was successfully joined.
- ◆ **Group** – The number of IGMP groups active on this interface.

#### *Output Statistics*

- ◆ **Report** – The number of IGMP membership reports sent from this interface.
- ◆ **Leave** – The number of leave messages sent from this interface.
- ◆ **G Query** – The number of general query messages sent from this interface.
- ◆ **G(-S)-S Query** – The number of group specific or group-and-source specific query messages sent from this interface.

#### **Web Interface**

To display statistics for IGMP snooping query-related messages:

1. Click Multicast, IGMP Snooping, Statistics.
2. Select Show Query Statistics from the Action list.
3. Select a VLAN.

**Figure 354: Displaying IGMP Snooping Statistics – Query**

Action: Show Query Statistics

VLAN 1

Query Statistics

|                         |                   |
|-------------------------|-------------------|
| Other Querier           | None              |
| Other Querier Expire    | 00(m):00(s)       |
| Other Querier Uptime    | 00(h):00(m):00(s) |
| Self Querier            | 192.168.1.1       |
| Self Querier Expire     | 00(m):00(s)       |
| Self Querier Uptime     | 00(h):00(m):00(s) |
| General Query Received  | 0                 |
| General Query Sent      | 0                 |
| Specific Query Received | 0                 |
| Specific Query Sent     | 0                 |
| Warn Rate Limit         | 0 sec.            |
| V1 Warning Count        | 0                 |
| V2 Warning Count        | 0                 |
| V3 Warning Count        | 0                 |

Clear All [Click this button to clear all IGMP Snooping statistics.](#)

Refresh

To display IGMP snooping protocol-related statistics for a VLAN:

1. Click Multicast, IGMP Snooping, Statistics.
2. Select Show VLAN Statistics from the Action list.
3. Select a VLAN.

**Figure 355: Displaying IGMP Snooping Statistics – VLAN**

The screenshot shows a web interface for displaying IGMP Snooping Statistics for a specific VLAN. The breadcrumb trail is "Multicast > IGMP Snooping > Statistics". The "Action:" dropdown menu is set to "Show VLAN Statistics". Below this, the "VLAN" dropdown menu is set to "1". The statistics are organized into two sections: "Input Statistics" and "Output Statistics". Each section contains four rows of data: Report, Leave, G Query, and G(-S)-S Query. The "Drop", "Join Success", and "Group" statistics are listed on the right side of the input statistics section. All values are currently 0. At the bottom right, there are "Clear" and "Refresh" buttons.

| Multicast > IGMP Snooping > Statistics |   |              |   |
|--|---|--------------|---|
| Action: Show VLAN Statistics           |   |              |   |
| VLAN: 1                                |   |              |   |
| <b>Input Statistics</b>                |   |              |   |
| Report                                 | 0 | Drop         | 0 |
| Leave                                  | 0 | Join Success | 0 |
| G Query                                | 0 | Group        | 0 |
| G(-S)-S Query                          | 0 |              |   |
| <b>Output Statistics</b>               |   |              |   |
| Report                                 | 0 |              |   |
| Leave                                  | 0 |              |   |
| G Query                                | 0 |              |   |
| G(-S)-S Query                          | 0 |              |   |
| Clear Refresh                          |   |              |   |

To display IGMP snooping protocol-related statistics for a port:

1. Click Multicast, IGMP Snooping, Statistics.
2. Select Show Port Statistics from the Action list.
3. Select a Port.

**Figure 356: Displaying IGMP Snooping Statistics – Port**

The screenshot shows a web interface for displaying IGMP Snooping Statistics for a specific port. The breadcrumb trail is "Multicast > IGMP Snooping > Statistics". The "Action:" dropdown menu is set to "Show Port Statistics". Below this, the "Port" dropdown menu is set to "1". The statistics are organized into two sections: "Input Statistics" and "Output Statistics". Each section contains four rows of data: Report, Leave, G Query, and G(-S)-S Query. The "Drop", "Join Success", and "Group" statistics are listed on the right side of the input statistics section. All values are currently 0. At the bottom right, there is a "Refresh" button.

| Multicast > IGMP Snooping > Statistics |   |              |   |
|--|---|--------------|---|
| Action: Show Port Statistics           |   |              |   |
| Port: 1                                |   |              |   |
| <b>Input Statistics</b>                |   |              |   |
| Report                                 | 0 | Drop         | 0 |
| Leave                                  | 0 | Join Success | 0 |
| G Query                                | 0 | Group        | 0 |
| G(-S)-S Query                          | 0 |              |   |
| <b>Output Statistics</b>               |   |              |   |
| Report                                 | 0 |              |   |
| Leave                                  | 0 |              |   |
| G Query                                | 0 |              |   |
| G(-S)-S Query                          | 0 |              |   |
| Refresh                                |   |              |   |

To display IGMP snooping protocol-related statistics for a trunk:

1. Click Multicast, IGMP Snooping, Statistics.
2. Select Show Trunk Statistics from the Action list.
3. Select a Trunk.

**Figure 357: Displaying IGMP Snooping Statistics – Trunk**

**Multicast > IGMP Snooping > Statistics**

Action: Show Trunk Statistics ▾

---

Trunk 1 ▾

**Input Statistics**

|               |   |              |   |
|---------------|---|--------------|---|
| Report        | 0 | Drop         | 0 |
| Leave         | 0 | Join Success | 0 |
| G Query       | 0 | Group        | 0 |
| G(-S)-S Query | 0 |              |   |

**Output Statistics**

|               |   |       |   |
|---------------|---|-------|---|
| Report        | 0 | Drop  | 0 |
| Leave         | 0 | Group | 0 |
| G Query       | 0 |       |   |
| G(-S)-S Query | 0 |       |   |

Clear Refresh

## Filtering and Throttling IGMP Groups

In certain switch applications, the administrator may want to control the multicast services that are available to end users. For example, an IP/TV service based on a specific subscription plan. The IGMP filtering feature fulfills this requirement by restricting access to specified multicast services on a switch port, and IGMP throttling limits the number of simultaneous multicast groups a port can join.

IGMP filtering enables you to assign a profile to a switch port that specifies multicast groups that are permitted or denied on the port. An IGMP filter profile can contain one or more addresses, or a range of multicast addresses; but only one profile can be assigned to a port. When enabled, IGMP join reports received on the port are checked against the filter profile. If a requested multicast group is permitted, the IGMP join report is forwarded as normal. If a requested multicast group is denied, the IGMP join report is dropped.

IGMP throttling sets a maximum number of multicast groups that a port can join at the same time. When the maximum number of groups is reached on a port, the switch can take one of two actions; either “deny” or “replace.” If the action is set to deny, any new IGMP join reports will be dropped. If the action is set to replace, the

switch randomly removes an existing group and replaces it with the new multicast group.

### Enabling IGMP Filtering and Throttling

Use the Multicast > IGMP Snooping > Filter (Configure General) page to enable IGMP filtering and throttling globally on the switch.

#### Parameters

These parameters are displayed:

- ◆ **IGMP Filter Status** – Enables IGMP filtering and throttling globally for the switch. (Default: Disabled)

#### Web Interface

To enable IGMP filtering and throttling on the switch:

1. Click Multicast, IGMP Snooping, Filter.
2. Select Configure General from the Step list.
3. Enable IGMP Filter Status.
4. Click Apply.

**Figure 358: Enabling IGMP Filtering and Throttling**

The screenshot shows a web interface for configuring IGMP filtering. The breadcrumb trail at the top is "Multicast > IGMP Snooping > Filter". Below this, there is a "Step:" dropdown menu with "1. Configure General" selected. The main configuration area shows "IGMP Filter Status" with a checked checkbox and the text "Enabled". At the bottom right, there are two buttons: "Apply" and "Revert".

### Configuring IGMP Filter Profiles

Use the Multicast > IGMP Snooping > Filter (Configure Profile – Add) page to create an IGMP profile and set its access mode. Then use the (Add Multicast Group Range) page to configure the multicast groups to filter.

#### Command Usage

Specify a range of multicast groups by entering a start and end IP address; or specify a single multicast group by entering the same IP address for the start and end of the range.

### Parameters

These parameters are displayed:

*Add*

- ◆ **Profile ID** – Creates an IGMP profile. (Range: 1-4294967295)
- ◆ **Access Mode** – Sets the access mode of the profile; either permit or deny. (Default: Deny)  
  
When the access mode is set to permit, IGMP join reports are processed when a multicast group falls within the controlled range. When the access mode is set to deny, IGMP join reports are only processed when the multicast group is not in the controlled range.

*Add Multicast Group Range*

- ◆ **Profile ID** – Selects an IGMP profile to configure.
- ◆ **Start Multicast IP Address** – Specifies the starting address of a range of multicast groups.
- ◆ **End Multicast IP Address** – Specifies the ending address of a range of multicast groups.

### Web Interface

To create an IGMP filter profile and set its access mode:

1. Click Multicast, IGMP Snooping, Filter.
2. Select Configure Profile from the Step list.
3. Select Add from the Action list.
4. Enter the number for a profile, and set its access mode.
5. Click Apply.

**Figure 359: Creating an IGMP Filtering Profile**

The screenshot shows a web interface for configuring IGMP filtering. The breadcrumb trail at the top is "Multicast > IGMP Snooping > Filter". Below this, there are two dropdown menus: "Step:" set to "2. Configure Profile" and "Action:" set to "Add". The main configuration area contains two fields: "Profile ID (1-4294967295)" with the value "19" entered, and "Access Mode" with a dropdown menu set to "Permit". At the bottom right of the form are two buttons: "Apply" and "Revert".

To show the IGMP filter profiles:

1. Click Multicast, IGMP Snooping, Filter.
2. Select Configure Profile from the Step list.
3. Select Show from the Action list.

**Figure 360: Showing the IGMP Filtering Profiles Created**

The screenshot shows the 'Multicast > IGMP Snooping > Filter' configuration page. At the top, there are two dropdown menus: 'Step' set to '2. Configure Profile' and 'Action' set to 'Show'. Below these is a table titled 'IGMP Snooping Filter Profile List' with a 'Total: 1' indicator. The table has three columns: a checkbox, 'Profile ID', and 'Action Mode'. One row is visible with Profile ID '19' and Action Mode 'Permit'. At the bottom right of the table are 'Delete' and 'Revert' buttons.

| <input type="checkbox"/> | Profile ID | Action Mode |
|--------------------------|------------|-------------|
| <input type="checkbox"/> | 19         | Permit      |

To add a range of multicast groups to an IGMP filter profile:

1. Click Multicast, IGMP Snooping, Filter.
2. Select Configure Profile from the Step list.
3. Select Add Multicast Group Range from the Action list.
4. Select the profile to configure, and add a multicast group address or range of addresses.
5. Click Apply.

**Figure 361: Adding Multicast Groups to an IGMP Filtering Profile**

The screenshot shows the 'Multicast > IGMP Snooping > Filter' configuration page. At the top, 'Step' is '2. Configure Profile' and 'Action' is 'Add Multicast Group Range'. Below this, the 'Profile ID' is set to '19'. There are two input fields: 'Start Multicast IP Address' with the value '239.2.3.1' and 'End Multicast IP Address' with the value '239.2.3.200'. At the bottom right are 'Apply' and 'Revert' buttons.



To show the multicast groups configured for an IGMP filter profile:

1. Click Multicast, IGMP Snooping, Filter.
2. Select Configure Profile from the Step list.
3. Select Show Multicast Group Range from the Action list.
4. Select the profile for which to display this information.

**Figure 362: Showing the Groups Assigned to an IGMP Filtering Profile**

The screenshot shows the configuration page for Multicast > IGMP Snooping > Filter. The 'Step' is set to '2. Configure Profile' and the 'Action' is 'Show Multicast Group Range'. The 'Profile ID' is set to '19'. Below this, there is a table titled 'Multicast IP Address Range List' with a 'Total: 1' count. The table has two columns: 'Start Multicast IP Address' and 'End Multicast IP Address'. A single row is displayed with the start address '239.2.3.1' and the end address '239.2.3.200'. There are checkboxes in the first column of the table. At the bottom of the table, there are 'Delete' and 'Revert' buttons.

|                          | Start Multicast IP Address | End Multicast IP Address |
|--------------------------|----------------------------|--------------------------|
| <input type="checkbox"/> | 239.2.3.1                  | 239.2.3.200              |

## Configuring IGMP Filtering and Throttling for Interfaces

Use the Multicast > IGMP Snooping > Filter (Configure Interface) page to assign an IGMP filter profile to interfaces on the switch, or to throttle multicast traffic by limiting the maximum number of multicast groups an interface can join at the same time.

### Command Usage

- ◆ IGMP throttling sets a maximum number of multicast groups that a port can join at the same time. When the maximum number of groups is reached on a port, the switch can take one of two actions; either “deny” or “replace.” If the action is set to deny, any new IGMP join reports will be dropped. If the action is set to replace, the switch randomly removes an existing group and replaces it with the new multicast group.

### Parameters

These parameters are displayed:

- ◆ **Interface** – Port or trunk identifier.  
An IGMP profile or throttling setting can be applied to a port or trunk. When ports are configured as trunk members, the trunk uses the settings applied to the first port member in the trunk.
- ◆ **Profile ID** – Selects an existing profile to assign to an interface.
- ◆ **Max Multicast Groups** – Sets the maximum number of multicast groups an interface can join at the same time. (Range: 1-1024; Default: 1024)

- ◆ **Current Multicast Groups** – Displays the current multicast groups the interface has joined.
- ◆ **Throttling Action Mode** – Sets the action to take when the maximum number of multicast groups for the interface has been exceeded. (Default: Deny)
  - **Deny** - The new multicast group join report is dropped.
  - **Replace** - The new multicast group replaces an existing group.
- ◆ **Throttling Status** – Indicates if the throttling action has been implemented on the interface. (Options: True or False)

#### Web Interface

To configure IGMP filtering or throttling for a port or trunk:

1. Click Multicast, IGMP Snooping, Filter.
2. Select Configure Interface from the Step list.
3. Select a profile to assign to an interface, then set the maximum number of allowed multicast groups and the throttling response.
4. Click Apply.

**Figure 363: Configuring IGMP Filtering and Throttling Interface Settings**

Multicast > IGMP Snooping > Filter

Step: 3. Configure Interface

Interface: ☒ Port ☐ Trunk

IGMP Filter and Throttling Port List Total: 52

| Port | Profile ID | Max Multicast Groups (1-1024) | Current Multicast Groups | Throttling Action Mode | Throttling Status |
|------|------------|-------------------------------|--------------------------|------------------------|-------------------|
| 1    | ▼          | 1024                          | 0                        | Deny ▼                 | False             |
| 2    | ▼          | 1024                          | 0                        | Deny ▼                 | False             |
| 3    | ▼          | 1024                          | 0                        | Deny ▼                 | False             |
| 4    | ▼          | 1024                          | 0                        | Deny ▼                 | False             |
| 5    | ▼          | 1024                          | 0                        | Deny ▼                 | False             |

## MLD Snooping (Snooping and Query for IPv6)

Multicast Listener Discovery (MLD) snooping operates on IPv6 traffic and performs a similar function to IGMP snooping for IPv4. That is, MLD snooping dynamically configures switch ports to limit IPv6 multicast traffic so that it is forwarded only to ports with users that want to receive it. This reduces the flooding of IPv6 multicast packets in the specified VLANs.

There are two versions of the MLD protocol, version 1 and version 2. MLDv1 control packets include Listener Query, Listener Report, and Listener Done messages (equivalent to IGMPv2 query, report, and leave messages). MLDv2 control packets

include MLDv2 query and report messages, as well as MLDv1 report and done messages.

Remember that IGMP Snooping and MLD Snooping are independent functions, and can therefore both function at the same time.

### Configuring MLD Snooping and Query Parameters

Use the Multicast > MLD Snooping > General page to configure the switch to forward multicast traffic intelligently. Based on the MLD query and report messages, the switch forwards multicast traffic only to the ports that request it. This prevents the switch from broadcasting the traffic to all ports and possibly disrupting network performance.

#### Parameters

These parameters are displayed:

- ◆ **MLD Snooping Status** – When enabled, the switch will monitor network traffic to determine which hosts want to receive multicast traffic. (Default: Disabled)
- ◆ **Querier Status** – When enabled, the switch can serve as the querier for MLDv2 snooping if elected. The querier is responsible for asking hosts if they want to receive multicast traffic. (Default: Disabled)  
  
An IPv6 address must be configured on the VLAN interface from which the querier will act if elected. When serving as the querier, the switch uses this IPv6 address as the query source address.  
  
The querier will not start or will disable itself after having started if it detects an IPv6 multicast router on the network.
- ◆ **Robustness** – MLD Snooping robustness variable. A port will be removed from the receiver list for a multicast service when no MLD reports are detected in response to a number of MLD queries. The robustness variable sets the number of queries on ports for which there is no report. (Range: 2-10 Default: 2)
- ◆ **Query Interval** – The interval between sending MLD general queries. (Range: 60-125 seconds; Default: 125 seconds)  
  
This attribute applies when the switch is serving as the querier.  
  
An MLD general query message is sent by the switch at the interval specified by this attribute. When this message is received by downstream hosts, all receivers build an MLD report for the multicast groups they have joined.
- ◆ **Query Max Response Time** – The maximum response time advertised in MLD general queries. (Range: 5-25 seconds; Default: 10 seconds)  
  
This attribute controls how long the host has to respond to an MLD Query message before the switch deletes the group if it is the last member.
- ◆ **Router Port Expiry Time** – The time the switch waits after the previous querier stops before it considers the router port (i.e., the interface that had been

receiving query packets) to have expired. (Range: 300-500 seconds; Default: 300 seconds)

- ◆ **MLD Snooping Version** – The protocol version used for compatibility with other devices on the network. This is the MLD version the switch uses to send snooping reports. (Range: 1-2; Default: 2)
- ◆ **Unknown Multicast Mode** – The action for dealing with unknown multicast packets. Options include:
  - **Flood** – Floods any received IPv6 multicast packets that have not been requested by a host to all ports in the VLAN.
  - **To Router Port** – Forwards any received IPv6 multicast packets that have not been requested by a host to ports that are connected to a detected multicast router. (This is the default action.)
- ◆ **Proxy Reporting** – Enables MLD Snooping with Proxy Reporting. (Default: Disabled)

When proxy reporting is enabled, reports received from downstream hosts are summarized and used to build internal membership states. Proxy-reporting devices may use the all-zeros IP source address when forwarding any summarized reports upstream. For this reason, IGMP membership reports received by the snooping switch must not be rejected because the source IP address is set to 0.0.0.0.
- ◆ **Unsolicited Report Interval** – Specifies how often the upstream interface should transmit unsolicited MLD snooping reports when proxy reporting is enabled. (Default: 400 seconds)

#### Web Interface

To configure general settings for MLD Snooping:

1. Click Multicast, MLD Snooping, General.
2. Adjust the settings as required.
3. Click Apply.

Figure 364: Configuring General Settings for MLD Snooping

**Multicast > MLD Snooping > General**

|                                       |   |
|---------------------------------------|---|
| MLD Snooping Status                   | <input type="checkbox"/> Enabled              |
| Querier Status                        | <input type="checkbox"/> Enabled              |
| Robustness (2-10)                     | <input type="text" value="2"/>                |
| Query Interval (60-125)               | <input type="text" value="125"/> seconds      |
| Query Max Response Time (5-25)        | <input type="text" value="10"/> seconds       |
| Router Port Expiry Time (300-500)     | <input type="text" value="300"/> seconds      |
| MLD Snooping Version (1-2)            | <input type="text" value="2"/>                |
| Unknown Multicast Mode                | <input type="text" value="To Router Port"/> ▼ |
| Proxy Reporting                       | <input type="checkbox"/> Enabled              |
| Unsolicited Report Interval (1-65535) | <input type="text" value="400"/> seconds      |

### Setting Immediate Leave Status for MLD Snooping per Interface

Use the Multicast > MLD Snooping > Interface page to configure Immediate Leave status for a VLAN.

#### Parameters

These parameters are displayed:

- ◆ **VLAN** – A VLAN identification number. (Range: 1-4094)
- ◆ **Immediate Leave** – Immediately deletes a member port of an IPv6 multicast service when a leave packet is received at that port and immediate leave is enabled for the parent VLAN. (Default: Disabled)

If MLD immediate-leave is *not* used, a multicast router (or querier) will send a group-specific query message when an MLD group leave message is received. The router/querier stops forwarding traffic for that group only if no host replies to the query within the specified timeout period.

If MLD immediate-leave is enabled, the switch assumes that only one host is connected to the interface. Therefore, immediate leave should only be enabled on an interface if it is connected to only one MLD-enabled device, either a service host or a neighbor running MLD snooping.

- ◆ **Immediate Leave By Host** – Specifies that the member port will be deleted only when there are no hosts joining this group.


If the “By Host” option is used, the router/querier will not send out a group-specific query when an MLD leave message is received. But will check if there are other hosts joining the multicast group. Only when all hosts on that port leave the group will the member port be deleted.

### Web Interface

To configure immediate leave for MLD Snooping:

1. Click Multicast, MLD Snooping, Interface.
2. Select a VLAN, and set the status for immediate leave.
3. Click Apply.

**Figure 365: Configuring Immediate Leave for MLD Snooping**

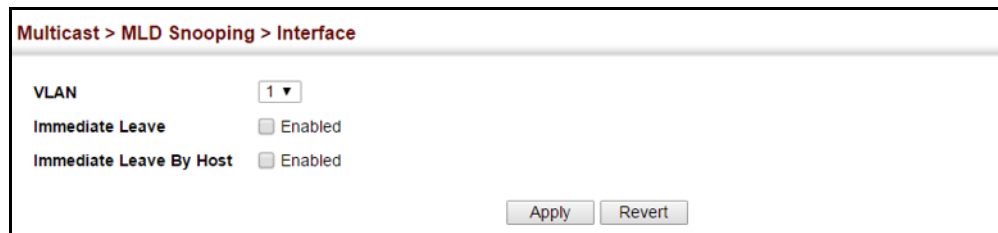

Multicast > MLD Snooping > Interface

VLAN

Immediate Leave ☐ Enabled

Immediate Leave By Host ☐ Enabled

Apply Revert

### Specifying Static Interfaces for an IPv6 Multicast Router

Use the Multicast > MLD Snooping > Multicast Router (Add Static Multicast Router) page to statically attach an interface to an IPv6 multicast router/switch.

Depending on your network connections, MLD snooping may not always be able to locate the MLD querier. Therefore, if the MLD querier is a known multicast router/switch connected over the network to an interface (port or trunk) on the switch, you can manually configure that interface to join all the current multicast groups.

### Command Usage

MLD Snooping must be enabled globally on the switch (see [“Configuring MLD Snooping and Query Parameters” on page 567](#)) before a multicast router port can take effect.

### Parameters

These parameters are displayed:

- ◆ **VLAN** – Selects the VLAN which is to propagate all IPv6 multicast traffic coming from the attached multicast router. (Range: 1-4094)
- ◆ **Interface** – Activates the Port or Trunk scroll down list.
- ◆ **Port or Trunk** – Specifies the interface attached to a multicast router.

### Web Interface

To specify a static interface attached to a multicast router:

1. Click Multicast, MLD Snooping, Multicast Router.
2. Select Add Static Multicast Router from the Action list.

3. Select the VLAN which will forward all the corresponding IPv6 multicast traffic, and select the port or trunk attached to the multicast router.
4. Click Apply.

**Figure 366: Configuring a Static Interface for an IPv6 Multicast Router**

The screenshot shows the configuration page for Multicast Router. The breadcrumb is "Multicast > MLD Snooping > Multicast Router". The "Action:" dropdown is set to "Add Static Multicast Router". Below this, there is a "VLAN" dropdown set to "1". Under the "Interface" section, the "Port" radio button is selected and set to "1", while the "Trunk" radio button is unselected. At the bottom right, there are "Apply" and "Revert" buttons.

To show the static interfaces attached to a multicast router:

1. Click Multicast, MLD Snooping, Multicast Router.
2. Select Show Static Multicast Router from the Action list.
3. Select the VLAN for which to display this information.

**Figure 367: Showing Static Interfaces Attached an IPv6 Multicast Router**

The screenshot shows the configuration page for Multicast Router. The breadcrumb is "Multicast > MLD Snooping > Multicast Router". The "Action:" dropdown is set to "Show Static Multicast Router". Below this, there is a "VLAN" dropdown set to "1". Under the "Static Multicast Router Interface List" section, there is a table with 2 total entries. The table has a checkbox column and an "Interface" column. The first row shows "Unit 1 / Port 1" and the second row shows "Unit 1 / Port 2". At the bottom right, there are "Delete" and "Revert" buttons.

|                          | Interface       |
|--------------------------|-----------------|
| <input type="checkbox"/> | Unit 1 / Port 1 |
| <input type="checkbox"/> | Unit 1 / Port 2 |

To show all the interfaces attached to a multicast router:

1. Click Multicast, MLD Snooping, Multicast Router.
2. Select Current Multicast Router from the Action list.
3. Select the VLAN for which to display this information. Ports in the selected VLAN which are attached to a neighboring multicast router/switch are displayed.

**Figure 368: Showing Current Interfaces Attached an IPv6 Multicast Router**

| Multicast > MLD Snooping > Multicast Router     |         |
|---|---------|
| Action: Show Current Multicast Router           |         |
| VLAN 1  |         |
| Multicast Router Interface Information Total: 4 |         |
| Interface                                       | Type    |
| Unit 1 / Port 4                                 | Static  |
| Unit 1 / Port 5                                 | Dynamic |
| Trunk 2   | Dynamic |
| Trunk 3   | Dynamic |

### Assigning Interfaces to IPv6 Multicast Services

Use the Multicast > MLD Snooping > MLD Member (Add Static Member) page to statically assign an IPv6 multicast service to an interface.

Multicast filtering can be dynamically configured using MLD snooping and query messages (see [“Configuring MLD Snooping and Query Parameters” on page 567](#)). However, for certain applications that require tighter control, it may be necessary to statically configure a multicast service on the switch. First add all the ports attached to participating hosts to a common VLAN, and then assign the multicast service to that VLAN group.

#### Command Usage

- ◆ Static multicast addresses are never aged out.
- ◆ When a multicast address is assigned to an interface in a specific VLAN, the corresponding traffic can only be forwarded to ports within that VLAN.

#### Parameters

These parameters are displayed:

- ◆ **VLAN** – Specifies the VLAN which is to propagate the multicast service. (Range: 1-4094)
- ◆ **Multicast IPv6 Address** – The IP address for a specific multicast service.
- ◆ **Interface** – Activates the Port or Trunk scroll down list.
- ◆ **Port or Trunk** – Specifies the interface assigned to a multicast group.
- ◆ **Type** (Show Current Member) – Shows if this multicast stream was statically configured by the user, discovered by MLD Snooping, or is a data stream to which no other ports are subscribing (i.e., the stream is flooded onto VLAN instead of being trapped to the CPU for processing, or is being processed by MVR6).



### Web Interface

To statically assign an interface to an IPv6 multicast service:

1. Click Multicast, MLD Snooping, MLD Member.
2. Select Add Static Member from the Action list.
3. Select the VLAN that will propagate the multicast service, specify the interface attached to a multicast service (through an MLD-enabled switch or multicast router), and enter the multicast IP address.
4. Click Apply.

**Figure 369: Assigning an Interface to an IPv6 Multicast Service**

The screenshot shows the 'Multicast > MLD Snooping > MLD Member' configuration page. The 'Action' dropdown is set to 'Add Static Member'. The 'VLAN' is set to '1'. The 'Multicast IPv6 Address' is 'FF00:0:0:0:0:10C'. The 'Interface' is set to 'Port 1' (selected with a radio button) and 'Trunk' (disabled). There are 'Apply' and 'Revert' buttons at the bottom right.

To show the static interfaces assigned to an IPv6 multicast service:

1. Click Multicast, MLD Snooping, MLD Member.
2. Select Show Static Member from the Action list.
3. Select the VLAN for which to display this information.

**Figure 370: Showing Static Interfaces Assigned to an IPv6 Multicast Service**

The screenshot shows the 'Multicast > MLD Snooping > MLD Member' configuration page. The 'Action' dropdown is set to 'Show Static Member'. The 'VLAN' is set to '1'. Below the configuration fields, there is a table titled 'MLD Member Interface List' with a total of 8 entries. The table has three columns: a checkbox, 'Multicast IPv6 Address', and 'Interface'. The entries are as follows:


|                          | Multicast IPv6 Address | Interface        |
|--------------------------|------------------------|------------------|
| <input type="checkbox"/> | FF02::01:01:01:01      | Unit 1 / Port 1  |
| <input type="checkbox"/> | FF02::01:01:01:02      | Unit 1 / Port 2  |
| <input type="checkbox"/> | FF01::1                | Unit 1 / Port 12 |
| <input type="checkbox"/> | FF01::2                | Unit 1 / Port 13 |
| <input type="checkbox"/> | FF01::3                | Unit 1 / Port 14 |
| <input type="checkbox"/> | FF01::4                | Unit 1 / Port 15 |
| <input type="checkbox"/> | FF01::5                | Unit 1 / Port 16 |
| <input type="checkbox"/> | FF02::01:01:01:FF      | Trunk 3          |

At the bottom right, there are 'Delete' and 'Revert' buttons.

To display information about all IPv6 multicast groups, MLD Snooping or multicast routing must first be enabled on the switch. To show all of the interfaces statically or dynamically assigned to an IPv6 multicast service:

1. Click Multicast, MLD Snooping, MLD Member.
2. Select Show Current Member from the Action list.
3. Select the VLAN for which to display this information.

**Figure 371: Showing Current Interfaces Assigned to an IPv6 Multicast Service**

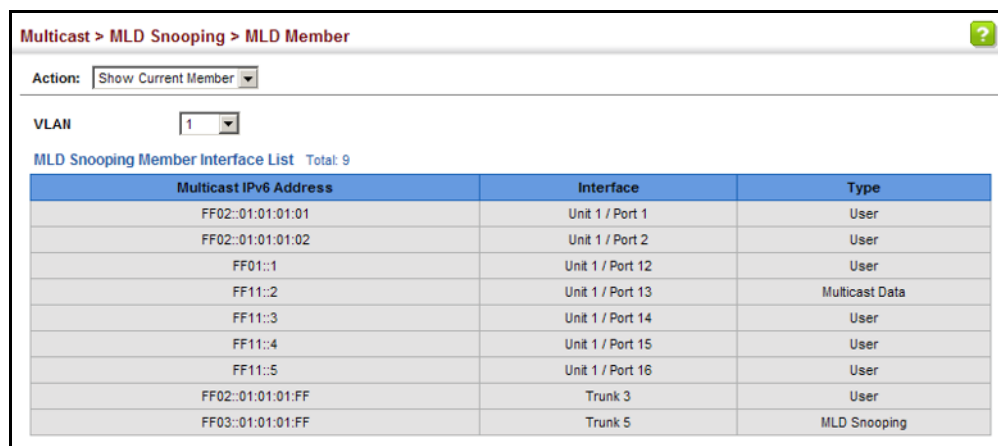

| Multicast IPv6 Address | Interface        | Type           |
|------------------------|------------------|----------------|
| FF02::01:01:01:01      | Unit 1 / Port 1  | User           |
| FF02::01:01:01:02      | Unit 1 / Port 2  | User           |
| FF01::1                | Unit 1 / Port 12 | User           |
| FF11::2                | Unit 1 / Port 13 | Multicast Data |
| FF11::3                | Unit 1 / Port 14 | User           |
| FF11::4                | Unit 1 / Port 15 | User           |
| FF11::5                | Unit 1 / Port 16 | User           |
| FF02::01:01:01:FF      | Trunk 3          | User           |
| FF03::01:01:01:FF      | Trunk 5          | MLD Snooping   |

### Filtering MLD Query Packets on an Interface

Use the Multicast > MLD Snooping > Query Drop page to configure an interface to drop MLDF query packets.

#### Parameters

These parameters are displayed:


- ◆ **Interface** – Port or trunk identifier.
- ◆ **Query Drop** – Drops any received MLD query packets. (Default: Disabled)  
This feature can be used to drop any query packets received on the specified interface. If this switch is acting as a Querier, this prevents it from being affected by messages received from another Querier.

#### Web Interface

To drop IGMP query packets:

1. Click Multicast, MLD Snooping, Query Drop.
2. Select Port or Trunk interface.
3. Enable query drop for any interface.

## 4. Click Apply.

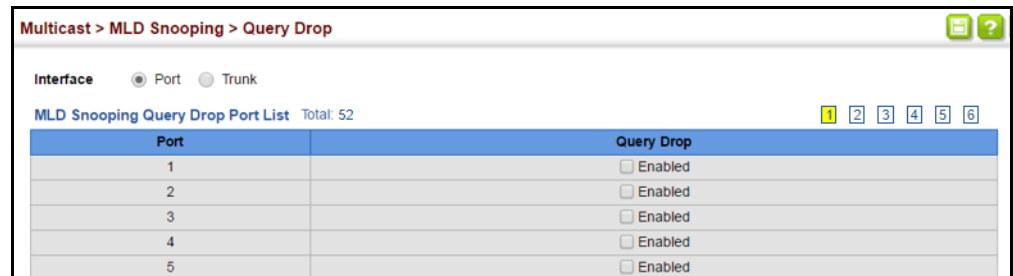**Figure 372: Dropping MLD Query Packets**

### Showing MLD Snooping Groups and Source List

Use the Multicast > MLD Snooping > Group Information page to display known multicast groups, member ports, the means by which each group was learned, and the corresponding source list.

#### Parameters

These parameters are displayed:

- ◆ **VLAN** – VLAN identifier. (Range: 1-4094)
- ◆ **Interface** – Port or trunk identifier.
- ◆ **Group Address** – The IP address for a specific multicast service.
- ◆ **Type** – The means by which each group was learned – MLD Snooping or Multicast Data.
- ◆ **Filter Mode** – The filter mode is used to summarize the total listening state of a multicast address to a minimum set such that all nodes' listening states are respected. In Include mode, the router only uses the request list, indicating that the reception of packets sent to the specified multicast address is requested only from those IP source addresses listed in the hosts' source-list. In Exclude mode, the router uses both the request list and exclude list, indicating that the reception of packets sent to the given multicast address is requested from all IP source addresses, except for those listed in the exclude source-list and for any other sources where the source timer status has expired.
- ◆ **Filter Timer Elapse** – The Filter timer is only used when a specific multicast address is in Exclude mode. It represents the time for the multicast address filter mode to expire and change to Include mode.
- ◆ **Request List** – Sources included on the router's request list.
- ◆ **Exclude List** – Sources included on the router's exclude list.

### Web Interface

To display known MLD multicast groups:

1. Click Multicast, MLD Snooping, Group Information.
2. Select the port or trunk, and then select a multicast service assigned to that interface.

**Figure 373: Showing IPv6 Multicast Services and Corresponding Sources**

**Multicast > MLD Snooping > Group Information**

VLAN: 1

Interface: ☒ Port 1 ☐ Trunk 1

Group Address: FF02::01:01:01:01

Type: MLD Snooping

Filter Mode: Exclude

Filter Timer: 10 seconds

Elapse:

**Request List Total: 3**

| IPv6 Address  |
|---------------|
| ::01:02:03:01 |
| ::01:02:03:02 |
| ::01:02:03:03 |

**Exclude List Total: 3**

| IPv6 Address  |
|---------------|
| ::02:02:03:01 |
| ::02:02:03:02 |
| ::02:02:03:03 |

### Displaying MLD Snooping Statistics

Use the Multicast > IGMP Snooping > Statistics pages to display MLD snooping protocol-related statistics.

### Parameters

These parameters are displayed:

#### Input

- ◆ **Interface** – The unit/port or VLAN interface.
- ◆ **Report** – The number of MLD membership reports received on this interface.
- ◆ **Leave** – The number of leave messages received on this interface.
- ◆ **G Query** – The number of general query messages received on this interface.
- ◆ **G(-S)-S Query** – The number of group specific or group-and-source specific query messages received on this interface.
- ◆ **Drop** – The number of times a report, leave or query was dropped. Packets may be dropped due to invalid format, rate limiting, packet content not allowed, or MLD group report received.

- ◆ **Join Success** – The number of times a multicast group was successfully joined.
- ◆ **Group** – The number of MLD groups active on this interface.

#### *Output*

Same as input parameters listed above, except that the direction of transmission is outbound.

#### *Query*

- ◆ **Other Querier Address** – IP address of remote querier on this interface.
- ◆ **Other Querier Expire** – Time after which remote querier is assumed to have expired.
- ◆ **Other Querier Uptime** – Time remote querier has been up.
- ◆ **Self Querier Address** – IP address of local querier on this interface.
- ◆ **Self Querier Expire Time** – Time after which local querier is assumed to have expired.
- ◆ **Self Querier Uptime** – Time local querier has been up.
- ◆ **General Query Received** – The number of general queries received on this interface.
- ◆ **General Query Sent** – The number of general queries sent from this interface.
- ◆ **Specific Query Received** – The number of group specific queries received on this interface.
- ◆ **Specific Query Sent** – The number of group specific queries sent from this interface.

#### *Summary*

#### *Physical Interface (Port/Trunk)*

- ◆ **Number of Groups** – Number of active MLD groups active on the specified interface.
- ◆ *Querier*
  - *Transmit*
    - **General** – The number of general queries sent from this interface.

- **Group Specific** – The number of group specific queries sent from this interface.
- *Received*
  - **General** – The number of general queries received on this interface.
  - **Group Specific** – The number of group specific queries received on this interface.
- ◆ *Report & Leave*
  - *Transmit*
    - **Report** – The number of MLD membership reports sent from this interface.
    - **Leave** – The number of leave messages sent from this interface.
  - *Received*
    - **Report** – The number of MLD membership reports received on this interface.
    - **Leave** – The number of leave messages received on this interface.
    - **Join Success** – The number of times a multicast group was successfully joined.
    - **Filter Drop** – The number of messages dropped due to filter settings.
    - **Source Port Drop** – The number of dropped messages that are received on MVR source port or mrouter port.
    - **Others Drop** – The number of received invalid messages.

*Logical Interface (VLAN)* – The following parameters are included for a VLAN.

- ◆ **Number of Groups** – Number of active MLD groups active on the specified interface.
- ◆ *Querier*
  - **Other Querier** – IPv6 address of remote querier on this interface.
  - **Other Uptime** – Time remote querier has been up.
  - **Other Expire** – Time after which remote querier is assumed to have expired.

- **Self Addr** – IPv6 address of local querier on this interface.
- **Self Expire** – Time after which local querier is assumed to have expired.
- **Self Uptime** – Time local querier has been up.
- *Transmit*
  - **General** – The number of general queries sent from this interface.
  - **Group Specific** – The number of group specific queries sent from this interface.
- *Received*
  - **General** – The number of general queries received on this interface.
  - **Group Specific** – The number of group specific queries received on this interface.
- ◆ *Report & Leave*
  - **Host Addr** – The link-local or global IPv6 address that is assigned on that VLAN.
  - **Unsolicit Expire** – The number of group leaves resulting from timeouts instead of explicit leave messages.
  - *Transmit*
    - **Report** – The number of MLD membership reports sent from this interface.
    - **Leave** – The number of leave messages sent from this interface.
  - *Received*
    - **Report** – The number of MLD membership reports received on this interface.
    - **Leave** – The number of leave messages received on this interface.

*Clear*

### Parameters

These parameters are displayed:


- ◆ **All** – Clears statistics for all MLD messages.
- ◆ **VLAN** – VLAN identifier. (Range: 1-4094)
- ◆ **Unit** – Stack unit. (Range: 1)
- ◆ **Port** – Port identifier. (Range: 1-52)
- ◆ **Trunk** – Trunk identifier. (Range: 1-16)

### Web Interface

To display MLD snooping input-related message statistics:

1. Click Multicast, MLD Snooping, Statistics.
2. Select Input.

**Figure 374: Displaying MLD Snooping Statistics – Input**

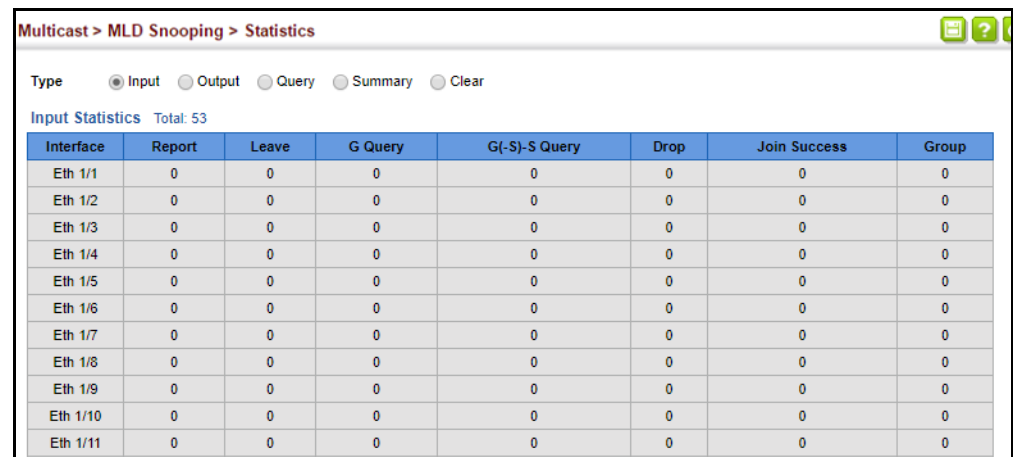

The screenshot shows a web interface for displaying MLD Snooping Statistics. The breadcrumb path is "Multicast > MLD Snooping > Statistics". Below the path, there are radio buttons for "Type": Input (selected), Output, Query, Summary, and Clear. The main section is titled "Input Statistics" with a "Total: 53" indicator. A table displays statistics for 11 interfaces (Eth 1/1 to Eth 1/11). The table has 8 columns: Interface, Report, Leave, G Query, G(-S)-S Query, Drop, Join Success, and Group. All values in the table are 0.

| Interface | Report | Leave | G Query | G(-S)-S Query | Drop | Join Success | Group |
|-----------|--------|-------|---------|---------------|------|--------------|-------|
| Eth 1/1   | 0      | 0     | 0       | 0             | 0    | 0            | 0     |
| Eth 1/2   | 0      | 0     | 0       | 0             | 0    | 0            | 0     |
| Eth 1/3   | 0      | 0     | 0       | 0             | 0    | 0            | 0     |
| Eth 1/4   | 0      | 0     | 0       | 0             | 0    | 0            | 0     |
| Eth 1/5   | 0      | 0     | 0       | 0             | 0    | 0            | 0     |
| Eth 1/6   | 0      | 0     | 0       | 0             | 0    | 0            | 0     |
| Eth 1/7   | 0      | 0     | 0       | 0             | 0    | 0            | 0     |
| Eth 1/8   | 0      | 0     | 0       | 0             | 0    | 0            | 0     |
| Eth 1/9   | 0      | 0     | 0       | 0             | 0    | 0            | 0     |
| Eth 1/10  | 0      | 0     | 0       | 0             | 0    | 0            | 0     |
| Eth 1/11  | 0      | 0     | 0       | 0             | 0    | 0            | 0     |



To display MLD snooping output-related message statistics:

1. Click Multicast, MLD Snooping, Statistics.
2. Select Output.

**Figure 375: Displaying MLD Snooping Statistics – Output**

Multicast > MLD Snooping > Statistics

Type ☐ Input ☒ Output ☐ Query ☐ Summary ☐ Clear

Output Statistics Total: 53

| Interface | Report | Leave | G Query | G(-S)-S Query | Drop | Group |
|-----------|--------|-------|---------|---------------|------|-------|
| Eth 1/1   | 0      | 0     | 0       | 0             | 0    | 0     |
| Eth 1/2   | 0      | 0     | 0       | 0             | 0    | 0     |
| Eth 1/3   | 0      | 0     | 0       | 0             | 0    | 0     |
| Eth 1/4   | 0      | 0     | 0       | 0             | 0    | 0     |
| Eth 1/5   | 0      | 0     | 0       | 0             | 0    | 0     |
| Eth 1/6   | 0      | 0     | 0       | 0             | 0    | 0     |
| Eth 1/7   | 0      | 0     | 0       | 0             | 0    | 0     |
| Eth 1/8   | 0      | 0     | 0       | 0             | 0    | 0     |
| Eth 1/9   | 0      | 0     | 0       | 0             | 0    | 0     |
| Eth 1/10  | 0      | 0     | 0       | 0             | 0    | 0     |
| Eth 1/11  | 0      | 0     | 0       | 0             | 0    | 0     |

To display MLD query message statistics:

1. Click Multicast, MLD Snooping, Statistics.
2. Select Query.

**Figure 376: Displaying MLD Snooping Statistics – Query**

Multicast > MLD Snooping > Statistics

Type ☐ Input ☐ Output ☒ Query ☐ Summary ☐ Clear

VLAN

Query Statistics

|                          |                |
|--------------------------|----------------|
| Other Querier Address    | None           |
| Other Querier Expire     | 0(m):0(s)      |
| Other Querier Uptime     | 0(h):0(m):0(s) |
| Self Querier Address     | ::             |
| Self Querier Expire Time | 0(m):0(s)      |
| Self Querier Uptime      | 0(h):0(m):0(s) |
| General Query Received   | 0              |
| General Query Sent       | 0              |
| Specific Query Received  | 0              |
| Specific Query Sent      | 0              |

To display MLD summary statistics for a port or trunk:

1. Click Multicast, MLD Snooping, Statistics.
2. Select Summary.
3. Select a port or trunk.

**Figure 377: Displaying MLD Snooping Statistics – Summary (Port/Trunk)**

**Multicast > MLD Snooping > Statistics**

Type
☐ Input
☐ Output
☐ Query
☒ Summary
☐ Clear

Interface
☐ VLAN 
☒ Unit  / Port 
☐ Trunk

**Summary Statistics**

|                         |   |                           |   |
|-------------------------|---|---------------------------|---|
| <b>Number of Groups</b> |   | 0                         |   |
| <b>Querier</b>          |   |                           |   |
| <b>Transmit</b>         |   |                           |   |
| General                 | 0 |                           |   |
| Group Specific          | 0 |                           |   |
| <b>Recieved</b>         |   |                           |   |
| General                 | 0 |                           |   |
| Group Specific          | 0 |                           |   |
|                         |   | <b>Report &amp; Leave</b> |   |
|                         |   | <b>Transmit</b>           |   |
|                         |   | Report                    | 0 |
|                         |   | Leave                     | 0 |
|                         |   | <b>Recieved</b>           |   |
|                         |   | Report                    | 0 |
|                         |   | Leave                     | 0 |
|                         |   | Join Success              | 0 |
|                         |   | Source Port Drop          | 0 |
|                         |   | Others Drop               | 0 |

To display MLD summary statistics for a VLAN:

1. Click Multicast, MLD Snooping, Statistics.
2. Select Summary.
3. Select a VLAN.

**Figure 378: Displaying MLD Snooping Statistics – Summary (VLAN)**

**Multicast > MLD Snooping > Statistics**

Type ☐ Input ☐ Output ☐ Query ☒ Summary ☐ Clear

Interface ☒ VLAN  ☐ Unit  / Port  ☐ Trunk

**Summary Statistics**

|                         |                |                           |       |
|-------------------------|----------------|---------------------------|-------|
| <b>Number of Groups</b> | 0              |                           |       |
| <b>Querier</b>          |                | <b>Report &amp; Leave</b> |       |
| Other Querier           | None           | Host Addr                 | None  |
| Other Uptime            | 0(h):0(m):0(s) | Unsolicit Expire          | 0 sec |
| Other Expire            | 0(m):0(s)      |                           |       |
| Self Addr               | None           |                           |       |
| Self Expire             | 0(m): 0(s)     |                           |       |
| Self Uptime             | 0(h):0(m):0(s) |                           |       |
| <b>Transmit</b>         |                | <b>Transmit</b>           |       |
| General                 | 0              | Report                    | 0     |
| Group Specific          | 0              | Leave                     | 0     |
| <b>Recieved</b>         |                | <b>Recieved</b>           |       |
| General                 | 0              | Report                    | 0     |
| Group Specific          | 0              | Leave                     | 0     |
|                         |                | Join Success              | 0     |
|                         |                | Source Port Drop          | 0     |
|                         |                | Others Drop               | 0     |

To clear MLD statistics:

1. Click Multicast, MLD Snooping, Statistics.
2. Select Clear.
3. Select All or enter the required interface.
4. Click Clear.

**Figure 379: Clearing MLD Snooping Statistics**

Multicast > MLD Snooping > Statistics

Type ☐ Input ☐ Output ☐ Query ☐ Summary ☒ Clear

Interface ☒ All

☐ VLAN

☐ Unit  / Port

☐ Trunk

Clear

## Filtering and Throttling MLD Groups

In certain switch applications, the administrator may want to control the multicast services that are available to end users. For example, an IP/TV service based on a specific subscription plan. The MLD filtering feature fulfills this requirement by restricting access to specified multicast services on a switch port, and MLD throttling limits the number of simultaneous multicast groups a port can join.

MLD filtering enables you to assign a profile to a switch port that specifies multicast groups that are permitted or denied on the port. An MLD filter profile can contain one or more addresses, or a range of multicast addresses; but only one profile can be assigned to a port. When enabled, MLD join reports received on the port are checked against the filter profile. If a requested multicast group is permitted, the MLD join report is forwarded as normal. If a requested multicast group is denied, the MLD join report is dropped.

MLD throttling sets a maximum number of multicast groups that a port can join at the same time. When the maximum number of groups is reached on a port, the switch can take one of two actions; either “deny” or “replace.” If the action is set to deny, any new MLD join reports will be dropped. If the action is set to replace, the switch randomly removes an existing group and replaces it with the new multicast group.

**Enabling MLD Filtering and Throttling** Use the Multicast > MLD Snooping > Filter (Configure General) page to enable IGMP filtering and throttling globally on the switch.

#### Parameters

These parameters are displayed:

- ◆ **MLD Filter Status** – Enables MLD filtering and throttling globally for the switch. (Default: Disabled)

#### Web Interface

To enable MLD filtering and throttling on the switch:

1. Click Multicast, MLD Snooping, Filter.
2. Select Configure General from the Step list.
3. Enable MLD Filter Status.
4. Click Apply.

**Figure 380: Enabling MLD Filtering and Throttling**

Multicast > MLD Snooping > Filter

Step: 1. Configure General ▼

MLD Filter Status ☒ Enabled

Apply Revert

**Configuring MLD Filter Profiles** Use the Multicast > MLD Snooping > Filter (Configure Profile – Add) page to create an MLD profile and set its access mode. Then use the (Add Multicast Group Range) page to configure the multicast groups to filter.

#### Command Usage

Specify a range of multicast groups by entering a start and end IPv6 address; or specify a single multicast group by entering the same IPv6 address for the start and end of the range.

#### Parameters

These parameters are displayed:

*Add*

- ◆ **Profile ID** – Creates an IGMP profile. (Range: 1-4294967295)
- ◆ **Access Mode** – Sets the access mode of the profile; either permit or deny. (Default: Deny)

When the access mode is set to permit, MLD join reports are processed when a multicast group falls within the controlled range. When the access mode is set to deny, MLD join reports are only processed when the multicast group is not in the controlled range.

#### *Add Multicast Group Range*

- ◆ **Profile ID** – Selects an IGMP profile to configure.
- ◆ **Start Multicast IPv6 Address** – Specifies the starting address of a range of multicast groups.
- ◆ **End Multicast IPv6 Address** – Specifies the ending address of a range of multicast groups.

#### **Web Interface**

To create an MLD filter profile and set its access mode:

1. Click Multicast, MLD Snooping, Filter.
2. Select Configure Profile from the Step list.
3. Select Add from the Action list.
4. Enter the number for a profile, and set its access mode.
5. Click Apply.

**Figure 381: Creating an MLD Filtering Profile**

The screenshot shows a web interface for configuring MLD filtering. The breadcrumb trail at the top is "Multicast > MLD Snooping > Filter". Below this, there are two dropdown menus: "Step:" with "2. Configure Profile" selected, and "Action:" with "Add" selected. The main configuration area contains two fields: "Profile ID (1-4294967295)" with the value "19" entered, and "Access Mode" with "Permit" selected from a dropdown. At the bottom right, there are two buttons: "Apply" and "Revert".

To show the MLD filter profiles:

1. Click Multicast, MLD Snooping, Filter.
2. Select Configure Profile from the Step list.
3. Select Show from the Action list.

**Figure 382: Showing the MLD Filtering Profiles Created**

The screenshot shows the 'Multicast > MLD Snooping > Filter' configuration page. At the top, there are two dropdown menus: 'Step: 2. Configure Profile' and 'Action: Show'. Below these is a table titled 'MLD Snooping Filter Profile List' with a 'Total: 1' count. The table has three columns: a checkbox, 'Profile ID', and 'Action Mode'. One row is visible with Profile ID '19' and Action Mode 'Permit'. At the bottom right of the table are 'Delete' and 'Revert' buttons.

|                          | Profile ID | Action Mode |
|--------------------------|------------|-------------|
| <input type="checkbox"/> | 19         | Permit      |

To add a range of multicast groups to an MLD filter profile:

1. Click Multicast, MLD Snooping, Filter.
2. Select Configure Profile from the Step list.
3. Select Add Multicast Group Range from the Action list.
4. Select the profile to configure, and add a multicast group address or range of addresses.
5. Click Apply.

**Figure 383: Adding Multicast Groups to an MLD Filtering Profile**

The screenshot shows the 'Multicast > MLD Snooping > Filter' configuration page with 'Step: 2. Configure Profile' and 'Action: Add Multicast Group Range'. Below this, there is a 'Profile ID' dropdown menu set to '19'. Underneath are two text input fields: 'Start Multicast IPv6 Address' with the value 'ff01::0101' and 'End Multicast IPv6 Address' with the value 'ff01::0202'. At the bottom right are 'Apply' and 'Revert' buttons.

To show the multicast groups configured for an MLD filter profile:

1. Click Multicast, MLD Snooping, Filter.
2. Select Configure Profile from the Step list.
3. Select Show Multicast Group Range from the Action list.
4. Select the profile for which to display this information.

**Figure 384: Showing the Groups Assigned to an MLD Filtering Profile**

The screenshot shows the configuration page for Multicast > MLD Snooping > Filter. The 'Step' is '2. Configure Profile' and the 'Action' is 'Show Multicast Group Range'. The 'Profile ID' is set to '19'. Below this, a table titled 'Multicast IPv6 Address Range List' shows a total of 1 group. The table has two columns: 'Start Multicast IPv6 Address' and 'End Multicast IPv6 Address'. The first row shows the range from 'ff01::101' to 'ff01::202'. There are 'Delete' and 'Revert' buttons at the bottom right.

|                          | Start Multicast IPv6 Address | End Multicast IPv6 Address |
|--------------------------|------------------------------|----------------------------|
| <input type="checkbox"/> | ff01::101                    | ff01::202                  |

### Configuring MLD Filtering and Throttling for Interfaces

Use the Multicast > MLD Snooping > Filter (Configure Interface) page to assign an MLD filter profile to interfaces on the switch, or to throttle multicast traffic by limiting the maximum number of multicast groups an interface can join at the same time.

#### Command Usage

- ◆ MLD throttling sets a maximum number of multicast groups that a port can join at the same time. When the maximum number of groups is reached on a port, the switch can take one of two actions; either “deny” or “replace.” If the action is set to deny, any new MLD join reports will be dropped. If the action is set to replace, the switch randomly removes an existing group and replaces it with the new multicast group.

#### Parameters

These parameters are displayed:

- ◆ **Interface** – Port or trunk identifier.  
An MLD profile or throttling setting can be applied to a port or trunk. When ports are configured as trunk members, the trunk uses the settings applied to the first port member in the trunk.
- ◆ **Profile ID** – Selects an existing profile to assign to an interface.
- ◆ **Max Multicast Groups** – Sets the maximum number of multicast groups an interface can join at the same time. (Range: 1-255; Default: 255)



- ◆ **Current Multicast Groups** – Displays the current multicast groups the interface has joined.
- ◆ **Throttling Action Mode** – Sets the action to take when the maximum number of multicast groups for the interface has been exceeded. (Default: Deny)
  - **Deny** - The new multicast group join report is dropped.
  - **Replace** - The new multicast group replaces an existing group.
- ◆ **Throttling Status** – Indicates if the throttling action has been implemented on the interface. (Options: True or False)

### Web Interface

To configure MLD filtering or throttling for a port or trunk:

1. Click Multicast, MLD Snooping, Filter.
2. Select Configure Interface from the Step list.
3. Select a profile to assign to an interface, then set the maximum number of allowed multicast groups and the throttling response.
4. Click Apply.

**Figure 385: Configuring MLD Filtering and Throttling Interface Settings**

Multicast > MLD Snooping > Filter

Step: 3. Configure Interface

Interface: ☒ Port ☐ Trunk

MLD Filter and Throttling Port List Total: 52


| Port | Profile ID           | Max Multicast Groups (1-255)     | Current Multicast Groups | Throttling Action Mode            | Throttling Status |
|------|----------------------|----------------------------------|--------------------------|-----------------------------------|-------------------|
| 1    | <input type="text"/> | <input type="text" value="255"/> | 0                        | <input type="text" value="Deny"/> | False             |
| 2    | <input type="text"/> | <input type="text" value="255"/> | 0                        | <input type="text" value="Deny"/> | False             |
| 3    | <input type="text"/> | <input type="text" value="255"/> | 0                        | <input type="text" value="Deny"/> | False             |
| 4    | <input type="text"/> | <input type="text" value="255"/> | 0                        | <input type="text" value="Deny"/> | False             |
| 5    | <input type="text"/> | <input type="text" value="255"/> | 0                        | <input type="text" value="Deny"/> | False             |

## Multicast VLAN Registration for IPv4

Multicast VLAN Registration (MVR) is a protocol that controls access to a single network-wide VLAN most commonly used for transmitting multicast traffic (such as television channels or video-on-demand) across a service provider's network. Any multicast traffic entering an MVR VLAN is sent to all attached subscribers. This protocol can significantly reduce to processing overhead required to dynamically monitor and establish the distribution tree for a normal multicast VLAN. This makes it possible to support common multicast services over a wide part of the network without having to use any multicast routing protocol.

MVR maintains the user isolation and data security provided by VLAN segregation by passing only multicast traffic into other VLANs to which the subscribers belong. Even though common multicast streams are passed onto different VLAN groups from the MVR VLAN, users in different IEEE 802.1Q or private VLANs cannot exchange any information (except through upper-level routing services).

**Figure 386: MVR Concept**

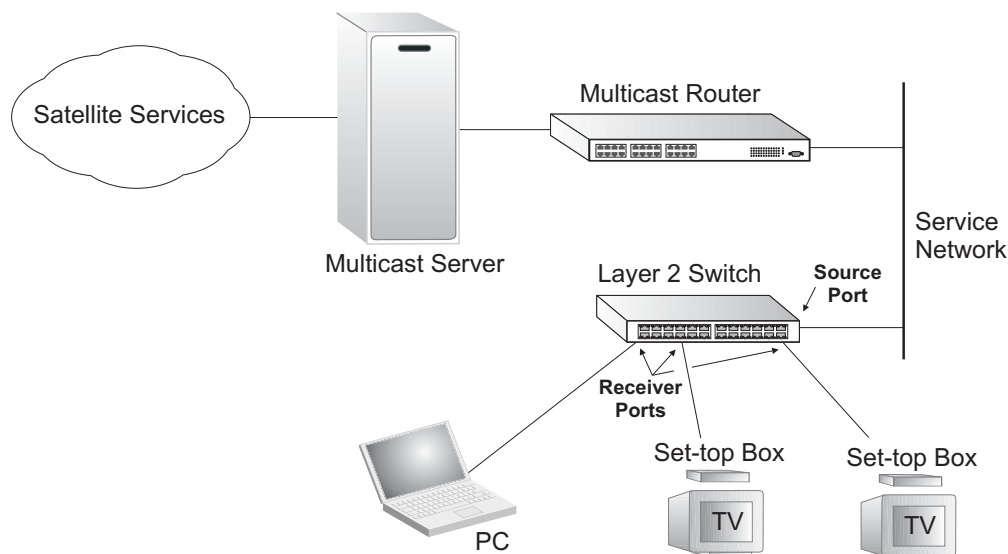

### Command Usage

◆ General Configuration Guidelines for MVR:

1. Enable MVR for a domain on the switch, and select the MVR VLAN (see [“Configuring MVR Domain Settings” on page 593](#)).
  2. Create an MVR profile by specifying the multicast groups that will stream traffic to attached hosts, and assign the profile to an MVR domain (see [“Configuring MVR Group Address Profiles” on page 594](#)).
  3. Set the interfaces that will join the MVR as source ports or receiver ports (see [“Configuring MVR Interface Status” on page 597](#)).
  4. For multicast streams that will run for a long term and be associated with a stable set of hosts, you can statically bind the multicast group to the participating interfaces (see [“Assigning Static MVR Multicast Groups to Interfaces” on page 599](#)).
- ◆ Although MVR operates on the underlying mechanism of IGMP snooping, the two features operate independently of each other. One can be enabled or disabled without affecting the behavior of the other. However, if IGMP snooping and MVR are both enabled, MVR reacts only to join and leave messages from multicast groups configured under MVR. Join and leave messages from all other multicast groups are managed by IGMP snooping. Also, note that only IGMP version 2 or 3 hosts can issue multicast join or leave messages. Since IGMP version 1 hosts do not support leave messages, they are timed out by the switch.

**Configuring MVR Global Settings** Use the Multicast > MVR (Configure Global) page to configure proxy switching and the robustness variable.

#### Parameters

These parameters are displayed:

- ◆ **Proxy Switching** – Configures MVR proxy switching, where the source port acts as a host, and the receiver port acts as an MVR router with querier service enabled. (Default: Enabled)
  - When MVR proxy-switching is enabled, an MVR source port serves as the upstream or host interface, and the MVR receiver port serves as the querier. The source port performs only the host portion of MVR by sending summarized membership reports, and automatically disables MVR router functions.
  - Receiver ports are known as downstream or router interfaces. These interfaces perform the standard MVR router functions by maintaining a database of all MVR subscriptions on the downstream interface. Receiver ports must therefore be configured on all downstream interfaces which require MVR proxy service.
  - When the source port receives report and leave messages, it only forwards them to other source ports.
  - When receiver ports receive any query messages, they are dropped.
  - When changes occurring in the downstream MVR groups are learned by the receiver ports through report and leave messages, an MVR state change report is created and sent to the upstream source port, which in turn forwards this information upstream.
  - When MVR proxy switching is disabled:
    - Any membership reports received from receiver/source ports are forwarded to all source ports.
    - When a source port receives a query message, it will be forwarded to all downstream receiver ports.
    - When a receiver port receives a query message, it will be dropped.
- ◆ **Robustness Value** – Configures the expected packet loss, and thereby the number of times to generate report and group-specific queries. (Range: 1-255; Default: 2)
  - This parameter is used to set the number of times report messages are sent upstream when changes are learned about downstream groups, and the number of times group-specific queries are sent to downstream receiver ports.
  - This parameter only takes effect when MVR proxy switching is enabled.

- ◆ **Proxy Query Interval** – Configures the interval at which the receiver port sends out general queries. (Range: 2-31744 seconds; Default: 125 seconds)
  - This parameter sets the general query interval at which active receiver ports send out general queries.
  - This interval is only effective when proxy switching is enabled.
- ◆ **Source Port Mode** – Configures the switch to forward any multicast streams within the parameters set by a profile, or to only forward multicast streams which the source port has dynamically joined.
  - **Always Forward** – By default, the switch forwards any multicast streams within the address range set by a profile, and bound to a domain. The multicast streams are sent to all source ports on the switch and to all receiver ports that have elected to receive data on that multicast address. (This is the default setting.)
  - **Dynamic** – When dynamic mode is enabled, the switch only forwards multicast streams which the source port has dynamically joined. In other words, both the receiver port and source port must subscribe to a multicast group before a multicast stream is forwarded to any attached client. Note that the requested streams are still restricted to the address range which has been specified in a profile and bound to a domain.

### Web Interface

To configure global settings for MVR:

1. Click Multicast, MVR.
2. Select Configure Global from the Step list.
3. Set the status for MVR proxy switching, the robustness value used for report and query messages, the proxy query interval, and source port mode.
4. Click Apply.

Figure 387: Configuring Global Settings for MVR

The screenshot shows a web interface for configuring Multicast VLAN Registration (MVR) settings. The page title is "Multicast > MVR". Below the title, there is a "Step:" dropdown menu currently set to "1. Configure Global". The main configuration area contains four settings:

- Proxy Switching:** A checkbox labeled "Enabled" is checked.
- Robustness Value (1-255):** A text input field containing the value "1".
- Proxy Query Interval (2-31744):** A text input field containing the value "125", followed by a "sec" label.
- Source Port Mode:** A dropdown menu currently set to "Always Forward".

At the bottom right of the configuration area, there are two buttons: "Apply" and "Revert".

## Configuring MVR Domain Settings

Use the Multicast > MVR (Configure Domain) page to enable MVR globally on the switch, and select the VLAN that will serve as the sole channel for common multicast streams supported by the service provider.

### Parameters

These parameters are displayed:

- ◆ **Domain ID** – An independent multicast domain. (Range: 1-5)
- ◆ **MVR Status** – When MVR is enabled on the switch, any multicast data associated with an MVR group is sent from all designated source ports, to all receiver ports that have registered to receive data from that multicast group. (Default: Disabled)
- ◆ **MVR VLAN** – Identifier of the VLAN that serves as the channel for streaming multicast services using MVR. MVR source ports should be configured as members of the MVR VLAN (see [“Adding Static Members to VLANs” on page 163](#)), but MVR receiver ports should not be manually configured as members of this VLAN. (Default: 1)
- ◆ **MVR Running Status** – Indicates whether or not all necessary conditions in the MVR environment are satisfied. Running status is Active as long as MVR is enabled, the specified MVR VLAN exists, and a source port with a valid link has been configured (see [“Configuring MVR Interface Status” on page 597](#)).
- ◆ **MVR Current Learned Groups** – The number of MVR groups currently assigned to this domain.
- ◆ **Upstream Source IP** – The source IP address assigned to all MVR control packets sent upstream on the specified domain. By default, all MVR reports sent upstream use a null source IP address.

### Web Interface

To configure settings for an MVR domain:

1. Click Multicast, MVR.
2. Select Configure Domain from the Step list.
3. Select a domain from the scroll-down list.
4. Enable MVR for the selected domain, select the MVR VLAN, set the forwarding priority to be assigned to all ingress multicast traffic, and set the source IP address for all control packets sent upstream as required.
5. Click Apply.

Figure 388: Configuring Domain Settings for MVR

The screenshot shows a web interface for configuring MVR settings. The title bar reads "Multicast > MVR". Below it, a "Step:" dropdown menu is set to "2. Configure Domain". The configuration fields are as follows:

|                            |   |
|----------------------------|---|
| Domain ID                  | 1   |
| MVR Status                 | <input checked="" type="checkbox"/> Enabled |
| MVR VLAN                   | 1   |
| MVR Running Status         | Active                                      |
| MVR Current Learned Groups | 0   |
| Upstream Source IP         | 192.168.0.12                                |

At the bottom right, there are two buttons: "Apply" and "Revert".

### Configuring MVR Group Address Profiles

Use the Multicast > MVR (Configure Profile and Associate Profile) pages to assign the multicast group address for required services to one or more MVR domains.

#### Command Usage

- ◆ Use the Configure Profile page to statically configure all multicast group addresses that will join the MVR VLAN. Any multicast data associated with an MVR group is sent from all source ports to all receiver ports that have registered to receive data from that multicast group.
- ◆ The IP address range from 224.0.0.0 to 239.255.255.255 is used for multicast streams. MVR group addresses cannot fall within the reserved IP multicast address range of 224.0.0.x.
- ◆ IGMP snooping and MVR share a maximum number of 1024 groups. Any multicast streams received in excess of this limitation will be flooded to all ports in the associated domain.

#### Parameters

These parameters are displayed:

##### Configure Profile

- ◆ **Profile Name** – The name of a profile containing one or more MVR group addresses. (Range: 1-21 characters)
- ◆ **Start IP Address** – Starting IP address for an MVR multicast group. (Range: 224.0.1.0 - 239.255.255.255)
- ◆ **End IP Address** – Ending IP address for an MVR multicast group. (Range: 224.0.1.0 - 239.255.255.255)

##### Associate Profile

- ◆ **Domain ID** – An independent multicast domain. (Range: 1-5)

- ◆ **Profile Name** – The name of a profile to be assigned to this domain.  
(Range: 1-21 characters)

### Web Interface

To configure an MVR group address profile:

1. Click Multicast, MVR.
2. Select Configure Profile from the Step list.
3. Select Add from the Action list.
4. Enter the name of a group profile to be assigned to one or more domains, and specify a multicast group that will stream traffic to participating hosts.
5. Click Apply.

**Figure 389: Configuring an MVR Group Address Profile**

**Multicast > MVR**

Step: 2. Configure Profile Action: Add

Profile Name: sales

Start IP Address: 234.5.6.8

End IP Address: 234.5.6.10

Apply Revert

To show the configured MVR group address profiles:

1. Click Multicast, MVR.
2. Select Configure Profile from the Step list.
3. Select Show from the Action list.

**Figure 390: Displaying MVR Group Address Profiles**

**Multicast > MVR**

Step: 3. Configure Profile Action: Show

MVR Profile List Total: 2

|                          | Profile Name | Start IP Address - End IP Address |
|--------------------------|--------------|-----------------------------------|
| <input type="checkbox"/> | profile1     | 224.1.1.1 - 224.1.1.10            |
| <input type="checkbox"/> | profile2     | 224.1.2.1 - 224.1.2.100           |

Delete Revert

To assign an MVR group address profile to a domain:

1. Click Multicast, MVR.
2. Select Associate Profile from the Step list.
3. Select Add from the Action list.
4. Select a domain from the scroll-down list, and enter the name of a group profile.
5. Click Apply.

**Figure 391: Assigning an MVR Group Address Profile to a Domain**

**Multicast > MVR**

Step: 4. Associate Profile Action: Add

Domain ID: 1 Profile Name: sales

Apply Revert

To show the MVR group address profiles assigned to a domain:

1. Click Multicast, MVR.
2. Select Associate Profile from the Step list.
3. Select Show from the Action list.

**Figure 392: Showing the MVR Group Address Profiles Assigned to a Domain**

**Multicast > MVR**

Step: 3. Associate Profile Action: Show

Domain ID: 1

Domain Associated Profile List Total: 2

|                          | Profile Name | Start IP Address | End IP Address |
|--------------------------|--------------|------------------|----------------|
| <input type="checkbox"/> | rd           | 234.5.6.7        | 234.5.6.7      |
| <input type="checkbox"/> | sales        | 234.5.6.8        | 234.5.6.10     |

Delete Revert



## Configuring MVR Interface Status

Use the Multicast > MVR (Configure Interface) page to configure each interface that participates in the MVR protocol as a source port or receiver port. If you are sure that only one subscriber attached to an interface is receiving multicast services, you can enable the immediate leave function.

### Command Usage

- ◆ A port configured as an MVR receiver or source port can join or leave multicast groups configured under MVR. However, note that these ports can also use IGMP snooping to join or leave any other multicast groups using the standard rules for multicast filtering.
- ◆ Receiver ports can belong to different VLANs, but should not be configured as a member of the MVR VLAN. MVR allows a receiver port to dynamically join or leave multicast groups sourced through the MVR VLAN. Multicast groups can also be statically assigned to a receiver port (see [“Assigning Static MVR Multicast Groups to Interfaces” on page 599](#)).

Receiver ports should not be statically configured as a member of the MVR VLAN. If so configured, its MVR status will be inactive. Also, note that VLAN membership for MVR receiver ports cannot be set to access mode (see [“Adding Static Members to VLANs” on page 163](#)).

- ◆ One or more interfaces may be configured as MVR source ports. A source port is able to both receive and send data for configured MVR groups or for groups which have been statically assigned (see [“Assigning Static MVR Multicast Groups to Interfaces” on page 599](#)).

All source ports must belong to the MVR VLAN.

Subscribers should not be directly connected to source ports.

- ◆ Immediate leave applies only to receiver ports. When enabled, the receiver port is immediately removed from the multicast group identified in the leave message. When immediate leave is disabled, the switch follows the standard rules by sending a query message to the receiver port and waiting for a response to determine if there are any remaining subscribers for that multicast group before removing the port from the group list.
  - Using immediate leave can speed up leave latency, but should only be enabled on a port attached to one multicast subscriber to avoid disrupting services to other group members attached to the same interface.
  - Immediate leave does not apply to multicast groups which have been statically assigned to a port.

### Parameters

These parameters are displayed:

- ◆ **Domain ID** – An independent multicast domain. (Range: 1-5)
- ◆ **Port/Trunk** – Interface identifier.

- ◆ **Type** – The following interface types are supported:
  - **Source** – An uplink port that can send and receive multicast data for the groups assigned to the MVR VLAN. Note that the source port must be manually configured as a member of the MVR VLAN (see [“Adding Static Members to VLANs” on page 163](#)).
  - **Receiver** – A subscriber port that can receive multicast data sent through the MVR VLAN. Any port configured as a receiver port will be dynamically added to the MVR VLAN when it forwards an IGMP report or join message from an attached host requesting any of the designated multicast services supported by the MVR VLAN. Just remember that only IGMP version 2 or 3 hosts can issue multicast join or leave messages. If MVR must be configured for an IGMP version 1 host, the multicast groups must be statically assigned (see [“Assigning Static MVR Multicast Groups to Interfaces” on page 599](#)).
  - **Non-MVR** – An interface that does not participate in the MVR VLAN. (This is the default type.)
- ◆ **Forwarding Status** – Shows if MVR traffic is being forwarded or discarded.
- ◆ **MVR Status** – Shows the MVR status. MVR status for source ports is “Active” if MVR is globally enabled on the switch. MVR status for receiver ports is “Active” only if there are subscribers receiving multicast traffic from one of the MVR groups, or a multicast group has been statically assigned to an interface.
- ◆ **Immediate Leave** – Configures the switch to immediately remove an interface from a multicast stream as soon as it receives a leave message for that group. This option only applies to an interface configured as an MVR receiver. (Default: Disabled)
  - **By Group** – The receiver port is immediately removed from the multicast group identified in the leave message.
  - **By Host IP** – The router/querier will not send out a group-specific query when an IGMPv2/v3 leave message is received (the same as it would without this option having been used). Instead of immediately deleting that group, it will look up the record, and only delete the group if there are no other subscribers for it on the member port. Only when all hosts on that port leave the group will the member port be deleted.

### Web Interface

To configure interface settings for MVR:

1. Click Multicast, MVR.
2. Select Configure Interface from the Step list.
3. Select an MVR domain.

4. Click Port or Trunk.
5. Set each port that will participate in the MVR protocol as a source port or receiver port, and optionally enable Immediate Leave on any receiver port to which only one subscriber is attached.
6. Click Apply.

Figure 393: Configuring Interface Settings for MVR

**Multicast > MVR**

Step: 5. Configure Interface

Domain ID: 1

Interface: ☒ Port ☐ Trunk

Port List Total: 52

| Port | Type     | Forwarding Status | MVR Status | Immediate Leave                   |
|------|----------|-------------------|------------|-----------------------------------|
| 1    | Source   | Forwarding        | Inactive   | <input type="checkbox"/> By-Group |
| 2    | Receiver | Forwarding        | Inactive   | <input type="checkbox"/> By-Group |
| 3    | Non-MVR  | Discarding        | Inactive   | <input type="checkbox"/> By-Group |
| 4    | Non-MVR  | Discarding        | Inactive   | <input type="checkbox"/> By-Group |
| 5    | Non-MVR  | Discarding        | Inactive   | <input type="checkbox"/> By-Group |

### Assigning Static MVR Multicast Groups to Interfaces

Use the Multicast > MVR (Configure Static Group Member) page to statically bind multicast groups to a port which will receive long-term multicast streams associated with a stable set of hosts.

#### Command Usage

- ◆ Multicast groups can be statically assigned to a receiver port using this configuration page.
- ◆ The IP address range from 224.0.0.0 to 239.255.255.255 is used for multicast streams. MVR group addresses cannot fall within the reserved IP multicast address range of 224.0.0.x.
- ◆ Only IGMP version 2 or 3 hosts can issue multicast join or leave messages. If MVR must be configured for an IGMP version 1 host, the multicast groups must be statically assigned.
- ◆ The MVR VLAN cannot be specified as the receiver VLAN for static bindings.

#### Parameters

These parameters are displayed:

- ◆ **Domain ID** – An independent multicast domain. (Range: 1-5)
- ◆ **Interface** – Port or trunk identifier.
- ◆ **VLAN** – VLAN identifier. (Range: 1-4094)

- ◆ **Group IP Address** – Defines a multicast service sent to the selected port. Multicast groups must be assigned from the MVR group range configured on the Configure General page.

### Web Interface

To assign a static MVR group to an interface:

1. Click Multicast, MVR.
2. Select Configure Static Group Member from the Step list.
3. Select Add from the Action list.
4. Select an MVR domain.
5. Select a VLAN and interface to receive the multicast stream, and then enter the multicast group address.
6. Click Apply.

**Figure 394: Assigning Static MVR Groups to an Interface**

The screenshot shows the 'Multicast > MVR' configuration page. At the top, there's a breadcrumb 'Multicast > MVR'. Below it, a 'Step:' dropdown is set to '5. Configure Static Group Member' and an 'Action:' dropdown is set to 'Add'. The main configuration area contains the following fields:

- Domain ID:** A dropdown menu with '1' selected.
- Interface:** Radio buttons for 'Port' and 'Trunk'. 'Port' is selected, and a dropdown next to it shows '2'.
- VLAN:** A dropdown menu with '2' selected.
- Group IP Address:** A text input field containing '234.5.6.8'.

At the bottom right, there are two buttons: 'Apply' and 'Revert'.

To show the static MVR groups assigned to an interface:

1. Click Multicast, MVR.
2. Select Configure Static Group Member from the Step list.
3. Select Show from the Action list.
4. Select an MVR domain.
5. Select the port or trunk for which to display this information.

Figure 395: Showing the Static MVR Groups Assigned to a Port

The screenshot shows the 'Multicast > MVR' configuration page. At the top, there's a breadcrumb 'Multicast > MVR' and a help icon. Below it, a 'Step:' dropdown is set to '5. Configure Static Group Member' and an 'Action:' dropdown is set to 'Show'. The 'Domain ID' is set to '1'. Under 'Interface', the 'Port' radio button is selected with a dropdown set to '2', and the 'Trunk' radio button is unselected with a dropdown set to '3'. Below this, the 'MVR Static Group Member List' is shown with a 'Total: 3' count. The list is a table with three columns: a checkbox, 'VLAN', and 'Group IP Address'. It contains three entries: (checkbox, 2, 224.1.1.1), (checkbox, 2, 224.1.1.2), and (checkbox, 3, 224.1.1.3). At the bottom right of the table are 'Delete' and 'Revert' buttons.

|                          | VLAN | Group IP Address |
|--------------------------|------|------------------|
| <input type="checkbox"/> | 2    | 224.1.1.1        |
| <input type="checkbox"/> | 2    | 224.1.1.2        |
| <input type="checkbox"/> | 3    | 224.1.1.3        |

### Displaying MVR Receiver Groups

Use the Multicast > MVR (Show Member) page to show the multicast groups either statically or dynamically assigned to the MVR receiver groups on each interface.

#### Parameters

These parameters are displayed:


- ◆ **Domain ID** – An independent multicast domain. (Range: 1-5)
- ◆ **Group IP Address** – Multicast groups assigned to the MVR VLAN.
- ◆ **VLAN** – The VLAN through which the service is received. Note that this may be different from the MVR VLAN if the group address has been statically assigned.
- ◆ **Port** – Indicates the source address of the multicast service (these entries are marked as “Source”), or displays an asterisk if the group address has been statically assigned. Also shows the interfaces with subscribers for multicast services provided through the MVR VLAN (these entries are marked as “Receiver”).
- ◆ **Up Time** – Time this service has been forwarded to attached clients.
- ◆ **Expire** – Time before this entry expires if no membership report is received from currently active or new clients.
- ◆ **Count** – The number of multicast services currently being forwarded from the MVR VLAN.
- ◆ **Clear MVR Group** – Clears multicast group information dynamically learned through MVR6. Statically configured multicast addresses are not cleared.

### Web Interface

To display the interfaces assigned to the MVR receiver groups:

1. Click Multicast, MVR.
2. Select Show Member from the Step list.
3. Select an MVR domain.

Figure 396: Displaying MVR Receiver Groups

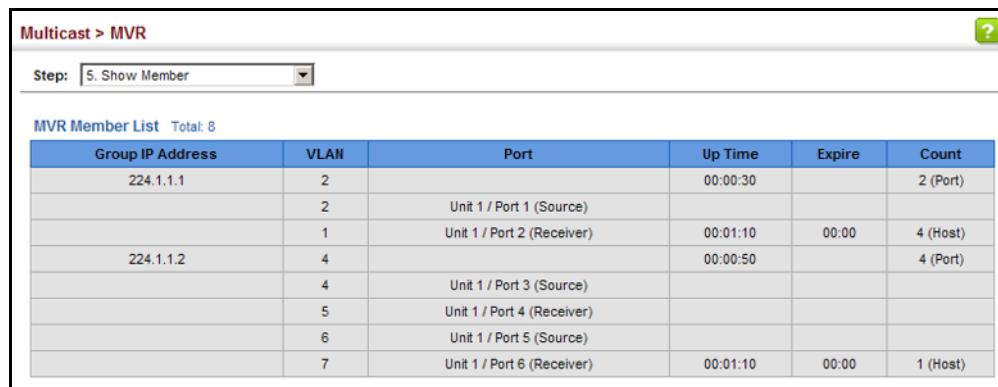

| Multicast > MVR          |      |                            |          |        |          |
|--------------------------|------|----------------------------|----------|--------|----------|
| Step: 5. Show Member     |      |                            |          |        |          |
| MVR Member List Total: 8 |      |                            |          |        |          |
| Group IP Address         | VLAN | Port                       | Up Time  | Expire | Count    |
| 224.1.1.1                | 2    |                            | 00:00:30 |        | 2 (Port) |
|                          | 2    | Unit 1 / Port 1 (Source)   |          |        |          |
|                          | 1    | Unit 1 / Port 2 (Receiver) | 00:01:10 | 00:00  | 4 (Host) |
| 224.1.1.2                | 4    |                            | 00:00:50 |        | 4 (Port) |
|                          | 4    | Unit 1 / Port 3 (Source)   |          |        |          |
|                          | 5    | Unit 1 / Port 4 (Receiver) |          |        |          |
|                          | 6    | Unit 1 / Port 5 (Source)   |          |        |          |
|                          | 7    | Unit 1 / Port 6 (Receiver) | 00:01:10 | 00:00  | 1 (Host) |

### Displaying MVR Statistics

Use the Multicast > MVR > Show Statistics pages to display MVR protocol-related statistics for the specified interface. There are four Action pages with separate statistics:

- Show Query Statistics
- Show VLAN Statistics
- Show Port Statistics
- Show Trunk Statistics

### Parameters

These parameters are displayed:

- ◆ **Domain ID** – An independent multicast domain. (Range: 1-5)
- ◆ **VLAN** – VLAN identifier. (Range: 1-4094)
- ◆ **Port** – Port identifier. (Range: 1-52)
- ◆ **Trunk** – Trunk identifier. (Range: 1-16)

### Query Statistics

- ◆ **Querier IP Address** – The IP address of the querier on this interface.

- ◆ **Querier Expire Time** – The time after which this querier is assumed to have expired.
- ◆ **General Query Received** – The number of general queries received on this interface.
- ◆ **General Query Sent** – The number of general queries sent from this interface.
- ◆ **Specific Query Received** – The number of specific queries received on this interface.
- ◆ **Specific Query Sent** – The number of specific queries sent from this interface.
- ◆ **Number of Reports Sent** – The number of reports sent from this interface.
- ◆ **Number of Leaves Sent** – The number of leaves sent from this interface.

#### *VLAN, Port, and Trunk Statistics*

##### *Input Statistics*

- ◆ **Report** – The number of IGMP membership reports received on this interface.
- ◆ **Leave** – The number of leave messages received on this interface.
- ◆ **G Query** – The number of general query messages received on this interface.
- ◆ **G(-S)-S Query** – The number of group specific or group-and-source specific query messages received on this interface.
- ◆ **Drop** – The number of times a report, leave or query was dropped. Packets may be dropped due to invalid format, rate limiting, packet content not allowed, or MVR group report received.
- ◆ **Join Success** – The number of times a multicast group was successfully joined.
- ◆ **Group** – The number of MVR groups active on this interface.

##### *Output Statistics*

- ◆ **Report** – The number of IGMP membership reports sent from this interface.
- ◆ **Leave** – The number of leave messages sent from this interface.
- ◆ **G Query** – The number of general query messages sent from this interface.
- ◆ **G(-S)-S Query** – The number of group specific or group-and-source specific query messages sent from this interface.

### Web Interface

To display statistics for MVR query-related messages:

1. Click Multicast, MVR.
2. Select Show Statistics from the Step list.
3. Select Show Query Statistics from the Action list.
4. Select an MVR domain.

**Figure 397: Displaying MVR Statistics – Query**

The screenshot displays the 'Multicast > MVR' configuration page. At the top, there are two dropdown menus: 'Step:' set to '7. Show Statistics' and 'Action:' set to 'Show Query Statistics'. Below these, a 'Domain ID' dropdown is set to '1'. A section titled 'Query Statistics' contains a table with the following data:

|                         |                   |
|-------------------------|-------------------|
| Querier IP Address      | None              |
| Querier Expire Time     | 00(h):00(m):00(s) |
| General Query Received  | 0                 |
| General Query Sent      | 0                 |
| Specific Query Received | 0                 |
| Specific Query Sent     | 0                 |
| Number of Reports Sent  | 0                 |
| Number of Leaves Sent   | 0                 |

At the bottom left, there is a 'Clear All' button and a link that says 'Click this button to clear all MVR statistics of the domain.' At the bottom right, there is a 'Refresh' button.



To display MVR protocol-related statistics for a VLAN, Port or Trunk:

1. Click Multicast, MVR.
2. Select Show Statistics from the Step list.
3. Select Show VLAN/Port/Trunk Statistics from the Action list.
4. Select an MVR domain.
5. Select a VLAN/Port/Trunk.

Figure 398: Displaying MVR Statistics – VLAN

**Multicast > MVR**

Step: 7. Show Statistics Action: Show VLAN Statistics

Domain ID 1

VLAN 1

**Input Statistics**

|               |   |              |   |
|---------------|---|--------------|---|
| Report        | 0 | Drop         | 0 |
| Leave         | 0 | Join Success | 0 |
| G Query       | 0 | Group        | 0 |
| G(-S)-S Query | 0 |              |   |

**Output Statistics**

|               |   |
|---------------|---|
| Report        | 0 |
| Leave         | 0 |
| G Query       | 0 |
| G(-S)-S Query | 0 |

Refresh

To display MVR protocol-related statistics for a port:

1. Click Multicast, MVR.
2. Select Show Statistics from the Step list.
3. Select Show Port Statistics from the Action list.
4. Select an MVR domain.
5. Select a Port.

**Figure 399: Displaying MVR Statistics – Port**

The screenshot shows the 'Multicast > MVR' configuration page. At the top, there are two dropdown menus: 'Step: 7. Show Statistics' and 'Action: Show Port Statistics'. Below these, there are two more dropdown menus: 'Domain ID' and 'Port', both set to '1'. The main content area is divided into two sections: 'Input Statistics' and 'Output Statistics'. Each section contains a table of statistics with values of 0.

| Input Statistics |   |              |   |
|------------------|---|--------------|---|
| Report           | 0 | Drop         | 0 |
| Leave            | 0 | Join Success | 0 |
| G Query          | 0 | Group        | 0 |
| G(-S)-S Query    | 0 |              |   |

| Output Statistics |   |
|-------------------|---|
| Report            | 0 |
| Leave             | 0 |
| G Query           | 0 |
| G(-S)-S Query     | 0 |

At the bottom right of the statistics area is a 'Refresh' button.

## Multicast VLAN Registration for IPv6

MVR6 functions in a manner similar to that described for MRV (see [“Multicast VLAN Registration for IPv4” on page 589](#)).

### Command Usage

◆ General Configuration Guidelines for MVR6:

1. Enable MVR6 for a domain on the switch, and select the MVR VLAN (see [“Configuring MVR6 Domain Settings” on page 609](#)).
2. Create an MVR6 profile by specifying the multicast groups that will stream traffic to attached hosts, and assign the profile to an MVR6 domain (see [“Configuring MVR6 Group Address Profiles” on page 610](#)).

3. Set the interfaces that will join the MVR as source ports or receiver ports (see [“Configuring MVR6 Interface Status” on page 613](#)).
4. For multicast streams that will run for a long term and be associated with a stable set of hosts, you can statically bind the multicast group to the participating interfaces (see [“Assigning Static MVR6 Multicast Groups to Interfaces” on page 615](#)).

**Configuring MVR6 Global Settings** Use the Multicast > MVR6 (Configure Global) page to configure proxy switching and the robustness variable.

#### Parameters

These parameters are displayed:

- ◆ **Proxy Switching** – Configures MVR proxy switching, where the source port acts as a host, and the receiver port acts as an MVR router with querier service enabled. (Default: Enabled)
  - When MVR proxy-switching is enabled, an MVR source port serves as the upstream or host interface, and the MVR receiver port serves as the querier. The source port performs only the host portion of MVR by sending summarized membership reports, and automatically disables MVR router functions.
  - Receiver ports are known as downstream or router interfaces. These interfaces perform the standard MVR router functions by maintaining a database of all MVR subscriptions on the downstream interface. Receiver ports must therefore be configured on all downstream interfaces which require MVR proxy service.
  - When the source port receives report and leave messages, it only forwards them to other source ports.
  - When receiver ports receive any query messages, they are dropped.
  - When changes occurring in the downstream MVR groups are learned by the receiver ports through report and leave messages, an MVR state change report is created and sent to the upstream source port, which in turn forwards this information upstream.
  - When MVR proxy switching is disabled:
    - Any membership reports received from receiver/source ports are forwarded to all source ports.
    - When a source port receives a query message, it will be forwarded to all downstream receiver ports.
    - When a receiver port receives a query message, it will be dropped.

- ◆ **Robustness Value** – Configures the expected packet loss, and thereby the number of times to generate report and group-specific queries. (Range: 1-10; Default: 2)
  - This parameter is used to set the number of times report messages are sent upstream when changes are learned about downstream groups, and the number of times group-specific queries are sent to downstream receiver ports.
  - This parameter only takes effect when MVR6 proxy switching is enabled.
- ◆ **Proxy Query Interval** – Configures the interval at which the receiver port sends out general queries. (Range: 2-31744 seconds; Default: 125 seconds)
  - This parameter sets the general query interval at which active receiver ports send out general queries.
  - This interval is only effective when proxy switching is enabled.
- ◆ **Source Port Mode** – Configures the switch to forward any multicast streams within the parameters set by a profile, or to only forward multicast streams which the source port has dynamically joined.
  - **Always Forward** – By default, the switch forwards any multicast streams within the address range set by a profile, and bound to a domain. The multicast streams are sent to all source ports on the switch and to all receiver ports that have elected to receive data on that multicast address.
  - **Dynamic** – When dynamic mode is enabled, the switch only forwards multicast streams which the source port has dynamically joined. In other words, both the receiver port and source port must subscribe to a multicast group before a multicast stream is forwarded to any attached client. Note that the requested streams are still restricted to the address range which has been specified in a profile and bound to a domain. (This is the default setting.)

### Web Interface

To configure global settings for MVR6:

1. Click Multicast, MVR6.
2. Select Configure Global from the Step list.
3. Set the status for MVR6 proxy switching, the robustness value used for report and query messages, the proxy query interval, and source port mode.
4. Click Apply.

Figure 400: Configuring Global Settings for MVR6

The screenshot shows the 'Multicast > MVR6' configuration page. At the top, there is a breadcrumb 'Multicast > MVR6' and a 'Step:' dropdown menu set to '1. Configure Global'. Below this, there are four configuration items: 'Proxy Switching' with a checked 'Enabled' checkbox, 'Robustness Value (1-10)' with a text input field containing '1', 'Proxy Query Interval (2-31744)' with a text input field containing '125' and a 'sec' unit label, and 'Source Port Mode' with a dropdown menu set to 'Always Forward'. At the bottom right, there are 'Apply' and 'Revert' buttons.

### Configuring MVR6 Domain Settings

Use the Multicast > MVR6 (Configure Domain) page to enable MVR6 globally on the switch, and select the VLAN that will serve as the sole channel for common multicast streams supported by the service provider.

#### Parameters

These parameters are displayed:

- ◆ **Domain ID** – An independent multicast domain. (Range: 1-5)
- ◆ **MVR6 Status** – When MVR6 is enabled on the switch, any multicast data associated with an MVR6 group is sent from all designated source ports, to all receiver ports that have registered to receive data from that multicast group. (Default: Disabled)
- ◆ **MVR6 VLAN** – Identifier of the VLAN that serves as the channel for streaming multicast services using MVR6. MVR6 source ports should be configured as members of the MVR6 VLAN (see [“Adding Static Members to VLANs” on page 163](#)), but MVR6 receiver ports should not be manually configured as members of this VLAN. (Default: 1)
- ◆ **MVR6 Running Status** – Indicates whether or not all necessary conditions in the MVR6 environment are satisfied. Running status is Active as long as MVR6 is enabled, the specified MVR6 VLAN exists, and a source port with a valid link has been configured (see [“Configuring MVR6 Interface Status” on page 613](#)).
- ◆ **MVR6 Current Learned Groups** – The number of MVR6 groups currently assigned to this domain.
- ◆ **Upstream Source IPv6** – The source IPv6 address assigned to all MVR6 control packets sent upstream on the specified domain. This parameter must be a full IPv6 address including the network prefix and host address bits. By default, all MVR6 reports sent upstream use a null source IP address.

All IPv6 addresses must be according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields. (Note that the IP address ff02::X is reserved.)

### Web Interface

To configure settings for an MVR6 domain:

1. Click Multicast, MVR6.
2. Select Configure Domain from the Step list.
3. Select a domain from the scroll-down list.
4. Enable MVR6 for the selected domain, select the MVR6 VLAN, set the forwarding priority to be assigned to all ingress multicast traffic, and set the source IP address for all control packets sent upstream as required.
5. Click Apply.

**Figure 401: Configuring Domain Settings for MVR6**

The screenshot shows a web interface for configuring MVR6 domains. The breadcrumb is 'Multicast > MVR6'. The 'Step:' dropdown is set to '2. Configure Domain'. The configuration fields are as follows:

|                             |   |
|-----------------------------|---|
| Domain ID                   | 1   |
| MVR6 Status                 | <input checked="" type="checkbox"/> Enabled |
| MVR6 VLAN                   | 1   |
| MVR6 Running Status         | Inactive                                    |
| MVR6 Current Learned Groups | 0   |
| Upstream Source IPv6        |   |

At the bottom right, there are 'Apply' and 'Revert' buttons.

### Configuring MVR6 Group Address Profiles

Use the Multicast > MVR6 (Configure Profile and Associate Profile) pages to assign the multicast group address for required services to one or more MVR6 domains.

#### Command Usage

- ◆ Use the Configure Profile page to statically configure all multicast group addresses that will join the MVR6 VLAN. Any multicast data associated with an MVR6 group is sent from all source ports to all receiver ports that have registered to receive data from that multicast group.
- ◆ All IPv6 addresses must be according to RFC 2373 "IPv6 Addressing Architecture," using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields. (Note that the IP address ff02::X is reserved.)
- ◆ The MVR6 group address range assigned to a profile cannot overlap with the group address range of any other profile.
- ◆ MVR6 domains can be associated with more than one MVR6 profile. But since MVR6 domains cannot share the group range, an MVR6 profile can only be associated with one MVR6 domain.

### Parameters

These parameters are displayed:

#### Configure Profile

- ◆ **Profile Name** – The name of a profile containing one or more MVR6 group addresses. (Range: 1-21 characters)
- ◆ **Start IPv6 Address** – Starting IP address for an MVR6 multicast group. This parameter must be a full IPv6 address including the network prefix and host address bits.
- ◆ **End IPv6 Address** – Ending IP address for an MVR6 multicast group. This parameter must be a full IPv6 address including the network prefix and host address bits.

#### Associate Profile

- ◆ **Domain ID** – An independent multicast domain. (Range: 1-5)
- ◆ **Profile Name** – The name of a profile to be assigned to this domain. (Range: 1-20 characters)

### Web Interface

To configure an MVR6 group address profile:

1. Click Multicast, MVR6.
2. Select Configure Profile from the Step list.
3. Select Add from the Action list.
4. Enter the name of a group profile to be assigned to one or more domains, and specify a multicast group that will stream traffic to participating hosts.
5. Click Apply.

Figure 402: Configuring an MVR6 Group Address Profile

Multicast > MVR6

Step: 2. Configure Profile Action: Add

Profile Name: rd

Start IPv6 Address: ff00::1

End IPv6 Address: ff00::9

Apply Revert

To show the configured MVR6 group address profiles:

1. Click Multicast, MVR6.
2. Select Configure Profile from the Step list.
3. Select Show from the Action list.

**Figure 403: Displaying MVR6 Group Address Profiles**

The screenshot shows the 'Multicast > MVR6' configuration page. At the top, there is a 'Step:' dropdown menu set to '3. Configure Profile' and an 'Action:' dropdown menu set to 'Show'. Below this, the 'MVR6 Profile List' is displayed with a 'Total: 1' count. The list contains one profile named 'rd' with a 'Start IPv6 Address' of 'FF00::1' and an 'End IPv6 Address' of 'FF00::9'. At the bottom of the list, there are 'Delete' and 'Revert' buttons.

|                          | Profile Name | Start IPv6 Address | End IPv6 Address |
|--------------------------|--------------|--------------------|------------------|
| <input type="checkbox"/> | rd           | FF00::1            | FF00::9          |

To assign an MVR6 group address profile to a domain:

1. Click Multicast, MVR6.
2. Select Associate Profile from the Step list.
3. Select Add from the Action list.
4. Select a domain from the scroll-down list, and enter the name of a group profile.
5. Click Apply.

**Figure 404: Assigning an MVR6 Group Address Profile to a Domain**

The screenshot shows the 'Multicast > MVR6' configuration page. At the top, there is a 'Step:' dropdown menu set to '4. Associate Profile' and an 'Action:' dropdown menu set to 'Add'. Below this, there are two dropdown menus: 'Domain ID' set to '1' and 'Profile Name' set to 'rd'. At the bottom, there are 'Apply' and 'Revert' buttons.

To show the MVR6 group address profiles assigned to a domain:

1. Click Multicast, MVR6.
2. Select Associate Profile from the Step list.
3. Select Show from the Action list.



Figure 405: Showing MVR6 Group Address Profiles Assigned to a Domain

Multicast > MVR6

Step: 3. Associate Profile Action: Show

Domain ID: 1

Domain Associated Profile List Total: 1

|                          | Profile Name | Start IPv6 Address | End IPv6 Address |
|--------------------------|--------------|--------------------|------------------|
| <input type="checkbox"/> | rd           | FF00::1            | FF00::9          |

Buttons: Delete, Revert

## Configuring MVR6 Interface Status

Use the Multicast > MVR6 (Configure Interface) page to configure each interface that participates in the MVR6 protocol as a source port or receiver port. If you are sure that only one subscriber attached to an interface is receiving multicast services, you can enable the immediate leave function.

### Command Usage

- ◆ A port configured as an MVR6 receiver or source port can join or leave multicast groups configured under MVR6. A port which is not configured as an MVR receiver or source port can use MLD snooping to join or leave multicast groups using the standard rules for multicast filtering (see “MLD Snooping (Snooping and Query for IPv6).

- ◆ Receiver ports can belong to different VLANs, but should not be configured as a member of the MVR6 VLAN. MVR6 allows a receiver port to dynamically join or leave multicast groups sourced through the MVR6 VLAN. Multicast groups can also be statically assigned to a receiver port (see “Assigning Static MVR Multicast Groups to Interfaces” on page 599).

Receiver ports should not be statically configured as a member of the MVR6 VLAN. If so configured, its MVR6 status will be inactive. Also, note that VLAN membership for MVR6 receiver ports cannot be set to access mode (see “Adding Static Members to VLANs” on page 163).

- ◆ One or more interfaces may be configured as MVR6 source ports. A source port is able to both receive and send data for configured MVR6 groups or for groups which have been statically assigned (see “Assigning Static MVR Multicast Groups to Interfaces” on page 599).

All source ports must belong to the MVR6 VLAN.

Subscribers should not be directly connected to source ports.

- ◆ Immediate leave applies only to receiver ports. When enabled, the receiver port is immediately removed from the multicast group identified in the leave message. When immediate leave is disabled, the switch follows the standard rules by sending a group-specific query to the receiver port and waiting for a response to determine if there are any remaining subscribers for that multicast group before removing the port from the group list.

- Using immediate leave can speed up leave latency, but should only be enabled on a port attached to one multicast subscriber to avoid disrupting services to other group members attached to the same interface.
- Immediate leave does not apply to multicast groups which have been statically assigned to a port.

### Parameters

These parameters are displayed:

- ◆ **Domain ID** – An independent multicast domain. (Range: 1-5)
- ◆ **Port/Trunk** – Interface identifier.
- ◆ **Type** – The following interface types are supported:
  - **Non-MVR6** – An interface that does not participate in the MVR6 VLAN. (This is the default type.)
  - **Source** – An uplink port that can send and receive multicast data for the groups assigned to the MVR6 VLAN. Note that the source port must be manually configured as a member of the MVR6 VLAN (see [“Adding Static Members to VLANs” on page 163](#)).
  - **Receiver** – A subscriber port that can receive multicast data sent through the MVR6 VLAN. Also, note that VLAN membership for MVR receiver ports cannot be set to access mode (see [“Adding Static Members to VLANs” on page 163](#)).
- ◆ **Forwarding Status** – Shows if multicast traffic is being forwarded or blocked.
- ◆ **MVR6 Status** – Shows the MVR6 status. MVR6 status for source ports is “Active” if MVR6 is globally enabled on the switch. MVR6 status for receiver ports is “Active” only if there are subscribers receiving multicast traffic from one of the MVR6 groups, or a multicast group has been statically assigned to an interface.
- ◆ **Immediate Leave** – Configures the switch to immediately remove an interface from a multicast stream as soon as it receives a leave message for that group. (This option only applies to an interface configured as an MVR6 receiver.) (Default: Disabled)
  - **By Group** – The receiver port is immediately removed from the multicast group identified in the MLD snooping leave message.
  - **By Host IP** – The router/querier will not send out a group-specific query when an MLD snooping leave message is received (the same as it would without this option having been used). Instead of immediately deleting that group, it will look up the record, and only delete the group if there are no other subscribers for it on the member port. Only when all hosts on that port leave the group will the member port be deleted.

## Web Interface

To configure interface settings for MVR6:

1. Click Multicast, MVR6.
2. Select Configure Interface from the Step list.
3. Select an MVR6 domain.
4. Click Port or Trunk.
5. Set each port that will participate in the MVR6 protocol as a source port or receiver port, and optionally enable Immediate Leave on any receiver port to which only one subscriber is attached.
6. Click Apply.

**Figure 406: Configuring Interface Settings for MVR6**

**Multicast > MVR6**

Step: 5. Configure Interface

Domain ID: 1

Interface: ☒ Port ☐ Trunk

Port List Total: 52

| Port | Type     | Forwarding Status | MVR6 Status | Immediate Leave                              |
|------|----------|-------------------|-------------|--|
| 1    | Source   | Forwarding        | Inactive    | <input type="checkbox"/> By-Group            |
| 2    | Receiver | Forwarding        | Inactive    | <input checked="" type="checkbox"/> By-Group |
| 3    | Non-MVR6 | Discarding        | Inactive    | <input type="checkbox"/> By-Group            |
| 4    | Non-MVR6 | Discarding        | Inactive    | <input type="checkbox"/> By-Group            |
| 5    | Non-MVR6 | Discarding        | Inactive    | <input type="checkbox"/> By-Group            |

## Assigning Static MVR6 Multicast Groups to Interfaces

Use the Multicast > MVR6 (Configure Static Group Member) page to statically bind multicast groups to a port which will receive long-term multicast streams associated with a stable set of hosts.

## Command Usage

- ◆ Multicast groups can be statically assigned to a receiver port using this configuration page.
- ◆ All IPv6 addresses must be according to RFC 2373 "IPv6 Addressing Architecture," using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields. (Note that the IP address ff02::X is reserved.)
- ◆ The MVR6 VLAN cannot be specified as the receiver VLAN for static bindings.

## Parameters

These parameters are displayed:

- ◆ **Domain ID** – An independent multicast domain. (Range: 1-5)
- ◆ **Interface** – Port or trunk identifier.
- ◆ **VLAN** – VLAN identifier. (Range: 1-4094)
- ◆ **Group IPv6 Address** – Defines a multicast service sent to the selected port. Multicast groups must be assigned from the MVR6 group range configured on the Configure General page.

### Web Interface

To assign a static MVR6 group to an interface:

1. Click Multicast, MVR6.
2. Select Configure Static Group Member from the Step list.
3. Select Add from the Action list.
4. Select an MVR6 domain.
5. Select a VLAN and interface to receive the multicast stream, and then enter the multicast group address.
6. Click Apply.

**Figure 407: Assigning Static MVR6 Groups to a Port**

The screenshot shows a web interface for configuring Multicast VLAN Registration (MVR6). The breadcrumb is 'Multicast > MVR6'. The 'Step' dropdown is set to '5. Configure Static Group Member' and the 'Action' dropdown is set to 'Add'. The configuration fields are as follows:

| Field              | Value   |
|--------------------|---------|
| Domain ID          | 1       |
| Interface          | Port 2  |
| VLAN               | 2       |
| Group IPv6 Address | ff00::1 |

At the bottom right, there are two buttons: 'Apply' and 'Revert'.

To show the static MVR6 groups assigned to an interface:

1. Click Multicast, MVR6.
2. Select Configure Static Group Member from the Step list.
3. Select Show from the Action list.
4. Select an MVR6 domain.
5. Select the port or trunk for which to display this information.

Figure 408: Showing the Static MVR6 Groups Assigned to a Port

The screenshot shows the 'Multicast > MVR6' configuration page. At the top, there's a breadcrumb 'Multicast > MVR6' and a help icon. Below that, a 'Step:' dropdown is set to '6. Configure Static Group Member' and an 'Action:' dropdown is set to 'Show'. The 'Domain ID' is set to '1'. The 'Interface' section has 'Port' selected with a value of '2', and 'Trunk' is set to '1'. Below this, a table titled 'MVR6 Static Group Member List' shows 'Total: 1' member. The table has two columns: 'VLAN' and 'Group IPv6 Address'. The first row shows 'VLAN' as '2' and 'Group IPv6 Address' as 'FF00::1'. At the bottom right, there are 'Delete' and 'Revert' buttons.

| VLAN | Group IPv6 Address |
|------|--------------------|
| 2    | FF00::1            |

## Displaying MVR6 Receiver Groups

Use the Multicast > MVR6 (Show Member) page to show the multicast groups either statically or dynamically assigned to the MVR6 receiver groups on each interface.

### Parameters

These parameters are displayed:

- ◆ **Domain ID** – An independent multicast domain. (Range: 1-5)
- ◆ **Group IPv6 Address** – Multicast groups assigned to the MVR6 VLAN.
- ◆ **VLAN** – The VLAN through which the service is received. Note that this may be different from the MVR6 VLAN if the group address has been statically assigned.
- ◆ **Port** – Indicates the source address of the multicast service, or displays an asterisk if the group address has been statically assigned (these entries are marked as "Source"). Also shows the interfaces with subscribers for multicast services provided through the MVR6 VLAN (these entries are marked as "Receiver").
- ◆ **Up Time** – Time this service has been forwarded to attached clients.
- ◆ **Expire** – Time before this entry expires if no membership report is received from currently active or new clients.
- ◆ **Count** – The number of multicast services currently being forwarded from the MVR6 VLAN.
- ◆ **Clear MVR6 Group** – Clears multicast group information dynamically learned through MVR6. Statically configured multicast addresses are not cleared.


### Web Interface

To display the interfaces assigned to the MVR6 receiver groups:

1. Click Multicast, MVR6.
2. Select Show Member from the Step list.

3. Select an MVR6 domain.

Figure 409: Displaying MVR6 Receiver Groups

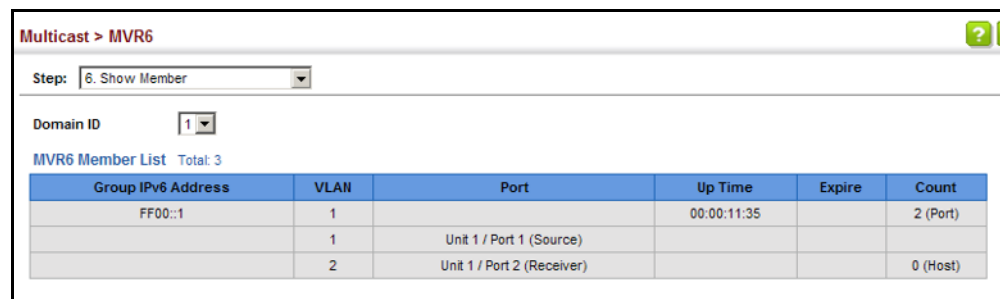

Multicast > MVR6

Step: 6. Show Member

Domain ID: 1

MVR6 Member List Total: 3

| Group IPv6 Address | VLAN | Port                       | Up Time     | Expire | Count    |
|--------------------|------|----------------------------|-------------|--------|----------|
| FF00::1            | 1    |                            | 00:00:11:35 |        | 2 (Port) |
|                    | 1    | Unit 1 / Port 1 (Source)   |             |        |          |
|                    | 2    | Unit 1 / Port 2 (Receiver) |             |        | 0 (Host) |

## Displaying MVR6 Statistics

Use the Multicast > MVR6 > Show Statistics pages to display MVR6 protocol-related statistics for the specified interface. There are four Action pages with separate statistics:

- Show Query Statistics
- Show VLAN Statistics
- Show Port Statistics
- Show Trunk Statistics

### Parameters

These parameters are displayed:

#### Query Statistics

- ◆ **Domain ID** – An independent multicast domain. (Range: 1-5)
- ◆ **Querier IPv6 Address** – The IP address of the querier on this interface.
- ◆ **Querier Expire Time** – The time after which this querier is assumed to have expired.
- ◆ **General Query Received** – The number of general queries received on this interface.
- ◆ **General Query Sent** – The number of general queries sent from this interface.
- ◆ **Specific Query Received** – The number of specific queries received on this interface.
- ◆ **Specific Query Sent** – The number of specific queries sent from this interface.
- ◆ **Number of Reports Sent** – The number of reports sent from this interface.

- ◆ **Number of Leaves Sent** – The number of leaves sent from this interface.

*VLAN, Port or Trunk Statistics*

- ◆ **Domain ID** – An independent multicast domain. (Range: 1-5)
- ◆ **VLAN** – VLAN identifier. (Range: 1-4094)
- ◆ **Port** – Port identifier. (Range: 1-52)
- ◆ **Trunk** – Trunk identifier. (Range: 1-16)

*Input Statistics*

- **Report** – The number of MLD membership reports received on this interface.
- **Done** – The number of messages received by this multicast router for a specific multicast group, to signal the router that there may not be any further group members on the local subnet.
- **Leave** – The number of leave messages sent from this interface.
- **G Query** – The number of general query messages received on this interface.
- **G(-S)-S Query** – The number of group specific or group-and-source specific query messages received on this interface.

*Output Statistics*

- **Report** – The number of MLD membership reports sent from this interface.
- **Done** – The number of messages sent by a host for a specific multicast group, to signal the router that there may not be any further group members on the local subnet.
- **G Query** – The number of general query messages sent from this interface.
- **G(-S)-S Query** – The number of group specific or group-and-source specific query messages sent from this interface.
- **Drop** – The number of times a report, leave or query was dropped. Packets may be dropped due to invalid format, rate limiting, packet content not allowed, or MVR6 group report received.
- **Join Success** – The number of times a multicast group was successfully joined.
- **Group** – The number of MVR6 groups active on this interface.

### Web Interface

To display statistics for MVR6 query-related messages:

1. Click Multicast, MVR6.
2. Select Show Statistics from the Step list.
3. Select Show Query Statistics from the Action list.
4. Select an MVR6 domain.

**Figure 410: Displaying MVR6 Statistics – Query**

The screenshot shows the 'Multicast > MVR6' web interface. At the top, there is a breadcrumb 'Multicast > MVR6'. Below it, there are two dropdown menus: 'Step: 7. Show Statistics' and 'Action: Show Query Statistics'. Underneath, there is a 'Domain ID' dropdown menu set to '1'. The main section is titled 'Query Statistics' and contains a table with the following data:

|                         |                   |
|-------------------------|-------------------|
| Querier IPv6 Address    | ::                |
| Querier Expire Time     | 00(h):00(m):00(s) |
| General Query Received  | 0                 |
| General Query Sent      | 34                |
| Specific Query Received | 0                 |
| Specific Query Sent     | 0                 |
| Number of Reports Sent  | 0                 |
| Number of Leaves Sent   | 0                 |

At the bottom left, there is a 'Clear All' button with a tooltip that says 'Click this button to clear all MVR6 statistics of the domain.' At the bottom right, there is a 'Refresh' button.



To display MVR6 protocol-related statistics for a VLAN:

1. Click Multicast, MVR6.
2. Select Show Statistics from the Step list.
3. Select Show VLAN Statistics from the Action list.
4. Select an MVR6 domain.
5. Select a VLAN.

Figure 411: Displaying MVR6 Statistics – VLAN

**Multicast > MVR6**

Step: 7. Show Statistics Action: Show VLAN Statistics

Domain ID 1

VLAN 1

**Input Statistics**

|               |   |              |   |
|---------------|---|--------------|---|
| Report        | 0 | Drop         | 0 |
| Done          | 0 | Join Success | 0 |
| G Query       | 0 | Group        | 1 |
| G(-S)-S Query | 0 |              |   |

**Output Statistics**

|               |    |
|---------------|----|
| Report        | 0  |
| Done          | 0  |
| G Query       | 35 |
| G(-S)-S Query | 0  |

To display MVR6 protocol-related statistics for a port:

1. Click Multicast, MVR6.
2. Select Show Statistics from the Step list.
3. Select Show Port Statistics from the Action list.
4. Select an MVR6 domain.
5. Select a Port.

**Figure 412: Displaying MVR6 Statistics – Port**

**Multicast > MVR6**

Step: 7. Show Statistics Action: Show Port Statistics

Domain ID 1

Port 1

**Input Statistics**

|               |   |              |   |
|---------------|---|--------------|---|
| Report        | 0 | Drop         | 0 |
| Done          | 0 | Join Success | 0 |
| G Query       | 0 | Group        | 0 |
| G(-S)-S Query | 0 |              |   |

**Output Statistics**

|               |    |
|---------------|----|
| Report        | 12 |
| Done          | 1  |
| G Query       | 0  |
| G(-S)-S Query | 0  |

Clear Refresh

To display MVR6 protocol-related statistics for a trunk:

1. Click Multicast, MVR6.
2. Select Show Statistics from the Step list.
3. Select Show Trunk Statistics from the Action list.
4. Select an MVR6 domain.
5. Select a Trunk.

Figure 413: Displaying MVR6 Statistics – Trunk

**Multicast > MVR6**

Step: 8. Show Statistics ▼ Action: Show Trunk Statistics ▼

Domain ID 1 ▼

Trunk 1 ▼

**Input Statistics**

|               |   |              |   |
|---------------|---|--------------|---|
| Report        | 0 | Drop         | 0 |
| Done          | 0 | Join Success | 0 |
| G Query       | 0 | Group        | 0 |
| G(-S)-S Query | 0 |              |   |

**Output Statistics**

|               |   |
|---------------|---|
| Report        | 0 |
| Done          | 0 |
| G Query       | 0 |
| G(-S)-S Query | 0 |

Clear Refresh



This chapter provides information on network functions including:

- ◆ **Ping** – Sends ping message to another node on the network.
- ◆ **Trace Route** – Sends ICMP echo request packets to another node on the network.
- ◆ **Address Resolution Protocol** – Describes how to configure proxy ARP or static addresses, and how to display entries in the ARP cache.

---

## Using the Ping Function

Use the Tools > Ping page to send ICMP echo request packets to another node on the network.1-52

### Parameters

These parameters are displayed:

- ◆ **Host Name/IP Address** – Alias or IPv4/IPv6 address of the host.
- ◆ **Probe Count** – Number of packets to send. (Range: 1-16)
- ◆ **Packet Size** – Number of bytes in a packet. (Range: 32-512 bytes for IPv4, 0-1500 bytes for IPv6)

The actual packet size will be eight bytes larger than the size specified because the switch adds header information.

### Command Usage

- ◆ Use the ping command to see if another site on the network can be reached.
- ◆ The following are some results of the **ping** command:
  - *Normal response* - The normal response occurs in one to ten seconds, depending on network traffic.
  - *Destination does not respond* - If the host does not respond, a “timeout” appears in ten seconds.
  - *Destination unreachable* - The gateway for this destination indicates that the destination is unreachable.

- *Network or host unreachable* - The gateway found no corresponding entry in the route table.
- ◆ The same link-local address may be used by different interfaces/nodes in different zones (RFC 4007). Therefore, when specifying a link-local address, include zone-id information indicating the VLAN identifier after the % delimiter. For example, FE80::7272%1 identifies VLAN 1 as the interface.

### Web Interface

To ping another device on the network:

1. Click Tools, Ping.
2. Specify the target device and ping parameters.
3. Click Apply.

**Figure 414: Pinging a Network Device**

The screenshot displays the 'Tool > Ping' web interface. At the top, there's a header 'Tool > Ping'. Below it, there are three input fields: 'Host Name/IP Address' (empty), 'Probe Count (1-16)' (set to 5), and 'Data Size (IPv4 : 32-512, IPv6 : 0-1500)' (empty). To the right of the Data Size field is a 'bytes' label. Below these fields is a note: 'Note: For IPv4 Data Size, 0 - 31 changed to 32 bytes, 32 - 512 is valid input, 513 - 1500 changed to 512 bytes, < 0 or > 1500 not valid input'. At the bottom of the configuration section are 'Apply' and 'Revert' buttons. Below the configuration section is a 'Result' section. It contains a text box with the following output: 'PING to 192.168.2.99, by 5 of 32-byte payload ICMP packets, timeout is 3 seconds', followed by five lines of 'response time: 0 ms', and then 'Ping statistics for 192.168.2.99: 5 packets transmitted, 5 packets received (100%), 0 packets lost (0%)', 'Approximate round trip times: Minimum = 0 ms, Maximum = 0 ms, Average = 0 ms'.

## Using the Trace Route Function

Use the Tools > Trace Route page to show the route packets take to the specified destination.

### Parameters

These parameters are displayed:

- ◆ **Destination IP Address** – Alias or IPv4/IPv6 address of the host.
- ◆ **IPv4 Max Failures** – The maximum number of failures before which the trace route is terminated. (Fixed: 5)
- ◆ **IPv6 Max Failures** – The maximum number of failures before which the trace route is terminated. (Range: 1-255; Default: 5)

### Command Usage


- ◆ Use the trace route function to determine the path taken to reach a specified destination.
- ◆ A trace terminates when the destination responds, when the maximum timeout (TTL) is exceeded, or the maximum number of hops is exceeded.
- ◆ The trace route function first sends probe datagrams with the TTL value set at one. This causes the first router to discard the datagram and return an error message. The trace function then sends several probe messages at each subsequent TTL level and displays the round-trip time for each message. Not all devices respond correctly to probes by returning an "ICMP port unreachable" message. If the timer goes off before a response is returned, the trace function prints a series of asterisks and the "Request Timed Out" message. A long sequence of these messages, terminating only when the maximum timeout has been reached, may indicate this problem with the target device.
- ◆ The same link-local address may be used by different interfaces/nodes in different zones (RFC 4007). Therefore, when specifying a link-local address, include zone-id information indicating the VLAN identifier after the % delimiter. For example, FE80::7272%1 identifies VLAN 1 as the interface from which the trace route is sent.

### Web Interface

To trace the route to another device on the network:

1. Click Tools, Trace Route.
2. Specify the target device.
3. Click Apply.

**Figure 415: Tracing the Route to a Network Device**

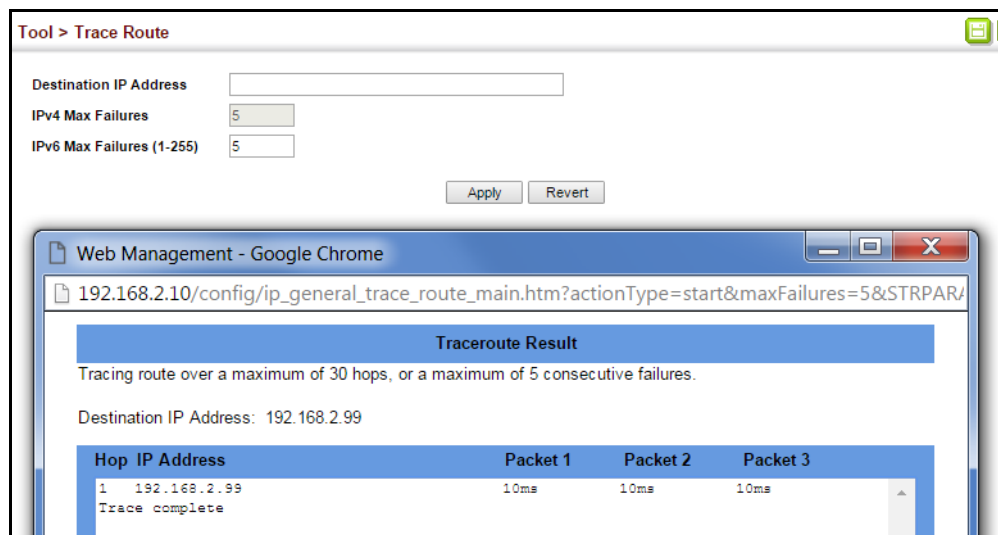

## Address Resolution Protocol

If IP routing is enabled (page 665), the router uses its routing tables to make routing decisions, and uses Address Resolution Protocol (ARP) to forward traffic from one hop to the next. ARP is used to map an IP address to a physical layer (i.e., MAC) address. When an IP frame is received by this router (or any standards-based router), it first looks up the MAC address corresponding to the destination IP address in the ARP cache. If the address is found, the router writes the MAC address into the appropriate field in the frame header, and forwards the frame on to the next hop. IP traffic passes along the path to its final destination in this way, with each routing device mapping the destination IP address to the MAC address of the next hop toward the recipient, until the packet is delivered to the final destination.

If there is no entry for an IP address in the ARP cache, the router will broadcast an ARP request packet to all devices on the network. The ARP request contains the following fields similar to that shown in this example:

**Table 34: Address Resolution Protocol**

|                         |                   |
|-------------------------|-------------------|
| destination IP address  | 10.1.0.19         |
| destination MAC address | ?                 |
| source IP address       | 10.1.0.253        |
| source MAC address      | 00-00-ab-cd-00-00 |

When devices receive this request, they discard it if their address does not match the destination IP address in the message. However, if it does match, they write their own hardware address into the destination MAC address field and send the message back to the source hardware address. When the source device receives a reply, it writes the destination IP address and corresponding MAC address into its



cache, and forwards the IP traffic on to the next hop. As long as this entry has not timed out, the router will be able forward traffic directly to the next hop for this destination without having to broadcast another ARP request.

Also, if the switch receives a request for its own IP address, it will send back a response, and also cache the MAC of the source device's IP address.

### Basic ARP Configuration


Use the Tools > ARP (Configure General) page to specify the timeout for ARP cache entries, or to enable Proxy ARP for specific VLAN interfaces.

### Command Usage

#### *Proxy ARP*

When a node in the attached subnetwork does not have routing or a default gateway configured, Proxy ARP can be used to forward ARP requests to a remote subnetwork. When the router receives an ARP request for a remote network and Proxy ARP is enabled, it determines if it has the best route to the remote network, and then answers the ARP request by sending its own MAC address to the requesting node. That node then sends traffic to the router, which in turn uses its own routing table to forward the traffic to the remote destination.

**Figure 416: Proxy ARP**

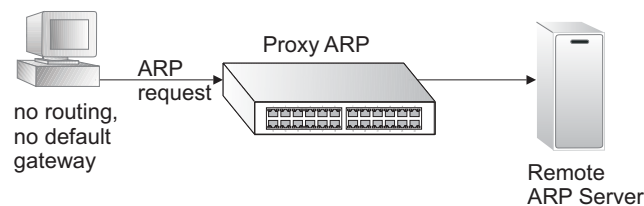

### Parameters

These parameters are displayed:

- ◆ **Proxy ARP** – Enables or disables Proxy ARP for specified VLAN interfaces, allowing a non-routing device to determine the MAC address of a host on another subnet or network. (Default: Disabled)

End stations that require Proxy ARP must view the entire network as a single network. These nodes must therefore use a smaller subnet mask than that used by the router or other relevant network devices.

Extensive use of Proxy ARP can degrade router performance because it may lead to increased ARP traffic and increased search time for larger ARP address tables.

### Web Interface

To configure the timeout for the ARP cache or to enable Proxy ARP for a VLAN (i.e., IP subnetwork):

1. Click Tools, ARP.
2. Select Configure General from the Step List.
3. Enable Proxy ARP for subnetworks that do not have routing or a default gateway.
4. Click Apply.

**Figure 417: Configuring General Settings for ARP**

The screenshot shows the 'Tools > ARP' configuration page. At the top, there is a breadcrumb 'Tools > ARP'. Below it is a 'Step:' dropdown menu set to '1. Configure General'. The main section is titled 'Proxy ARP'. It contains a 'VLAN' dropdown menu set to '1' and a 'Status' checkbox labeled 'Enabled' which is checked. At the bottom right, there are 'Apply' and 'Revert' buttons.

### Configuring Static ARP Addresses

For devices that do not respond to ARP requests or do not respond in a timely manner, traffic will be dropped because the IP address cannot be mapped to a physical address. If this occurs, use the Tools > ARP (Configure Static Address – Add) page to manually map an IP address to the corresponding physical address in the ARP cache.

### Command Usage

- ◆ The ARP cache is used to map 32-bit IP addresses into 48-bit hardware (that is, Media Access Control) addresses. This cache includes entries for hosts and other routers on local network interfaces defined on this router.
- ◆ You can define up to 128 static entries in the ARP cache.
- ◆ A static entry may need to be used if there is no response to an ARP broadcast message. For example, some applications may not respond to ARP requests or the response arrives too late, causing network operations to time out.
- ◆ Static entries will not be aged out or deleted when power is reset. You can only remove a static entry via the configuration interface.
- ◆ Static entries are only displayed on the Show page for VLANs that are up. In other words, static entries are only displayed when configured for the IP subnet of an existing VLAN, and that VLAN is linked up.

### Parameters

These parameters are displayed:

- ◆ **IP Address** – IP address statically mapped to a physical MAC address. (Valid IP addresses consist of four numbers, 0 to 255, separated by periods.)
- ◆ **MAC Address** – MAC address statically mapped to the corresponding IP address. (Valid MAC addresses are hexadecimal numbers in the format: xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx)

### Web Interface

To map an IP address to the corresponding physical address in the ARP cache:

1. Click Tools, ARP.
2. Select Configure Static Address from the Step List.
3. Select Add from the Action List.
4. Enter the IP address and the corresponding MAC address.
5. Click Apply.


**Figure 418: Configuring Static ARP Entries**

The screenshot shows a web interface titled "Tools > ARP". Below the title, there are two dropdown menus: "Step:" with the value "2. Configure Static Address" and "Action:" with the value "Add". Below these, there are two input fields: "IP Address" with the value "10.2.78.105" and "MAC Address" with the value "00-e0-0c-00-00-fd". To the right of the MAC Address field, there is a hint in parentheses: "(xx-xx-xx-xx-xx-xx or xxxxxxxxxxxx)". At the bottom right of the form, there are two buttons: "Apply" and "Revert".

To display static entries in the ARP cache:

1. Click Tools, ARP.
2. Select Configure Static Address from the Step List.
3. Select Show from the Action List.

**Figure 419: Displaying Static ARP Entries**

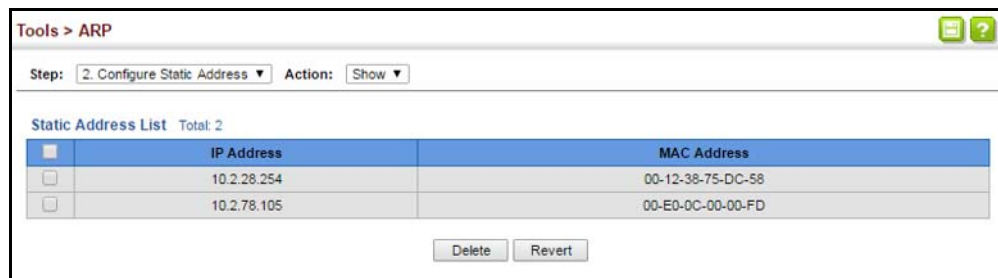

### Displaying Dynamic or Local ARP Entries


Use the Tools > ARP page to display dynamic or local entries in the ARP cache. The ARP cache contains static entries, and entries for local interfaces, including subnet, host, and broadcast addresses. However, most entries will be dynamically learned through replies to broadcast messages.

#### Web Interface

To display all dynamic and local entries in the ARP cache:

1. Click Tools, ARP.
2. Select Show Information from the Step List.
3. Click ARP Addresses.

**Figure 420: Displaying ARP Entries**

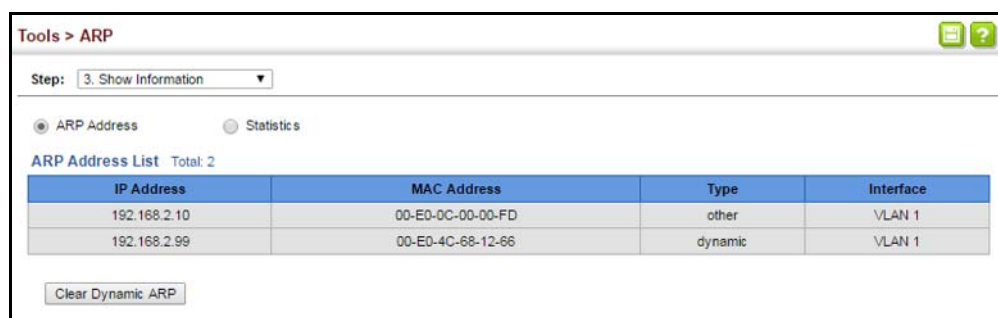

**Displaying ARP Statistics** Use the Tools > ARP (Show Information) page to display statistics for ARP messages crossing all interfaces on this switch.

### Parameters

These parameters are displayed:

**Table 35: ARP Statistics**

| Parameter        | Description   |
|------------------|---|
| Received Request | Number of ARP Request packets received by the router. |
| Received Reply   | Number of ARP Reply packets received by the router.   |
| Sent Request     | Number of ARP Request packets sent by the router.     |
| Sent Reply       | Number of ARP Reply packets sent by the router.       |

### Web Interface

To display ARP statistics:

1. Click Tools, ARP.
2. Select Show Information from the Step List.
3. Click Statistics.

**Figure 421: Displaying ARP Statistics**

Tools > ARP

Step: 3. Show Information

☐ ARP Address
☒ Statistics

### ARP Statistics

|                  |    |              |   |
|------------------|----|--------------|---|
| Received Request | 13 | Sent Request | 0 |
| Received Reply   | 0  | Sent Reply   | 1 |

Refresh



This chapter describes how to configure an IP interface for management access to the switch over the network. This switch supports both IP Version 4 and Version 6, and can be managed simultaneously through either of these address types. You can manually configure a specific IPv4 or IPv6 address, or direct the switch to obtain an IPv4 address from a BOOTP or DHCP server. An IPv6 address can either be manually configured or dynamically generated.

This chapter provides information on network functions including:

- ◆ [IPv4 Configuration](#) – Sets an IPv4 address for management access.
- ◆ [IPv6 Configuration](#) – Sets an IPv6 address for management access.

---

## Setting the Switch's IP Address (IP Version 4)

This section describes how to configure an initial IPv4 interface for management access over the network, and how to create an interface to multiple subnets. This switch supports both IPv4 and IPv6, and can be managed through either of these address types. You can manually configure a specific IPv4 or IPv6 address or direct the switch to obtain an IPv4 address from a BOOTP or DHCP server. An IPv6 global unicast or link-local address can be manually configured, or a link-local address can be dynamically generated. For information on configuring the switch with an IPv6 address, see [“Setting the Switch's IP Address \(IP Version 6\)” on page 639](#).

### Configuring IPv4 Interface Settings

Use the IP > General > Routing Interface (Add Address) page to configure an IPv4 address for the switch. An IPv4 address is obtained via DHCP by default for VLAN 1. To configure a static address, you need to change the switch's default settings to values that are compatible with your network. You may also need to establish a default gateway between the switch and management stations that exist on another network segment. To configure this device as the default gateway, use the IP > Routing > Static Routes (Add) page, set the destination address to the required interface, and the next hop to null address 0.0.0.0.

You can direct the device to obtain an address from a BOOTP or DHCP server, or manually configure a static IP address. Valid IP addresses consist of four decimal numbers, 0 to 255, separated by periods. Anything other than this format will not be accepted.

#### Command Usage

- ◆ This section describes how to configure a single local interface for initial access to the switch. To configure multiple IP interfaces, set up an IP interface for each VLAN.
- ◆ Once an IP address has been assigned to an interface, routing between different interfaces on the switch is enabled.
- ◆ To enable routing between interfaces defined on this switch and external network interfaces, you can configure static routes ([page 662](#)), or a default gateway using the IP > Routing > Static Routes (Add) page (see ["Configuring Static Routes" on page 662](#)) or the IP > IPv6 Configuration (Configure Global) page (see ["Configuring the IPv6 Default Gateway" on page 639](#)).
- ◆ The precedence for configuring IP interfaces is the IP > General > Routing Interface (Add Address) menu, and then static routes ([page 662](#)).

#### Parameters

These parameters are displayed:

- ◆ **VLAN** – ID of the configured VLAN (1-4094). By default, all ports on the switch are members of VLAN 1. However, the management station can be attached to a port belonging to any VLAN, as long as that VLAN has been assigned an IP address. (Default: VLAN 1)
- ◆ **IP Address Mode** – Specifies whether IP functionality is enabled via manual configuration (User Specified), Dynamic Host Configuration Protocol (DHCP), or Boot Protocol (BOOTP). If DHCP/BOOTP is enabled, IP will not function until a reply has been received from the server. Requests will be broadcast periodically by the switch for an IP address. DHCP/BOOTP responses can include the IP address, subnet mask, and default gateway. (Default: DHCP)
- ◆ **IP Address Type** – Specifies a primary or secondary IP address. An interface can have only one primary IP address, but can have many secondary IP addresses. In other words, secondary addresses need to be specified if more than one IP subnet can be accessed through this interface. For initial configuration, set this parameter to Primary. (Options: Primary, Secondary; Default: Primary)  
  
Note that a secondary address cannot be configured prior to setting the primary IP address, and the primary address cannot be removed if a secondary address is still present. Also, if any router or switch in a network segment uses a secondary address, all other routers/switches in that segment must also use a secondary address from the same network or subnet address space.
- ◆ **IP Address** – IP Address of the VLAN. Valid IP addresses consist of four numbers, 0 to 255, separated by periods. (Default: None)



**Note:** You can manage the switch through any configured IP interface.



- ◆ **Subnet Mask** – This mask identifies the host address bits used for routing to specific subnets. (Default: None)
- ◆ **Restart DHCP** – Requests a new IP address from the DHCP server.

### Web Interface

To set a static IPv4 address for the switch:

1. Click IP, General, Routing Interface.
2. Select Add Address from the Action list.
3. Select any configured VLAN, set IP Address Mode to “User Specified,” set IP Address Type to “Primary” if no address has yet been configured for this interface, and then enter the IP address and subnet mask.
4. Click Apply.

**Figure 422: Configuring a Static IPv4 Address**

The screenshot shows the 'IP > General > Routing Interface' configuration page. At the top, the 'Action:' dropdown is set to 'Add Address'. Below this, the 'VLAN' is set to '1'. The 'IP Address Mode' is set to 'User Specified', and the 'IP Address Type' is set to 'Primary'. The 'IP Address' field contains '192.168.0.2' and the 'Subnet Mask' field contains '255.255.255.0'. At the bottom left, there is a 'Restart DHCP' button with a link that says 'Click this button to restart DHCP service.' At the bottom right, there are 'Apply' and 'Revert' buttons.

To obtain a dynamic IPv4 address through DHCP/BOOTP for the switch:

1. Click IP, General, Routing Interface.
2. Select Add Address from the Action list.
3. Select any configured VLAN, and set IP Address Mode to “BOOTP” or “DHCP”
4. Click Apply to save your changes.
5. Then click Restart DHCP to immediately request a new address.

IP will be enabled but will not function until a BOOTP or DHCP reply is received. Requests are broadcast every few minutes using exponential backoff until IP configuration information is obtained from a BOOTP or DHCP server.

**Figure 423: Configuring a Dynamic IPv4 Address**

IP > General > Routing Interface

Action: Add Address

VLAN: 1

IP Address Mode: DHCP

IP Address Type: Primary

IP Address:

Subnet Mask:

Restart DHCP Click this button to restart DHCP service.

Apply Revert



**Note:** The switch will also broadcast a request for IP configuration settings on each power reset.

**Note:** If you lose the management connection, make a console connection to the switch and enter “show ip interface” to determine the new switch address.

**Renewing DHCP** – DHCP may lease addresses to clients indefinitely or for a specific period of time. If the address expires or the switch is moved to another network segment, you will lose management access to the switch. In this case, you can reboot the switch or submit a client request to restart DHCP service via the CLI.

If the address assigned by DHCP is no longer functioning, you will not be able to renew the IP settings via the web interface. You can only restart DHCP service via the web interface if the current address is still available.

To show the IPv4 address configured for an interface:

1. Click IP, General, Routing Interface.
2. Select Show Address from the Action list.
3. Select an entry from the VLAN list.

**Figure 424: Showing the Configured IPv4 Address for an Interface**

IP > General > Routing Interface

Action: Show Address

VLAN: 1

IP Address Mode: User Specified

Routing Interface IP List Total: 1

|                          | IP Address Type | IP Address  | Subnet Mask   |
|--------------------------|-----------------|-------------|---------------|
| <input type="checkbox"/> | Primary         | 192.168.0.2 | 255.255.255.0 |

Delete Revert

## Setting the Switch's IP Address (IP Version 6)

This section describes how to configure an IPv6 interface for management access over the network, or for creating an interface to multiple subnets. This switch supports both IPv4 and IPv6, and can be managed through either of these address types. For information on configuring the switch with an IPv4 address, see [“Setting the Switch's IP Address \(IP Version 4\)” on page 635](#).

### Command Usage

- ◆ IPv6 includes two distinct address types – link-local unicast and global unicast. A link-local address makes the switch accessible over IPv6 for all devices attached to the same local subnet. Management traffic using this kind of address cannot be passed by any router outside of the subnet. A link-local address is easy to set up, and may be useful for simple networks or basic troubleshooting tasks. However, to connect to a larger network with multiple segments, the switch must be configured with a global unicast address. Both link-local and global unicast address types can either be dynamically assigned (using the Configure Interface page) or manually configured (using the Add IPv6 Address page).
- ◆ An IPv6 global unicast or link-local address can be manually configured (using the Add IPv6 Address page), or a link-local address can be dynamically generated (using the Configure Interface page).

### Configuring the IPv6 Default Gateway

Use the IP > IPv6 Configuration (Configure Global) page to configure an IPv6 default gateway for the switch.

### Parameters

These parameters are displayed:

- ◆ **Default Gateway** – Sets the IPv6 address of the default next hop router to use when no routing information is known about an IPv6 address.
  - If no static routes are defined, you must define a gateway if the target device is located in a different subnet.


- An IPv6 default gateway can only be successfully set when a network interface that directly connects to the gateway has been configured on the switch.
- An IPv6 address must be configured according to RFC 2373 "IPv6 Addressing Architecture," using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields.

#### Web Interface

To configure an IPv6 default gateway for the switch:

1. Click IP, IPv6 Configuration.
2. Select Configure Global from the Action list.
3. Enter the IPv6 default gateway.
4. Click Apply.

**Figure 425: Configuring the IPv6 Default Gateway**

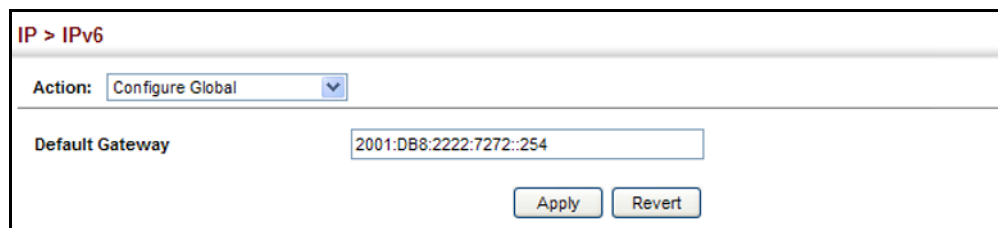

The screenshot shows a web interface for configuring IPv6 settings. At the top, it says "IP > IPv6". Below that, there is a section titled "Action:" with a dropdown menu set to "Configure Global". Underneath, there is a field labeled "Default Gateway" with the value "2001:DB8:2222:7272::254" entered. At the bottom right of the form, there are two buttons: "Apply" and "Revert".

#### Configuring IPv6 Interface Settings

Use the IP > IPv6 Configuration (Configure Interface – VLAN or RA Guard) page to configure general IPv6 settings for the selected VLAN, including auto-configuration of a global unicast interface address, and explicit configuration of a link local interface address, the MTU size, and neighbor discovery protocol settings for duplicate address detection and the neighbor solicitation interval.

#### Command Usage

- ◆ The switch must be configured with a link-local address. The switch's address auto-configuration function will automatically create a link-local address, as well as an IPv6 global address if router advertisements are detected on the local interface.
- ◆ The option to explicitly enable IPv6 creates a link-local address, but will not generate a global IPv6 address if auto-configuration is not enabled. In this case, you can manually configure a global unicast address (see ["Configuring an IPv6 Address" on page 646](#)).
- ◆ IPv6 Neighbor Discovery Protocol supersedes IPv4 Address Resolution Protocol in IPv6 networks. IPv6 nodes on the same network segment use Neighbor

Discovery to discover each other's presence, to determine each other's link-layer addresses, to find routers and to maintain reachability information about the paths to active neighbors. The key parameters used to facilitate this process are the number of attempts made to verify whether or not a duplicate address exists on the same network segment, and the interval between neighbor solicitations used to verify reachability information.

### Parameters

These parameters are displayed:

#### *VLAN Mode*

- ◆ **VLAN** – ID of a configured VLAN which is to be used for management access, or as a standard interface for a subnet. By default, all ports on the switch are members of VLAN 1. However, the management station can be attached to a port belonging to any VLAN, as long as that VLAN has been assigned an IP address. (Range: 1-4094)
- ◆ **Address Autoconfig** – Enables stateless autoconfiguration of an IPv6 address on an interface and enables IPv6 functionality on that interface. The network portion of the address is based on prefixes received in IPv6 router advertisement messages, and the host portion is automatically generated using the modified EUI-64 form of the interface identifier (i.e., the switch's MAC address).
  - If a link local address has not yet been assigned to this interface, this command will dynamically generate one. The link-local address is made with an address prefix in the range of FE80~FEBF and a host portion based the switch's MAC address in modified EUI-64 format. It will also generate a global unicast address if a global prefix is included in received router advertisements.
  - When DHCPv6 is started, the switch may attempt to acquire an IP address prefix through stateful address autoconfiguration. If router advertisements have the "other stateful configuration" flag set, the switch will attempt to acquire other non-address configuration information (such as a default gateway).
  - If auto-configuration is not selected, then an address must be manually configured using the Add IPv6 Address page described below.
- ◆ **Enable IPv6 Explicitly** – Enables IPv6 on an interface and assigns it a link-local address. Note that when an explicit address is assigned to an interface, IPv6 is automatically enabled, and cannot be disabled until all assigned addresses have been removed. (Default: Disabled)

Disabling this parameter does not disable IPv6 for an interface that has been explicitly configured with an IPv6 address.
- ◆ **MTU** – Sets the size of the maximum transmission unit (MTU) for IPv6 packets sent on an interface. (Range: 1280-65535 bytes; Default: 1500 bytes)

- The maximum value set in this field cannot exceed the MTU of the physical interface, which is currently fixed at 1500 bytes.
  - If a non-default value is configured, an MTU option is included in the router advertisements sent from this device. This option is provided to ensure that all nodes on a link use the same MTU value in cases where the link MTU is not otherwise well known.
  - IPv6 routers do not fragment IPv6 packets forwarded from other routers. However, traffic originating from an end-station connected to an IPv6 router may be fragmented.
  - All devices on the same physical medium must use the same MTU in order to operate correctly.
  - IPv6 must be enabled on an interface before the MTU can be set. If an IPv6 address has not been assigned to the switch, "N/A" is displayed in the MTU field.
- ◆ **ND DAD Attempts** – The number of consecutive neighbor solicitation messages sent on an interface during duplicate address detection. (Range: 0-600, Default: 3)
- Configuring a value of 0 disables duplicate address detection.
  - Duplicate address detection determines if a new unicast IPv6 address already exists on the network before it is assigned to an interface.
  - Duplicate address detection is stopped on any interface that has been suspended (see ["Configuring VLAN Groups" on page 161](#)). While an interface is suspended, all unicast IPv6 addresses assigned to that interface are placed in a "pending" state. Duplicate address detection is automatically restarted when the interface is administratively re-activated.
  - An interface that is re-activated restarts duplicate address detection for all unicast IPv6 addresses on the interface. While duplicate address detection is performed on the interface's link-local address, the other IPv6 addresses remain in a "tentative" state. If no duplicate link-local address is found, duplicate address detection is started for the remaining IPv6 addresses.
  - If a duplicate address is detected, it is set to "duplicate" state, and a warning message is sent to the console. If a duplicate link-local address is detected, IPv6 processes are disabled on the interface. If a duplicate global unicast address is detected, it is not used. All configuration commands associated with a duplicate address remain configured while the address is in "duplicate" state.
  - If the link-local address for an interface is changed, duplicate address detection is performed on the new link-local address, but not for any of the IPv6 global unicast addresses already associated with the interface.
- ◆ **ND NS Interval** – The interval between transmitting IPv6 neighbor solicitation messages on an interface. (Range: 1000-3600000 milliseconds)
- Default: 1000 milliseconds is used for neighbor discovery operations, 0 milliseconds is advertised in router advertisements.

This attribute specifies the interval between transmitting neighbor solicitation messages when resolving an address, or when probing the reachability of a neighbor. Therefore, avoid using very short intervals for normal IPv6 operations.

When a non-default value is configured, the specified interval is used both for router advertisements and by the router itself.

- ◆ **ND Reachable-Time** – The amount of time that a remote IPv6 node is considered reachable after some reachability confirmation event has occurred. (Range: 0-3600000 milliseconds)

Default: 30000 milliseconds is used for neighbor discovery operations, 0 milliseconds is advertised in router advertisements.

- The time limit configured by this parameter allows the router to detect unavailable neighbors. During the neighbor discover process, an IPv6 node will multicast neighbor solicitation messages to search for neighbor nodes. For a neighbor node to be considered reachable, it must respond to the neighbor soliciting node with a neighbor advertisement message to become a confirmed neighbor, after which the reachable timer will be considered in effect for subsequent unicast IPv6 layer communications.
- This time limit is included in all router advertisements sent out through an interface, ensuring that nodes on the same link use the same time value.
- Setting the time limit to 0 means that the configured time is unspecified by this router.

- ◆ **Restart DHCPv6** – When DHCPv6 is restarted, the switch may attempt to acquire an IP address prefix through stateful address autoconfiguration. If the router advertisements have the “other stateful configuration” flag set, the switch may also attempt to acquire other non-address configuration information (such as a default gateway) when DHCPv6 is restarted.

Prior to submitting a client request to a DHCPv6 server, the switch should be configured with a link-local address using the Address Autoconfig option. The state of the Managed Address Configuration flag (M flag) and Other Stateful Configuration flag (O flag) received in Router Advertisement messages will determine the information this switch should attempt to acquire from the DHCPv6 server as described below.

- Both M and O flags are set to 1:  
DHCPv6 is used for both address and other configuration settings.  
This combination is known as DHCPv6 stateful autoconfiguration, in which a DHCPv6 server assigns stateful addresses to IPv6 hosts.
- The M flag is set to 0, and the O flag is set to 1:  
DHCPv6 is used only for other configuration settings.  
Neighboring routers are configured to advertise non-link-local address prefixes from which IPv6 hosts derive stateless addresses.

This combination is known as DHCPv6 stateless autoconfiguration, in which a DHCPv6 server does not assign stateful addresses to IPv6 hosts, but does assign stateless configuration settings.

#### *RA Guard Mode*

- ◆ **Interface** – Shows port or trunk configuration page.
- ◆ **RA Guard** – Blocks incoming Router Advertisement and Router Redirect packets. (Default: Disabled)

IPv6 Router Advertisements (RA) convey information that enables nodes to auto-configure on the network. This information may include the default router address taken from the observed source address of the RA message, as well as on-link prefix information. However, note that unintended misconfigurations, or possibly malicious attacks on the network, may lead to bogus RAs being sent, which in turn can cause operational problems for hosts on the network.

RA Guard can be used to block RAs and Router Redirect (RR) messages on the specified interface. Determine which interfaces are connected to known routers, and enable RA Guard on all other untrusted interfaces.

#### **Web Interface**

To configure general IPv6 settings for the switch:

1. Click IP, IPv6 Configuration.
2. Select Configure Interface from the Action list.
3. Select VLAN mode.
4. Specify the VLAN to configure.
5. Enable address auto-configuration, or enable IPv6 explicitly to automatically configure a link-local address and enable IPv6 on the selected interface. (To manually configure the link-local address, use the Add IPv6 Address page.) Set the MTU size, the maximum number of duplicate address detection messages, the neighbor solicitation message interval, and the amount of time that a remote IPv6 node is considered reachable.
6. Click Apply.



**Figure 426: Configuring General Settings for an IPv6 Interface**

The screenshot shows the 'IP > IPv6 Configuration' page. The 'Action' dropdown is set to 'Configure Interface'. Under 'Mode', 'VLAN' is selected. The 'VLAN' dropdown is set to '1'. 'Address Autoconfig' and 'Enable IPv6 Explicitly' are both checked. The 'MTU (1280-65535)' is set to '1500' bytes. 'ND DAD Attempts (0-600)' is set to '3'. 'ND NS Interval (1000-3600000)' is set to '1000' ms. 'ND Reachable-Time (0-3600000)' is set to '30000' ms. At the bottom, there is a 'Restart DHCPv6' button and a link to 'Click this button to restart DHCPv6 service.'

To configure RA Guard for the switch:

1. Click IP, IPv6 Configuration.
2. Select Configure Interface from the Action list.
3. Select RA Guard mode.
4. Enable RA Guard for untrusted interfaces.
5. Click Apply.

**Figure 427: Configuring RA Guard for an IPv6 Interface**

The screenshot shows the 'IP > IPv6 Configuration' page with 'Mode' set to 'RA Gurad' (sic). Under 'Interface', 'Port' is selected. Below this is a 'Port List' table with 52 total ports. The table has two columns: 'Port' and 'RA Guard'. The first five ports are listed, with port 5 having 'RA Guard' checked and 'Enabled'.

| Port | RA Guard                                    |
|------|---|
| 1    | <input type="checkbox"/> Enabled            |
| 2    | <input type="checkbox"/> Enabled            |
| 3    | <input type="checkbox"/> Enabled            |
| 4    | <input type="checkbox"/> Enabled            |
| 5    | <input checked="" type="checkbox"/> Enabled |

**Configuring an IPv6 Address** Use the IP > IPv6 Configuration (Add IPv6 Address) page to configure an IPv6 interface for management access over the network, or for creating an interface to multiple subnets.

#### Command Usage

- ◆ All IPv6 addresses must be formatted according to RFC 2373 "IPv6 Addressing Architecture," using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields.
- ◆ The switch must always be configured with a link-local address. Therefore any configuration process that enables IPv6 functionality, or assigns a global unicast address to the switch, including address auto-configuration or explicitly enabling IPv6 (see ["Configuring IPv6 Interface Settings" on page 640](#)), will also automatically generate a link-local unicast address. The prefix length for a link-local address is fixed at 64 bits, and the host portion of the default address is based on the modified EUI-64 (Extended Universal Identifier) form of the interface identifier (i.e., the physical MAC address). Alternatively, you can manually configure the link-local address by entering the full address with a network prefix in the range of FE80~FEBF.
- ◆ To connect to a larger network with multiple subnets, you must configure a global unicast address. There are several alternatives to configuring this address type:
  - The global unicast address can be automatically configured by taking the network prefix from router advertisements observed on the local interface, and using the modified EUI-64 form of the interface identifier to automatically create the host portion of the address (see ["Configuring IPv6 Interface Settings" on page 640](#)).
  - It can be manually configured by specifying the entire network prefix and prefix length, and using the EUI-64 form of the interface identifier to automatically create the low-order 64 bits in the host portion of the address.
  - You can also manually configure the global unicast address by entering the full address and prefix length.
- ◆ You can configure multiple IPv6 global unicast addresses per interface, but only one link-local address per interface.
- ◆ If a duplicate link-local address is detected on the local segment, this interface is disabled and a warning message displayed on the console. If a duplicate global unicast address is detected on the network, the address is disabled on this interface and a warning message displayed on the console.
- ◆ When an explicit address is assigned to an interface, IPv6 is automatically enabled, and cannot be disabled until all assigned addresses have been removed.

## Parameters

These parameters are displayed:

- ◆ **VLAN** – ID of a configured VLAN which is to be used for management access, or for creating an interface to multiple subnets. By default, all ports on the switch are members of VLAN 1. However, the management station can be attached to a port belonging to any VLAN, as long as that VLAN has been assigned an IP address. (Range: 1-4094)
- ◆ **Address Type** – Defines the address type configured for this interface.
  - **Global** – Configures an IPv6 global unicast address with a full IPv6 address including the network prefix and host address bits, followed by a forward slash, and a decimal value indicating how many contiguous bits (from the left) of the address comprise the prefix (i.e., the network portion of the address).
  - **EUI-64** (Extended Universal Identifier) – Configures an IPv6 address for an interface using an EUI-64 interface ID in the low order 64 bits.
    - When using EUI-64 format for the low-order 64 bits in the host portion of the address, the value entered in the IPv6 Address field includes the network portion of the address, and the prefix length indicates how many contiguous bits (starting at the left) of the address comprise the prefix (i.e., the network portion of the address). Note that the value specified in the IPv6 Address field may include some of the high-order host bits if the specified prefix length is less than 64 bits. If the specified prefix length exceeds 64 bits, then the bits used in the network portion of the address will take precedence over the interface identifier.
    - IPv6 addresses are 16 bytes long, of which the bottom 8 bytes typically form a unique host identifier based on the device's MAC address. The EUI-64 specification is designed for devices that use an extended 8-byte MAC address. For devices that still use a 6-byte MAC address (also known as EUI-48 format), it must be converted into EUI-64 format by inverting the universal/local bit in the address and inserting the hexadecimal number FFFE between the upper and lower three bytes of the MAC address.

For example, if a device had an EUI-48 address of 28-9F-18-1C-82-35, the global/local bit must first be inverted to meet EUI-64 requirements (i.e., 1 for globally defined addresses and 0 for locally defined addresses), changing 28 to 2A. Then the two bytes FFFE are inserted between the OUI (i.e., organizationally unique identifier, or company identifier) and the rest of the address, resulting in a modified EUI-64 interface identifier of 2A-9F-18-FF-FE-1C-82-35.
    - This host addressing method allows the same interface identifier to be used on multiple IP interfaces of a single device, as long as those interfaces are attached to different subnets.

- **Link Local** – Configures an IPv6 link-local address.
  - The address prefix must be in the range of FE80~FEBF.
  - You can configure only one link-local address per interface.
  - The specified address replaces a link-local address that was automatically generated for the interface.

◆ **IPv6 Address** – IPv6 address assigned to this interface.

### Web Interface

To configure an IPv6 address:

1. Click IP, IPv6 Configuration.
2. Select Add IPv6 Address from the Action list.
3. Specify the VLAN to configure, select the address type, and then enter an IPv6 address and prefix length.
4. Click Apply.

**Figure 428: Configuring an IPv6 Address**

The screenshot shows the 'IP > IPv6 Configuration' web interface. At the top, there is a breadcrumb 'IP > IPv6 Configuration'. Below it, the 'Action:' dropdown menu is set to 'Add IPv6 Address'. The 'VLAN' field is a dropdown menu with '1' selected. The 'Address Type' field is a dropdown menu with 'Global' selected. The 'IPv6 Address' field is a text input containing '2001:DB8:2222:7272::72/96'. At the bottom right, there are two buttons: 'Apply' and 'Revert'.

**Showing IPv6 Addresses** Use the IP > IPv6 Configuration (Show IPv6 Address) page to display the IPv6 addresses assigned to an interface.

### Parameters

These parameters are displayed:

- ◆ **VLAN** – ID of a configured VLAN. By default, all ports on the switch are members of VLAN 1. However, the management station can be attached to a port belonging to any VLAN, as long as that VLAN has been assigned an IP address. (Range: 1-4094)
- ◆ **IPv6 Address Type** – The address type (Global, EUI-64, Link Local).
- ◆ **IPv6 Address** – An IPv6 address assigned to this interface.

In addition to the unicast addresses assigned to an interface, a node is also required to listen to the all-nodes multicast addresses FF01::1 (interface-local scope) and FF02::1 (link-local scope).

FF01::1/16 is the transient interface-local multicast address for all attached IPv6 nodes, and FF02::1/16 is the link-local multicast address for all attached IPv6 nodes. The interface-local multicast address is only used for loopback transmission of multicast traffic. Link-local multicast addresses cover the same types as used by link-local unicast addresses, including all nodes (FF02::1), all routers (FF02::2), and solicited nodes (FF02::1:FFXX:XXXX) as described below.

A node is also required to compute and join the associated solicited-node multicast addresses for every unicast and anycast address it is assigned. IPv6 addresses that differ only in the high-order bits, e.g. due to multiple high-order prefixes associated with different aggregations, will map to the same solicited-node address, thereby reducing the number of multicast addresses a node must join. In this example, FF02::1:FF90:0/104 is the solicited-node multicast address which is formed by taking the low-order 24 bits of the address and appending those bits to the prefix.

Note that the solicited-node multicast address (link-local scope FF02) is used to resolve the MAC addresses for neighbor nodes since IPv6 does not support the broadcast method used by the Address Resolution Protocol in IPv4.

These additional addresses are displayed by the “show ip interface” command described in the *CLI Reference Guide*).

- ◆ **Configuration Mode** – Indicates if this address was automatically generated or manually configured.

### Web Interface

To show the configured IPv6 addresses:

1. Click IP, IPv6 Configuration.
2. Select Show IPv6 Address from the Action list.
3. Select a VLAN from the list.

**Figure 429: Showing Configured IPv6 Addresses**

IP > IPv6 Configuration

Action: Show IPv6 Address

VLAN: 1

IPv6 Address List Total: 2

|                          | IPv6 Address Type | IPv6 Address                   | Configuration Mode |
|--------------------------|-------------------|--------------------------------|--------------------|
| <input type="checkbox"/> | Global            | 2001::2001/96                  | Manual             |
| <input type="checkbox"/> | Link Local        | fe80::7272:cfff:fe83:3466%1/64 | Auto               |

Buttons: Delete, Revert

**Showing the IPv6 Neighbor Cache** Use the IP > IPv6 Configuration (Show IPv6 Neighbor Cache) page to display the IPv6 addresses detected for neighbor devices.

### Parameters

These parameters are displayed:

**Table 36: Show IPv6 Neighbors - display description**


| Field              | Description  |
|--------------------|--|
| IPv6 Address       | IPv6 address of neighbor.  |
| Age                | The time since the address was verified as reachable (in seconds). A static entry is indicated by the value "Permanent."   |
| Link-layer Address | Physical layer MAC address.  |
| State              | <p>The following states are used for dynamic entries:</p> <ul style="list-style-type: none"><li>◆ Incomplete - Address resolution is being carried out on the entry. A neighbor solicitation message has been sent to the multicast address of the target, but it has not yet returned a neighbor advertisement message.</li><li>◆ Invalid - An invalidated mapping. Setting the state to invalid dis-associates the interface identified with this entry from the indicated mapping (RFC 4293).</li><li>◆ Reachable - Positive confirmation was received within the last ReachableTime interval that the forward path to the neighbor was functioning. While in Reachable state, the device takes no special action when sending packets.</li><li>◆ Stale - More than the ReachableTime interval has elapsed since the last positive confirmation was received that the forward path was functioning. While in Stale state, the device takes no action until a packet is sent.</li><li>◆ Delay - More than the ReachableTime interval has elapsed since the last positive confirmation was received that the forward path was functioning. A packet was sent within the last DELAY_FIRST_PROBE_TIME interval. If no reachability confirmation is received within this interval after entering the Delay state, the switch will send a neighbor solicitation message and change the state to Probe.</li><li>◆ Probe - A reachability confirmation is actively sought by re-sending neighbor solicitation messages every RetransTimer interval until confirmation of reachability is received.</li><li>◆ Unknown - Unknown state.</li></ul> <p>The following states are used for static entries:</p> <ul style="list-style-type: none"><li>◆ Incomplete - The interface for this entry is down.</li><li>◆ Permanent - Indicates a static entry.</li><li>◆ Reachable - The interface for this entry is up. Reachability detection is not applied to static entries in the IPv6 neighbor discovery cache.</li></ul> |
| VLAN               | VLAN interface from which the address was reached.   |

### Web Interface

To show neighboring IPv6 devices:

1. Click IP, IPv6 Configuration.
2. Select Show IPv6 Neighbors from the Action list.

**Figure 430: Showing IPv6 Neighbors**

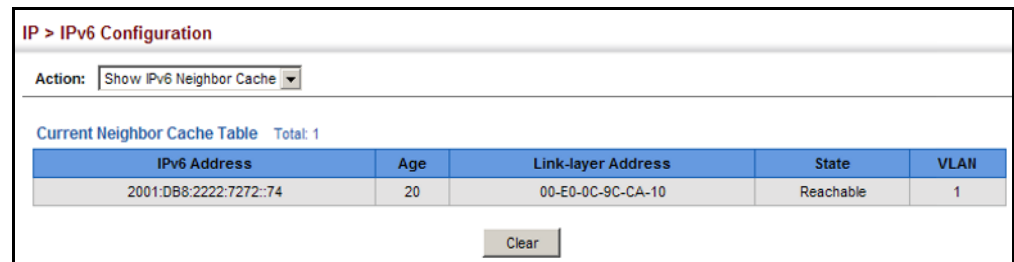

The screenshot shows the 'IP > IPv6 Configuration' page. Under the 'Action:' dropdown, 'Show IPv6 Neighbor Cache' is selected. Below this, the 'Current Neighbor Cache Table' is displayed with a 'Total: 1' count. The table has five columns: IPv6 Address, Age, Link-layer Address, State, and VLAN. One entry is shown with IPv6 Address 2001:DB8:2222:7272::74, Age 20, Link-layer Address 00-E0-0C-9C-CA-10, State Reachable, and VLAN 1. A 'Clear' button is located at the bottom right of the table area.

| IPv6 Address           | Age | Link-layer Address | State     | VLAN |
|------------------------|-----|--------------------|-----------|------|
| 2001:DB8:2222:7272::74 | 20  | 00-E0-0C-9C-CA-10  | Reachable | 1    |

### Showing IPv6 Statistics

Use the IP > IPv6 Configuration (Show Statistics) page to display statistics about IPv6 traffic passing through this switch.

### Command Usage

This switch provides statistics for the following traffic types:

- ◆ **IPv6** – The Internet Protocol for Version 6 addresses provides a mechanism for transmitting blocks of data (often called packets or frames) from a source to a destination, where these network devices (that is, hosts) are identified by fixed length addresses. The Internet Protocol also provides for fragmentation and reassembly of long packets, if necessary, for transmission through “small packet” networks.
- ◆ **ICMPv6** – Internet Control Message Protocol for Version 6 addresses is a network layer protocol that transmits message packets to report errors in processing IPv6 packets. ICMP is therefore an integral part of the Internet Protocol. ICMP messages may be used to report various situations, such as when a datagram cannot reach its destination, when the gateway does not have the buffering capacity to forward a datagram, and when the gateway can direct the host to send traffic on a shorter route. ICMP is also used by routers to feed back information about more suitable routes (that is, the next hop router) to use for a specific destination.
- ◆ **UDP** – User Datagram Protocol provides a datagram mode of packet switched communications. It uses IP as the underlying transport mechanism, providing access to IP-like services. UDP packets are delivered just like IP packets – connection-less datagrams that may be discarded before reaching their targets. UDP is useful when TCP would be too complex, too slow, or just unnecessary.

## Parameters

These parameters are displayed:

**Table 37: Show IPv6 Statistics - display description**

| Field                        | Description   |
|------------------------------|---|
| <b>IPv6 Statistics</b>       |   |
| <i>IPv6 Received</i>         |   |
| Total                        | The total number of input datagrams received by the interface, including those received in error.   |
| Header Errors                | The number of input datagrams discarded due to errors in their IPv6 headers, including version number mismatch, other format errors, hop count exceeded, IPv6 options, etc.   |
| Too Big Errors               | The number of input datagrams that could not be forwarded because their size exceeded the link MTU of outgoing interface.   |
| No Routes                    | The number of input datagrams discarded because no route could be found to transmit them to their destination.  |
| Address Errors               | The number of input datagrams discarded because the IPv6 address in their IPv6 header's destination field was not a valid address to be received at this entity. This count includes invalid addresses (e.g., ::0) and unsupported addresses (e.g., addresses with unallocated prefixes). For entities which are not IPv6 routers and therefore do not forward datagrams, this counter includes datagrams discarded because the destination address was not a local address.                          |
| Unknown Protocols            | The number of locally-addressed datagrams received successfully but discarded because of an unknown or unsupported protocol. This counter is incremented at the interface to which these datagrams were addressed which might not be necessarily the input interface for some of the datagrams.   |
| Truncated Packets            | The number of input datagrams discarded because datagram frame didn't carry enough data.  |
| Discards                     | The number of input IPv6 datagrams for which no problems were encountered to prevent their continued processing, but which were discarded (e.g., for lack of buffer space). Note that this counter does not include any datagrams discarded while awaiting re-assembly.   |
| Delivers                     | The total number of datagrams successfully delivered to IPv6 user-protocols (including ICMP). This counter is incremented at the interface to which these datagrams were addressed which might not be necessarily the input interface for some of the datagrams.  |
| Reassembly Request Datagrams | The number of IPv6 fragments received which needed to be reassembled at this interface. Note that this counter is incremented at the interface to which these fragments were addressed which might not be necessarily the input interface for some of the fragments.  |
| Reassembled Succeeded        | The number of IPv6 datagrams successfully reassembled. Note that this counter is incremented at the interface to which these datagrams were addressed which might not be necessarily the input interface for some of the fragments.   |
| Reassembled Failed           | The number of failures detected by the IPv6 re-assembly algorithm (for whatever reason: timed out, errors, etc.). Note that this is not necessarily a count of discarded IPv6 fragments since some algorithms (notably the algorithm in RFC 815) can lose track of the number of fragments by combining them as they are received. This counter is incremented at the interface to which these fragments were addressed which might not be necessarily the input interface for some of the fragments. |



**Table 37: Show IPv6 Statistics - display description** (Continued)

| Field                            | Description   |
|----------------------------------|---|
| <i>IPv6 Transmitted</i>          |   |
| Forwards Datagrams               | The number of output datagrams which this entity received and forwarded to their final destinations. In entities which do not act as IPv6 routers, this counter will include only those packets which were Source-Routed via this entity, and the Source-Route processing was successful. Note that for a successfully forwarded datagram the counter of the outgoing interface is incremented. |
| Requests                         | The total number of IPv6 datagrams which local IPv6 user-protocols (including ICMP) supplied to IPv6 in requests for transmission. Note that this counter does not include any datagrams counted in <code>ipv6IfStatsOutForwDatagrams</code> .  |
| Discards                         | The number of output IPv6 datagrams for which no problem was encountered to prevent their transmission to their destination, but which were discarded (e.g., for lack of buffer space). Note that this counter would include datagrams counted in <code>ipv6IfStatsOutForwDatagrams</code> if any such packets met this (discretionary) discard criterion.                                      |
| No Routes                        | The number of input datagrams discarded because no route could be found to transmit them to their destination.  |
| Generated Fragments              | The number of output datagram fragments that have been generated as a result of fragmentation at this output interface.   |
| Fragment Succeeded               | The number of IPv6 datagrams that have been successfully fragmented at this output interface.   |
| Fragment Failed                  | The number of IPv6 datagrams that have been discarded because they needed to be fragmented at this output interface but could not be.   |
| <b>ICMPv6 Statistics</b>         |   |
| <i>ICMPv6 received</i>           |   |
| Input                            | The total number of ICMP messages received by the interface which includes all those counted by <code>ipv6IfcmplnErrors</code> . Note that this interface is the interface to which the ICMP messages were addressed which may not be necessarily the input interface for the messages.   |
| Errors                           | The number of ICMP messages which the interface received but determined as having ICMP-specific errors (bad ICMP checksums, bad length, etc.).  |
| Destination Unreachable Messages | The number of ICMP Destination Unreachable messages received by the interface.  |
| Packet Too Big Messages          | The number of ICMP Packet Too Big messages received by the interface.   |
| Time Exceeded Messages           | The number of ICMP Time Exceeded messages received by the interface.  |
| Parameter Problem Messages       | The number of ICMP Parameter Problem messages received by the interface.  |
| Echo Request Messages            | The number of ICMP Echo (request) messages received by the interface.   |
| Echo Reply Messages              | The number of ICMP Echo Reply messages received by the interface.   |
| Router Solicit Messages          | The number of ICMP Router Solicit messages received by the interface.   |
| Router Advertisement Messages    | The number of ICMP Router Advertisement messages received by the interface.   |
| Neighbor Solicit Messages        | The number of ICMP Neighbor Solicit messages received by the interface.   |

**Table 37: Show IPv6 Statistics - display description** (Continued)

| Field  | Description   |
|--|---|
| Neighbor Advertisement Messages                | The number of ICMP Neighbor Advertisement messages received by the interface.   |
| Redirect Messages                              | The number of Redirect messages received by the interface.  |
| Group Membership Query Messages                | The number of ICMPv6 Group Membership Query messages received by the interface.   |
| Group Membership Response Messages             | The number of ICMPv6 Group Membership Response messages received by the interface.  |
| Group Membership Reduction Messages            | The number of ICMPv6 Group Membership Reduction messages received by the interface.   |
| Multicast Listener Discovery Version 2 Reports | The number of MLDv2 reports received by the interface.  |
| <i>ICMPv6 Transmitted</i>                      |   |
| Output   | The total number of ICMP messages which this interface attempted to send. Note that this counter includes all those counted by icmpOutErrors. |
| Destination Unreachable Messages               | The number of ICMP Destination Unreachable messages sent by the interface.  |
| Packet Too Big Messages                        | The number of ICMP Packet Too Big messages sent by the interface.   |
| Time Exceeded Messages                         | The number of ICMP Time Exceeded messages sent by the interface.  |
| Echo Request Messages                          | The number of ICMP Echo (request) messages sent by the interface.   |
| Echo Reply Messages                            | The number of ICMP Echo Reply messages sent by the interface.   |
| Router Solicit Messages                        | The number of ICMP Router Solicitation messages sent by the interface.  |
| Router Advertisement Messages                  | The number of ICMP Router Advertisement messages sent by the interface.   |
| Neighbor Solicit Messages                      | The number of ICMP Neighbor Solicit messages sent by the interface.   |
| Neighbor Advertisement Messages                | The number of ICMP Router Advertisement messages sent by the interface.   |
| Redirect Messages                              | The number of Redirect messages sent. For a host, this object will always be zero, since hosts do not send redirects.                         |
| Group Membership Query Messages                | The number of ICMPv6 Group Membership Query messages sent by the interface.   |
| Group Membership Response Messages             | The number of ICMPv6 Group Membership Response messages sent.   |
| Group Membership Reduction Messages            | The number of ICMPv6 Group Membership Reduction messages sent.  |
| Multicast Listener Discovery Version 2 Reports | The number of MLDv2 reports sent by the interface.  |
| <b>UDP Statistics</b>                          |   |
| Input  | The total number of UDP datagrams delivered to UDP users.   |
| No Port Errors                                 | The total number of received UDP datagrams for which there was no application at the destination port.  |

**Table 37: Show IPv6 Statistics - display description** (Continued)

| Field        | Description   |
|--------------|---|
| Other Errors | The number of received UDP datagrams that could not be delivered for reasons other than the lack of an application at the destination port. |
| Output       | The total number of UDP datagrams sent from this entity.  |

### Web Interface

To show the IPv6 statistics:

1. Click IP, IPv6 Configuration.
2. Select Show Statistics from the Action list.
3. Click IPv6, ICMPv6 or UDP.

**Figure 431: Showing IPv6 Statistics (IPv6)**

**IP > IPv6**

Action: Show Statistics

Type ☒ IPv6 ☐ ICMPv6 ☐ UDP

**IPv6 Statistics**

|                                       |    |                                 |
|---------------------------------------|----|---------------------------------|
| Total Received                        | 55 | Received Reassembled Succeeded  |
| Received Header Errors                | 0  | Received Reassembled Failed     |
| Received Too Big Errors               | 0  | Transmitted Forwards Datagrams  |
| Received No Routes                    | 0  | Transmitted Requests            |
| Received Address Errors               | 0  | Transmitted Discards            |
| Received Unknown Protocols            | 0  | Transmitted No Routes           |
| Received Truncated Packets            | 0  | Transmitted Generated Fragments |
| Received Discards                     | 0  | Transmitted Fragment Succeeded  |
| Received Delivers                     | 55 | Transmitted Fragment Failed     |
| Received Reassembly Request Datagrams | 0  |                                 |

Clear

Figure 432: Showing IPv6 Statistics (ICMPv6)

IP > IPv6 Configuration

Action: Show Statistics

Type
☐ IPv6
☒ ICMPv6
☐ UDP

### ICMPv6 Statistics

|   |   |  |   |
|---|---|--|---|
| Received Input  | 0 | Transmitted Output   | 0 |
| Received Errors   | 0 | Transmitted Destination Unreachable Messages               | 0 |
| Received Destination Unreachable Messages               | 0 | Transmitted Packet Too Big Messages                        | 0 |
| Received Packet Too Big Messages                        | 0 | Transmitted Time Exceeded Messages                         | 0 |
| Received Time Exceeded Messages                         | 0 | Transmitted Parameter Problem Message                      | 0 |
| Received Parameter Problem Messages                     | 0 | Transmitted Echo Request Messages                          | 0 |
| Received Echo Request Messages                          | 0 | Transmitted Echo Reply Messages                            | 0 |
| Received Echo Reply Messages                            | 0 | Transmitted Router Solicit Messages                        | 0 |
| Received Router Solicit Messages                        | 0 | Transmitted Router Advertisement Messages                  | 0 |
| Received Router Advertisement Messages                  | 0 | Transmitted Neighbor Solicit Messages                      | 0 |
| Received Neighbor Solicit Messages                      | 0 | Transmitted Neighbor Advertisement Messages                | 0 |
| Received Neighbor Advertisement Messages                | 0 | Transmitted Redirect Messages                              | 0 |
| Received Redirect Messages                              | 0 | Transmitted Group Membership Query Messages                | 0 |
| Received Group Membership Query Messages                | 0 | Transmitted Group Membership Response Messages             | 0 |
| Received Group Membership Response Messages             | 0 | Transmitted Group Membership Reduction Messages            | 0 |
| Received Group Membership Reduction Messages            | 0 | Transmitted Multicast Listener Discovery Version 2 Reports | 0 |
| Received Multicast Listener Discovery Version 2 Reports | 0 |  |   |

Clear

Figure 433: Showing IPv6 Statistics (UDP)

IP > IPv6

Action: Show Statistics

Type
☐ IPv6
☐ ICMPv6
☒ UDP

### UDP Statistics

|                |    |
|----------------|----|
| Input          | 10 |
| No Port Errors | 0  |
| Other Errors   | 0  |
| Output         | 1  |

Clear

## Showing the MTU for Responding Destinations

Use the IP > IPv6 Configuration (Show MTU) page to display the maximum transmission unit (MTU) cache for destinations that have returned an ICMP packet-too-big message along with an acceptable MTU to this switch.

### Parameters

These parameters are displayed:

**Table 38: Show MTU - display description**

| Field               | Description  |
|---------------------|--|
| MTU                 | Adjusted MTU contained in the ICMP packet-too-big message returned from this destination, and now used for all traffic sent along this path. |
| Since               | Time since an ICMP packet-too-big message was received from this destination.  |
| Destination Address | Address which sent an ICMP packet-too-big message.   |

### Web Interface

To show the MTU reported from other devices:

1. Click IP, IPv6 Configuration.
2. Select Show MTU from the Action list.

**Figure 434: Showing Reported MTU Values**

| IP > IPv6 Configuration       |          |                          |
|-------------------------------|----------|--------------------------|
| Action: <span>Show MTU</span> |          |                          |
| MTU Table Total: 2            |          |                          |
| MTU                           | Since    | Destination Address      |
| 1400                          | 00:04:21 | 5000:1::3                |
| 1280                          | 00:04:50 | FE80::203:A0FF:FED6:141D |



---

# General IP Routing

This chapter provides information on network functions including:

- ◆ [Static Routes](#) – Configures static routes to other network segments.
- ◆ [Routing Table](#) – Displays routing entries learned through statically configured entries.

---


## Overview

This switch supports IP routing and routing path management via static routing definitions. When IP routing is functioning, this switch acts as a wire-speed router, passing traffic between VLANs with different IP interfaces, and routing traffic to external IP networks. However, when the switch is first booted, default routing can only forward traffic between local IP interfaces. As with all traditional routers, static routing must first be configured to work.

**Initial Configuration** By default, all ports belong to the same VLAN and the switch provides only Layer 2 functionality. To segment the attached network, first create VLANs for each unique user group or application traffic ([page 161](#)), assign all ports that belong to the same group to these VLANs ([page 163](#)), and then assign an IP interface to each VLAN ([page 635](#) or [page 639](#)). By separating the network into different VLANs, it can be partitioned into subnetworks that are disconnected at Layer 2. Network traffic within the same subnet is still switched using Layer 2 switching. And the VLANs can now be interconnected (as required) with Layer 3 switching.

Each VLAN represents a virtual interface to Layer 3. You just need to provide the network address for each virtual interface, and the traffic between different subnetworks will be routed by Layer 3 switching.

**Figure 435: Virtual Interfaces and Layer 3 Routing**

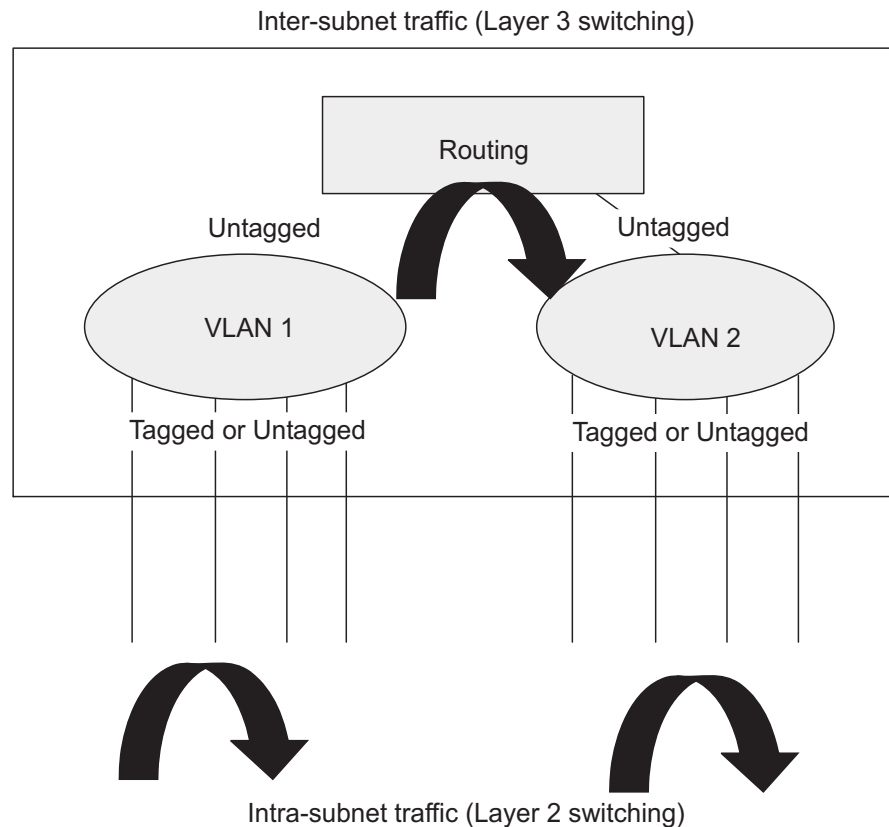

## IP Routing and Switching

IP Switching (or packet forwarding) encompasses tasks required to forward packets for both Layer 2 and Layer 3, as well as traditional routing. These functions include:

- ◆ Layer 2 forwarding (switching) based on the Layer 2 destination MAC address
- ◆ Layer 3 forwarding (routing):
  - Based on the Layer 3 destination address
  - Replacing destination/source MAC addresses for each hop
  - Incrementing the hop count
  - Decrementing the time-to-live
  - Verifying and recalculating the Layer 3 checksum

If the destination node is on the same subnetwork as the source network, then the packet can be transmitted directly without the help of a router. However, if the MAC address is not yet known to the switch, an Address Resolution Protocol (ARP) packet with the destination IP address is broadcast to get the destination MAC address from the destination node. The IP packet can then be sent directly with the destination MAC address.



If the destination belongs to a different subnet on this switch, the packet can be routed directly to the destination node. However, if the packet belongs to a subnet not included on this switch, then the packet should be sent to the next hop router (with the MAC address of the router itself used as the destination MAC address, and the destination IP address of the destination node). The router will then forward the packet to the destination node through the correct path. The router can also use the ARP protocol to find out the MAC address of the destination node of the next hop router as necessary.



**Note:** In order to perform IP switching, the switch should be recognized by other network nodes as an IP router, either by setting it as the default gateway or by redirection from another router via the ICMP process.

When the switch receives an IP packet addressed to its own MAC address, the packet follows the Layer 3 routing process. The destination IP address is checked against the Layer 3 address table. If the address is not already there, the switch broadcasts an ARP packet to all the ports on the destination VLAN to find out the destination MAC address. After the MAC address is discovered, the packet is reformatted and sent out to the destination. The reformat process includes decreasing the Time-To-Live (TTL) field of the IP header, recalculating the IP header checksum, and replacing the destination MAC address with either the MAC address of the destination node or that of the next hop router.

When another packet destined to the same node arrives, the destination MAC can be retrieved directly from the Layer 3 address table; the packet is then reformatted and sent out the destination port. IP switching can be done at wire-speed when the destination address entry is already in the Layer 3 address table.

If the switch determines that a frame must be routed, the route is calculated only during setup. Once the route has been determined, all packets in the current flow are simply switched or forwarded across the chosen path. This takes advantage of the high throughput and low latency of switching by enabling the traffic to bypass the routing engine once the path calculation has been performed.

### Routing Path Management

Routing Path Management involves the determination and updating of all the routing information required for packet forwarding, including:

- ◆ Updating the routing table
- ◆ Updating the Layer 3 switching database

### Routing Protocols

The switch supports static routing.

- ◆ Static routing requires routing information to be stored in the switch either manually or when a connection is set up by an application outside the switch.

## Configuring Static Routes

You can enter static routes in the routing table using the IP > Routing > Static Routes (Add) page. Static routes may be required to force the use of a specific route to a subnet. Static routes do not automatically change in response to changes in network topology, so you should only configure a small number of stable routes to ensure network accessibility.

### Command Usage

- ◆ Up to 512 static routes can be configured.
- ◆ If more than one static routes have the same lowest cost, the first route stored in the routing table will be used.

### Parameters

These parameters are displayed:

- ◆ **Destination IP Address** – IP address of the destination network, subnetwork, or host.
- ◆ **Net Mask** – Network mask for the associated IP subnet. This mask identifies the host address bits used for routing to specific subnets.
- ◆ **Next Hop** – IP address of the next router hop used for this route.
- ◆ **Distance** – An administrative distance indicating that this route can be overridden by other routing information. (Range: 1-255, Default: 1)

### Web Interface

To configure static routes:

1. Click IP, Routing, Static Routes.
2. Select Add from the Action List.
3. Enter the destination address, subnet mask, and next hop router.
4. Click Apply.

**Figure 436: Configuring Static Routes**

**IP > Routing > Static Routes**

Action: Add ▾

Destination IP Address:

Net Mask:

Next Hop:

Distance (1-255):  (Optional)

Apply Revert

To display static routes:

1. Click IP, Routing, Static Routes.
2. Select Show from the Action List.

**Figure 437: Displaying Static Routes**

**IP > Routing > Static Routes**

Action: Show ▾

Static Table List Total: 2

|                          | Destination IP Address | Net Mask      | Next Hop  | Distance |
|--------------------------|------------------------|---------------|-----------|----------|
| <input type="checkbox"/> | 10.2.48.0              | 255.255.255.0 | 10.2.48.1 | 5        |
| <input type="checkbox"/> | 10.5.0.0               | 255.255.0.0   | 10.5.36.1 | 2        |

Delete Revert

## Displaying the Routing Table

Use the IP > Routing > Routing Table (Show Information) page to display all routes that can be accessed via local network interfaces through static routes. If route information is available through more than one of these methods, the priority for route selection is local and then static. Also note that the route for a local interface is not enabled (i.e., listed in the routing table) unless there is at least one active link connected to that interface.

### Command Usage

- ◆ The Forwarding Information Base (FIB) contains information required to forward IP traffic. It contains the interface identifier and next hop information for each reachable destination network prefix based on the IP routing table. When routing or topology changes occur in the network, the routing table is updated, and those changes are immediately reflected in the FIB.

The FIB is distinct from the routing table (or, Routing Information Base – RIB), which holds all routing information received from routing peers. The FIB contains unique paths only. It does not contain any secondary paths. A FIB entry consists of the minimum amount of information necessary to make a

forwarding decision on a particular packet. The typical components within a FIB entry are a network prefix, a router (i.e., VLAN) interface, and next hop information.

- ◆ The Routing Table (and the “show ip route” command described in the *CLI Reference Guide*) only displays routes which are currently accessible for forwarding. The router must be able to directly reach the next hop, so the VLAN interface associated with any route entry must be up. Note that routes currently not accessible for forwarding, may still be displayed by using the “show ip route database” command described in the *CLI Reference Guide*.

### Parameters

These parameters are displayed:


- ◆ **VLAN** – VLAN identifier (i.e., configured as a valid IP subnet).
- ◆ **Destination IP Address** – IP address of the destination network, subnetwork, or host. Note that the address 0.0.0.0 indicates the default gateway for this router.
- ◆ **Net Mask** – Network mask for the associated IP subnet. This mask identifies the host address bits used for routing to specific subnets.
- ◆ **Next Hop** – The IP address of the next hop (or gateway) in this route.
- ◆ **Metric** – Cost for this interface.
- ◆ **Protocol** – The protocol which generated this route information. (Options: Local, Static, Others)

### Web Interface

To display the routing table:

1. Click IP, Routing, Routing Table.

**Figure 438: Displaying the Routing Table**

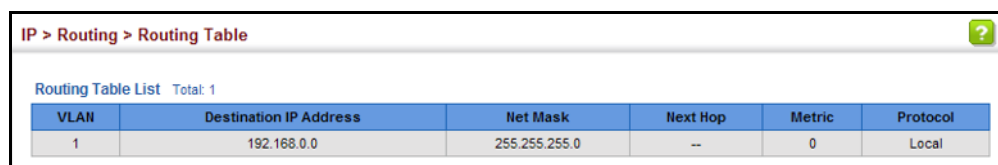

| IP > Routing > Routing Table |                        |               |          |        |          |
|------------------------------|------------------------|---------------|----------|--------|----------|
| Routing Table List Total: 1  |                        |               |          |        |          |
| VLAN                         | Destination IP Address | Net Mask      | Next Hop | Metric | Protocol |
| 1                            | 192.168.0.0            | 255.255.255.0 | --       | 0      | Local    |

This chapter describes how to configure the following unicast routing protocols:

[RIP](#) – Configures Routing Information Protocol.

---

## Overview

This switch can route unicast traffic to different subnetworks using Routing Information Protocol (RIP). It supports RIP and RIP-2 dynamic routing. These protocols exchange routing information, calculate routing tables, and can respond to changes in the status or loading of the network.

### *RIP and RIP-2 Dynamic Routing Protocols*

The RIP protocol is the most widely used routing protocol. RIP uses a distance-vector-based approach to routing. Routes are determined on the basis of minimizing the distance vector, or hop count, which serves as a rough estimate of transmission cost. Each router broadcasts its advertisement every 30 seconds, together with any updates to its routing table. This allows all routers on the network to learn consistent tables of next hop links which lead to relevant subnets.

### *Non-IP Protocol Routing*


The switch supports IP routing only. Non-IP protocols such as IPX and Appletalk cannot be routed by this switch, and will be confined within their local VLAN group unless bridged by an external router.

To coexist with a network built on multilayer switches, the subnetworks for non-IP protocols must follow the same logical boundary as that of the IP subnetworks. A separate multi-protocol router can then be used to link the subnetworks by connecting to one port from each available VLAN on the network.

## Configuring the Routing Information Protocol

The RIP protocol is the most widely used routing protocol. The RIP protocol uses a distance-vector-based approach to routing. Routes are determined on the basis of minimizing the distance vector, or hop count, which serves as a rough estimate of transmission cost. Each router broadcasts its advertisement every 30 seconds, together with any updates to its routing table. This allows all routers on the network to learn consistent tables of next hop links which lead to relevant subnets.

Figure 439: Configuring RIP

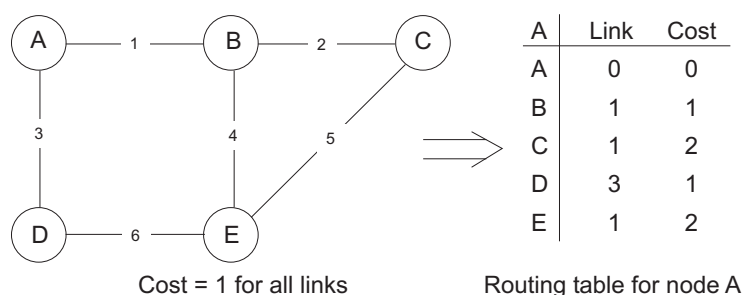

### Command Usage

- ◆ Just as Layer 2 switches use the Spanning Tree Algorithm to prevent loops, routers also use methods for preventing loops that would cause endless retransmission of data traffic. RIP utilizes the following three methods to prevent loops from occurring:
  - Split horizon – Never propagate routes back to an interface port from which they have been acquired.
  - Poison reverse – Propagate routes back to an interface port from which they have been acquired, but set the distance-vector metrics to infinity. (This provides faster convergence.)
  - Triggered updates – Whenever a route gets changed, broadcast an update message after waiting for a short random delay, but without waiting for the periodic cycle.
- ◆ RIP-2 is a compatible upgrade to RIP. RIP-2 adds useful capabilities for plain text authentication, multiple independent RIP domains, variable length subnet masks, and multicast transmissions for route advertising (RFC 1723).
- ◆ There are several serious problems with RIP that you should consider. First of all, RIP (version 1) has no knowledge of subnets, both RIP versions can take a long time to converge on a new route after the failure of a link or router during which time routing loops may occur, and its small hop count limitation of 15 restricts its use to smaller networks. Moreover, RIP (version 1) wastes valuable network bandwidth by propagating routing information via broadcasts; it also considers too few network variables to make the best routing decision.

## Configuring General Protocol Settings

Use the Routing Protocol > RIP > General (Configure) page to configure general settings and the basic timers.

RIP is used to specify how routers exchange routing information. When RIP is enabled on this router, it sends RIP messages to all devices in the network every 30 seconds (by default), and updates its own routing table when RIP messages are received from other routers. To communicate properly with other routers using RIP, you need to specify the RIP version used globally by the router, as well as the RIP send and receive versions used on specific interfaces (see [“Configuring Network Interfaces for RIP” on page 678](#)).

### Command Usage

RIP is used to specify how routers exchange routing information. When RIP is enabled on this router, it sends RIP messages to all devices in the network every 30 seconds (by default), and updates its own routing table when RIP messages are received from other routers. To communicate properly with other routers using RIP, you need to specify the RIP version used globally by the router, as well as the RIP send and receive versions used on specific interfaces ([page 678](#)).

### Parameters

These parameters are displayed:

#### *Global Settings*

- ◆ **RIP Routing Process** – Enables RIP routing globally. RIP must also be enabled on each network interface which will participate in the routing process as described under [“Specifying Network Interfaces” on page 671](#). (Default: Disabled)
- ◆ **Global RIP Version** – Specifies a RIP version used globally by the router. (Version 1, Version 2, By Interface; Default: By Interface)

When a Global RIP Version is specified, any VLAN interface not previously set to a specific Receive or Send Version ([page 678](#)) is set to the following values:

- RIP Version 1 configures previously unset interfaces to send RIPv1 compatible protocol messages and receive either RIPv1 or RIPv2 protocol messages.
- RIP Version 2 configures previously unset interfaces to use RIPv2 for both sending and receiving protocol messages.

RIP send/receive versions set on the RIP Interface settings screen ([page 678](#)) always take precedence over the settings for the Global RIP Version. However, when the Global RIP Version is set to “By Interface,” any VLAN interface not previously set to a specific receive or send version is set to the following default values:

- Receive: Accepts RIPv1 or RIPv2 packets.
- Send: Route information is broadcast to other routers with RIPv2.

- ◆ **RIP Default Metric** – Sets the default metric assigned to external routes imported from other protocols. (Range: 1-15; Default: 1)

The default metric must be used to resolve the problem of redistributing external routes with incompatible metrics.

It is advisable to use a low metric when redistributing routes from another protocol into RIP. Using a high metric limits the usefulness of external routes redistributed into RIP. For example, if a metric of 10 is defined for redistributed routes, these routes can only be advertised to routers up to 5 hops away, at which point the metric exceeds the maximum hop count of 15. By defining a low metric of 1, traffic can follow a imported route the maximum number of hops allowed within a RIP domain. However, note that using a low metric can increase the possibility of routing loops. For example, this can occur if there are multiple redistribution points and the router learns about the same external network with a better metric from a redistribution point other than that derived from the original source.

The default metric does not override the metric value set in the Redistribute screen (see [“Configuring Route Redistribution” on page 675](#)). When a metric value has not been configured in the Redistribute screen, the default metric sets the metric value to be used for all imported external routes.

- ◆ **RIP Max Prefix** – Sets the maximum number of RIP routes which can be installed in the routing table. (Range: 1-24; Default: 24)
- ◆ **Default Information Originate** – Generates a default external route into the local RIP autonomous system. (Default: Disabled)

A default route is set for every Layer 3 interface where RIP is enabled. The response packet to external queries marks each active RIP interface as a default router with the IP address 0.0.0.0.

- ◆ **Default Distance** – Defines an administrative distance for external routes learned from other routing protocols. External routes are routes for which the best path is learned from a neighbor external to the local RIP autonomous system. Routes with a distance of 255 are not installed in the routing table. (Range: 1-255; Default: 120)

Administrative distance is used by the routers to select the preferred path when there are two or more different routes to the same destination from two different routing protocols. A smaller administrative distance indicates a more reliable protocol.

Use the Routing Protocol > RIP > Distance page (see [page 677](#)) to configure the distance to a specific network address, or to configure an access list that filters networks according to the IP address of the router supplying the routing information.

- ◆ **Number of Route Changes** – The number of route changes made to the IP route database by RIP.
- ◆ **Number of Queries** – The number of responses sent to RIP queries from other systems.



### Basic Timer Settings



**Note:** The timers must be set to the same values for all routers in the network.

- ◆ **Update** – Sets the rate at which updates are sent. This is the fundamental timer used to control all basic RIP processes. (Range: 5-2147483647 seconds; Default: 30 seconds)

Setting the update timer to a short interval can cause the router to spend an excessive amount of time processing updates. On the other hand, setting it to an excessively long time will make the routing protocol less sensitive to changes in the network configuration.

- ◆ **Timeout** – Sets the time after which there have been no update messages that a route is declared dead. The route is marked inaccessible (i.e., the metric set to infinite) and advertised as unreachable. However, packets are still forwarded on this route. (Range: 90-360 seconds; Default: 180 seconds)

- ◆ **Garbage Collection** – After the *timeout* interval expires, the router waits for an interval specified by the *garbage-collection* timer before removing this entry from the routing table. This timer allows neighbors to become aware of an invalid route prior to purging. (Range: 60-240 seconds; Default: 120 seconds)

### Web Interface

To configure general settings for RIP:

1. Click Routing Protocol, RIP, General.
2. Select Configure Global from the Action list.
3. Enable RIP, set the RIP version used on unset interfaces to RIPv1 or RIPv2, set the default metric assigned to external routes, set the maximum number of routes allowed by the system, and set the basic timers.
4. Click Apply.

**Figure 440: Configuring General Settings for RIP**

The screenshot shows the 'Routing Protocol > RIP > General' configuration page. At the top, there is a breadcrumb trail and an 'Action:' dropdown menu set to 'Configure'. The page is divided into several sections:

- Global**
  - RIP Routing Process: ☒ Enabled
  - Global RIP Version:
  - RIP Default Metric (1-15):
  - RIP Max Prefix (1-24):
  - Default Information Originate: ☐ Enabled
  - Default Distance (1-255):
  - Number of Route Changes:
  - Number of Queries:
- Basic Timer**
  - Update (5-2147483647):  sec
  - Timeout (90-360):  sec
  - Garbage Collection (60-240):  sec

At the bottom right, there are 'Apply' and 'Revert' buttons.

### Clearing Entries from the Routing Table

Use the Routing Protocol > RIP > General (Clear Route) page to clear entries from the routing table based on route type or a specific network address.

#### Command Usage

- ◆ RIP must be enabled to activate this menu option.
- ◆ Clearing “All” types deletes all routes in the RIP table. To avoid deleting the entire RIP network, redistribute connected routes using the Routing Protocol > RIP > Redistribute screen ([page 675](#)) to make the RIP network a connected route. To delete the RIP routes learned from neighbors, but keep the RIP network intact, clear “RIP” types from the routing table.

#### Parameters

These parameters are displayed:

- ◆ **Clear Route By Type** – Clears entries from the RIP routing table based on the following types:
  - **All** – Deletes all entries from the routing table.
  - **Connected** – Deletes all currently connected entries.
  - **RIP** – Deletes all entries learned through the RIP.
  - **Static** – Deletes all static entries.

- ◆ **Clear Route By Network** – Clears a specific route based on its IP address and prefix length.
  - **Network IP Address** – Deletes all related entries for the specified network address.
  - **Prefix Length** – A decimal value indicating how many contiguous bits (from the left) of the address comprise the network portion of the address.

### Web Interface

To clear entries from the routing table RIP:

1. Click Routing Protocol, RIP, General.
2. Select Clear Route from the Action list.
3. When clearing routes by type, select the required type from the drop-down list. When clearing routes by network, enter a valid network address and prefix length.
4. Click Apply.

**Figure 441: Clearing Entries from the Routing Table**

Routing Protocol > RIP > General

Action: Clear Route ▼

Clear Route by: ☐ Type ☒ Network

Network IP Address: 192.168.1.0

Prefix Length (1-32): 24

Apply Revert

### Specifying Network Interfaces

Use the Routing Protocol > RIP > Network (Add) page to specify the network interfaces that will be included in the RIP routing process.

### Command Usage

- ◆ RIP only sends and receives updates on specified interfaces. If a network is not specified, the interfaces in that network will not be advertised in any RIP updates.
- ◆ No networks are specified by default.

### Parameters

These parameters are displayed:

- ◆ **By Address** – Adds a network to the RIP routing process.
  - **Subnet Address** – IP address of a network directly connected to this router. (Default: No networks are specified)
  - **Prefix Length** – A decimal value indicating how many contiguous bits (from the left) of the address comprise the network portion of the address. This mask identifies the network address bits used for the associated routing entries.
- ◆ **By VLAN** – Adds a Layer 3 VLAN to the RIP routing process. The VLAN must be configured with an IP address. (Range: 1-4094)

### Web Interface

To add a network interface to RIP:

1. Click Routing Protocol, RIP, Network.
2. Select Add from the Action list.
3. Add an interface that will participate in RIP.
4. Click Apply.

**Figure 442: Adding Network Interfaces to RIP**

Routing Protocol > RIP > Network

Action: Add ▾

By ☒ IP Address ☐ VLAN

Subnet Address

Prefix Length (1-32)

Apply Revert

To show the network interfaces using RIP:

1. Click Routing Protocol, RIP, Network.
2. Select Show from the Action list.
3. Click IP Address or VLAN.

Figure 443: Showing Network Interfaces Using RIP

Routing Protocol > RIP > Network

Action:

By ☒ IP Address ☐ VLAN

RIP Network Address List Total: 1

|                          | Subnet Address | Prefix Length |
|--------------------------|----------------|---------------|
| <input type="checkbox"/> | 10.1.0.0       | 16            |

### Specifying Passive Interfaces

Use the Routing Protocol > RIP > Passive Interface (Add) page to stop RIP from sending routing updates on the specified interface.

#### Command Usage

- ◆ Network interfaces can be configured to stop RIP broadcast and multicast messages from being sent. If the sending of routing updates is blocked on an interface, the attached subnet will still continue to be advertised to other interfaces, and updates from other routers on the specified interface will continue to be received and processed.
- ◆ This feature can be used in conjunction with the static neighbor feature (described in the next section) to control the routing updates sent to specific neighbors.

#### Parameters

These parameters are displayed:

- ◆ **VLAN** – VLAN interface on which to stop sending RIP updates. (Range: 1-4094)

#### Web Interface

To specify a passive RIP interface:

1. Click Routing Protocol, RIP, Passive Interface.
2. Select Add from the Action list.
3. Add the interface on which to stop sending RIP updates.
4. Click Apply.

Figure 444: Specifying a Passive RIP Interface

Routing Protocol > RIP > Passive Interface

Action: Add

VLAN ID (1-4094) 1

Apply Revert

To show the passive RIP interfaces:

1. Click Routing Protocol, RIP, Passive Interface.
2. Select Show from the Action list.

Figure 445: Showing Passive RIP Interfaces

Routing Protocol > RIP > Passive Interface

Action: Show

VLAN ID List Total: 1

| <input type="checkbox"/>            | VLAN ID |
|-------------------------------------|---------|
| <input checked="" type="checkbox"/> | 1       |

Delete Revert

### Specifying Static Neighbors

Use the Routing Protocol > RIP > Neighbor Address (Add) page to configure this router to directly exchange routing information with a static neighbor (specifically for point-to-point links), rather than relying on broadcast or multicast messages generated by the RIP protocol. This feature can be used in conjunction with the passive interface feature (described in the preceding section) to control the routing updates sent to specific neighbors.

#### Parameters

These parameters are displayed:

- ◆ **IP Address** – IP address of a static neighboring router with which to exchange routing information.

#### Web Interface

To specify a static RIP neighbor:

1. Click Routing Protocol, RIP, Neighbor Address.
2. Select Add from the Action list.
3. Add the address of any static neighbors which may not readily be discovered through RIP.
4. Click Apply.

Figure 446: Specifying a Static RIP Neighbor

Routing Protocol > RIP > Neighbor Address

Action: Add

IP Address: 10.2.0.254

Apply Revert

To show static RIP neighbors:

1. Click Routing Protocol, RIP, Neighbor Address.
2. Select Show from the Action list.

Figure 447: Showing Static RIP Neighbors

Routing Protocol > RIP > Neighbor Address

Action: Show

Neighbor Address List Total: 1

|                          | IP Address |
|--------------------------|------------|
| <input type="checkbox"/> | 10.2.0.254 |

Delete Revert

## Configuring Route Redistribution

Use the Routing Protocol > RIP > Redistribute (Add) page to import external routing information from other routing domains (that is, directly connected routes, protocols, or static routes) into this autonomous system.

### Parameters

These parameters are displayed:

- ◆ **Protocol** – The type of routes that can be imported include:
  - **Connected** – Imports routes that are established automatically just by enabling IP on an interface.
  - **Static** – Static routes will be imported into this routing domain.
- ◆ **Metric** – Metric assigned to all external routes for the specified protocol. (Range: 1-16; Default: the default metric as described under [“Configuring General Protocol Settings”](#) on page 667.)

A route metric must be used to resolve the problem of redistributing external routes with incompatible metrics.

When a metric value has not been configured on this page, the default-metric determines the metric value to be used for all imported external routes.

It is advisable to use a low metric when redistributing routes from another protocol into RIP. Using a high metric limits the usefulness of external routes redistributed into RIP. For example, if a metric of 10 is defined for redistributed routes, these routes can only be advertised to routers up to 5 hops away, at which point the metric exceeds the maximum hop count of 15. By defining a low metric of 1, traffic can follow an imported route the maximum number of hops allowed within a RIP domain. However, using a low metric can increase the possibility of routing loops. For example, this can occur if there are multiple redistribution points and the router learns about the same external network with a better metric from a redistribution point other than that derived from the original source.

### Web Interface

To import external routing information from other routing domains:

1. Click Routing Protocol, RIP, Redistribute.
2. Select Add from the Action list.
3. Specify the protocol types (directly connected or static) from which to import external routes, and the metric to assign to these routes.
4. Click Apply.

**Figure 448: Redistributing External Routes into RIP**

Routing Protocol > RIP > Redistribute

Action: Add ▼

Protocol: Connected ▼

Metric (1-16): 3 (Optional)

Apply Revert

To show external routes imported into RIP:

1. Click Routing Protocol, RIP, Redistribute.
2. Select Show from the Action list.

**Figure 449: Showing External Routes Redistributed into RIP**

Routing Protocol > RIP > Redistribute

Action: Show ▼

Redistribute List Total: 1

|                          | Protocol  | Metric |
|--------------------------|-----------|--------|
| <input type="checkbox"/> | Connected | 2      |

Delete Revert



### Specifying an Administrative Distance

Use the Routing Protocol > RIP > Distance (Add) page to define an administrative distance for external routes learned from other routing protocols.

#### Command Usage

- ◆ Administrative distance is used by the routers to select the preferred path when there are two or more different routes to the same destination from two different routing protocols. A smaller administrative distance indicates a more reliable protocol.
- ◆ The administrative distance is applied to all routes learned for the specified network.

#### Parameters

These parameters are displayed:

- ◆ **Distance** – Administrative distance for external routes. External routes are routes for which the best path is learned from a neighbor external to the local RIP autonomous system. Routes with a distance of 255 are not installed in the routing table. (Range: 1-255)
- ◆ **IP Address** – IP address of a route entry.
- ◆ **Subnet Mask** – This mask identifies the host address bits used for associated routing entries.

#### Web Interface

To define an administrative distance for external routes learned from other routing protocols:

1. Click Routing Protocol, RIP, Distance.
2. Select Add from the Action list.
3. Enter the distance, the external route, and optionally enter the name of an ACL to filter networks according to the IP address of the router supplying the routing information.
4. Click Apply.


**Figure 450: Setting the Distance Assigned to External Routes**

The screenshot shows a web interface titled "Routing Protocol > RIP > Distance". Below the title is a section labeled "Action:" with a dropdown menu set to "Add". The main form area contains three input fields: "Distance (1-255)" with the value "120", "IP Address" with the value "192.158.3.0", and "Subnet Mask" with the value "255.255.255.0". At the bottom right of the form are two buttons: "Apply" and "Revert".

To show the distance assigned to external routes learned from other routing protocols:

1. Click Routing Protocol, RIP, Distance.
2. Select Show from the Action list.

**Figure 451: Showing the Distance Assigned to External Routes**

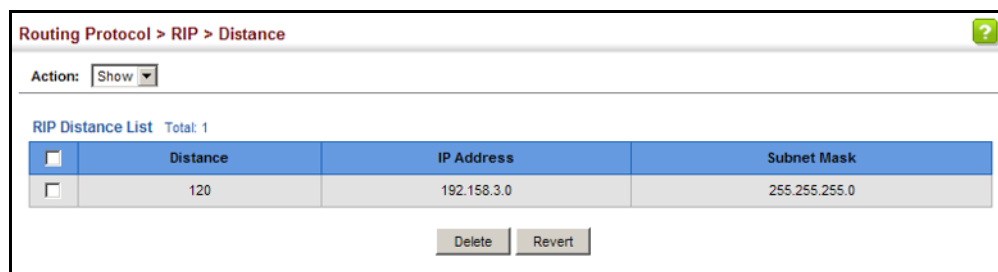

|                          | Distance | IP Address  | Subnet Mask   |
|--------------------------|----------|-------------|---------------|
| <input type="checkbox"/> | 120      | 192.158.3.0 | 255.255.255.0 |

## Configuring Network Interfaces for RIP

Use the Routing Protocol > RIP > Interface (Add) page to configure the send/receive version, authentication settings, and the loopback prevention method for each interface that participates in the RIP routing process.

### Command Usage

#### *Specifying Receive and Send Protocol Types*

- ◆ Specify the protocol message type accepted (that is, RIP version) and the message type sent (that is, RIP version or compatibility mode) for each RIP interface.
- ◆ Setting the RIP Receive Version or Send Version for an interface overrides the global setting specified in the RIP General Settings screen (see [“Configuring General Protocol Settings” on page 667](#)).
- ◆ The Send Version can be specified based on these options:
  - Use “RIPv1” or “RIPv2” if all routers in the local network are based on RIPv1 or RIPv2, respectively.
  - Use “RIPv1 Compatible” to propagate route information by broadcasting to other routers on the network using the RIPv2 advertisement list, instead of multicasting as normally required by RIPv2. (Using this mode allows older RIPv2 routers which only receive RIP broadcast messages to receive all of the information provided by RIPv2, including subnet mask, next hop and authentication information. (This is the default setting.)
  - Use “Do Not Send” to passively monitor route information advertised by other routers attached to the network.
- ◆ The Receive Version can be specified based on these options:
  - Use “RIPv1” or “RIPv2” if all routers in the local network are based on RIPv1 or RIPv2, respectively.

- Use “RIPv1 and RIPv2” if some routers in the local network are using RIPv2, but there are still some older routers using RIPv1. (This is the default setting.)
- Use “Do Not Receive” if dynamic entries are not required to be added to the routing table for an interface. (For example, when only static routes are to be allowed for a specific interface.)

#### *Protocol Message Authentication*

RIPv1 is not a secure protocol. Any device sending protocol messages from UDP port 520 will be considered a router by its neighbors. Malicious or unwanted protocol messages can be easily propagated throughout the network if no authentication is required.

RIPv2 supports authentication using a simple password or MD5 key encryption. When a router is configured to exchange authentication messages, it will insert the password into all transmitted protocol packets, and check all received packets to ensure that they contain the authorized password. If any incoming protocol messages do not contain the correct password, they are simply dropped.

For authentication to function properly, both the sending and receiving interface must be configured with the same password or authentication key.

#### *Loopback Prevention*

Just as Layer 2 switches use the Spanning Tree Algorithm to prevent loops, routers also use methods for preventing loops that would cause endless retransmission of data traffic. When protocol packets are caught in a loop, links will be congested, and protocol packets may be lost. However, the network will slowly converge to the new state. RIP supports several methods which can provide faster convergence when the network topology changes and prevent most loops from occurring.

#### **Parameters**

These parameters are displayed:

- ◆ **VLAN ID** – Layer 3 VLAN interface. This interface must be configured with an IP address and have an active link. (Range: 1-4094)
- ◆ **Send Version** – The RIP version to send on an interface.
  - **RIPv1**: Sends only RIPv1 packets.
  - **RIPv2**: Sends only RIPv2 packets.
  - **RIPv1 Compatible**: Route information is broadcast to other routers with RIPv2.
  - **Do Not Send**: Does not transmit RIP updates. Passively monitors route information advertised by other routers attached to the network.

The default depends on the setting for the Global RIP Version. (See [“Configuring General Protocol Settings” on page 667.](#))

- ◆ **Receive Version** – The RIP version to receive on an interface.
  - **RIPv1:** Accepts only RIPv1 packets.
  - **RIPv2:** Accepts only RIPv2 packets.
  - **RIPv1 and RIPv2:** Accepts RIPv1 and RIPv2 packets.
  - **Do Not Receive:** Does not accept incoming RIP packets. This option does not add any dynamic entries to the routing table for an interface.

The default depends on the setting for the Global RIP Version. (See [“Configuring General Protocol Settings” on page 667.](#))

- ◆ **Authentication Type** – Specifies the type of authentication required for exchanging RIPv2 protocol messages. (Default: No Authentication)
  - **No Authentication:** No authentication is required.
  - **Simple Password:** Requires the interface to exchange routing information with other routers based on an authorized password. (Note that authentication only applies to RIPv2.)
  - **MD5:** Message Digest 5 (MD5) authentication.

MD5 is a one-way hash algorithm that takes the authentication key and produces a 128 bit message digest or “fingerprint.” This makes it computationally infeasible to produce two messages having the same message digest, or to produce any message having a given pre-specified target message digest.
- ◆ **Authentication Key** – Specifies the key to use for authenticating RIPv2 packets. For authentication to function properly, both the sending and receiving interface must use the same password. (Range: 1-16 characters, case sensitive)
- ◆ **Instability Prevention** – Specifies the method used to reduce the convergence time when the network topology changes, and to prevent RIP protocol messages from looping back to the source router.
  - **Split Horizon** – This method never propagates routes back to an interface from which they have been acquired.
  - **Poison Reverse** – This method propagates routes back to an interface from which they have been acquired, but sets the distance-vector metrics to infinity. This provides faster convergence. (This is the default setting.)
  - **None** – No loopback prevention method is employed. If a loop occurs without using any prevention method, the hop count for a route may be gradually incremented to infinity (that is, 16) before the route is deemed unreachable.

### Web Interface

To network interface settings for RIP:

1. Click Routing Protocol, RIP, Interface.
2. Select Add from the Action list.
3. Select a Layer 3 VLAN interface to participate in RIP. Select the RIP protocol message types that will be received and sent. Select the RIP authentication method and password. And then set the loopback prevention method.
4. Click Apply.

**Figure 452: Configuring a Network Interface for RIP**

Routing Protocol > RIP > Interface

Action: Add

VLAN ID (1-4094)

Send Version RIPv1 Compatible

Receive Version RIPv1 and RIPv2

Authentication Type Simple Password

Authentication Key

Instability Prevention Poison Reverse

Apply Revert

To show the network interface settings configured for RIP:

1. Click Routing Protocol, RIP, Interface.
2. Select Show from the Action list.

**Figure 453: Showing RIP Network Interface Settings**

Routing Protocol > RIP > Interface

Action: Show

Interface Settings List Total: 2

| <input type="checkbox"/> | VLAN ID | Send Version     | Receive Version | Authentication Type | Authentication Key | Instability Prevention |
|--------------------------|---------|------------------|-----------------|---------------------|--------------------|------------------------|
| <input type="checkbox"/> | 1       | RIPv1 Compatible | RIPv1 and RIPv2 | Simple Password     | mighty             | Poison Reverse         |
| <input type="checkbox"/> | 2       | RIPv1 Compatible | RIPv1 and RIPv2 | No Authentication   |                    | Poison Reverse         |

Delete Revert

**Displaying RIP Interface Settings** Use the Routing Protocol > RIP > Statistics (Show Interface Information) page to display information about RIP interface configuration settings.

#### Parameters

These parameters are displayed:

- ◆ **Interface** – Source IP address of RIP router interface.
- ◆ **Auth Type** – The type of authentication used for exchanging RIPv2 protocol messages.
- ◆ **Send Version** – The RIP version to sent on this interface.
- ◆ **Receive Version** – The RIP version accepted on this interface.
- ◆ **Rcv Bad Packets** – Number of bad RIP packets received.
- ◆ **Rcv Bad Routes** – Number of bad routes received.
- ◆ **Send Updates** – Number of route changes.

#### Web Interface

To display RIP interface configuration settings:

1. Click Routing Protocol, RIP, Statistics.
2. Select Show Interface Information from the Action list.

Figure 454: Showing RIP Interface Settings

| Routing Protocol > RIP > Statistics             |                   |                  |                 |                 |                |              |
|---|-------------------|------------------|-----------------|-----------------|----------------|--------------|
| Action: <span>Show Interface Information</span> |                   |                  |                 |                 |                |              |
| Interface Information Total: 3                  |                   |                  |                 |                 |                |              |
| Interface                                       | Auth Type         | Send Version     | Receive Version | Rcv Bad Packets | Rcv Bad Routes | Send Updates |
| 1.2.3.4   | No Authentication | Do Not Send      | RIPv1 and RIPv2 | 10              | 2              | 124          |
| 10.1.0.1  | Simple Password   | RIPv1            | Do Not Receive  | 3               | 4              | 23           |
| 140.113.1.3                                     | MD5               | RIPv1 Compatible | RIPv2           | 5               | 5              | 65           |

**Displaying Peer Router Information** Use the Routing Protocol > RIP > Statistics (Show Peer Information) page to display information on neighboring RIP routers.

#### Parameters

These parameters are displayed:

- ◆ **Peer Address** – IP address of a neighboring RIP router.
- ◆ **Update Time** – Last time a route update was received from this peer.

- ◆ **Version** – Shows whether RIPv1 or RIPv2 packets were received from this peer.
- ◆ **Rcv Bad Packets** – Number of bad RIP packets received from this peer.
- ◆ **Rcv Bad Routes** – Number of bad routes received from this peer.

### Web Interface

To display information on neighboring RIP routers:

1. Click Routing Protocol, RIP, Statistics.
2. Select Show Peer Information from the Action list.

**Figure 455: Showing RIP Peer Information**

| Routing Protocol > RIP > Statistics |             |         |                 |                |
|-------------------------------------|-------------|---------|-----------------|----------------|
| Action: Show Peer Information       |             |         |                 |                |
| Peer Information Total: 2           |             |         |                 |                |
| Peer Address                        | Update Time | Version | Rcv Bad Packets | Rcv Bad Routes |
| 10.2.3.0                            | 10          | RIPv1   | 2               | 123            |
| 10.1.0.0                            | 113         | RIPv2   | 4               | 23             |

**Resetting RIP Statistics** Use the Routing Protocol > RIP > Statistics (Reset Statistics) page to reset all statistics for RIP protocol messages.

### Web Interface

To reset RIP statistics:

1. Click Routing Protocol, RIP, Statistics.
2. Select Reset Statistics from the Action list.
3. Click Reset.

**Figure 456: Resetting RIP Statistics**

| Routing Protocol > RIP > Statistics  |  |
|--|--|
| Action: Reset Statistics   |  |
| <input type="button" value="Reset"/> Click the button to reset RIP statistics. |  |





This chapter describes the following IP services:

- ◆ **DNS** – Configures default domain names, identifies servers to use for dynamic lookup, and shows how to configure static entries.
- ◆ **Multicast DNS** – Configures multicast DNS host name-to-address mapping on the local network without the need for a dedicated DNS server.
- ◆ **DHCP** – Configures client, relay, dynamic provisioning, and DHCP server.
- ◆ **PPPoE Intermediate Agent** – Configures PPPoE Intermediate Agent (PPPoE IA) relay parameters required for passing authentication messages between a client and broadband remote access servers.

---

## Domain Name Service

DNS service on this switch allows host names to be mapped to IP addresses using static table entries or by redirection to other name servers on the network. When a client device designates this switch as a DNS server, the client will attempt to resolve host names into IP addresses by forwarding DNS queries to the switch, and waiting for a response.

You can manually configure entries in the DNS table used for mapping domain names to IP addresses, configure default domain names, or specify one or more name servers to use for domain name to address translation.

### Configuring General DNS Service Parameters

Use the IP Service > DNS - General (Configure Global) page to enable domain lookup and set the default domain name.

#### Command Usage

- ◆ To enable DNS service on this switch, enable domain lookup status, and configure one or more name servers (see [“Configuring a List of Name Servers” on page 688](#)).
- ◆ If one or more name servers are configured, but DNS is not yet enabled and the switch receives a DHCP packet containing a DNS field with a list of DNS servers, then the switch will automatically enable DNS host name-to-address translation.

### Parameters

These parameters are displayed:

- ◆ **Domain Lookup** – Enables DNS host name-to-address translation. (Default: Disabled)
- ◆ **Default Domain Name** – Defines the default domain name appended to incomplete host names. Do not include the initial dot that separates the host name from the domain name. (Range: 1-127 alphanumeric characters)

### Web Interface

To configure general settings for DNS:

1. Click IP Service, DNS.
2. Select Configure Global from the Action list.
3. Enable domain lookup, and set the default domain name.
4. Click Apply.

Figure 457: Configuring General Settings for DNS

IP Service > DNS > General

Action: Configure Global

Domain Lookup ☒ Enabled

Default Domain Name

Apply Revert

### Configuring a List of Domain Names

Use the IP Service > DNS - General (Add Domain Name) page to configure a list of domain names to be tried in sequential order.

### Command Usage

- ◆ Use this page to define a list of domain names that can be appended to incomplete host names (i.e., host names passed from a client that are not formatted with dotted notation).
- ◆ If there is no domain list, the default domain name is used (see [“Configuring General DNS Service Parameters” on page 685](#)). If there is a domain list, the system will search it for a corresponding entry. If none is found, it will use the default domain name.
- ◆ When an incomplete host name is received by the DNS service on this switch and a domain name list has been specified, the switch will work through the domain list, appending each domain name in the list to the host name, and checking with the specified name servers for a match (see [“Configuring a List of Name Servers” on page 688](#)).

- ◆ If all name servers are deleted, DNS will automatically be disabled.

### Parameters

These parameters are displayed:

**Domain Name** – Name of the host. Do not include the initial dot that separates the host name from the domain name. (Range: 1-127 characters)

### Web Interface

To create a list domain names:

1. Click IP Service, DNS.
2. Select Add Domain Name from the Action list.
3. Enter one domain name at a time.
4. Click Apply.

**Figure 458: Configuring a List of Domain Names for DNS**

IP Service > DNS > General

Action: Add Domain Name

Domain Name: sample.com.uk

Apply Revert

To show the list domain names:

1. Click IP Service, DNS.
2. Select Show Domain Names from the Action list.

**Figure 459: Showing the List of Domain Names for DNS**

IP Service > DNS > General

Action: Show Domain Names

Domain Name List Total: 2

|                          | Domain Name |
|--------------------------|-------------|
| <input type="checkbox"/> | google.com  |
| <input type="checkbox"/> | hinet.net   |

Delete Revert

## Configuring a List of Name Servers

Use the IP Service > DNS - General (Add Name Server) page to configure a list of name servers to be tried in sequential order.

### Command Usage

- ◆ To enable DNS service on this switch, configure one or more name servers, and enable domain lookup status (see [“Configuring General DNS Service Parameters” on page 685](#)).
- ◆ When more than one name server is specified, the servers are queried in the specified sequence until a response is received, or the end of the list is reached with no response.
- ◆ If all name servers are deleted, DNS will automatically be disabled. This is done by disabling the domain lookup status.

### Parameters

These parameters are displayed:

**Name Server IP Address** – Specifies the IPv4 or IPv6 address of a domain name server to use for name-to-address resolution. Up to six IP addresses can be added to the name server list.

### Web Interface

To create a list name servers:

1. Click IP Service, DNS.
2. Select Add Name Server from the Action list.
3. Enter one name server at a time.
4. Click Apply.

Figure 460: Configuring a List of Name Servers for DNS

The screenshot shows a web interface for configuring DNS. At the top, the breadcrumb navigation reads "IP Service > DNS > General". Below this, there is a section titled "Action:" with a dropdown menu currently set to "Add Name Server". Underneath, there is a label "Name Server IP Address" followed by a text input field containing the IP address "192.168.1.10". At the bottom right of the form, there are two buttons: "Apply" and "Revert".

To show the list name servers:

1. Click IP Service, DNS.
2. Select Show Name Servers from the Action list.

**Figure 461: Showing the List of Name Servers for DNS**

The screenshot shows the 'IP Service > DNS > General' configuration page. At the top, there is a breadcrumb trail and an 'Action:' dropdown menu set to 'Show Name Servers'. Below this, a section titled 'Name Server IP Address List' indicates a total of 3 entries. A table lists the IP addresses, each with a checkbox in the first column. At the bottom right, there are 'Delete' and 'Revert' buttons.

| <input type="checkbox"/> | Name Server IP Address |
|--------------------------|------------------------|
| <input type="checkbox"/> | 192.168.1.10           |
| <input type="checkbox"/> | 140.113.5.7            |
| <input type="checkbox"/> | 10.7.231.5             |

### Configuring Static DNS Host to Address Entries

Use the IP Service > DNS - Static Host Table (Add) page to manually configure static entries in the DNS table that are used to map domain names to IP addresses.

#### Command Usage

Static entries may be used for local devices connected directly to the attached network, or for commonly used resources located elsewhere on the network.

#### Parameters

These parameters are displayed:

- ◆ **Host Name** – Name of a host device that is mapped to one or more IP addresses. (Range: 1-127 characters)
- ◆ **IP Address** – IPv4 or IPv6 address(es) associated with a host name.

#### Web Interface

To configure static entries in the DNS table:

1. Click IP Service, DNS, Static Host Table.
2. Select Add from the Action list.
3. Enter a host name and the corresponding address.
4. Click Apply.

Figure 462: Configuring Static Entries in the DNS Table

IP Service > DNS > Static Host Table

Action: Add

Host Name:

IP Address:

Apply Revert

To show static entries in the DNS table:

1. Click IP Service, DNS, Static Host Table.
2. Select Show from the Action list.

Figure 463: Showing Static Entries in the DNS Table

IP Service > DNS > Static Host Table

Action: Show

IP Address List Total: 3

| <input type="checkbox"/> | Host       | IP Address    |
|--------------------------|------------|---------------|
| <input type="checkbox"/> | yahoo.com  | 10.2.78.3     |
| <input type="checkbox"/> | hinet.net  | 124.29.31.155 |
| <input type="checkbox"/> | google.com | 133.45.211.18 |

Delete Revert

## Displaying the DNS Cache

Use the IP Service > DNS - Cache page to display entries in the DNS cache that have been learned via the designated name servers.

### Command Usage

Servers or other network devices may support one or more connections via multiple IP addresses. If more than one IP address is associated with a host name via information returned from a name server, a DNS client can try each address in succession, until it establishes a connection with the target device.

### Parameters

These parameters are displayed:

- ◆ **No.** – The entry number for each resource record.
- ◆ **Flag** – The flag is always “4” indicating a cache entry and therefore unreliable.
- ◆ **Type** – This field includes CNAME which specifies the host address for the owner, and ALIAS which specifies an alias.
- ◆ **IP** – The IP address associated with this record.


- ◆ **TTL** – The time to live reported by the name server.
- ◆ **Host** – The host name associated with this record.

### Web Interface

To display entries in the DNS cache:

1. Click IP Service, DNS, Cache.

**Figure 464: Showing Entries in the DNS Cache**

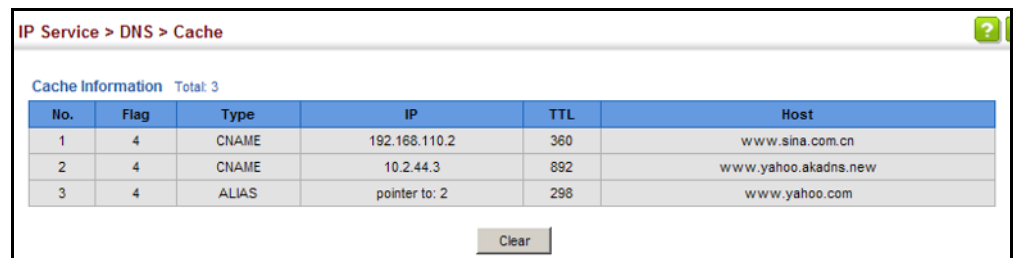

The screenshot shows a web interface titled "IP Service > DNS > Cache". Below the title is a section "Cache Information" with a sub-header "Total: 3". It contains a table with the following data:

| No. | Flag | Type  | IP            | TTL | Host                 |
|-----|------|-------|---------------|-----|----------------------|
| 1   | 4    | CNAME | 192.168.110.2 | 360 | www.sina.com.cn      |
| 2   | 4    | CNAME | 10.2.44.3     | 892 | www.yahoo.akadns.new |
| 3   | 4    | ALIAS | pointer to: 2 | 298 | www.yahoo.com        |

Below the table is a "Clear" button.

## Multicast Domain Name Service

Use the IP Service > Multicast DNS page to enable multicast DNS host name-to-address mapping on the local network without the need for a dedicated DNS server.

### Command Usage

- ◆ Multicast DNS allows a network device to choose a domain name in the local DNS name space and announce it using a special multicast IP address. This allows any user to give their computers a link-local mDNS host name of the form "single-dns-label.local." Any name ending in ".local." is therefore link-local, and names within this domain are meaningful only on the link where they originate.
- ◆ When looking for the given host's IP address, the client sends a single-shot mDNS IP multicast query message to all the hosts sharing its local network. Any DNS query for a name ending with ".local." is sent to the mDNS multicast address 224.0.0.251 (or its IPv6 equivalent FF02::FB).  
The corresponding host replies with a multicast message announcing itself. All machines in the subnet can then update their mDNS cache with the host's information sent in the reply message.
- ◆ To maintain an on-going cache of host names requires a process of continuous multicast DNS querying. This is done in several phases:
  - Probing – The DNS responder sends a probe message to the local network in order to verify that each entry its local cache is unique.

- **Announcing** – The responder sends an unsolicited mDNS Response containing all of its newly registered resource records (both shared records, and unique records that have completed the probing step).
- **Updating** – The responder repeats the Announcing step to update neighbor caches when the data for any local mDNS record changes.

### Parameters

These parameters are displayed:


- ◆ **Multicast DNS Status** – Enables multicast DNS host name-to-address mapping on the local network. (Default: Enabled)

### Web Interface

To configure multicast DNS:

1. Click IP Service, Multicast DNS.
2. Mark the check box to enable or disable mDNS as required
3. Click Apply.

**Figure 465: Configuring Multicast DNS**



The screenshot shows a web interface for configuring Multicast DNS. At the top, there is a header "Multicast DNS" in red. Below it, there is a section titled "Multicast DNS Status" with a checkbox labeled "Enabled" that is checked. At the bottom right of the section, there are two buttons: "Apply" and "Revert".

---

## Dynamic Host Configuration Protocol

Dynamic Host Configuration Protocol (DHCP) can dynamically allocate an IP address and other configuration information to network clients when they boot up. If a subnet does not already include a BOOTP or DHCP server, you can relay DHCP client requests to a DHCP server on another subnet, or configure the DHCP server on this switch to support that subnet.

When configuring the DHCP server on this switch, you can configure an address pool for each unique IP interface, or manually assign a static IP address to clients based on their hardware address or client identifier. The DHCP server can provide the host's IP address, domain name, gateway router and DNS server, information about the host's boot image including the TFTP server to access for download and the name of the boot file, or boot information for NetBIOS Windows Internet Naming Service (WINS).



**Specifying a DHCP Client Identifier** Use the IP Service > DHCP > Client page to specify the DHCP client identifier for a VLAN interface.

#### Command Usage

- ◆ The class identifier is used identify the vendor class and configuration of the switch to the DHCP server, which then uses this information to decide on how to service the client or the type of information to return.
- ◆ The general framework for this DHCP option is set out in RFC 2132 (Option 60). This information is used to convey configuration settings or other identification information about a client, but the specific string to use should be supplied by your service provider or network administrator. Options 60, 66 and 67 statements can be added to the server daemon's configuration file.

**Table 39: Options 60, 66 and 67 Statements**

| Option | Statement               |   |
|--------|-------------------------|---|
|        | Keyword                 | Parameter                                       |
| 60     | vendor-class-identifier | a string indicating the vendor class identifier |
| 66     | tftp-server-name        | a string indicating the tftp server name        |
| 67     | bootfile-name           | a string indicating the bootfile name           |

- ◆ By default, DHCP option 66/67 parameters are not carried in a DHCP server reply. To ask for a DHCP reply with option 66/67 information, the DHCP client request sent by this switch includes a "parameter request list" asking for this information. Besides, the client request also includes a "vendor class identifier" that allows the DHCP server to identify the device, and select the appropriate configuration file for download. This information is included in Option 55 and 124.

**Table 40: Options 55 and 124 Statements**

| Option | Statement                   |   |
|--------|-----------------------------|---|
|        | Keyword                     | Parameter                                       |
| 55     | dhcp-parameter-request-list | a list of parameters, separated by "            |
| 124    | vendor-class-identifier     | a string indicating the vendor class identifier |

- ◆ The server should reply with the TFTP server name and boot file name.
- ◆ Note that the vendor class identifier can be formatted in either text or hexadecimal, but the format used by both the client and server must be the same.

#### Parameters

These parameters are displayed:

- ◆ **VLAN** – ID of configured VLAN.

- ◆ **Vendor Class ID** – The following options are supported when the check box is marked to enable this feature:
  - **Default** – The default string is the model number.
  - **Text** – A text string. (Range: 1-32 characters)
  - **Hex** – A hexadecimal value. (Range: 1-64 characters)

### Web Interface

To configure a DHCP client identifier:

1. Click IP Service, DHCP, Client.
2. Mark the check box to enable this feature. Select the default setting, or the format for a vendor class identifier. If a non-default value is used, enter a text string or hexadecimal value.
3. Click Apply.

**Figure 466: Specifying a DHCP Client Identifier**

IP Service > DHCP > Client

VLAN: 1

Vendor Class ID: ☒ Default

Apply Revert


### Configuring DHCP L3 Relay Service

If the switch is configured to provide L3 DHCP Relay service use the IP Service > DHCP > Relay page to configure L3 DHCP relay service for attached host devices. To configure L2 or L3 DHCP relay service refer to the CLI Reference Guide DHCP Relay settings of the CLI Reference Guide - specifically the command: *ip dhcp l2/l3 relay*.

If L3 DHCP relay is enabled, and this switch sees a DHCP request broadcast, it inserts its own IP address into the request so that the DHCP server will know the subnet where the client is located. Then, the switch forwards the packet to the DHCP server. When the server receives the DHCP request, it allocates a free IP address for the DHCP client from its defined scope for the DHCP client's subnet, and sends a

DHCP response back to the DHCP relay agent (i.e., this switch). This switch then passes the DHCP response received from the server to the client.

**Figure 467: Layer 3 DHCP Relay Service**

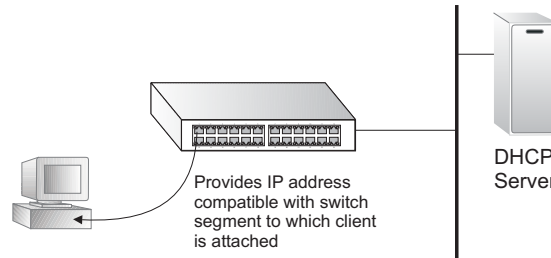

### Command Usage

- ◆ You must specify the IP address for at least one active DHCP server. Otherwise, the switch's DHCP relay agent will not be able to forward client requests to a DHCP server. Up to five DHCP servers can be specified in order of preference.

If any of the specified DHCP server addresses are not located in the same network segment with this switch, specify the default router through which this switch can reach other IP subnetworks using the [IP > Routing > Static Routes \(Add\)](#) page (see [“Configuring Static Routes” on page 662](#)) or the [IP > IPv6 Configuration \(Configure Global\)](#) page (see [“Configuring the IPv6 Default Gateway” on page 639](#)).

- ◆ DHCP relay configuration will be disabled if an active DHCP server is detected on the same network segment.

### Parameters

These parameters are displayed:

- ◆ **VLAN ID** – ID of configured VLAN.
- ◆ **Server IP Address** – Addresses of DHCP servers or relay servers to be used by the switch's DHCP relay agent in order of preference.
- ◆ **Restart DHCP Relay** – Use this button to re-initialize DHCP relay service.

### Web Interface

To configure DHCP relay service:

1. Click IP Service, DHCP, Relay (just below Client)
2. Enter up to five IP addresses for DHCP servers or relay servers in order of preference for any VLAN.
3. Click Apply.

**Figure 468: Configuring L3 DHCP Relay Service**

IP Service > DHCP > L3 Relay

Note: DHCP relay configuration will be disabled if an active DHCP server is detected on the same network segment.

DHCP Server by VLAN List Total: 1

| VLAN | Server IP Address |
|------|-------------------|
| 1    | 192.168.3.33      |

Restart DHCP Relay Click this button to restart DHCP Relay service.


Apply Revert

## Configuring DHCP L2 Relay Service

If the switch is configured to provide L2 DHCP Relay service use the second IP Service > DHCP > Relay page to configure the L2 DHCP relay service for attached host devices. To configure L2 or L3 DHCP relay service refer to the CLI Reference Guide DHCP Relay settings of the CLI Reference Guide - specifically the command: *ip dhcp l2/l3 relay*.

If L2 DHCP relay is enabled, and this switch sees a DHCP request broadcast, it will unicast the request towards the configured server(s). Further Option 82 RID and CID information can be configured to be included with the unicast DHCP Request packet. When Option 82 information is configured the switch's policy can be configured to drop, keep or replace and the extra sub-options sub-types can be included or excluded. When the server receives the DHCP request, it allocates a free IP address for the DHCP client from its defined scope for the DHCP client's subnet, and sends a DHCP response back to the network segment where this switch is situated. The switch will then eventually pass the DHCP response received from the server to the client.

**Figure 469: Layer 2 DHCP Relay Service (DHCP server on a separate network segment)**

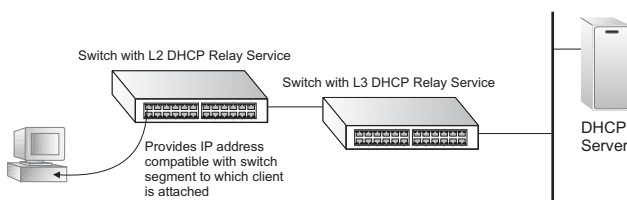

## Command Usage

- ◆ You must specify the IP address for at least one active DHCP server. Otherwise, the switch's DHCP relay agent will not be able to forward client requests to a DHCP server. Up to five DHCP servers can be specified in order of preference.
- ◆ You can exclude sending the extra subtypes when the Type and Length fields are not required to be included with the CID and RID of the option 82 information.

- ◆ DHCP relay configuration will be disabled if an active DHCP server is detected on the same network segment.
- ◆ If DHCP Option Policy is set to **drop**, the original DHCP request packet flooded to the receiving VLAN is received but not relayed to the DHCP server.
- ◆ If DHCP Option Policy is set to **replace**, the DHCP request packet's option 82 content (RID and CID sub-option) is replaced with the relay agent switch's address information. The agent then unicasts the modified DHCP Request packet to the DHCP server.
- ◆ If DHCP Option Policy is set to **keep**, the DHCP request packet's option 82 content is unmodified. However the switch address information of the relay agent is additionally added into the DHCP request packet. The agent then unicasts the modified DHCP Request packet including the original RID and CID to the DHCP server.

### Parameters

These parameters are displayed:

- ◆ **Insertion of Relay Information**– Check to enable the Option 82 information to be included with the DHCP Request forwarded to the DHCP server.
- ◆ **DHCP Option Policy**– Select either Drop, Keep or Replace.
- ◆ **DHCP Sub-option Format** – Select to include or not include the extra sub-types with the Option 82 Sub-option information.

### Web Interface

To configure L2 DHCP relay service:

1. Click IP Service, DHCP, Relay - (just above Dynamic Provision)
2. Enter up to five IP addresses for DHCP servers or relay servers in order of preference for any VLAN under the Server heading in the fields provided.
3. Select the Option 82 parameter settings under the Information heading.
4. Click Apply.

Figure 470: Configuring L2 DHCP Relay Service

IP Service > DHCP > L2 Relay

**Information**

Insertion of Relay Information ☒ Enabled

DHCP Option Policy Drop

DHCP Sub-option Format Extra Subtype Included

**Server**

Server IP Address 10.2.1.254 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0

Note: DHCP relay will not be active if an active DHCP server is detected on the same network segment.

Apply Revert

### Enabling DHCP Dynamic Provision

Use the IP Service > DHCP > Dynamic Provision to enable dynamic provisioning via DHCP.

### Command Usage

DHCPD is the daemon used by Linux to dynamically configure TCP/IP information for client systems. To support DHCP option 66/67, you have to add corresponding statements to the configuration file of DHCPD. Information on how to complete this process are described in [“Downloading a Configuration File and Other Parameters Provided by a DHCP Server”](#) as described in the *CLI Reference Guide*.

Some alternative commands which can be added to the DHCPD to complete the dynamic provisioning process are also described under the **ip dhcp dynamic-provision** command in the *CLI Reference Guide*.

By default, the parameters for DHCP option 66/67 are not carried by the reply sent from the DHCP server. To ask for a DHCP reply with option 66/67, the client can inform the server that it is interested in option 66/67 by sending a DHCP request that includes a 'parameter request list' option. Besides this, the client can also send a DHCP request that includes a 'vendor class identifier' option to the server so that the DHCP server can identify the device, and determine what information should be given to requesting device.

### Parameters

These parameters are displayed:

- ◆ **Dynamic Provision via DHCP Status** – Enables dynamic provisioning via DHCP. (Default: Disabled)


### Web Interface

To enable dynamic provisioning via DHCP:

1. Click IP Service, DHCP, Dynamic Provision.
2. Mark the Enable box if dynamic provisioning is configured on the DHCP daemon, and required for bootup.

3. Click Apply.

Figure 471: Enabling Dynamic Provisioning via DHCP

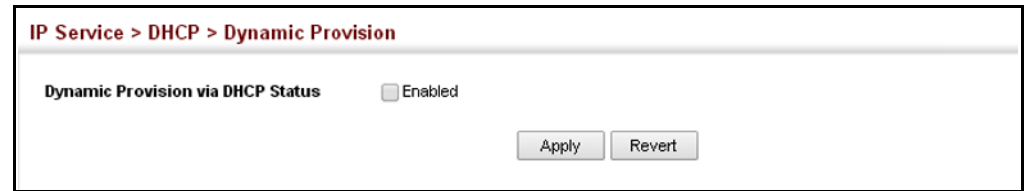


### Configuring the DHCP Server

This switch includes a Dynamic Host Configuration Protocol (DHCP) server that can assign temporary IP addresses to any attached host requesting service. It can also provide other network settings such as the domain name, default gateway, Domain Name Servers (DNS), Windows Internet Naming Service (WINS) name servers, or information on the bootup file for the host device to download.

Addresses can be assigned to clients from a common address pool configured for a specific IP interface on this switch, or fixed addresses can be assigned to hosts based on the client identifier code or MAC address.

Figure 472: DHCP Server

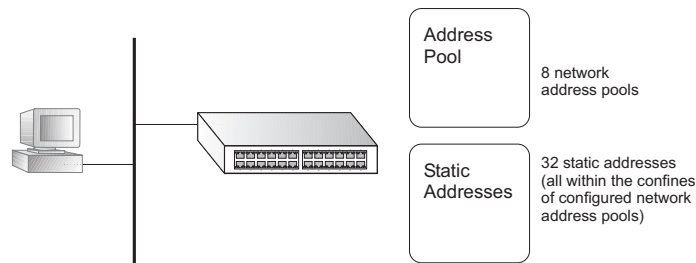

### Command Usage

- ◆ First configure any excluded addresses, including the address for this switch.
- ◆ Then configure address pools for the network interfaces. You can configure up to 8 network address pools. You can also manually bind an address to a specific client if required. However, any fixed addresses must fall within the range of an existing network address pool. You can configure up to 32 fixed host addresses (i.e., entering one address per pool).
- ◆ If the DHCP server is running, you must disable it and then re-enable it to implement any configuration changes. This can be done on the IP Service > DHCP > Server (Configure Global) page.

## Enabling the Server

Use the IP Service > DHCP > Server (Configure Global) page to enable the DHCP Server.

### Parameters

These parameters are displayed:


- ◆ **DHCP Server** – Enables or disables the DHCP server on this switch.  
(Default: Disabled)

### Web Interface

To enable the DHCP server:

1. Click IP Service, DHCP, Server.
2. Select Configure Global from the Step list.
3. Mark the Enabled box.
4. Click Apply.

Figure 473: Enabling the DHCP Server

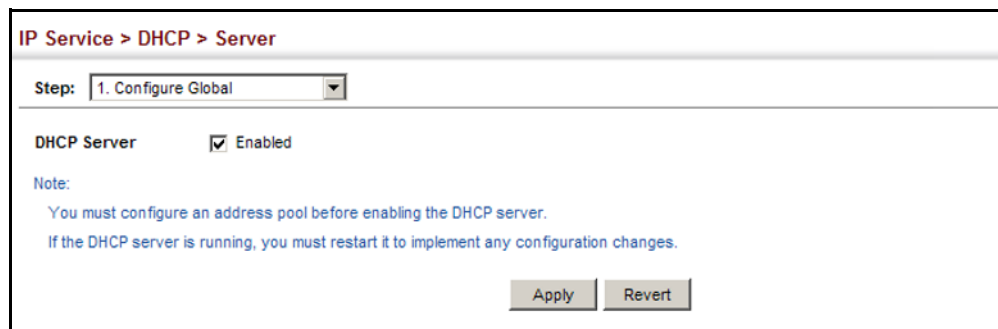

The screenshot shows the web interface for configuring the DHCP server. The breadcrumb trail at the top is "IP Service > DHCP > Server". Below this, there is a "Step:" dropdown menu with "1. Configure Global" selected. The main configuration area shows "DHCP Server" with a checkbox labeled "Enabled" that is checked. Below this, a "Note:" section contains two lines of text: "You must configure an address pool before enabling the DHCP server." and "If the DHCP server is running, you must restart it to implement any configuration changes." At the bottom right, there are two buttons: "Apply" and "Revert".

## Setting Excluded Addresses

Use the IP Service > DHCP > Server (Configure Excluded Addresses – Add) page to specify the IP addresses that should not be assigned to clients.

### Parameters

These parameters are displayed:

- ◆ **Start IP Address** – Specifies a single IP address or the first address in a range that the DHCP server should not assign to DHCP clients.
- ◆ **End IP Address** – The last address in a range that the DHCP server should not assign to DHCP clients.



**Note:** Be sure you exclude the address for this switch and other key network devices.



### Web Interface

To configure IP addresses excluded for DHCP clients:

1. Click IP Service, DHCP, Server.
2. Select Configure Excluded Addresses from the Step list.
3. Select Add from the Action list.
4. Enter a single address or an address range.
5. Click Apply.

Figure 474: Configuring Excluded Addresses on the DHCP Server

IP Service > DHCP > Server

Step: 2. Configure Excluded Address Action: Add

Start IP Address: 10.1.0.250

End IP Address: 10.1.0.254 (optional)

Apply Revert

To show the IP addresses excluded for DHCP clients:

1. Click IP Service, DHCP, Server.
2. Select Configure Excluded Addresses from the Step list.
3. Select Show from the Action list.

Figure 475: Showing Excluded Addresses on the DHCP Server

IP Service > DHCP > Server

Step: 2. Configure Excluded Address Action: Show

DHCP Excluded Address List Total: 1

|                          | Start IP Address | End IP Address |
|--------------------------|------------------|----------------|
| <input type="checkbox"/> | 10.1.0.250       | 10.1.0.254     |

Delete Revert

### Configuring Address Pools

Use the IP Service > DHCP > Server (Configure Pool – Add) page configure IP address pools for each IP interface that will provide addresses to attached clients via the DHCP server.

### Command Usage

- ◆ First configure address pools for the network interfaces. Then you can manually bind an address to a specific client if required. However, note that any static host address must fall within the range of an existing network address pool.

You can configure up to 8 network address pools, and up to 32 manually bound host address pools (i.e., one address per host pool). Just note that any address specified in a host address pool must fall within the range of a configured network address pool.

- ◆ When a client request is received, the switch first checks for a network address pool matching the gateway where the request originated (i.e., if the request was forwarded by a relay server). If there is no gateway in the client request (i.e., the request was not forwarded by a relay server), the switch searches for a network pool matching the interface through which the client request was received. It then searches for a manually configured host address that falls within the matching network pool. If no manually configured host address is found, it assigns an address from the matching network address pool. However, if no matching address pool is found the request is ignored.
- ◆ When searching for a manual binding, the switch compares the client identifier and then the hardware address for DHCP clients. Since BOOTP clients cannot transmit a client identifier, you must configure a hardware address for this host type. If no manual binding has been specified for a host entry with a hardware address or client identifier, the switch will assign an address from the first matching network pool.
- ◆ If the subnet mask is not specified for network or host address pools, the class A, B, or C natural mask is used (see [“Specifying Network Interfaces” on page 703](#)). The DHCP server assumes that all host addresses are available. You can exclude subsets of the address space by using the IP Service > DHCP > Server (Configure Excluded Addresses – Add) page.

### Parameters

These parameters are displayed:

#### *Creating a New Address Pool*

- ◆ **Pool Name** – A string or integer. (Range: 1-8 characters)
- ◆ **Type** – Sets the address pool type to Network or Host.

#### *Setting Parameters for a Network Pool*

- ◆ **IP** – The IP address of the DHCP address pool.
- ◆ **Subnet Mask** – The bit combination that identifies the network (or subnet) and the host portion of the DHCP address pool.

#### *Setting Parameters for a Static Host*

- ◆ **IP** – The IP address to assign to the host.
- ◆ **Subnet Mask** – Specifies the network mask of the client.
- ◆ **Client-Identifier** – A unique designation for the client device, either a text string (1-15 characters) or hexadecimal value. The information included in the

identifier is based on RFC 2132 Option 60, and must be unique for all clients in the same administrative domain.

- ◆ **Hardware Address** – Specifies the MAC address and protocol used on the client. (Options: Ethernet, IEEE802, FDDI, None; Default: Ethernet)

#### *Setting Optional Parameters*

- ◆ **Default Router** – The IP address of the primary and alternate gateway router. The IP address of the router should be on the same subnet as the client.
- ◆ **DNS Server** – The IP address of the primary and alternate DNS server. DNS servers must be configured for a DHCP client to map host names to IP addresses.
- ◆ **Netbios Server** – IP address of the primary and alternate NetBIOS Windows Internet Naming Service (WINS) name server used for Microsoft DHCP clients.
- ◆ **Netbios Type** – NetBIOS node type for Microsoft DHCP clients. (Options: Broadcast, Hybrid, Mixed, Peer to Peer; Default: Hybrid)
- ◆ **Domain Name** – The domain name of the client. (Range: 1-128 characters)
- ◆ **Bootfile** – The default boot image for a DHCP client. This file should be placed on the Trivial File Transfer Protocol (TFTP) server specified as the Next Server.
- ◆ **Next Server** – The IP address of the next server in the boot process, which is typically a Trivial File Transfer Protocol (TFTP) server.
- ◆ **Lease Time** – The duration that an IP address is assigned to a DHCP client. (Options: Finite, Infinite; Default: Infinite)  
  
The lease time configured by this attribute will be overridden by a DHCP client request that includes an Option 51 lease time.

#### **Web Interface**

To configure DHCP address pools:

1. Click IP Service, DHCP, Server.
2. Select Configure Pool from the Step list.
3. Select Add from the Action list.
4. Input a Pool Name and click Apply.
5. Select Configure Detail from the Action list.
6. Set the pool Type to Network or Host.
7. Enter the IP address and subnet mask for a network pool or host. If configuring a static binding for a host, enter the client identifier or hardware address for the

host device. Configure the optional parameters such as a gateway server and DNS server.

8. Click Apply.

Figure 476: Configuring DHCP Server Address Pools (Network)

The screenshot shows the configuration page for a DHCP server address pool of type 'Network'. The breadcrumb is 'IP Service > DHCP > Server'. The 'Step' is '3. Configure Pool' and the 'Action' is 'Configure Detail'. The pool name is 'tps'. The IP is '10.1.0.0' and the subnet mask is '255.255.255.0'. Under the '<<Option>>' section, the following options are configured: Default Router (10.1.0.253), DNS Server (10.2.3.4), Netbios Server (10.1.0.33), Netbios Type (Hybrid), Bootfile (wme.bat), Lease Time (Infinite), Default Router 2 (0.0.0.0), DNS Server 2 (0.0.0.0), Netbios Server 2 (0.0.0.0), Domain Name (example.com), and Next Server (10.1.0.21). 'Apply' and 'Revert' buttons are at the bottom right.

| IP Service > DHCP > Server |                   |
|----------------------------|-------------------|
| Step:                      | 3. Configure Pool |
| Action:                    | Configure Detail  |
| Pool Name                  | tps               |
| Type                       | Network           |
| IP                         | 10.1.0.0          |
| Subnet Mask                | 255.255.255.0     |
| <<Option>>                 |                   |
| Default Router             | 10.1.0.253        |
| DNS Server                 | 10.2.3.4          |
| Netbios Server             | 10.1.0.33         |
| Netbios Type               | Hybrid            |
| Bootfile                   | wme.bat           |
| Lease Time                 | Infinite          |
| Default Router 2           | 0.0.0.0           |
| DNS Server 2               | 0.0.0.0           |
| Netbios Server 2           | 0.0.0.0           |
| Domain Name                | example.com       |
| Next Server                | 10.1.0.21         |
| Apply Revert               |                   |

Figure 477: Configuring DHCP Server Address Pools (Host)


The screenshot shows the configuration page for a DHCP server address pool of type 'Host'. The breadcrumb is 'IP Service > DHCP > Server'. The 'Step' is '3. Configure Pool' and the 'Action' is 'Configure Detail'. The pool name is 'mgr'. The IP is '10.1.0.19' and the subnet mask is '255.255.255.0'. The client identifier is 'bear' and the hardware address is '00-e0-29-34-26'. Under the '<<Option>>' section, the following options are configured: Default Router (10.1.0.253), DNS Server (10.2.3.4), Netbios Server (0.0.0.0), Netbios Type (Hybrid), Bootfile (wme.bat), Lease Time (Infinite), Default Router 2 (0.0.0.0), DNS Server 2 (0.0.0.0), Netbios Server 2 (0.0.0.0), Domain Name (example.com), and Next Server (10.1.0.21). 'Apply' and 'Revert' buttons are at the bottom right.

| IP Service > DHCP > Server |   |
|----------------------------|---|
| Step:                      | 3. Configure Pool                               |
| Action:                    | Configure Detail                                |
| Pool Name                  | mgr   |
| Type                       | Host  |
| IP                         | 10.1.0.19                                       |
| Subnet Mask                | 255.255.255.0                                   |
| Client Identifier          | bear  |
| Hardware Address           | 00-e0-29-34-26 (xx-xx-xx-xx-xx or xxxxxxxxxxxx) |
| <<Option>>                 |   |
| Default Router             | 10.1.0.253                                      |
| DNS Server                 | 10.2.3.4  |
| Netbios Server             | 0.0.0.0   |
| Netbios Type               | Hybrid  |
| Bootfile                   | wme.bat   |
| Lease Time                 | Infinite  |
| Default Router 2           | 0.0.0.0   |
| DNS Server 2               | 0.0.0.0   |
| Netbios Server 2           | 0.0.0.0   |
| Domain Name                | example.com                                     |
| Next Server                | 10.1.0.21                                       |
| Apply Revert               |   |

To show the configured DHCP address pools:

1. Click IP Service, DHCP, Server.
2. Select Configure Pool from the Step list.
3. Select Show from the Action list.

**Figure 478: Showing Configured DHCP Server Address Pools**

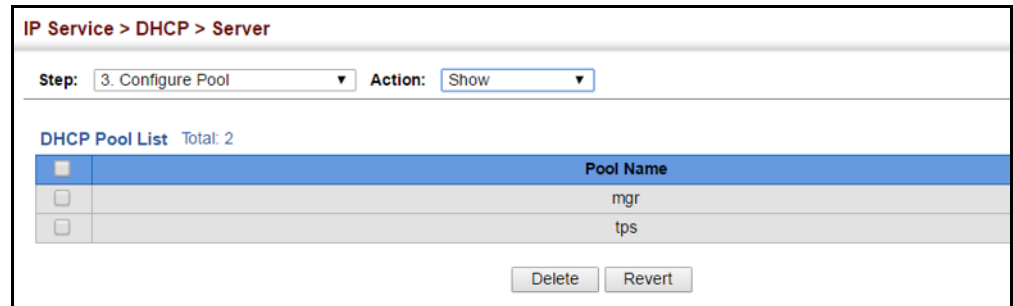

### Displaying Address Bindings

Use the IP Service > DHCP > Server (Show IP Binding) page display the host devices which have acquired an IP address from this switch's DHCP server.

#### Parameters

These parameters are displayed:


- ◆ **IP Address** – IP address assigned to host.
- ◆ **MAC Address** – MAC address of host.
- ◆ **Lease Time** – Duration that this IP address can be used by the host.
- ◆ **Start Time** – Time this address was assigned by the switch.

#### Web Interface

To show the addresses assigned to DHCP clients:

1. Click IP Service, DHCP, Server.
2. Select Show IP Binding from the Step list.

Figure 479: Shows Addresses Assigned by the DHCP Server

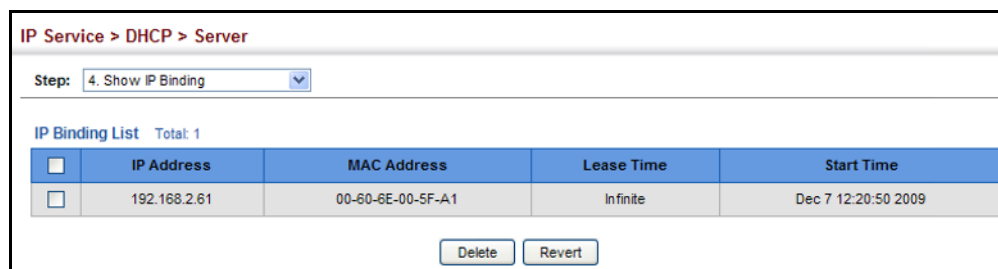

The screenshot shows the 'IP Service > DHCP > Server' configuration page. At the top, there is a breadcrumb trail and a 'Step:' dropdown menu set to '4. Show IP Binding'. Below this is a section titled 'IP Binding List' with a 'Total: 1' indicator. It contains a table with four columns: 'IP Address', 'MAC Address', 'Lease Time', and 'Start Time'. There is a checkbox in the first column. The table has one data row. At the bottom of the table are 'Delete' and 'Revert' buttons.

| <input type="checkbox"/> | IP Address   | MAC Address       | Lease Time | Start Time          |
|--------------------------|--------------|-------------------|------------|---------------------|
| <input type="checkbox"/> | 192.168.2.61 | 00-60-6E-00-5F-A1 | Infinite   | Dec 7 12:20:50 2009 |

## Configuring DHCPv6 Relay

Use IP Service > DHCPv6 > Relay (Add) page to enable the switch as a DHCPv6 Relay Agent and configure destination addresses or VLAN IDs to which client DHCPv6 messages are forwarded. When the relay agent is enabled on a specified VLAN, the switch listens to UDP port 547 for DHCPv6 messages on that VLAN. The agent will forward the messages to the configured unicast addresses or to a multicast address on configured VLANs or all VLANs.

### Command Usage

- ◆ When the unicast addresses of the DHCPv6 servers or other relay agents are known, configure the addresses for each VLAN that will use the IPv6 DHCP relay service.
- ◆ Up to five DHCPv6 server or relay agent unicast addresses can be configured.
- ◆ Use the “Multicast mode”, if you do not know the Unicast destination address of the DHCPv6 servers or other relay agents.
- ◆ All associated VLANs must have their L3 interface enabled using the VLAN > Static (Action:Modify) page.
- ◆ The relay agent is enabled when at least one configured VLAN has an entry is listed in the IP Service > DHCPv6 > Relay (Action: Show) page.
- ◆ The relay agent is disabled if there are no entries for all configured VLANs in the IP Service > DHCPv6 > Relay (Action: Show) page.

### Parameters

These parameters are displayed:

- ◆ **VLAN** – ID of the configured VLAN.
- ◆ **Mode:**
  - **Unicast** - To forward the client IPv6 DHCP messages to a specific destination address(es), select the Unicast mode.
  - **Multicast** - To forward the client IPv6 DHCP messages to all available servers on configured VLANs, select the Multicast mode. In this mode the

DHCPv6 agent forwards DHCPv6 messages to the IPv6 DHCP multicast address known as “All\_DHCP\_Servers” (FF05::1:3) which both DHCPv6 servers and relay agents listen to.

- ◆ **Destination Address** - When Unicast mode is selected, enter an IPv6 address of a DHCPv6 server or relay agent (Maximum: 5 for each configured VLAN).
- ◆ **Destination VLAN** – When Multicast mode is selected, select a configured VLAN or “All” (all VLANs). The DHCPv6 messages will be forwarded on the configured VLANs or all VLANs using the “All\_DHCP\_Servers” address.

### Web Interface

To enable the switch’s DHCPv6 Relay Agent for Unicast mode:

1. Click IP Service, DHCPv6, Relay (Action: Add).
2. Select a VLAN from the VLAN drop-down list.
3. Select Unicast from the Mode drop-down list.
4. Input the server or relay agent’s IPv6 address in the destination IP field.
5. Click Apply

**Figure 480: Enabling DHCPv6 Relay Agent for Unicast mode.**

The screenshot shows the configuration page for the DHCPv6 Relay Agent in Unicast mode. The breadcrumb navigation at the top is "IP Service > DHCPv6 > Relay". Below this, there is a form with the following fields:

- Action:** A dropdown menu set to "Add".
- VLAN:** A dropdown menu set to "1".
- Mode:** A dropdown menu set to "Unicast".
- Destination IP:** A text input field containing the IPv6 address "2001:0db8:85a3:0000:0000:8a2e:0370:7334".

At the bottom right of the form, there are two buttons: "Apply" and "Revert".

To enable the switch’s DHCPv6 Relay Agent for Multicast mode:

1. Click IP Service, DHCPv6, Relay (Action: Add).
2. Select a VLAN from the VLAN drop-down list.
3. Select Multicast from the Mode drop-down list.
4. Select a destination VLAN or All (VLANs) from the Destination VLAN drop-down list.
5. Click Apply

Figure 481: Enabling DHCPv6 Relay Agent for Multicast mode.

IP Service > DHCPv6 > Relay

Action: Add ▼

VLAN 1 ▼

Mode Multicast ▼

Destination VLAN All ▼

Apply Revert

To show and delete the DHCP Relay Agent Unicast and Multicast entries:

1. Click IP Service, DHCPv6, Relay (Action: Show).
2. From the VLAN drop-down list, select a VLAN.
3. Either click the upper-left-most box to select all entries or click the box to the left of the specific entry(s).
4. Click Delete.

Figure 482: Enabling DHCPv6 Relay Agent for Multicast mode.

IP Service > DHCPv6 > Relay

Action: Show ▼

VLAN 300 ▼

DHCPv6 Relay Destination Total: 8

| <input checked="" type="checkbox"/> | Mode      | DHCPv6 Relay Destination     |
|-------------------------------------|-----------|------------------------------|
| <input checked="" type="checkbox"/> | Unicast   | 2001:db8:85a3::8a2e:370:7334 |
| <input checked="" type="checkbox"/> | Unicast   | 2001:db8:85a3::8a2e:370:7336 |
| <input checked="" type="checkbox"/> | Unicast   | 2001:db8:85a3::8a2e:470:7334 |
| <input checked="" type="checkbox"/> | Unicast   | 2001:db8:85a3::8a2e:470:7336 |
| <input checked="" type="checkbox"/> | Unicast   | 2001:db8:85a3::8a2e:570:7334 |
| <input checked="" type="checkbox"/> | Multicast | VLAN 600                     |
| <input checked="" type="checkbox"/> | Multicast | VLAN 610                     |
| <input checked="" type="checkbox"/> | Multicast | VLAN 620                     |

Delete Revert

## Configuring the PPPoE Intermediate Agent

This section describes how to configure the PPPoE Intermediate Agent (PPPoE IA) relay parameters required for passing authentication messages between a client and broadband remote access servers.



## Configuring PPPoE IA Global Settings

Use the IP Service > PPPoE Intermediate Agent (Configure Global) page to enable the PPPoE IA on the switch, set the access node identifier, and set the generic error message.

### Command Usage

When PPPoE IA is enabled, the switch inserts a tag identifying itself as a PPPoE IA residing between the attached client requesting network access and the ports connected to broadband remote access servers (BRAS). The switch extracts access-loop information from the client's PPPoE Active Discovery Request, and forwards this information to all trusted ports (designated on the Configure Interface page). The BRAS detects the presence of the subscriber's circuit-ID tag inserted by the switch during the PPPoE discovery phase, and sends this tag as a NAS-port-ID attribute in PPP authentication and AAA accounting requests to a RADIUS server.

### Parameters

These parameters are displayed:

- ◆ **PPPoE IA Global Status** – Enables the PPPoE Intermediate Agent globally on the switch. (Default: Disabled)

Note that PPPoE IA must be enabled globally before it can be enabled on an interface.

- ◆ **Access Node Identifier** – String identifying this switch as an PPPoE IA to the PPPoE server. (Range: 1-48 ASCII characters; Default: IP address of first IPv4 interface on the switch.)

The switch uses the access-node-identifier to generate the circuit-id for PPPoE discovery stage packets sent to the BRAS, but does not modify the source or destination MAC address of these PPPoE discovery packets. These messages are forwarded to all trusted ports designated on the Configure Interface page.

- ◆ **Operational Access Node Identifier** – The configured access node identifier.
- ◆ **Generic Error Message** – An error message notifying the sender that the PPPoE Discovery packet was too large. (Range: 0-127; Default: PPPoE Discover packet too large to process. Try reducing the number of tags added.)
- ◆ **Operational Generic Error Message** – The configured generic error message.

### Web Interface

To configure global settings for PPPoE IA:

1. Click IP Service, PPPoE Intermediate Agent.
2. Select Configure Global from the Step list.
3. Enable the PPPoE IA on the switch, set the access node identifier, and set the generic error message.
4. Click Apply.

Figure 483: Configuring Global Settings for PPPoE Intermediate Agent

IP Service > PPPoE Intermediate Agent

Step: 1. Configure Global

PPPoE IA Global Status ☐ Enabled

Access Node Identifier

Operational Access Node Identifier 10.254.254.1

Generic Error Message

Operational Generic Error Message PPPoE Discover packet too large to process. Try reducing the number of tags added.

Apply Revert

### Configuring PPPoE IA Interface Settings

Use the IP Service > PPPoE Intermediate Agent (Configure Interface) page to enable PPPoE IA on an interface, set trust status, enable vendor tag stripping, and set the circuit ID and remote ID.

#### Parameters

These parameters are displayed:

- ◆ **Interface** – Port or trunk selection.
- ◆ **PPPoE IA Status** – Enables the PPPoE IA on an interface. (Default: Disabled)  
Note that PPPoE IA must also be enabled globally on the switch for this command to take effect.
- ◆ **Trust Status** – Sets an interface to trusted mode to indicate that it is connected to a PPPoE server. (Default: Disabled)
  - Set any interfaces connecting the switch to a PPPoE Server as trusted. Interfaces that connect the switch to users (PPPoE clients) should be set as untrusted.
  - At least one trusted interface must be configured on the switch for the PPPoE IA to function.
- ◆ **Vendor Tag Strip** – Enables the stripping of vendor tags from PPPoE Discovery packets sent from a PPPoE server. (Default: Disabled)  
This parameter only applies to trusted interfaces. It is used to strip off vendor-specific tags (which carry subscriber and line identification information) in PPPoE Discovery packets received from an upstream PPPoE server before forwarding them to a user.
- ◆ **Circuit ID** – String identifying the circuit identifier (or interface) on this switch to which the user is connected. (Range: 1-10 ASCII characters; Default: Unit/Port:VLAN-ID, or 0/Trunk-ID:VLAN-ID)
  - The PPPoE server extracts the Line-ID tag from PPPoE discovery stage messages, and uses the Circuit-ID field of that tag as a NAS-Port-ID attribute in AAA access and accounting requests.

- The switch intercepts PPPoE discovery frames from the client and inserts a unique line identifier using the PPPoE Vendor-Specific tag (0x0105) to PPPoE Active Discovery Initiation (PADI) and Request (PADR) packets. The switch then forwards these packets to the PPPoE server. The tag contains the Line-ID of the customer line over which the discovery packet was received, entering the switch (or access node) where the intermediate agent resides.
  - Outgoing PAD Offer (PADO) and Session-confirmation (PADS) packets sent from the PPPoE Server include the Circuit-ID tag inserted by the switch, and should be stripped out of PADO and PADS packets which are to be passed directly to end-node clients.
- ◆ **Operation Circuit ID** – The configured circuit identifier.
  - ◆ **Remote ID** – String identifying the remote identifier (or interface) on this switch to which the user is connected. (Range: 1-63 ASCII characters; Default: Port MAC address)
  - ◆ **Operation Remote ID** – The configured circuit identifier.
  - ◆ **Remote ID Delimiter** – Enables a user-specified delimiter for the remote ID.
  - ◆ **Delimiter ASCII** – A character used to separate components in the remote circuit ID value. (Range: 0-255; Default: 35, ASCII character "#")

### Web Interface

To configure interface settings for PPPoE IA:

1. Click IP Service, PPPoE Intermediate Agent.
2. Select Configure Interface from the Step list.
3. Select Port or Trunk interface type.
4. Enable PPPoE IA on an interface, set trust status, enable vendor tag stripping if required, set the circuit ID, remote ID, or remote ID delimiter.
5. Click Apply.

Figure 484: Configuring Interface Settings for PPPoE Intermediate Agent

IP Service > PPPoE Intermediate Agent

Step: 2. Configure Interface

Interface ☒ Port ☐ Trunk

PPPoE Intermediate Agent Port List Total: 52

| Port | PPPoE IA Status                  | Trust Status                     | Vendor Tag Strip                 | Circuit ID | Operation Circuit ID | Remote ID | Operation Remote ID | Remote ID Delimiter              | Delimiter ASCII (0-255) |
|------|----------------------------------|----------------------------------|----------------------------------|------------|----------------------|-----------|---------------------|----------------------------------|-------------------------|
| 1    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled |            | 1/1:vid              |           | CC-37-AB-BC-4C-5B   | <input type="checkbox"/> Enabled | 35                      |
| 2    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled |            | 1/2:vid              |           | CC-37-AB-BC-4C-5C   | <input type="checkbox"/> Enabled | 35                      |
| 3    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled |            | 1/3:vid              |           | CC-37-AB-BC-4C-5D   | <input type="checkbox"/> Enabled | 35                      |
| 4    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled |            | 1/4:vid              |           | CC-37-AB-BC-4C-5E   | <input type="checkbox"/> Enabled | 35                      |
| 5    | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled | <input type="checkbox"/> Enabled |            | 1/5:vid              |           | CC-37-AB-BC-4C-5F   | <input type="checkbox"/> Enabled | 35                      |

### Showing PPPoE IA Statistics

Use the IP Service > PPPoE Intermediate Agent (Show Statistics) page to show statistics on PPPoE IA protocol messages.

#### Parameters

These parameters are displayed:

- ◆ **Interface** – Port or trunk selection.
- ◆ **Received** – Received PPPoE active discovery messages.
  - **All** – All PPPoE active discovery message types.
  - **PADI** – PPPoE Active Discovery Initiation messages.
  - **PADO** – PPPoE Active Discovery Offer messages.
  - **PADR** – PPPoE Active Discovery Request messages.
  - **PADS** – PPPoE Active Discovery Session-Confirmation messages.
  - **PADT** – PPPoE Active Discovery Terminate messages.
- ◆ **Dropped** – Dropped PPPoE active discovery messages.
  - **Response from untrusted** – Response from an interface which not been configured as trusted.
  - **Request towards untrusted** – Request sent to an interface which not been configured as trusted.
  - **Malformed** – Corrupted PPPoE message.

## Web Interface

To show statistics for PPPoE IA protocol messages:

1. Click IP Service, PPPoE Intermediate Agent.
2. Select Show Statistics from the Step list.
3. Select Port or Trunk interface type.

Figure 485: Showing PPPoE Intermediate Agent Statistics

| IP Service > PPPoE Intermediate Agent                                       |      |          |      |      |      |      |      |                         |                           |           |
|---|------|----------|------|------|------|------|------|-------------------------|---------------------------|-----------|
| Step: 3. Show Statistics  |      |          |      |      |      |      |      |                         |                           |           |
| Interface <input checked="" type="radio"/> Port <input type="radio"/> Trunk |      |          |      |      |      |      |      |                         |                           |           |
| PPPoE Intermediate Agent Statistics Total: 26                               |      |          |      |      |      |      |      |                         |                           |           |
|   | Port | Received |      |      |      |      |      | Dropped                 |                           |           |
|   |      | All      | PADI | PADO | PADR | PADS | PADT | Response from untrusted | Request towards untrusted | Malformed |
| <input type="checkbox"/>  | 1    | 0        | 0    | 0    | 0    | 0    | 0    | 0                       | 0                         | 0         |
| <input type="checkbox"/>  | 2    | 0        | 0    | 0    | 0    | 0    | 0    | 0                       | 0                         | 0         |
| <input type="checkbox"/>  | 3    | 0        | 0    | 0    | 0    | 0    | 0    | 0                       | 0                         | 0         |
| <input type="checkbox"/>  | 4    | 0        | 0    | 0    | 0    | 0    | 0    | 0                       | 0                         | 0         |
| <input type="checkbox"/>  | 5    | 0        | 0    | 0    | 0    | 0    | 0    | 0                       | 0                         | 0         |



# Section III

## Appendices

This section provides additional information and includes these items:

- ◆ [“Software Specifications” on page 717](#)
- ◆ [“Troubleshooting” on page 723](#)
- ◆ [“License Information” on page 725](#)







# Software Specifications

---

## Software Features

**Management Authentication** Local, RADIUS, TACACS+, Port Authentication (802.1X), HTTPS, SSH, Port Security, IP Filter

**General Security Measures** Access Control Lists (512 rules), Port Authentication (802.1X), MAC Authentication, Port Security, DHCP Snooping, IP Source Guard

**Port Configuration** 1000BASE-T: 10/100 Mbps at half/full duplex, 1000 Mbps at full duplex  
1000BASE-SX/LX/LHX/ZX: 1000 Mbps at full duplex (SFP)

**Flow Control** Full Duplex: IEEE 802.3-2005  
Half Duplex: Back pressure

**Storm Control** Broadcast, multicast, or unknown unicast traffic throttled above a critical threshold

**Port Mirroring** 3 sessions, one or more source ports to one destination port

**Rate Limits** Input/Output Limits  
Range configured per port

**Port Trunking** Static trunks (Cisco EtherChannel compliant)  
Dynamic trunks (Link Aggregation Control Protocol)

**Spanning Tree Algorithm** Spanning Tree Protocol (STP, IEEE 802.1D-2004)  
Rapid Spanning Tree Protocol (RSTP, IEEE 802.1D-2004)  
Multiple Spanning Tree Protocol (MSTP, IEEE 802.1D-2004)

**VLAN Support** Up to 4094 groups; port-based, protocol-based, tagged (802.1Q), voice VLANs, MAC-based, QinQ tunnel

**Class of Service** Supports four levels of priority  
Strict, Weighted Round Robin (WRR), or a combination of strict and weighted queueing  
Layer 3/4 priority mapping: IP DSCP

**Quality of Service** DiffServ<sup>18</sup> supports class maps, policy maps, and service policies

**Multicast Filtering** IGMP Snooping (Layer 2 IPv4)  
MLD Snooping (Layer 2 IPv6)  
Multicast VLAN Registration (IPv4/IPv6)

**IP Routing** ARP, CIDR (Classless Inter-Domain Routing)

**Additional Features** Connectivity Fault Management  
BOOTP Client  
DHCP Client, Relay, Option 82  
DNS Client, Proxy  
ERPS (Ethernet Ring Protection Switching)  
LLDP (Link Layer Discover Protocol)  
OAM (Operation, Administration, and Maintenance)  
RMON (Remote Monitoring, groups 1,2,3,9)  
SMTP Email Alerts  
SNMP (Simple Network Management Protocol)  
SNTP (Simple Network Time Protocol)

---

## Management Features

**In-Band Management** Telnet, web-based HTTP or HTTPS, SNMP manager, or Secure Shell

**Out-of-Band Management** RS-232 DB-9 console port

---

<sup>18</sup>. Only supported for IPv4.

**Software Loading** HTTP, FTP, SFTP, TFTP in-band, or XModem out-of-band

**SNMP** Management access via MIB database  
Trap management to specified hosts

**RMON** Groups 1, 2, 3, 9 (Statistics, History, Alarm, Event)

---

## Standards

Ethernet Service OAM (ITU-T Y.1731) - partial support  
IEEE 802.1AB Link Layer Discovery Protocol  
IEEE 802.1D-2004 Spanning Tree Algorithm and traffic priorities  
Spanning Tree Protocol  
Rapid Spanning Tree Protocol  
Multiple Spanning Tree Protocol  
IEEE 802.1p Priority tags  
IEEE 802.1Q VLAN  
IEEE 802.1v Protocol-based VLANs  
IEEE 802.1X Port Authentication  
IEEE 802.3-2005  
Ethernet, Fast Ethernet, Gigabit Ethernet  
Link Aggregation Control Protocol (LACP)  
Full-duplex flow control (ISO/IEC 8802-3)  
IEEE 802.3ac VLAN tagging  
ARP (RFC 826)  
DHCP Client (RFC 2131)  
DHCP Relay (RFC 951, 2132, 3046)  
HTTPS  
ICMP (RFC 792)  
IGMP (RFC 1112)  
IGMPv2 (RFC 2236)  
IGMP Proxy (RFC 4541)  
IPv4 IGMP (RFC 3228)  
MLD Snooping (RFC 4541)  
NTP (RFC 1305)  
RADIUS+ (RFC 2618)  
RMON (RFC 2819 groups 1,2,3,9)  
SNMP (RFC 1157)  
SNMPv2c (RFC 1901, 2571)  
SNMPv3 (RFC DRAFT 2273, 2576, 3410, 3411, 3413, 3414, 3415)  
SNTP (RFC 2030)  
SSH (Version 2.0)  
TELNET (RFC 854, 855, 856)

TFTP (RFC 1350)

---

## Management Information Bases

Bridge MIB (RFC 1493)  
Differentiated Services MIB (RFC 3289)  
DNS Resolver MIB (RFC 1612)  
Entity MIB (RFC 2737)  
Ether-like MIB (RFC 2665)  
Extended Bridge MIB (RFC 2674)  
Extensible SNMP Agents MIB (RFC 2742)  
Forwarding Table MIB (RFC 2096)  
IGMP MIB (RFC 2933)  
Interface Group MIB (RFC 2233)  
Interfaces Evolution MIB (RFC 2863)  
IP MIB (RFC 2011)  
IP Forwarding Table MIB (RFC 2096)  
IP Multicasting related MIBs  
IPv6-MIB (RFC 2065)  
IPv6-ICMP-MIB (RFC 2066)  
IPv6-TCP-MIB (RFC 2052)  
IPv6-UDP-MIB (RFC 2054)  
Link Aggregation MIB (IEEE 802.3ad)  
MAU MIB (RFC 3636)  
MIB II (RFC 1213)  
NTP (RFC 1305)  
P-Bridge MIB (RFC 2674P)  
Port Access Entity MIB (IEEE 802.1X)  
Port Access Entity Equipment MIB  
Power Ethernet MIB (RFC 3621)  
Private MIB  
Q-Bridge MIB (RFC 2674Q)  
QinQ Tunneling (IEEE 802.1ad Provider Bridges)  
Quality of Service MIB  
RADIUS Accounting Server MIB (RFC 2621)  
RADIUS Authentication Client MIB (RFC 2619)  
RMON MIB (RFC 2819)  
RMON II Probe Configuration Group (RFC 2021, partial implementation)  
SNMP Community MIB (RFC 3584)  
SNMP Framework MIB (RFC 3411)  
SNMP-MPD MIB (RFC 3412)  
SNMP Target MIB, SNMP Notification MIB (RFC 3413)  
SNMP User-Based SM MIB (RFC 3414)

SNMP View Based ACM MIB (RFC 3415)  
SNMPv2 IP MIB (RFC 2011)  
TACACS+ Authentication Client MIB  
TCP MIB (RFC 2012)  
Trap (RFC 1215)  
UDP MIB (RFC 2013)





# Troubleshooting

## Problems Accessing the Management Interface

Table 41: Troubleshooting Chart

| Symptom   | Action   |
|---|--|
| Cannot connect using Telnet, web browser, or SNMP software                    | <ul style="list-style-type: none"><li>◆ Be sure the switch is powered on.</li><li>◆ Check network cabling between the management station and the switch. Make sure the ends are properly connected and there is no damage to the cable. Test the cable if necessary.</li><li>◆ Check that you have a valid network connection to the switch and that the port you are using has not been disabled.</li><li>◆ Be sure you have configured the VLAN interface through which the management station is connected with a valid IP address, subnet mask and default gateway.</li><li>◆ Be sure the management station has an IP address in the same subnet as the switch's IP interface to which it is connected.</li><li>◆ If you are trying to connect to the switch via the IP address for a tagged VLAN group, your management station, and the ports connecting intermediate switches in the network, must be configured with the appropriate tag.</li><li>◆ If you cannot connect using Telnet, you may have exceeded the maximum number of concurrent Telnet/SSH sessions permitted. Try connecting again at a later time.</li></ul> |
| Cannot connect using Secure Shell   | <ul style="list-style-type: none"><li>◆ If you cannot connect using SSH, you may have exceeded the maximum number of concurrent Telnet/SSH sessions permitted. Try connecting again at a later time.</li><li>◆ Be sure the control parameters for the SSH server are properly configured on the switch, and that the SSH client software is properly configured on the management station.</li><li>◆ Be sure you have generated both an RSA and DSA public key on the switch, exported this key to the SSH client, and enabled SSH service. Try using another SSH client or check for updates to your SSH client application.</li><li>◆ Be sure you have set up an account on the switch for each SSH user, including user name, authentication level, and password.</li><li>◆ Be sure you have imported the client's public key to the switch (if public key authentication is used).</li></ul>   |
| Cannot access the on-board configuration program via a serial port connection | <ul style="list-style-type: none"><li>◆ Check to see if you have set the terminal emulator program to VT100 compatible, 8 data bits, 1 stop bit, no parity, and the baud rate set to 115200 bps.</li><li>◆ Verify that you are using the DB-9 null-modem serial cable supplied with the switch. If you use any other cable, be sure that it conforms to the pin-out connections provided in the Installation Guide.</li></ul>  |
| Forgot or lost the password   | <ul style="list-style-type: none"><li>◆ Contact your local distributor.</li></ul>  |

## Using System Logs

If a fault does occur, refer to the Installation Guide to ensure that the problem you encountered is actually caused by the switch. If the problem appears to be caused by the switch, follow these steps:

1. Enable logging.
2. Set the error messages reported to include all categories.
3. Enable SNMP.
4. Enable SNMP traps.
5. Designate the SNMP host that is to receive the error messages.
6. Repeat the sequence of commands or other actions that lead up to the error.
7. Make a list of the commands or circumstances that led to the fault. Also make a list of any error messages displayed.
8. Set up your terminal emulation software so that it can capture all console output to a file. Then enter the “show tech-support” command to record all system settings in this file.
9. Contact your distributor’s service engineer, and send a detailed description of the problem, along with the file used to record your system settings.

For example:

```
Console(config)#logging on
Console(config)#logging history flash 7
Console(config)#snmp-server host 192.168.1.23
:
```





---

# License Information

This product includes copyrighted third-party software subject to the terms of the GNU General Public License (GPL), GNU Lesser General Public License (LGPL), or other related free software licenses. The GPL code used in this product is distributed WITHOUT ANY WARRANTY and is subject to the copyrights of one or more authors. For details, refer to the section "The GNU General Public License" below, or refer to the applicable license as included in the source-code archive.

---

## The GNU General Public License

GNU GENERAL PUBLIC LICENSE  
Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.  
59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

## **GNU GENERAL PUBLIC LICENSE TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION**

1. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

2. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

3. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
  - a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
  - b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
  - c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

4. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:
  - a). Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

- 5. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
- 6. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
- 7. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
- 8. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

9. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
10. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

11. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

#### NO WARRANTY

1. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.
2. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

#### END OF TERMS AND CONDITIONS



