



# **LevelOne**

FCS-4000 / FCS-4100 / FCS-4200

FCS-4300 / FCS-4400 / FCS-4500

Day/Night P/T/Z IP Speed Dome Camera

## **User Manual**

Ver:1.2.0-0710

Copyright (c) 2007 Digital Data Communications Co., Ltd. All Rights Reserved.


## Before You Use This Product

The use of surveillance devices may be prohibited by law in your country. The Network Camera is not only a high-performance web-ready camera but also can be part of a flexible surveillance system. It is the user's responsibility to ensure that the operation of such devices is legal before installing this unit for its intended use.

It is important to first verify that all contents received are complete according to the list in the "**Package Contents**" chapter. Take notice of the warnings in "**Quick installation guide**" before the Network Camera is installed, then carefully read and follow the instructions in the "**Installation**" chapter to avoid damages due to faulty assembly and installation. This also ensures the product is used properly as intended.

The Network Camera is a network device and its use should be straightforward for those who have basic network knowledge. The "**Troubleshooting**" chapter in the Appendix provides remedies to the most common errors in set up and configuration. You should consult this chapter first if you run into a system error.

The Network Camera is designed for various applications including video sharing, general security/surveillance, etc. The "**How to Use**" chapter suggests ways to best utilize the Network Camera and ensure proper operations.

For paragraphs preceded by  the reader should use caution to understand completely the warnings. Ignoring the warnings may result in serious hazards or injuries.

## **ATTENTION**

1. All operation please refer to the instruction.
2. Please don't place the product on unstable desk or bracket.
3. Please avoid any liquid permeate inside of the machine in case damage the product.
4. Before wiring, please follow all electronic safety standards, and using the original attached power supply adapter.
5. The RS-485 and Video signal of the product use TVS grade lightning protection technology can prevent effectively lightning strike under 500W. The cable transmission of RS-485 and Video signal should keep a certain distance with high voltage equipments or cables.
6. Do not let the camera aim at sun or other lighting objects no matter the camera is operating or not, otherwise it might damage the CCD camera permanently.
7. When the product is out of order, please do not try to fix it by yourself, please refer to the trouble shooting section of this instruction to figure out the problems in advance. If the problem is not found, please contact us or our authorized dealers directly.
8. All the features and functions are subject to change without notice. Please visit [www.level1.com](http://www.level1.com) for the latest ones.

## Table of Contents

Before You Use This Product .....	2
Package Contents .....	2
Functions and Operation directory .....	2
Hardware Installation.....	4
Installation Notice .....	4
FCS-4300/4400/4500Housing installation .....	4
FCS-4000/4100/4200Housing installation .....	5
Camera installation .....	7
Bracket installation .....	9
Software Installation .....	12
Install “IP CamLocator” .....	12
Install “IP CamSecure” .....	13
How to Use IP CamLocator .....	15
Initial use IP Cam Locator.....	15
Configuration of Main Console .....	15
How to Access to the Network Camera .....	24
Initial accessing the network camera .....	24
Configuration of Main Console .....	25
Adjusting the Monitor Image .....	27
Basic Setting .....	31
System .....	31
Camera.....	34
Network .....	37
Account .....	42
Advance Setting .....	43
PTZ Control .....	43
Preset Position .....	44
Patrol .....	46
FTP Client.....	48
SMTP .....	52
Schedule.....	56
Alarm Input .....	57

Alarm Buffer.....	58
Motion Detection.....	60
System Log.....	61
Trouble shooting sheet.....	62
Technical Parameters.....	63
GNU GENERAL PUBLIC LICENSE .....	64

## Package Contents

- ◆ FCS-4000/FCS-4100/FCS-4200/FCS-4300/FCS-4400/FCS-4500
- ◆ Power Adapter
- ◆ Power & A/V Cable
- ◆ LAN Cable
- ◆ Alarm Cable
- ◆ CD Manual/Utility
- ◆ Quick Installation Guide

## Functions and Operation directory

Followed is the brief introduction of main functions and operations of LEVELONE IP SPEED DOME, different operation platform may have different operating methods, generally base on the manual. Special operating demand, please contact your dealers.

### Pan/Tilt/Zoom

Users can control camera up/down/left/right via software commends. In addition users can adjust the zoom to have best view for the desire target. Auto focus and iris adjustment while seeing the far object.

### Focus/RPM auto matching technology

With focus/PRM matching technology, the step-motor will adjust the pan/tilt speed automatically, let the operation easier while zoom the far target.

### Auto flips

While tilting the camera at the vertical end, the camera will rotate 180° automatically then turn to another side of 90° angle to see directly the back of object, realizing vertical 180° surveillance.

### Preset position set up and recall

The preset position feature can store current position of camera viewing, users can recall those preset positions instantly via surveillance software. The intelligent IP speed dome supports 32 preset positions. The intelligent speed dome supports 4 navigation groups, each group is capable to having 8 present positions

### Lens control

- ◆ Focusing control:

Users can press the zoom button to adjust the image viewing distance.

- ◆ Iris control

The factory default is auto iris, ensuring to have the best image quality. In particular circumstances, the operator can also use manual iris feature.

# Hardware Installation

## Installation Notice

Please be sure to follow all the steps of the instructions. Wrong installation may damage the product.

### FCS-4300/4400/4500Housing installation

- ◆ Outer housing fixing as below, click down the iron slice then pull it up.




- ◆ Before install inner housing, please hook the safety lock of outer housing on the fixing socket of inner housing, in case of installation accidents.



- ◆ Please fix the three screws on the side before install the camera.



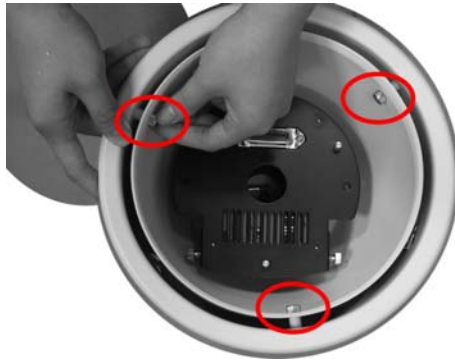

- ◆ Finally cover up the smoked cover to accomplish the installation. Please be sure hands are clean while cover up, or it may dirty the cover. It's recommended to tear off the protect membrane after installation is finished, or wear on gloves.

### **FCS-4000/4100/4200Housing installation**

The installed spot must be held to the product firmly, in case the image shaken while the camera operates.


- ◆ Put the cable tube into the power box, and screw it.




- ◆ Using hexagon screw driver to fix the housing and bracket.



- ◆ unscrew the bottom screw to install cables.

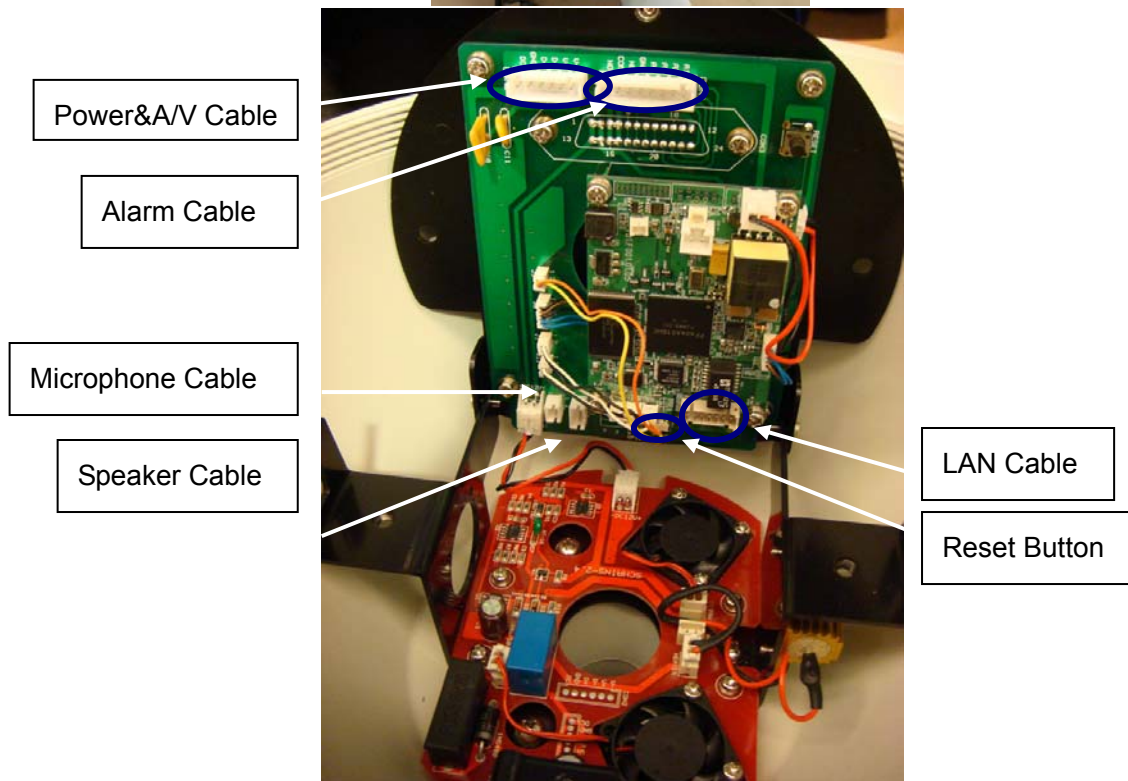


- ◆ Insert the plug, and pull these cables through out from the bottom of bracket.

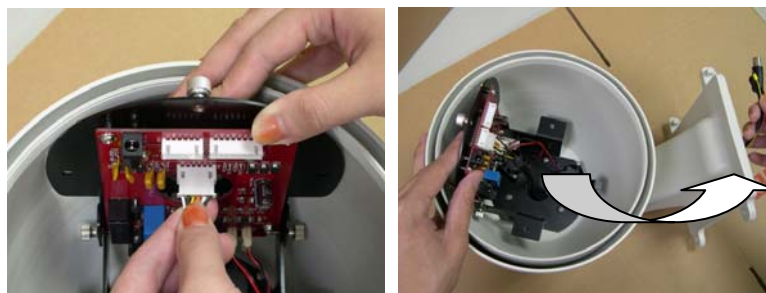

- ◆ For the alarm cable


Brown	Red	Orange	Yellow	Green	Blue	Black	White
DI 1	DI 2	DI 3	DI 4	GND	NC	COM	NO

- ◆ Hook up the safety buckle, and screw the two screws to fix the power box.

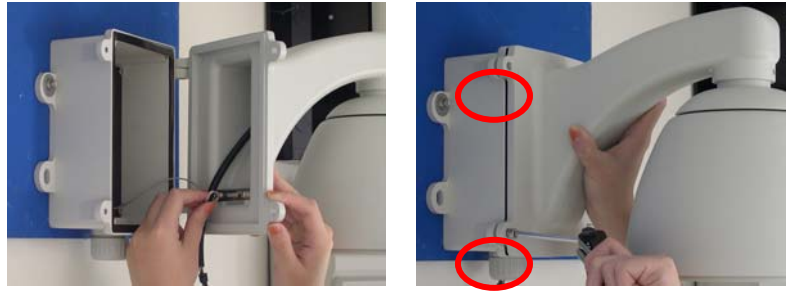

## Camera installation


- ◆ Before installation, please set for the communication protocol, baud rate and camera ID address first.

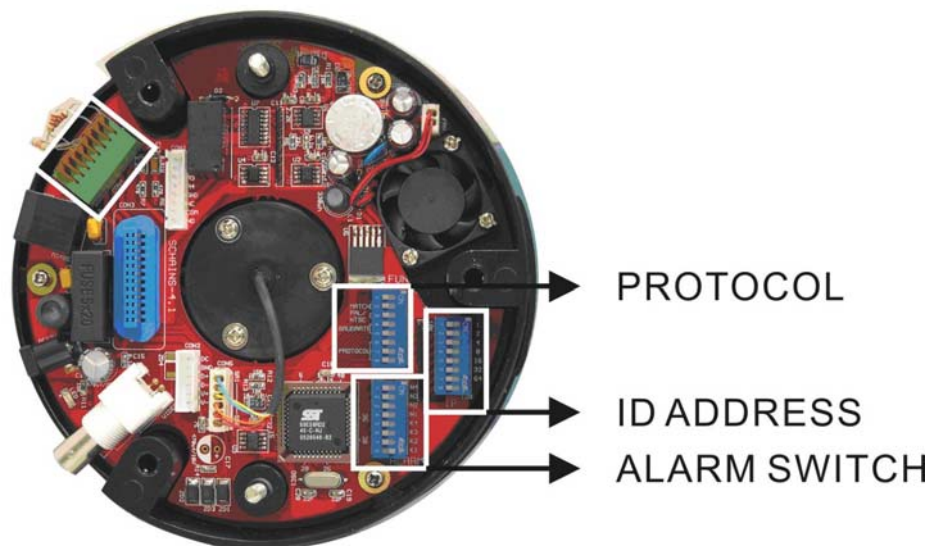

- ◆ ID address setup

There are 8 dip-switchers on the PCB board. Please set it up as below:


All the dip-switchers are OFF.

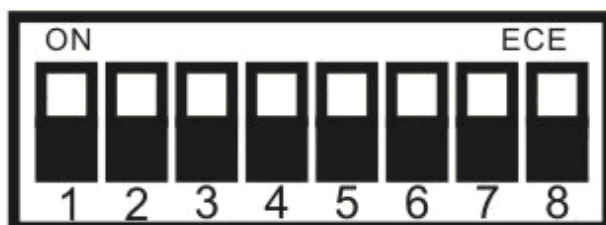

\*Remarks: Please reboot the camera after the camera setup is done.

- ◆ Protocol setup

The dip-switchers are for protocol setup. Please set it up as below:  
No.5 is ON.

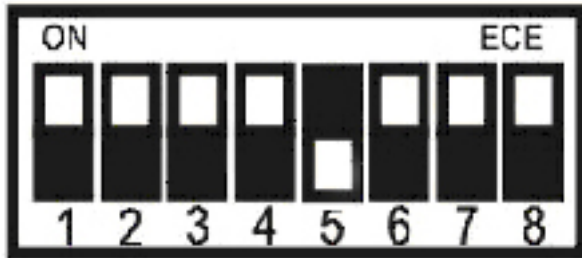


\*Remarks: Please reboot the camera after the protocol setup is done.

- ◆ Alarm Dip-switchers


The dip-switchers are for DI/DO setup. Please set it up as below:  
NO. 5/6/7/8 is ON.



- ◆ Aim the camera plug to the bottom socket to connecting.

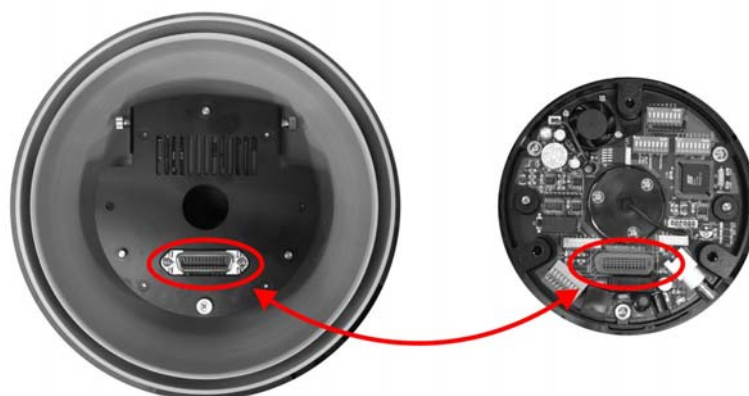

- ◆ You can also follow the triangle in front of camera and aim at the bottom screw to fixing.

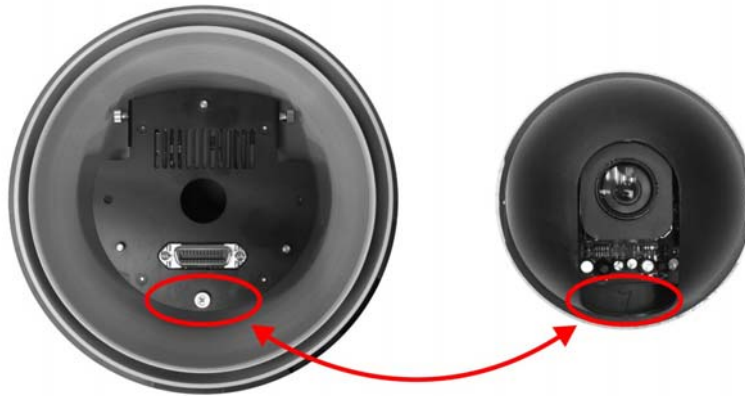

- ◆ After the camera is installed, please turn the camera and fixing the two side screws.




- ◆ Finally cover up the smoked cover to accomplish the installation. Please be sure hands are clean while cover up, or it may dirty the cover. It's recommended to tear off the protect membrane after installation is finished, or wear on gloves.

## Bracket installation

- ◆ CAS-4000A wall mount Kit

Fixing power box on the wall.

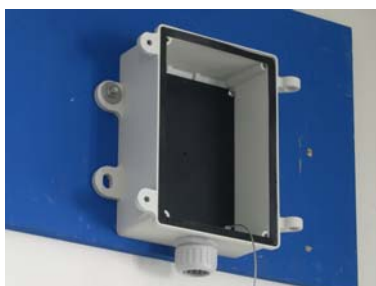

Hook up the safety buckle, and screw the two screws to fix the power box.





◆ CAS-4000B ceiling mount kit

Fixed the iron tube to the cover of power box.



◆ CAS-4000C corner mount kit

Combine two brackets, and use the spanner to fix the screw.

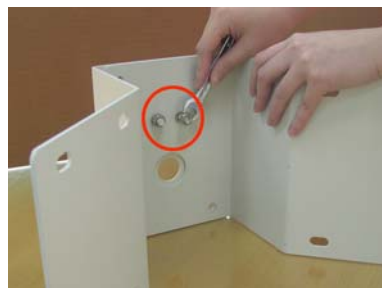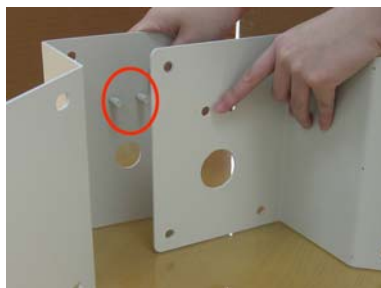


Turn the screw to tighten the brackets and power box.





The assembly completed.

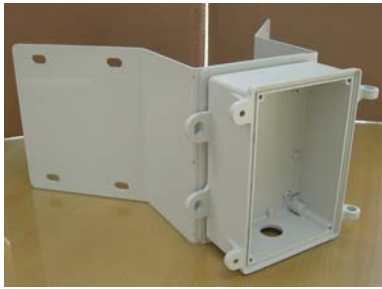

◆ CAS-4000D pole mount kit

Fixed the bracket on the rear of power box.



The assembly will be done after the stainless ring is hooped.





## Software Installation

In this manual, "User" refers to whoever has access to the Network Camera, and "Administrator" refers to the person who can configure the Network Camera and grant user access to the camera.

At the end of the hardware installation, the Administrator must place the product software CD into the CD-ROM drive of the PC running in MS Windows. An auto-run program will pop up (If the program is not on auto-run, go to the root directory of the software CD and click on "autorun.exe").


### Install "IP CamLocator"

Click on "Install Software" item, after the window contains changed, click on "IP CamLocator" to run installation program.

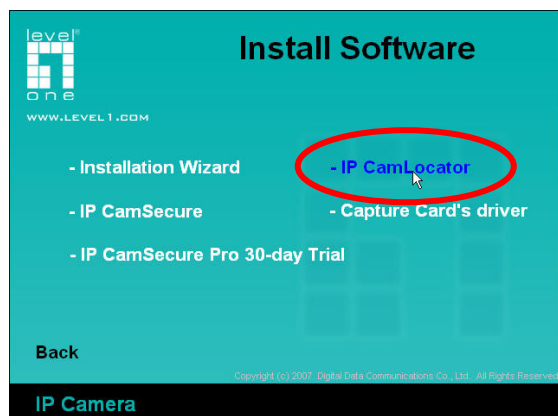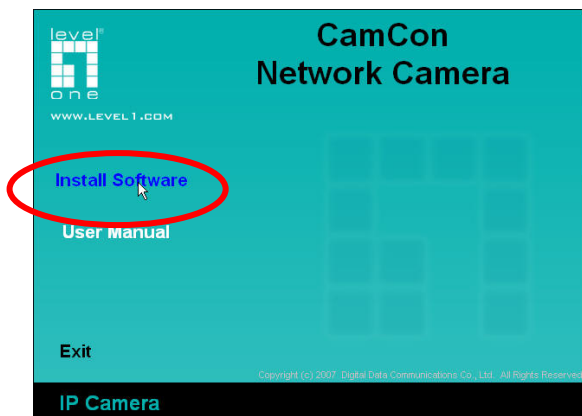



Upon IP CamLocator's start up, this program searches for LevelOne's products on the same LAN. After searching, LevelOne Video Servers or Network cameras will be located by the IP CamLocator. There may be several entries shown in the window. The Administrator may differentiate the Network cameras with the model number and MAC address.

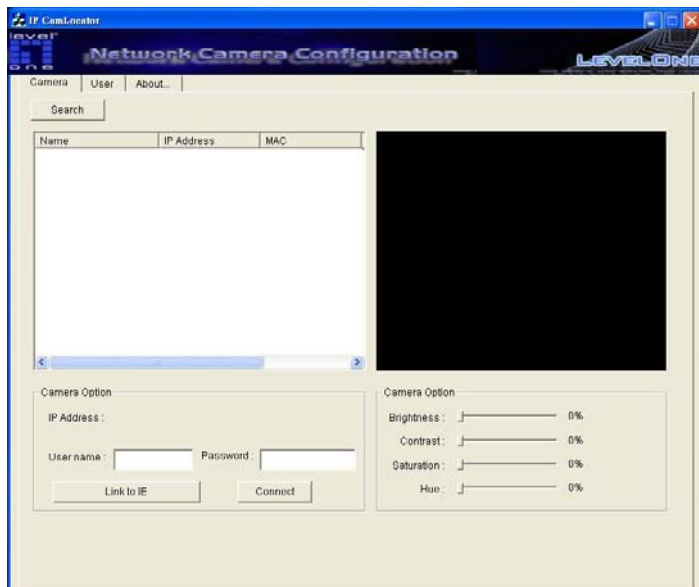

The IP addresses shown in the "IP Address" field reflect those on the local network. They may be from the DHCP server. If there is no DHCP server, the camera will try to find a free IP address (this takes from 15 second to 3 minutes, depending on the LAN status). The method of finding IP address is seeking from 192.168.0.2, to 192.168.0.254. If any of the address inside this range is free, the Network Camera will be assigned to this IP address, and its subnet mask would be 255.255.255.0.

## Install "IP CamSecure"

Click "Install Software"




Click "IP CamSecure" and follow the onscreen instruction or refer to the user's manual to


complete installation.



### Custom Setup Type:

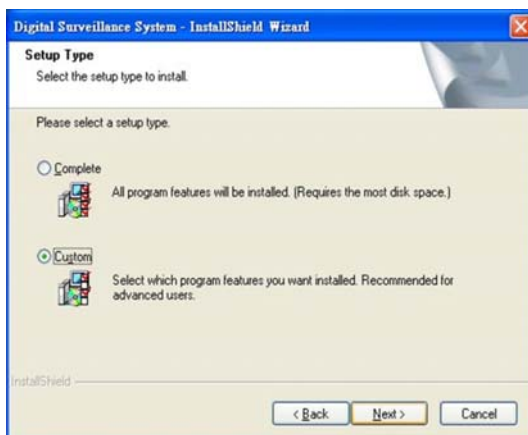

You may install the system to the directory of your preference and choose which feature(s) you want to install to the PC.

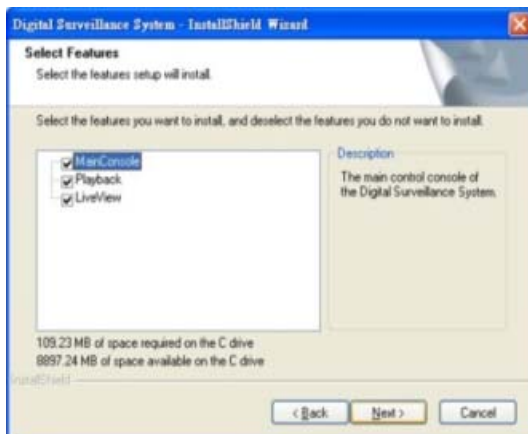


Hint: You may, for instance, install only Playback and/or LiveView on the PC at home or other remote site from which you do not install the camera but are going to watch them remotely.

## How to Use IP CamLocator


This chapter introduces how to monitor the image from the camera using **IP CamLocator**. The LevelOne video server and Network camera can be used with Microsoft web browsers and IP CamLocator in Windows operation systems. This document focuses on introducing IP CamLocator.

### Initial use IP Cam Locator

Click Start -> Program Files -> LevelOne -> IP Cam Locator -> IP Cam Locator.

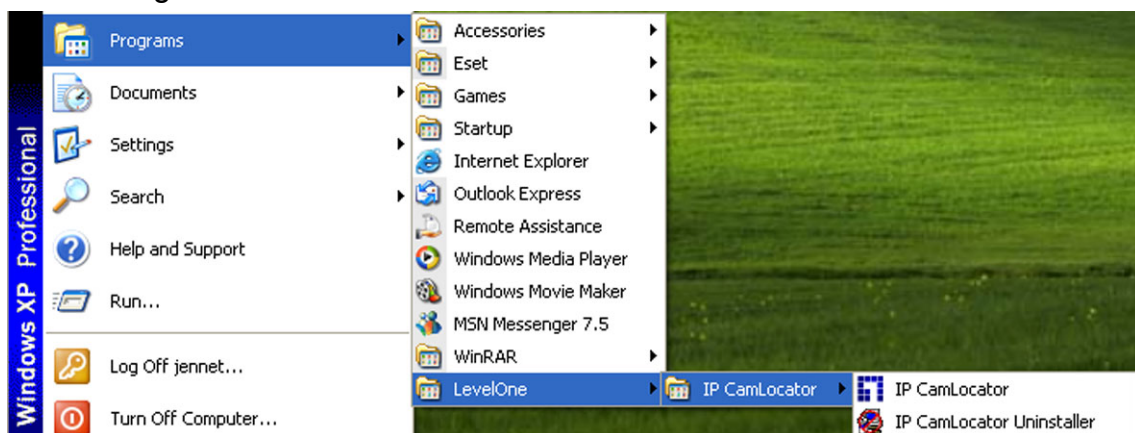

### Configuration of Main Console

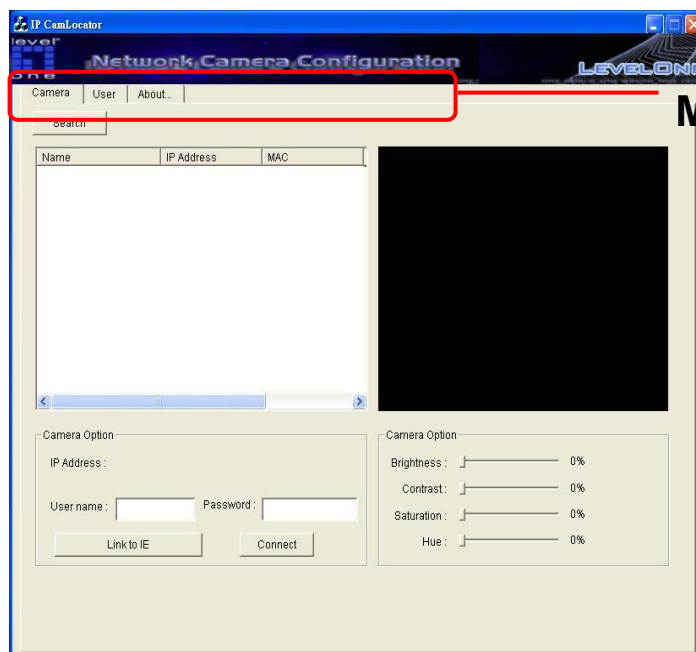

Main Menu

Main Menu

## Camera

Click this button to get into common information of all Network cameras in network. You can connect the specific Network cameras to get live video and to optimize video setting.

## User

Click this button to get into user basic setting information of all Network cameras in network. You can connect the specific Network cameras to get and set basic values. This section includes Info, User, Date Time, TCP/IP, PPPoE and DDNS.


**Note:** Only the administrator has access to the Settings.

## About

Click this button to get into information of IP CamLocator.

## Camera

The Camera page provides you LevelOne network cameras in the network with information, including product name, IP address, MAC address, model name and model ID. Click on specific network cameras to optimize Video Setup including brightness, contrast, saturation and hue.

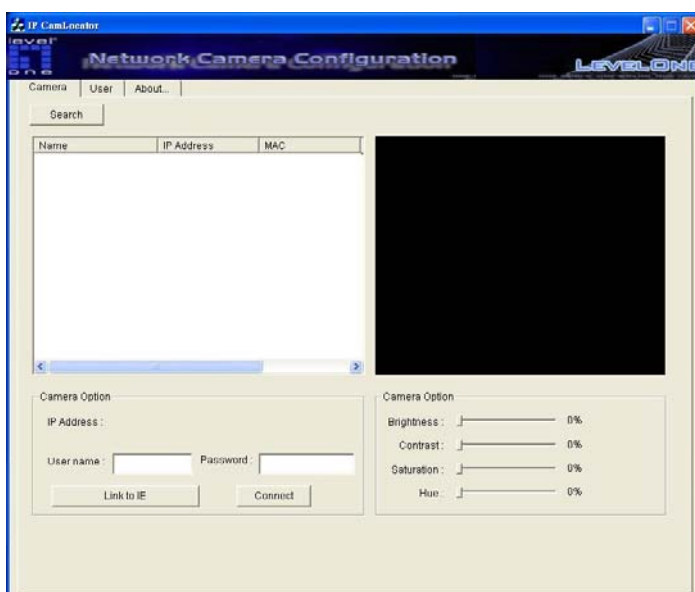

**Search** : Click it to search network cameras in the network, it displays network cameras information including product name, IP address, MAC address, model name and model ID.

**Link to IE** : After searching network cameras in network, you can click to specific Network cameras in search area and press **Link to IE** to set the video server of the network camera in Microsoft web browsers.


**Username** : Enter the username for authentication necessary for specific Network cameras connecting with IP CamLocator. The default user name is "root".

**Password** : Enter the password for authentication necessary for Network cameras connecting with IP CamLocator. The default password is the MAC address (in capital letters).

**Connect** : After clicking to specific Network cameras in search area and type it with username and password to connect to the network camera in IP CamLocator. You can use the tool bar to optimize video Brightness, Contrast, Saturation and Hue.

## User

The User page provides you all Network cameras configurations in the network with product or downloaded configuration file information, including Info, User, Date Time, TCP/IP, PPPoE and DDNS.

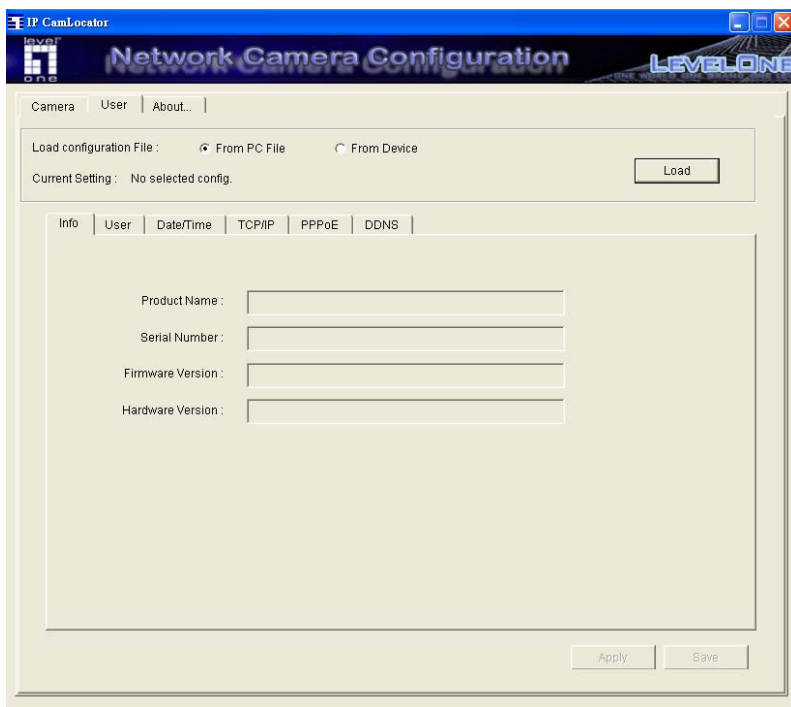


The screenshot shows the 'IP CamLocator' application window with the 'Network Camera Configuration' title. The 'User' tab is selected in the top navigation bar. Below the navigation bar, there are two radio buttons: 'From PC File' (selected) and 'From Device'. A 'Load' button is to the right. Below this, it says 'Current Setting : No selected config.'. A secondary tab bar shows 'Info', 'User', 'Date/Time', 'TCP/IP', 'PPPoE', and 'DDNS'. The 'User' tab is active, displaying four input fields: 'Product Name :', 'Serial Number :', 'Firmware Version :', and 'Hardware Version :'. At the bottom right, there are 'Apply' and 'Save' buttons.

**Load configuration File** : Select **From PC File** or **From Device**, the former one can load information of downloaded configuration file and the latter one can load Network Camera configurations in the network.

**From PC File** : Click it and press **Load** to select configuration location from PC.

### Note:


- Configuration file format is \*.conf.

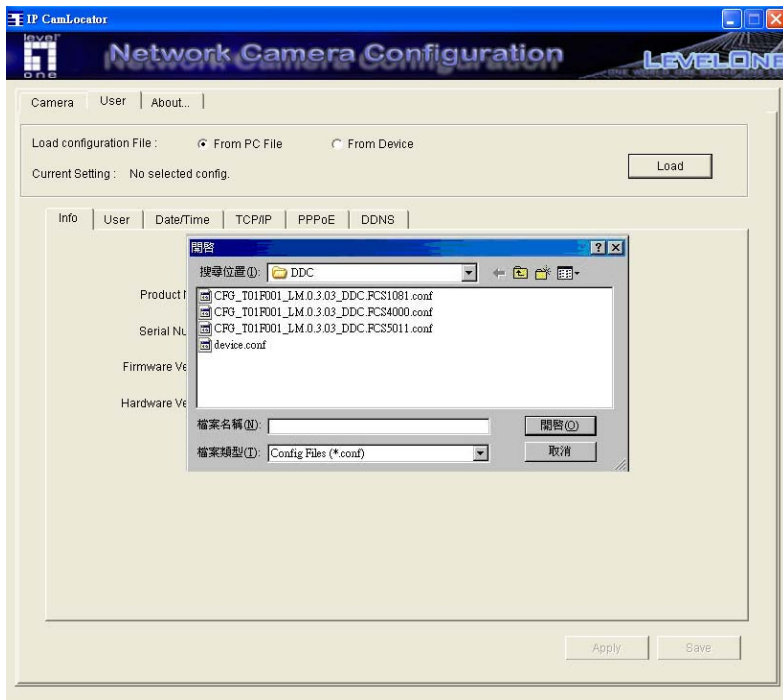

**From Device** : Click it and press **Load** to select the specific device in the network. Type it with **Username** and **Password** to load configuration from device.

**Note:**

- If you have connected to the specific device before, you don't type it with **Username** and **Password** again.

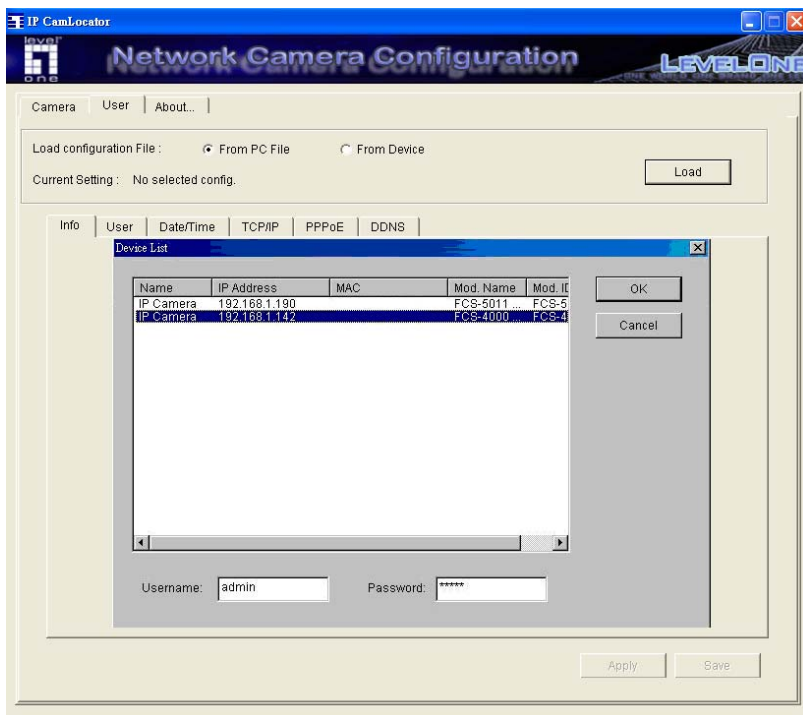

After loading, you can get configuration from PC files or devices. IP CamLocator displays the sub folders including Info, User, Date Time, TCP/IP, PPPoE and DDNS.

**Info**

The Info page provides you with product factory information, including Product Name,

Serial Number, Firmware Version and hardware version.

## User

The Network Camera default account and password setting is “root/MAC address (in capital letters)”. IP CamLocator provides to assign a password if the Network Camera is intended to be accessed by others. Use this menu to set the user names and passwords of Administrator and up to 9 different users (User 1 to User 9), and the access right of each user.

The screenshot shows the 'User' configuration tab in the IP CamLocator software. The window has a title bar 'IP CamLocator' and a menu bar with 'Camera', 'User', and 'About...'. Below the menu bar, there's a section for loading configuration files with radio buttons for 'From PC File' and 'From Device', and a 'Load' button. The 'Current Setting' is displayed as '192.168.50.125'. The main area contains a table with columns for 'User', 'Password', 'Confirm', and 'Mode'. The 'User' column lists 'Administrator' and 'User 1' through 'User 9'. The 'Password' and 'Confirm' columns have input fields, some with masked characters (\*\*\*\*). The 'Mode' column has dropdown menus. The 'Administrator' user is set to 'Admin' mode. For 'User 1', the 'Mode' dropdown is open, showing options: 'Admin', 'Operator', and 'Viewer'. At the bottom right, there are 'Apply' and 'Save' buttons.

User	Password	Confirm	Mode
Administrator	root	****	Admin
User 1			Admin
User 2			Admin
User 3			Admin
User 4			Admin
User 5			Admin
User 6			Admin
User 7			Admin
User 8			Admin
User 9			Admin

**Username** : Set a user name between 5 and 16 characters.

**Password** : Set a password between 5 and 16 characters.

**Confirm** : Re-type the password to confirm.

**Mode** : Set s user to **Admin**, **Operator** or **Viewer** mode.

## Date Time

The screenshot shows the 'IP CamLocator' application window with the 'Network Camera Configuration' title bar. The 'Date/Time' tab is selected in the top navigation bar. Below the navigation bar, there are tabs for 'Camera', 'User', and 'About...'. The main configuration area is divided into sections. The 'Load configuration File' section has two radio buttons: 'From PC File' (selected) and 'From Device', with a 'Load' button to the right. Below this, the 'Current Setting' is displayed as '192.168.50.125'. The 'Date/Time' section contains several fields: 'Current Setting' (2006年11月30日, 下午 03:16:21), 'PC clock' (2007年 4月 2日, 下午 05:34:02), and an 'Adjust' section with four radio buttons: 'Keep current setting' (selected), 'Synchronize with PC', 'Manual setting', and 'Synchronize with NTP'. The 'Manual setting' section has fields for '2004年 1月 1日' and '上午 12:00:00'. The 'Synchronize with NTP' section has an 'NTP server name' field with '0.0.0.0' and an 'Interval' dropdown set to '01' hours. The 'Time zone' dropdown is set to '(GMT+12:00) International Date Line West'. At the bottom, there is a checkbox for 'Automatically adjust clock for daylight saving time changes' which is unchecked. 'Apply' and 'Save' buttons are at the bottom right.

**Current date & time** : This displays the current date and time of the camera.

**PC clock** : This displays the date and time of the monitoring PC clock.

**Adjust** : Select one of four time adjusting modes.

**Keep current setting** : Select this mode to keep the current date and time of the camera.

**Synchronize with PC** : Select this mode to make the date and time of the camera the same as the monitoring PC.

**Manual setting** : Select this mode to manually adjust the date & time of the camera.

**Synchronize with NTP** : Specify the **NTP server name** and the refresh **Interval** to synchronize the date and time of the camera with those of the time server, known as the NTP (Network Time Protocol) server.

### Note:

- The NTP server (Network Time Protocol) is the time server which is an Internet standard protocol (built on top of TCP/IP) that assures accurate synchronization to the millisecond of computer clock times in a network of computers.

**NTP server name** : Type the host name or IP address of the NTP server, up to 64 characters.

**Time zone** : Select the time zone and time difference from Greenwich Mean Time in the area where the camera is installed from the pulldown box.



## TCP/IP

The screenshot shows the 'IP CamLocator' application window with the 'Network Camera Configuration' title bar. The 'TCP/IP' tab is selected. The 'Load configuration File' section has 'From Device' selected. The 'Current Setting' is '192.168.50.125'. The 'Http Port' is set to 'Port 80'. The 'MAC Address' field is empty. The 'IP Address' section has 'Obtain IP automatically (DHCP)' selected. The 'DNS Setting' section has 'Use the following DNS server' selected. The 'Primary DNS' and 'Secondary DNS' fields are both set to '0 . 0 . 0 . 0'. The 'Apply' and 'Save' buttons are at the bottom right.

**HTTP Port** : Select **port 80** in general situations. If you want to use a port number other than **80**, select the text box and enter a port number between 1024 and 65535.

### Note :

- When you have set the HTTP port number to a number other than 80 on the Network setting page or in the Setup Program, access the camera by typing the IP address of the camera on the web browser as follows:

Example: when HTTP port number is set to 2000 → http://192.168.0.100:2000/

**MAC Address** : Display the MAC address of the camera.

### IP Address

**Obtain IP automatically (DHCP)** : If a DHCP server is installed on the network, to select this while the IP address is assigned by the DHCP server.

### Note :

- When you set **Obtain IP automatically (DHCP)**, make sure that the DHCP server is working on the network.

**Use the following IP** : Select this when a fixed IP address is set.

**IP Address** : Enter the IP address of the camera.

**Subnet mask** : Enter the subnet mask.

**Default Gateway** : Enter the default gateway.

### DNS Setting

**Obtain DNS server automatically** : If a DHCP server is installed on the network, to select this while the DNS server is assigned by the DHCP server.

**Use the following DNS server** : Select this when you set the fixed address as the IP address of DNS server.

**Primary DNS** : Enter the IP address of the primary DNS server.

**Secondary DNS** : Enter the IP address of the secondary DNS server, if necessary.

## PPPoE

Use this when you connect the camera through PPPoE (Point -to- Point Protocol over Ethernet). PPPoE connection is the protocol that is widely used in xDSL (digital affiliate line such as ADSL, VDSL or SDSL) as the authentication and connection system.

The screenshot shows the 'IP CamLocator' web interface for 'Network Camera Configuration'. The 'Camera' tab is selected, and the 'Load configuration File' section has 'From Device' selected. The 'Current Setting' is '192.168.50.125'. The 'Info' tab is active, showing the 'PPPoe' section with 'On' selected. The 'DNS Setting' section has 'Obtain DNS server automatically' selected. The 'Primary DNS' and 'Secondary DNS' fields are both set to '0 . 0 . 0 . 0'. The 'User ID' field contains 'LevelOne', and the 'Password' and 'Confirm' fields are masked with asterisks. 'Apply' and 'Save' buttons are at the bottom right.

**IP Address** : The IP address obtained at the PPPoE connecting with network.

**User ID** : Enter the user ID for authentication necessary for PPPoE connections. Type it up to 64 characters.

**Password** : Enter the password for authentication necessary for PPPoE connections. Type it up to 32 characters.

**Confirm** : Re-type the password to confirm.

**Obtain DNS server automatically** : Select this to obtain the address of DNS server automatically.

**Use the following DNS server** : Select this when you set the fixed address as the IP address of DNS server.

**Primary DNS** : Enter the IP address of the primary DNS server.

**Secondary DNS** : Enter the IP address of the secondary DNS server.

## DDNS

The screenshot shows the 'IP CamLocator' web interface for 'Network Camera Configuration'. The 'DDNS' tab is selected. At the top, there are tabs for 'Camera', 'User', and 'About...'. Below these, there's a section for 'Load configuration File' with radio buttons for 'From PC File' and 'From Device', and a 'Load' button. The 'Current Setting' is displayed as '192.168.50.125'. The main configuration area for DDNS includes a toggle switch set to 'On'. Below the toggle are input fields for 'Server Name' (containing 'www.dyndns.org'), 'User ID' (containing 'LevelOne'), 'Password' (masked with asterisks), 'Confirm' (masked with asterisks), and 'Hostname' (containing 'levelone.homeip.net'). At the bottom right of the configuration area are 'Apply' and 'Save' buttons.

**Server Name** : Enter the name of the DDNS Server

**User ID** : Enter the user ID for authentication necessary for DDNS connections. Type it up to 64 characters.

**Password** : Enter the password for authentication necessary for DDNS connections. Type it up to 32 characters.

**Confirm** : Re-type the password to confirm.

**Hostname** : Enter the host name that is registered to the DDNS server.

### Note :

- When you want to use DDNS function, you need to register an account in DDNS server first.

## About

This page displays IP CamLocator information including Version, Copyright and Product Date information

## How to Access to the Network Camera

This chapter introduces how to monitor the image from the camera using Microsoft web browser. The LevelOne video server and Network camera can be used with Microsoft web browsers and IP CamLocator in Windows operation systems. This section focuses on introducing camera web server. The recommended browser for Windows is Internet Explorer 6.0 or above.

The functions of the camera should be set by the Administrator.

### Initial accessing the network camera

Start your web browser, and enter the IP address or host name of the network camera of LevelOne in the Location / Address field of your browser. Use the default account “root” and default password which is the MAC address (in capital letters). After successful login, there would a screen appear for ActiveX. Click “**Install**” and proceed. Then the monitor image will be displayed in your browser.






#### Note :

The default user name and password are set at the factory for the administrator. You can change them in the **Account** Menu under **Setting** on later pages.

## Configuration of Main Console

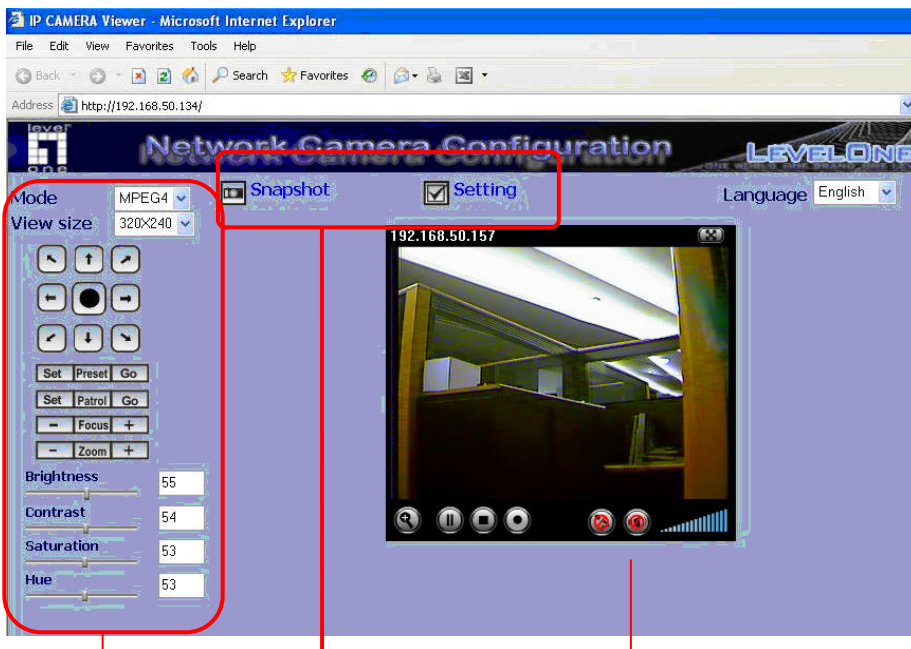

Camera control panel

Main menu

Monitor image Section

## Main menu



### Snapshot

Click this button to capture a live image shot by the camera and store the picture in your computer. See details on later pages.




### Setting

This function is only for the Administrator. Click this button to get into the **Basic** and **Advance settings** menu.

### Language

You can click the pulldown box to select system language, including English, German, Danish, Greek, Traditional Chinese and Korean.

### Camera control panel

1. Click the pulldown box Mode  to choose between MPEG4 and MJPEG video compression mode.
2. Click **View Size** to select the desired display image resolution among 640X480, 320X240, and 160X120.



3. Pan / Tilt control buttons :

Click the arrow button of the direction you want the IP camera to move.

**Note:** This function is only for PTZ Cameras. You can also Pan/Tilt cameras by left-clicking the main screen


4. **Other camera control functions :**




Move the camera toward the preset direction.



Before you start this function, you need to specify **Guard tour settings** in the **Setting Menu** under **Advance / Patrol** setting.

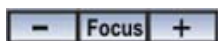

Adjust camera focus.

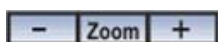

Adjust camera zoom.



You can use the tool bar to optimize video brightness, contrast, and saturation. You can also modify the **Picture** settings in the **Setting Menu** under **Basic Setting**.

### 5. Audio buttons :



: Speakers turned on.



: Microphone turned on.



: Volume control bar.





: Speakers turned off.



: Microphone turned off.

Note : This function is only for Cameras which support audio.

-  It means the speakers of your computer are turned on to transmit the sounds from the connected IP camera(s). Similarly,  means you can broadcast to the connected IP camera(s) via the Ethernet using your microphone.

### 6. Video play buttons:



: Zoom in.



: Stop the current video.



: Pause the current video.



: Play the video.



: Digital Zoom in /out.


## Adjusting the Monitor Image




### Monitoring the camera image

1. Log into the homepage to display the main console.
2. Select between **MPEG4** and **MJPEG** video compression mode.
3. Click the **View Size** box to choose among 640X480, 320X240 or 160X120 resolution.

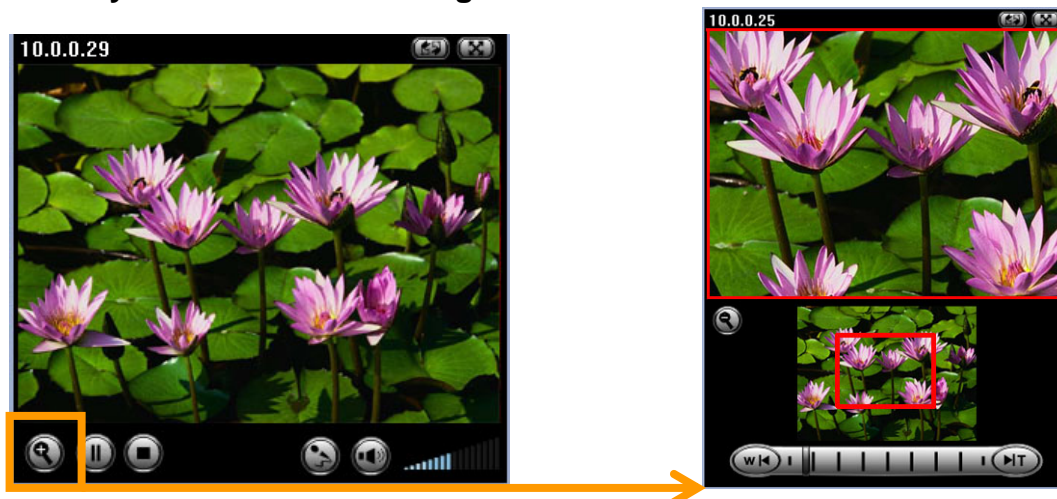

## Directly zoom in / out the image via the monitor window



1. Click  to display the zoom in window.
2. Pull the  to adjust the zoom range, and it will be showed on the above window.
3. You can use the right click of your mouse to move the  to any where on the window.

## Operating the camera

You can control the camera direction, Zoom, Focus, or let the camera automatically monitor according to your settings.


**Note :** This function is only for P / T / Z camera series.

## Controlling the camera via the control panel

### Pan / Tilt control


Click the arrow button of the direction in which you want to move the camera. Keep the button pressed to move the camera continuously.

Click  to move the camera back to the default position.

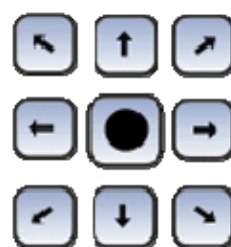

### Zoom control

Press "+" to zoom in, and "-" to zoom out. Keep the button pressed to continue zooming.

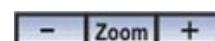





## Moving the camera to a preset position


Select a Preset position to move the camera from the Main console or use the advanced preset function from "Preset Position Setting".



## Setting from Main Console

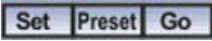
1. Login to the Main console.
2. Press  on the **Preset** section , and a setting dialog will appear.
3. Click "**Preset 1**" to set the direction, and save.
4. Follow the same step to set the other default preset positions.
5. Click "**OK**" to finish.
6. Press  on the **Preset** section  to make the camera run automatically.

## Setting from the "Setting" menu


1. Click "**Setting**"  in Main console and a **Setting** dialog will appear.
2. Select "Advanced" → "Preset position" → "Setting".

## Capturing the monitor image

You can capture a still image shot by the camera and save it in your computer.

1. Press , and a snapshot window will appear.
2. Click the right button of your mouse and save the picture in your computer.
3. Select **JPEG** or **Bit map** under **Save as type**.
4. Specify **File name**, choose **Save in location**, and click **Save**.
5. Click "**Close**" to return to the **Main console**.

## Setting the camera

Press  for setting the camera. Only the administrator has access to the Settings. This section, including Basic and Advance settings, explains each option and how to use it. For camera control, please see "How to use".

### How to use Basic setting

Basic setting options includes System, Camera , Network, and Account.

### How to use Advance setting

Advance setting options includes PTZ control, Preset position, Patrol, FTP Client , SMTP, Schedule, Alarm output , Alarm buffer, Motion Detection.

## Motion Detection

When you click **Motion Detection** on main panel menu, the Motion Detection setting menu appears. There are three Motion Detection functions as sensors to set for different detecting zones. Each one has Threshold and Sensitivity inputs which you can adjust to specific zone

sequentially. Motion Detection function can support to FTP, SMTP and Alarm output for capturing and sending images or starting alarm output.

**Language**

You can click the pulldown box to select system language, including English, German, Danish, Greek, Traditional Chinese and Korean.


## Basic Setting

Click the “Basic” folder to display the sub folders, including System, Camera, Network, and Account.

### System

#### Information

The Information page provides you with product factory information, including product name, serial number, firmware version, Web version and hardware version.

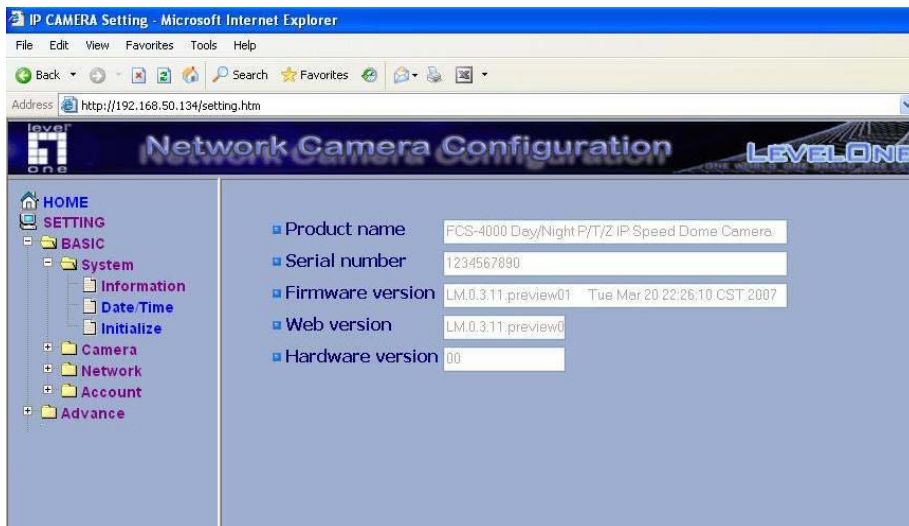

## Day & Time

IP CAMERA Setting - Microsoft Internet Explorer

Address: http://192.168.50.134/setting.htm

**Network Camera Configuration**

**Left Sidebar:**

- HOME
- SETTING
- BASIC
  - System
  - Information
  - Date/Time
  - Initialize
- Camera
- Network
- Account
- Advance

**Main Content Area:**

**Current date/time:** 1970-01-02 07:22:04

**PC clock:** 2007-06-05 17:44:54

**Date/time format:** yyy-mm-dd hh:mm:ss

**Adjust:**

- ☒ Keep current setting
- ☐ Synchronize with PC
- ☐ Manual setting
- ☐ Synchronize with NTP

**Manual setting details:**

2007 - 06 - 05

17 : 44 : 50

**Synchronize with NTP details:**

NTP server name:

☐ Auto

Interval: 1 hours

**Time zone:** (GMT-12:00) International Date Line West

**Buttons:** OK, Cancel

**Current date/time** : This displays the current date and time of the camera.

**PC clock** : This displays the date and time of the monitoring PC clock.

**Date & time format** : Click the pulldown box to select among different time display formats, including yyyy-mm-dd hh:mm:ss (year-month-day hour:minute:second), mm-dd-yyyy hh:mm:ss (month-day-year hour:minute:second), and dd-mm-yyyy hh:mm:ss (day-month-year hour:minute:second).

**Adjust** : Select one of four time adjusting modes.

**Keep current setting** : Select this mode to keep the current date and time of the camera.

**Synchronize with PC** : Select this mode to make the date and time of the camera the same as the monitoring PC.

**Manual setting** : Select this mode to manually adjust the date & time of the camera.

**Synchronize with NTP** : Specify the **NTP server name** and the Refresh **Interval** to synchronize the date and time of the camera with those of the time server, known as the NTP (Network Time Protocol) server.


### Note:

- The NTP server (Network Time Protocol) is the time server which is an Internet standard protocol (built on top of TCP/IP) that assures accurate synchronization to the millisecond of computer clock times in a network of computers.

**NTP server name** : Type the host name or IP address of the NTP server, up to 64 characters.

**Time zone** : Select the time zone and time difference from Greenwich Mean Time in the area where the camera is installed from the pulldown box.

## Initialize

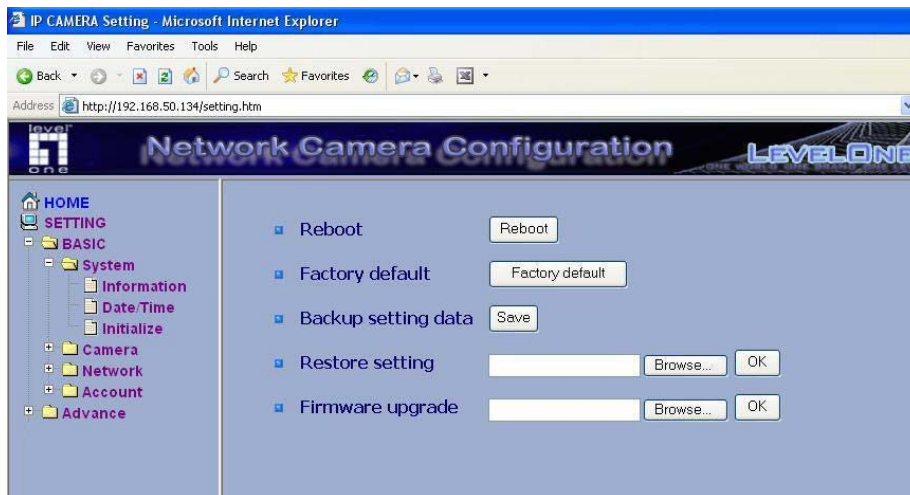

**Reboot** : Click this button to reboot the camera. A confirmation dialogue will appear. Click **OK** to proceed. It takes about two minutes to reboot the camera.

**Factory default** : Click this button to reset the camera to the factory default settings. A confirmation dialogue will appear. Click **OK** to proceed, the network indicator on the camera will start to blink. After completing adjustments to the default settings, the camera will reboot automatically. Do not turn off the camera until the camera reboots.

**Backup setting data** : Save the setting data of the camera to a file. Click **Save**, and follow the instructions on the browser to save the setting data file to your specified location.

**Restore setting** : Load the saved setting data of the camera. Click **Browse** and select the file in which the setting data is stored. Click **OK**, and the camera is adjusted according to the loaded data and restarted.


**Firmware update** : Upgrade the camera software. Click **Browse** and select the file for upgrading. A confirmation dialogue will appear. Click **OK** to start upgrading. The camera will reboot upon completion.

### Note:

- Use only upgrade files that are special for this camera. Problems may occur otherwise.
- Do not turn off the camera power or disconnect the network until the upgrading is completed.

## Camera


### General

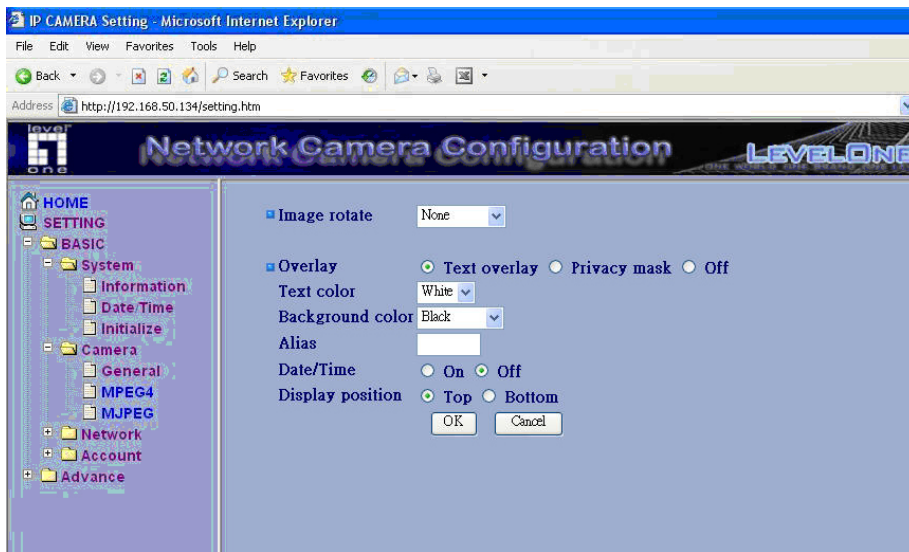

**Image Rotate** : Select to Mirror, Rotate, or Mirror & Rotate the display image.

**Overlay** : Select to add Text Overlay or Privacy Mask on the display screen. The Text Overlay enables users to see Date/Time on the screen. The Privacy Mask enables users to conceal an area of the video image.

## MPEG4

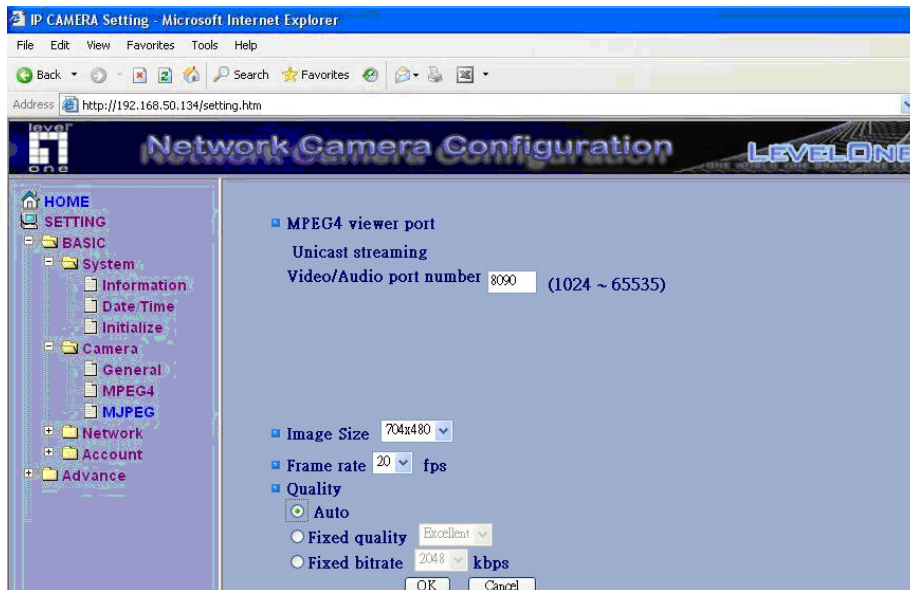

### MPEG4 view port

**Unicast streaming Video/Audio port number** : Specify the transmission port number of the video data. It is initially set to 8090. Specify an even number from 1024 to 65534.

#### Note :

- **Unicast streaming** : Specify the transmission port number of the video data and audio data used when **UDP (Unicast)** is selected with the TCP/UDP transmission switching icon in the main viewer.

**Image Size** : Specify the image size the network camera transmits. You can choose among **704 × 480**, **352 × 240** and **176 × 120** for **NTSC mode** and **704 × 576**, **352 × 288** and **176 × 144** for **PAL mode**.

**Frame rate** : Set the frame rate of the MPEG4 image. Selectable values are 5, 10, 15, 20, 25, 30 fps. The unit “fps” stands for “frames sent per second”.

### Quality

**Auto** : The quality and bitrate will be automatically decided according to the frame rate.


**Fixed Quality** : Set the selectable values are Medium, Standard, Good, Detailed and Excellent.

**Fixed Bitrate** : Set the bit rate of MPEG4 image transmission for a line. Selectable values are 64, 128, 256, 384, 512, 768, 1024, 1536 and 2048 kbps.

#### Note :

- The selected frame rate and bit rate are a tentative value. The actual frame rate and bit rate may be different according to the image size, the shooting scene or the network condition.

## MJPEG

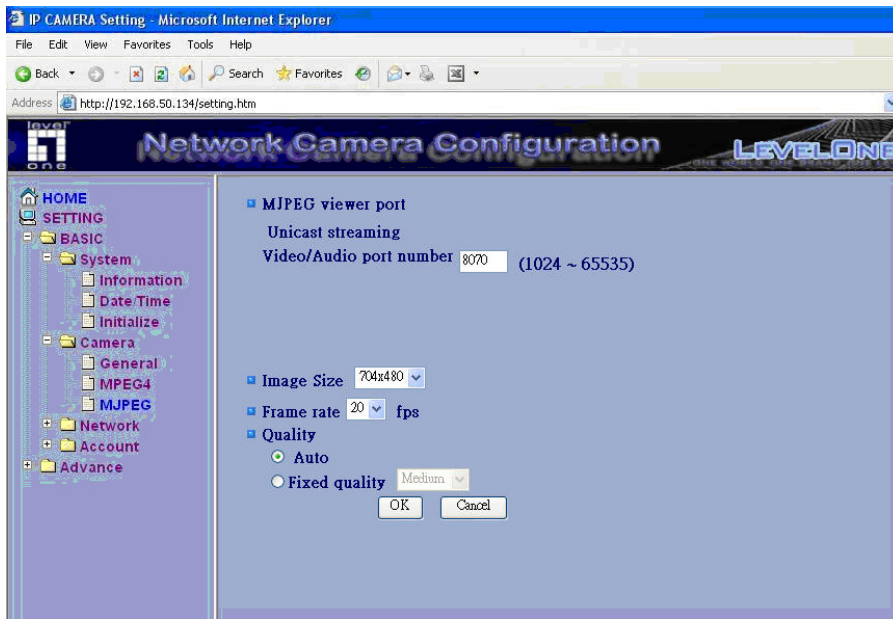

### MJPEG view port

**Unicast streaming Video/Audio port number** : Specify the transmission port number of the video data. It is initially set to 8070. Specify an even number from 1024 to 65534.

*Note :*

- **Unicast streaming** : Specify the transmission port number of the video data and audio data used when **UDP (Unicast)** is selected with the TCP/UDP transmission switching icon in the main viewer.

**Image Size** : Specify the image size the network camera transmits. You can choose among **704 × 480**, **352 × 240** and **176 × 120** for **NTSC mode** and **704 × 576**, **352 × 288** and **176 × 144** for **PAL mode**.

**Frame rate** : Set the frame rate of the MPEG4 image. Selectable values are 5, 10, 15, 20, 25, 30 fps. The unit “fps” stands for “frames sent per second”.

### Quality

**Auto** : The quality and bitrate will be automatically decided according to the frame rate.


**Fixed Quality** : Set the selectable values are Medium, Standard, Good, Detailed and Excellent.



## Network

The Network Camera default account and password setting is “root/MAC address(in capital letters)”. It is necessary to assign a password if the Network Camera is intended to be accessed by others.

## Information

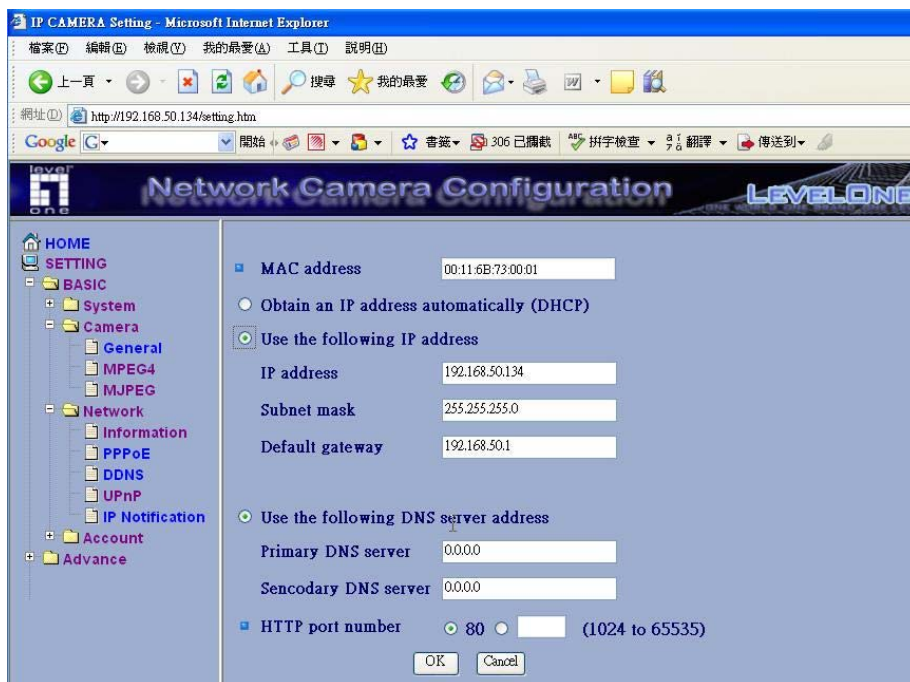

**MAC address** : Display the MAC address of the camera.

**Obtain an IP address automatically (DHCP)** : If a DHCP server is installed on the network, to select this while the IP address is assigned by the DHCP server.

**Note** :

- When you set **Obtain an IP address automatically (DHCP)**, make sure that the DHCP server is working on the network.

**Use the following IP address** : Select this when a fixed IP address is set.

**IP address** : Enter the IP address of the camera.

**Subnet mask** : Enter the subnet mask.

**Default gateway** : Enter the default gateway.

**Use the following DNS server address** : Select this when you set the fixed address as the IP address of DNS server.

**Primary DNS server** : Enter the IP address of the primary DNS server.

**Secondary DNS server** : Enter the IP address of the secondary DNS server, if necessary.

**HTTP port number** : Select **80** in general situations. If you want to use a port number other than **80**, select the text box and enter a port number between 1024 and 65535.


**Note** :

- When you have set the HTTP port number to a number other than 80 on the Network setting page or in the Setup Program, access the camera by typing the IP address of the camera on the web browser as follows:

Example: when HTTP port number is set to 2000 → http://192.168.0.100:2000/

## PPPoE

Use this when you connect the camera through PPPoE (Point-to-Point Protocol over Ethernet). PPPoE connection is the protocol that is widely used in xDSL (digital affiliate line such as ADSL, VDSL or SDSL) as the authentication and connection system.

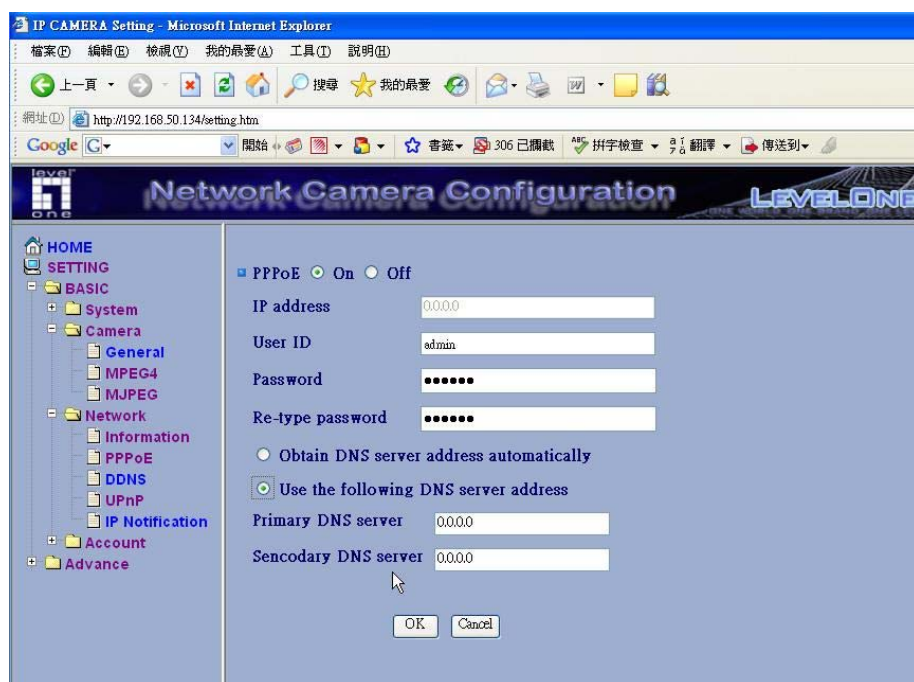

**IP address** : The IP address obtained at the PPPoE connecting with network.

**User ID** : Enter the user ID for authentication necessary for PPPoE connections. Type it up to 64 characters.

**Password** : Enter the password for authentication necessary for PPPoE connections. Type it up to 32 characters.

**Re-type password** : Re-type the password to confirm.


**Obtain DNS server address automatically** : Select this to obtain the address of DNS server automatically.

**Use the following DNS server address** : Select this when you set the fixed address as the IP address of DNS server.

**Primary DNS server** : Enter the IP address of the primary DNS server.

**Secondary DNS server** : Enter the IP address of the secondary DNS server.

## DDNS

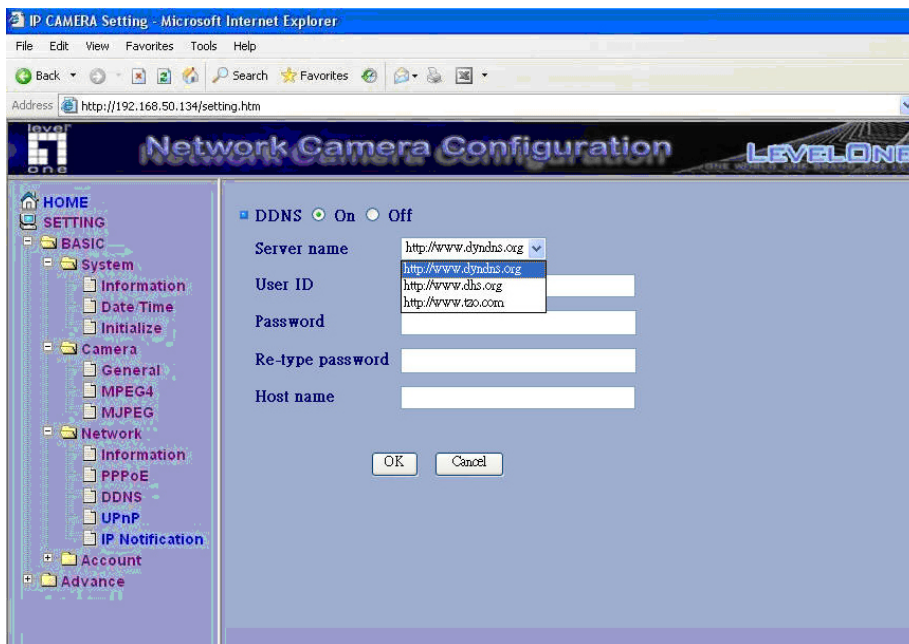

**Server name** : Choose the name of the DDNS Server

**User ID** : Enter the user ID for authentication necessary for DDNS connections. Type it up to 64 characters.

**Password** : Enter the password for authentication necessary for DDNS connections. Type it up to 32 characters.

**Re-type password** : Re-type the password to confirm.


**Host name** : Enter the host name that is registered to the DDNS server.

**Note** :

- When you want to use DDNS function, you need to register an account in DDNS server first.

## UPnP

The camera includes support for UPnP, which is enabled by default. If also enabled on your computer, the camera will automatically be detected and a new icon will be added to "My Network Places." It provides port forwarding for opening a port in a router or firewall in a private network in order to let a party from the outside world contact a user inside.

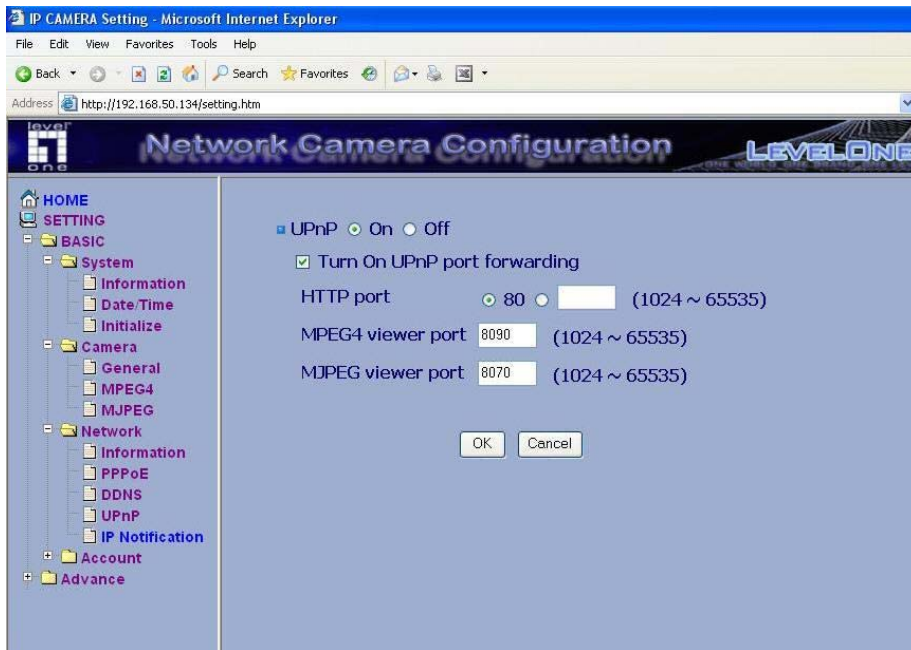


**HTTP port** : Enter the HTTP port number and default HTTP port is 80.

**MPEG4 viewer port** : Enter the MPEG4 viewer port number and default MPEG4 viewer port is 8090.

**MJPEG viewer port** : Enter the MJPEG viewer port number and default MJPEG viewer port is 8070.

## IP Notification

When network notify type is set to On, you can send an e-mail notification of the completion of the network setting.

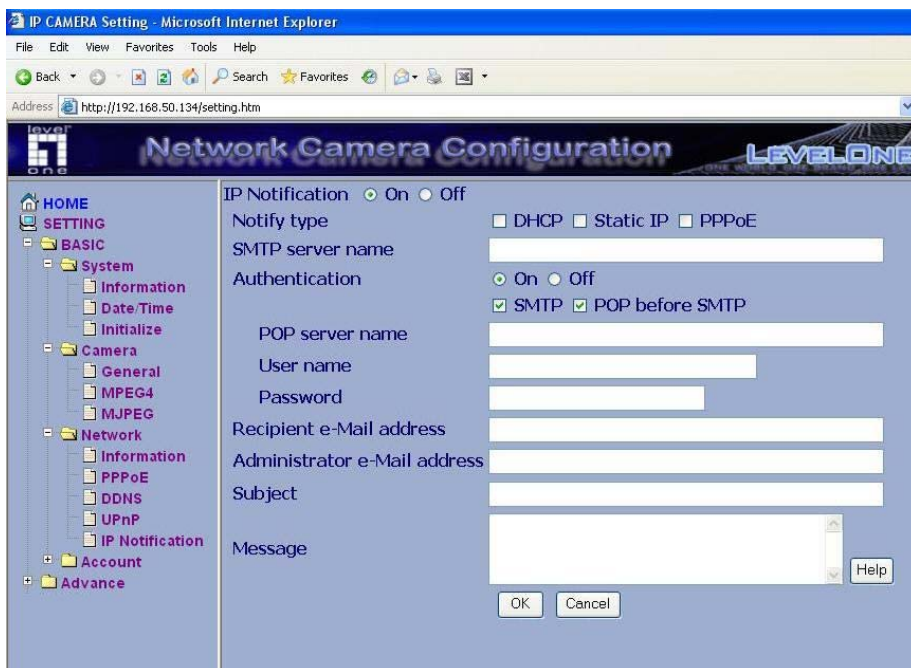

**Notify type** : Select type of DHCP, Static IP and PPPoE will notify.

**SMTP server name** : Type the SMTP server name up to 64 characters, or the IP address of the SMTP server.

**Authentication** : Select the authentication required when you send an email.

**Off**: Select if no authentication is necessary when an email is sent.

**On**: When authentication is necessary an e-mail is sent, select one of the authentication methods from the followings.

**SMTP**: Select if SMTP authentication is necessary when an e-mail is sent.

**POP before SMTP**: Select if POP before SMTP authentication is necessary when an e-mail is sent.

**Note :**

- When you set to **On**, be sure to select either or both **SMTP** or/and **POP before SMTP**.

**POP server name**: It is necessary when the **POP before SMTP** is selected in **Authentication**.

Type the POP (receiving mail) server name up to 64 characters, or type the IP address of the POP server. This setting is necessary when the SMTP server which sends e-mails performs authentication using the POP user account.

**User name, Password** : Type the user name and Password of the user who has the mail account. This setting is necessary when the SMTP server which sends e-mails performs authentication.

**Recipient e-mail address** : Type the recipient e-Mail address up to 64 characters. You can specify up to three recipient E-mail addresses.

**Administrator e-mail address** : Type the Administrator e-Mail address up to 64 characters. This address is used for reply mail and sending system messages from the SMTP server.

**Subject** : Type the subject/title of the e-Mail up to 64 characters. With respect to mail which is sent according to the IP notification.

**Message**

Type the text of the E-mail up to 384 characters. Default value provide network information including IP, Port, MAC, Model and Serial..

## Account

### Setting

The Network Camera default account and password setting is “root/MAC address(in capital letters)”. It is necessary to assign a password if the Network Camera is intended to be accessed by others. Use this menu to set the user names and passwords of Administrator and up to 9 different users (User 1 to User 9), and the access right of each user.

User ID	User name	Password	Re-type Password	Viewer mode
Administrator	root	.....	.....	Admin
User 1				Admin
User 2				Admin
User 3				Admin
User 4				Admin
User 5				Admin
User 6				Admin
User 7				Admin
User 8				Admin
User 9				Admin

Viewer authentication ☒ On ☐ Off

OK Cancel

### Setting

**User name** : Set a user name between 5 and 16 characters.

**Password** : Set a password between 5 and 16 characters.

**Re-type password** : Re-type the password to confirm.

**Viewer Mode** : Set a user to **Admin**, **Operator** or **Viewer** mode.

**Viewer authentication** : Allows any viewer direct access to Live View.




## Advance Setting

Click the “Advance” folder to display the sub folders, including Preset position, Patrol, FTP Client, SMPT, Alarm output, Schedule, Alarm Input, Alarm buffer, Motion Detection.

### PTZ Control

In this section, it provides Pan, Tilt, Zoom, Focus, Iris and Auto Pan speed control setting saved, as well as the Protocol, Baud rate and Address which depend on Speed Dome control module.

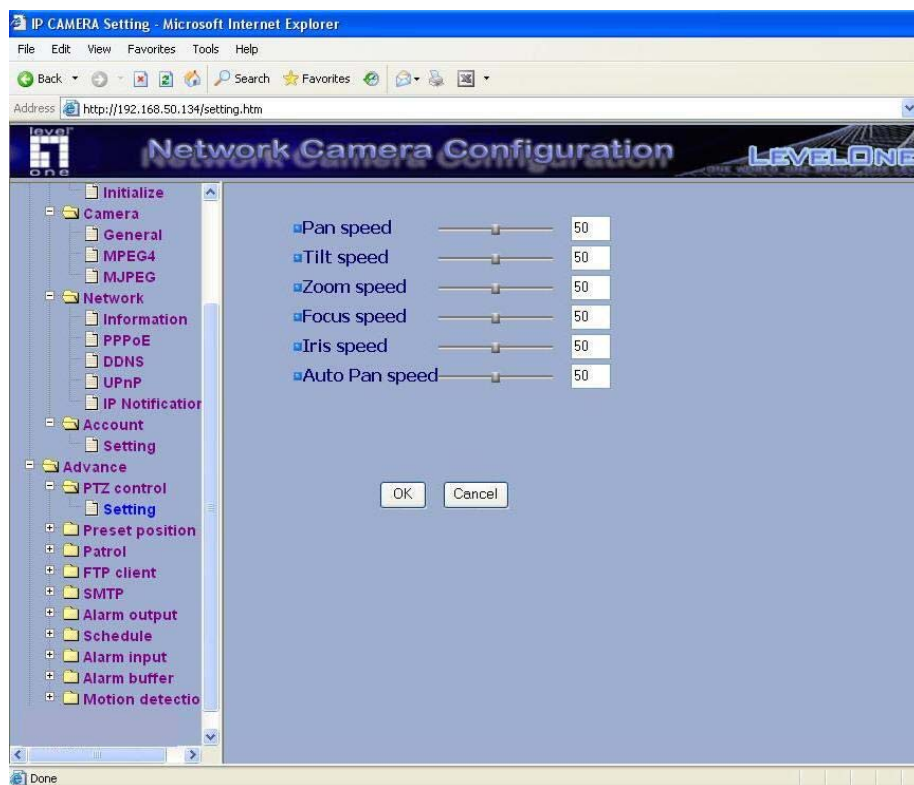

### Setting

**Pan speed** : Use it to move bar from 0 to 100.

**Tilt speed** : Use it to move bar from 0 to 100.

**Zoom speed** : Use it to move bar from 0 to 100.


**Focus speed** : Use it to move bar from 0 to 100.

**Iris speed** : Use it to move bar from 0 to 100.

**Auto Pan speed** : Use it to move bar from 0 to 100.

## Preset Position

In this section, up to 32 Pan / Tilt and Zoom positions can be saved, as well as the home position, which the camera faces to when the power is turned on.

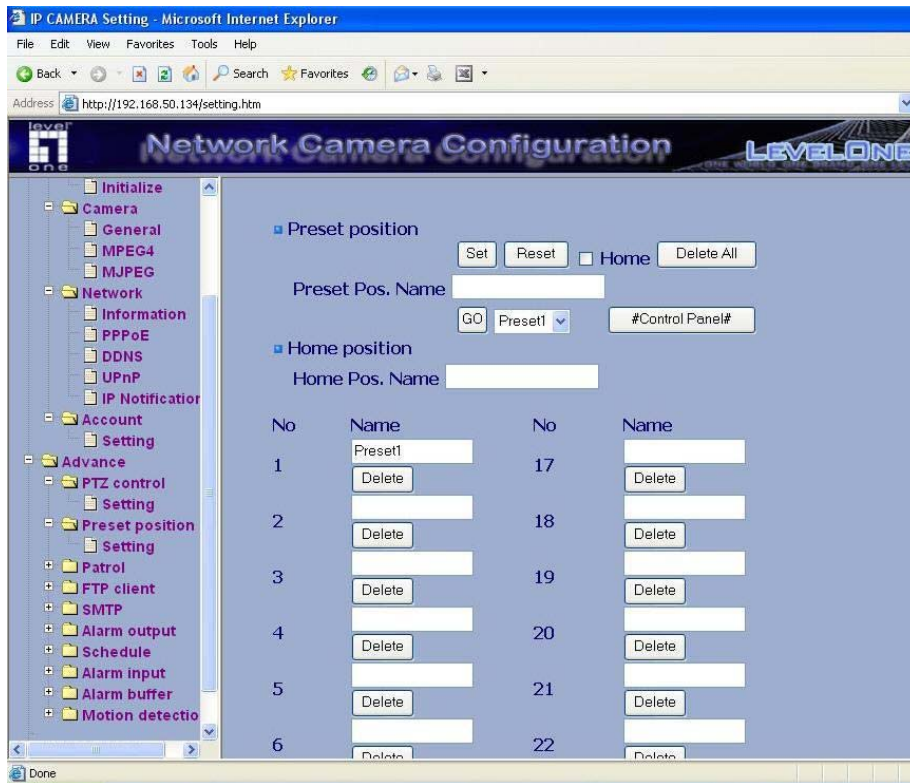

## Setting

**Set** : Use it to save the camera position to a preset number.

Carry out the following steps.

1. Move the camera to the position to be saved while you are checking the image with the main console.
2. Write the preset position name in Preset Pos. Name text box.
3. Click the **SET**. The camera position is saved.
4. If want to set this position as home position, click Home option on. Click the **SET**. The camera position is saved as home position.

### Note :

- Setting the new Home position will replace previous Home position.

**Reset** : When writing the preset position name in Preset Pos. Name text box, press **Reset** to clean filed words.

**Delete All** : Be careful! When pressing **Delete All**, all Preset Position information will be deleted.


**Delete** : Select a preset number from 1 to 32 in the list box. Use it to delete specific number



preset position setting.

## Patrol

There are four patrol tours to set for composing different preset positions. Each one lists up to 8 positions which can be programmed, and the camera moves to the programmed positions sequentially. The camera stops when it moves to the last preset position.

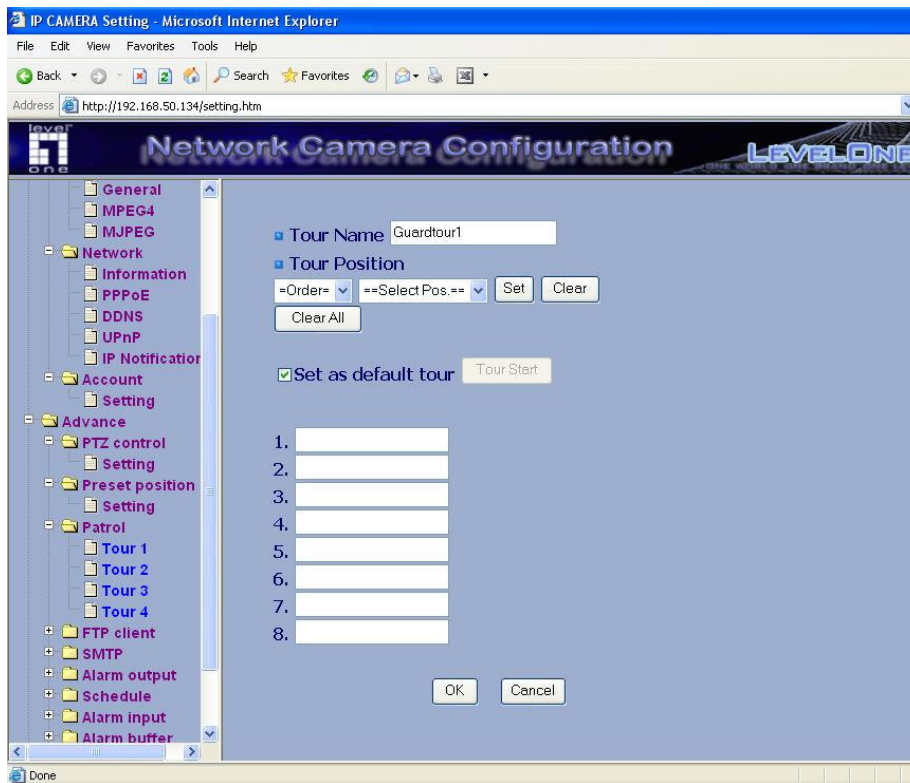

## General

**Tour name** : Rename the tour name.

### Tour position

**Order** : There are 8 orders to select for camera directions.

**Select Pos.** : There are up to 32 preset positions to choose for each order.

**Recall** : When you click **Recall**, the camera moves to position of the selected preset number.

**Clear** : When setting specific preset number position to tour, click **Clear** to clear this direction information.

**Clear All** : Be careful! When you click **Clear All**, it will clear this tour all information out.

**Set** : Use it to save the camera position to a preset number.

**Set as default tour** : Click it on to set this tour as default.

**Tour Start** : To click **Tour Start**, and the camera moves on patrol tour.

**Tour Stop** : While the camera moves on patrol tour, click **Tour Stop** to stop the patrol tour.

Carry out the following steps :


1. Click "**Order**" to choose one of eight orders.
2. Click **Select Pos.** to set the preset position.

3. Click the **SET**. The tour position is saved.
4. Follow the steps to set the other orders.
5. Click the **OK** to save the tour.

## FTP Client

Use this menu to set up for capturing and sending images to an FTP server. By using FTP client function, you can send the image and audio file which has been shot and recorded linked with the external sensor input or with the built-in motion detection function to FTP server. FTP client setting menu is composed of two tabs, **General**, **Alarm sending** and **Periodical sending**.

### General

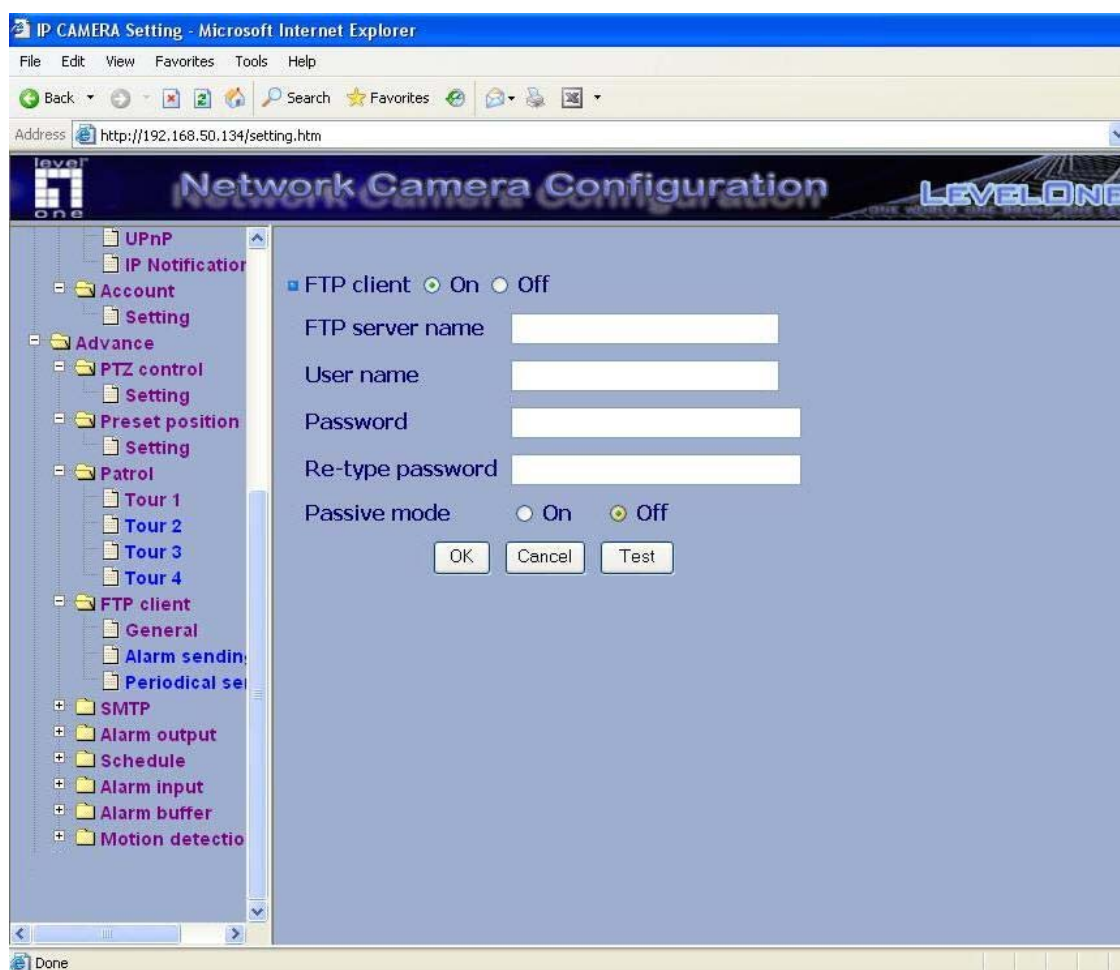

**FTP client function** : To activate the FTP client function, select **On**. The FTP client setting page appears. When you do not wish to use the FTP client function, select **Off**.

#### Note :

- The frame rate and operability on the main viewer may decrease while a file is being transmitted by the FTP client function.

**FTP server name** : Type the FTP server name to upload still images up to 64 characters, or the IP address of the FTP server.

**User name** : Type the user name for the FTP server.


**Password** : Type the password for the FTP server.

**Retype password** : To confirm the password, type the same characters as you typed in the Password box.

**Passive mode** : Set whether you use the passive mode of FTP server or not when connecting to FTP server. Select **On** to connect to FTP server using the passive mode.

## Alarm sending

Set to forward the image and audio file to the specified FTP server linked with the alarm detection by the external sensor input or by the built-in motion detection function. Select **On** to send the image and audio file to FTP server linked with the alarm detection.

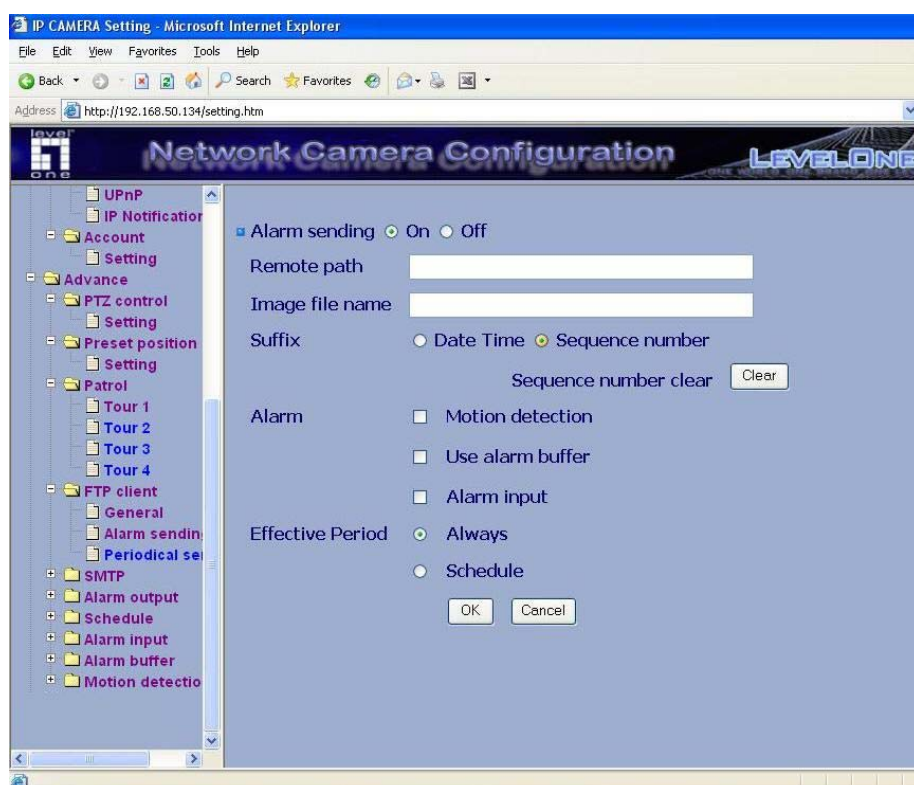

**Remote path** : Type the path to the destination in FTP server up to 64 characters.

**Image file name** : Type the file name you want to assign to the images when sending to the FTP server. You can use up to 10 alphanumeric characters, - (hyphen) and \_ (underscore) for naming.

**Sensor input 1** : Click it on for using external sensor which is connected to sensor input1 of the camera I/O port.

**Sensor input 2** : Click it on for using external sensor which is connected to sensor input2 of the camera I/O port.

**Sensor input 3** : Click it on for using external sensor which is connected to sensor input3 of the camera I/O port.

**Sensor input 4** : Click it on for using external sensor which is connected to sensor input4 of the camera I/O port.

**Motion Detection** : Click it on for using **Motion Detection** function as a sensor. You can set

the motion detection function page.


**Note :**

- **Motion Detection** works only when the Video mode is set to **MPEG-4** and the **Cropping** is set to **Off**.

**Alarm buffer :** Select **Use alarm buffer** when you forward the image/ audio of before and after the alarm detection (pre-alarm, post-alarm). If you do not select it, only the image of the moment of the alarm detection is forwarded. Click **Alarm buffer** to display the Alarm buffer setting menu. For details, see “Setting the Alarm Buffer — Alarm buffer setting Menu on page.

## Periodical sending

You can set to send an image file to FTP server periodically by selecting **On** to send the image file to FTP server linked with setting period.

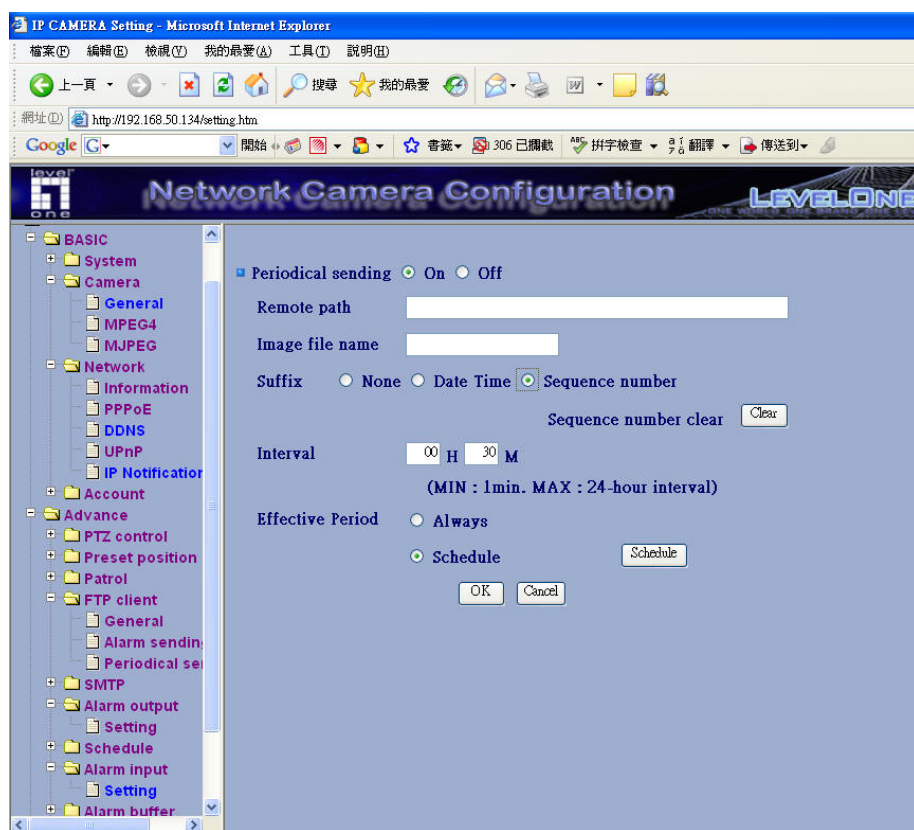

**Remote path :** Type the remote path up to 64 characters.

**Image file name :** Type the file name of the image sent to FTP server up to 10 alphanumeric characters, - (hyphen) and \_ (under score).

**Suffix :** Select a suffix to be added to the file name sent to FTP server.

**None :** The name of the sent file will be the Image file name.

**Date & time :** The date & time suffix is added to the Image file name. The date & time suffix consists of lower two-digits of year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits) and second (2 digits), and consecutive number (2 digits), thus 14-digit number is added to the file name.

**Sequence number** : A **consecutive** number is added to the Image file name.

**Sequence number clear** : Click **Clear** and the suffix of the sequence number returns to 1.

**Interval** : Set the periodical sending is effective interval. Min value is 1 min and Max value is 24 hour.

**Effective period** : Set the period when the periodical sending is effective.

**Always** : The periodical sending is always effective.


**Schedule** : You can specify the period when the periodical sending is effective in the schedule setting in the other section. Click **Schedule** and the setting menu for the effective period is displayed.

## SMTP

Set the SMTP menu when you want to send an image via e-mail. By using Mail (SMTP) function, you can send a mail with attached image which has been shot linked with the external sensor input or with the built-in motion detection function. The image file can also be sent periodically. E-Mail (SMTP) setting menu is composed of three tabs, **General**, **Alarm sending** and **Periodical sending**.

### General

Select **On** when you use the SMTP function. The common setting options are displayed below. If you do not wish to use the e-Mail (SMTP) function, select **Off** and click **OK**.

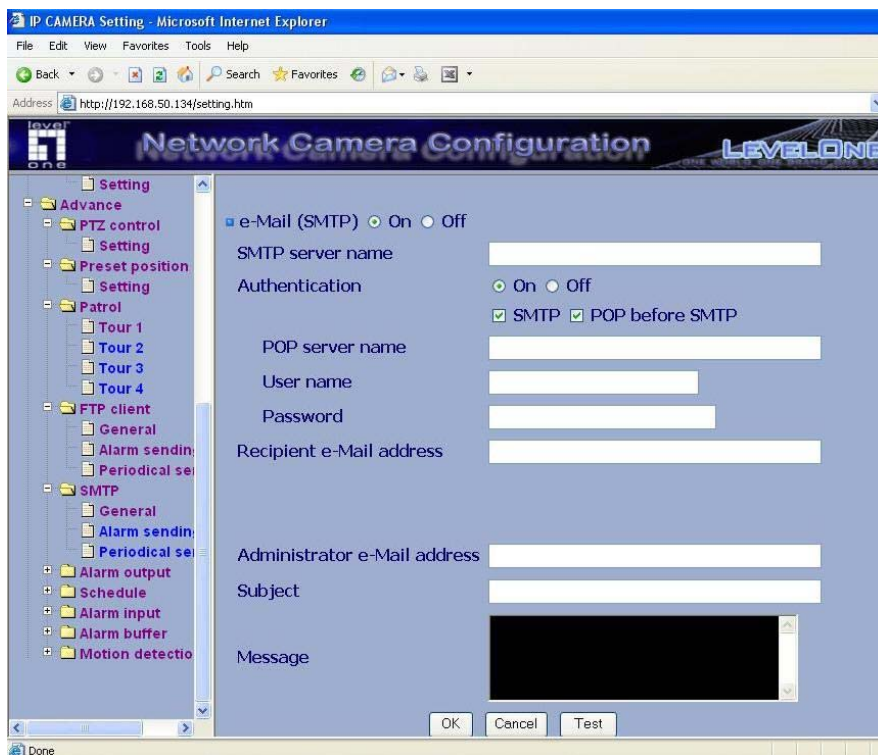

### Note :

- During transmission of an image file via mail, the frame rate and operation performance of the monitor image of the main viewer decline.
- While the camera video mode is set to **MPEG-4**, the image of the composite video signal output from the video output connector of the camera may be distorted during mail transmission.
- You cannot send an audio file by using the mail sending function.

**SMTP server name** : Type the SMTP server name up to 64 characters, or the IP address of the SMTP server.

**Authentication** : Select the authentication required when you send an email.



**Off:** Select if no authentication is necessary when an email is sent.

**On:** When authentication is necessary an e-mail is sent, select one of the authentication methods from the followings.

**SMTP:** Select if SMTP authentication is necessary when an e-mail is sent.

**POP before SMTP:** Select if POP before SMTP authentication is necessary when an e-mail is sent.

**Note :**

- When you set to **On**, be sure to select either or both **SMTP** or/and **POP before SMTP**.

**POP server name:** It is necessary when the **POP before SMTP** is selected in **Authentication**.

Type the POP (receiving mail) server name up to 64 characters, or type the IP address of the POP server. This setting is necessary when the SMTP server which sends e-mails performs authentication using the POP user account.

**User name, Password :** Type the user name and Password of the user who has the mail account. This setting is necessary when the SMTP server which sends e-mails performs authentication.

**Recipient e-mail address :** Type the recipient e-Mail address up to 64 characters. You can specify up to three recipient E-mail addresses.


**Administrator e-mail address :** Type the Administrator e-Mail address up to 64 characters. This address is used for reply mail and sending system messages from the SMTP server.

**Subject :** Type the subject/title of the e-Mail up to 64 characters. With respect to mail which is sent according to the alarm detection when **Alarm sending** of the alarm tab is set to **On**, the characters standing for the sensor type added to the subject.

**Message :** Type the text of the E-mail up to 384 characters. (A line break is equivalent to 2 characters.)

**Alarm sending**

Set to send the mail with connection to the alarm detection by the external sensor input or by the built-in motion detection function.

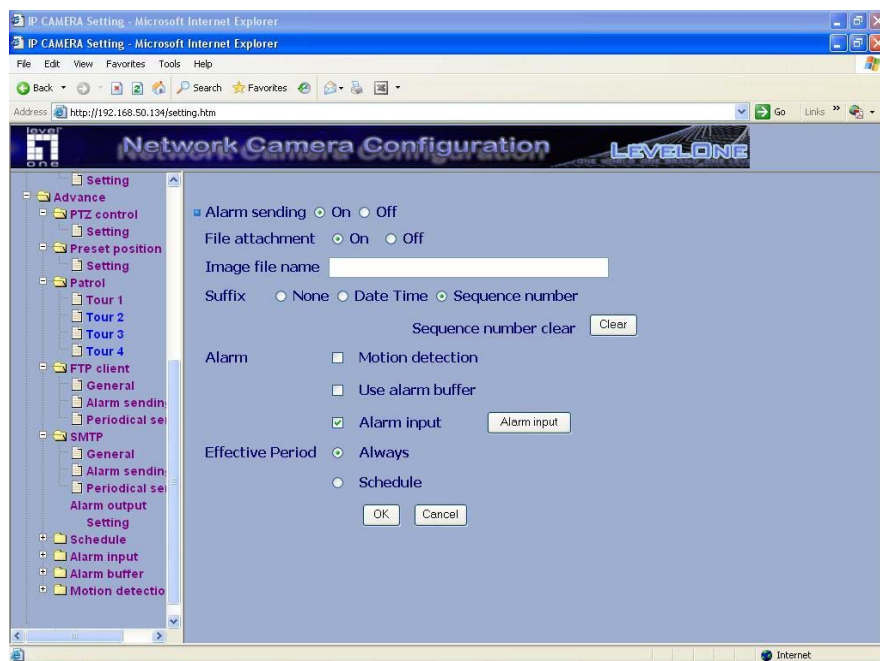

**Alarm sending** : Select **On** to set to send mail with connection to the alarm detection.

**File attachment** : Set whether an image file is attached to the mail sent or not. When **On** is selected, the image file made by the settings below is attached. When **Off** is selected, only the message is sent.

**Image file name** : Type the file name you want to assign to the image to attach a mail. You can use up to 10 alphanumeric, - (hyphen) and \_ (underscore) for naming.

**Sensor input 1** : Click it on for using external sensor which is connected to sensor input1 of the camera I/O port.

**Sensor input 2** : Click it on for using external sensor which is connected to sensor input2 of the camera I/O port.

**Sensor input 3** : Click it on for using external sensor which is connected to sensor input3 of the camera I/O port.

**Sensor input 4** : Click it on for using external sensor which is connected to sensor input4 of the camera I/O port.


**Motion Detection** : Click it on for using **Motion Detection** function as a sensor. You can set the motion detection function page.

**Note** :

- **Motion Detection** works only when the Video mode is set to **MPEG-4** and the **Cropping** is set to **Off**.

## Periodical sending

You can set to send an image file by SMTP server periodically by selecting **On** to send the image file by SMTP server linked with setting period

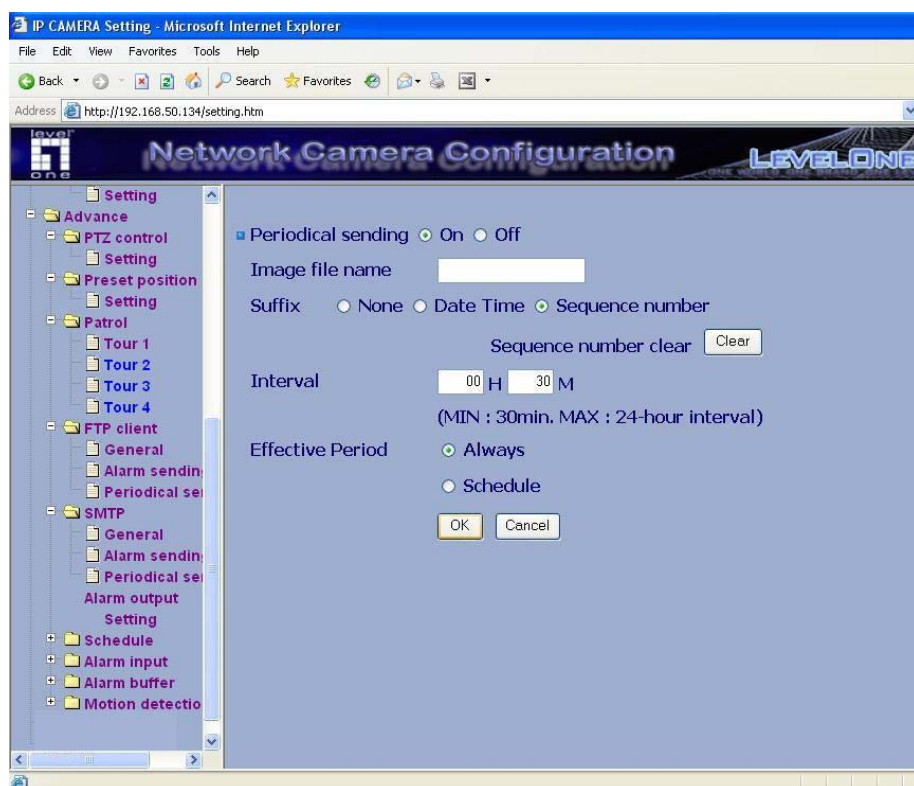

**Image file name** : Type the file name of the image sent by SMTP up to 10 alphanumeric characters, - (hyphen) and \_ (under score).

**Suffix** : Select a suffix to be added to the file name sent by SMTP.

**None** : The name of the sent file will be the Image file name.

**Date & time** : The date & time suffix is added to the Image file name. The date & time suffix consists of lower two-digits of year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits) and second (2 digits), and consecutive number (2 digits), thus 14-digit number is added to the file name.

**Sequence number** : A **consecutive** number is added to the Image file name.

**Sequence number clear** : Click **Clear** and the suffix of the sequence number returns to 1.

**Interval** : Set the periodical sending is effective interval. Min value is 30 min and Max value is 24 hour.


**Effective period** : Set the period when the periodical sending is effective.

**Always** : The periodical sending is always effective.

**Schedule** : You can specify the period when the periodical sending is effective in the schedule setting in the other section. Click **Schedule** and the setting menu for the effective period is displayed.

## Schedule

When you click **Schedule** on the Advanced mode menu, the Schedule setting menu appears. This is the same menu as the setting menu which is displayed when you click **Schedule** to set Effective period and Schedule in FTP client setting menu, e-Mail (SMTP) setting menu, Image memory setting menu, Alarm out setting menu and so on. Example: When setting e-Mail (SMTP) (the alarm sending) in the Schedule setting menu.

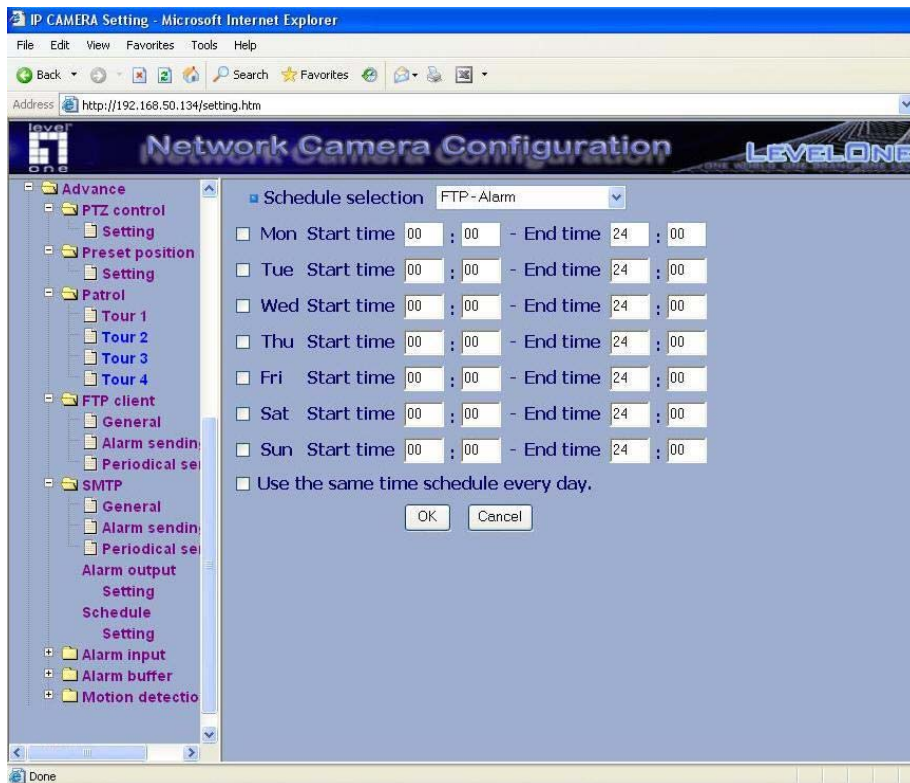

## Setting

### Schedule selection

Select the list box to specify the schedule you want to set. **e-Mail (SMTP) – Alarm**, **e-Mail (SMTP) – Periodical**, **FTP – Alarm**, **FTP – Periodical**, **Image memory – Alarm**, **Image memory – Periodical**, **Alarm output – Alarm** or **Alarm output – Timer**, can be selected.

### Mon (Monday) to Sun (Sunday)

The time period on the right of the checked day is the effective period of the schedule.

### Start time, End time

Specify the **Start time** and the **End time**.


### Use the same time schedule every day

When this is checked, the **Start time** and **End time** set to **Mon** (Monday) are applied to all days. In this case, the **Start time** and **End time** of the other days than **Mon** (Monday) cannot be input.

## Alarm Input

When you click **Alarm Input** on the Advance mode menu, the Alarm output setting menu appears. You can set in this menu to control the external alarm input of I/O port on the rear of the camera linked to FTP and SMTP sending function.

**Note :** This function is only for Cameras which support digital input/output.

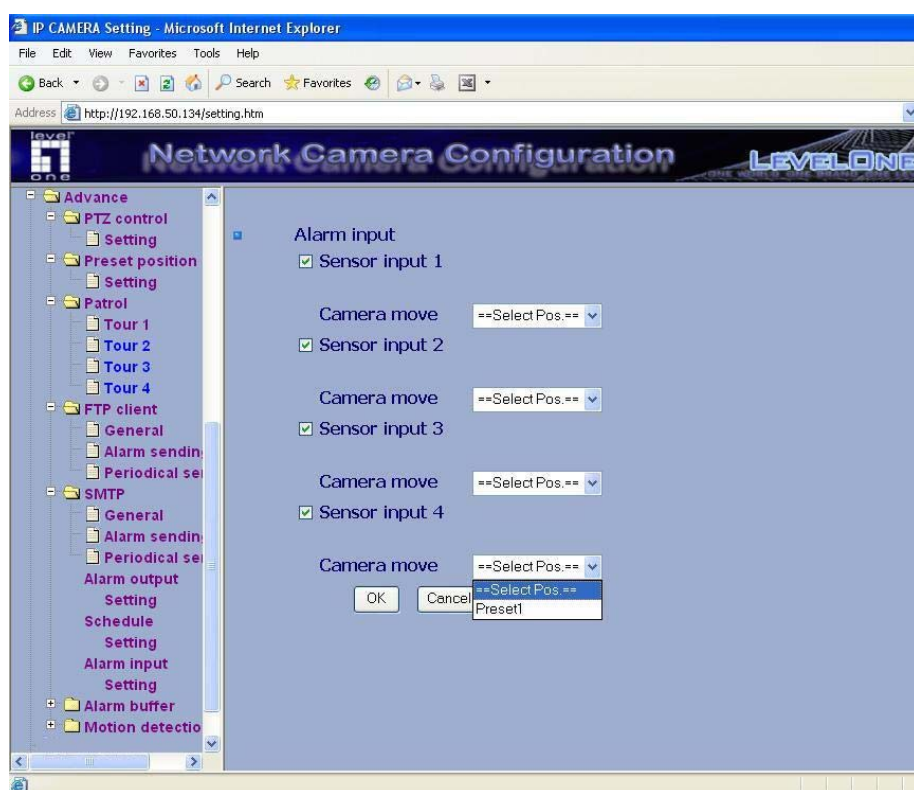

## Setting

**Sensor input 1 :** Click it on for using external sensor which is connected to sensor input1 of the camera I/O port. Select position for moving toward preset position when sensor input 1 be triggered.


**Sensor input 2 :** Click it on for using external sensor which is connected to sensor input2 of the camera I/O port. Select position for moving toward preset position when sensor input 2 be triggered.

**Sensor input 3 :** Click it on for using external sensor which is connected to sensor input3 of the camera I/O port. Select position for moving toward preset position when sensor input 3 be triggered.

**Sensor input 4 :** Click it on for using external sensor which is connected to sensor input4 of the camera I/O port. Select position for moving toward preset position when sensor input 4 be triggered.

## Alarm Buffer

You can set the Pre-alarm image and audio (the image and audio before the alarm detection) and the Post - alarm image and audio. These can be set when **Alarm sending** FTP client setting menu or Image memory setting menu is set to **On**, and besides when **Use alarm buffer** is selected.

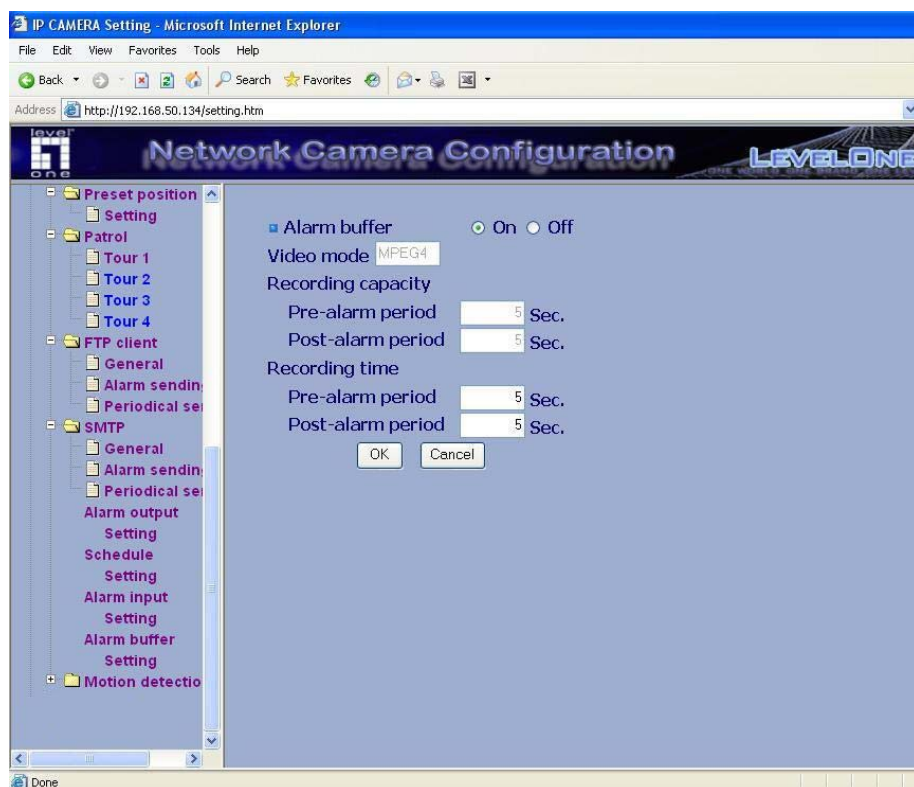

## Setting

**Alarm buffer** : To activate the Alarm buffer function, select **On**. The basic setting options are displayed below. When you do not use the Alarm output function, select **Off**.

### Recording capacity

**Pre-alarm period** : Display the maximum recording capacity of image/audio before the alarm detection.

**Post-alarm period** : Display the maximum recording capacity of image/audio after the alarm detection.

### Recording time

Set the recording time for the Pre-alarm image/audio and Post alarm image/audio.

**Pre alarm period** : Type it with recording time of the image/audio before the alarm detection.

**Post alarm period** : Type it with recording time of the image/audio after the alarm detection.

### Note :


- The value of Recording capacity differs depending on Image size, Bitrate (for MPEG4) and

Image quality (for MJPEG-4 and MJPEG) in the camera setting menu.



## Motion Detection

When you click **Motion Detection** on the Advance mode menu, the Motion Detection setting menu appears. There are three Motion Detection functions as sensors to set for different detecting zones. Each one has Threshold and Sensitivity inputs which you can adjust to specific zone sequentially. Motion Detection function can support to FTP, SMTP and Alarm output for capturing and sending images or starting alarm output.

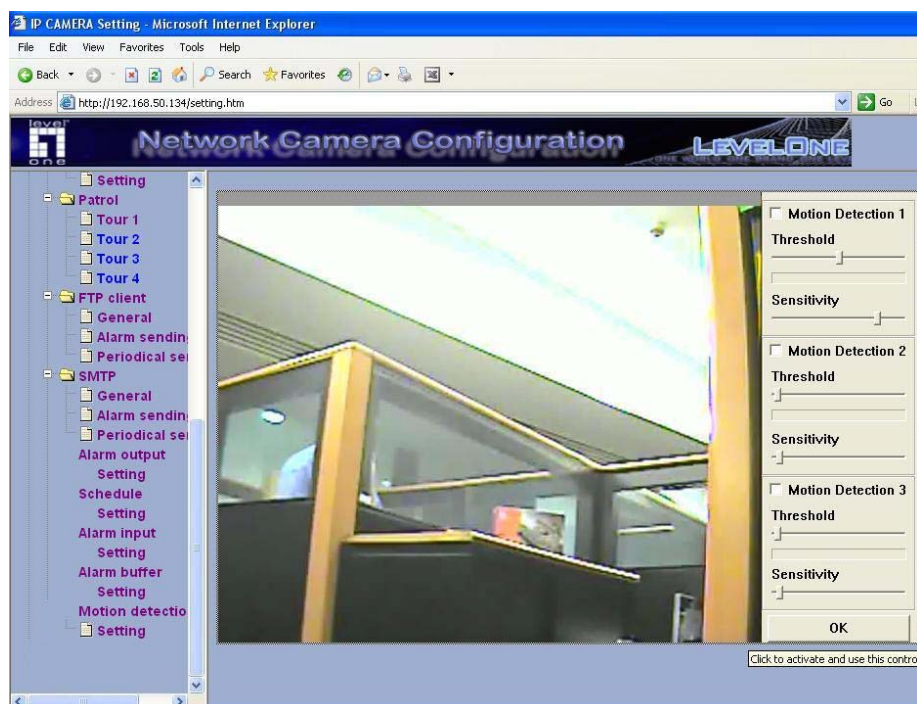

Click it **On** when you use the Motion Detection function and detecting zone appears for adjusting and moving. The common setting options are displayed below. If you do not wish to use the Motion Detection function, click it **Off** and press **OK**.

**Motion Detection 1** : Click it on for using **Motion Detection 1** function as a sensor. You can adjust and move the detecting zone by using mouse.

**Motion Detection 2** : Click it on for using **Motion Detection 2** function as a sensor. You can adjust and move the detecting zone by using mouse.

**Motion Detection 3** : Click it on for using **Motion Detection 3** function as a sensor. You can adjust and move the detecting zone by using mouse.

**Threshold** : You can use the tool bar to set up-limit value. When detecting zone signals are over setting value, it would carry on assigned work.

**Sensitivity** : You can use the tool bar to set down-limit value. When detecting zone signals are over setting value, it would carry on assigned work.

Carry out the following steps :

1. Click **On** to Motion Detection 1 choose one of eight orders.




2. A detecting zone 1 appears and use mouse to adjust and move the zone boundaries and position.
3. Use tool bar to set **Threshold** and **Sensitivity** value.
4. Follow the steps to set the other Motion Detection.
5. Click the **OK** to save the setting.

**Note :**

- Be careful! Motion Detection function don't work with Patrol function at same time.

## System Log

The **System Log** records all changes with time that the system has made.

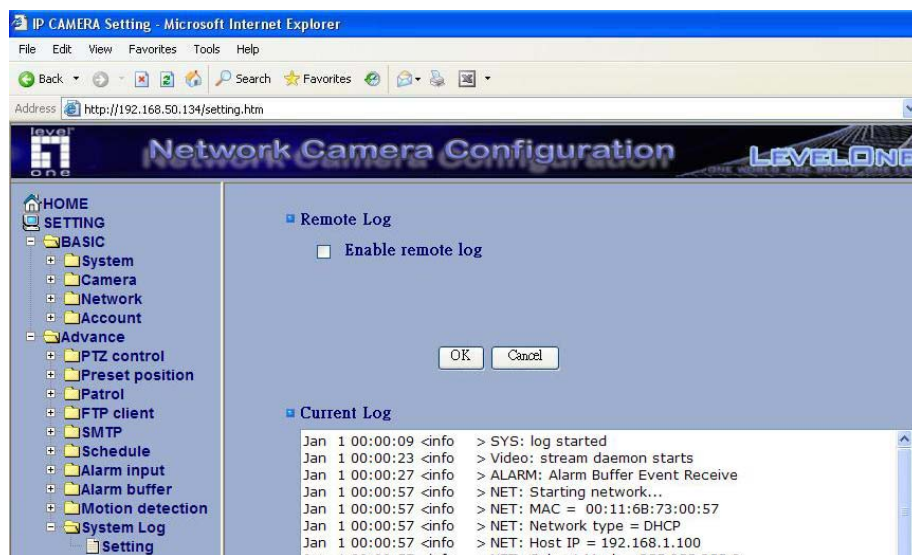

## Trouble shooting sheet

Troubles	Probable Reasons	Solutions
No action while power on. No image. The indicator isn't flashing.	Wrong power cable connection.	Reverse.
	The power adapter broken.	Change.
	Fuse broken.	Change.
	Power cable is not in well connection.	Reconnected.
	Firmware is hang up.	Start up with factory default setting by pressing the reset button over 5 seconds then releasing it.
Having image but can't control. The indicator isn't flashing.	The camera ID address is incorrect.	Recheck the sip switch
	Protocol is incorrect.	Recheck the dip switch
	Firmware is hang up.	Restart the IP Speed dome by pressing and releasing the reset button.
Unstable images	Poor video cable connection	Reinsert
	Power W is not enough	Change
Vague images	The focus is on manual operation.	Change into auto mode
	The smoked cover is dirty.	Clean up the cover



Restoring the factory defaults will erase any previous settings. Reset or restore the system after power on.

## Technical Parameters

Model	FCS-4000/4300	FCS-4100/4400	FCS-4200/4500
Compression Mode	MJEG/MPEG4		
Max. Resolution	704x480 pixels(NTSC) 704x576 pixels(PAL)		
Frame Rate	160x120: 30/25fps 320x240: 30/25fps 704x480: 30/25fps		
Sensor	1/4" Exview HAD CCD		
Lens	4.0~72mm/F1.4~3.0	3.5~91mm/F1.6~3.8	3.4~122.4mm/F1.6~4.5
Minimum Illumination	0.7Lux/F1.4	1.0Lux/F1.6	0.1Lux/F1.6
Shutter (sec)	1/1~1/10,000		
Audio Codec	G.711 PCM 64 kbit/s, ADPCM 32 kbit/s, MP3, MPEG4-AAC full duplex		
Pan	360° continuous		
Tilt	90°		
DI/DO	4 in / 1out		
Flash ROM	8MB		
SDRAM	32MB		
Zoom	Optical: 18x Digital: 12x	Optical: 26x Digital: 12x	Optical: 36x Digital: 12x
Power Supply	DC 12V , ± 5%		
Temperatures	0°C ~ + 50°C		
Humidity	≤ 95% non-condensing		

# GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.

59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

## Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all. The precise terms and conditions for copying, distribution and modification follow.

## GNU GENERAL PUBLIC LICENSE

### Terms And Conditions For Copying, Distribution And Modification

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it. Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control

compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.



## **NO WARRANTY**

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES

PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING,

## **REPAIR OR CORRECTION.**

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

All the source code of LevelOne GPL products are uploaded to <http://www.level1.com>

All the users can download freely.

