


Tech Note




Subject: How to use your LevelOne Bluetooth Dongle with WidComm software in Windows XP SP2??

Problem: I can not use Widcomm software as below picture after upgrade Windows XP to SP2.

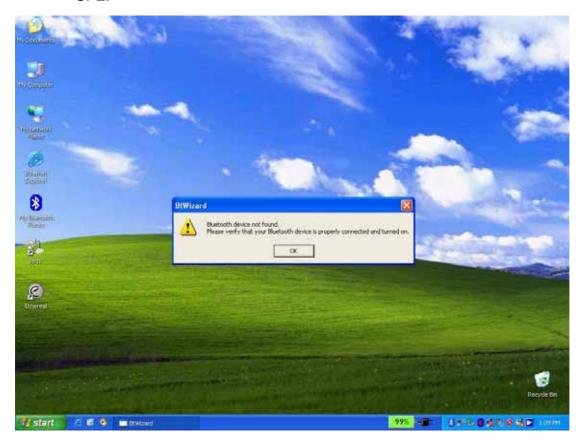


How:

- 1. Please go to "Device Manager".
- 2. Select "Properties" of Bluetooth Radios-Generic Bluetooth Radio as below picture.

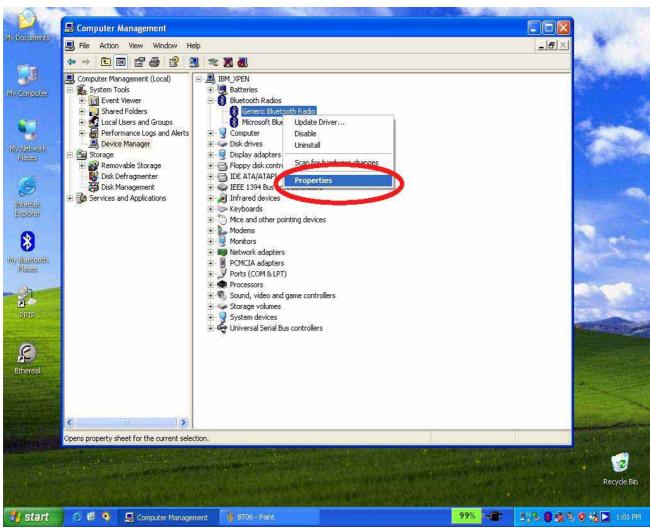

3. Select "Update Driver" Button.

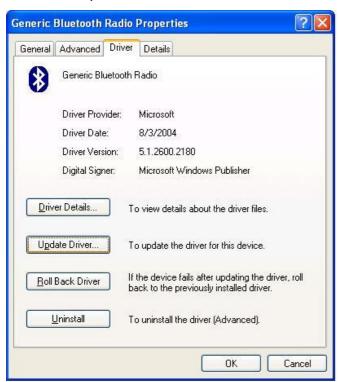


4. Please select "No, not this time", then click "Next" button.



5. Select "Install from a list specific location(Advanced)" then click "Next" button.



6. Select "Don't search, I will choose the driver to install." then click the "Next" Button.

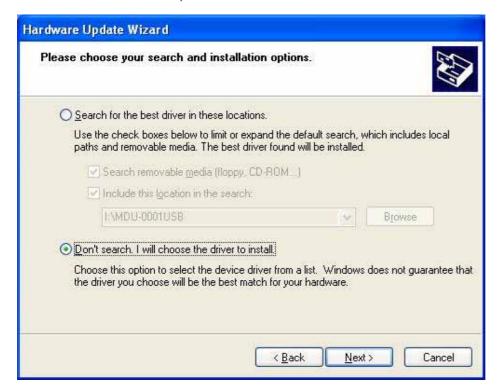

7. Select "LevelOne Bluetooth USB Device" then click "Next" button.

(MDU-0001v4 and MDU-0005v2 will show "CSR Bluetooth device" in this selection")



8. Click "Finish" button then you can start using Widcomm software.

