

LevelOne

FBR-1405TX

1 PORT BROADBAND ROUTER W/4 LAN Port

User's Manual

Version: 1.0

Introduction	3
Features.....	3
Minimum Requirements	3
Package Content	3
Get to know the Broadband Router	4
Back Panel	4
Front Panel	5
Setup Diagram.....	6
Getting started.....	7
Chapter 1	15
Quick Setup	15
Step 1) Time Zone	15
Step 2) Broadband Type.....	16
1.1 Cable Modem	17
1.2 Fixed-IP xDSL.....	18
1.3 PPPoE	19
1.4 PPTP	20
Chapter 2	23
General Settings	23
2.1 System	25
2.1.1 Time Zone	26
2.1.2 Password Settings	28
2.1.3 Remote Management.....	30
2.2 WAN.....	32
2.2.1 Dynamic IP	33
2.2.2 PPPoE (PPP over Ethernet).....	33
2.2.3 PPTP	33
2.2.4 Static IP Address.....	33
2.2.5 Bridge.....	34
2.2.6 DNS	36
2.2.7 DDNS.....	37
2.3 LAN	39
2.3.1 Interface.....	40
2.3.2 UPnP	42
2.4 NAT	43
2.4.1 Address Mapping.....	45
2.4.2 Virtual Server.....	47
2.4.3 Special Applications.....	49
2.5 Firewall	51
2.5.1 Access Control.....	53
2.5.2 URL Blocking	57
2.5.3 Schedule Rule	58
2.5.4 Intrusion Detection	60
2.5.5 DMZ	64

Chapter 3	66
Status.....	66
3.1 Status and Information	67
3.2 Internet Connection	68
3.3 Device Status	69
3.4 Security Log.....	70
3.5 DHCP Client Log.....	71
Chapter 4	72
Tool.....	72
4.1 Configuration Tools.....	73
4.2 Firmware Upgrade	74
4.3 Reset	75
<u>Appendix A.....</u>	<u>76</u>
Appendix B	77
Glossary	78

Introduction

Congratulations on purchasing LevelOne FBR-1405TX Broadband router. TheLevelOne FBR-1405TX Broadband Router is an incredibly fast router with 20 Mbps LAN to WAN throughput. TheLevelOne FBR-1405TX is a cost-effective IP Sharing Router that enables multiple users to share the Internet through an ADSL or cable modem. Simply configure your Internet connection settings in theLevelOne FBR-1405TX router and plug your PC to theLevelOne FBR-1405TX LAN port and you're ready to share files and access the Internet. As your network grows, you can connect another hub or switch to the router's LAN ports, allowing you to easily expand your network. TheLevelOne FBR-1405TX provides a total solution for the Small and Medium-sized Business (SMB) and the Small Office/Home Office (SOHO) markets, giving you an instant network today, and the flexibility to handle tomorrow's expansion and speed.

Features

- High Internet Access throughput (20M)
- Allow multiple users to share a single Internet line
- Supports up to 253 users
- Internet Access via Cable or xDSL modem
- Access Private LAN Servers from the Public Network
- Equipped with four LAN ports (10/100M) and one WAN port (10/100M)
- Support DHCP (Server/Client) for easy setup
- Support advance features such as: Special Applications, DMZ, Virtual Servers, Access Control, Firewall, and Bridge mode.
- Allow you to monitor the router's status such as: DHCP Client Log, Security Log and Device/Connection Status
- Easy to use Web-based GUI for configuration and management purposes
- Remote Management allows configuration and upgrades from a remote site (over the Internet)

Minimum Requirements

- One External xDSL (ADSL) or Cable modem with an Ethernet port (RJ-45)
- Network Interface Card (NIC) for each Personal Computer (PC)
- PCs with a Web-Browser (Internet Explorer 4.0 or higher, or Netscape Navigator 4.7 or higher)

Package Content

- One 4-port Broadband Router Unit
- One Quick Installation Guide
- One User Manual CD
- One Power Adapter
- Accessories

Get to know the Broadband Router

Back Panel

The diagram (fig1.0) below shows the broadband router's back panel. The router's back panel is divided into three sections, **LAN**, **WAN** and **Reset**:




Figure 1.0

1) Local Area Network (LAN)

The Broadband router's 4 LAN ports are where you connect your LAN's PCs, printer servers, hubs and switches etc.

2) Wide Area Network (WAN)

The WAN port is the segment connected to your xDSL or Cable modem and is linked to the Internet.


3) Reset

The Reset button allows you to do one of two things.

- 1) If problems occur with your router, press the router's reset button with a pencil tip (for less than 4 seconds) and the router will re-boot itself, keeping your original configurations.
- 2) If problems persist or you experience extreme problems or you forgot your password, press the reset button for longer than 4 seconds and the router will reset itself to the factory default settings (**warning**: your original configurations will be replaced with the factory default settings)

Front Panel

On the router's front panel there are LED lights that inform you of the router's current status. Below is an explanation of each LED and its description.

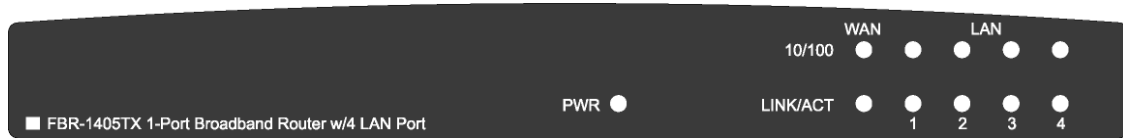

LED	Light Status	Description
PWR	ON	Router's power supply is on
WAN 10/100M	ON	WAN port 100Mbps is connected
	Off	WAN port 10Mbps is connected
WAN LNK/ACT	ON	WAN port is connected (LNK)
	Off	NO WAN connection
	Flashing	WAN port has Activity (ACT), data being sent
LAN 10/100M (Port 1-4)	ON	LAN port 100Mbps is connected
	Off	LAN port 10Mbps is connected
LAN LNK/ACT (Port 1-4)	ON	LAN port is connected (LNK)
	Off	NO LAN connection
	Flashing	LAN port has Activity (ACT) data being sent

Setup Diagram

Figure 1.2 below shows a typical setup for a Local Area Network (LAN).

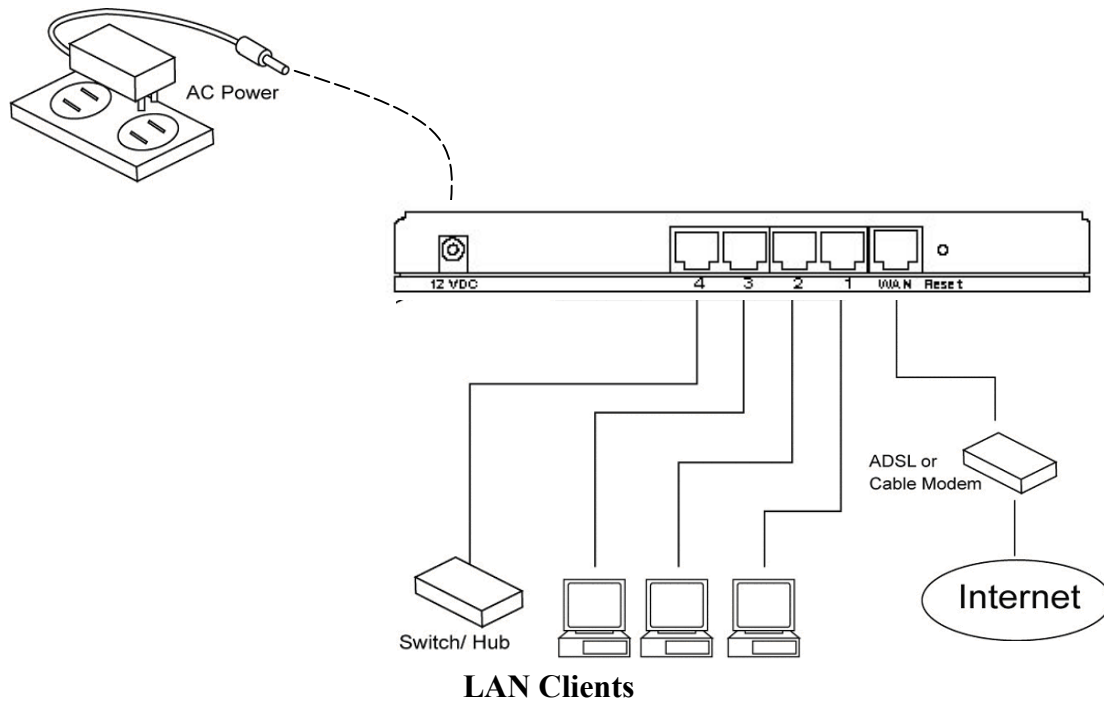


Figure 1.2

Getting started

This is a step-by-step instruction on how to start using the router and get connected to the Internet.


- 1) Setup your network as shown in the setup diagram above (fig 1.2).
- 2) You then need to set your LAN PC clients so that it can obtain an IP address automatically. All LAN clients require an IP address. Just like an address, it allows LAN clients to find one another. (If you have already configured your PC to obtain an IP automatically then proceed to step 3, page 11)

Configure your PC to obtain an IP address automatically

By default the broadband router's DHCP is on, this means that you can obtain an IP address automatically once you've configured your PC to obtain an IP address automatically. This section will show you how to configure your PC's so that it can obtain an IP address automatically for either Windows 95/98/Me, 2000 or NT operating systems. For other operating systems (Macintosh, Sun, etc.), follow the manufacturer's instructions. The following is a step-by-step illustration on how to configure your PC to obtain an IP address automatically for 2a) **Windows 95/98/Me**, 2b) **Windows XP**, 2c) **Windows 2000** and 2d) **Windows NT**.

2a) Windows 95/98/Me

- 1: Click the *Start* button and select *Settings*, then click *Control Panel*. The *Control Panel* window will appear.
- 2: Double-click *Network* icon. The *Network* window will appear.
- 3: Check your list of Network Components. If TCP/IP is not installed, click the *Add* button to install it now. If TCP/IP is installed, go to **step 6**.
- 4: In the *Network Component Type* dialog box, select *Protocol* and click *Add* button.
- 5: In the *Select Network Protocol* dialog box, select *Microsoft* and *TCP/IP* and then click the *OK* button to start installing the TCP/IP protocol. You may need your Windows CD to complete the installation.
- 6: After installing TCP/IP, go back to the *Network* dialog box. Select *TCP/IP* from the list of *Network Components* and then click the *Properties* button.
- 7: Check each of the tabs and verify the following settings:
 - **Bindings:** Check *Client for Microsoft Networks* and *File and printer sharing for Microsoft Networks*.
 - **Gateway:** All fields are blank.
 - **DNS Configuration:** Select *Disable DNS*.
 - **WINS Configuration:** Select *Disable WINS Resolution*.
 - **IP Address:** Select *Obtain IP address automatically*.

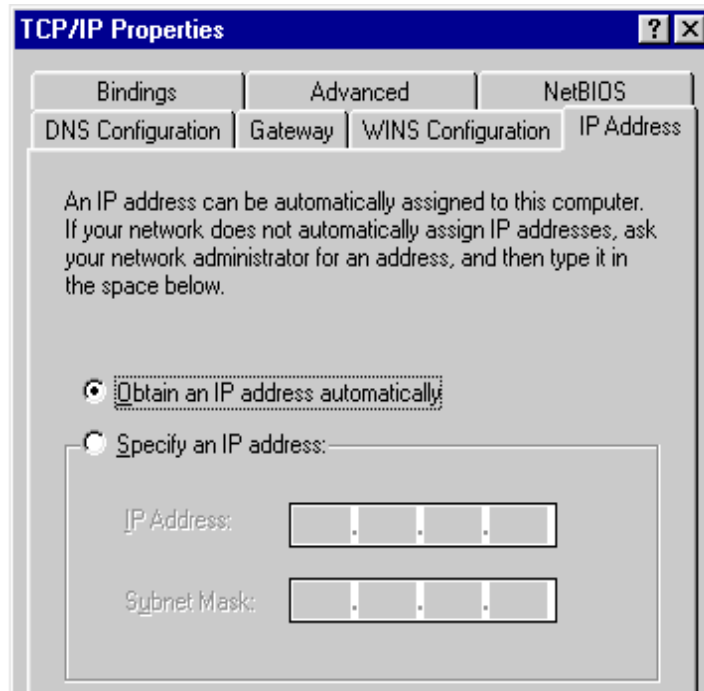


8: Reboot the PC. Your PC will now obtain an IP address automatically from your Broadband Router's DHCP server.

Note: Please make sure that the Broadband router's DHCP server is the only DHCP server available on your LAN.

Once you've configured your PC to obtain an IP address automatically, please proceed to Step 3 (Page 11).

2b) Windows XP

- 1: Click the *Start* button and select *Settings*, then click *Network Connections*. The *Network Connections* window will appear.
- 2: Double-click *Local Area Connection* icon. The *Local Area Connection* window will appear.
- 3: Check your list of Network Components. You should see *Internet Protocol [TCP/IP]* on your list. Select it and click the *Properties* button.
- 4: In the Internet Protocol (TCP/IP) Properties window, select *Obtain an IP address automatically* and *Obtain DNS server address automatically* as shown on the following screen.

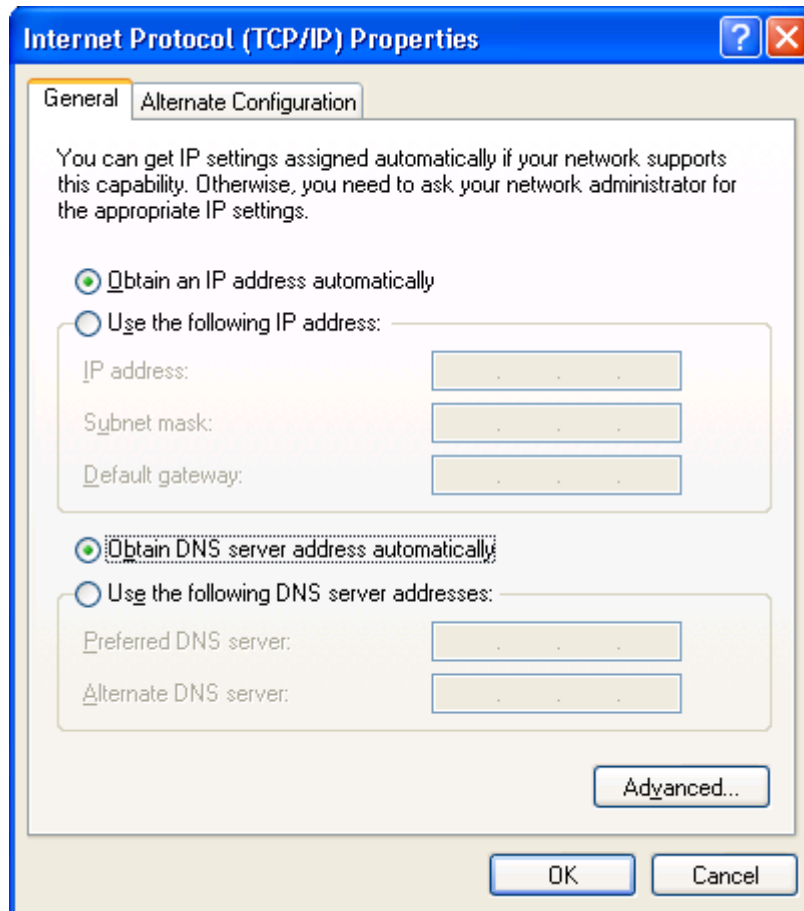

5: Click **OK** to confirm the setting. Your PC will now obtain an IP address automatically from your Broadband Router's DHCP server.

Note: Please make sure that the Broadband router's DHCP server is the only DHCP server available on your LAN.

Once you've configured your PC to obtain an IP address automatically, please proceed to Step 3 (Page 12).

2c) Windows 2000

1: Click the *Start* button and select *Settings*, then click *Control Panel*. The *Control Panel* window will appear.


2: Double-click *Network and Dial-up Connections* icon. In the *Network and Dial-up Connection* window, double-click *Local Area Connection* icon. The *Local Area Connection* window will appear.

3: In the *Local Area Connection* window, click the *Properties* button.

4: Check your list of Network Components. You should see *Internet Protocol [TCP/IP]* on your list. Select it and click the *Properties* button.

5: In the Internet Protocol (TCP/IP) Properties window, select *Obtain an IP address*

automatically and *Obtain DNS server address automatically* as shown on the following screen.

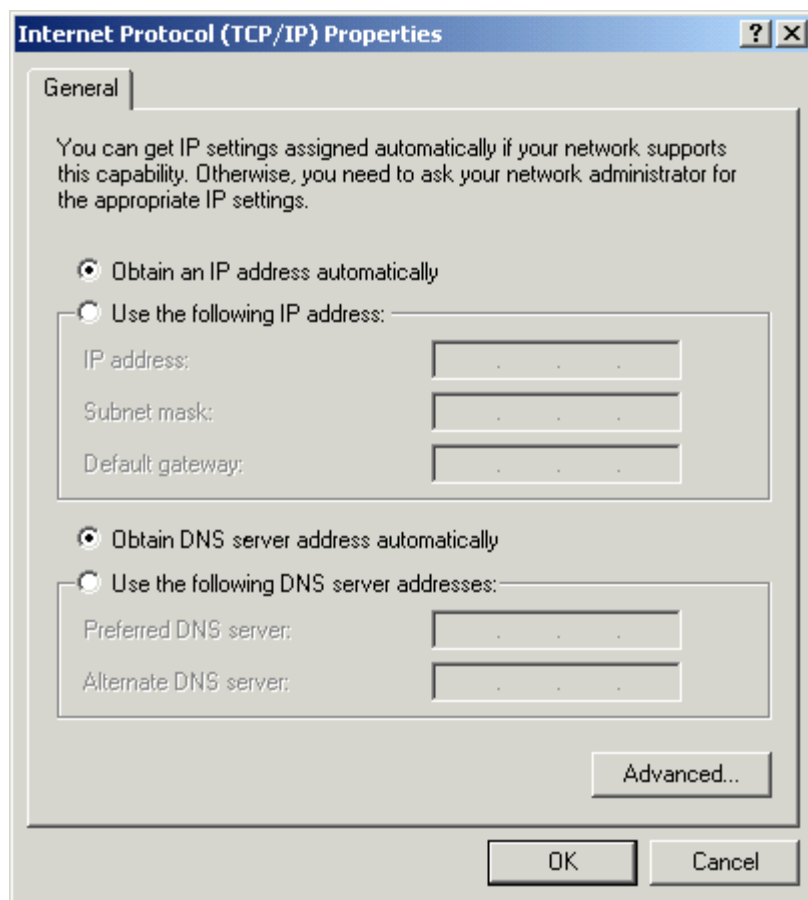

6: Click **OK** to confirm the setting. Your PC will now obtain an IP address automatically from your Broadband Router's DHCP server.

Note: Please make sure that the Broadband router's DHCP server is the only DHCP server available on your LAN.

Once you've configured your PC to obtain an IP address automatically, please proceed to Step 3 (Page 11).

2d) Windows NT


- 1: Click the *Start* button and select *Settings*, then click *Control Panel*. The *Control Panel* window will appear.
- 2: Double-click *Network* icon. The *Network* window will appear. Select the *Protocol* tab from the *Network* window.
- 3: Check if the *TCP/IP Protocol* is on your list of *Network Protocols*. If TCP/IP is not installed, click the *Add* button to install it now. If TCP/IP is installed, go to **step 5**.
- 4: In the *Select Network Protocol* window, select the *TCP/IP Protocol* and click the *Ok*

button to start installing the TCP/IP protocol. You may need your Windows CD to complete the installation.

5: After you install TCP/IP, go back to the *Network* window. Select *TCP/IP* from the list of *Network Protocols* and then click the *Properties* button.

6: Check each of the tabs and verify the following settings:

- **IP Address:** Select *Obtain an IP address from a DHCP server*.
- **DNS:** Let all fields be blank.
- **WINS:** Let all fields be blank.
- **Routing:** Let all fields be blank.

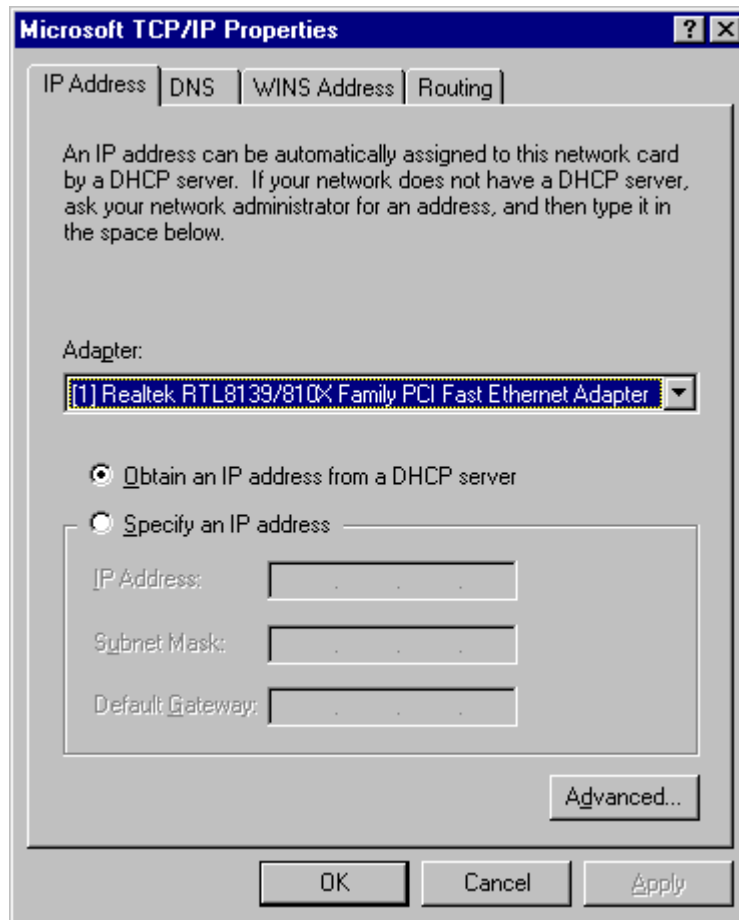

7: Click *OK* to confirm the setting. Your PC will now obtain an IP address automatically from your Broadband Router's DHCP server.

Note: Please make sure that the Broadband router's DHCP server is the only DHCP server available on your LAN.

Once you've configured your PC to obtain an IP address automatically, please proceed to Step 3 (Page 11).

- 3) Once you have configured your PCs to obtain an IP address automatically, the router's DHCP server will automatically give your LAN clients an IP address. By default the

Broadband Router's DHCP server is enabled so that you can obtain an IP address automatically. To see if you have obtained an IP address, see Appendix A.


Note: Please make sure that the Broadband router's DHCP server is the only DHCP server available on your LAN. If there is another DHCP on your network, then you'll need to switch one of the DHCP servers off. (To disable the Broadband router's DHCP server see chapter 2 LAN Port)

- 4) Once your PC has obtained an IP address from your router, enter the default IP address **192.168.2.1** (broadband router's IP address) into your PC's web browser and press <enter>



- 5) The website screen below will appear. This website contains the router's web-based management screens that allows you to configure your broadband router. Click <LOGIN>

Note: By default there is NO password. For security reasons it is recommended that you input a password as soon as possible (in General setup/system/password, see chapter 2)

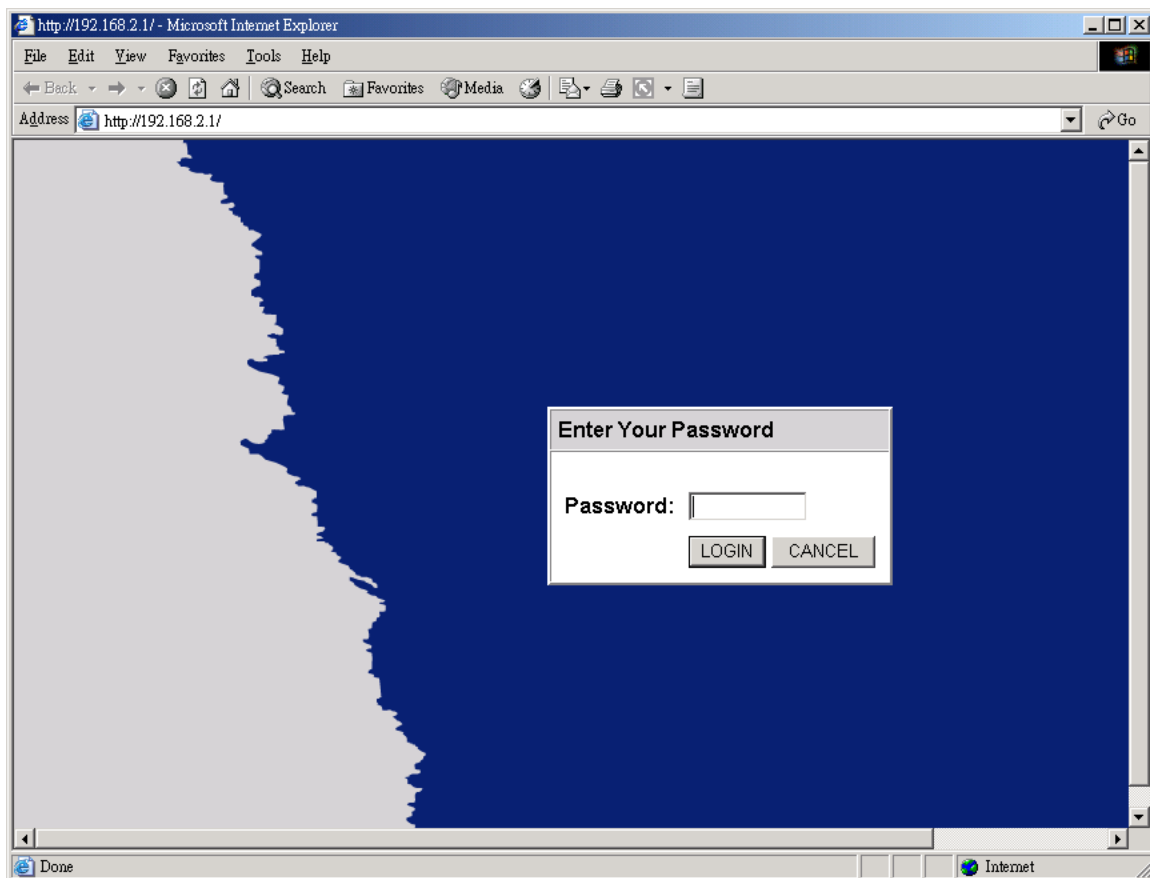

- 6) The **HOME** page screen below will appear. The **Home** Page is divided into four sections, **Quick Setup Wizard**, **General Setup**, **Status Information** and **Tools**.

Quick Setup Wizard (Chapter 1)

If you only want to start using the broadband router as an Internet Access device then you **ONLY** need to configure the screens in the Quick Setup Wizard section.

General Setup (Chapter 2)


If you want to use more advanced features that the broadband router has to offer, then you'll need to configure the Quick Setup Wizard and the General Setup section. Alternatively, you can just configure the General Setup section, since the General Setup/WAN and the Quick Setup Wizard contain the same configurations.

Status Information (Chapter 3)

The Status Information section is for you to monitor the router's current status information only.

Tools (Chapter 4)

If you want to Reset the router (because of problems) or save your configurations or upgrade the firmware then the Tools section is the place to do this.

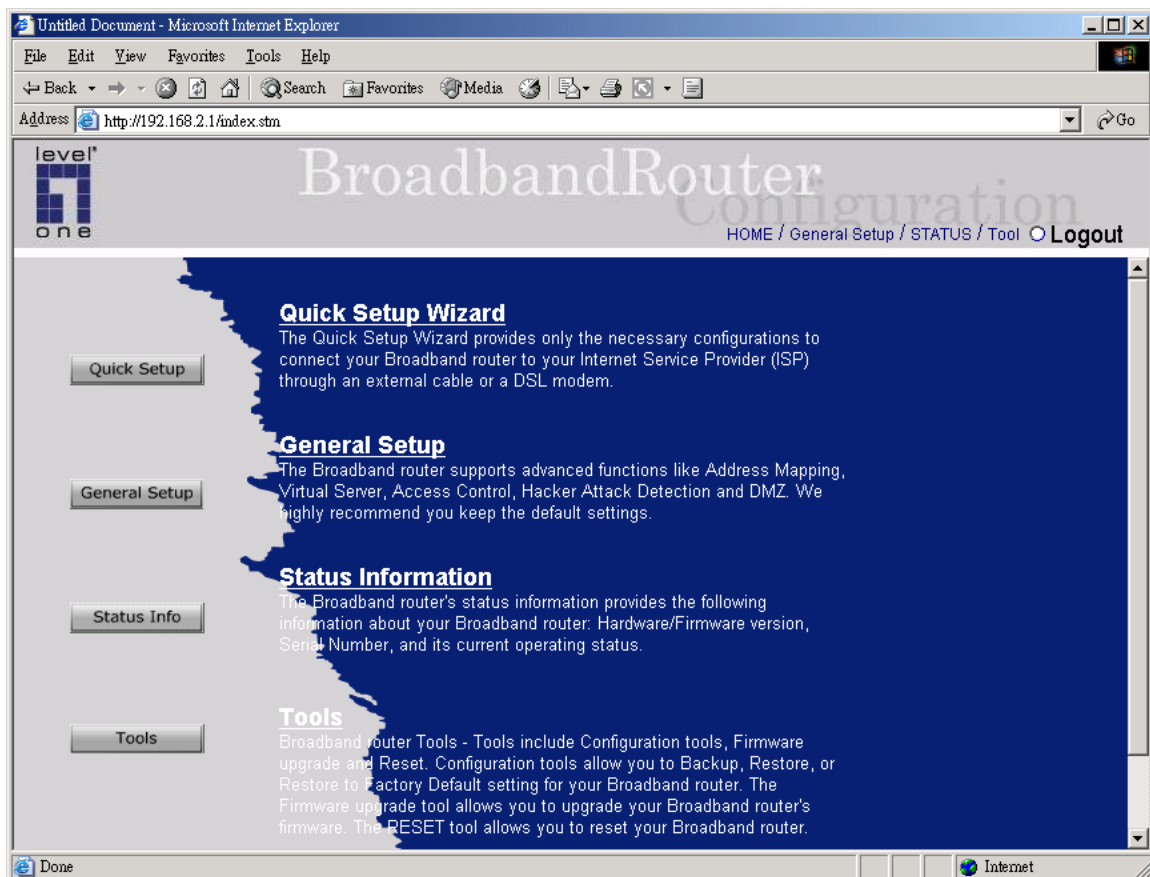

Menu	Description
Quick Setup Wizard (<i>Chapter 1</i>)	Select your Internet connection type and then input the configurations needed to connect to your Internet Service Provider (ISP).
General Setup (<i>Chapter 2</i>)	This section contains configurations for the Broadband router's advance functions such as: Bridge, Address Mapping, Virtual Server, Access Control, Hacker Attack Prevention, DMZ, Special applications and other functions to meet your LAN requirements.
Status Information (<i>Chapter 3</i>)	In this section you can see the Broadband router's system information, Internet Connection, Device Status, Security Log and DHCP client Log information.
Tools (<i>Chapter 4</i>)	This section contains the broadband router's Tools - Tools include Configuration tools, Firmware upgrade and Reset. Configuration tools allow you to Backup (save), Restore, or Restore to Factory Default configuration for your Broadband router. The Firmware upgrade tool allows you to upgrade your Broadband router's firmware. The RESET tool allows you to reset your Broadband router.
Logout	Selecting logout will return you to the LOGIN page

- 7) Click on **Quick Setup Wizard** (see chapter 1) to start configuring settings required by your ISP so that you can start accessing the Internet. The other sections (General Setup, Status Information and Tools) do not need to be configured unless you wish to implement/monitor more advance features/information.

Select the section (Quick Setup Wizard, General Setup, Status Information and Tools) you wish to configure and proceed to the corresponding chapter. Use the selections on the web management's top right hand page (see below) to navigate around the web-based management User Interface.




Chapter 1

Quick Setup

The Quick Setup section is designed to get you using the broadband router as quick as possible. In the Quick Setup you are required to fill in only the information necessary to access the Internet. Once you click on the **Quick Setup Wizard** in the HOME page, you should see the screen below.

Step 1) Time Zone

The Time Zone allows your router to base its time on the settings configured here, this will affect functions such as Log entries and Firewall settings.

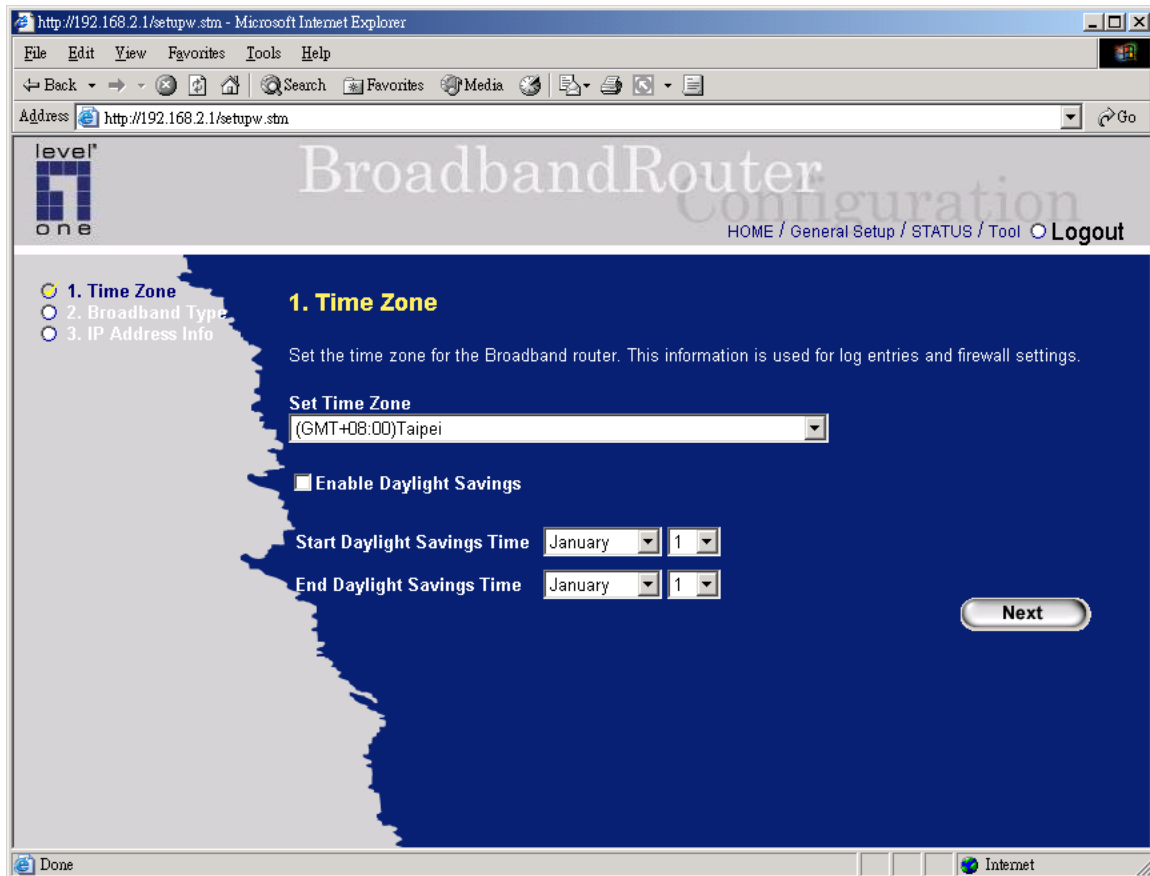

Parameter	Description
Set Time Zone	Select the time zone of the country you are currently in. The router will set its time based on your selection.
Enable Daylight Savings	The router can also take Daylight savings into account. If you wish to use this function, you must check/tick the enable box to enable your daylight saving configuration (below).


Start Daylight Savings Time	Select the period in which you wish to start daylight Savings Time
End Daylight Savings Time	Select the period in which you wish to end daylight Savings Time

Click on **NEXT** to proceed to the next page (step 2) Broadband Type.

Step 2) Broadband Type

In this section you have to select one of four types of connections that you will be using to connect your broadband router's WAN port to your ISP (see screen below).

Note: Different ISP's require different methods of connecting to the Internet, please check with your ISP as to the type of connection it requires.

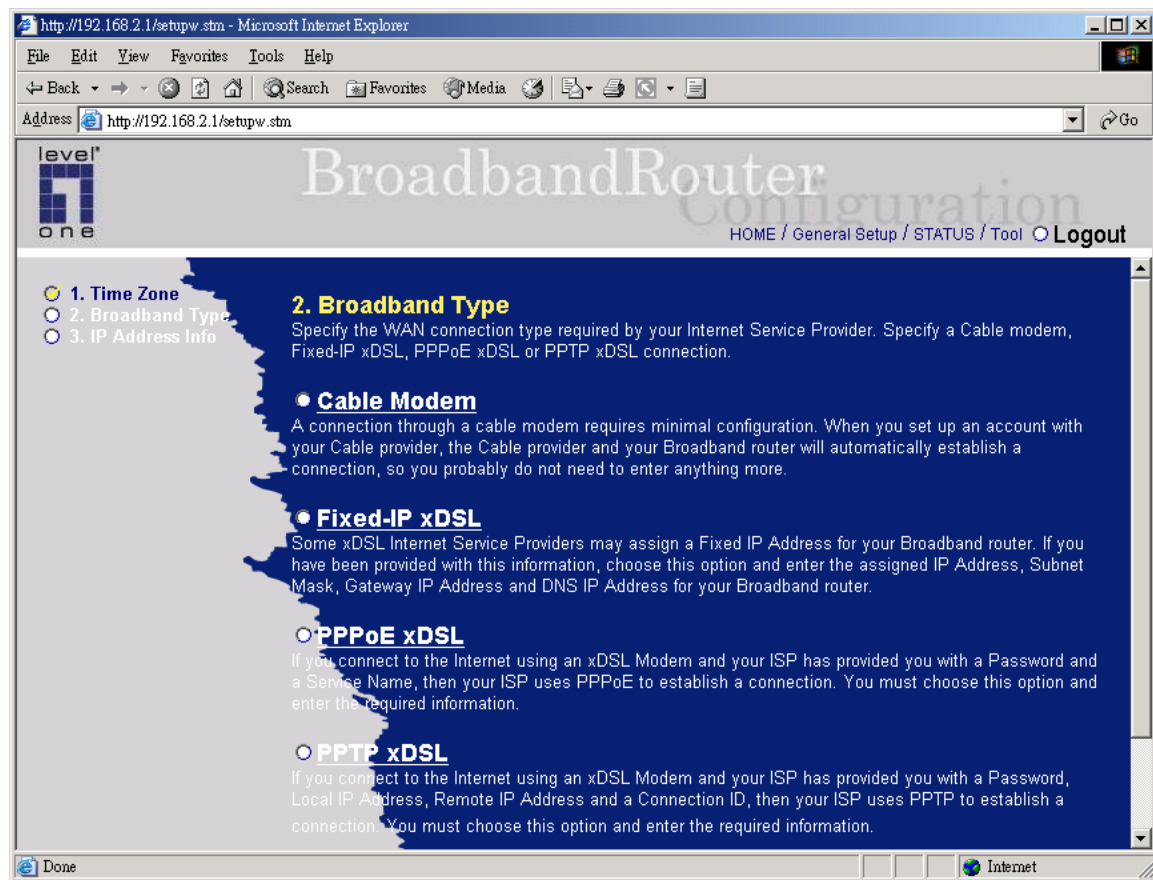

Menu	Description
1.1 Cable Modem	Your ISP will automatically give you an IP address
1.2 Fixed-IP xDSL	Your ISP has given you an IP address already

1.3 PPPoE

Your ISP requires you to use a Point-to-Point Protocol over Ethernet (PPPoE) connection.

1.4 PPTP

Your ISP requires you to use a Point-to-Point Tunneling Protocol (PPTP) connection.

Click on one of the WAN type and then proceed to the manual's relevant sub-section (**1.1**, **1.2**, **1.3** or **1.4**). Click on **Back** to return to the previous screen.

1.1 Cable Modem

Choose Cable Modem if your ISP will automatically give you an IP address. Some ISP's may also require that you fill in additional information such as Host Name and MAC address (see screen below).

Note: The Host Name and MAC address section is *optional* and you can skip this section if your ISP does not require these settings for you to connect to the Internet.

The screenshot shows a web browser window titled "http://192.168.2.1/setupw.stm - Microsoft Internet Explorer". The browser's address bar shows "http://192.168.2.1/setupw.stm". The page has a header with the "level one" logo and the text "BroadbandRouter Configuration". Below the header is a navigation bar with links: "HOME / General Setup / STATUS / Tool" and a "Logout" button. The main content area has a left sidebar with a list of steps: "1. Time Zone", "2. Broadband Type", and "3. IP Address Info". The "3. IP Address Info" step is selected and highlighted. The main content area is titled "3. IP Address Info" and "Cable Modem". It contains a "Host Name" text input field, a "MAC Address" section with six individual input fields containing the values "00", "70", "46", "00", "00", and "02", and three buttons: "Clone Mac Address", "Release", and "Renew". At the bottom right of the form are "Back" and "OK" buttons. The browser's status bar at the bottom shows "Done" and "Internet".

Parameters	Description
Host Name	If your ISP requires a Host Name, type in the host name provided by your ISP, otherwise leave it blank if your ISP does not require a Host Name.

MAC Address

Your ISP may require a particular MAC address in order for you to connect to the Internet. This MAC address is the PC's MAC address that your ISP had originally connected your Internet connection to. Type in this MAC address in this section or use the **Clone MAC Address** button to replace the WAN MAC address with the MAC address of that PC (you have to be using that PC for the Clone MAC Address button to work). If necessary, you can use the **Release** and **Renew** buttons to release and renew the WAN IP address. To find out the PC's MAC address see Appendix A. (see Glossary for an explanation on MAC address)

Click **<OK>** when you have finished the configuration above. **Congratulations!** You have completed the configuration for the Cable Modem connection. You can start using the router now, if you wish to use some of the advance features supported by this router see chapter 2, 3, 4.

1.2 Fixed-IP xDSL

Select Fixed-IP xDSL if your ISP has given you a specific IP address for you to use. Your ISP should provide all the information required in this section.

The screenshot shows a web browser window with the URL `http://192.168.2.1/setupw.stm`. The page title is "BroadbandRouter Configuration". The navigation bar includes "HOME / General Setup / STATUS / Tool" and a "Logout" link. On the left, a sidebar lists three steps: "1. Time Zone", "2. Broadband Type", and "3. IP Address Info", with "3. IP Address Info" selected. The main content area is titled "3. IP Address Info" and "Fixed-IP xDSL". It contains a table with four rows: "IP", "Gateway IP", "DNS", and "Subnet Mask". Each row has four input fields for the octets of the IP address. Below the table, a note states: "Enter the IP Address, Subnet Mask, Gateway IP Address and DNS IP Address provided to you by your ISP in the appropriate fields." At the bottom right, there are "Back" and "OK" buttons. The browser's status bar at the bottom shows "Done" and "Internet".

Parameters	Description
IP	This is the IP address that your ISP has given you.

Gateway IP	This is the ISP's IP address gateway
DNS	This is the ISP's DNS server IP address
Subnet Mask	Enter the Subnet Mask provided by your ISP (e.g. 255.255.255.0)

Click **<OK>** when you have finished the configuration above. **Congratulations!** You have completed the configuration for the Fixed-IP x DSL connection. You can start using the router now, if you wish to use some of the advance features supported by this router see chapter 2, 3, 4.

1.3 PPPoE

Select PPPoE if your ISP requires the PPPoE protocol to connect you to the Internet. Your ISP should provide all the information required in this section.

The screenshot shows a web browser window titled "http://192.168.2.1/setupw.stm - Microsoft Internet Explorer". The address bar shows "http://192.168.2.1/setupw.stm". The page header includes the "level one" logo and the title "BroadbandRouter Configuration". Navigation links are "HOME / General Setup / STATUS / Tool / Logout". On the left, a sidebar lists "1. Time Zone", "2. Broadband Type", and "3. IP Address Info". The main content area is titled "3.IP Address Info" and "PPPoE". It contains a form titled "Use PPPoE Authentication" with the following fields: "User Name" (84442267@hinet.net), "Password" (masked with asterisks), "Please retype your password" (masked with asterisks), "Service Name" (empty), "MTU" (1454, with a note "(296<=MTU Value<=1492)"), and "Maximum Idle Time" (10). There is a checked checkbox for "Auto-reconnect". Below the form, a note states: "Enter the User Name and Password required by your ISP in the appropriate fields. If your ISP has provided you with a 'Service Name' enter it in the Service Name field, otherwise, leave it blank." At the bottom right are "Back" and "OK" buttons. The browser status bar shows "Done" and "Internet".

Parameter	Description

User Name	Enter the User Name provided by your ISP for the PPPoE connection
Password	Enter the Password provided by your ISP for the PPPoE connection
Please retype your password	Type in the Password again to re-confirm
Service Name	This is optional. Enter the Service name should your ISP requires it, otherwise leave it blank.
MTU	This is optional. You can specify the maximum size of your transmission packet to the Internet. Leave it as it is if you to not wish to set a maximum packet size.
Maximum Idle Time	You can specify an idle time threshold (minutes) for the WAN port. This means if no packets have been sent (no one using the Internet) during this specified period, the router will automatically disconnect the connection with your ISP. Note: Idle time "0" means no time out, e.g. no time restriction (always On)
Auto-reconnect	If you check the Auto-reconnect function, then when the WAN connection is disconnected the router will automatically re-connect when there is a request by a user to access the Internet

Click **<OK>** when you have finished the configuration above. **Congratulations!** You have completed the configuration for the PPPoE connection. You can start using the router now, if you wish to use some of the advance features supported by this router see chapter 2, 3, 4.

1.4 PPTP

Select PPTP if your ISP requires the PPTP protocol to connect you to the Internet. Your ISP should provide all the information required in this section.

level one

BroadbandRouter Configuration

HOME / General Setup / STATUS / Tool Logout

- 1. Time Zone
- 2. Broadband Type
- 3. IP Address Info

3. IP Address Info

PPTP

- WAN Interface Settings
 - ☐ Obtain an IP address automatically :
 - ☒ Use the following IP address :

IP Address :	0 . 0 . 0 . 0
Subnet Mask :	0 . 0 . 0 . 0
Default Gateway :	0 . 0 . 0 . 0

- PPTP Settings

PPTP Gateway :	0 . 0 . 0 . 0
User ID :	
Password :	
Idle Time Out :	10 (min)

Point-to-Point Protocol is a common connection method used in xDSL connections.

Back OK

Parameter	Description
IP Address	This is the IP address that your ISP has given you to establish a PPTP connection.
Subnet Mask	Enter the Subnet Mask provided by your ISP (e.g. 255.255.255.0)
Gateway	Enter the IP address of the ISP Gateway
User ID	Enter the User Name provided by your ISP for the PPTP connection. Sometimes called a Connection ID
Password	Enter the Password provided by your ISP for the PPTP connection

PPTP Gateway

If your LAN has a PPTP gateway, then enter that PPTP gateway IP address here. If you do not have a PPTP gateway then enter the ISP's Gateway IP address above

Idle Time

You can specify an idle time threshold (minutes) for the WAN port. This means if no packets have been sent (no one using the Internet) throughout this specified period, then the router will automatically disconnect the connection with your ISP. Note: Idle time "0" means no time out, e.g. no time restriction (always On)

Click <**OK**> when you have finished the configuration above. **Congratulations!** You have completed the configuration for the PPTP connection. You can start using the router now, if you wish to use some of the advance features supported by this router see chapter 2, 3, 4.


Chapter 2

General Settings

Once you click on the **General Setup** button at the Home Page, you should see the screen below.

If you have already configured the Quick Setup Wizard you do NOT need to configure anything thing in the General Setup screen for you to start using the Internet.

The General Setup contain advanced features that allow you to configure the router to meet your network's needs such as: Bridge, Address Mapping, Virtual Server, Access Control, Hacker Attack Prevention, Special Applications, DMZ and other functions.

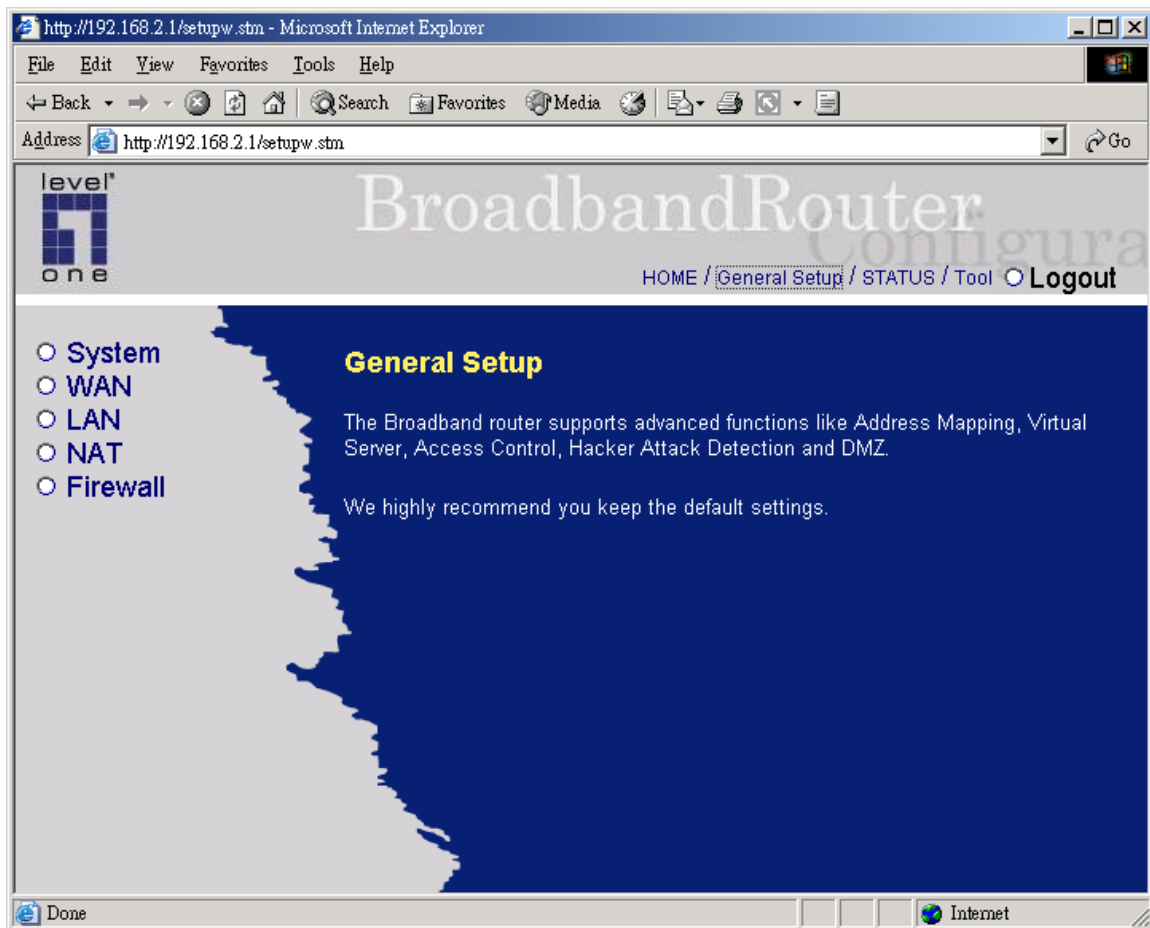


Below is a general description of what advance functions are available for this broadband router.

Menu	Description
2.1 System	This section allows you to set the Broadband router's system Time Zone, Password and Remote Management Administrator.
2.2 WAN	This section allows you to select the connection method in order to establish a connection with your ISP (same as the Quick Setup Wizard section)
2.3 LAN	You can specify the LAN segment's IP address, subnet Mask, enable/disable DHCP and select an IP range for your LAN
2.4 NAT	You can configure the Address Mapping, Virtual Server and Special Applications functions in this section. This allows you to specify what user/packet can pass your router's NAT.
2.5 Firewall	The Firewall section allows you to configure Access Control, Hacker Prevention and DMZ.

Select one of the above five General Setup selections and proceed to the manual's relevant sub-section.

2.1 System

The system screen allows you to specify a time zone, to change the system password and to specify a remote management user for the broadband router.

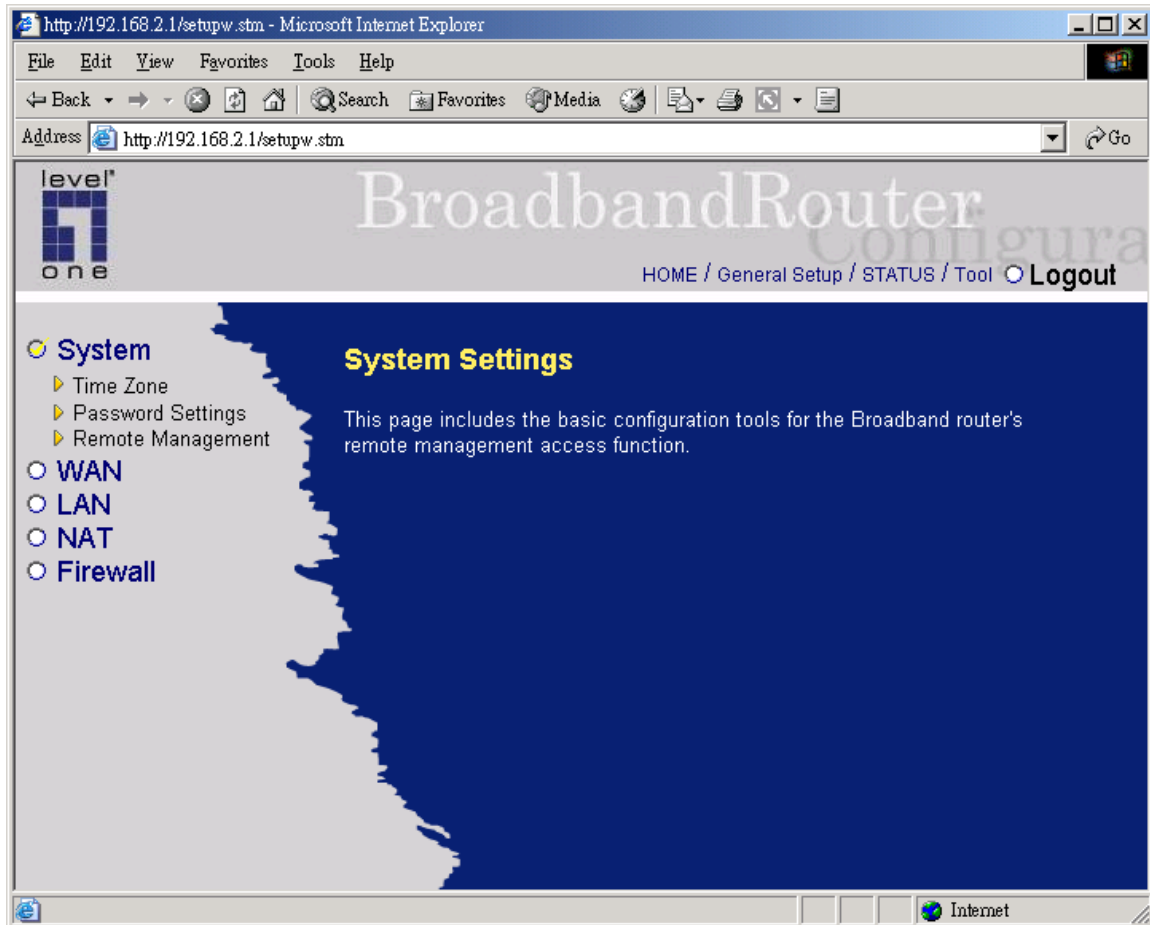

Parameters	Description
System Settings	
2.1.1 Time Zone	Select the time zone of the country you are currently in. The router will set its time based on your selection.
2.1.2 Password Settings	Allows you to select a password in order to access the web-based management website.
2.1.3 Remote Management	You can specify a Host IP address that can perform remote management functions.

Select one of the above three system settings selections and proceed to the manual's relevant sub-section.

2.1.1 Time Zone

The Time Zone allows your router to reference or base its time on the settings configured here, which will affect functions such as Log entries and Firewall settings.

The screenshot shows a web browser window titled "http://192.168.2.1/setupw.stm - Microsoft Internet Explorer". The browser's address bar shows "http://192.168.2.1/setupw.stm". The page header includes the "level one" logo and the text "BroadbandRouter". A navigation bar contains links: "HOME / General Setup / STATUS / Tool / Logout". On the left, a sidebar menu lists "System" (with sub-items "Time Zone", "Password Settings", and "Remote Management"), "WAN", "LAN", "NAT", and "Firewall". The main content area is titled "Time Zone" and contains the following settings:

- Set Time Zone :** A dropdown menu showing "(GMT+08:00)Taipei".
- Time Server Address :** Four input fields, each containing "0".
- Daylight Savings :** A checkbox labeled "Enable Function" which is unchecked. Below it, a text field shows "Times From" followed by a dropdown menu set to "January", a spinner set to "1", the word "to", another dropdown menu set to "January", and a spinner set to "1".

At the bottom right of the form are "Apply" and "Cancel" buttons. The browser's status bar at the bottom shows "http://192.168.2.1/firewall.stm" and an "Internet" icon.

Parameter	Description
Set Time Zone	Select the time zone of the country you are currently in. The router will set its time based on your selection.
Time Server Address	The router can get correct time from a SNTP time server. You have to assign an IP address of a timer server. If you do not assign a time server address, the router will get time from a default time server, but there is no guarantee that the default time server will always work.
Daylight Savings	The router can also take Daylight savings into account. If you wish to use this function, you must check/tick the "Enable Function" box to enable your daylight saving configuration (below). You

also have to select the period in which you wish to start and end Daylight Saving Time.

Click **<Apply>** at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)

2.1.2 Password Settings

You can change the password required to log into the broadband router's system web-based management. By default, there is no password. So please assign a password to the Administrator as soon as possible, and store it in a safe place. Passwords can contain 0 to 12 alphanumeric characters, and are case sensitive.

The screenshot shows a web browser window titled "http://192.168.2.1/setupw.stm - Microsoft Internet Explorer". The address bar shows "http://192.168.2.1/setupw.stm". The page header includes the "level one" logo and the title "BroadbandRouter Configuration". A navigation bar at the top right contains links: "HOME / General Setup / STATUS / Tool / Logout". On the left side, there is a sidebar menu with the following options: "System" (selected), "Time Zone", "Password Settings" (highlighted), "Remote Management", "WAN", "LAN", "NAT", and "Firewall". The main content area is titled "Password Settings" and contains the following text: "You can change the password required to log into the broadband router's system web-based management. By default, there is no password. So please assign a password to the Administrator as soon as possible, and store it in a safe place. Passwords can contain 0 to 12 alphanumeric characters, and are case sensitive." Below this text is a form with four input fields: "Current Password", "New Password", "Re-Enter Password for Verification", and "Idle Time Out". The "Idle Time Out" field is set to "10" minutes. At the bottom right of the form are two buttons: "Apply" and "Cancel".


Parameters	Description
Current Password	Enter your current password for the remote management administrator to login to your Broadband router. Note: By default there is NO password
New Password	Enter your new password
Re-Enter Password for Verification	Enter your new password again for verification purposes Note: If you forget your password, you'll have to reset the router to the factory default (No password) with the reset button (see router's back panel)
Idle Time Out	Login Connections (login to web-based management) without any activity that go beyond this specified period (minutes) will

automatically disconnect the web-based management. Note: Idle time "0" means no time out, e.g. no time restriction


Click <**Apply**> at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)

2.1.3 Remote Management

The remote management function allows you to designate a host in the Internet the ability to configure the Broadband router from a remote site. Enter the designated host IP Address in the Host IP Address field.

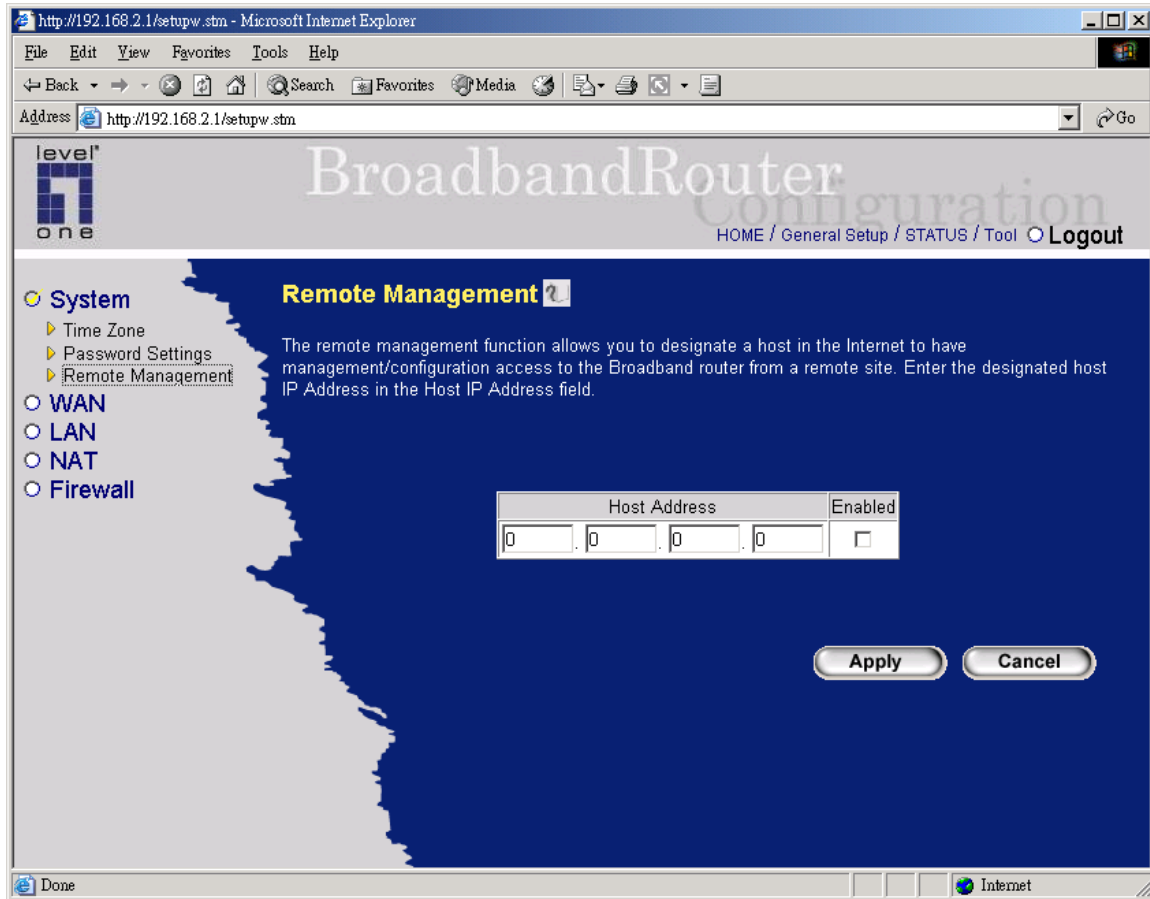


Parameters	Description
Host Address	<p>This is the IP address of the host in the Internet that will have management/configuration access to the Broadband router from a remote site. This means if you are at home and your home IP address has been designated the Remote Management host IP address for this router (located in your company office), then you are able to configure this router from your home. If the Host Address is left 0.0.0.0 this means anyone can access the router's web-based configuration from a remote location, providing they know the password.</p> <p>Click the Enabled box to enable the Remote Management function.</p> <p>Note: When you want to access the web-based management from a remote site, you must enter the router's WAN IP address (e.g. 10.0.0.1) into your web-browser followed by port number 8080, e.g. 10.0.0.1:8080 (see below). You'll also need to know the password set in the Password Setting screen in order to access the router's web-based management.</p>

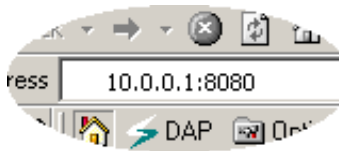

Click <**Apply**> at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)

2.2 WAN

Use the WAN Settings screen if you have already configured the Quick Setup Wizard section and you would like to change your Internet connection type. The WAN Settings screen allows you to specify the type of WAN port connect you want to establish with your ISP. In the WAN Settings screen you can also specify the router to act as a Bridge. The WAN settings offer the following selections for the router's WAN port, **Dynamic IP**, **PPPoE**, **PPTP**, **Static IP Address**, **DNS** and **Bridge**.

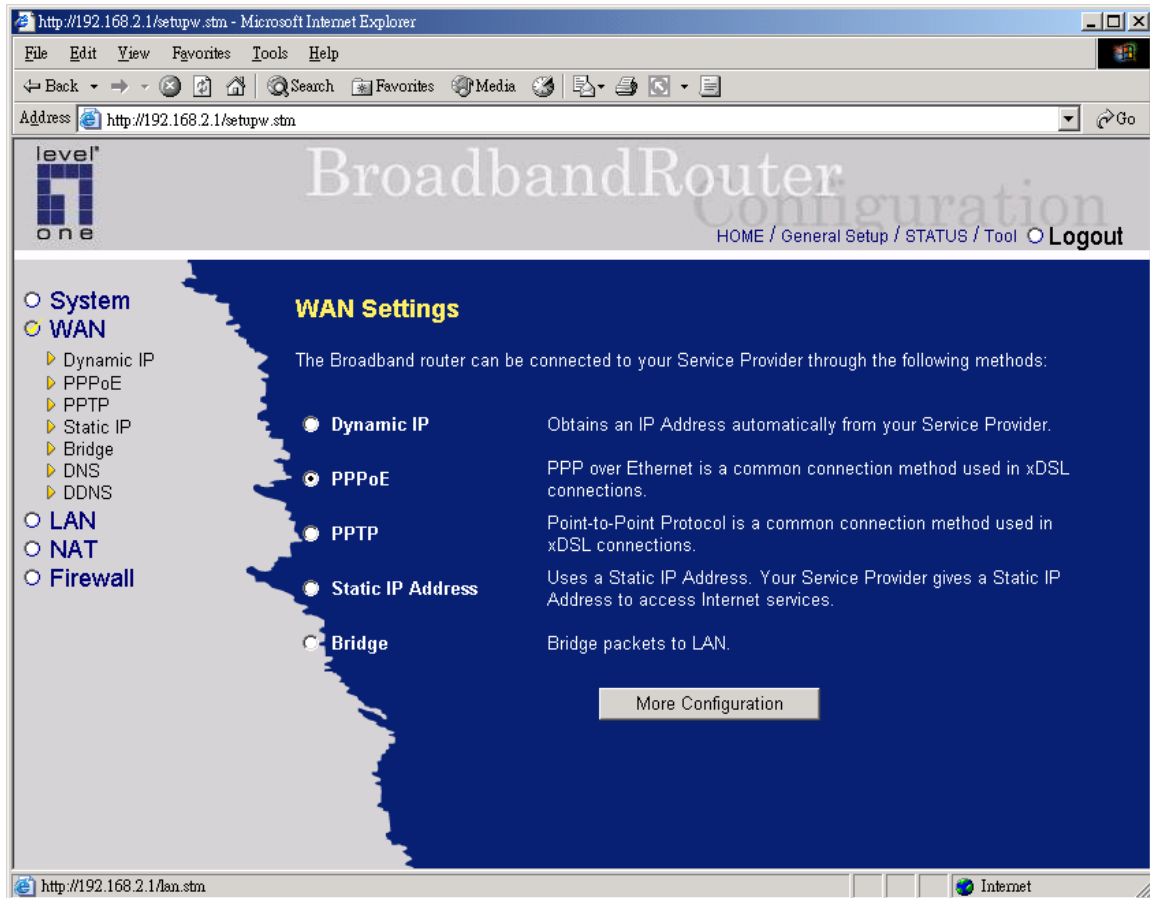

Parameters	Description
2.2.1 Dynamic IP	Your ISP will automatically give you an IP address
2.2.2 PPPoE	Your ISP requires PPPoE connection.
2.2.3 PPTP	Your ISP requires you to use a Point-to-Point Tunneling Protocol (PPTP) connection.
2.2.4 Static IP	Your ISP has given you an IP address already
2.2.5 Bridge	The router can be used as a bridge between LANs
2.2.6 DNS	You can specify a DNS server that you wish to use

2.2.7 DDNS

You can specify a DDNS server that you wish to use and configure the user name and password provided by you DDNS service provider.

Once you have made a selection, click **<More Configuration>** at the bottom of the screen and proceed to the manual's relevant sub-section

2.2.1 Dynamic IP

Choose the Dynamic IP selection if your ISP will automatically give you an IP address. Some ISP's may also require that you fill in additional information such as Host Name, Domain Name and MAC address (see chapter 1 "Cable Modem" for more detail)

2.2.2 PPPoE (PPP over Ethernet)

Select PPPoE if your ISP requires the PPPoE protocol to connect you to the Internet. Your ISP should provide all the information required in this section. (See chapter 1 "PPPoE" for more detail)

2.2.3 PPTP

Select PPTP if your ISP requires the PPTP protocol to connect you to the Internet. Your ISP should provide all the information required in this section. (See chapter 1 "PPTP" for more detail)

2.2.4 Static IP Address

Select Static IP address if your ISP has given you a specific IP address for you to use. Your ISP should provide all the information required in this section. (See chapter 1 "Fixed IP" for more detail)

2.2.5 Bridge

The bridge mode screen allows you to set your Broadband router to bridge mode and allows you to assign an IP address for management purposes. When the bridge mode is selected, the router in effect becomes a switch, transferring packets from the WAN port to the LAN port and vice versa without any NAT involvement. In bridge mode, the original WAN MAC is ignored, and the original LAN MAC address will be used as the MAC address. These values will be restored when you set the device to operating modes other than the bridge mode.


The screenshot shows a web browser window titled "http://192.168.2.1/setup.stm - Microsoft Internet Explorer". The browser's address bar shows "http://192.168.2.1/setup.stm". The page header includes the "level one" logo and the text "BroadbandRouter". Below the header, there are navigation links: "HOME / General Setup / STATUS / Tool" and a "Logout" button. The main content area is titled "Bridge Mode" and contains the following text: "Enter the assigned IP Address, Subnet Mask for the Bridge Mode management." and "Has your network administrator given you an IP Address for this device?". Below this text are two input fields: "IP address :" with the value "192.168.2.1" and "Subnet Mask :" with the value "255.255.255.0". At the bottom right of the form are two buttons: "Apply" and "Cancel". On the left side of the page, there is a sidebar menu with the following options: "System", "WAN" (selected), "Dynamic IP", "PPPoE", "PPTP", "Static IP", "Bridge" (highlighted), "DNS", "DDNS", "LAN", "NAT", and "Firewall". The browser's status bar at the bottom shows "Done" and "Internet".

Parameters	Description
IP address	Enter an IP Address for the Bridge Mode. This IP address allows you to access the web-based management should you decide to switch back to the router mode.
Subnet Mask	The Subnet Mask for the Bridge Mode management

Click <**Apply**> at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)


Example: Bridge Mode

The diagram below demonstrates how the Bridge mode can be used. The router basically becomes a hub/switch allowing you to connect LAN clients to your Local Area Network.

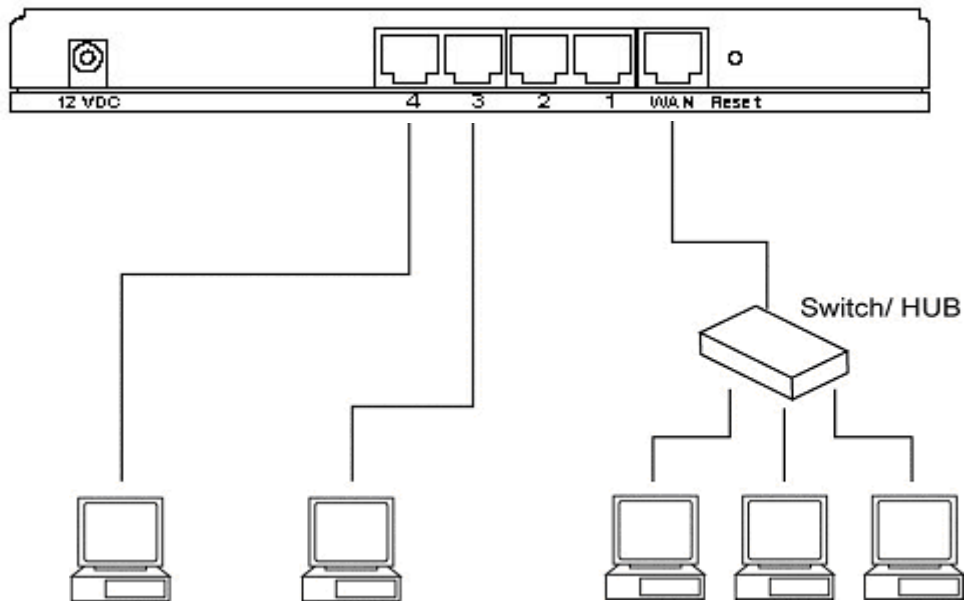

2.2.6 DNS

A Domain Name System (DNS) server is like an index of IP addresses and Web addresses. If you type a Web address into your browser, such as www.router.com, a DNS server will find that name in its index and the matching IP address. Most ISPs provide a DNS server for speed and convenience. If your Service Provider connects you to the Internet with dynamic IP settings, it is likely that the DNS server IP address is provided automatically. However, if there is a DNS server that you would rather use, you need to specify the IP address of that DNS server here.

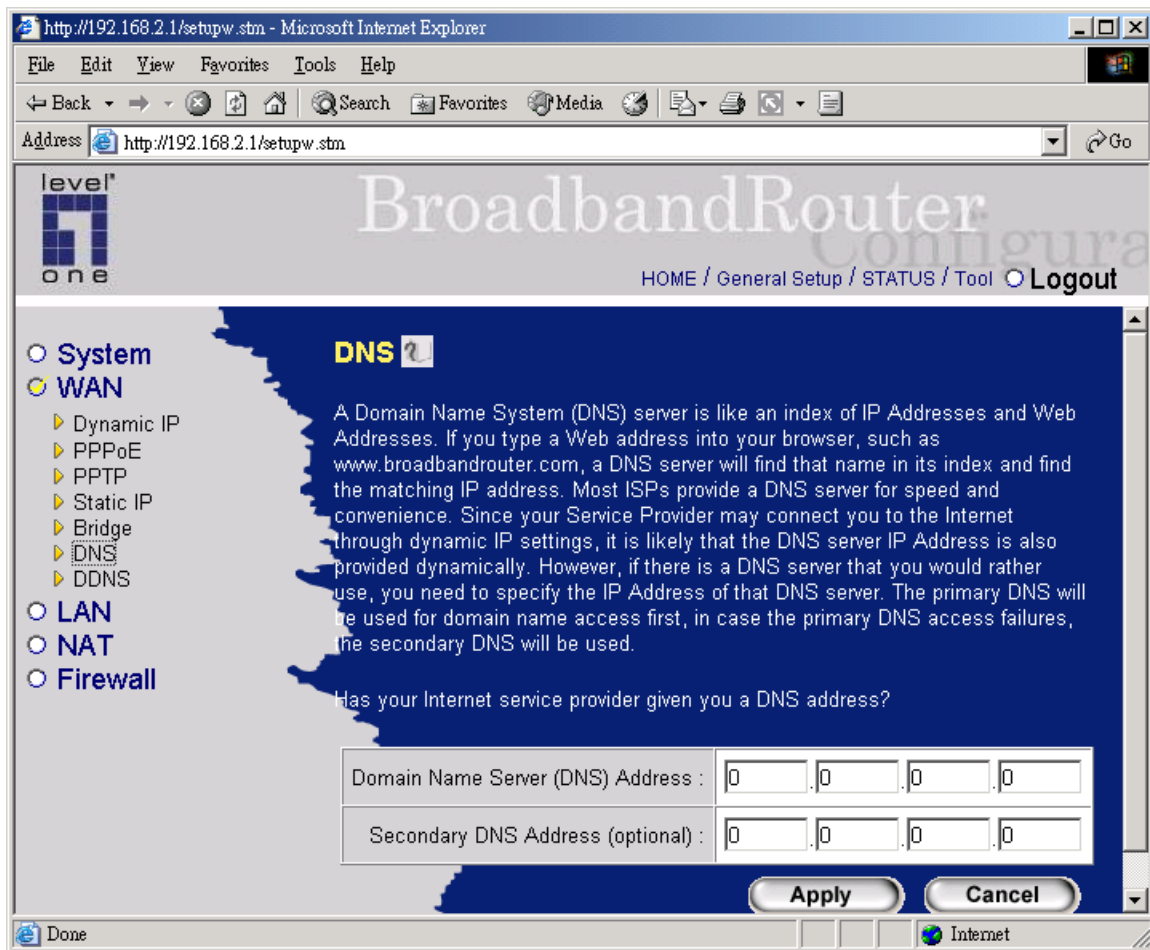

Parameters	Description
Domain Name Server (DNS) Server	This is the ISP's DNS server IP address that they gave you; or you can specify your own preferred DNS server IP address
Secondary DNS Address (optional)	This is optional. You can enter another DNS server's IP address as a backup. The secondary DNS will be used should the above DNS fail.

Click **<Apply>** at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)

2.2.7 DDNS

DDNS allows you to map the static domain name to a dynamic IP address. You must get an account, password and your static domain name from the DDNS service providers. This router supports DynDNS and TZO.


The screenshot shows a web browser window with the URL `http://192.168.2.1/setup.stm`. The page is titled "BroadbandRouter" and has a navigation bar with links: HOME / General Setup / STATUS / Tool / Logout. On the left, there is a sidebar menu with options: System, WAN (selected), LAN, NAT, and Firewall. Under WAN, there are sub-options: Dynamic IP, PPPoE, PPTP, Static IP, Bridge, DNS, and DDNS (selected). The main content area is titled "DDNS" and contains a text block explaining DDNS: "DDNS allows users to map the static domain name to a dynamic IP address. You must get a account, password and your static domain name from the DDNS service providers. Our products have DDNS support for www.dyndns.org and www.tzo.com now". Below this text is a form with the following fields: "Dynamic DNS" with radio buttons for "ENABLE" and "DISABLE" (selected); "Provider" with a dropdown menu showing "DynDNS.org"; "Domain Name" with a text input field; "Account / E-mail" with a text input field; and "Password / Key" with a text input field. At the bottom right of the form are "Apply" and "Cancel" buttons. The browser's status bar at the bottom shows "Done" and "Internet".

Parameters	Default	Description
Enable/Disable	Disable	Enable/Disable the DDNS function of this router
Provider	DynDNS	Select a DDNS service provider
Domain name		Your static domain name that use DDNS
Account/E-mail		The account that your DDNS service provider assigned to you
Password/Key		The password you set for the DDNS service account above

Click **<Apply>** at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)

2.3 LAN

The LAN allows you to setup the LAN Interface IP, DHCP Server parameters and UPnP.

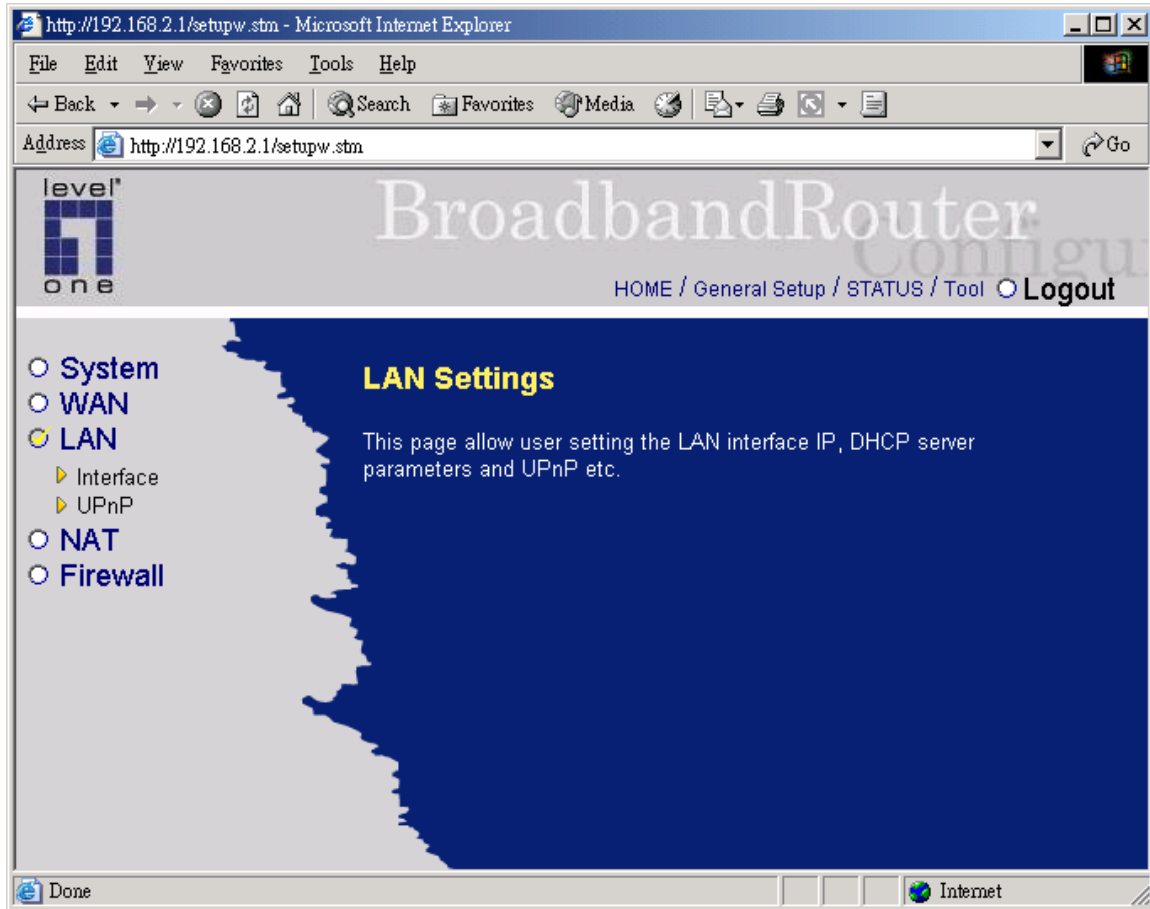

2.3.1 Interface

The LAN Port screen below allows you to specify a private IP address for your router's LAN ports as well as a subnet mask for your LAN segment.

The screenshot shows a web browser window titled "http://192.168.2.1/setupw.stm - Microsoft Internet Explorer". The browser's address bar shows "http://192.168.2.1/setupw.stm". The page header includes the "level one" logo and the text "BroadbandRouter". Below the header is a navigation bar with links: "HOME / General Setup / STATUS / Tool / Logout". The main content area is titled "LAN Interface Settings" and contains a description: "You can enable the Broadband router's DHCP server to dynamically allocate IP Addresses to your LAN client PCs. The broadband router must have an IP Address for the Local Area Network." Below this description is a section for "LAN IP" settings, which includes three rows of input fields: "IP address" (192, 168, 2, 1), "IP Subnet Mask" (255.255.255.0), and "DHCP Server" (Enabled). Below the "LAN IP" section is an "IP Address Pool" section, which includes four rows of input fields: "Start IP" (192, 168, 2, 100), "End IP" (192, 168, 2, 199), "Domain Name" (empty), and "Lease Time" (One Week). At the bottom right of the form are "Apply" and "Cancel" buttons. The browser's status bar at the bottom shows "Done" and "Internet".


Parameters	Default	Description
LAN IP		
IP address	192.168.2.1	This is the router's LAN port IP address (Your LAN clients default gateway IP address)
IP Subnet Mask	255.255.255.0	Specify a Subnet Mask for your LAN segment

DHCP Server	Enabled	You can enable or disable the DHCP server. By enabling the DHCP server the router will automatically give your LAN clients an IP address. If the DHCP is not enabled then you'll have to manually set your LAN client's IP addresses; make sure the LAN Client is in the same subnet as this broadband router if you want the router to be your LAN client's default gateway
IP Address Pool		<p>You can select a particular IP address range for your DHCP server to issue IP addresses to your LAN Clients.</p> <p>Note: By default the IP range is from: Start IP 192.168.2.100 to End IP 192.168.2.199. If you want your PC to have a static/fixed IP address then you'll have to choose an IP address outside this IP address Pool</p>
Domain Name		You can specify a Domain Name for your LAN
Lease Time		The DHCP when enabled will temporarily give your LAN clients an IP address. In the Lease Time setting you can specify the time period that the DHCP lends an IP address to your LAN clients. The DHCP will change your LAN client's IP address when this time threshold period is reached

Click **<Apply>** at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)

2.3.2 UPnP

With UPnP, all PCs in your Intranet will discover this router automatically. So you do not have to do any configuration for your PC and can access the Internet through this router easily.

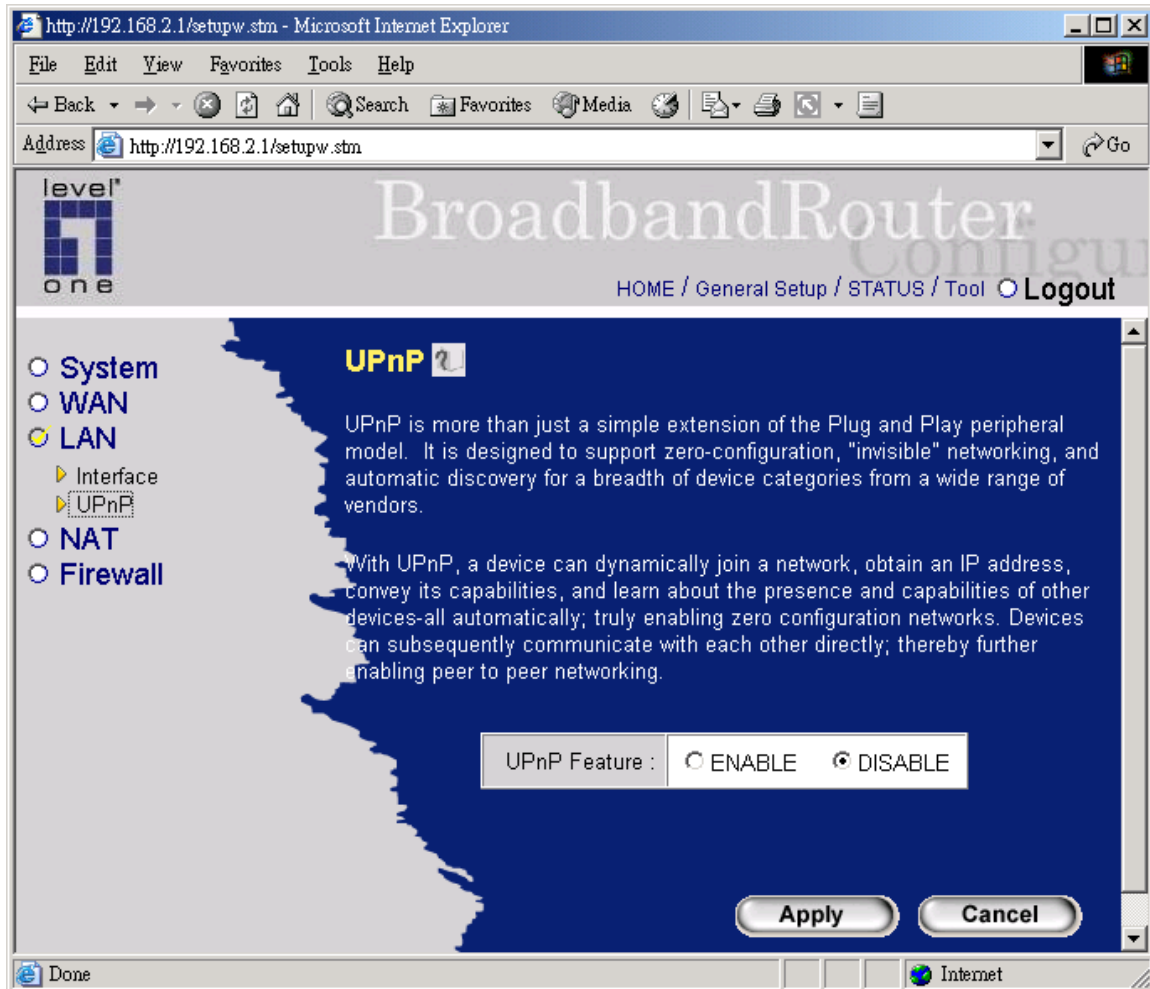


Parameters	Default	Description
UPnP Feature	Disable	You can Enable or Disable UPnP feature here. After you enable the UPnP feature, all client systems that support UPnP, like Windows XP, can discover this router automatically and access the Internet through this router without any configuration. The NAT Traversal function provided by UPnP can let applications that support UPnP smoothly connect to Internet sites without any incompatibility problem due to the NATP port translation.

Click **<Apply>** at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)

2.4 NAT

Network Address Translation (NAT) allows multiple users at your local site to access the Internet through a single Public IP Address or multiple Public IP Addresses. NAT provides Firewall protection from hacker attacks and has the flexibility to allow you to map Private IP Addresses to Public IP Addresses for key services such as Websites and FTP.

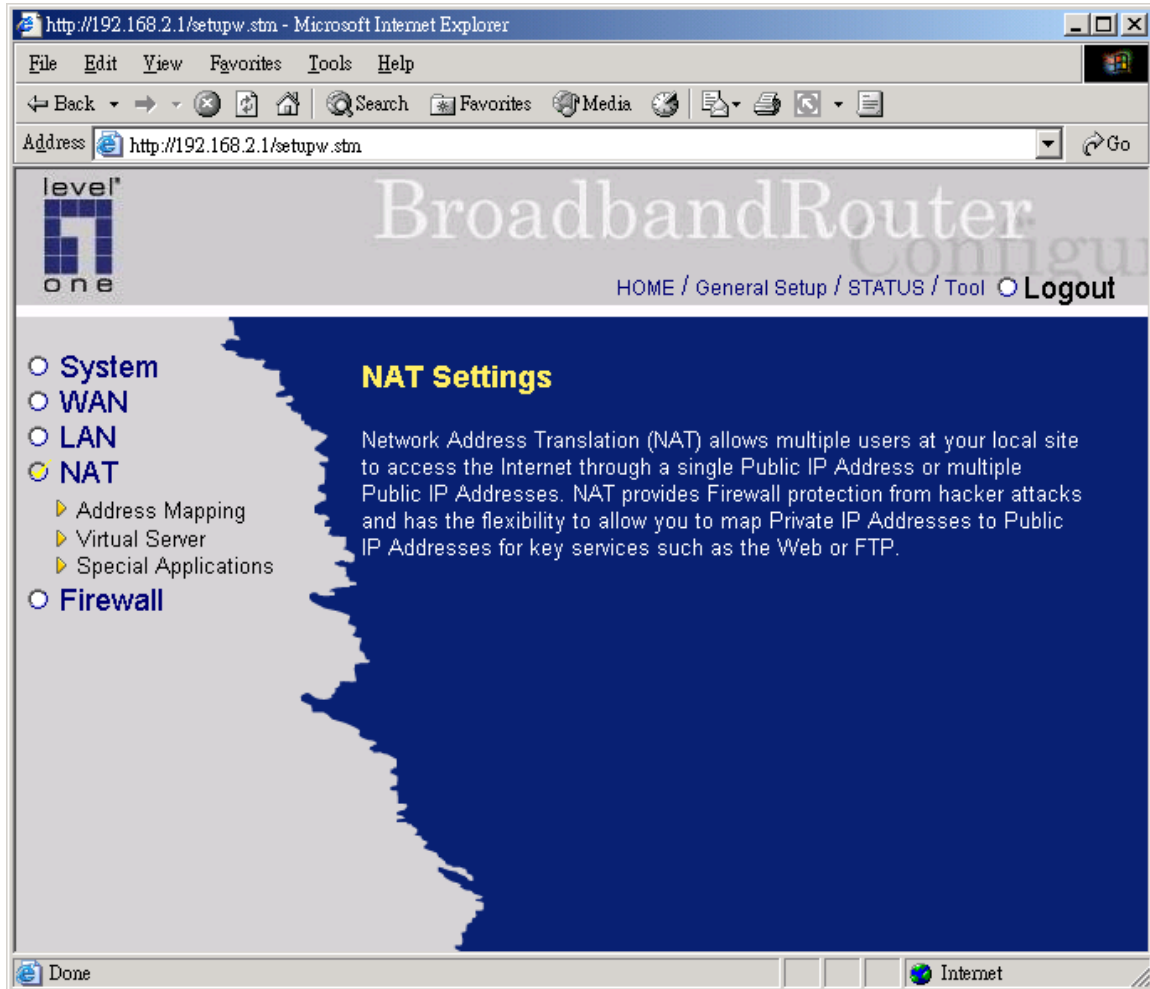

Parameter	Description
2.4.1 Address Mapping	The Broadband router allows one or more Public IP Address(es) to be mapped to a pool of local Private IP Address(es). This feature is particular useful when you have multiple global IPs and want to divide local users into different groups.
2.4.2 Virtual Server	You can have different services (e.g. email, FTP, Web etc.) going to different service servers/clients in your LAN. The Virtual Server allows you to re-direct a particular service port number (from the Internet/WAN Port) to a particular LAN IP address and its service port number.

2.4.3 Special Applications

Some applications require multiple connections, such as Internet games, video conferencing, Internet telephony and others. In this section you can configure the router to support these types of applications.

Click on one of the three NAT selections and proceed to the manual's relevant sub-section

2.4.1 Address Mapping

The Address Mapping function allows IP addresses used in a private Local Area Network (LAN) to be mapped (translated) to different Public IP Addresses used in the public/global Internet. This feature limits the number of Public IP addresses required from the ISP and also maintains the privacy and security of the Local Area Network. Essentially the Broadband router allows one or more Public IP Address(es) to be mapped to a pool of local Private IP Address(es).

The screenshot shows a web browser window titled "http://192.168.2.1/setup.stm - Microsoft Internet Explorer". The browser's address bar shows "http://192.168.2.1/setup.stm". The page is titled "BroadbandRouter Configuration" and includes a navigation menu on the left with options: System, WAN, LAN, NAT (selected), and Firewall. Under NAT, there are sub-options: Address Mapping (selected), Virtual Server, and Special Applications. The main content area is titled "Address Mapping" and contains a description of Network Address Translation (NAT). Below the description is a table with 5 rows, each representing a mapping rule. Each row has a "Global IP" field, a "Virtual IP" field, and a "Description" field. The "Global IP" field is a text input with a dropdown arrow. The "Virtual IP" field is a text input with a dropdown arrow. The "Description" field contains the text "is transformed as multiple virtual IPs". The table is titled "Address Mapping".


Global IP	Virtual IP	Description
1. Global IP: [0].[0].[0].[0]	[0].[0].[0].[0]	is transformed as multiple virtual IPs
2. Global IP: [0].[0].[0].[0]	[0].[0].[0].[0]	is transformed as multiple virtual IPs
3. Global IP: [0].[0].[0].[0]	[0].[0].[0].[0]	is transformed as multiple virtual IPs
4. Global IP: [0].[0].[0].[0]	[0].[0].[0].[0]	is transformed as multiple virtual IPs
5. Global IP: [0].[0].[0].[0]	[0].[0].[0].[0]	is transformed as multiple virtual IPs

Parameter	Description
Global IP	<p>This is the Public/legal IP address that exist in the Internet that will be transformed to one or more private/Virtual IP address (LAN PC clients) e.g. 192.168.2.x. This means that the private IP address(es) selected will use the designated public IP address when accessing the Internet</p> <p>Note: You need to give your LAN PC clients a fixed/static IP address for Address Mapping to work properly.</p>

Click <**Apply**> at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)

Example: Address Mapping

The diagram below demonstrates how Address Mapping works. With the below configuration, LAN client A and B will use the global/public IP address 10.1.1.10. LAN client C will use 10.1.1.20.

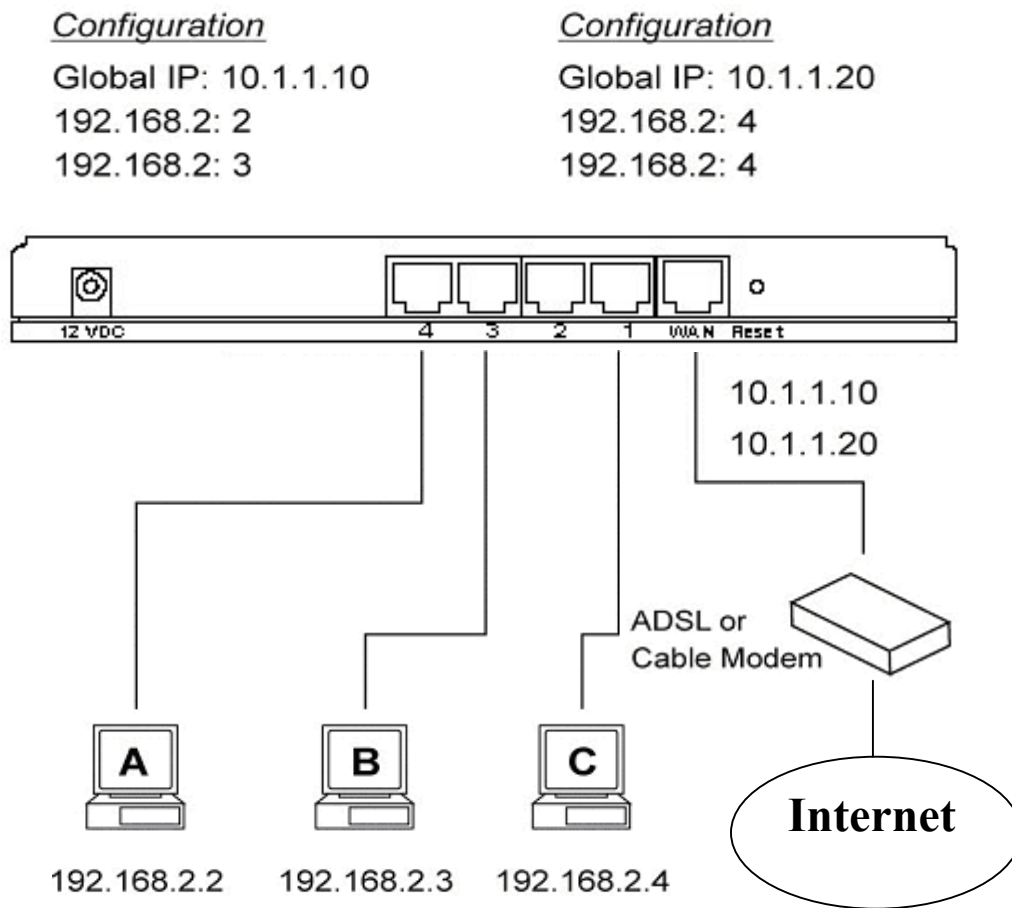

2.4.2 Virtual Server

Use the Virtual Server function when you want different servers/clients in your LAN to handle different service/Internet application type (e.g. Email, FTP, Web server etc.) from the Internet. Computers use numbers called port numbers to recognize a particular service/Internet application type. The Virtual Server allows you to re-direct a particular service port number (from the Internet/WAN Port) to a particular LAN private IP address and its service port number. (See Glossary for an explanation on Port number)

The screenshot shows a web browser window titled "http://192.168.2.1/setupw.stm - Microsoft Internet Explorer". The browser's address bar shows "http://192.168.2.1/setupw.stm". The page header includes the "level one" logo and the title "BroadbandRouter Configuration". Below the header is a navigation bar with links: "HOME / General Setup / STATUS / Tool / Logout". On the left side, there is a sidebar menu with the following options: "System", "WAN", "LAN", "NAT" (selected), "Address Mapping", "Virtual Server" (highlighted), "Special Applications", and "Firewall". The main content area is titled "Virtual Server ?" and contains a descriptive text: "You can configure the Broadband router as a Virtual Server so that remote users accessing services such as the Web or FTP at your local site via Public IP Addresses can be automatically redirected to local servers configured with Private IP Addresses. In other words, depending on the requested service (TCP/UDP) port number, the Broadband router redirects the external service request to the appropriate internal server (located at one of your LAN's Private IP Address).". Below the text is a table with 5 columns: "Private IP", "Private Port", "Type", and "Public Port". The table has 8 rows, each with a number in the first column. The "Private IP" column contains "192.168.2." followed by a text input field. The "Private Port" column contains a text input field. The "Type" column contains radio buttons for "TCP" and "UDP". The "Public Port" column contains a text input field. The status bar at the bottom of the browser window shows "Done" and "Internet".

	Private IP	Private Port	Type	Public Port
1.	192.168.2. <input type="text"/>	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>
2.	192.168.2. <input type="text"/>	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>
3.	192.168.2. <input type="text"/>	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>
4.	192.168.2. <input type="text"/>	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>
5.	192.168.2. <input type="text"/>	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>
6.	192.168.2. <input type="text"/>	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>
7.	192.168.2. <input type="text"/>	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>
8.	192.168.2. <input type="text"/>	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>

Parameters

Description

Private IP

This is the LAN client/host IP address that the Public Port number packet will be sent to.

Note: You need to give your LAN PC clients a fixed/static IP address for Virtual Server to work properly.

Private Port

This is the port number (of the above Private IP host) that the below Public Port number will be changed to when the packet enters your LAN (to the LAN Server/Client IP)

Type

Select the port number protocol type (TCP or UDP). If you are unsure, then leave it to the default TCP protocol.

Public Port

Enter the service (service/Internet application) port number from the Internet that will be re-directed to the above Private IP address host in your LAN

Note: Virtual Server function will have priority over the DMZ function if there is a conflict between the Virtual Server and the DMZ settings.

Click **<Apply>** at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)

Example: Virtual Server

The diagram below demonstrates one of the ways you can use the Virtual Server function. Use the Virtual Server when you want the web server located in your private LAN to be accessible to Internet users. The configuration below means that any request coming from the Internet to access your web server will be translated to your LAN's web server (192.168.2.2). **Note:** For the virtual server to work properly Internet/remote users must know your global IP address. (For websites you will need to have a fixed/static global/public IP address)


Configuration

Private IP: 192.168.2.2

Private Port: 80

Type: TCP

Public Port: 80

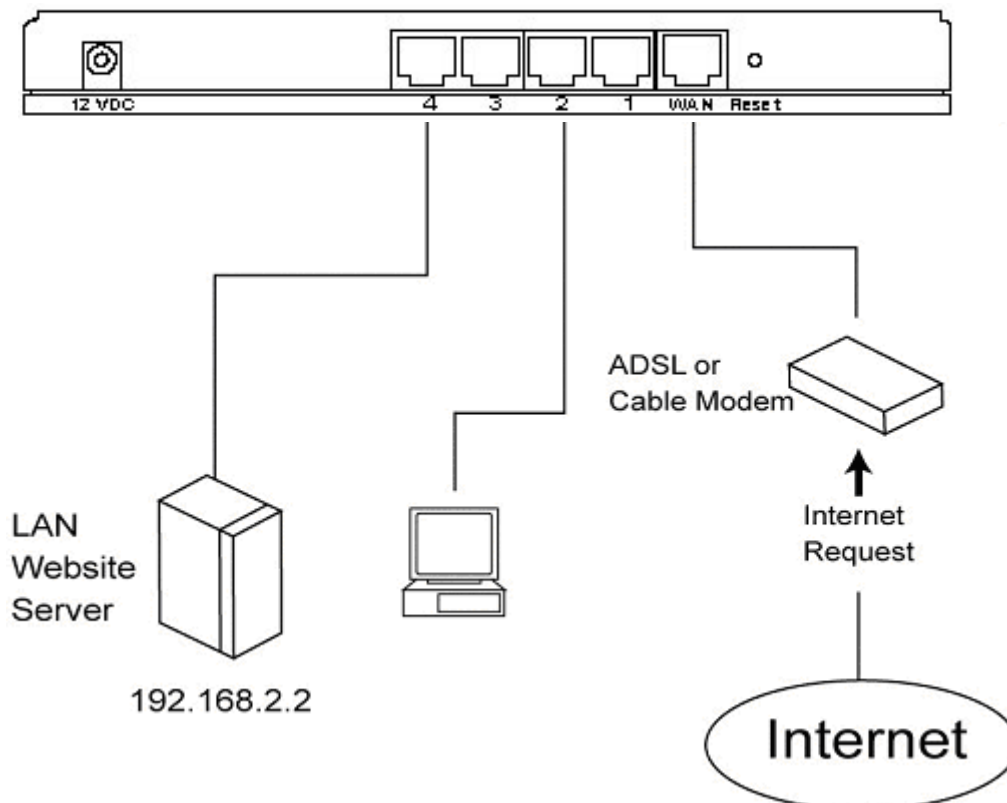

2.4.3 Special Applications

Some applications require multiple connections, such as Internet games, video conferencing, Internet telephony and others. In this section you can configure the router to support multiple connections for these types of applications.

level one BroadbandRouter Configuration

HOME / General Setup / STATUS / Tool / Logout

- System
- WAN
- LAN
- NAT
 - Address Mapping
 - Virtual Server
 - Special Applications
- Firewall

Special Applications

Some applications require multiple connections, such as Internet gaming, video conferencing, Internet telephony and others. These applications cannot work when Network Address Translation (NAT) is enabled. If you need to run applications that require multiple connections, specify the port normally associated with an application in the "Trigger Port" field, select the protocol type as TCP or UDP, then enter the public ports associated with the trigger port to open them for inbound traffic. Note: The range of the Trigger Port is 0 to 65535.

	Trigger Port	Trigger Type	Public Port	Public Type	Enabled
1.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
2.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
3.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
4.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
5.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
6.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
7.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
8.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
9.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
10.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>

Popular applications:

Parameters

Description

Trigger Port

This is the out going (Outbound) port number for this particular application

Note: The range of the Trigger Port is only from 0 to 65535.

Trigger Type	Select whether the outbound port protocol is TCP or UDP
Public Port	Enter the In-coming (Inbound) port or port range for this type of application (e.g. 2300-2400, 47624) Note: Individual port numbers are separated by a comma (e.g. 47624, 5775, 6541 etc.). To input a port range use a "dash" to separate the two port number range (e.g. 2300-2400)
Public Type	Select the Inbound port protocol type: TCP or UDP
Enabled	You must tick/check the Enabled box to enable this particular special application configuration Note: Only one LAN client can use a particular special application at a time.
Popular applications	This section lists the more popular applications that require multiple connections. Select an application from the Popular Applications selection. Once you have selected an application, select a location (1-10) in the Copy to selection box and then click the Copy to button. This will automatically list the Public Ports required for this popular application in the location (1-10) you'd specified.

Click **<Apply>** at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)

Example: Special Applications

If you need to run applications that require multiple connections, then specify the port (outbound) normally associated with that application in the "Trigger Port" field. Then select the protocol type (TCP or UDP) and enter the public ports associated with the trigger port to open them up for inbound traffic.

Example:

ID	Trigger Port	Trigger Type	Public Port	Public Type	Comment
1	28800	UDP	2300-2400, 47624	TCP	MSN Game Zone
2	6112	UDP	6112	UDP	Battle.net


In the example above, when a user trigger's port 28800 (outbound) for MSN Game Zone then the router will allow incoming packets for ports 2300-2400 and 47624 to be directed to that user.

Note: Only one LAN client can use a particular special application at a time.

2.5 Firewall

The Broadband router provides extensive firewall protection by restricting connection parameters, thus limiting the risk of hacker attack, and defending against a wide array of common Internet attacks. However, for applications that require unrestricted access to the Internet, you can configure a specific client/server as a Demilitarized Zone (DMZ).

Note: To enable the Firewall settings select **Enable** and click **Apply**

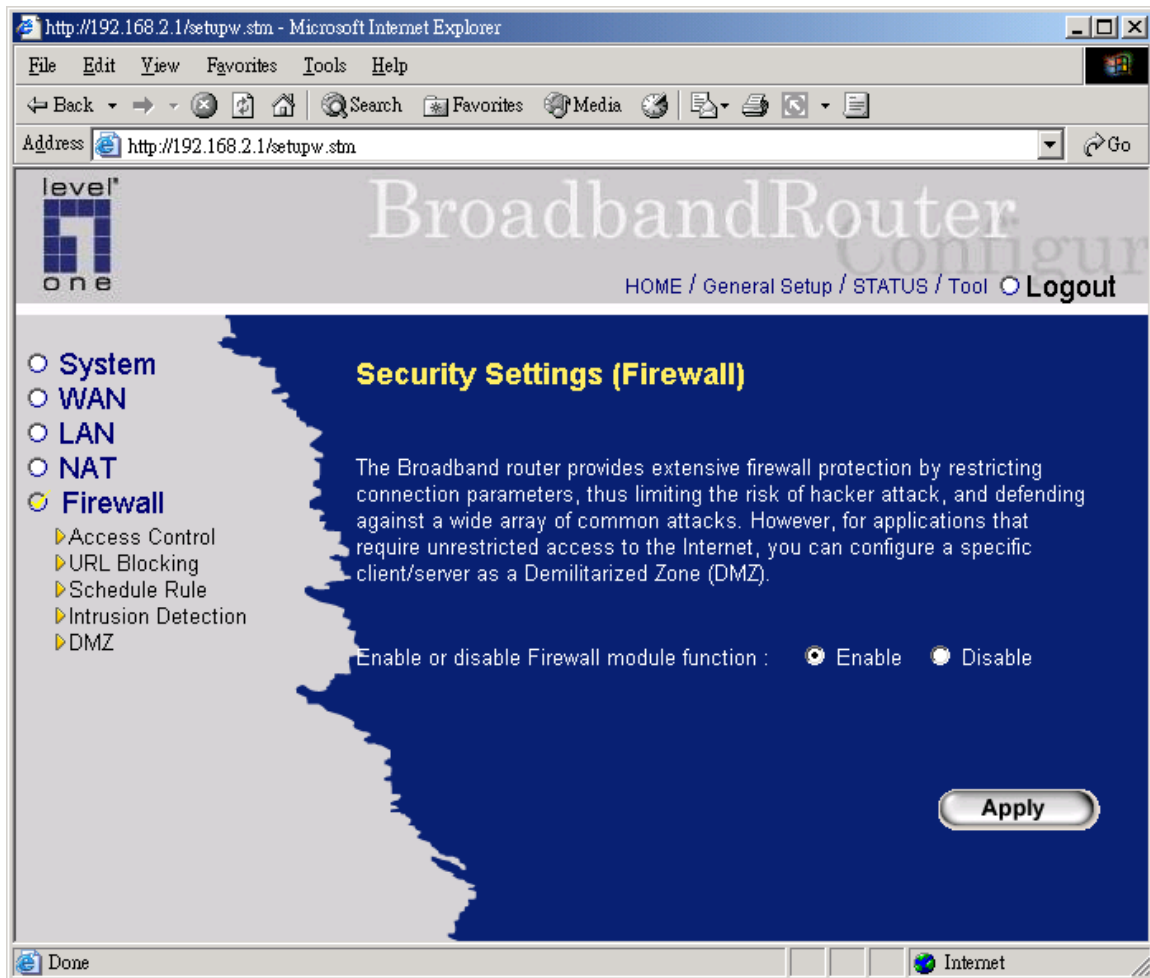

Parameters	Description
2.5.1 Access Control	Access Control allows you to specify which hosts users can or cannot have access to certain Internet applications
2.5.2 URL Blocking	URL Blocking allow you to specify which URLs can not be accessed by users.
2.5.3 Schedule Rule	Schedule Rule lets you assign time ranges for schedules.

2.5.4 Intrusion Detection

The Broadband router's firewall can block common hacker attacks and can alert you by email if attacks occur


2.5.5 DMZ

The DMZ function allows you to re-direct all packets going to your WAN port IP address to a particular IP address in your LAN.

Click on one of the firewall selections and proceed to the manual's relevant sub-section

2.5.1 Access Control

If you want to restrict users from accessing certain Internet applications/services (e.g. Internet websites, email, FTP etc.), then this is the place to set that configuration. Access Control allows users to define the traffic type permitted or not permitted in your LAN. You can control which PC client uses what services and also the time period in which they can have access to these services.

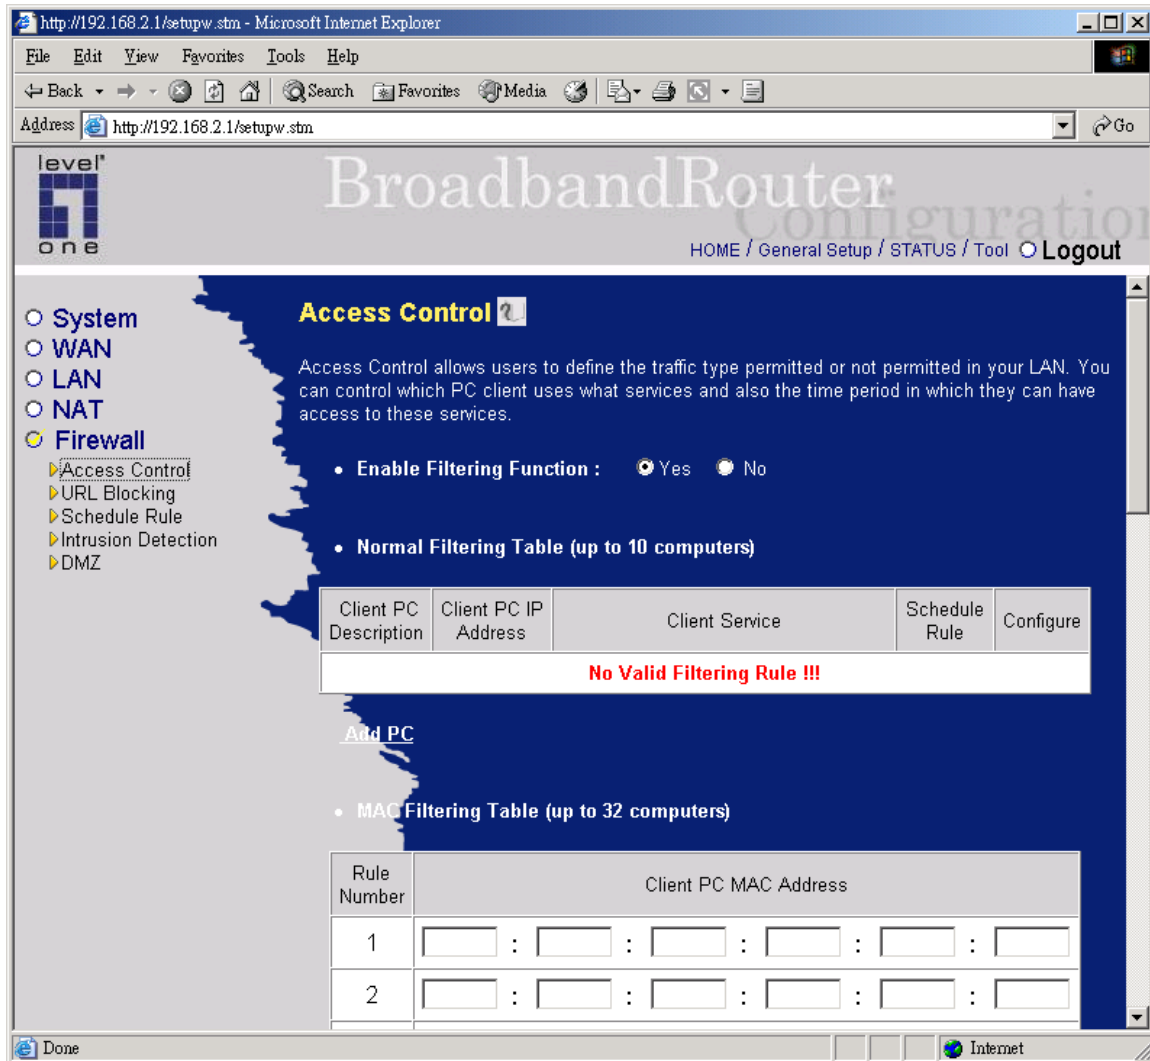

Parameters	Description
Enable Filtering Function	You must select whether to enable (Yes) or disable (No) the Access control function that you've configured in this screen
Add PC	You can click Add PC to add an access control rule for users by IP addresses.

MAC Filtering Table

Enter the MAC addresses of client PCs that you want to block from accessing the Internet.

Click **<Apply>** at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)

The screenshot shows a web browser window displaying the 'BroadbandRouter Configuration' page. The left sidebar contains a navigation menu with options: System, WAN, LAN, NAT, and Firewall. The 'Firewall' option is selected, and its sub-menu includes Access Control, URL Blocking, Schedule Rule, Intrusion Detection, and DMZ. The main content area is titled 'Access Control Add PC'. It contains a text box for 'Client PC Description', a text box for 'Client PC IP Address' (pre-filled with '192.168.2.' and a dropdown for '~ 0'), and a table for 'Client PC Service'. The table has three columns: 'Service Name', 'Detail Description', and 'Blocking'. The table lists various services with their corresponding ports and a checkbox for blocking each service.

Service Name	Detail Description	Blocking
WWW	HTTP, TCP Port 80, 3128, 8000, 8001, 8080	<input type="checkbox"/>
WWW with URL Blocking	HTTP (Ref. URL Blocking Site Page)	<input type="checkbox"/>
E-mail Sending	SMTP, TCP Port 25	<input type="checkbox"/>
News Forums	NNTP, TCP Port 119	<input type="checkbox"/>
E-mail Receiving	POP3, TCP Port 110	<input type="checkbox"/>
Secure HTTP	HTTPS, TCP Port 443	<input type="checkbox"/>
File Transfer	FTP, TCP Port 21	<input type="checkbox"/>
MSN Messenger	TCP Port 1863	<input type="checkbox"/>
Telnet Service	TCP Port 23	<input type="checkbox"/>
AIM	AOL Instant Messenger, TCP Port 5190	<input type="checkbox"/>
NetMeeting	H.323, TCP Port 1720, 1503	<input type="checkbox"/>
DNS	UDP Port 53	<input type="checkbox"/>
SNMP	UDP Port 161, 162	<input type="checkbox"/>
VPN-PPTP	TCP Port 1723	<input type="checkbox"/>
VPN-L2TP	UDP Port 1701	<input type="checkbox"/>
TCP	All TCP Port	<input type="checkbox"/>
UDP	All UDP Port	<input type="checkbox"/>

Add PC

Parameters

Description

Client PC Description

The description for this client PC rule.

Client PC IP Addresses

Enter the IP address range that you wish to apply this Access Control rule. This is the user's IP address(es)

that you wish to setup an Access Control rule. You can select a range of users simply by inputting the starting users' last digit (octet) IP address and the last user's last octet IP address in the appropriate boxes. If you want to select only one user then input the user's last digit IP address in both boxes.

Note: You need to give your LAN PC clients a fixed/static IP address for the Access Control rule to work properly.

Client PC Service

You can block the clients from accessing some Internet services by checking the services you want to block.

Protocol

This allows you to select UDP or TCP protocol type you want to block.

Port Range

You can assign up to five port ranges. The router will block clients from accessing Internet services that use these ports.

Scheduling Rule

You can select one of the Scheduling Rule you set previously and the router will block the clients during the time in the Scheduling Rule.

Click **<Apply>** at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)

Example: Access Control

In the example below, LAN client B cannot access any websites ever (Websites uses Port 80). However, LAN client A is unable to access websites (and any other service that uses ports between 80 and 999) between Saturday 8am to Sunday 8pm.

Configuration

IP: 192.168.2.2

Port: 80-80

Block Time: Block

Day: Saturday

Sunday

Time: 8am

8pm

Configuration

IP: 192.168.2.3

Port: 80-999


Block Time: Always

Day: Sunday

Sunday


Time: 8pm

8pm

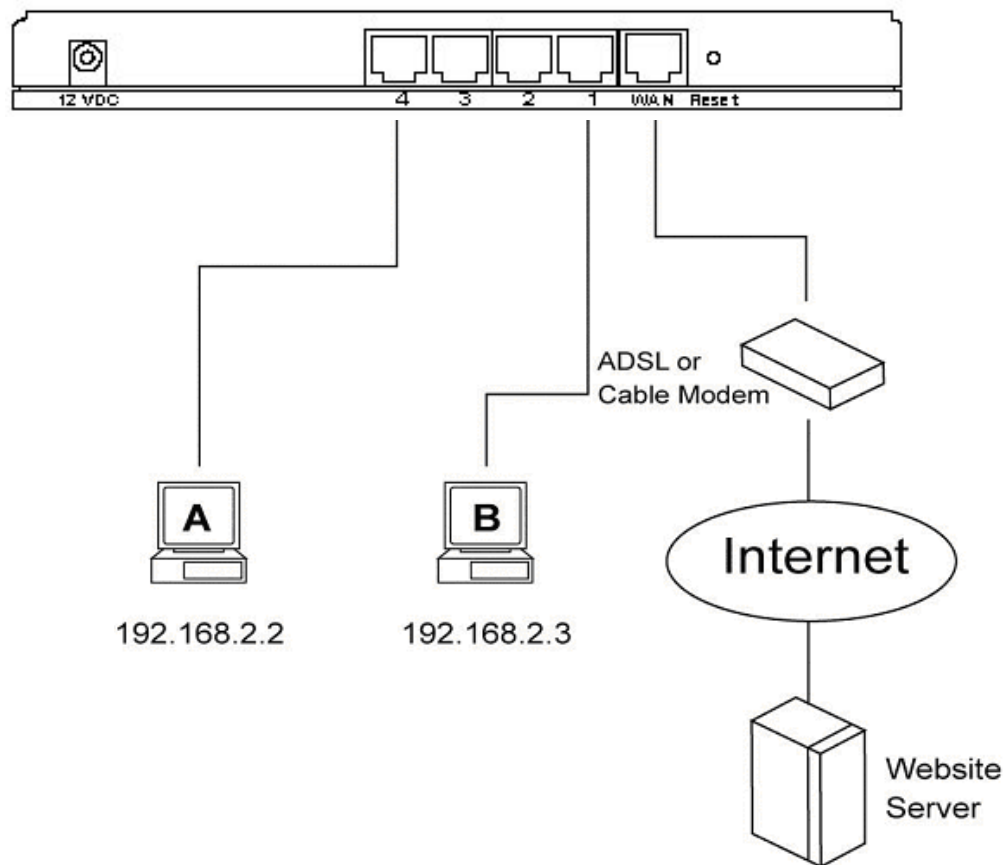

2.5.2 URL Blocking

You can block access to some Web sites from particular PCs by entering a full URL address or just keyword of the Web site. To specify particular PCs, go to the Access Control page and check the box for “WWW with URL Blocking” in the “Client PC service” table.

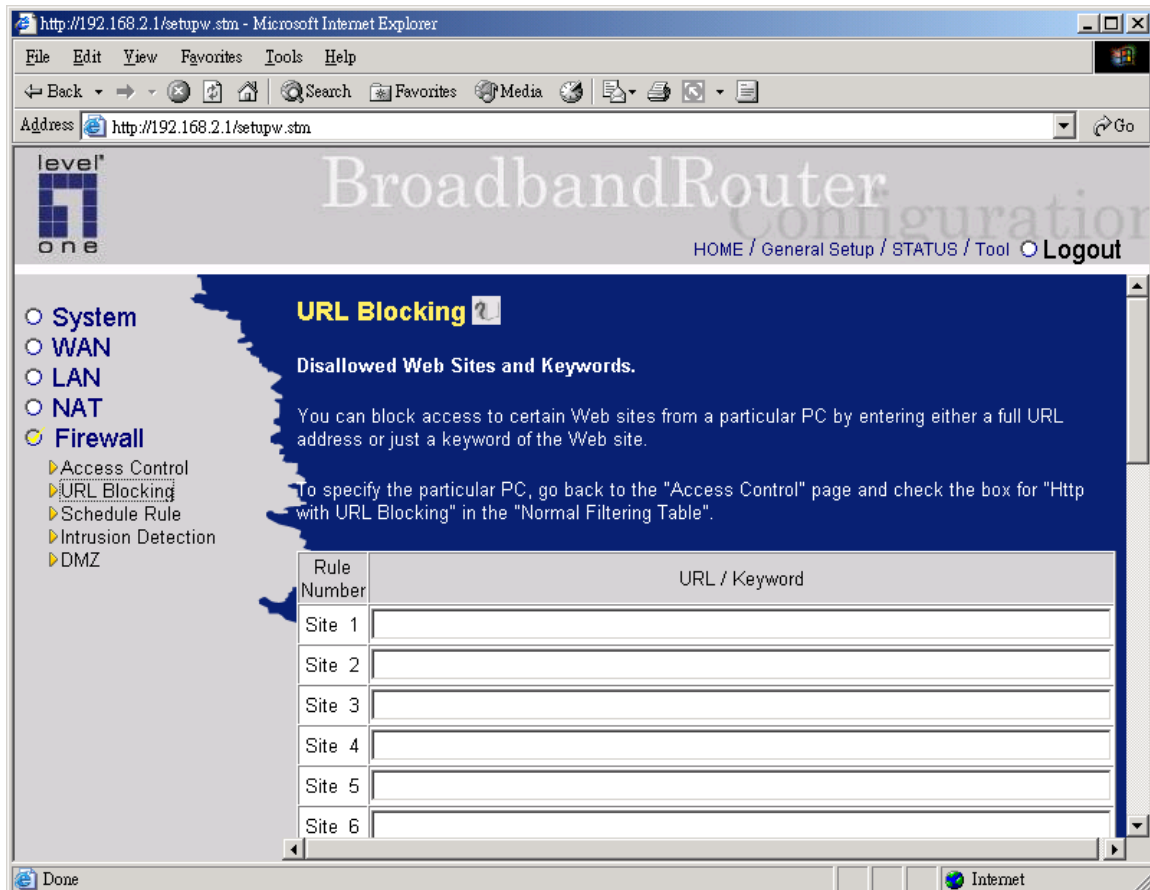


Parameters	Description
URL/Keyword	Enter the full URL address or the keyword of the Web site you want to block.

Click **<Apply>** at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)


2.5.3 Schedule Rule

You can assign time ranges for schedule. The schedule can be used by other functions, for example Access Control.

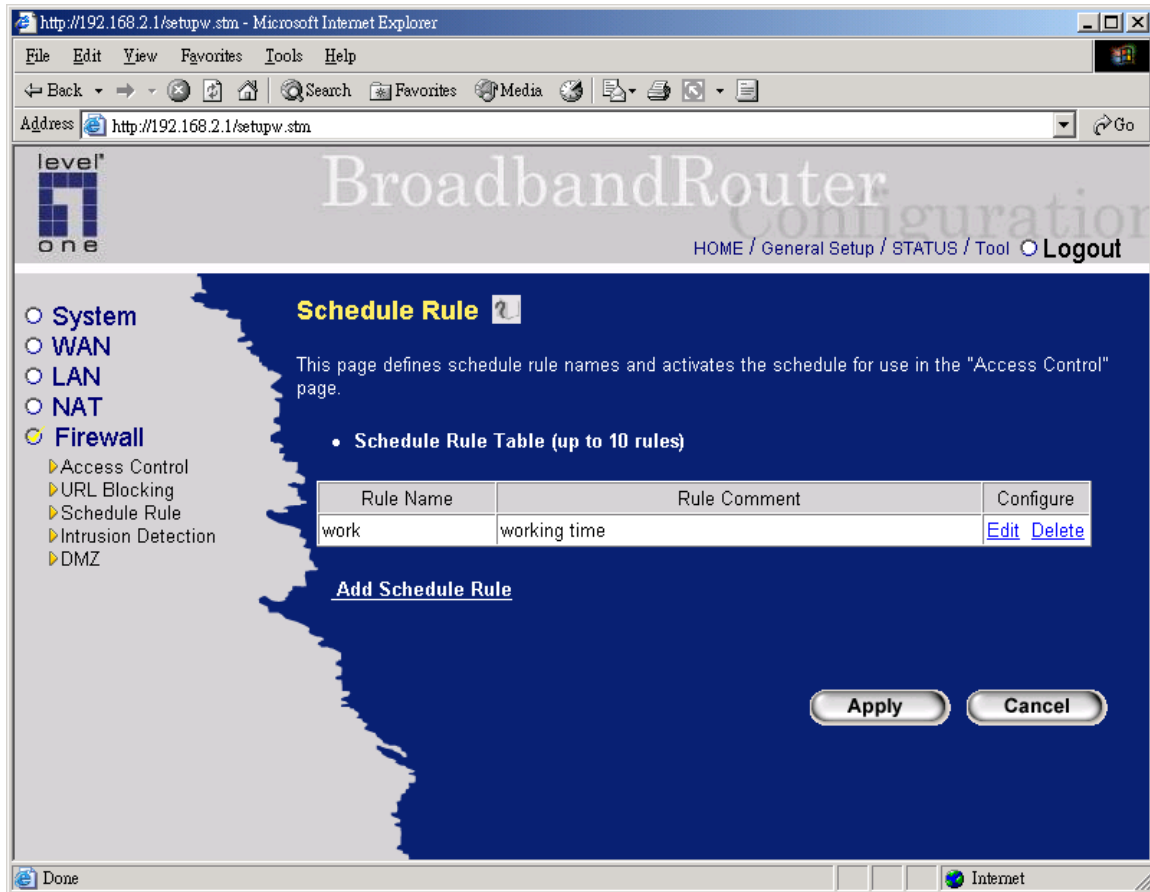

Parameters	Description
Edit	Click Edit to modify the time range of the rule schedule.
Delete	Click Delete to delete the rule of schedule.
Add Schedule Rule	Click Add Schedule Rule to add a new schedule rule and enter the detail edit page to edit the time range of the schedule rule.

Click **<Apply>** at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)

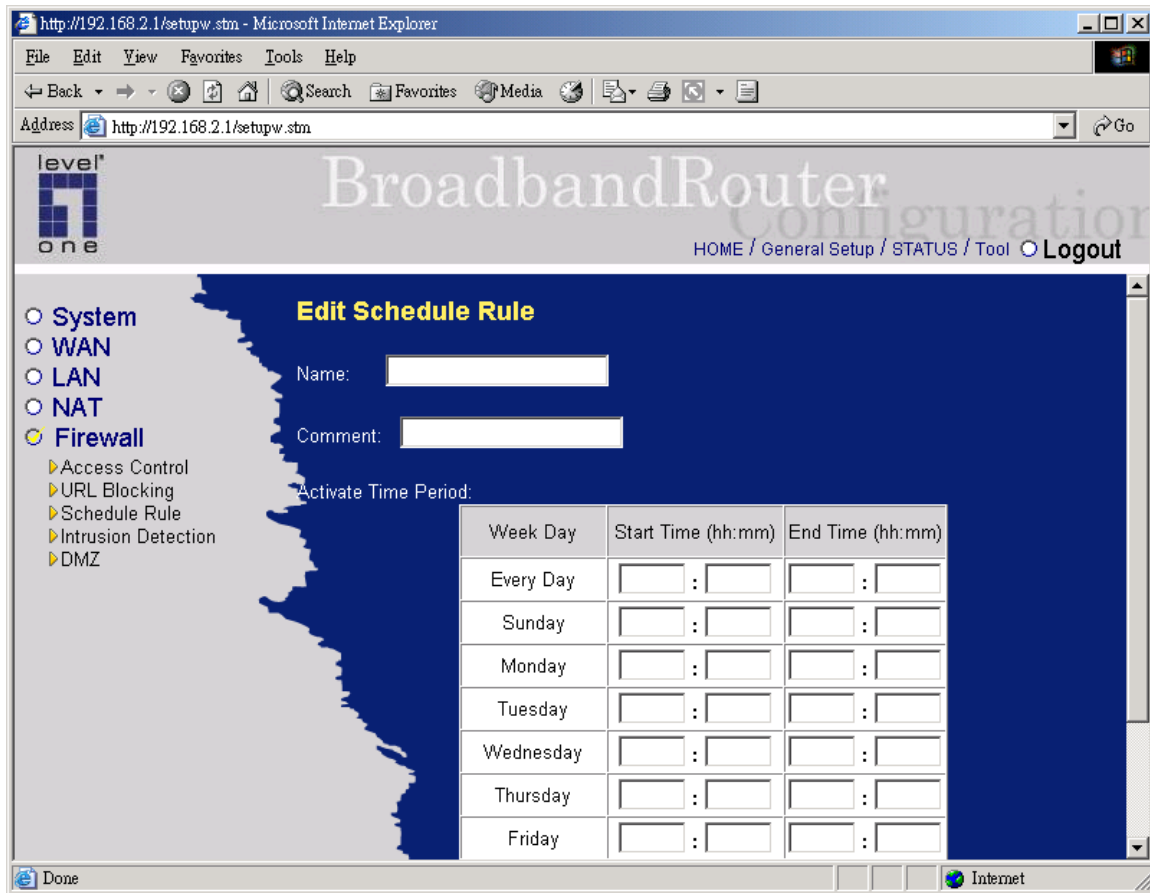


Edit Schedule Rule

Parameters	Description
Name	The name of the schedule rule.
Comment	You can enter comment for the schedule rule.
Activate Time Period	You can enter the start time and end time of each day in a week for the schedule rule.

Click **<Apply>** at the bottom of the screen to save the above configurations and go back to the previous page of Schedule Rule setting.

2.5.4 Intrusion Detection

The Broadband router's firewall can block common hacker attacks, including Denial of Service, Ping of Death, and RIP defect. If Internet attacks occur the router can also alert you by email.

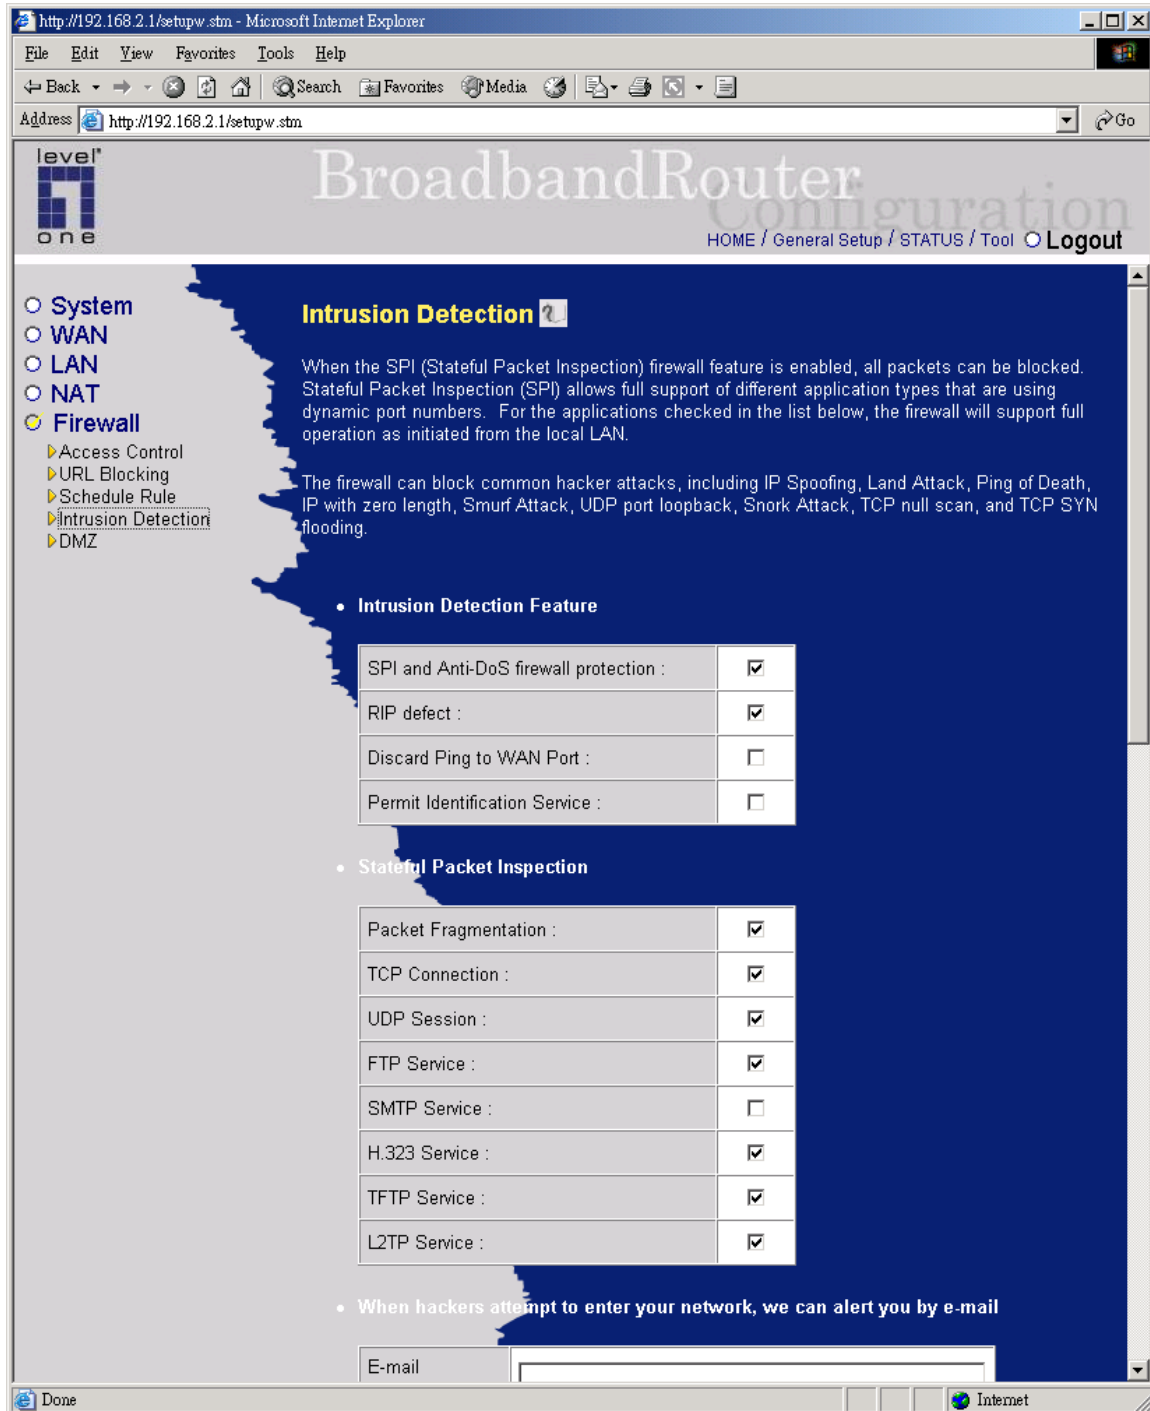


http://192.168.2.1/setupw.stm - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Back Forward Stop Search Favorites Media Print

Address http://192.168.2.1/setupw.stm Go



BroadbandRouter Configuration

HOME / General Setup / STATUS / Tool **Logout**

- System
- WAN
- LAN
- NAT
- Firewall**
 - Access Control
 - URL Blocking
 - Schedule Rule
 - Intrusion Detection
 - DMZ

E2IP Service

- When hackers attempt to enter your network, we can alert you by e-mail

E-mail Address :	<input type="text"/>
SMTP Server Address :	<input type="text"/>
POP3 Server Address :	<input type="text"/>
User name :	<input type="text"/>
Password :	<input type="text"/>

- Connection Policy

Fragmentation half-open wait :	<input type="text" value="10"/> secs
TCP SYN wait :	<input type="text" value="30"/> sec.
TCP FIN wait :	<input type="text" value="5"/> sec.
TCP connection idle timeout :	<input type="text" value="3600"/> sec.
UDP session idle timeout :	<input type="text" value="30"/> sec.
H.323 data channel idle timeout :	<input type="text" value="180"/> sec.

- DoS Detect Criteria

Total incomplete TCP/UDP sessions HIGH :	<input type="text" value="300"/> session
Total incomplete TCP/UDP sessions LOW :	<input type="text" value="250"/> session
Incomplete TCP/UDP sessions (per min) HIGH :	<input type="text" value="250"/> session
	<input type="text" value="200"/>

Done Internet

http://192.168.2.1/setupw.stm - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Back Forward Stop Search Favorites Media Print

Address http://192.168.2.1/setupw.stm Go

level one **BroadbandRouter Configuration**

HOME / General Setup / STATUS / Tool **Logout**

☐ System
☐ WAN
☐ LAN
☐ NAT
☒ Firewall

Access Control
 URL Blocking
 Schedule Rule
 Intrusion Detection
 DMZ

TCP SYN wait :	30	sec.
TCP FIN wait :	5	sec.
TCP connection idle timeout :	3600	sec.
UDP session idle timeout :	30	sec.
H.323 data channel idle timeout :	180	sec.

DoS Detect Criteria

Total incomplete TCP/UDP sessions HIGH :	300	session
Total incomplete TCP/UDP sessions LOW :	250	session
Incomplete TCP/UDP sessions (per min) HIGH :	250	session
Incomplete TCP/UDP sessions (per min) LOW :	200	session
Maximum incomplete TCP/UDP sessions number to same host :	10	session
Incomplete TCP/UDP sessions detect sensitive time period :	300	msec.
Maximum half-open fragmentation packet number to same host :	30	
Half-open fragmentation detect sensitive time period :	10000	msec.
Flooding cracker block time :	300	sec.

Apply Cancel

Done Internet

Parameters

Description

Intrusion Detection Feature

DoS Protection

Protections from any Denial of Service Attacks

Discard Ping From WAN

The router's WAN port will not respond to any Ping requests

RIP defect

Protection from RIP defect

Stateful Packet Inspection

The router will analyze all packets of selected protocols according to the state of all sessions and block all abnormal packets.

When hackers attempt to enter your network, we can alert you by e-mail

Email Address

Enter the email address that you would like the alert warning to be sent to should an attack occur

SMTP Server Address

Enter the IP address of the above email address' SMTP server

POP3 Server Address

Enter the IP address of the above email address' POP3 server

User Name

Enter the User Name of the above POP3 server

Password

Enter the Password of the above POP3 server

Connection Policy

Setup wait and idle timeout of session states. All timeout sessions will be removed to protect the router from DoS attacks.

DoS Detect Criteria

Setup the criteria of each kind of abnormal events. Any abnormal event that happens more often than the allowed criteria will be treated as DoS attack and the router will record this event in the security log and alert the user by e-mail.

Click **<Apply>** at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)

2.5.5 DMZ

If you have a local client PC that cannot run an Internet application (e.g. Games) properly from behind the NAT firewall, then you can open the client up to unrestricted two-way Internet access by defining a DMZ Host. The DMZ function allows you to re-direct all packets going to your WAN port IP address to a particular IP address in your LAN. The difference between the virtual server and the DMZ function is that the virtual server re-directs a particular service/Internet application (e.g. FTP, websites) to a particular LAN client/server, whereas DMZ re-directs all packets (regardless of services) going to your WAN IP address to a particular LAN client/server.

Parameters	Description
Enable DMZ	Select Yes to enable DMZ Select No to disable DMZ
<p>Note: If there is a conflict between the Virtual Server and the DMZ setting, then Virtual Server function will have priority over the DMZ function.</p>	

Public IP Address

The IP address of the WAN port or any other Public IP addresses given to you by your ISP

Client PC IP Address

Input the IP address of a particular host in your LAN that will receive all the packets originally going to the WAN port/Public IP address(es) above

Note: You need to give your LAN PC clients a fixed/static IP address for DMZ to work properly.

Click <**Apply**> at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)

Chapter 3

Status


The Status section allows you to monitor the current status of your router. You can use the Status page to monitor: the connection status of the Broadband router's WAN/LAN interfaces, the current firmware and hardware version numbers, any illegal attempts to access your network, and information on all DHCP client PCs currently connected to your network.

Parameters	Description
3.1 Status and Information	Shows the router's system information
3.2 Internet Connection	View the Broadband router's current Internet connection status and other related information
3.3 Device Status	View the Broadband router's current setting status
3.4 Security Log	View any attempts that have been made to illegally gain access to your network.
3.5 DHCP PC Client Log	View your LAN client's information that is currently linked to the Broadband router's DHCP server

Select one of the above five Status selections and proceed to the manual's relevant sub-section

3.1 Status and Information


The Status and Information section allows you to view the router's system information

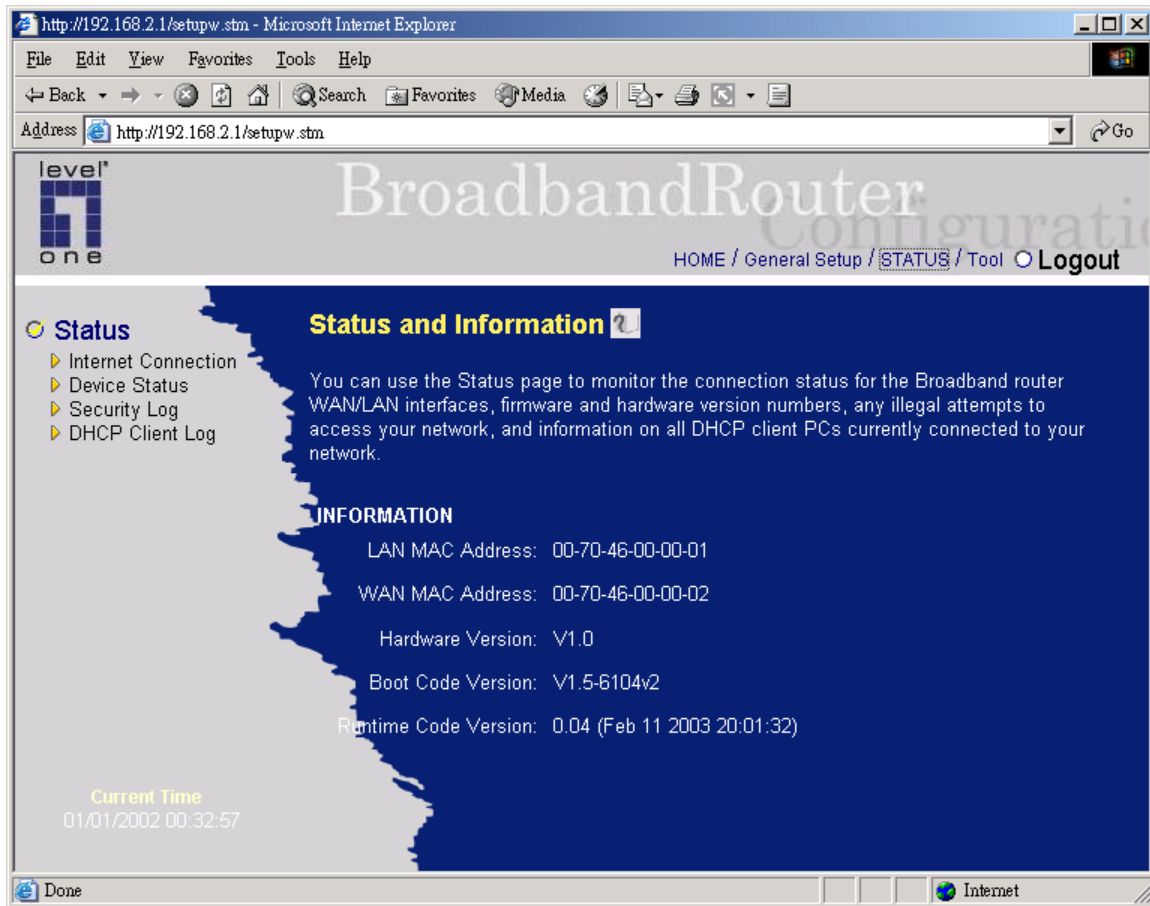

Parameters	Description
Information	You can see the router's system information such as the router's: LAN MAC Address, WAN MAC Address, Hardware version, Serial Number, Boot code Version, Runtime code Version

3.2 Internet Connection

View the Broadband router's current Internet connection status and other related information

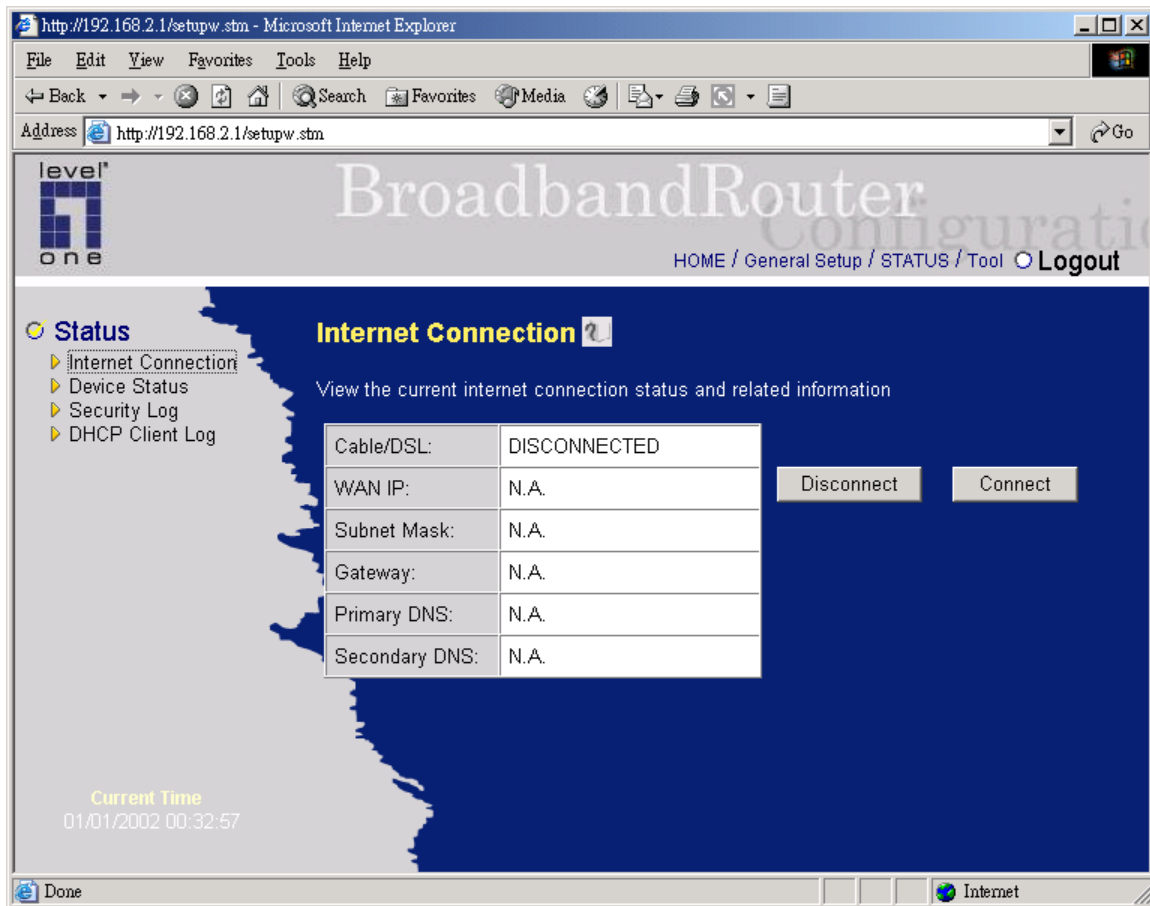


Parameters	Description
------------	-------------

Internet Connection	<p>This page displays whether the WAN port is connected to a Cable/DSL connection. It also displays the router's WAN port: WAN IP address, Subnet Mask, and ISP Gateway as well as the Primary DNS and Secondary DNS being used.</p> <p>Note: When the WAN port is a Dynamic IP connection, the <Release> and <Renew> button will release the Broadband router's WAN IP address and renew will get another IP address from the DHCP server. If the WAN port uses PPPoE, <Release> will disconnect the PPP session, and <Renew> will initialize another PPP session.</p>
---------------------	--

3.3 Device Status


View the Broadband router's current configuration settings. The Device Status displays the configuration settings you've configured in the **Quick Setup Wizard/General Setup** section.

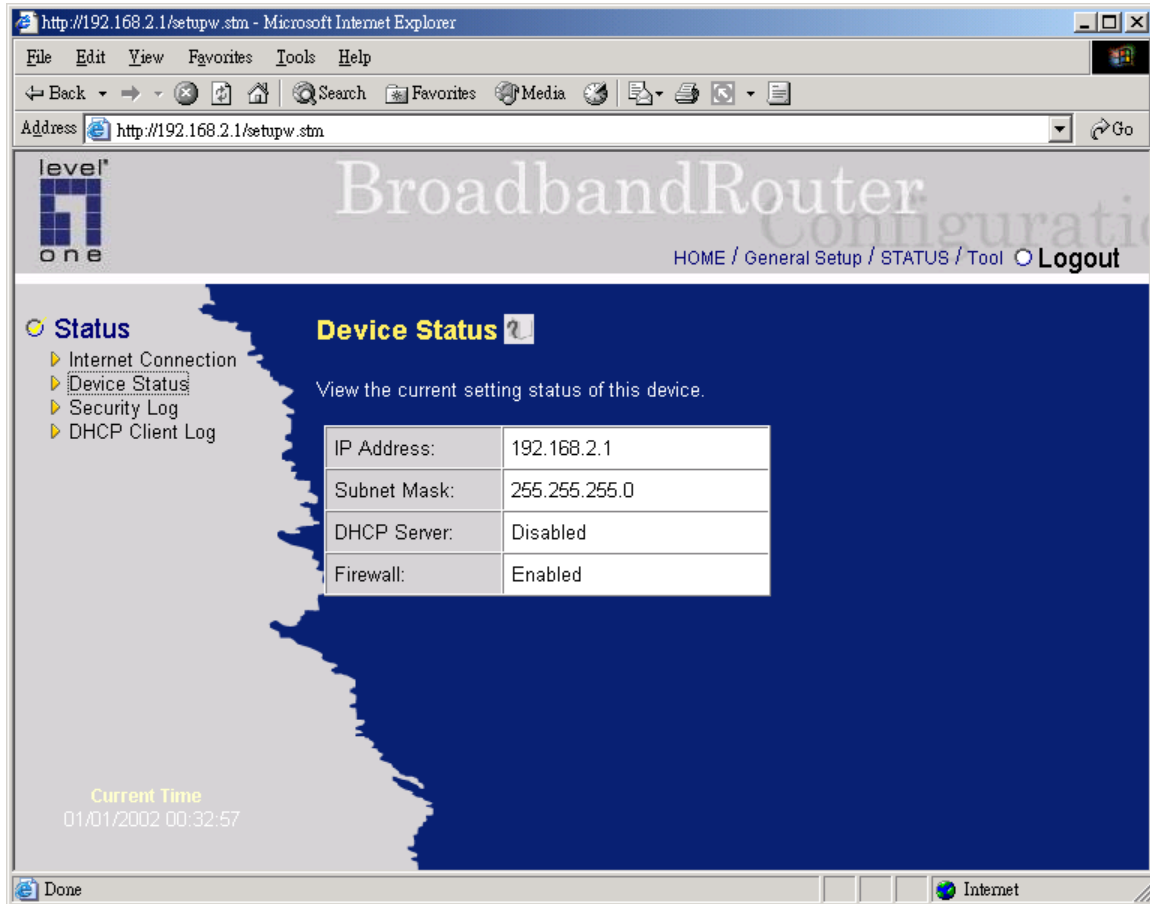

Parameters	Description
Device Status	This page shows the Broadband router's current device settings. This page displays the Broadband router LAN port's current LAN IP Address and Subnet Mask . It also shows whether the DHCP Server and Firewall functions are enabled/disabled. The firewall status is shown enabled if the firewall is enabled (regardless of whether you've configured any of the firewall features).

3.4 Security Log

View any attempts that have been made to illegally gain access to your network.

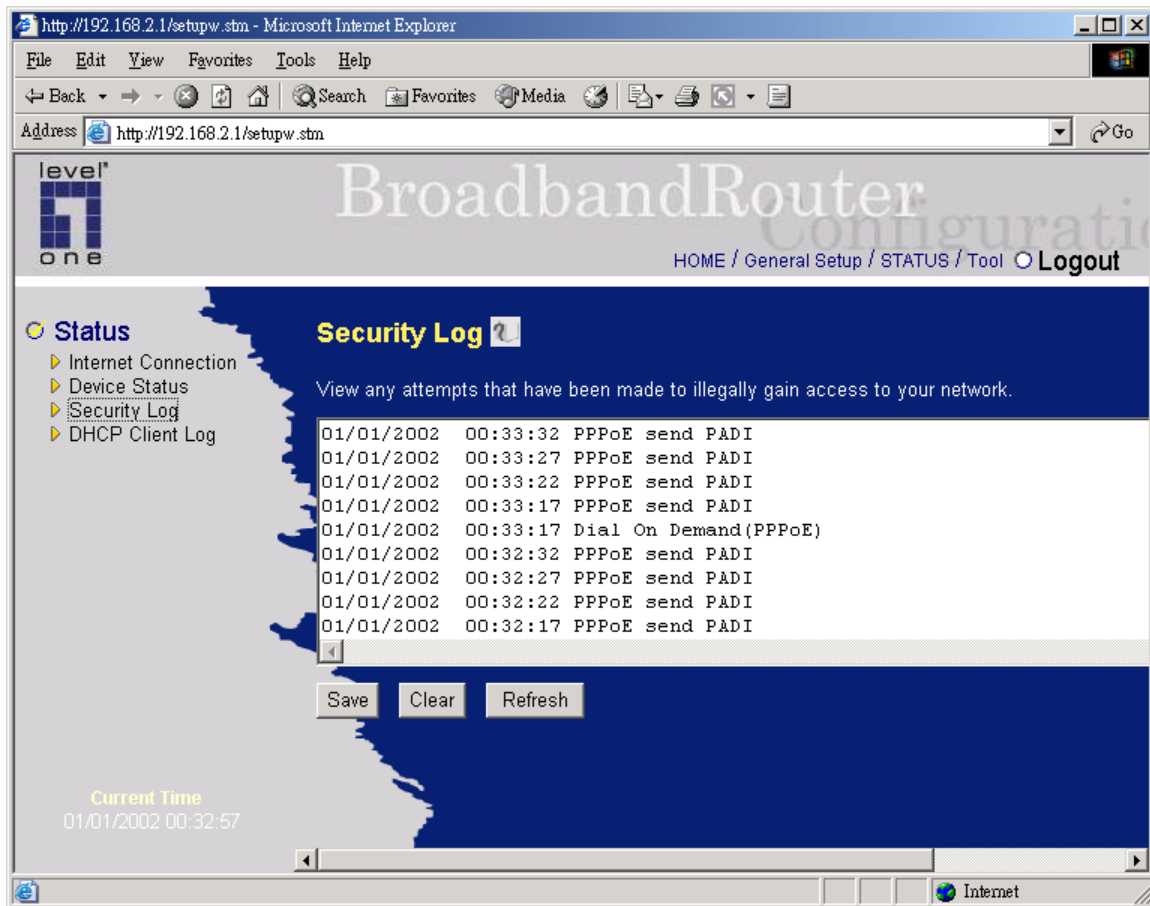

Parameters


Description

Security Log

This page shows the current security log of the Broadband router. It displays any illegal attempts to access your network. At the bottom of the page, the security log can be saved <Save> to a local file for further processing or the security log can be cleared <Clear> or it can be refreshed <Refresh> to get the most updated situation. When the system is powered down, the security log will disappear if not saved to a local file.

3.5 DHCP Client Log

View your LAN client's information that is currently linked to the Broadband router's DHCP server

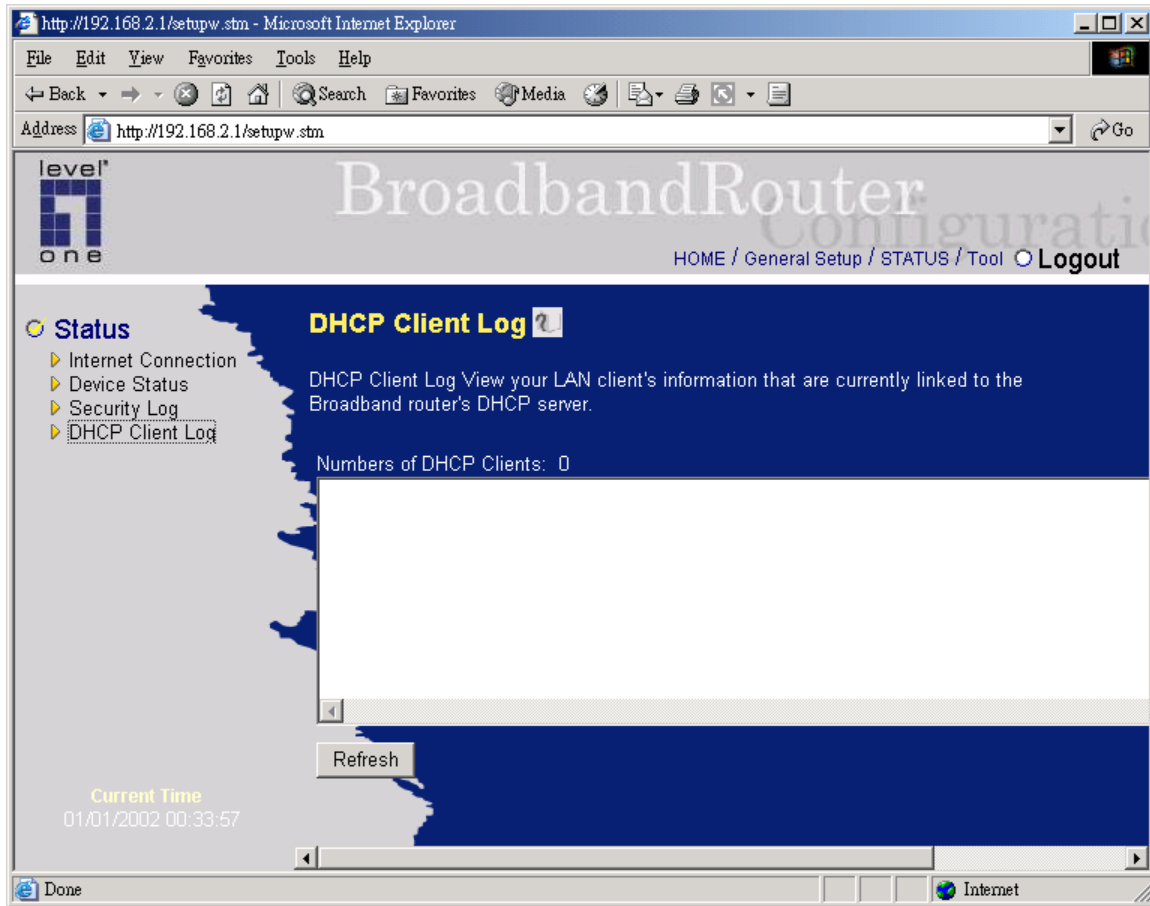


Parameters	Description
DHCP Client Log	This page shows all DHCP clients (LAN PCs) currently connected to your network. Number of DHCP Clients displays the number of LAN clients that are currently linked to the Broadband router's DHCP server. The DHCP Client Log displays the IP address and the MAC address of each LAN Client. Use the Refresh button to get the most updated situation

Chapter 4

Tool

This page includes the basic configuration tools, such as Configuration Tools (save or restore configuration settings), Firmware Upgrade (upgrade system firmware) and Reset.

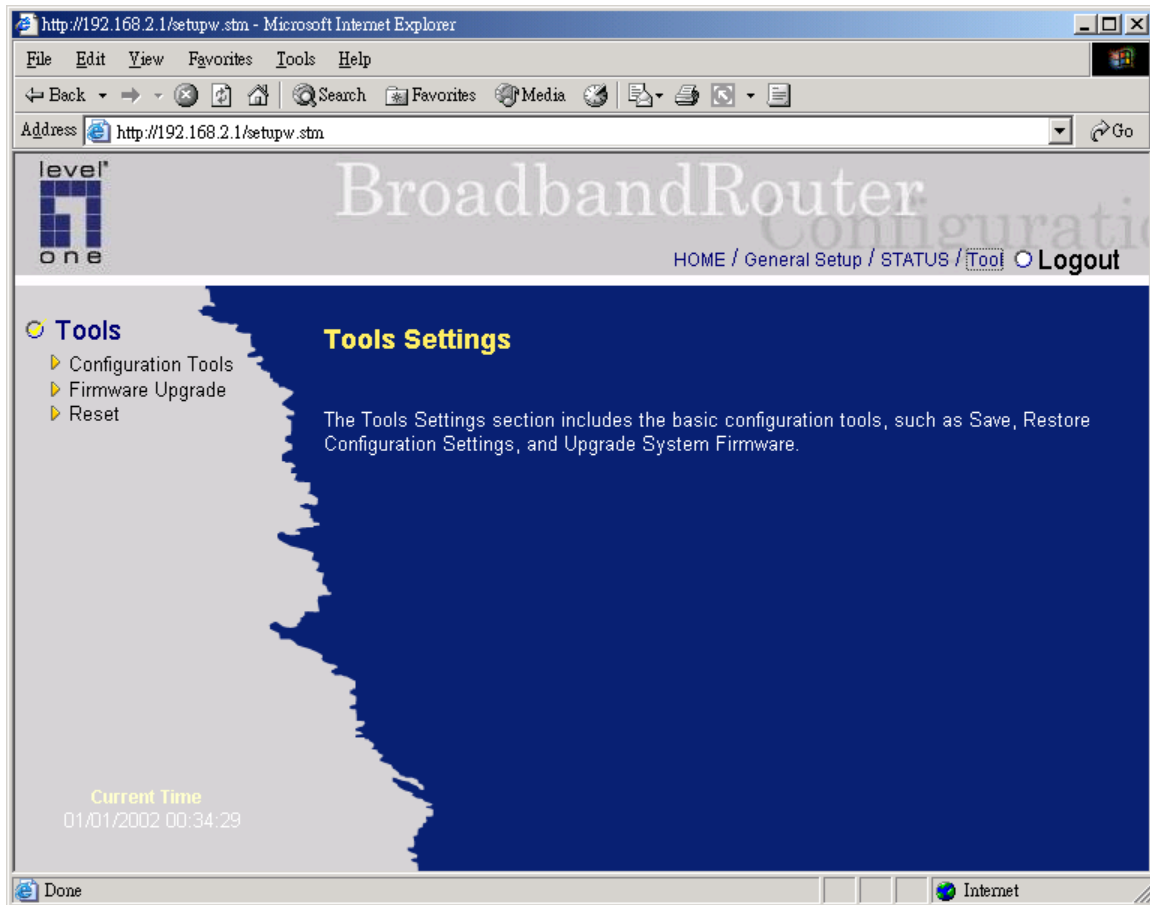


Parameters	Description
4.1 Configuration Tools	You can save the router's current configuration, restore the router's saved configuration files and restore the router's factory default settings
4.2 Firmware Upgrade	This page allows you to upgrade the router's firmware
4.3 Reset	You can reset the router's system should any problem exist

Select one of the above three **Tools Settings** selection and proceed to the manual's relevant sub-section

4.1 Configuration Tools


The Configuration Tools screen allows you to save (**Backup**) the router's current configuration setting. Saving the configuration settings provides an added protection and convenience should problems occur with the router and you have to reset to factory default. When you save the configuration setting (Backup) you can re-load the saved configuration into the router through the **Restore** selection. If extreme problems occur you can use the **Restore to Factory Defaults** selection, this will set all configurations to its original default settings (e.g. when you first purchased the router).

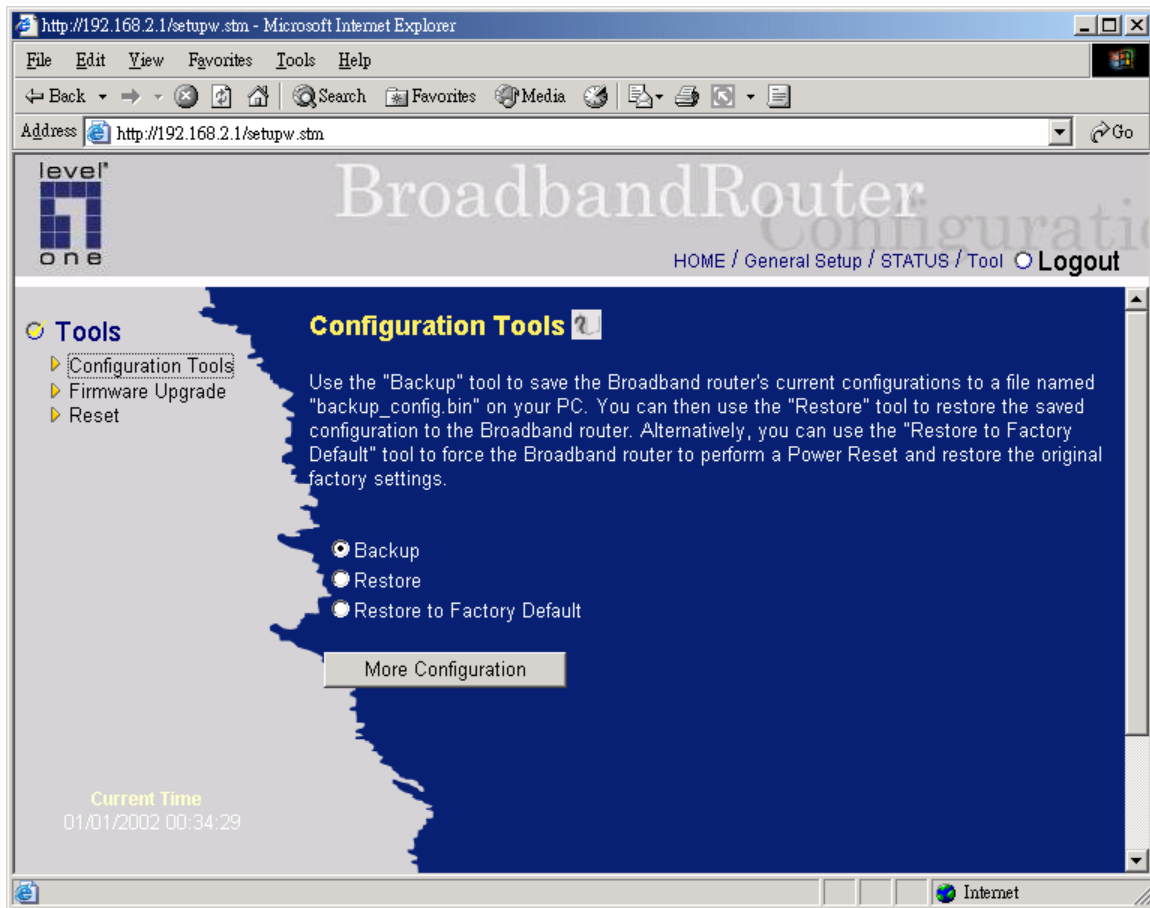

Parameters	Description
Configuration Tools	<p>Use the "Backup" tool to save the Broadband router current configuration to a file named "backup_config.exe" on your PC. You can then use the "Restore" tool to restore the saved configuration to the Broadband router. Alternatively, you can use the "Restore to Factory Defaults" tool to force the Broadband router to perform a power reset and restore the original factory settings.</p> <p>Note: Click <More Configuration> after making a selection and follow the instructions</p>

4.2 Firmware Upgrade

This page allows you to upgrade the router's firmware

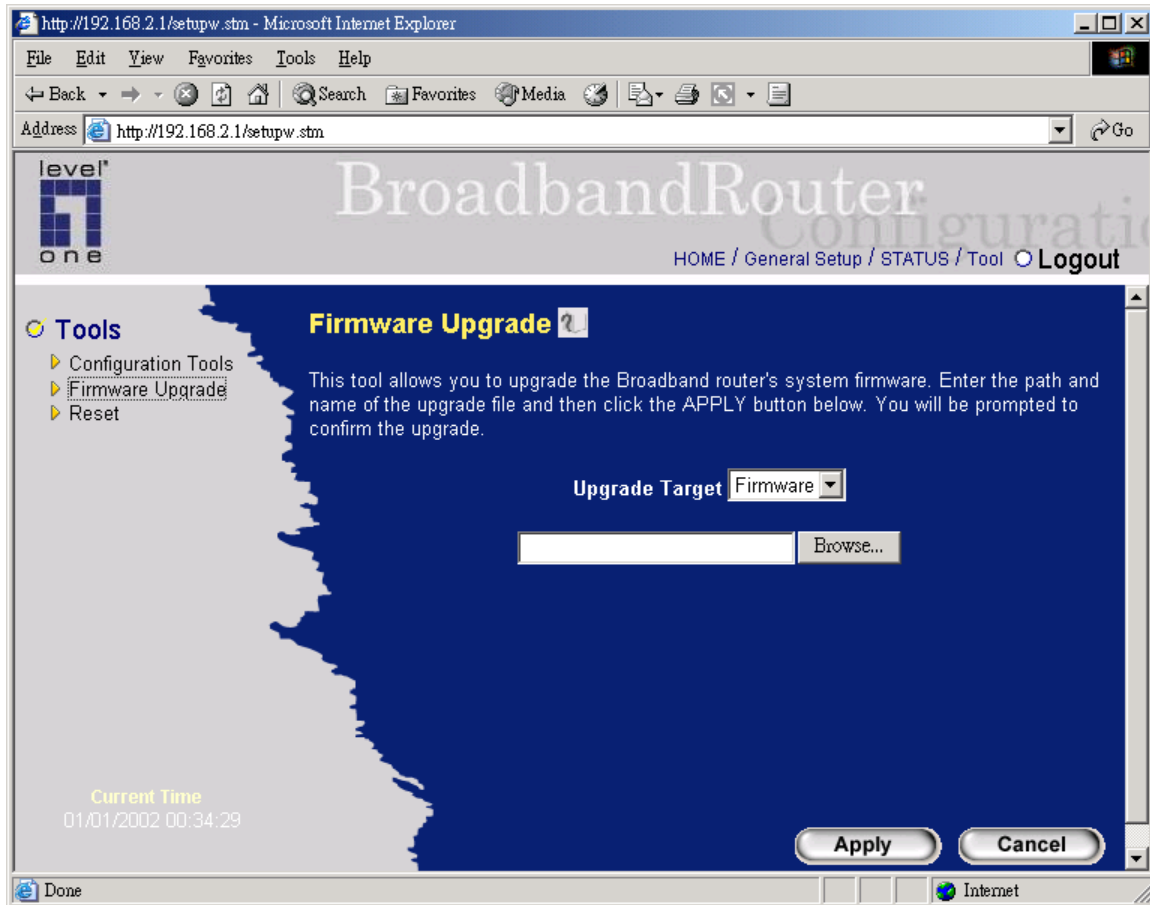


Parameters	Description
Firmware Upgrade	This tool allows you to upgrade the Broadband router's system firmware. To upgrade the firmware of your Broadband router, you need to download the firmware file to your local hard disk, and enter that file name and path in the appropriate field on this page. You can also use the Browse button to find the firmware file on your PC.

Once you've selected the new firmware file, click **<Apply>** at the bottom of the screen to start the upgrade process. (You may have to wait a few minutes for the upgrade to complete). Once the upgrade is complete you can start using the router.

4.3 Reset

You can reset the router's system should any problem exist. The reset function essentially Re-boots your router's system

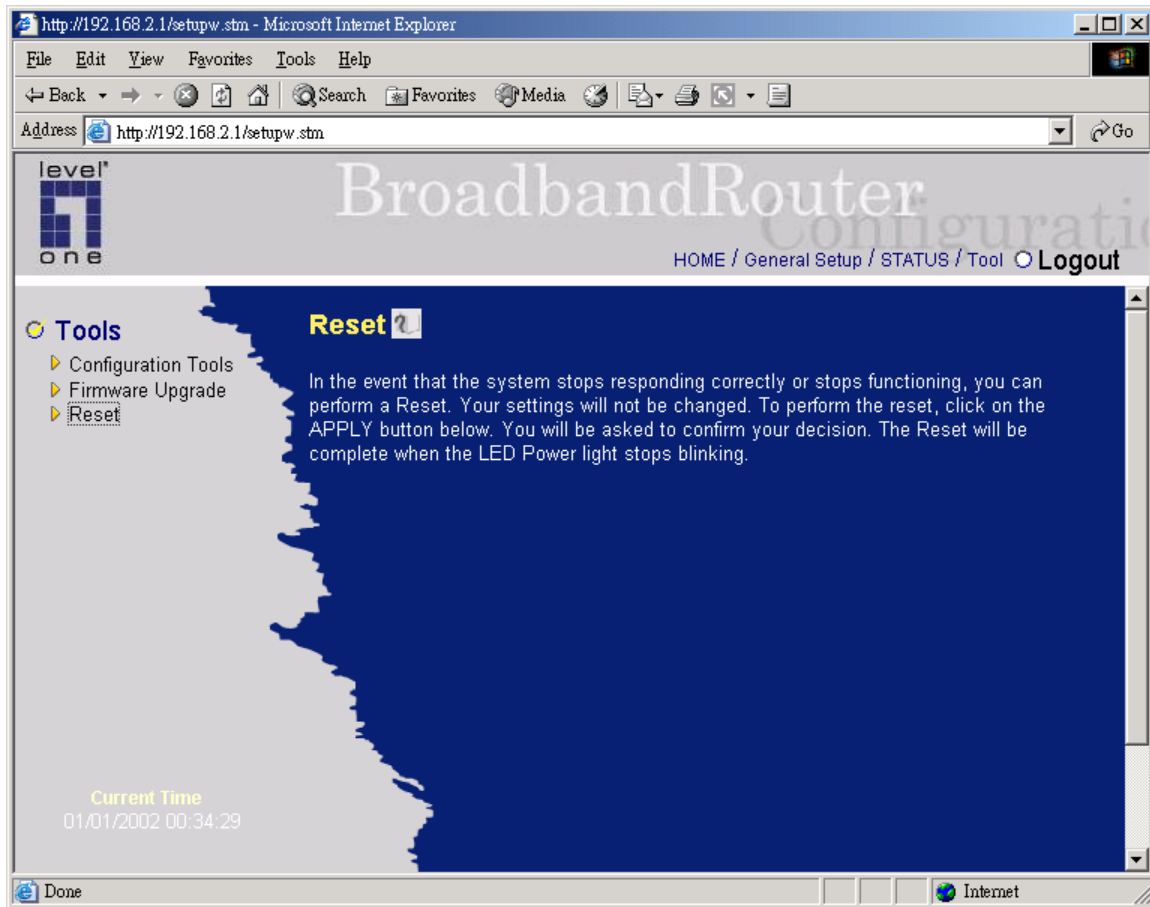


Parameters	Description
Reset	In the event that the system stops responding correctly or in some way stops functioning, you can perform a reset. Your settings will not be changed. To perform the reset, click on the <APPLY> button. You will be asked to confirm your decision. The reset will be complete when the power light stops blinking. Once the reset process is complete you may start using the router again.


Appendix A

How to Manually find your PC's IP and MAC address

- 1) In Window's open the Command Prompt program

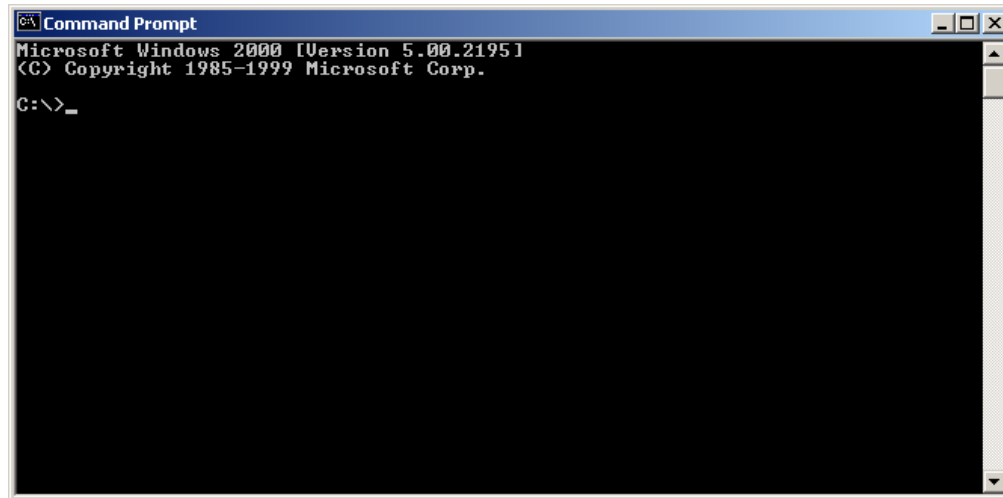

- 2) Type **ipconfig /all** and <enter>

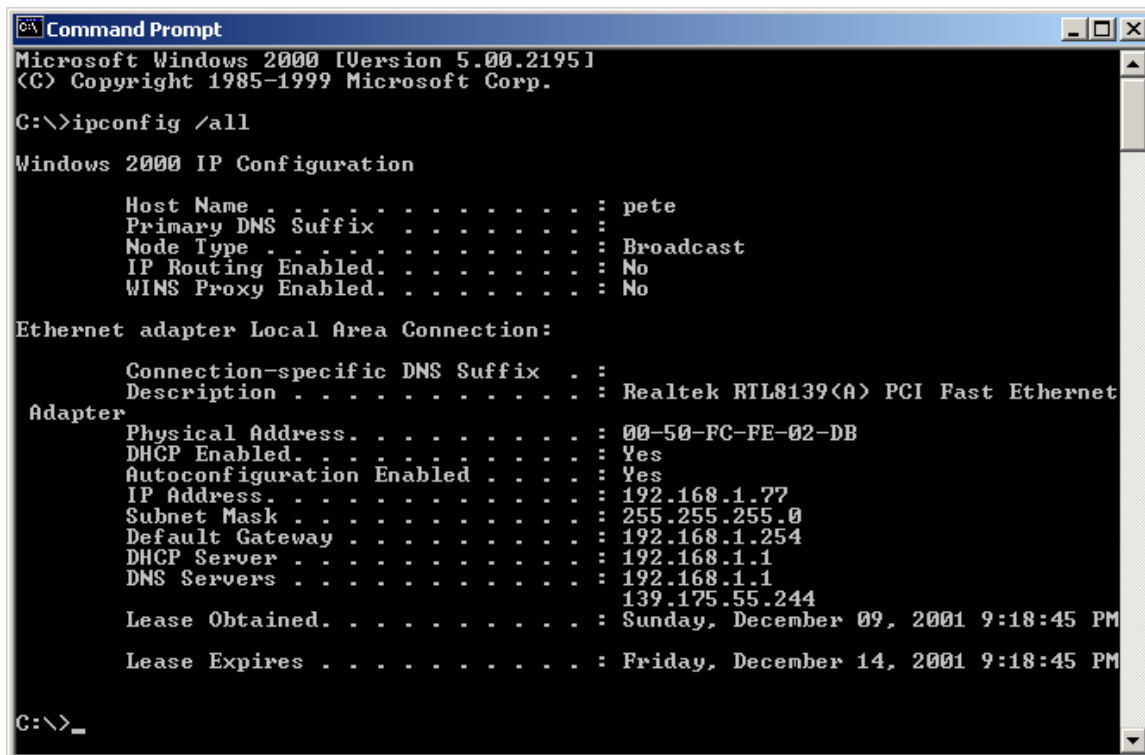

- Your PC's IP address is the one entitled **IP address** (192.168.1.77)
- The router's IP address is the one entitled **Default Gateway** (192.168.1.254)
- Your PC's MAC Address is the one entitled **Physical Address** (00-50-FC-FE-02-DB)

Appendix B

Specifications

Standards	IEEE820.3(Ethernet) IEEE802.3u(Fast Ethernet) IEEE802.3x(Flow Control)
Protocols	NAT , PPPoE, HTTP , DHCPclient/server TCP/IP, , SMTP, DDNS
Security	Netural firewall , local password , DMZ, Virtual Servers, Access Control, ,Bridge mode, PPTPfor VPN , IPSec Pass-thru for VPN , L2TP forVPN , SPI/DoS
Management	Web-based management
Wan port	1x10 10/100 Base-T (RJ-45)
Lan port	4x10 10/100 Base-T auto sensing (RJ-45)
Leds	power,duplex , LAN link act ,WAN link act
Dimensions	190(L)mm * 100 mm (W)* 30 mm (H)
Regulartion	FCC Class B, CE Mark ,C-Tick
Throughput	20 Mbps
Power	12V/0.5A DC Linear Power Adaptor
Weight	270 g
Temperature	10-55°C
Humidity	0-90% (NonCondensing

Glossary

Bridge: A bridge is an intelligent, internetworking device that forwards or filters packets between different networks based on data link layer (MAC) address information.

Default Gateway (Router): Every non-router IP device needs to configure a default gateway's IP address. When the device sends out an IP packet, if the destination is not on the same network, the device has to send the packet to its default gateway, which will then send it out towards the destination.

DHCP: Dynamic Host Configuration Protocol. This protocol automatically gives every computer on your home network an IP address.

DNS Server IP Address: DNS stands for Domain Name System, which allows Internet servers to have a domain name (such as `www.Broadbandrouter.com`) and one or more IP addresses (such as `192.34.45.8`). A DNS server keeps a database of Internet servers and their respective domain names and IP addresses, so that when a domain name is requested (as in typing "`Broadbandrouter.com`" into your Internet browser), the user is sent to the proper IP address. The DNS server IP address used by the computers on your home network is the location of the DNS server your ISP has assigned to you.

DSL Modem: DSL stands for Digital Subscriber Line. A DSL modem uses your existing phone lines to transmit data at high speeds.

Ethernet: A standard for computer networks. Ethernet networks are connected by special cables and hubs, and move data around at up to 10/100 million bits per second (Mbps).

Idle Timeout: Idle Timeout is designed so that after there is no traffic to the Internet for a pre-configured amount of time, the connection will automatically be disconnected.

IP Address and Network (Subnet) Mask: IP stands for Internet Protocol. An IP address consists of a series of four numbers separated by periods, that identifies a single, unique Internet computer host in an IP network. Example: `192.168.2.1`. It consists of 2 portions: the IP network address, and the host identifier.

The IP address is a 32-bit binary pattern, which can be represented as four cascaded decimal numbers separated by ".": `aaa.aaa.aaa.aaa`, where each "aaa" can be anything from 000 to 255, or as four cascaded binary numbers separated by ".": `bbbbbbbb.bbbbbbbb.bbbbbbbb.bbbbbbbb`, where each "b" can either be 0 or 1.

A network mask is also a 32-bit binary pattern, and consists of consecutive leading 1's followed by consecutive trailing 0's, such as

`11111111.11111111.11111111.00000000`. Therefore sometimes a network mask can also be described simply as "x" number of leading 1's.

When both are represented side by side in their binary forms, all bits in the IP address that correspond to 1's in the network mask become part of the IP network address, and the remaining bits correspond to the host ID.

For example, if the IP address for a device is, in its binary form,
`11011001.10110000.10010000.00000111`, and if its network mask is,
`11111111.11111111.11110000.00000000`

It means the device's network address is

`11011001.10110000.10010000.00000000`, and its host ID is,
`00000000.00000000.00000000.00000111`. This is a convenient and efficient method for routers to route IP packets to their destination.

ISP Gateway Address: (see ISP for definition). The ISP Gateway Address is an IP address for the Internet router located at the ISP's office.

ISP: Internet Service Provider. An ISP is a business that provides connectivity to the Internet for individuals and other businesses or organizations.

LAN: Local Area Network. A LAN is a group of computers and devices connected together in a relatively small area (such as a house or an office). Your home network is considered a LAN.

MAC Address: MAC stands for Media Access Control. A MAC address is the hardware address of a device connected to a network. The MAC address is a unique identifier for a device with an Ethernet interface. It is comprised of two parts: 3 bytes of data that corresponds to the Manufacturer ID (unique for each manufacturer), plus 3 bytes that are often used as the product's serial number.

NAT: Network Address Translation. This process allows all of the computers on your home network to use one IP address. Using the broadband router's NAT capability, you can access the Internet from any computer on your home network without having to purchase more IP addresses from your ISP.

Port: Network Clients (LAN PC) uses port numbers to distinguish one network application/protocol over another. Below is a list of common applications and protocol/port numbers:

Application	Protocol	Port Number
Telnet	TCP	23
FTP	TCP	21
SMTP	TCP	25
POP3	TCP	110
H.323	TCP	1720
SNMP	UCP	161
SNMP Trap	UDP	162
HTTP	TCP	80
PPTP	TCP	1723
PC Anywhere	TCP	5631
PC Anywhere	UDP	5632

PPPoE: Point-to-Point Protocol over Ethernet. Point-to-Point Protocol is a secure data transmission method originally created for dial-up connections; PPPoE is for Ethernet connections. PPPoE relies on two widely accepted standards, Ethernet and the Point-to-Point Protocol. It is a communications protocol for transmitting information over Ethernet between different manufacturers

Protocol: A protocol is a set of rules for interaction agreed upon between multiple parties so that when they interface with each other based on such a protocol, the interpretation of their behavior is well defined and can be made objectively, without confusion or misunderstanding.

Router: A router is an intelligent network device that forwards packets between different networks based on network layer address information such as IP addresses.

Subnet Mask: A subnet mask, which may be a part of the TCP/IP information provided by your ISP, is a set of four numbers (e.g. 255.255.255.0) configured like an IP address. It is used to create IP address numbers used only within a particular network (as opposed to valid IP address numbers recognized by the Internet, which must be assigned by InterNIC).

TCP/IP, UDP: Transmission Control Protocol/Internet Protocol (TCP/IP) and Unreliable Datagram Protocol (UDP). TCP/IP is the standard protocol for data transmission over the Internet. Both TCP and UDP are transport layer protocol. TCP performs proper error detection and error recovery, and thus is reliable. UDP on the other hand is not reliable. They both run on top of the IP (Internet Protocol), a network layer protocol.

WAN: Wide Area Network. A network that connects computers located in geographically separate areas (e.g. different buildings, cities, countries). The Internet is a wide area network.

Web-based management Graphical User Interface (GUI): Many devices support a graphical user interface that is based on the web browser. This means the user can use the familiar Netscape or Microsoft Internet Explorer to Control/configure or monitor the device being managed.