



FCS-9364

OneSecure Video
Management Software,
64-Channel

Administrator Manual

For Version 3.0.09

About This Manual

Target Audience

This manual is intended for **System Administrators** who are responsible for installing and setting up the OneSecure surveillance system. The reader is expected to know the fundamentals of IP surveillance system integration and to own the administrative privileges to achieve all the tasks.

Content Overview

This manual provides information needed for planning the installation, installing, setting up the system and configuring the video streaming devices. Its main content consists of the following three sections:

- **Getting Started** provides the preparatory knowledge you should study before starting installation, such as system requirements, license registration and backup/restore procedures.
- **Log in to the System** explains how to log in to the system right after a successful installation.
- **System Setup** gives instructions on the tasks such as adding devices to the system, configuring the device settings, scheduling the recordings, managing events, managing storage, managing groups/users and setting up Live View. For each major task, you will be given a brief introduction of operation principles, step-by-step instructions, and a simple method to check if you have done it correctly.

Conventions Used in This Manual

The following are typographic conventions used in this manual:

- **Bold**: Bold typeface is used for a keyword, major functions of NVR, or a title of a section/column.
- *Italic*: Italic typeface is used for a filename or location path.
- Underlined: Underlined typeface is used for a document name or hyperlink.
- “**Bold**”: Bold interface enclosed in double quotation marks indicates the name of a button, a menu or a choice item.

Some notices are placed within the following boxes; each type of the box indicates different purposes or levels of importance for system:

Important Notice

The content within this box is an **important notice**. This notice is important for you to get certain functions to work properly, or to prevent from certain potential problems that may damage your system. Make sure you read this notice and follow the instructions.

Note

The content within this box is a **note**. A note is some necessary information you need to know about the action you are currently taking, like what will happen after you follow or don't follow certain procedure.

Tip

The content within this box is a **tip**. A tip gives you an alternative method to easily or quickly achieve an objective, usually for specific conditions.

Table of Contents

1	About This Manual	2
	Target Audience.....	2
	Content Overview	2
	Conventions Used in This Manual.....	3
2	Table of Contents	4
3	Overview	9
	NVR Server / Client Architecture.....	9
4	System Installation Check List	10
5	Getting Started	12
	System Requirements	12
	Prerequisites	14
	1. Suitable System Specifications	14
	2. Uninstall Previous old OneSecure Server	14
	3. More than 40 GB Space on Storage Drive	14
	4. Turn Off Windows UAC Function.....	14
	Disable UAC in Windows 7	14
	Server Installation.....	16
	Install the Software	16
	Workstation Installation.....	19
	Install the Software	19
	License and Activation.....	20
	Verify Your License	22
6	Log In to the System	23

Access NVR Server via Internet Explorer	23
From Server Computer Using Local Client.....	23
From Remote Client Computer	23
Accept ActiveX Controls Installation Requests.....	23
Login Failure Troubleshooting.....	24
Condition 1: Why can't I access NVR server via browser?	24
Condition 2: Why can't I install Active X controls after logging in?	25
Login	27
A. Enter Account & Password	27
B. Change UI language	27
C. Remember Account/Password	27
D. Retrieve the Forgotten Password	27
Access NVR Server via OneSecure Workstation	28
Login	28
A. Server IP & Server Port	28
B. Enter Account & Password	28
C. Choose the Initial Screen	28
D. Language	28
E. Remember Login Information	29
F. Retrieve the Forgotten Password	29
G. Server Name/Server Sites List	29

7 Set up the System 31

Setup Wizard	31
System Settings	32
Storage	32
NVR Main Screen	34
Live View.....	34
Playback	34
Setup.....	34
Add Devices	35
Search Devices Within Local Area Network	36
Search Devices Within Local Area Network with ONVIF	37
Add Devices on WAN or Other Local Area Networks	38
Basic Settings Attributes	39
Device Status.....	40
Status Icon Description	41

OneSecure Video Management Software Administrator Manual V3.0.09

Add Non-LevelOne Cameras	42
Manage Multiple Devices	44
Modify Basic Connection Settings.....	44
Delete Devices	44
Copy Settings Across Devices	45
Add Video Streams from a Multi-channel Device	46
Configure Device Settings	47
Configure Video Format	47
Video Settings Attributes	47
Save Storage by Setting Event Recording Frame Rate	48
Schedule Recording	48
Event Recording	48
Event Recording with Frame Rate Adjustment	49
How to Make Use of Event Recording with Frame Rate Adjustment	49
Fine-tune the Image.....	50
Video Adjustment Attributes	51
Configure Motion Settings.....	53
Adjustment Attributes	54
Configure PTZ Device.....	55
Adjustment Attributes	55
How to Do Live PTZ Operation	56
Set PTZ Preset Points.....	59
Set PTZ Preset Tour.....	60
Configure Fisheye Cameras	61
Schedule Recordings.....	65
Configure the Recording File Properties	65
Attributes Explanation	65
Set the Schedule.....	67
Use Time Setting Quick Buttons to Set the Time in One Click	68
Lock Specific Days	69
Copy an Existing Schedule to Others	70
View the Entire Recording Schedule.....	71
Event Management	72
How Does NVR Handle Events.....	72
How to Edit an Event Rule	73
Manage the Event Rules.....	76
Delete the Event Rules	77
How to Setup SMTP Settings for Event Rules	77

OneSecure Video Management Software Administrator Manual V3.0.09

How to Setup FTP Settings for Event Rules	78
System Log.....	80
Define Search Time	80
Choose Log Type	81
Read the Log	81
Export the Log.....	82
Storage Management	83
Change Recordings Folder Name.....	83
Set System Log Lifecycle.....	83
Set Hard Drives for the Recorded Files Deletion Rule	83
Manage User Groups/ Users	85
Overview	85
User Groups.....	86
Add Users	88
Domain Users Management	90
Customize Views	91
Step 1: Create a New View	92
Step 2: Enter Edit Mode	92
Step 3: Select a Layout.....	92
Step 4: Add Video Source	93
Step 5: Add a Map	93
Step 6: Add Devices to the Map.....	95
Step 7: Adjust the Channel Size & Layout.....	96
Step 8: Save the View	96
Step 9: Set Default View	96
Step 10: Set Default Hotspot Channel (Optional).....	97
Step 11: Set Fisheye Camera Mode	97
Manage the Views.....	98
Set View Link	99
Set View Patrol	99
Tips to Enhance Live View Performance.....	101
Let Windows Automatically Start with NVR Live View	102
Customize System Language	103
System Languages List.....	103
Display Configurations.....	106
Video & Snapshot Export Configurations.....	107
Joystick	108
Joystick Configurations	108

OneSecure Video Management Software Administrator Manual V3.0.09

Un-install Server Software	109
Step 1: Remove OneSecure Server Program	109
Step 2: Remove OneSecure Server Program Folder (Optional)	110
Step 3: Remove the Recordings Folder (Optional)	110
Back Up System Data	111
Step 1: Back up System Settings	111
Step 2: Back up Recording Files Folder (Optional)	112
Step 3: Back up Recording Files Index Folder (Optional)	112
Step 4: System Log (Optional)	112
Restore System Data	113
System Migration	114
Migrate OneSecure Server to Another Computer	114
Advanced Administrative Tasks	115
NVR Server Status	115
Change Server Port	115
Change Authentication Method	116
Set an NVR Server as a Redundancy Server.....	117
License Registration	118
Set up Redundancy Server	120

Overview


OneSecure is a Windows-based software that provides distributed network video surveillance solution with full functionality. This software supports centralized management, scheduled recording, real-time monitoring and recording of up to **100** video streaming devices from local or remote network, with rule-based services to trigger multiple schedules and events.

NVR Server / Client Architecture

OneSecure is a typical web-based server/client system. In a video surveillance system architecture, the **Server** serves as a video management service provider, aimed to run 24/7 offering non-stop services for clients. A **Client** makes requests of monitoring video streams or playback recordings to **Server**, which can reside on the same computer with server program (as from local) or on another computer (as from remote). **Server** starts automatically as soon as the **Server computer** (where it is installed) boots up, and operates in the background without requiring login by administrator. It would provide services over the TCP/IP network to multiple **Clients** upon request through HTTP Protocol.

There are two types of **Clients** in OneSecure system: **Web Client** and **Workstation Client**. A user, connecting from whether web browser or workstation, will enjoy the same user interface and NVR functions.

- **Web Client:** the web version of interface to access NVR server without need of installing any client program to become a client. Logging in the NVR server is as simple as visiting a website through IE browser.
- **Workstation Client:** the client application making accessing NVR server free from the use of browser. The workstation includes a set of programs that provide interface between users and the NVR server.

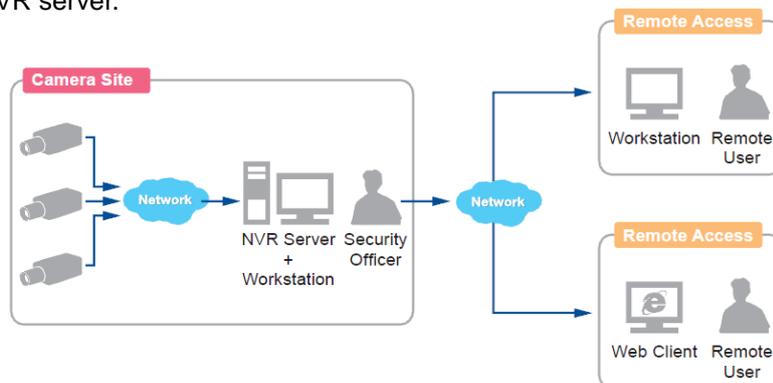

System Installation Check List



Pre-installation

Item	Task	Description	Reference
1	<input type="checkbox"/> Prepare software license	OneSecure comes with 64-channel free license. For additional channels, please purchase the license from your system supplier and get the license information ready before activation.	License and Activation on page 20
2	<input type="checkbox"/> Prepare the server computer	Make sure the computer's hardware spec, operating system and IE browser version are compatible with software requirements.	System Requirements on page 12
3	<input type="checkbox"/> Assign a fixed IP for server computer	The server computer should have a fixed IP to be used by OneSecure server.	
4	<input type="checkbox"/> Set up Active Directory (Optional)	To add users through the Active Directory service, please make sure an Active Directory server is available on your domain.	

Installation

Item	Task	Description	Reference
5	<input type="checkbox"/> Install OneSecure server software	Follow the instructions to install the software on server computer.	Server Installation on page 16
6	<input type="checkbox"/> Check if the installation is successful	Log in to NVR to check if you can see the login page. (On server computer, type http://localhost in browser's URL bar).	Log In to the System on page 24
7	<input type="checkbox"/> Activate the license (When required number of channels exceeds 16)	Activate your license key to get your required number of channels ready for adding devices.	

Configuring the Devices

Item	Task	Description	Reference
8	<input type="checkbox"/> Get the devices connected and ready for use	Finish the installation and basic settings of all devices (IP address, usernames, passwords), and attach all external hardware devices (alarms or sensors) if necessary.	
9	<input type="checkbox"/> Connect external devices with the NVR Client PC	Attach necessary external hardware peripherals such as a joystick or a microphone to the client computer.	Joystick on page 108

System Setup

Item	Task	Description	Reference
10	<input type="checkbox"/> Configure the Storage Settings	Activate the disks for recordings and make sure the total size is sufficient, and how many days the recordings are kept on disk.	Storage Management on page 83
11	<input type="checkbox"/> Add devices to NVR server	Add devices and configure camera settings: camera name, video/motion/PTZ settings.	Add Devices on page 35; Configure Device

			Settings on page 46
12	<input type="checkbox"/> Configure Recording Schedule	By default, each device will start 7/24 schedule recording as soon as it is added. Set recording schedule for each device.	Schedule Recordings on page 61
13	<input type="checkbox"/> Configure E-mail & FTP settings	Complete the E-mail or FTP settings and test if NVR server succeeds in sending e-mails and uploading files. This step is necessary if you will use these functions for Event Handling.	How to Setup SMTP Settings for Event Rules on page 77 ; How to Setup FTP Settings for Event Rules on page 78
14	<input type="checkbox"/> Configure Event rules	Set the event rules.	How to Edit an Event Rule on page 73
15	<input type="checkbox"/> Create Users Accounts & Groups	Configure User Group permissions and create required User Accounts.	Manage User Groups/ Users on page 85

Live View Setup

Item	Task	Description	Reference
16	<input type="checkbox"/> Create Views for Users	Customize and save views for Live View screen.	Customize Views on page 91

Back up System Settings

Item	Task	Description	Reference
17	<input type="checkbox"/> Create backup of system settings	Create a backup file of current system settings for future re-installation or in case of critical system failure.	Back Up System Data on page 111

Post-installation Validation

Item	Item	Description	Reference
18	<input type="checkbox"/> Live Preview basic operations	Make sure if user is able to see the live view with saved layouts and perform basic operations (e.g. PTZ controls or instant playback).	User's Manual
19	<input type="checkbox"/> Schedule Recording	Make sure the disk is recording normally according to the schedule.	
20	<input type="checkbox"/> Event Handling	Check if the expected actions (e.g. recording, alarms or e-mail notification, etc) are correctly triggered by events.	
21	<input type="checkbox"/> User Access	Make sure User can access NVR with right account/password, and perform operations based on given user rights.	
22	<input type="checkbox"/> Playback	Make sure user can perform playback and video search, and the export function can generate viewable files to designated folder.	

Getting Started

System Requirements

The **Minimum CPU Processor** spec will provide acceptable performance for systems that use mostly MPEG4 streams. Surveillance systems that use 4 or more H.264 streams should satisfy **Minimum CPU Processor** spec for good performance.

PC Spec		Server + Local Client PC		Server PC Only	Remote Client PC	
Number of Live Channels (*2)		1-16	17-64	0	1-16	17-64
CPU Processor	Minimum	Intel Core 2 Quad 2.4GHz	Intel i5 2.4 GHz	Intel Core 2 Quad 2.4GHz	Intel Core 2 Quad 2.4GHz	Intel i5 2.4 GHz
	Recommended	Intel i5 2.4 GHz	Intel Core i7-920 2.67 GHz	Intel i5 2.4 GHz	Intel i5 2.4 GHz	Intel Core i7-920 2.67 GHz
RAM		4GB (*3)				
Network		Ethernet (1000 Base-T recommended)				
Hard Disk (*4) Space		Minimum 40 GB (*5)				
Operating System (*6)		Windows 8, Windows 7, Windows Server 2012, Windows Server 2008, Windows Sever 2003, Windows XP Professional SP3.				
Display Resolution		Minimum: 1024 X 768				
Browser		Internet Explorer 8, 9, 10 and 11				

*1 These specifications are based on following camera settings:

Single stream mode → 1280x1024, 3Mbps, 18fps, MPEG-4

Dual stream mode → 1280x1024, 3Mbps, 18fps, H.264 (recording);

640x480, Quality: 100, 18fps, MJPEG (live view).

*2 Live view for multiple channels requires good hardware for smooth performance. For more channels or heavy use of high resolution streaming, it is good to adopt computers with more advanced specifications than the requirements we suggest.

*3 Please use 64-bit system if your computer has more than 4GB RAM. Windows operating system has limits on memory and address space regardless of the real or virtual memory available on a particular computer. Take Windows 7 Professional for example, the maximum physical memory for a 32-bit(X86) system can address is 3.5 GB even though 16 GB of RAM has been installed on this computer. Therefore, if you consider increasing the

OneSecure Video Management Software Administrator Manual V3.0.09

computer's multi-tasking capability by adding more RAM, you will need a 64-bit version of Windows to take advantage of it all.

Please visit the link below for more memory limitations on various Windows platforms.

http://msdn.microsoft.com/en-us/library/aa366778%28VS.85%29.aspx#physical_memory_limits_windows_7

Besides the limitation mentioned above, you may find the usable memory of your computer displayed here:  → **Computer** → **Properties** is still less than actual installed memory.

This is a common symptoms of all Windows platforms, please find explanations and solutions in this Windows official support document

<http://support.microsoft.com/kb/978610/en-us> and

<http://windows.microsoft.com/en-us/windows7/taking-the-mystery-out-of-64-bit-windows>

- *4 Supports local hard drives and iSCSi NAS.
- *5 The required free space of the disk drive where NVR is installed should be at least 40 GB at all times; however, the actual necessary space depends on number of devices, recording and event rules settings. It is also recommended to use a separate disk for video recordings.
- *6 Please make sure your operating system is fully patched with the latest service packs.

Prerequisites

These prerequisites below are necessary before installation:

1. Suitable System Specifications

Ensure that the server computer meets the minimum system requirements, and that the server computer has **C Drive**.

2. Uninstall Previous old OneSecure Server

OneSecure NEW server and Old server cannot co-exist on the same server computer. You can find instructions on [System Migration](#) on page 114 for how to perform a NVR system migration.

3. More than 40 GB Space on Storage Drive

Please make at least 20 GB memory space on the storage disk drive. You may choose different disk drive on **Setup** page→**Storage** tab.


4. Turn Off Windows UAC Function

UAC (User Access Control) is a security setting that restricts access in Microsoft Windows. You must disable UAC before installing NVR in **Windows Vista** and **Windows 7**, for the installation of application components and certain program features would be interrupted by this security rule. You may disable UAC through Windows control panel.

If you are using **Windows 8**, please enable the built-in **Administrator** account and log in with this identity, or add this NVR site to IE browser's trusted sites (please follow the solution provided for **Condition 2: Why can't I install Active X controls after logging in?** on page 30 to do so).


Disable UAC in Windows 7

1. Go to **Windows Control Panel**, type "**UAC**" in search box.
2. Click "**Change User Account Control settings**"

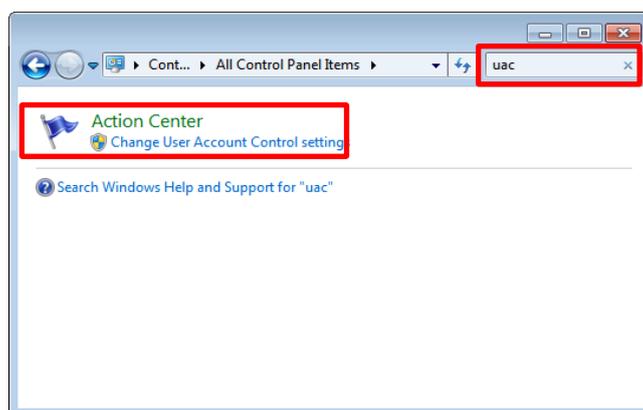

OneSecure Video Management Software Administrator Manual V3.0.09

3. Move the slider to **“Never notify position”**, and then click **“OK”**. You will have to restart the computer for this change to take place.

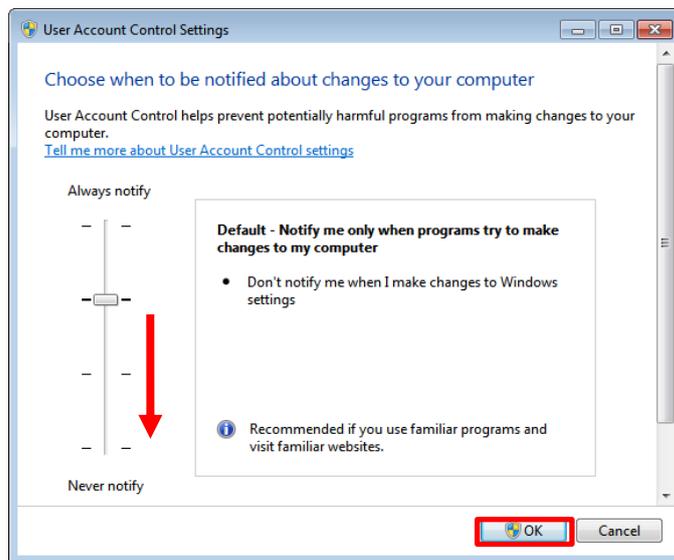


Server Installation


The server program installation is as easy as 1-2-3 by following the installation wizard's instructions. The server would start its service right after installation completes, without the need to restart the server computer.

Install the Software

1. Execute the install shield application .
2. Follow the onscreen instructions of **Install Shield Wizard** and proceed.

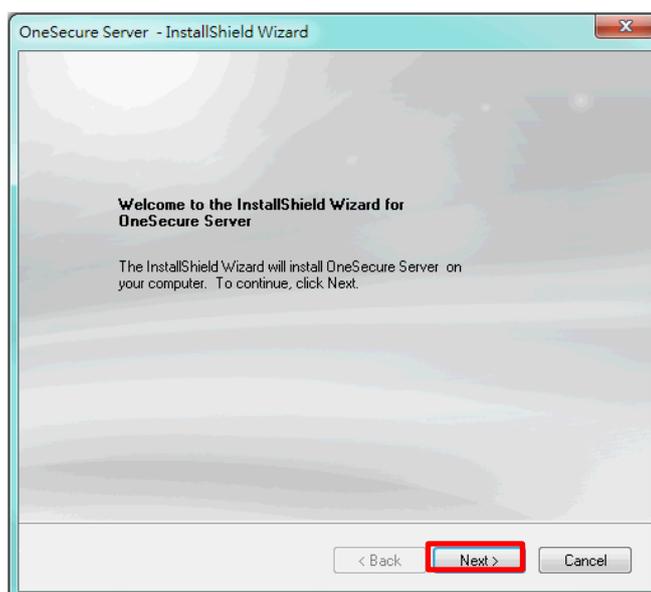


When selecting **Setup Type**, the default “**Complete**” will have the program installed on default **C drive**, you may select “**Custom**” to choose another program location.

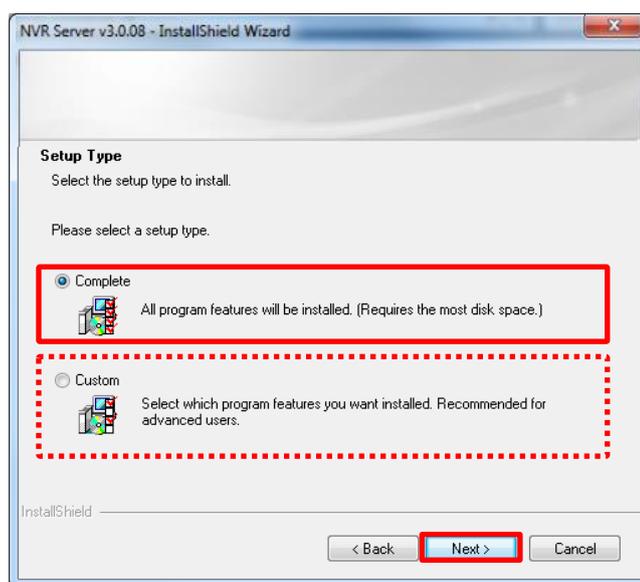


OneSecure Video Management Software Administrator Manual V3.0.09


- The **IP Port Checker** will pop up to confirm the NVR port number with you. The installation program will use **80** as default. You may enter another available port number in “**Listen Port**” field and click “**Apply**”.

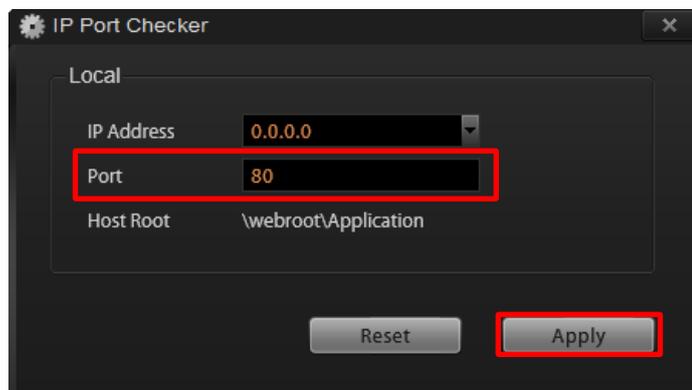

You may just click “**Apply**” if you are not sure whether this port has been taken or not. If the port is being used by another service, you will be asked to input another available port number.

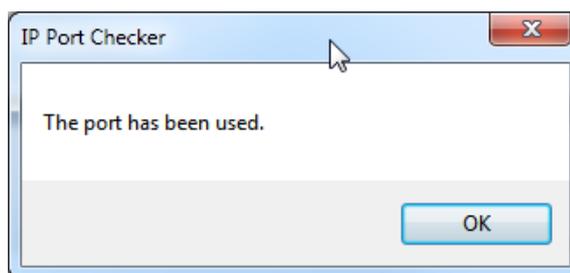

- As the server port is confirmed, the installation process is done, click “**Finish**”.

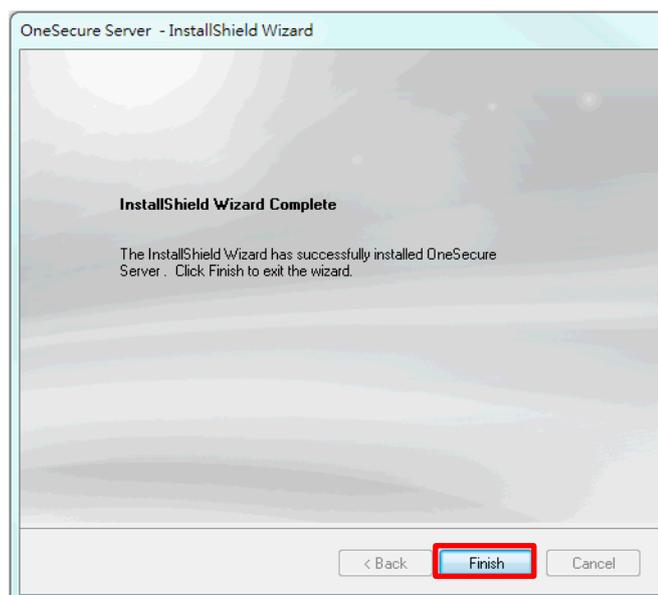

OneSecure Video Management Software Administrator Manual V3.0.09

5. After the installation completes, connect to http://localhost:port_number with Internet Explorer browser, you will see NVR Login page.

Note

If IIS Web Server has been installed on the computer and you are asked to restart the computer during installation process, please

1. Choose Yes, I want to restart my computer now. to restart right away.
2. After the computer reboots, this install shield will continue to complete the installation.

Important Notice



If the server computer has already installed previous LevelOne OneSecure server old versions, please remove the main program and patches from **Windows** → **Control Panel** before installing LevelOne OneSecure NEW; or you should choose another computer as LevelOne OneSecure server computer.

Workstation Installation

NVR Workstation includes a set of programs that provide interface between users and the NVR server. It may be installed on the same PC as the NVR server, or they may be installed separately and connect to NVR Server via network.

Install the Software

1. Execute the install shield application  .
2. Follow the onscreen instructions of **Install Shield Wizard** and proceed.

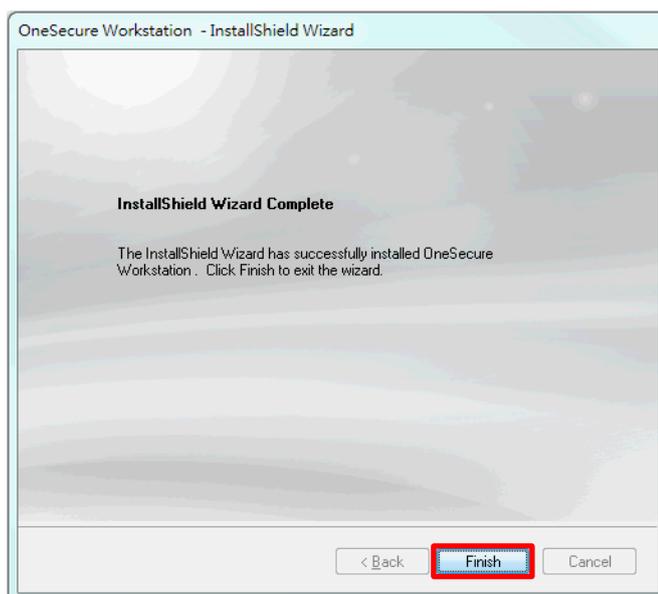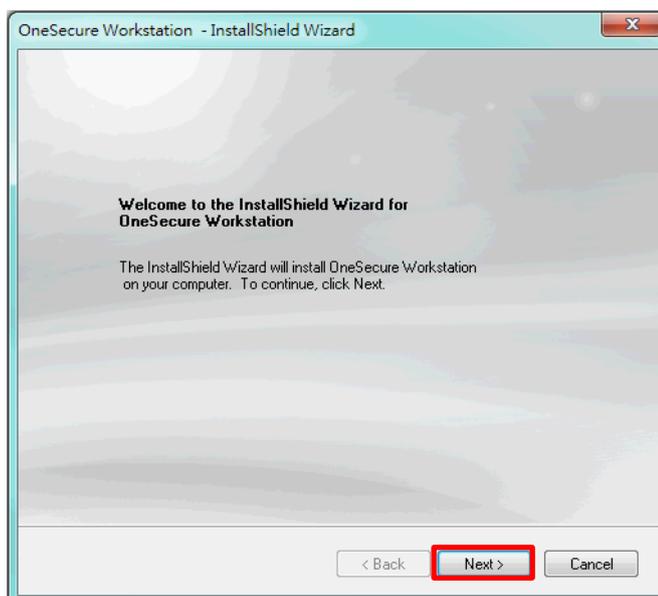

3. Double-click the shortcut for  on the desktop to execute the application.

License and Activation

In OneSecure system, your required number of channels should be licensed and activated before connecting the devices. The **License Key**, provided by LevelOne sales representative once your purchase of license is carried out, will be used to activate the license. After the license activation, the channels on NVR server will automatically become available.

Aside from LevelOne brand devices, OneSecure system is able to support other vendors' devices. LevelOne brand devices and non-LevelOne brand devices are licensed by different license types:

- **Standard License**: LevelOne brand devices

- **CDP License**: Other vendors' devices

(For supported non- LevelOne cameras list, please refer to <http://global.level1.com/>)

Please note:

- The license is cumulative and perpetual.
- The license is not version-specific, upgrading software version will not influence the existing license you have activated on OneSecure server.
- The number of CDP-licensed channels (for non-LevelOne brand cameras) and that of standard-licensed channels (for LevelOne devices) are counted separately.
- The maximum number of devices (LevelOne brand + non- LevelOne brands) that can be managed by OneSecure server is **100**.
- After activating CDP license, please follow the instructions in [Add Non-LevelOne Cameras](#) on page 42 to manually add those non- LevelOne cameras to NVR system.

License activation is the process of unlocking the channels on NVR product with the received **License Key**. **License Key** is a serial number delivered as a printed card or an E-mail after the purchase is carried out.


During license activation, your **License Key** is matched against the MAC address of the Network Interface Card (NIC) on NVR server computer. Once this license key is used by the computer with given MAC, it cannot be activated with another MAC. This matching record will be stored on the LevelOne license data server. If your computer has more than one network cards, NVR server will detect them and provide you a dropdown list to select from.

Note

Although certain fisheye camera view modes (e.g. **Quad** mode) display multiple regions in a view, they are still counted as one single channel in terms of licensing.


OneSecure Video Management Software Administrator Manual V3.0.09

You can activate the licenses on your NVR through **Offline Activation**. Offline activation does not require Internet access for NVR server. It is used when NVR is located in network not connected to public Internet (e.g. in a military base). You will need to get an activation file from another computer and transfer it to NVR server computer.

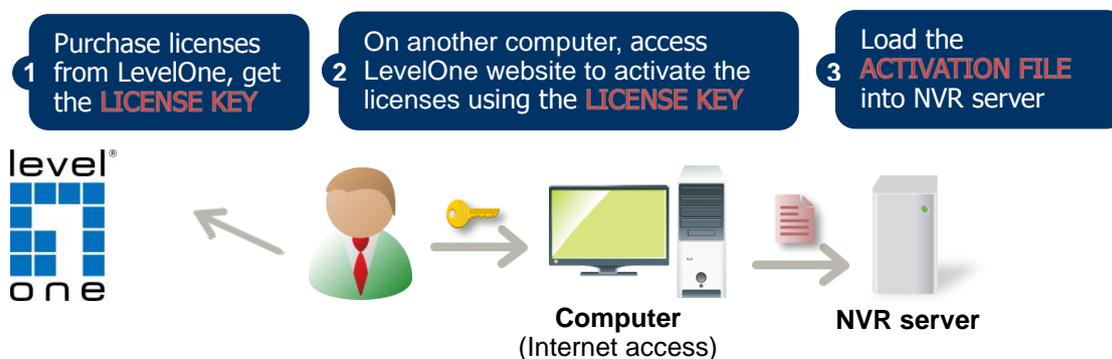


Offline Activation SOP

Step : Log in NVR server from local or via web client. Go to **Setup** page → **System** tab → **License** → **Offline Registration** → click **Import** and upload the license file(.lic). Click **Apply** to activate this license.

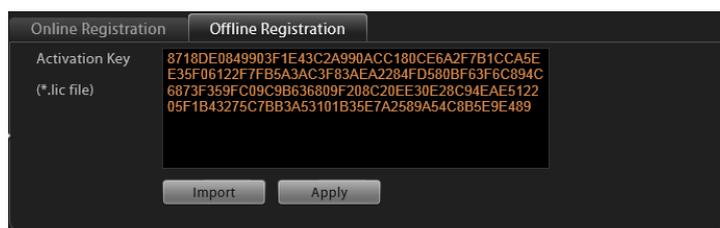

Verify Your License

Once your license is successfully activated, the license information will be shown on **License** page.

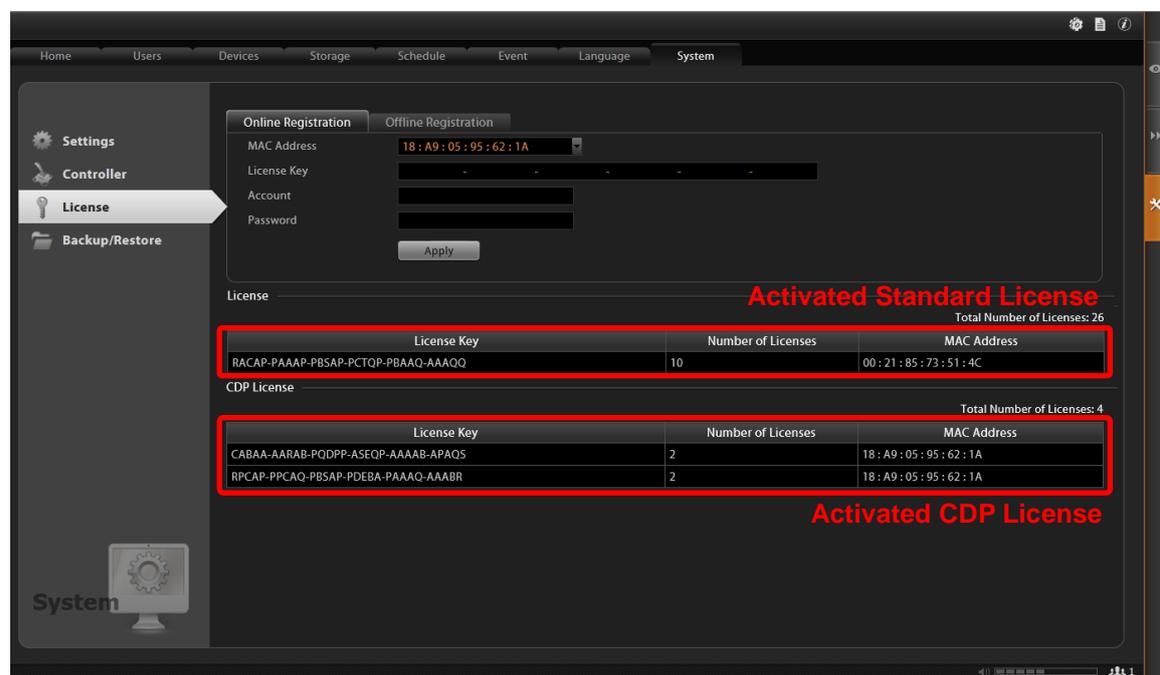

Important

The license data will be erased once OneSecure server is uninstalled. Be sure to retain your license key information in a safe place because you may need to reinstall the software. After the software is uninstalled, you should contact **LevelOne Customer Help Desk**
<http://global.level1.com/>


Tip

How to find MAC Address

1. Click **Windows Start**, in the run box on **Start** menu, input "**cmd**".
2. Execute the **cmd** program, and input the command "**ipconfig /all**" or "**getmac**".
3. The MAC address will be referred to as the **Physical Address**, made up of 12 characters e.g. **00-1E-65-FE-8E-98**

Log In to the System

Access NVR Server via Internet Explorer

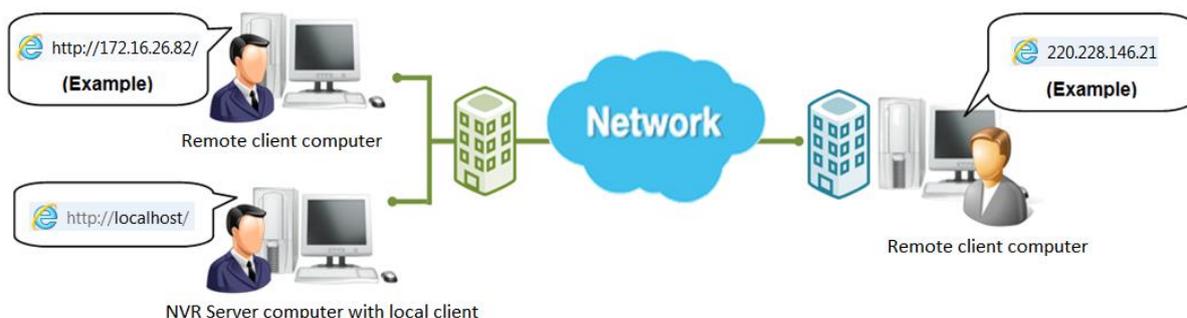

From Server Computer Using Local Client


Open Internet Explorer. If your computer is where OneSecure is installed, type <http://localhost/> or the computer's ip address in URL box.

From Remote Client Computer

A remote client refers to any client using a computer over WAN or LAN other than server computer. If you are connecting to a OneSecure server as a remote client, please type server computer's IP (e.g. local network IP: <http://172.16.26.217> within LAN; public IP <http://220.228.146.21> or domain name <http://nvr.Level.com> over WAN) in URL box. Remember to append a colon and the port number after the hostname or IP address.

Accept ActiveX Controls Installation Requests

OneSecure interface requires the add-on ActiveX Control components, please make sure browser's security settings allow ActiveX controls to be downloaded and installed. When your browser asks if you allow add-on components nvUtilityEx.ocx and nvMonitor.ocx to run, please allow them.

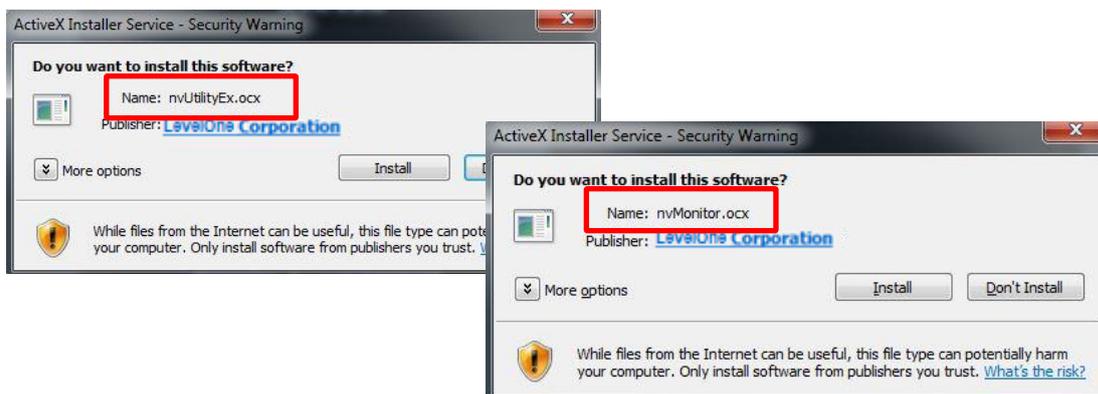


Login Failure Troubleshooting

Once you confront with problems accessing NVR server, refer to the possible conditions below and follow the instruction to solve your issues.

Condition 1: Why can't I access NVR server via browser?

After typing in the correct NVR server IP, if you cannot access NVR Login page, you may get the below browser screens:

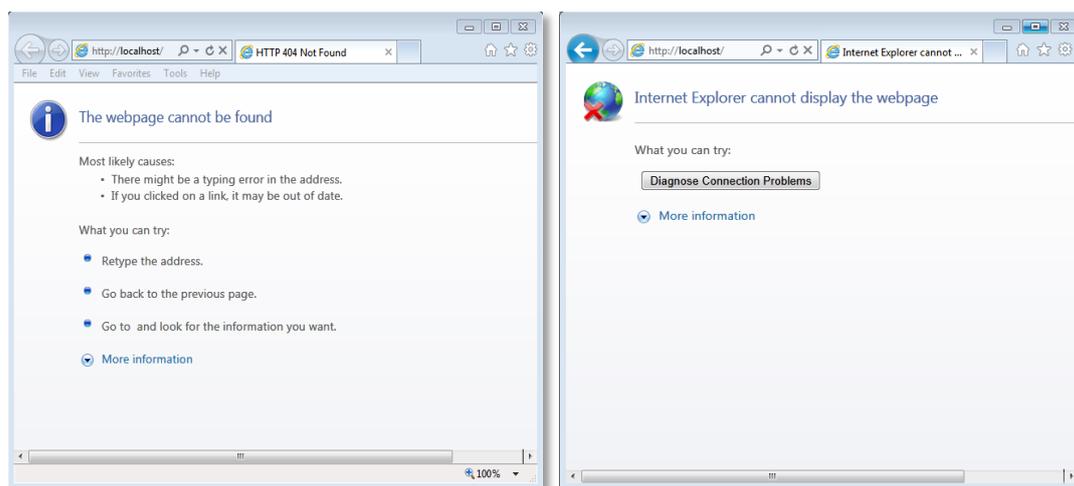


Cause : Server is not ready

Solution: It may happen when you started the server computer right after the server installation is completed, please wait a few seconds and connect again.


Cause 2: Server is not able to respond to your request through current path because port 80 has been seized by another service running on server computer. This may happen when that service is executed right before NVR server starts its services.

Solution: Please check if there is another service using port 80 right now, and change the setting in that program to release port 80 for OneSecure server. Below are the steps to find the service:

1. Please click on "**Windows Start**" (Windows-Logo) , then enter "**cmd.exe**" in the run box and execute it.
2. Input the command "**netstat -a -o -b**". You will be provided with the ports in use and the services using them. Find the **Local Address** that has taken port **80**, and the **PID** number.

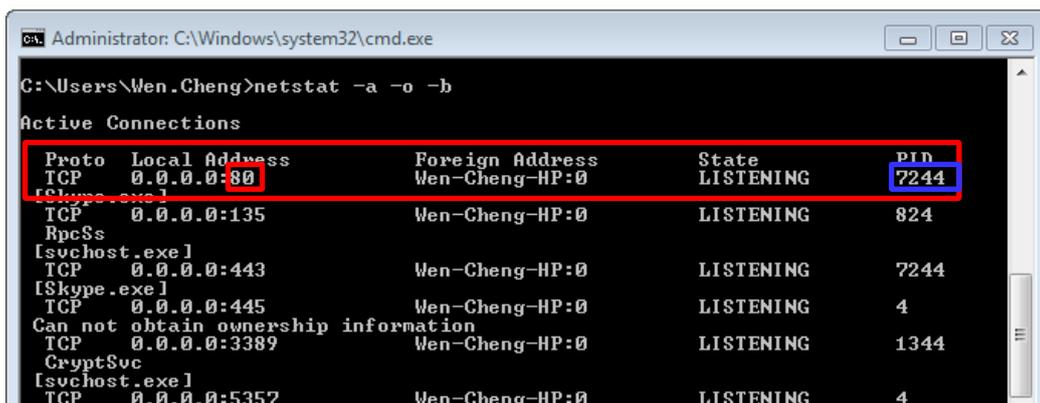


3. Press down “ctrl”+ “alt” + “Delete” keys to bring up **Windows Task Manager**. Select “**View**”, and then “**Select columns**”, and enable the “**PID (Process Identifier)**” to appear on search results. Please also make sure “**Show process from all users**” is enabled.
4. On **Task Manager Process** tab, locate the PID number of the service using port 80. The service name is shown under “**Image Name**” column.

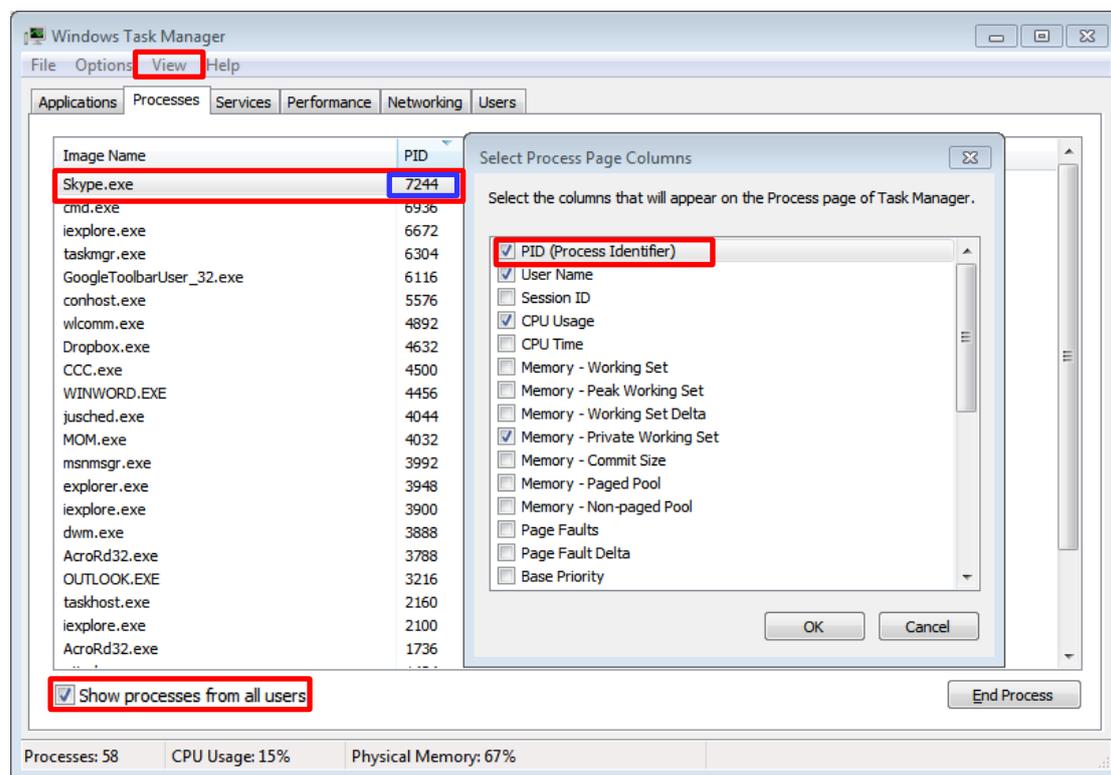

Condition 2: Why can't I install Active X controls after logging in?

ActiveX Control components are essential for NVR server to present user interface. The message below will show if these controls were not installed. Please try refresh this browser first, this is to make IE pop up the prompts again.

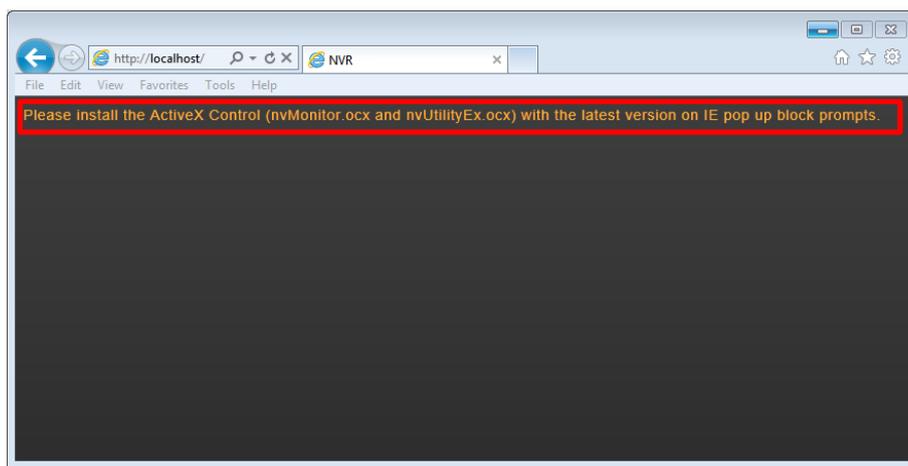


Cause 1: Your **Internet Explorer** browser version does not support OneSecure.

Solution: Make sure your browser is **32-bit** version.

Cause 2: Your browser restricts the installation of add-on components.

Solution: Internet Explorer security settings may restrict the installation of add-on components. To ensure NVR server is always accessible from your web client regardless of any change in browser's overall Internet security settings, you may add NVR server site to Internet Explorer's Trusted sites. These sites are which you consider safe and wish to visit with low security restrictions while maintaining higher security for the rest of the Internet.

1. On IE browser, click **Tools** → **Safety** and make sure **ActiveX Filtering** is unchecked.
2. On IE browser, go to **Tools** → **Internet Options** → **Security** tab, select "Trusted sites", set the security level to "Medium High", and then click "Sites".
3. Add <http://localhost> or server IP to the zone, and **clear** the box "Require server verification (https:) for all sites in this zone".
4. Back on Security tab, click "Apply" to apply the changes. This will allow ActiveX and scripting to be available for the chosen sites but not for the Internet as a whole.

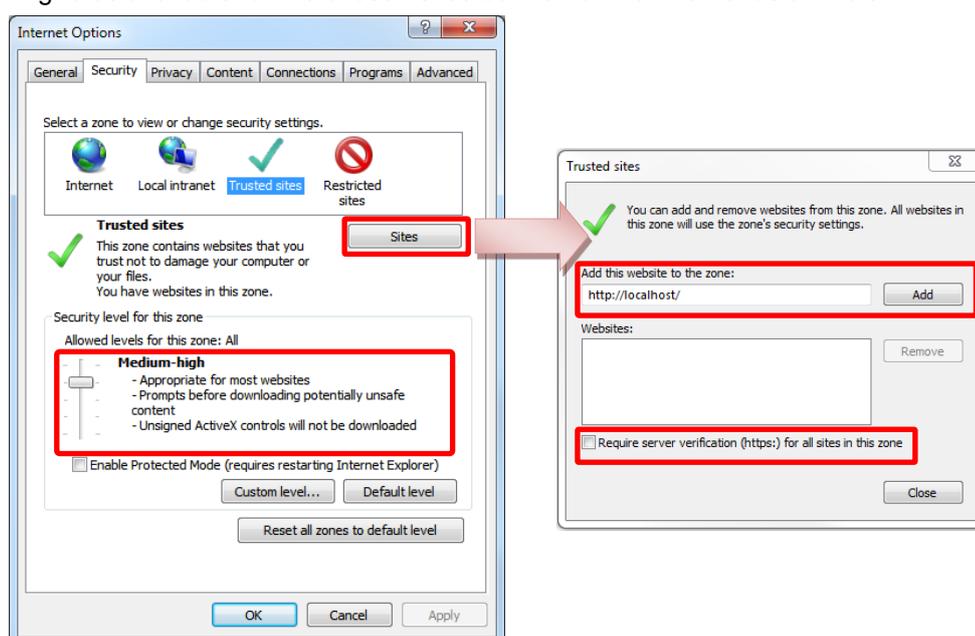

Login



A. Enter Account & Password

Account (non case-sensitive):

admin (default)

Password (case-sensitive):

123456 (default)

B. Change UI language

To change UI language, select the desired language from “**Language**” dropdown list.

C. Remember Account/Password



To have the server remember your Login **Account** and **Password** for future, check “**Remember Account/Password**”. Click “**Don't Remember**” will clear your input text and reset to default.

To directly enter the main page every time you log in from this PC in the future Check “**Remember Account/Password**” then “**Auto Login**” to skip the Login page. **If your computer may be accessed by someone without proper authority, please DO NOT use either of these functions.**

To cancel auto-login, on title bar, click  → “**Logout**” to return to login page, and this function is cancelled.

D. Retrieve the Forgotten Password

NVR can send the password of the User’s account to the saved e-mail address. To have Users be able to use this service, please make sure (1) the SMTP settings have been configured (refer to [How to Setup SMTP Settings for Event Rules](#) on page 77) and (2) a valid e-mail address has previously been saved in **Setup** page → **Users** tab → User list.

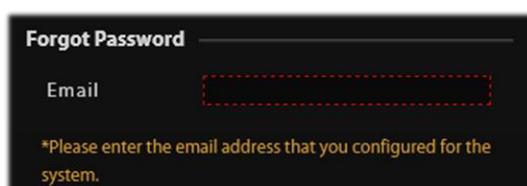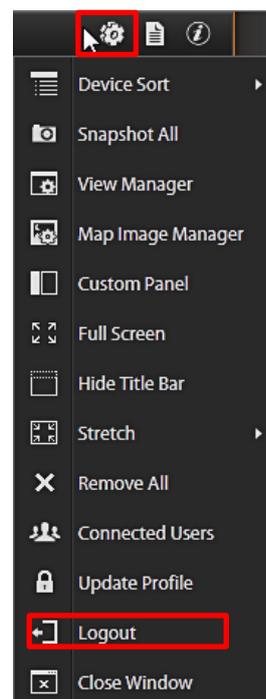

The e-mail address input in **Forgot Password** window should match the one under your User account saved in NVR server.

Access NVR Server via OneSecure Workstation


OneSecure Workstation includes a set of programs that provide interface between users and the NVR server. It may be installed on the same PC as the NVR server, or they may be installed separately and connect to NVR Server via network.



Double-click the shortcut icon of your OneSecure Workstation on your desktop to execute this workstation application.

Login

Fill in the following fields then click “**Login**” to log in to the system. The login process of Workstation is very much the same as that of Web browser:

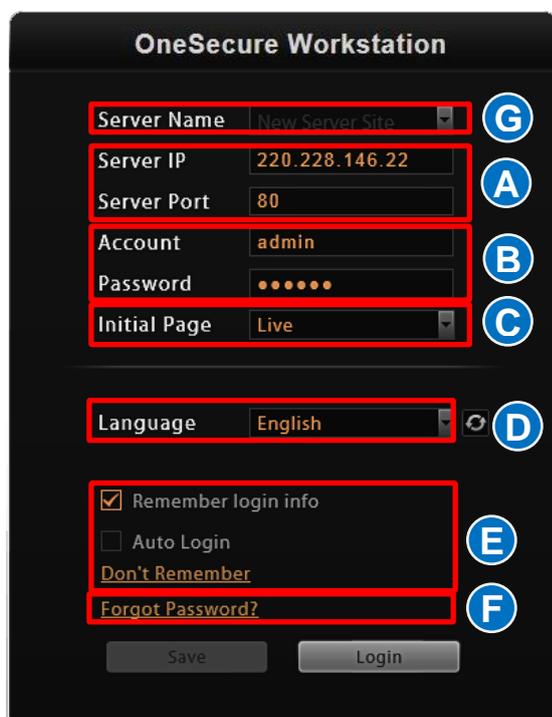

A. Server IP & Server Port

In **Server IP** field, key in **localhost** or **127.0.0.1** if OneSecure Workstation is on the same computer with NVR server. If you are connecting from another computer, please input the ip address of server computer, for example: **220.228.146.22**.

In **Server Port** field, key in the port number (default is 80).

B. Enter Account & Password

Account (non case-sensitive)

Admin (default)

Password (case-sensitive)

123456 (default)

C. Choose the Initial Screen



OneSecure user interface consists of three main module screens: **Live View**, **Playback** and **Setup**, you may choose one where you would like to enter after logging in. Default is **Live View** screen.

D. Language


Choose a UI language from drop-down list.

E. Remember Login Information

To have **OneSecure Workstation** remember the **Account, Password,** your choices of **Initial Page** and UI **Language,** simply check **“Remember login info”**. Click **“Don’t Remember”** will clear your input text and reset to default.

To directly enter the desired page every time you log in from this PC , check **“Remember login info”** then **“Auto Login”** to skip the Login page. **If your computer may be accessed by someone else, you might consider not to use either of these functions.**

To cancel auto-login, on title bar, click  → **“Logout”** to return to login page, and this function is cancelled.

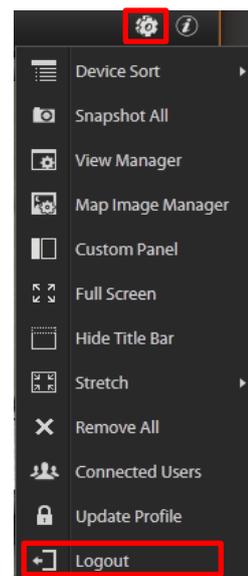

F. Retrieve the Forgotten Password

Please refer to [D. Retrieve the Forgotten Password](#) on page 27.

G. Server Name/Server Sites List

OneSecure Workstation can remember multiple server sites and their login settings and show the site lists on **Login** window. To add a new site:



1. Click in the **Server Name** box and input the server site name.
2. Fill in the other fields. If you disable the **“Remember login info”**, then only the **Server Name, Server IP** and **Server Port** of this server site will be remembered.
3. Click **“Save”**
4. After a server site is saved, it will be shown on **Server Name** dropdown list. You may click on its name to enter its Login window or  to delete it from the list.




5. You can export the saved server sites, or import it to another Workstation client computer. Access NVR server via **OneSecure Workstation**, go to **Setup** page → **System** tab → **Workstation**.

A. Export current server sites list

Click “**Browse**” to select a folder to save the list, and then click “**Export**”. This file will be saved as an *.xml file.

B. Import a server site list

Click “**Browse**” to select the *.xml file, and then click “**Import**”. The server sites will appear in **Server Name** dropdown list on **Login** window of your next login.

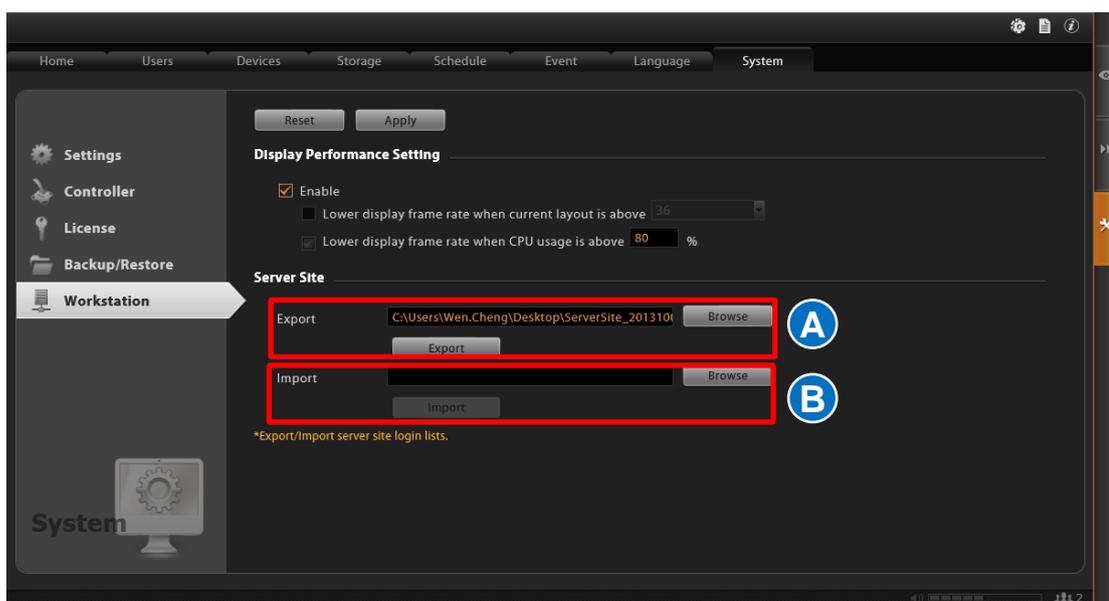


Set up the System

This chapter will guide you through everything you need to know in System Setup procedure from first time connection with OneSecure server to general system configuration.

Setup Wizard


Once you connect to OneSecure for the first time, **Setup Wizard** will guide you through the initial setup process. You may click "**Previous**" or "**Next**" button located on the lower right at any time. This will skip the current step so that you may come back to it later. All the settings in the **Setup Wizard** are available in the **Setup** page.

To skip this wizard, click the bubble "**Done**" on top right corner.

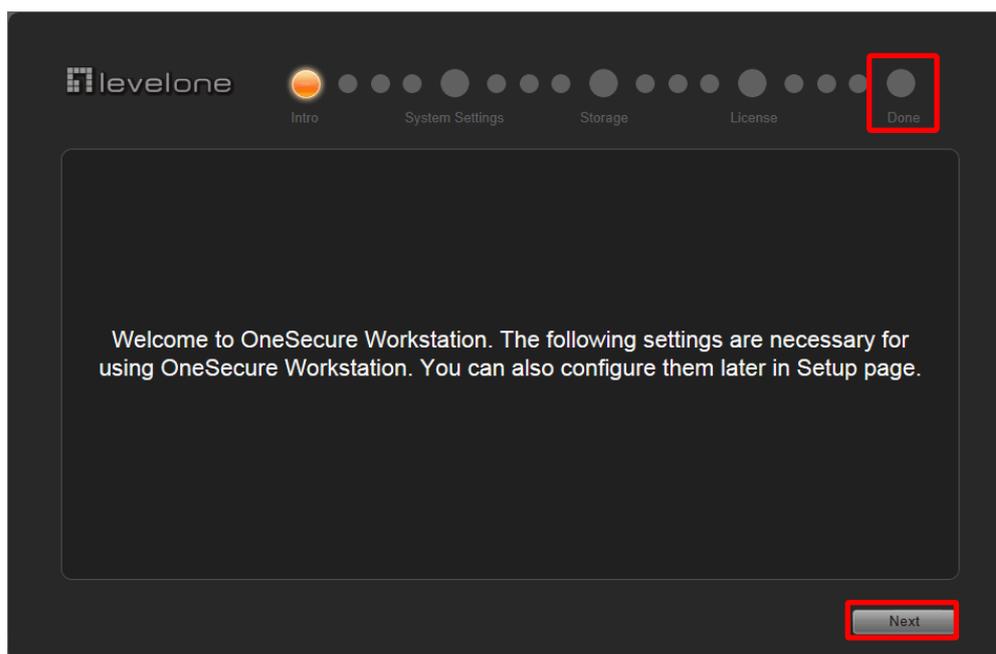


System Settings

You can adjust the E-mail & SMTP settings, FTP settings for event rules now or later. For more details about the settings, please refer to [How to Setup SMTP Settings for Event Rules](#) on page 77 and [How to Setup FTP Settings for Event Rules](#) on page 78.

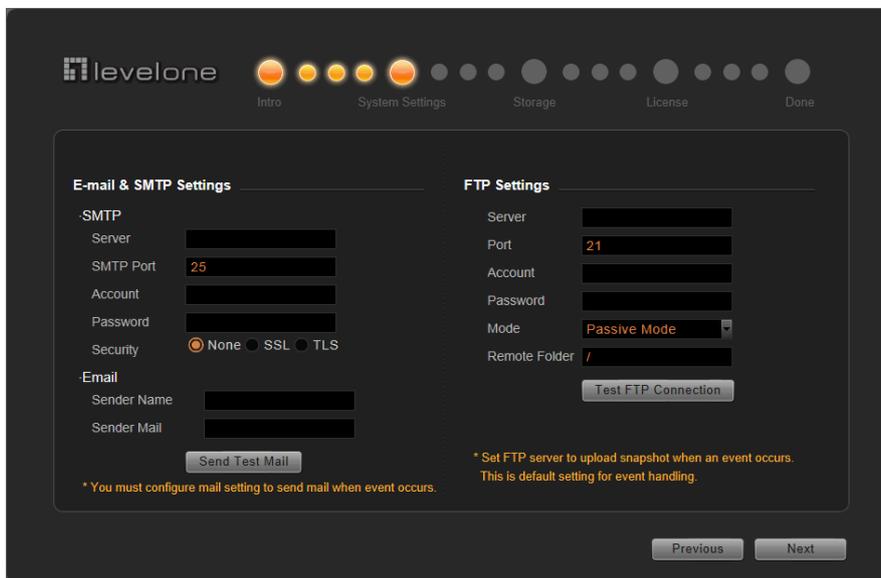


Storage

On NVR server, you may choose which disk drives to store the recording files, and decide how much memory space is left for all computer applications to run. You must configure the **Drive** and **Reserve Space** for recording. **Reserve Space** is the space on the drive that will not be used to save recording files, the deletion of earliest recording files will be performed if available space has decreased to reach below **Reserve Space** configuration; you may choose one or multiple disk drives in **Disk Drive List** to save the recordings. If you skip this step, **Drive C** will be the default drive. For more details about the settings, please refer to [Storage Management](#) on page 83.

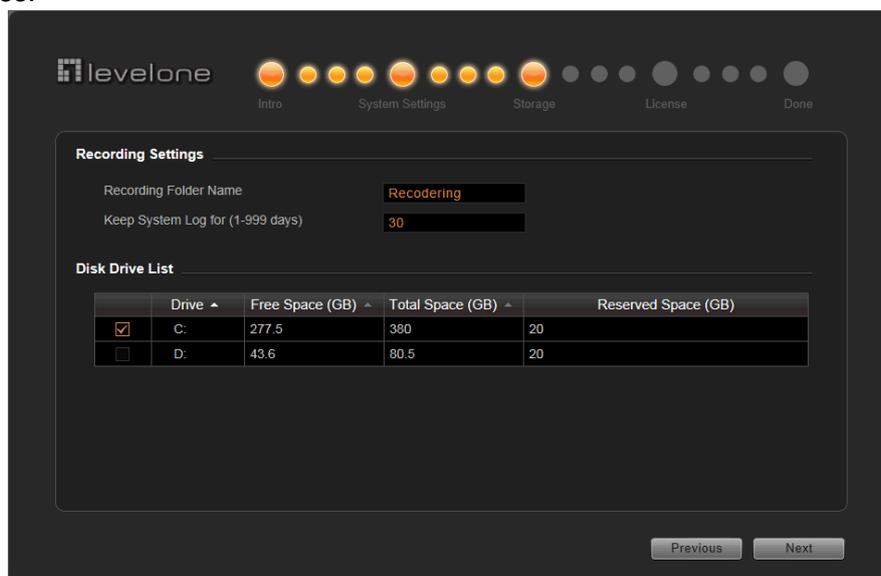


Licensing

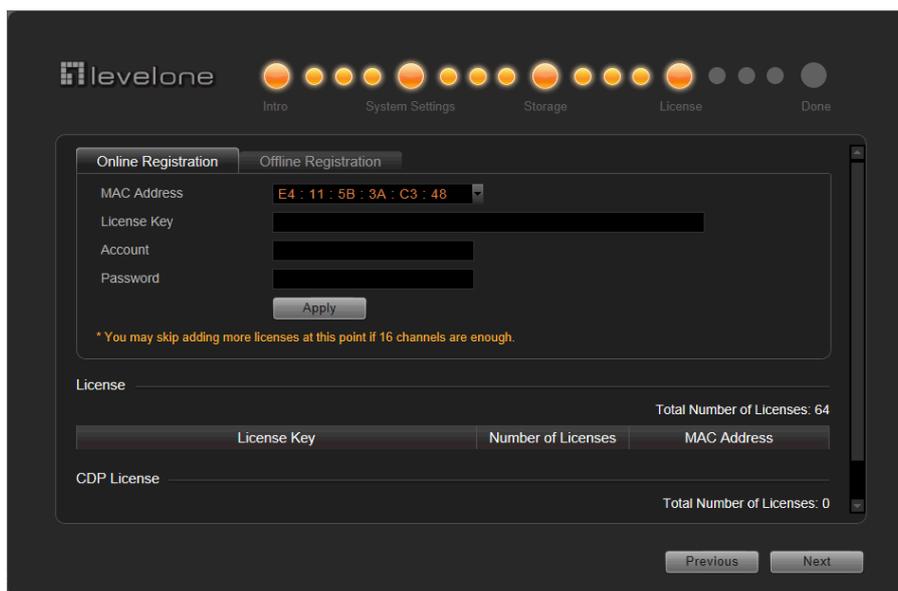

This is the license management section. On lower right part of the screen shows number of channels allowed under your current license. Each NVR server has a license for **64** channels that is already activated. You can click “**Next**” to next setting if you do not want to add new license for now. For more details about the settings, please refer to [License and Activation](#) on page 20.

The End of Setup Wizard

Click “**Done**” to complete **Setup Wizard**, the previous configuration steps you have gone through are available in **Setup** page.

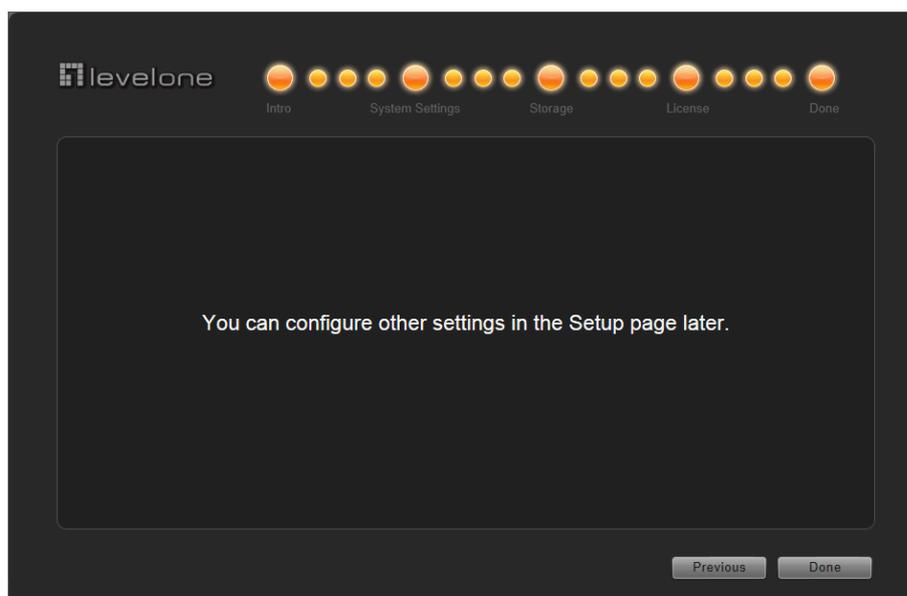

NVR Main Screen

You will enter the live view screen after **Setup Wizard**. On the right are link buttons to three NVR major functions: (1) **Live view**, (2) **Playback** and (3) **Setup**. You can click the orange button to enter the function page.

Live View




In this module, you can see live view from cameras, perform PTZ operations with mouse or Joystick, view system log, receive alerts on the event panel, setup view layouts, perform manual recording or take a snapshot.

Playback



You may search and view playback of multiple channels synchronously. Snapshots or video segments can be taken from playback files. Recorded files can also be exported to AVI format here.

Setup

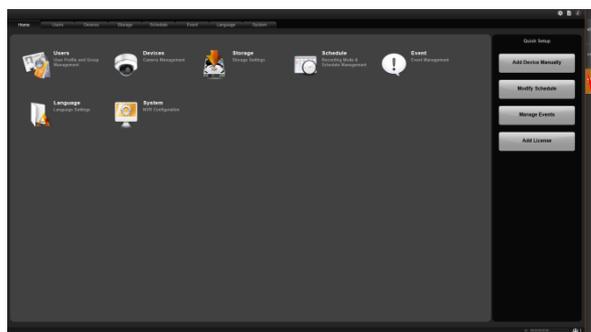

This module includes user setup, device setup, event setup, schedule setup and system-wide settings.


Add Devices

Cameras or video encoders are the fundamental building blocks of surveillance systems. To manage cameras from OneSecure, you have to add camera devices into OneSecure system first.


In this section, we will guide you through how to add or delete devices on the OneSecure system.

To start adding new devices, please follow these steps:

1. On **Setup** page→**Home** screen, click **“Device”**.

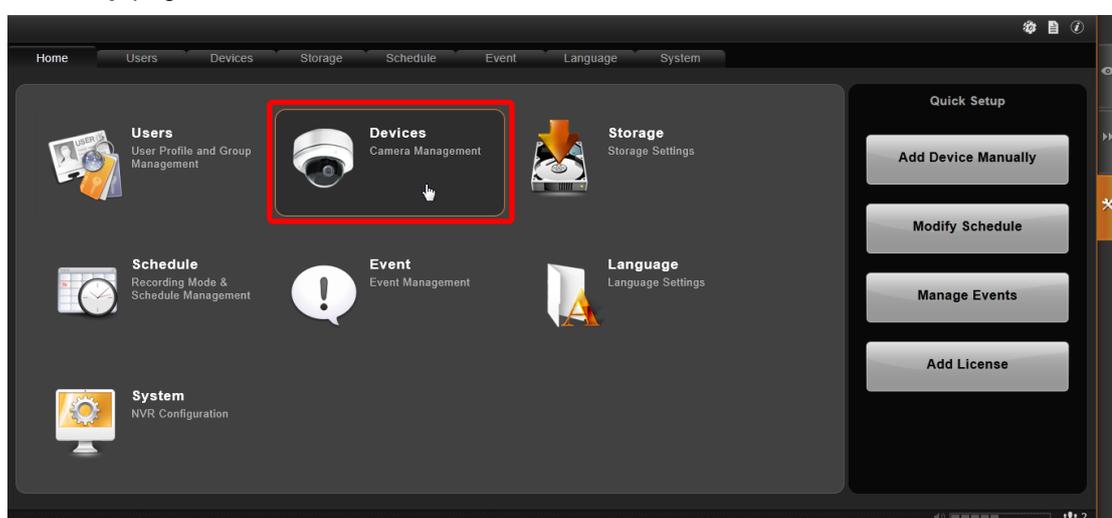

2. On **Devices** page, the **Device List** is currently empty, and you need to add some video sources to it. Now click **“Add Device”**.

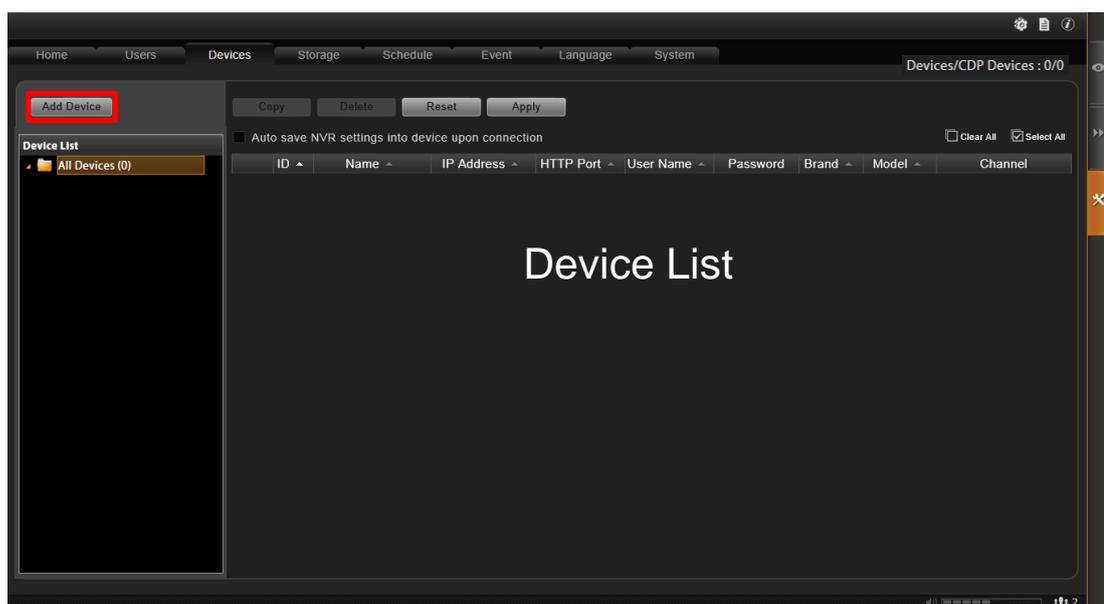


3. There are three ways to add devices into the system, **Search Devices**, **Search ONVIF Devices**, and **Add Device Manually**.

- Use **Search Devices** to auto search LevelOne cameras located in the same subnet as your NVR server.

- Use **Search ONVIF Devices** to find devices that support ONVIF in the same subnet as your NVR server.

- If your cameras / video encoders are located outside of a local subnet or over WAN, add them to your NVR server by using the **Add Device Manually** button. You will need to know the IP address of the device to add it manually.

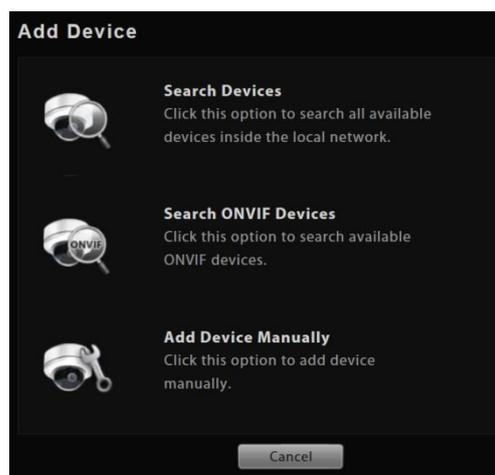

Search Devices Within Local Area Network

1. Select **“Search Devices”**. Once the search is completed, a list of the devices in your LAN will be shown. Click on the title header to sort by that column. Click on the header again to sort in reverse order. For faster search, you may type a specific IP address or a part of the IP address in **IP Filter** as a filter and click to narrow down the search result.

	IP Address	MAC	Brand	Model	Channel	Status
<input type="checkbox"/>	192.168.0.71	00:11:6B:D0:65:99	LevelOne	LevelOne: FCS-5057	1	Using
<input type="checkbox"/>	192.168.0.74	00:11:6B:D0:65:9C	LevelOne	LevelOne: FCS-3055	1	Using
<input type="checkbox"/>	192.168.0.75	00:11:6B:D0:65:95	LevelOne	LevelOne: FCS-3054	1	Using
<input type="checkbox"/>	192.168.0.76	00:11:6B:D0:65:96	LevelOne	LevelOne: FCS-0051	1	Using
<input type="checkbox"/>	192.168.0.79	00:11:6B:D0:65:94	LevelOne	LevelOne: FCS-3053	1	Using
<input type="checkbox"/>	192.168.0.80	00:11:6B:D0:65:9B	LevelOne	LevelOne: FCS-3063	1	Using
<input type="checkbox"/>	192.168.0.81	00:11:6B:D0:65:97	LevelOne	LevelOne: FCS-5056	1	Using
<input type="checkbox"/>	192.168.0.83	00:11:6B:D0:65:9E	LevelOne	LevelOne: FCS-3065	1	Using
<input type="checkbox"/>	192.168.0.84	00:11:6B:D0:65:9F	LevelOne	LevelOne: FCS-3092	1	Using
<input type="checkbox"/>	192.168.0.85	00:11:6B:D0:65:A2	LevelOne	LevelOne: FCS-4042	1	Using
<input type="checkbox"/>	192.168.0.86	00:11:6B:D0:65:92	LevelOne	LevelOne: FCS-4044	1	Using
<input type="checkbox"/>	192.168.0.87	00:11:6B:D0:65:9A	LevelOne	LevelOne: FCS-5064	1	Using


- A. Account/Password text box
- B. IP filter (for multiple networks)
- C. “Refresh” button
- D. Available / Total Licensed Channels
- E. Column title
- F. Search result
- G. “Apply” button

OneSecure Video Management Software Administrator Manual V3.0.09

2. Select the row of the camera you wish to add to the system and repeat this step until you have checked all the devices you need. Please note that the list of devices is shown regardless of the account name and password. You can choose to add all shown devices. For those with different account and password, you will be prompted to fill in the correct credentials in order to access the video feed. To perform the search using different credentials, fill in the new **Account** and **Password** and click the “Refresh” button .
3. Click “Apply” to add selected devices into NVR system.

Search Devices Within Local Area Network with ONVIF

1. After selecting “Search ONVIF Devices”, fill in the account name and password for the device you want to add.
2. Click the “Search” button . Once the search is completed, a list of available devices will be shown. You may click on the title header to sort by that column. Click the header again to sort in the reverse order. For faster search, you may type a specific IP address or a part of the IP address in IP Filter as a filter, and click  to narrow down the search result.

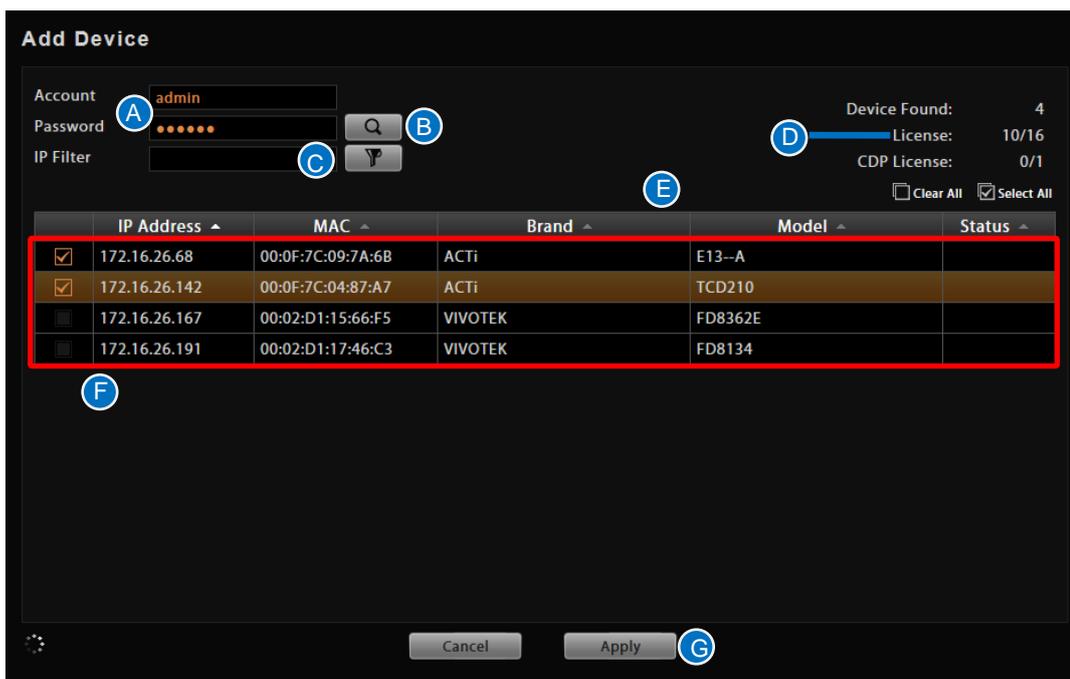

Add Device

Account: admin
Password:
IP Filter:

Device Found: 4
License: 10/16
CDP License: 0/1

Clear All Select All

	IP Address	MAC	Brand	Model	Status
<input checked="" type="checkbox"/>	172.16.26.68	00:0F:7C:09:7A:6B	ACTi	E13--A	
<input checked="" type="checkbox"/>	172.16.26.142	00:0F:7C:04:87:A7	ACTi	TCD210	
<input type="checkbox"/>	172.16.26.167	00:02:D1:15:66:F5	VIVOTEK	FD8362E	
<input type="checkbox"/>	172.16.26.191	00:02:D1:17:46:C3	VIVOTEK	FD8134	

Cancel Apply

- A. Account/Password text box
- B. “Search” button
- C. IP filter (for multiple networks)
- D. Available / Total Licensed Channels
- E. Column title
- F. Search result
- G. “Apply” button

3. Select the row of the camera you wish to add to the system and repeat this step until you have checked all the devices you need.
4. Click “Apply” to add selected devices into NVR system.

Important Notice


1. For certain devices, you may need to configure the ONVIF user credentials of the camera by accessing its Web Configuration page and managing the ONVIF Users List.
2. Functions supported for devices added through ONVIF are live streaming and adjustments to video image settings.

Add Devices on WAN or Other Local Area Networks

1. After selecting “**Add Device Manually**”, the camera settings page will appear as below. The most important settings are (1) **Media Type**, (2) **Protocol**, (3) **IP Address**, (4) **HTTP Port**, and (5) **User Name & Password**. Please fill in these required fields for NVR to communicate with the device.




If the device you wish to add supports ONVIF, you can select ONVIF for **Media Type**, and the settings page will appear as below. The most important settings are (1) **Media Type**, (2) **Camera IP**, (3) **HTTP Port**, and (4) **User Name & Password**. Please fill in these required fields for NVR to communicate with the device.

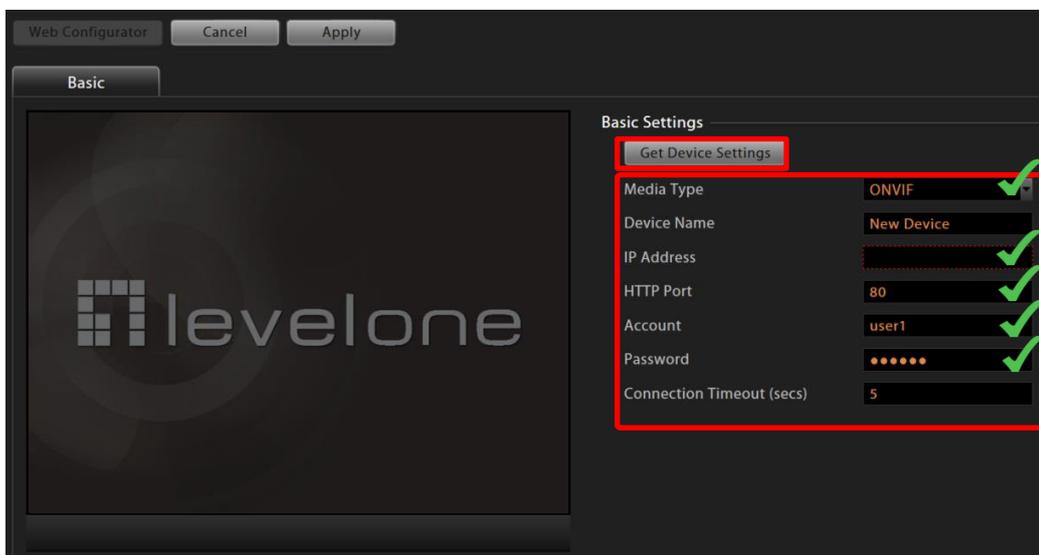

Important Notice

If any of the required fields is incorrect, NVR will not be able to connect the device. When you have any device connection problem, please check these settings. However, at this point, you may skip filling in the **Device Name**, **Brand**, **Model**, and **Stream Mode** configuration.

2. Click **“Get Device Settings”** to have NVR contact the device and get the live view. Once connected to the device, NVR will get all the device properties such like **Brand**, **Model**, **Device Serial Number**, **Firmware Version**. If the device supports dual stream, **Stream Mode** selection field will be revealed, and you may select a different streaming mode and configure relative options. You may click **“Cancel”** button on the top to abort setting this device or **“Apply”** to save it.

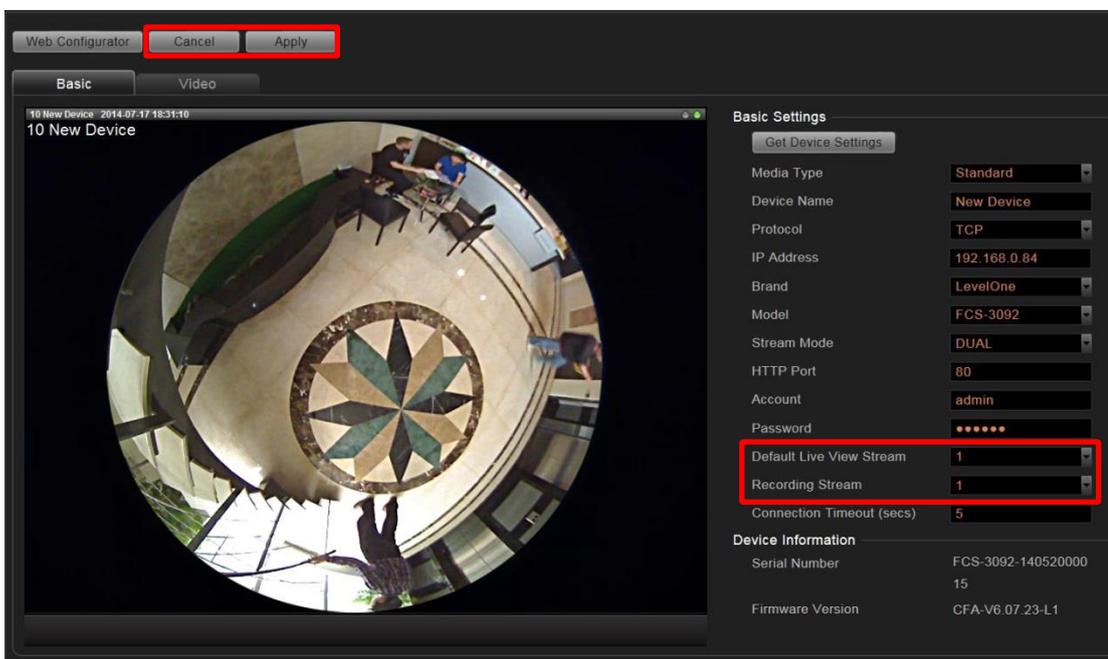

3. To directly access the device configurator webpage, simply click **“Web Configurator”** on the top right to open it. Certain detailed settings can only be accessed through the web configurator and not through NVR.

Basic Settings Attributes

Field Name	Description
Media Type	Select the media type of the camera, choosing either “Standard” or “ONVIF” . To connect with a camera using ONVIF, please make sure the camera device supports ONVIF.
Device Name	Enter the name of the camera, which will be shown in the Device list on the left in Live View. This name should be descriptive so that you know where the camera is located.
Protocol	Select a streaming protocol to connect the camera with.

OneSecure Video Management Software Administrator Manual V3.0.09

IP address	Enter the camera's IP address or host name.
Brand	Select the manufacturer of device.
Model	Select the device model of the IP cameras / video servers. In most cases, this is automatically filled in after you click Get Device Setting .
Stream Mode ^{*1}	Select one of the streaming modes this device supports.
Channel No. ^{*2}	The channel ID you set for a stream of a multi-streaming device.
HTTP Port	Enter the HTTP port for IP cameras/ video servers. Most cameras use the default port number - 80.
User Name	Enter the user name to access the camera.
Password	Enter the password to access the camera.
Default Live View Stream ^{*3}	Choose the streaming id for Live View.
Recording Stream ^{*3}	Choose the streaming id for Recording.
Connection Timeout(0~99 secs)	Enter length of time allowed for a device to respond to NVR. If the response is too late as to exceed this time, NVR will consider this device "disconnected". We recommend you to set different values for different types of connection. The default setting is 5 seconds. For devices located over the WAN, you may wish to increase this value to allow for occasional Internet lags.


*1 Available when NVR is connected to a multi-streaming device.

*2 Available when NVR is connected to a device that is concurrently in multi-streaming mode (Dual Stream mode excluded).

*3 Available when NVR is connected to a multi-streaming device in Dual Stream mode.

Device Status

To validate if you have successfully added a device to NVR system, simply check the **Device List** on the left of **Setup** → **Devices** tab to see if the device name appears in the tree. Point your mouse cursor over the device icon will bring up an information box containing the device's **IP Address**, **HTTP Port**, **Protocol** and device type.

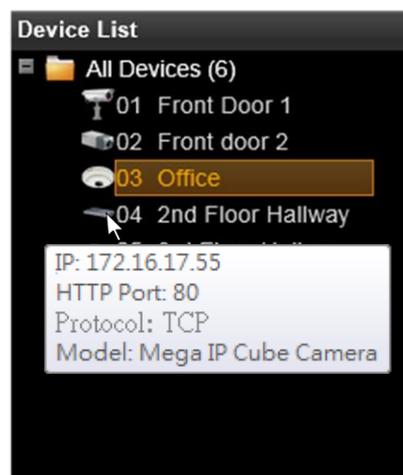

OneSecure Video Management Software Administrator Manual V3.0.09

Status Icon Description


Icon	Status Description
	NVR server cannot retrieve video streaming. This may be that a video server is not connected with cameras, or that the streaming is blocked by the firewall between the device and NVR server. Please (1) ensure the device side is well connected and can output video normally,(2) check the firewall and port forwarding settings.
	This device's settings have been modified but not saved yet. If you leave these modifications unsaved, they will not take effect by next time the server starts. Please always remember to save upon every change.
	NVR cannot build up connection with this device. Please check the device connection settings (including IP Address, Port number, Account Name and Password); or increase the " Connection Timeout " to allow more time for the device to respond.
	This device is currently connected, video is being transmitted and no recording is proceeding. The " SD " represents that this device supports camera's local storage feature.
	This device is currently connected, and video is being recorded either manually or according to the schedule.

Add Non-LevelOne Cameras


In this section, we will guide you through how to add devices to OneSecure system.

After the required CDP license is activated, please:

1. Use the utility provided by camera manufacturer to confirm the camera properties:
(1) **Protocol**, (2) **IP Address**, (3) **HTTP Port**, and (4) **User Name & Password**.
2. Log in to NVR, go to **Setup** page → **“Device”** tab, click **“Add Device”**, and select **“Add Device Manually”**.

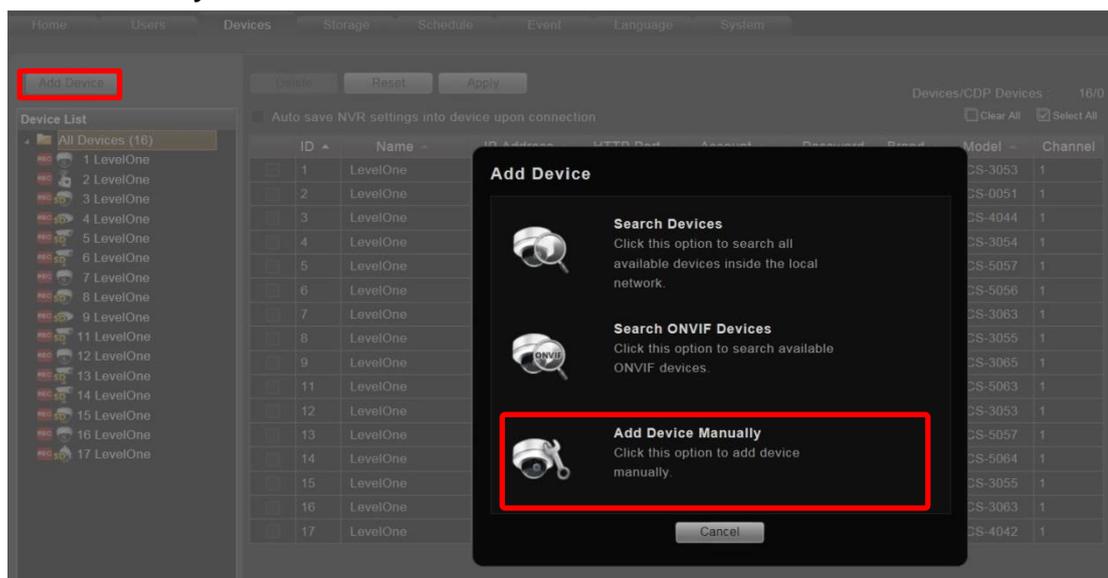

3. After selecting **“Add Device Manually”**, the camera settings page will appear as below. Please fill in the **eight** marked fields shown below that are required to communicate with the device - **Media Type**, **Protocol**, **IP Address**, **Brand**, **Model**, **HTTP Port**, **User Name**, and **Password**, and then click **“Apply”**.

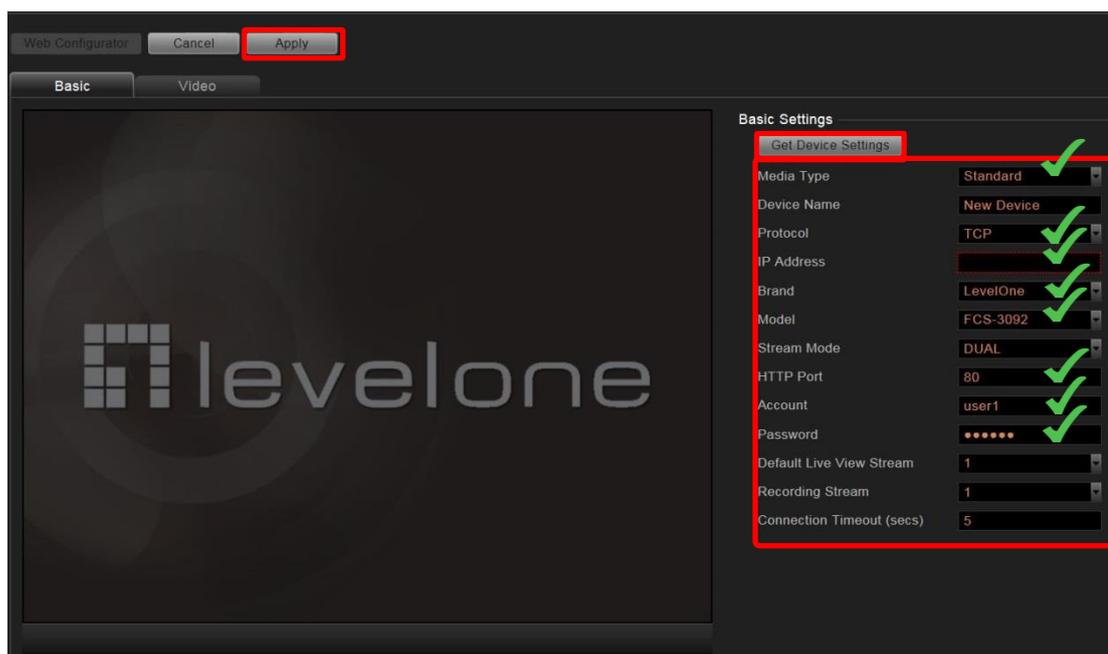


OneSecure Video Management Software Administrator Manual V3.0.09

If the device you wish to add supports ONVIF, you can select “**ONVIF**” for **Media Type**, and the settings page will appear as below. Please fill in the **five** marked fields shown below that are required to communicate with the device - **Media Type, Camera IP, HTTP Port, User Name, and Password**, and then click “**Apply**”.



- By applying the settings, the NVR server will get the video stream, and the camera will have been successfully added to the NVR system. You may click **Video**, **PTZ**, or **Preset Tour** (available for camera with pan/tilt/zoom capabilities) tabs to configure other properties.

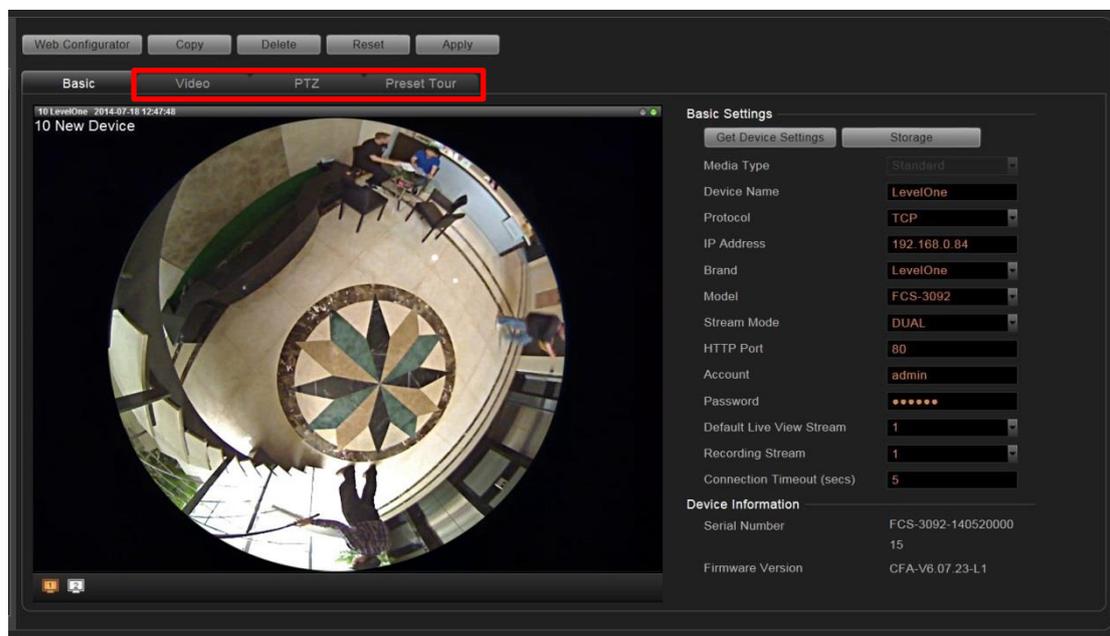

- To directly access the device configurator webpage, simply click “**Web Configurator**” on top left to open it. Certain advanced settings are only available through the web configurator and not through NVR.

Manage Multiple Devices

After adding several devices to the system, you may get an overview of all devices on **Setup** page → **Device** tab; this is where you may use certain fast and convenient approaches to manage a number of devices. In this section, we will guide you through how to quickly add or delete multiple devices.

Modify Basic Connection Settings

Go to **Setup** page → **Devices** tab, and click **All Devices** in **Device List** to get the devices overview in right column. Each basic connection setting field including Name, IP Address, HTTP Port, User Name and Password, is editable. Simply click in the field to modify it directly.

ID	Name	IP Address	HTTP Port	Account	Password	Brand	Model	Channel
1	LevelOne	192.168.0.79	80	admin	•••••	LevelOne	FCS-3053	1
2	LevelOne	192.168.0.76	80	admin	•••••	LevelOne	FCS-0051	1
3	LevelOne	192.168.0.86	80	admin	•••••	LevelOne	FCS-4044	1
4	LevelOne	192.168.0.75	80	admin	•••••	LevelOne	FCS-3054	1
5	LevelOne	192.168.0.71	80	admin	•••••	LevelOne	FCS-5057	1
6	LevelOne	192.168.0.81	80	admin	•••••	LevelOne	FCS-5056	1

Every time you modify a property without saving it, an icon  will appear next to the device in **Device List**. You may click “**Reset**” to retrieve the settings you saved last time once you want to abort current modification. After changing any field, please remember to click “**Apply**” before you leave this page.




Tip

NVR will sync with devices upon connecting to them. To make sure the settings on NVR side are prior to and always overwrite those on device sides, please check “**Auto save NVR settings into devices upon connection**”.


Delete Devices

You may delete a single, multiple or all devices on **All Devices List**. The logs and video files of the devices will be kept until deleted by server storage deletion rule. Select the device(s) you wish to delete, click “**Delete**” button and confirm the deletion. If you want to delete all the existing devices, simply click  on upper right to select them all at once. To validate if you have successfully deleted a device on NVR system, simply check the **Device List** on the left of **Setup** page → **Devices** tab to see if the device name is removed from the tree.

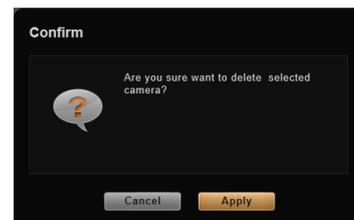


Copy Settings Across Devices

When setting a large number of devices, many settings will resemble other ones, and it is sometimes tiresome to repeat every setting again and again. You can use the **Copy** function to save the hassle of needless repetition.

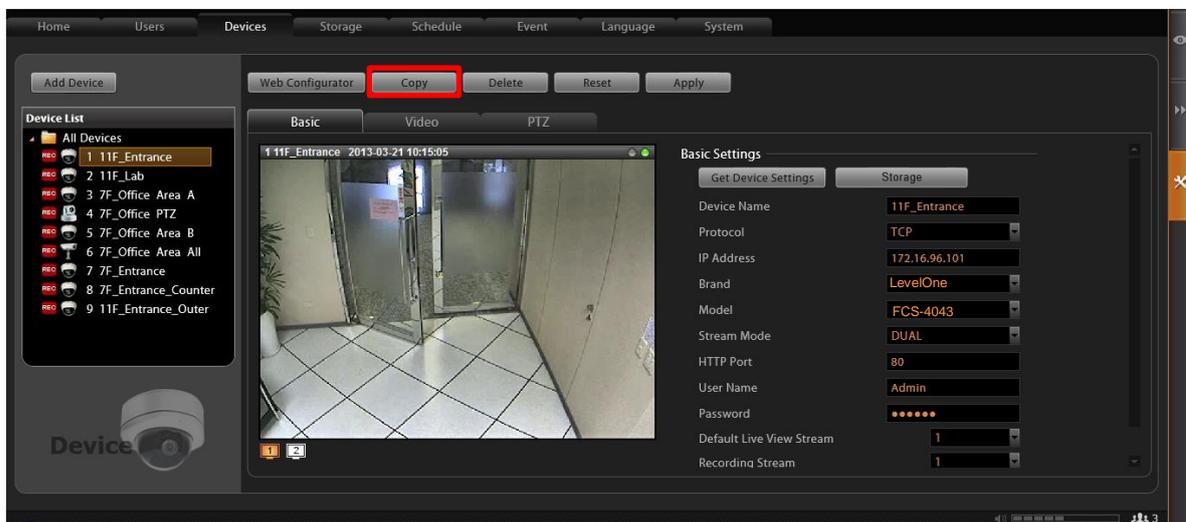

1. On **All Device List**, select the source device whose settings are to be copied from. You can select only one device to be the source.
2. Click **“Copy”** to bring up the copy setting window.
3. On the window, below the source device name are the settings you may choose to copy, including **Basic settings**, **PTZ Settings** and **Video Settings**.
4. Click **“Apply”**, the settings will be written to target devices.
5. To add a new device with the same settings, choose **“Add New Device”** in

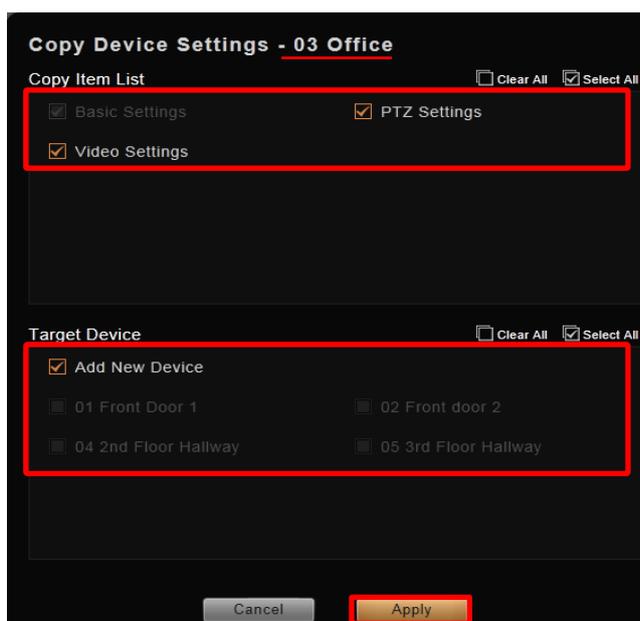

6. There are a few differences of the copied items between two target device types:
- Each field on this page has already been filled with the source device’s properties. You may continue to modify the **Device Name**, **IP Address**, get the live view by clicking **“Get Device Settings”**, and then click **“Apply”** to add this device to **Device List**.

Settings Copied to Target Devices

Target Type Settings	New Device	Existing Device
Basic	All	All except Device Name, IP Address, HTTP Port, RTSP Port, User Name and Password
Video		All except Motion Settings, Video Adjustment
PTZ		All except PTZ Preset Points and Commands

Note

1. You can only choose either “**Add New Device**” or existing devices as target.
2. To add new devices by copying from an existing one, the user’s group should be permitted with this right. To check the access rights, please go to **Setup** page→**Users** page→**User Groups**, select the user group, and enable the “**Device Setup**” -“**Add New Device**” under **NVR Permissions**.

Add Video Streams from a Multi-channel Device

There are devices that output more than one video streams to NVR. For example, a video encoder converts a number of analog video signals into the same amount of IP video streams; certain high megapixel cameras support outputting multiple VGA streams cropped from a single high-resolution video source. These multiple streams coming from a single device are managed as different cameras by NVR server.

To add these streams as multiple channels for you to view and record, please:

1. Select the desired stream mode in “**Stream Mode**” field on **Setup** page →**Devices** tab→**Basic** tab.
2. The “**Channel No.**” column will display for you to input the stream ID (the same with your setting in device’s web configurator).
3. After configuration, click “**Apply**”.
4. Go to **All Devices** page, duplicate this device to a new channel, repeat this step until all the channels you need are added.
5. Individually modify the **Channel No** value of the channels.



Tip

Saving CPU loading with Your Dual Streaming devices


The device supporting dual-streaming function can output two video streams of different value. You may make the live view stream smaller in size with lesser frame rate to save decoding CPU power and bandwidth. Meanwhile the recording stream can be larger and have more FPS so that you have clear images when you need to retrieve evidence. For settings in both streams of devices with dual stream functionality, please refer to section Configure Video Format on page 47

Configure Device Settings

After adding a device to NVR, you may continue to configure its video, motion detection, PTZ or preset tour settings on **Setup** page → **Devices** tab. In this section, we will guide you through how to configure these settings and their corresponding functions.

Configure Video Format

Go to **Setup** page → **Device** tab, select a device from **Device List**, and then go to **Video** tab to configure the video format of the stream output from this device. If the device is currently in Dual Stream mode, you may switch the stream in live view window by click on the switch below  and configure individual settings for Media 1 and Media 2.

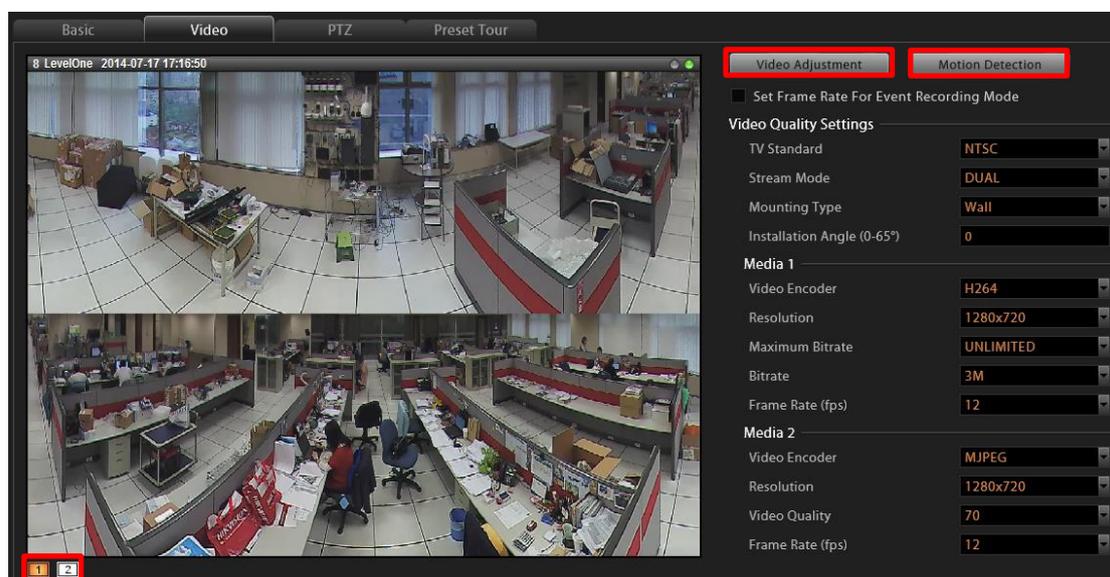

Video Settings Attributes

Field Name	Description
TV Standard	Default is NTSC
Stream Mode ^{*1}	Select one of the streaming modes this device supports
Mounting Type ^{*2}	Select the mounting position
Installation Angle ^{*3}	Input the angle for a device mounted on the wall
Video encoder	Select one of the codec this device supports
Resolution	Select one of the resolutions this device supports
Video Quality ^{*4}	Select your desired video quality of the image
Frame Rate(fps)	Select the (Frames Per Second) this device supports.
Maximum Bitrate	This puts a hard cap on the maximum bit rate allowed in any given second of streaming. Assigning a limited bit rate may cause a few dropped frames when the stream data overflows the allowed bit rate.
Bitrate ^{*5}	This is the target bitrate that the camera will attempt to provide when

you have selected “Unlimited” for **Maximum Bitrate**. The actual value will fluctuate slightly based on scene changes.


- *1 Available when NVR is connected to a multi-streaming device.
- *2 Available when NVR is connected to a hemispheric device.
- *3 Available when NVR is connected to a hemispheric device whose **Mount Type** is set to “Wall”.
- *4 Available when “Video Encoder” is selected as MJPEG.
- *5 Available when “Maximum Bitrate” is selected as “Unlimited”.

Save Storage by Setting Event Recording Frame Rate

Video surveillance system is aimed to preserve as much evidence as possible, and you may want to have a view be recorded 24/7 to capture every important moment; however, the general recording methods provided by most network recording systems- event and schedule recording, will either consume too much storage or have risk in missing important scenes. The “**Set Frame Rate for Event Recording Mode**” function record everything at economical storage usage by automatically adjusting video frame rate during event recording period.


Schedule Recording

Continuous recording promises no loss of video evidence; **however, large data storage is required** because this video is always recorded at the high frame rate you set for device.

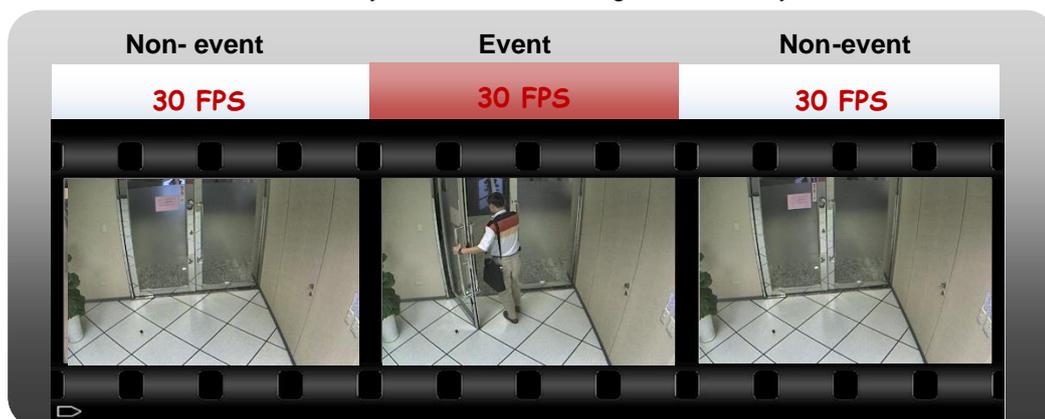


Event Recording

This mode is storage-efficient because recording would stop during the non-event moments; while **certain vital video evidences may be missed if the triggering device fails to take effect.**

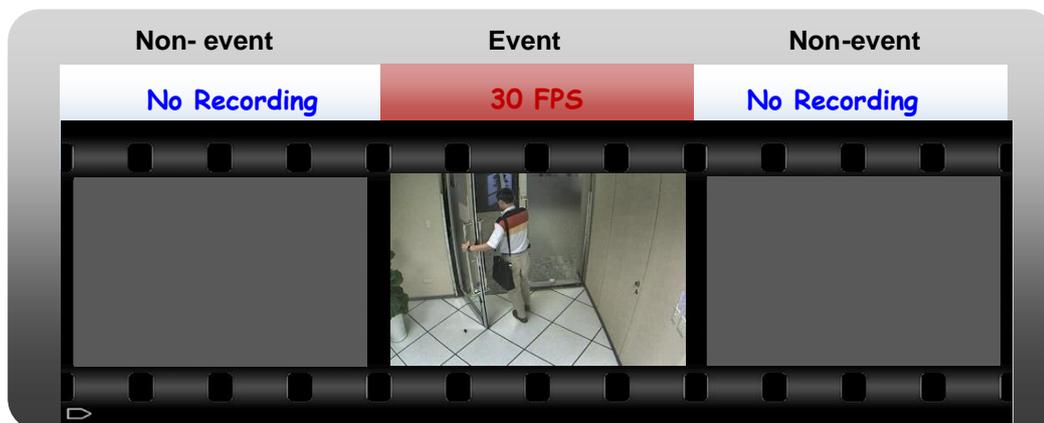


Event Recording with Frame Rate Adjustment

Keeps recording all the way without losing any single moment; lower frame rate can be set for non-event recording, which consumes only a little storage.

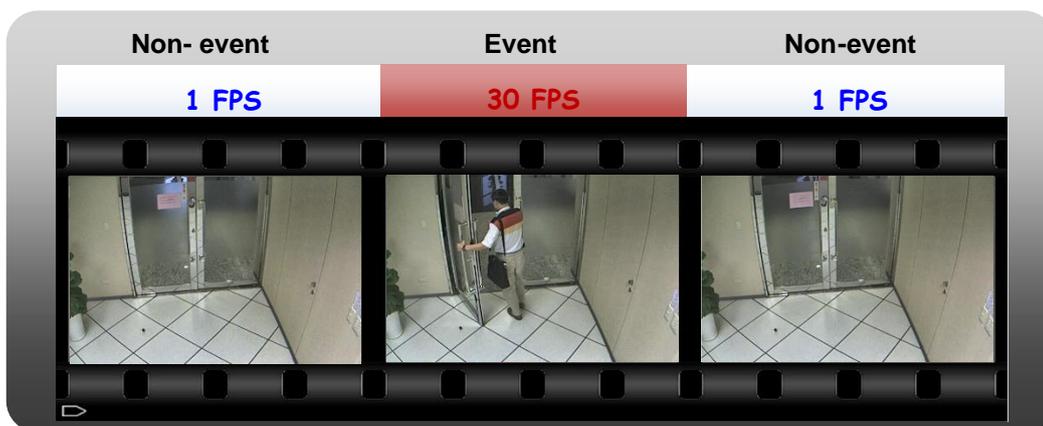

How to Make Use of Event Recording with Frame Rate Adjustment

To make use of **Event recording with Frame Rate Adjustment function**, you may configure the **Frame Rate** settings on **Setup** page → **Device** tab → **Video** tab. The **Frame Rate (fps)** you set will always be applied to live view and schedule recording. Once **Set Frame Rate for Event Recording Mode** is checked, you may configure advanced settings for event recording. If the device is in **Dual** stream mode, you will only need to configure these settings of the **Recording Stream**.

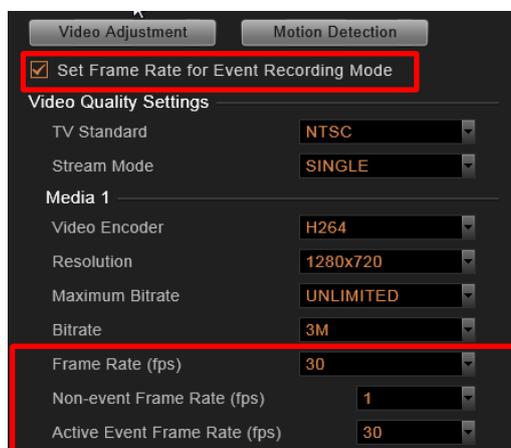


Scenario A:

Suppose you wish all the videos are recorded at very high frame rate. With sufficient storage, you may not need this function. Set the video **Frame Rate** that will apply to all the recordings. In this way, OneSecure will not record non-event during event recording period.

Frame Rate Setting		Event Recording
<input type="checkbox"/> Set Frame Rate for Event Recording Mode		
Frame Rate (fps)	30	Non-Event: 0 FPS
		Event: 30 FPS

Scenario B:

Suppose you wish the system to record 24/7, the non-event recording to be kept at very low frame rate. Please set the event and schedule recordings at different frame rate, you will need to enable “Set Frame Rate for Event Recording Mode”, and set the “Non-event Frame Rate” and “Active Event Frame Rate”.

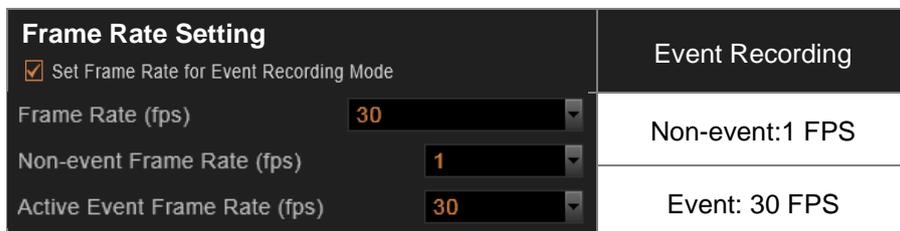


Fine-tune the Image

When monitoring your cameras, it is essential to make the images as similar to the real scene as possible. The default settings of the camera are usually sufficient for most environments, but you may also make adjustments in case it is required to do so. For devices that support the configuration of properties related to image, day/night mode, or exposure/white balance settings, you may directly modify them and save your changes to the device using the OneSecure system. The options available may vary depending on the device.

To start, on **Device Video** tab, click “**Video Adjustment**”. Each field is only available when the device opens this property for modification. If the device is in Dual Stream mode, the video you get in this window will always be **Stream 1**.

1. At first, synchronize with the device to get the current settings by clicking “**Get Video Adjustment**”.
2. After retrieving the settings from the device, the fields available for modification (depends on models) will be enabled. Select the desired value for the field.
3. Click “**Apply**”.

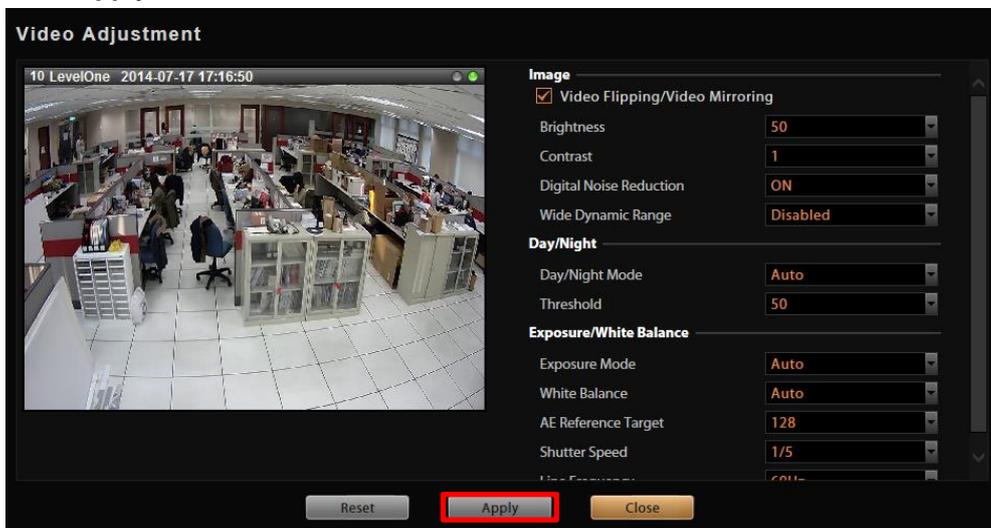

OneSecure Video Management Software Administrator Manual V3.0.09

Video Adjustment Attributes

Field Category	Field Name	Description
Image	Video Flipping/ Video Mirroring	Check this box to flip the video vertically and horizontally to achieve a 180-degree rotation effect.
	Brightness	Select the Brightness value (0-100). The higher the value, the brighter the image.
	Contrast	Select the Contrast value (0-100). The higher the value, the more obvious the separation between light and dark.
	Saturation	Select the Saturation value (0-100). The higher the value, the more intense the color will appear; the lower the value, the more grayed-out the color will appear.
	Hue	Select the Hue value (0-100). "Hue" is the term used to refer to the pure spectrum colors. Adjust this value to find the color closest to the real scene.
	Digital Noise Reduction	Turn the Digital Noise Reduction ON or OFF . When turned on, the noise in the video (especially in low light) is reduced and the image will look smoother and clearer.
	Wide Dynamic Range	Select the WDR level from the following options: Disabled, low, medium, high, highest. Note: WDR is disabled and will not appear if Exposure Mode is set to "Manual".
Day/Night	Day/ Night Mode	Select one of three modes: Auto: The camera will automatically switch between day mode (color) and night mode (black/white) under exposure level defined by "Threshold". Day: The camera will always stay in the day (color) mode, regardless of exposure level. Night: The camera will always stay in night (black/white) mode regardless of exposure level.
	Threshold	The scale from 0-100 allows you to define the exposure level at which the day and night mode switch will happen. A higher value would require a darker environment to trigger a day to night switch and vice versa.
Exposure/ White Balance	Exposure Mode	Select between " Auto " or " Manual " exposure mode. In Auto mode, the intelligent system of the camera will find the best possible exposure settings. In Manual mode, you can manually adjust the White Balance, Exposure Gain, Shutter Speed, and Line frequency.


OneSecure Video Management Software Administrator Manual V3.0.09

White Balance	Select between “ Auto ” or “ Manual ” White Balance mode. White balance refers to the device’s ability to accurately define “true white” color. In Auto mode, the camera will attempt to recognize the “true white” color and adjust the image accordingly. In Manual mode, you can configure the White Balance by adjusting the R Gain and B Gain value manually.
R Gain	The scale from 1-255 allows you to define the R Gain level of the video frame. A higher value would adjust the image to have more red color value.
B Gain	The scale from 1-255 allows you to define the B Gain level of the video frame. A higher value would adjust the image to have more blue color value.
AE Reference Target	The scale from 1-255 allows you to define the Auto exposure reference target. A higher value will brighten the overall scene, although it may increase the amount of noise at night.
Exposure Gain	The scale from 1-255 allows you to define the Exposure Gain level of the video frame. A higher value would make the video frame brighter.
Shutter Speed	Shutter speed allows you to choose the speed of auto shutter.
IRIS Control	IRIS control allows you to configure the size for the opening of the iris
Line Frequency	Select between 50Hz or 60Hz to match with the frequency of artificial light source of a given country.

Configure Motion Settings

To make use of the motion and PIR detection functions supported by your devices, you need to configure the detection regions and settings. Once a motion is detected, OneSeucre can trigger events and recording, bring up instant pop-up windows and show the detected area on live view.

Before configuring motion detection settings, first make sure you can connect properly to the IP camera / video server and get device settings. On **Device** tab→**Video** tab, and click **“Motion Detection”** to start.

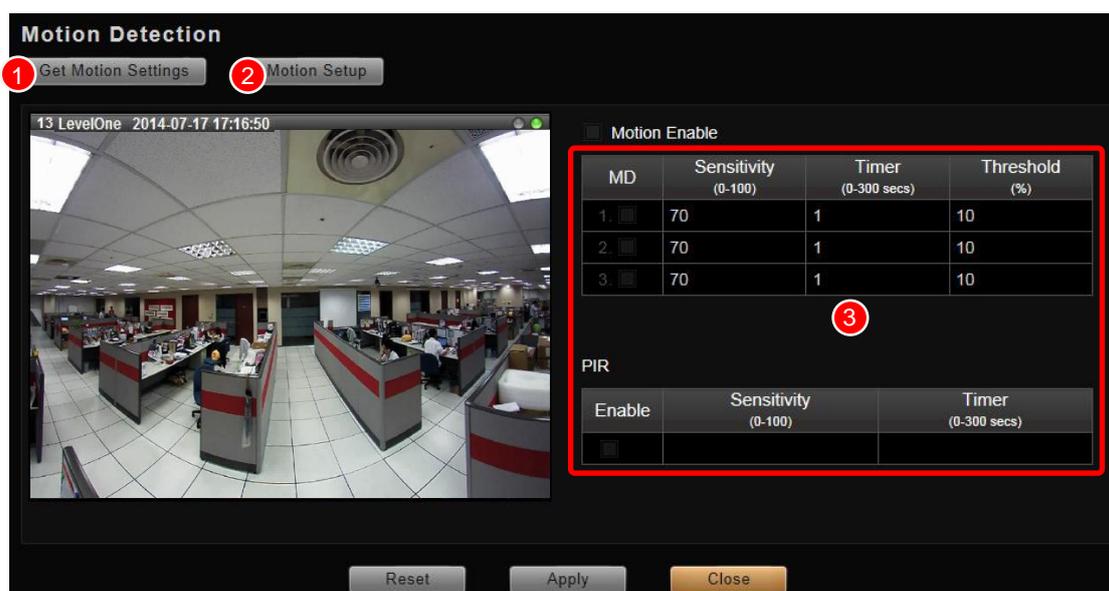

1. Click **“Get Motion Settings”** to retrieve the live view. For Dual Mode, the video you get in this window will always be **Stream 1**
2. Click **“Motion Setup”** to enable the property fields.
3. There are three motion regions for you to set. To enable one, check it in the **MD** box, a red frame will appear in the view. You may start setting the detection area by adjusting this red frame on the view. Simply use your mouse to move and resize the frame.



OneSecure Video Management Software Administrator Manual V3.0.09

4. When the setting is finished, click “**Apply**” to save, then “**Close**” to exit this page. To check or modify the regions you set, please go through clicking “**Get Motion Settings**”, “**Motion Setup**” and then “**Motion Enable**” buttons, the saved regions are already selected on the list, select one to proceed.

Adjustment Attributes


Field Name	Description
Sensitivity(1-100)	Determines how sensitive the camera reacts to the movement. The higher the sensitivity level is, the smaller motion will trigger the alarm, but may give false alarms. Default is 70.
Timer(0-300 secs)	The interval before the next motion detection can be triggered again. Default is 1 second.
Threshold (%)	The threshold level of this motion detection region. The lower threshold level is, smaller portion of the region would be considered as motions, which is more easily to be triggered, but may give more false alarms.

Note

1. If you have changed the motion detection settings via the web configurator, please remember to come back to NVR and press “**Get Device Settings**”, then “**Apply**” to save to NVR. This is to ensure that the settings in NVR are always in sync with the device.
2. If a motion region is set, once a movement is detected in this region, in live view:
(1) the red region frame will blink, and (2) a new alert entry will be generated in the event list.
3. PIR detection is available only for models with this function.

Configure PTZ Device

PTZ devices can do panning, tilting and zooming automatically or through manipulation. The PTZ-related applications are broadly supported by OneSecure. For example, you may control the movements of a PTZ camera with user interface panel controls or a joystick; the device can be programmed to execute a continuous tour or triggered by events to go to a preset position. Once an LevelOne PTZ device is added to the system, OneSecure will use the default settings of the device model and enable PTZ functions, so that you may immediately start PTZ operations.

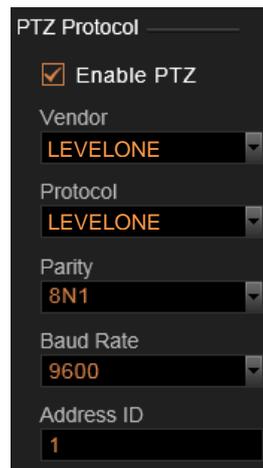

If you have previously changed the communication parameters of PTZ devices, please make sure these parameters on NVR side and device side match.

To start matching up the parameters, please follow the procedures below:

1. If the device is a speed dome camera or an analog camera attached to video server, configure the parameters on physical device according to the product's installation instructions.
2. On the device's (camera or video server)web configurator, configure the parameters to match the setting on physical device, and test the PTZ operations to make sure the device is properly set to be connected
3. In OneSecure server, go to **Setup** page → **Devices** tab, select the device from **Device List**, and click **PTZ** tab. In **PTZ Protocol** section, fill in the communication parameters.

Adjustment Attributes

Field Name	Description
Vendor	Vendor is the provider of Protocol. The selectable vendors would vary depending on different device models. Available vendor types are: ACTI , DYNACOLOR , PELCO and SONY .
Protocol	Protocol is a set of rules to define the communication format between the device and controller. Different protocols are provided for selection according to the Vendor you choose. Available protocols following their vendors are: ACTI : [ACTI] / DYNACOLOR : [DYNACOLOR] / PELCO : [PELCOD] [PELCOP] SONY : [VISCA]


<p>Parity</p>	<p>Parity is the data validation mechanism for analog devices that use serial port interface to send or receive data. When choosing parity mode other than "none", the data packets will be validated for possible data losses so that failed command could be re-sent if necessary. Please refer to the parity setting of the analog device and choose exactly the same parity setting also in NVR.</p> <p>Available parity modes are:</p> <table border="1" data-bbox="459 551 1401 1021"> <thead> <tr> <th>Parity mode name in NVR</th> <th>Serial data, represented by given amount of bits</th> <th>Parity mode (none, odd, even)</th> <th>Number of stop bits</th> </tr> </thead> <tbody> <tr><td>8N1</td><td>8</td><td>N</td><td>1</td></tr> <tr><td>8O1</td><td>8</td><td>O</td><td>1</td></tr> <tr><td>8E1</td><td>8</td><td>E</td><td>1</td></tr> <tr><td>8N2</td><td>8</td><td>N</td><td>2</td></tr> <tr><td>8O2</td><td>8</td><td>O</td><td>2</td></tr> <tr><td>8E2</td><td>8</td><td>E</td><td>2</td></tr> <tr><td>7N2</td><td>7</td><td>N</td><td>2</td></tr> <tr><td>7O2</td><td>7</td><td>O</td><td>2</td></tr> <tr><td>7E2</td><td>7</td><td>E</td><td>2</td></tr> </tbody> </table>	Parity mode name in NVR	Serial data, represented by given amount of bits	Parity mode (none, odd, even)	Number of stop bits	8N1	8	N	1	8O1	8	O	1	8E1	8	E	1	8N2	8	N	2	8O2	8	O	2	8E2	8	E	2	7N2	7	N	2	7O2	7	O	2	7E2	7	E	2
Parity mode name in NVR	Serial data, represented by given amount of bits	Parity mode (none, odd, even)	Number of stop bits																																						
8N1	8	N	1																																						
8O1	8	O	1																																						
8E1	8	E	1																																						
8N2	8	N	2																																						
8O2	8	O	2																																						
8E2	8	E	2																																						
7N2	7	N	2																																						
7O2	7	O	2																																						
7E2	7	E	2																																						
<p>Baud rate</p>	<p>Baud rate defines the data speed through serial port interface – the rate value represents the number of symbols that can be transmitted within 1 second. Please refer to the baud rate setting of the analog device and choose exactly the same baud rate setting also in NVR.</p> <p>Available baud rates: 2400, 4800, 9600, 19200, 38400, 57600, 115200</p>																																								
<p>Address ID</p>	<p>Address ID represents the identity of the device, only analog devices or speed dome cameras require this configuration. Please refer to the Address ID of the device and choose exactly the same baud rate setting also in OneSecure. Available value is from 1~99.</p>																																								

Important Notice

Note that the functions supported for devices connected using ONVIF are live streaming and adjustments to video image settings.

How to Do Live PTZ Operation

To configure PTZ settings, you need to view the live streaming while manipulating the PTZ controls simultaneously in this window.

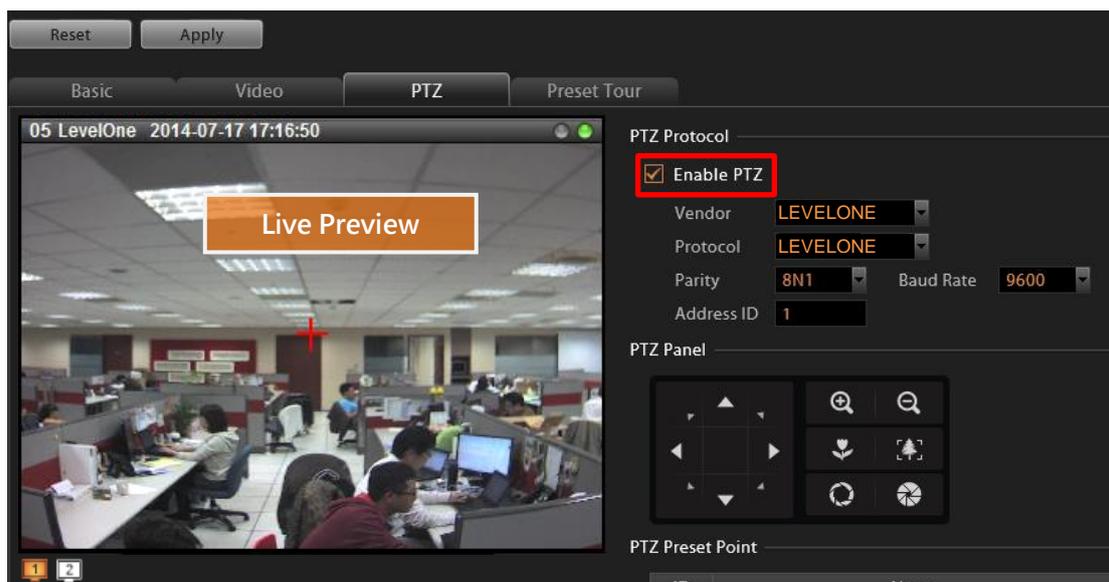

There are two kinds of PTZ navigation:

Optical PTZ Navigation

1. Get the live view from **Live Preview** window:

Make sure the “**Enable PTZ**” is checked, a red crosshair will appear on the **Live Preview** window, if the device is in Dual Stream mode, this window will always shows the stream set for live view. You may click on  to switch between the streams.

2. Use the mouse to do the following PTZ operations:

To execute optical **Panning** and **Tilting**, click anywhere on the live window to allow the camera to move in that direction. The length of the direction indicator is proportional to the Pan and Tilt speed. The farther you place the cursor from the center, the faster the Pan/Tilt movement.

To execute optical **Zoom in** or **Zoom out**, scroll the mouse wheel forward to zoom in; scroll the mouse wheel backward to zoom out.



OneSecure Video Management Software Administrator Manual V3.0.09

3. Use panel controls to operate PTZ movements:

Click a button on the panel to start, the red crosshair will appear in the view.



Note

1. The zoom buttons are only applicable for those devices supporting optical zooming.
2. The focus buttons are only applicable for devices with controllable zoom lens. Please remember to turn off the autofocus mode on device firmware before using these buttons.
3. The device should be equipped with DC-Iris or P-iris and has been switched to manual iris mode before you use the buttons for widening or narrowing aperture.

Digital PTZ Navigation

Digital PTZ allows you to zoom into part of the video and enlarge it to display on screen. This PTZ function is applied to every camera model in OneSecure system.

1. Get the live view from **Live Preview** window:

Make sure the “**Enable PTZ**” is unchecked.

2. Click and drag a highlight rectangle over any channel, and the area highlighted will be displayed in the full live video window. In this mode, a picture-in-picture view will show in the lower right of live view window. A red rectangle will mark the currently enlarged view area within the full size video. You may click and drag the red rectangle to see another area.
3. To go back to the original full video view, just right-click on the minimized Picture in Picture view.



Draw Zoom area




Cancel Zoom area

Set PTZ Preset Points

With PTZ devices, you may define a view by where to look (through panning and tilting) and how close (through zooming) to zoom. Once these views have been saved in NVR server as preset points, the device can always point to this view upon the event triggering or user's command.

1. Go to **Setup** page → **Devices** tab, select the device from **Device List**, and click **PTZ** tab.
2. By PTZ operation, control the device to point at your desired view, and adjust the zoom level (if available). In **PTZ Preset Point** section, click a preset point name field to start editing the name, then click “+” to set this point. After finishing setting your desired preset points, click “**Apply**”. You may review the points you set by clicking “→” to go to the point, or “**X**” to delete it. You may modify an existing point with following procedure: 1. Select it 2. Define a new view 3. Click the “+” to set it 4. Click “**Apply**” to save it.

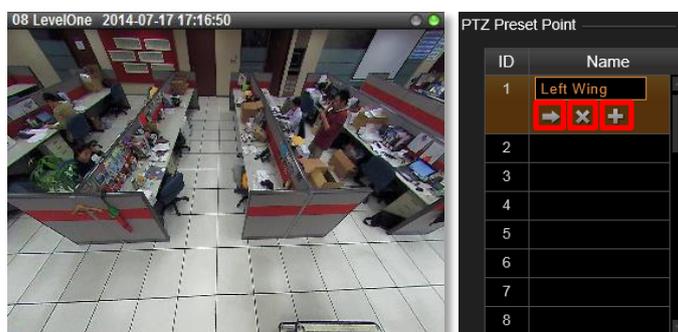


3. After the preset points are set, they are available on **Live View** page → **PTZ control** panel.

Set PTZ Command

If your speed dome or PTZ device has a special function not supported in the standard protocol, you may input it in **PTZ Command** list and execute it. Ex: Activate the wiper to clean the window of the PTZ.

1. To add a PTZ action command, go to **Setup** page → **Devices** tab, select the device from **Device List**, on **PTZ** tab, check the “**Enable PTZ**”.
2. In “**PTZ Command**” area, click in a command entry; input the name, command and then click “**Apply**” to save it. You may also click “**→**” to execute it or “**X**” to clear it.

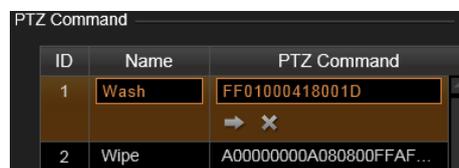

ID	Name	PTZ Command
1	Wash	FF01000418001D
2	Wipe	A0000000A080800FFAF...

Set PTZ Preset Tour


Preset Tour is a preconfigured PTZ sequence that directs the camera to cycle through multiple preset points, including where to look and how long to look at each location. With this preset tour, your PTZ device can perform an automatic patrol to scan through your cared areas.

For example, a Preset Tour should include two or more preset points. Once a tour is initiated, the device will automatically point to the preset points based on the sequence and stay at that view according to the duration you set.



Before setting up Preset Tours, please make sure you have configured PTZ settings and set PTZ Preset Points. To start setting the Preset Tour:

1. Go to **Setup** page → **Devices** tab, select the device from **Device List**, and click **Preset Tour** tab.
2. In the “**Tour List**”, as there is currently no existing tour, click “**Add New Tour**” to add one. The default tour name is “**Preset Tour 1**”.
3. In the “**Preset Points of a Tour**” area, click “**Add Preset Point**” to add the number of points for this tour. The number of points may outnumber the actual preset points you set, for the same preset point might be gone through more than one time in a single tour. For each point, click in the “**Preset Point**” field to bring up the dropdown list, and select one preset point and define the dwell time which represents the time the device would stay in a certain view. Finally, click “**Apply**” to save the tour.

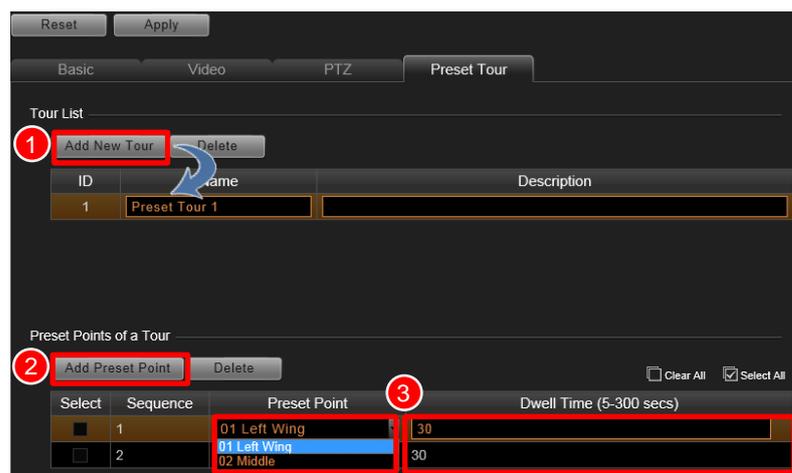

4. After a tour is saved, it is available on **Live View** page→**PTZ control** panel.

Note

The preset points and tour set in OneSecure are independent from those you set on device. If you have already defined certain preset points or tour on device, they will not be brought to NVR system. On the other hand, the settings on OneSecure will not write to the devices.

Configure Fisheye Cameras

With hemispherical lenses, fisheye cameras generate images at up to 360-degree width, which can cover all four corners of a room or both sides of a long aisle. As the original image captured by wide-angle lens is much distorted, to suit most monitoring purposes, the **Dewarping** process is required to alter the uneven lines and shapes before the images are displayed. Nowadays, the fisheye cameras come in two types in terms of the image-correction capability:

- Fisheye Cameras **with** in-camera dewarping function

The dewarping takes place in camera before the video is output to NVR server. Since the image correction counts on the camera itself, NVR server will not bear much extra loading, which benefits the system requiring many of these fisheye cameras.

- Fisheye Cameras **without** dewarping function

These fisheye cameras output only original global images, relying on software algorithm processing provided by NVR server to correct the images. They are suitable for a system with limited bandwidth, for NVR server processes and responds to User's ePTZ manipulation or demands for changing view modes immediately, without waiting for camera side to deliver a new frame.

OneSecure makes it possible to integrate both kinds of fisheye cameras into your system with the following advantages:

OneSecure Video Management Software Administrator Manual V3.0.09

- Full support for all types of dewarped video stream output from fisheye cameras with in-camera dewarping capability.
- NVR's software algorithm can perfectly corrects the original fisheye images, generating **6 specific fisheye view modes** from User's usual perspective.
- Based on user's instant request for changing view mode or PTZ view point, NVR server will process the original fisheye image and respond to the client individually. In this way, what a client sees on Live View will not affect playback, recording, as well as another concurrent connection.
- The virtualized **ePTZ** manipulation also allows User to dynamically explore any region of interest within the hemispheric view like operating a genuine PTZ device.


To make use of NVR's dewarping features for your fisheye cameras, please

1. Adjust Video Quality Settings

After the fisheye camera is successfully added, go to **Setup** page → **Devices** tab, select the device and then **Video** tab, make sure you set the **Stream Mode** as "**FISHEYE**" for a hemispheric camera. This is to make sure this hemispheric camera is outputting fisheye original video stream as a mini fisheye dome camera does.



2. Adjust Fisheye Display Settings


Select your **Mounting Type**, and then **Default Fisheye Mode**. For a Fisheye Mode containing panorama view, you may want to configure the **Default Rotate X** (width of view) and **Default Rotate Y** (height of view) configurations.

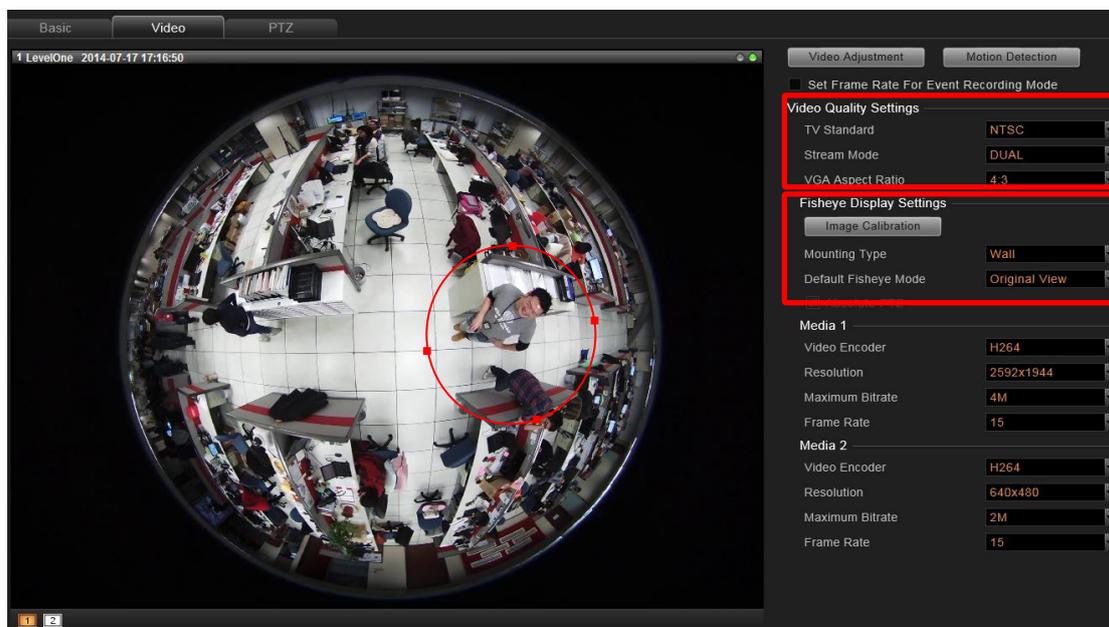

You may adjust the dewarped area by clicking "**Image Calibration**". In the edit mode, move or resize the red ring to define the dewarped area, and then click "**Set**" to save the setting.

OneSecure Video Management Software Administrator Manual V3.0.09

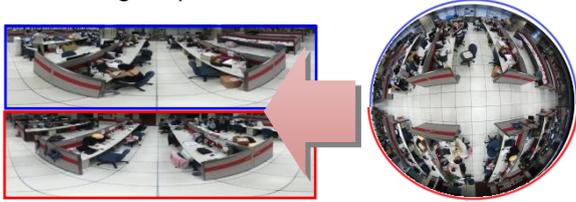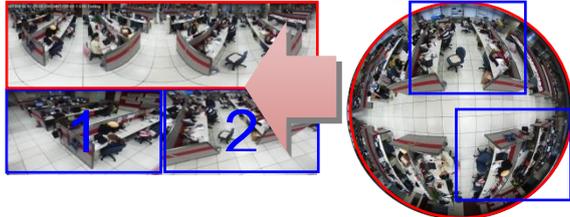Fisheye Mode	Description	PTZ Navigation
Original View	The very raw fisheye view 	Digital PTZ
Dewarping	One large user-defined cropped area 	ePTZ
Panorama	360-degree panorama view for ceiling mount 180-degree panorama view for wall mount 	Digital PTZ
Double Panorama	Two 180-degree panorama views 	Digital PTZ
Panorama /Focus	One panorama view Two small user-defined cropped regions 	ePTZ
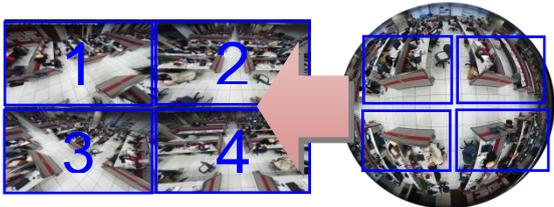
<p>Quad</p>	<p>Four small user-defined cropped regions</p> 	<p>ePTZ</p>
--------------------	---	-------------

3. After the configuration is done, remember to click “**Apply**” to save the settings.

Schedule Recordings


Unlike the traditional analog surveillance system, the IP surveillance system provides a target-oriented recording schedule for devices; the view of each device can be recorded based on your required time segments and event types. For example, you may have a camera installed on the office ceiling do continuous recording during work hours, and record only upon the triggers (incidents that detected by system) at night. In this way, the system does not waste disk space storing meaningless parts, and you save lots of effort browsing playback for specific events.

For the device's recording schedule, OneSecure supports Schedule recording and Event recording modes, which are set up on a week-based timetable; the event-handling schedule can also be configured on it. This section describes how to setup the recording schedule for the IP cameras / video servers.

Configure the Recording File Properties

Before setting the recording schedule, you may define (1) where the recordings are stored, (2) how long an event recording is and (3) how long a recording file will be kept in the system.

1. To set the saved recordings folder, go to **Setup** page→**Storage** tab, make sure you have assigned the disk drives to store recorded files. For related recording settings, please refer to [Storage Management](#) on page 83.
2. To define how long an event recording is and the recording's lifecycle, go to **Setup** page→**Schedule** tab, select the device from **Device List**, a week schedule will appear on the right. Configure the recording file related settings. The settings below will make an event recording as long as 5+30 seconds, which will be kept on server for 30 days.

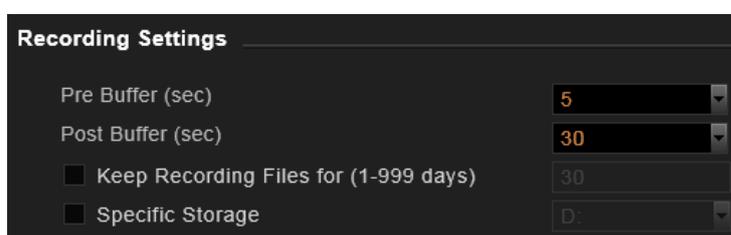

Attributes Explanation

Field Name	Description
Pre-event Recording Buffer (sec):	NVR keeps a short cache of video received from devices. If an event is triggered, NVR will automatically store the pre-event buffer along with the recording of the event itself. Available choices are 0, 3, 5 seconds.

OneSecure Video Management Software Administrator Manual V3.0.09

Post-event Recording Buffer (sec):	This will determine how long after the event is triggered should be included in the event recording file. Available choices are 10, 30, 60, 120, 180, and 300 seconds.
Keep Recording Files for (1-999 days):	OneSecure will keep recording file of specific device for the number of days you set here. The default value is 30 , if you want to modify it, please check the box to start configuring it. Available value is among 1~999 days.
Specific Storage	<p>You can assign a external storage disk for a certain camera. The video recording of this camera will be exclusively stored on this disk. Please connect the storage disk to NVR server computer and then log in to NVR system before you assign the specific storage disk,</p> 

Tip

How to make proper storage arrangement

In OneSecure system, there are two file-deleting mechanisms you can use based on different needs. If both rules are set, the threshold reached earlier will execute the deletion first.

1. **“Keep Recording Files for (1-999 days)”** – Set this rule if you have more concern in how long the recordings are kept, especially when you don’t want the old recordings to stay longer in the system than a certain period.
2. **“Reserve space”** in the **Disk Drive List** on **Setup** page → **Storage** tab - If the disk space is more critical in your system, please give an approximate value here, the system will always reserve this amount of space to store the newer recordings.

Given that you set the **Reserve space** as **30G**, while **Keeping Recording Files** setting is **5 days**, certain recording file will be deleted when it has been kept on disk for 5 days, despite that there is still plenty of available disk space.

Set the Schedule

Here you can configure camera's recording schedule on 7 days / 24 hours basis. The schedule is split into segments of 20-minute-length. By default, once a device is added to the system, its schedule is automatically set to full time schedule recording and event handling. You should configure it according to your system plan.

Go to **Setup-Schedule** tab, on **Schedule Setting** panel:

1. Select the recording mode from "**Recording Mode Bar**"



:Continuous recording that channel



: Records a period of the detected motion event. Please make sure you have configured the motion settings on **Setup** page → **Device** tab beforehand.



:Event handling is activated.

(Please refer to [How to Edit an Event Rule](#) on page 73 for **Event Rules** settings)



: Clear the setting




: Continuous recording + event handling



: Event recording + event handling


2. Click and drag over the "**Time Track**" to set time period.

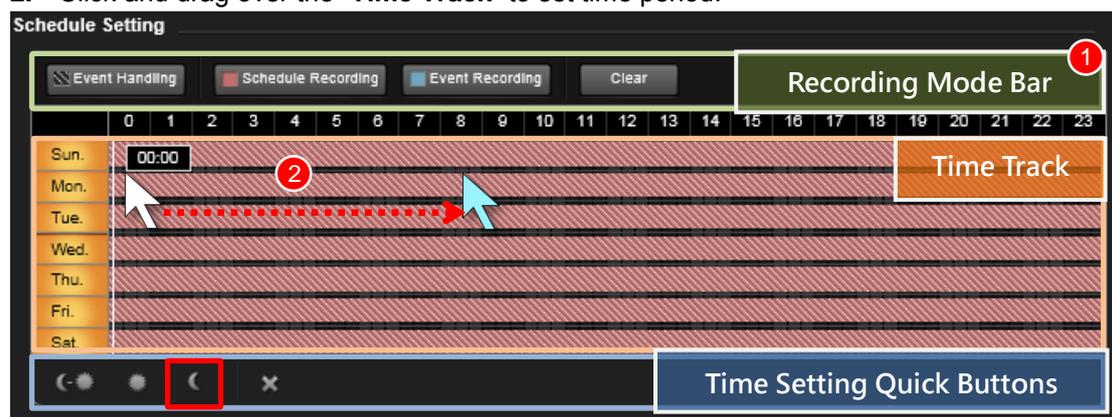


Use Time Setting Quick Buttons to Set the Time in One Click

Select the recording mode, then click one of these buttons to apply the mostly-used time settings.


Click  to apply schedule **for all day**.

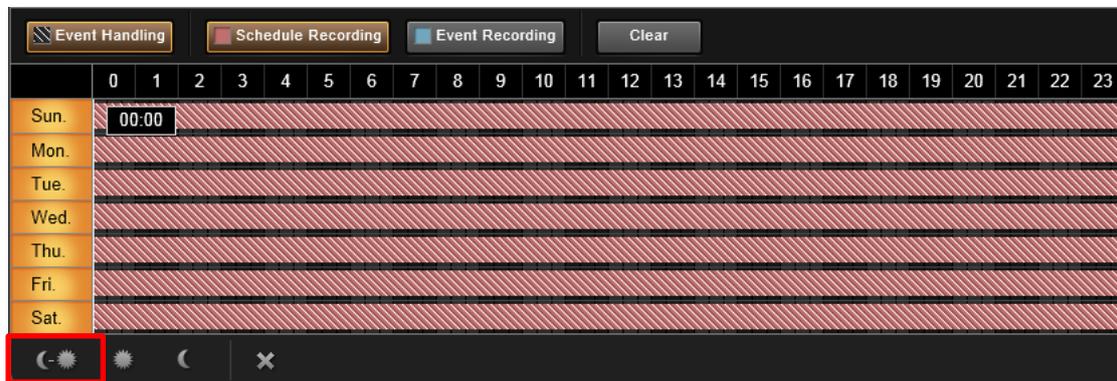

Click  to apply schedule **from 06:00 to 18:00 every day**, with the settings for the rest of the time track being cleared.

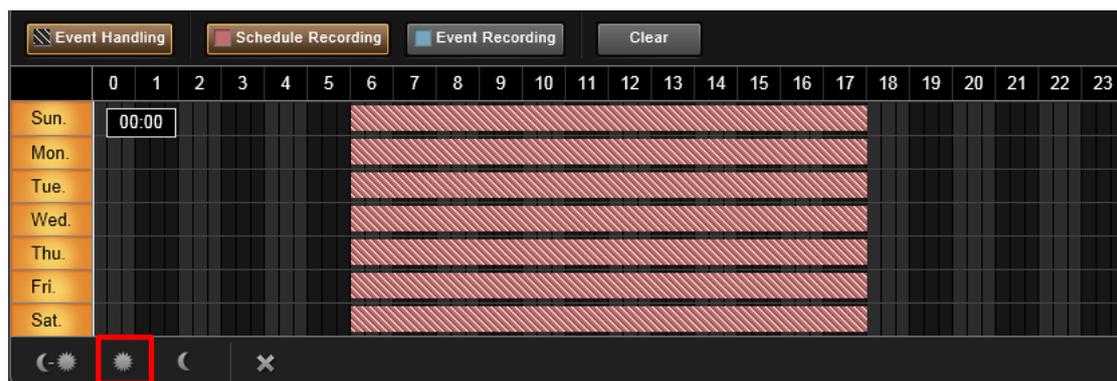

Click  to apply schedule **from 18:00 to 06:00 every day**, with the settings for the rest of the time track being cleared.

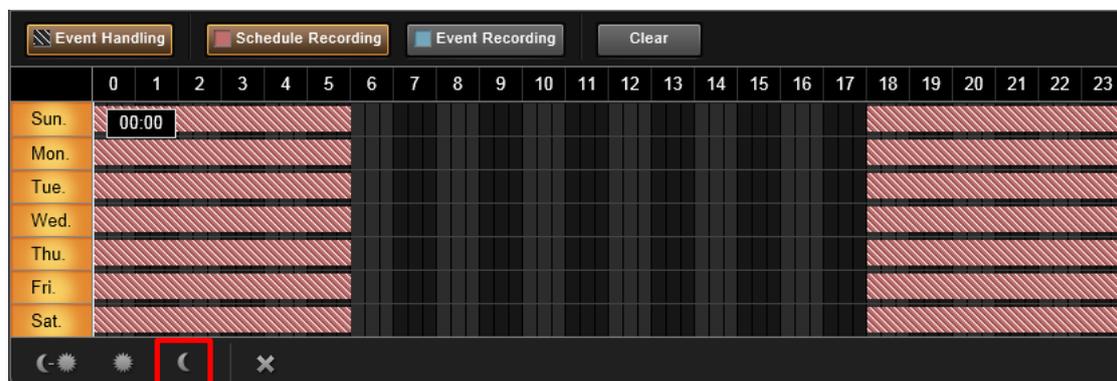


Click  to clear all schedule setting in this device.




Lock Specific Days

Clicking the day of the week will lock/unlock that day from schedule setting. You can shield schedule on a certain day from being changed by changes in other weekdays. You may easily set just the weekdays or the same time over the same week this way. To do this:

1. Click the days to shield them.

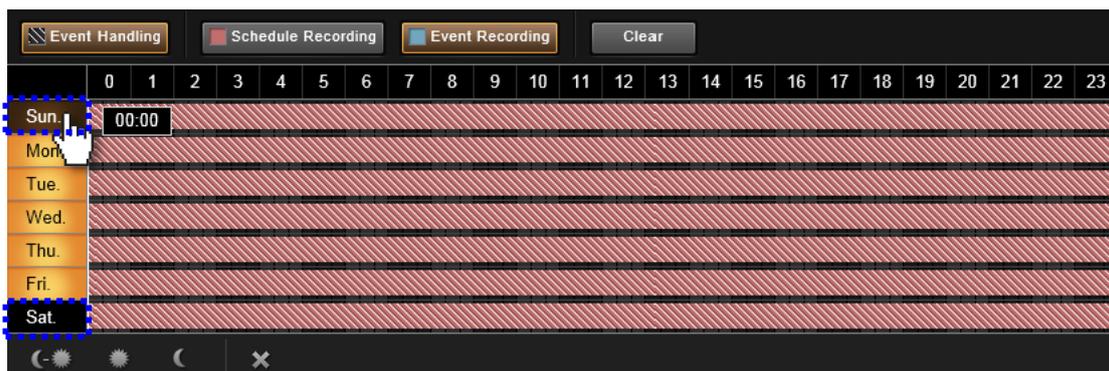


2. As you drag any settings over the time track, it will not apply to those shielded days.

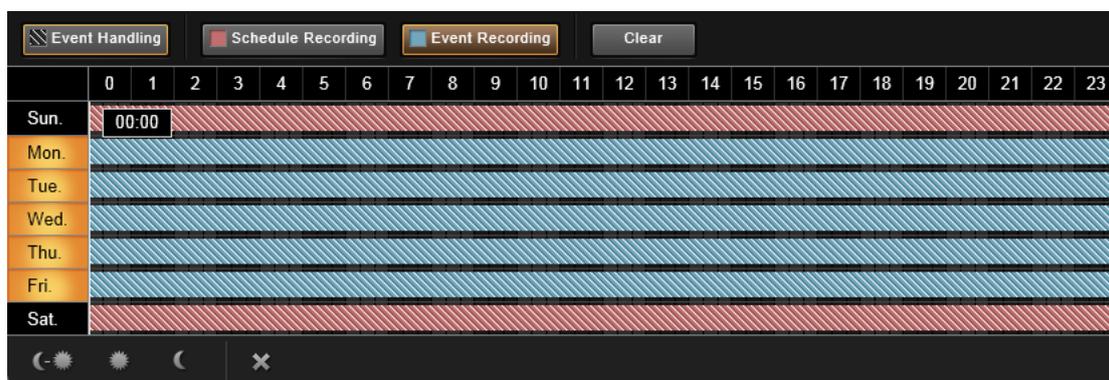


Copy an Existing Schedule to Others

With plenty of devices in your system, it happens that you want to apply the same schedule to multiple devices. After creating a schedule for one device, you can copy it to other cameras.

1. Go to **Setup** page → **Schedule** tab, on **Device List**, select the device you want to copy schedule settings from.
2. Click the **Copy** button.
3. On popup window, select target devices you want to copy schedule settings to.
4. Click the **Apply** button.

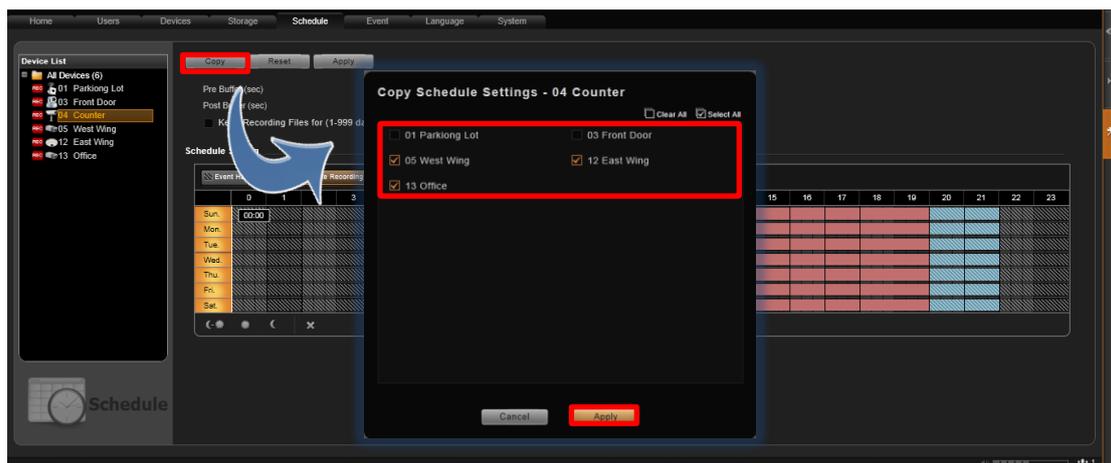


To check the result, go to **Schedule** tab, click **All Devices** on **Device List**.

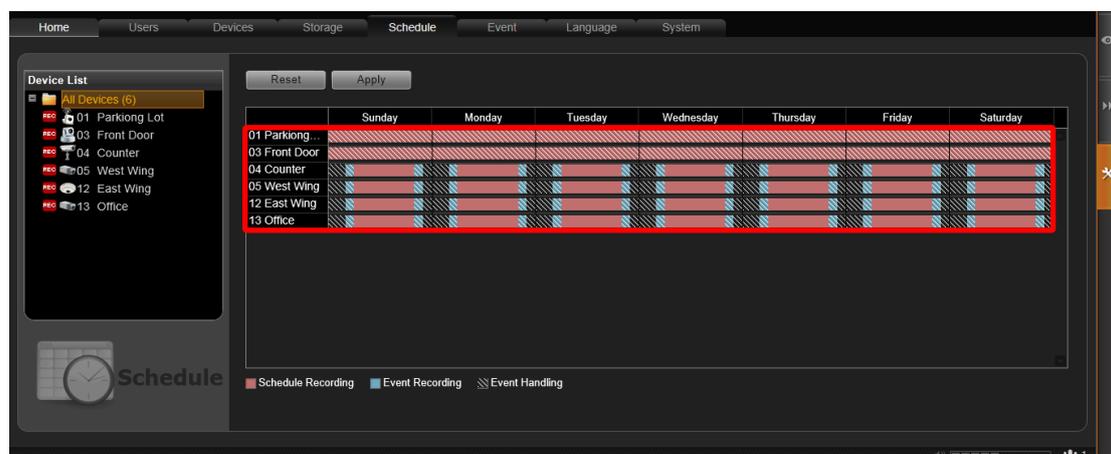

View the Entire Recording Schedule

On **Setup** page → **Schedule** tab, click **All Devices** on **Device List**, an overview of all device schedules will be listed on the right.

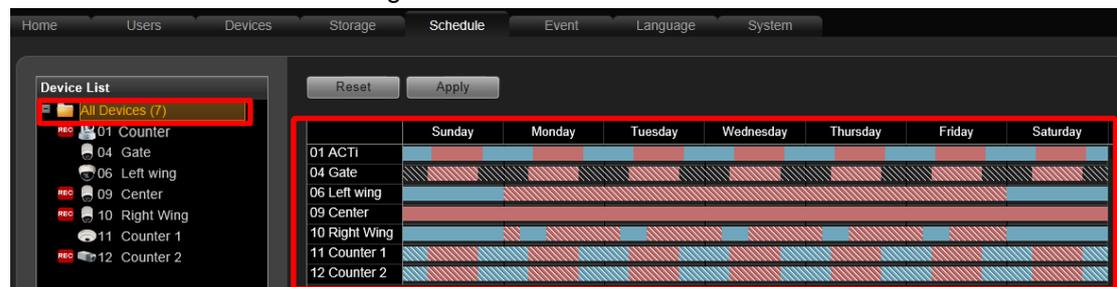

The below list explains the status of different bar patterns:


Icon	Recording Function Description
	Schedule recording. During this period, device view will be recorded continuously.
	Event handling. During this schedule, the event rules you set are active.
	Schedule recording and Event handling are both active during this period.
	Event recording. During this period, only detected events (e.g. Motion/PIR) will be recorded .
	Event recording and Event handling are both active during this period

How to Know if the Recording is Proceeding?

As the recording is taking place, you can observe the status on the **All Device** list. There will be an icon  appearing in front of the device. In **Playback**, you can drag the playback bar to current time position to check the latest recording.

Event Management

When something happens on camera site, such as someone walks by, the door opens or closes, a fire breaks out or the sun goes down – these are all **Events**. Events which occur in the environment or were preprogrammed in the camera may be used as **Triggers**. Triggers cause the device to react with **Responses**. The link between trigger and response is governed by **Event Rules**. Event rules become active or inactive based upon a weekly **Schedule**. Each event rule detects one specific trigger and may initiate multiple responses. An example rule would be for NVR to send e-mail to alert the supervisor (**Response 1**) and trigger alarm (**Response 2**) when motion detection from camera is triggered (**Trigger**) during the event handling active period (**Schedule**).

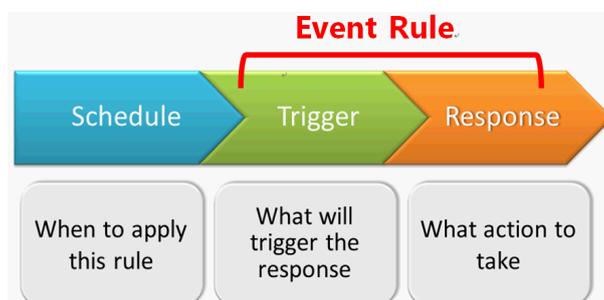


How Does NVR Handle Events

In OneSecure, each device can be involved in several event rules. As different device models possess various capabilities, the supported event trigger types would vary. For example, a PIR built-in camera can execute a PIR-triggered event rule, while this option is not provided to other models without this feature; similarly, the supported response types would vary by device models, like Goto-preset behavior can only be executed by PTZ devices. The below chart shows NVR server supported **Trigger** types and **Response** types. Once a device is added to NVR server, the server would create empty rules with compatible trigger types for you to configure.


Trigger Type	Response Type
Video Motion Detection	Focus Channel in Live View
Digital Input	Make Device Pan/Tilt/Zoom
PIR Detection	Audio Alert
Video Loss	Trigger DO Device
Video Recovery	Execute URL Commands
Network Loss	Upload Snapshots to FTP
Network Recovery	Email Notifications/ Snapshots

How to Edit an Event Rule

1. Go to **Setup** page → **Event** tab. All the editable event rules are listed in the device ID order.
2. Select a device from the **Device List** on the left. Based on the trigger types this device supports, the corresponding events rules are listed accordingly on the right. In this example, this selected camera model supports three motion detection regions, and hence three MD trigger event rules are available.


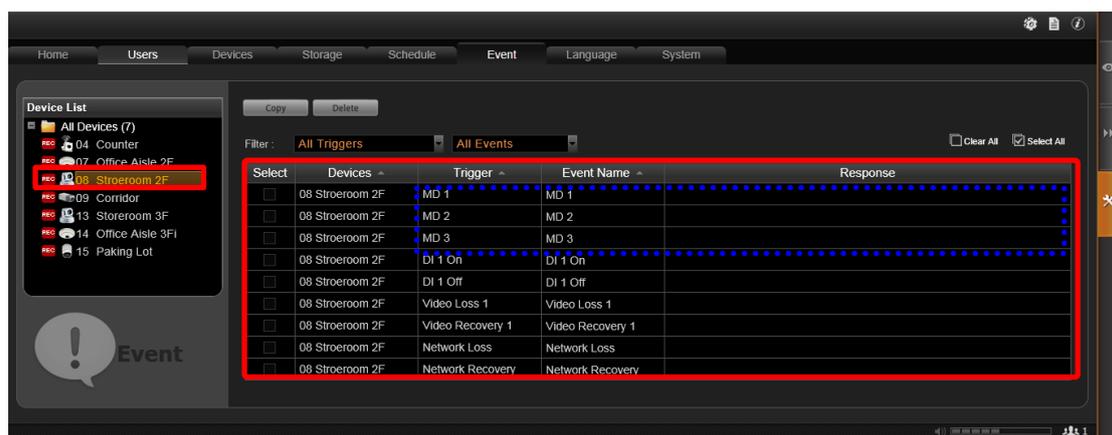





3. Highlight the rule you wish to edit. Click in the **“Event Name”** column to edit the event name, and then double-click the **“Response”** column to edit the response action.

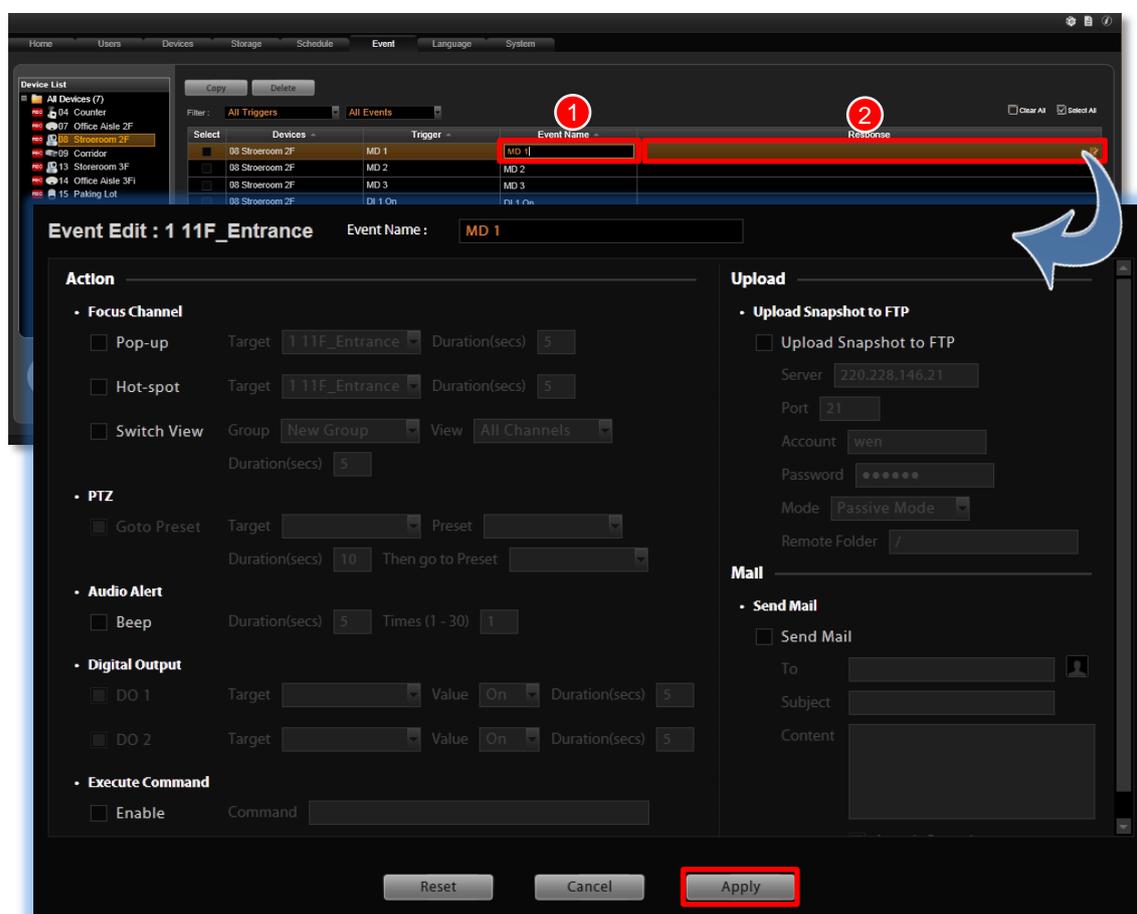

OneSecure Video Management Software Administrator Manual V3.0.09

You can enable multiple responses by first checking the box(es) to enable the items:

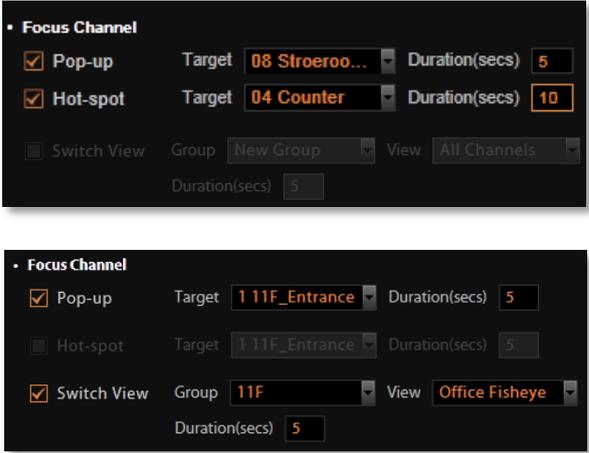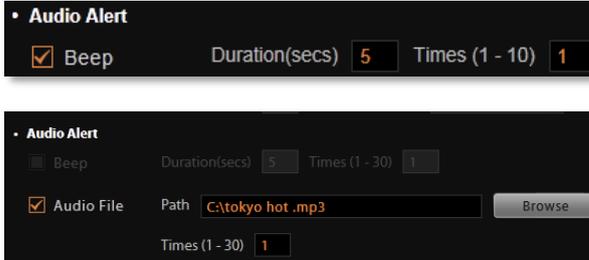Action Items	Function Description
	<p>This kind of action will focus your attention on the channel when triggered.</p> <p>Pop-up: Brings up event pop-up instant playback window of selected channel upon trigger. You may also define the display duration of video on the window.</p> <p>Hot-spot: Displays video in Hot-Spot window (red flashing frame) upon event. You may also define display duration of video on the Hot-spot window.</p> <p>Switch View: The current Live View will be switched to another one for a while. To enable this option, you will need to customize and save Views on Live View screen first. You may also define duration of the temporary View. Only Public Views are selectable for Switch View event rule.</p> <p>Hot-spot and Switch View responses cannot be executed at the same time.</p>
	<p>Upon being triggered, specific camera can make PTZ movements like going to specific PTZ presets as responses. You may set both the start / end point and the duration. This action is only available when you have set the preset points.</p>
	<p>Makes NVR play beep sound or an audio file for a number of repetitions.</p> <p>On OneSecure Workstation client computer, you can upload a WAV file or an MP3 file as the alert sound, and set how many times this audio file is played when the event occurs. (This NVR server has to be already on Server Site list, refer to G. Server Name/Server Sites List on page 29 for how to save a server site). Please note that Beep and Audio file responses cannot be executed at the</p>

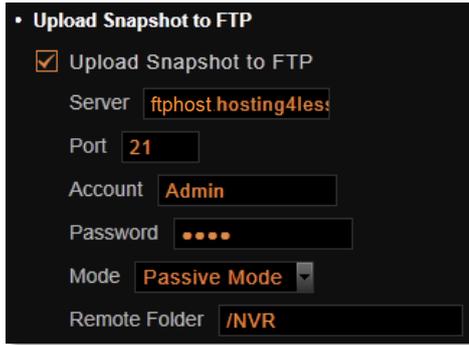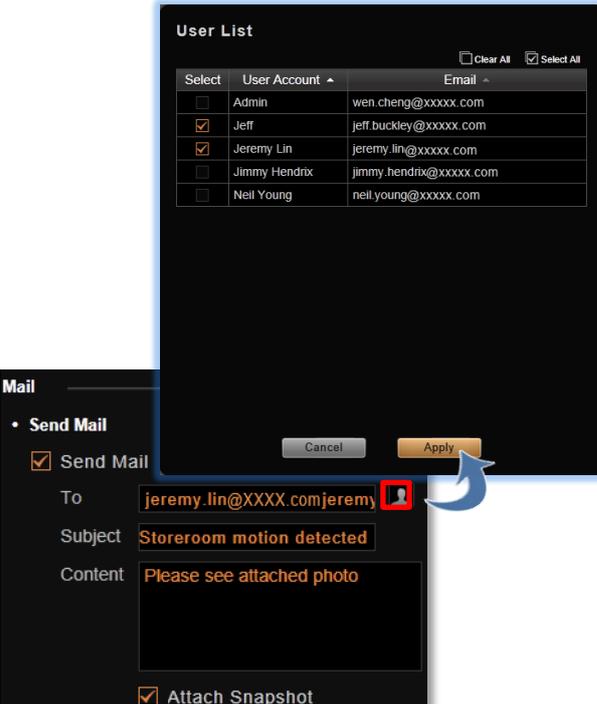 <p>• Digital Output</p> <p><input checked="" type="checkbox"/> DO 1 Target: 04 Counter Value: On Duration(secs): 5</p> <p><input checked="" type="checkbox"/> DO 2 Target: 07 Office Ai... Value: Off Duration(secs): 5</p>	<p>Set the DO to become ON or OFF upon trigger, only the devices supporting DO functions can be the target devices.</p>																		
 <p>• Execute Command</p> <p><input checked="" type="checkbox"/> Enable Command: C:\Program Files\Skype\Phone\Skype.exe</p>	<p>Enable NVR to execute a certain command upon this event. You can use it to integrate NVR's event handling with other programs. Enter the path of the command to be executed upon event.</p>																		
 <p>• Upload Snapshot to FTP</p> <p><input checked="" type="checkbox"/> Upload Snapshot to FTP</p> <p>Server: ftphost hosting4les</p> <p>Port: 21</p> <p>Account: Admin</p> <p>Password:</p> <p>Mode: Passive Mode</p> <p>Remote Folder: /NVR</p>	<p>Enable NVR to upload snapshots to a FTP site upon this event. The default FTP settings can be set in advance in Setup page→System tab→Settings → FTP Settings. You may set another FTP destination here for this single event. Please also make sure the FTP server setting is correct and the folder access rights are properly configured.</p>																		
 <p>User List</p> <table border="1"> <thead> <tr> <th>Select</th> <th>User Account</th> <th>Email</th> </tr> </thead> <tbody> <tr> <td><input type="checkbox"/></td> <td>Admin</td> <td>wen.cheng@xxxxx.com</td> </tr> <tr> <td><input checked="" type="checkbox"/></td> <td>Jeff</td> <td>jeff.buckley@xxxxx.com</td> </tr> <tr> <td><input checked="" type="checkbox"/></td> <td>Jeremy Lin</td> <td>jeremy.lin@xxxxx.com</td> </tr> <tr> <td><input type="checkbox"/></td> <td>Jimmy Hendrix</td> <td>jimmy.hendrix@xxxxx.com</td> </tr> <tr> <td><input type="checkbox"/></td> <td>Neil Young</td> <td>neil.young@xxxxx.com</td> </tr> </tbody> </table> <p>Mail</p> <p>• Send Mail</p> <p><input checked="" type="checkbox"/> Send Mail</p> <p>To: jeremy.lin@XXXXX.com</p> <p>Subject: Storeroom motion detected</p> <p>Content: Please see attached photo</p> <p><input checked="" type="checkbox"/> Attach Snapshot</p>	Select	User Account	Email	<input type="checkbox"/>	Admin	wen.cheng@xxxxx.com	<input checked="" type="checkbox"/>	Jeff	jeff.buckley@xxxxx.com	<input checked="" type="checkbox"/>	Jeremy Lin	jeremy.lin@xxxxx.com	<input type="checkbox"/>	Jimmy Hendrix	jimmy.hendrix@xxxxx.com	<input type="checkbox"/>	Neil Young	neil.young@xxxxx.com	<p>Enable NVR to send e-mail notification via SMTP server. The default SMTP and sender's e-mail settings can be set in advance in Setup page → System tab → Settings → E-mail & SMTP Settings.</p> <ol style="list-style-type: none"> 1. Type one or more recipients' e-mail addresses in "To" column (if more than one, please separate them by ";" symbol) or click the  icon to select recipients from existing NVR User list. The E-mail address should be set in advance (in Setup page→Users tab→Users) for an NVR User so that it can be selected in this list. 2. Edit the e-mail subject and content. 3. Choose to attach a snapshot or not. If event trigger type is Video Recovery or Network Recovery, this function is disabled.
Select	User Account	Email																	
<input type="checkbox"/>	Admin	wen.cheng@xxxxx.com																	
<input checked="" type="checkbox"/>	Jeff	jeff.buckley@xxxxx.com																	
<input checked="" type="checkbox"/>	Jeremy Lin	jeremy.lin@xxxxx.com																	
<input type="checkbox"/>	Jimmy Hendrix	jimmy.hendrix@xxxxx.com																	
<input type="checkbox"/>	Neil Young	neil.young@xxxxx.com																	

4. After configuring the actions, click "Apply" to save this response.
5. Go to **Setup** page→**Schedule** tab and set the **Event Handling** schedule for this device. Event responses will only be triggered when the trigger time falls within either the **Event Handling** recording or the **Event Handling with Schedule** recording period.

OneSecure Video Management Software Administrator Manual V3.0.09

- To check if this rule is successfully set, please make sure you have properly configured the involved (1) triggering side settings like **Motion Detection Regions** or **DI**, (2) response side settings like **PTZ Preset Points**, **SMTP Server** and **E-mail Recipients**, **FTP Server** or **DO**. Then set the **Event Handling** schedule for current time and trigger this rule.

Note


- Sending e-mail, Uploading snapshot to FTP and Executing command** actions are executed on the server computer, not from the client computer.
- There must be video stream from device when the event happens for event responses to work.
- Internet Explorer browser may become unstable due to frequent pop-up instant playback windows, please avoid setting the **“Pop-up”** action as the event rule for a device which is too frequently triggered. The next server version v3.1 will improve the program efficiency with Internet Explorer browser.

Manage the Event Rules

Event List panel gives an overview on event rules set on the NVR server. Go to **Setup** page → **Event** tab → select **All Devices** on the left. As the entire available rules of all devices are listed here, you may want to sort out some of them from the long list.

View the Event Rules

To sort by **Device** name, **Trigger** type or **Event Name**, click the titles to list the entries in ascending or descending alphabetic order.

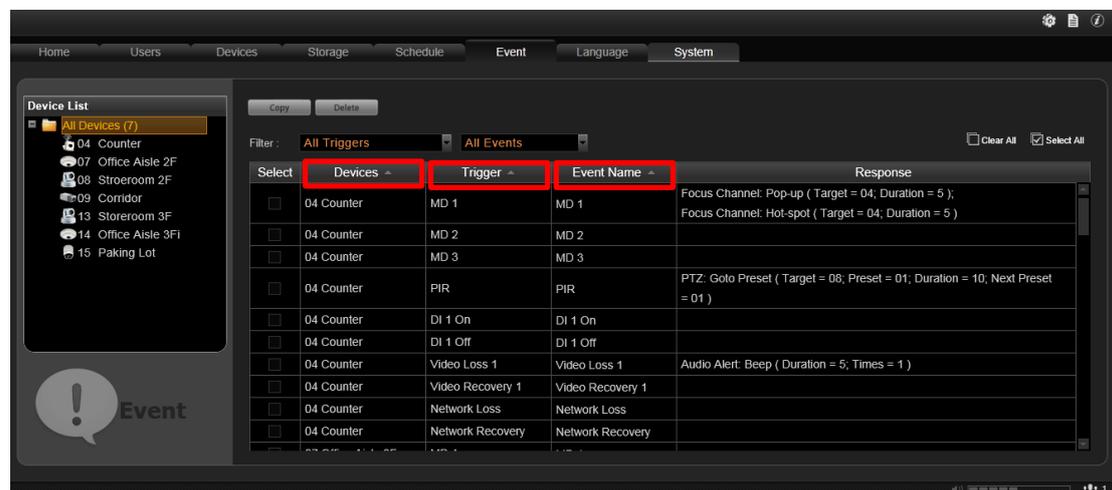


To filter out the configured events, select from the **“All Triggers”** dropdown list; or filter by the event type by selecting from the **“All Events”** dropdown list.

OneSecure Video Management Software Administrator Manual V3.0.09




Delete the Event Rules

On **Event List**, select the rules you wish to delete, and then click “**Delete**” to clear this rule.

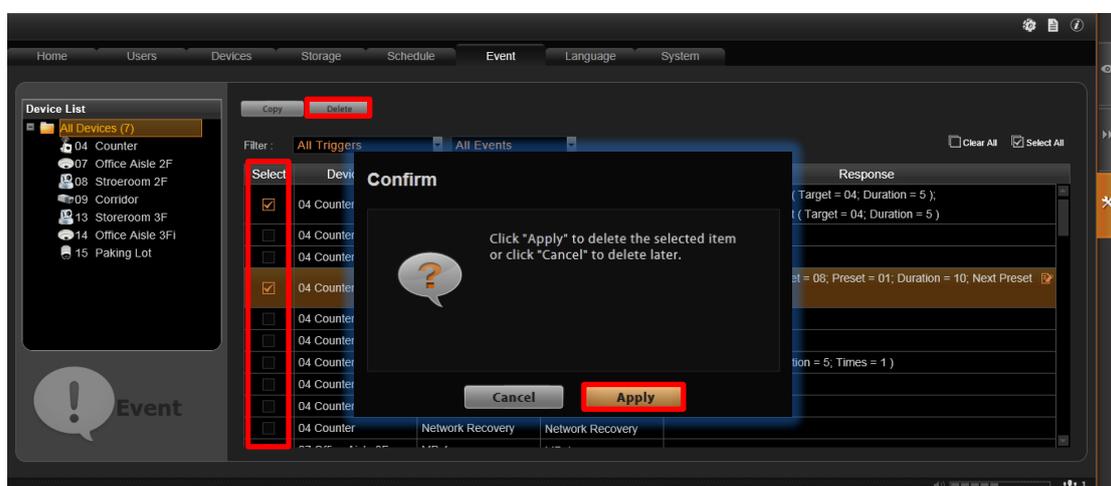

How to Setup SMTP Settings for Event Rules

OneSecure supports e-mail notification for **Event Handling** sent through an SMTP server. You can specify the e-mail and server settings here.

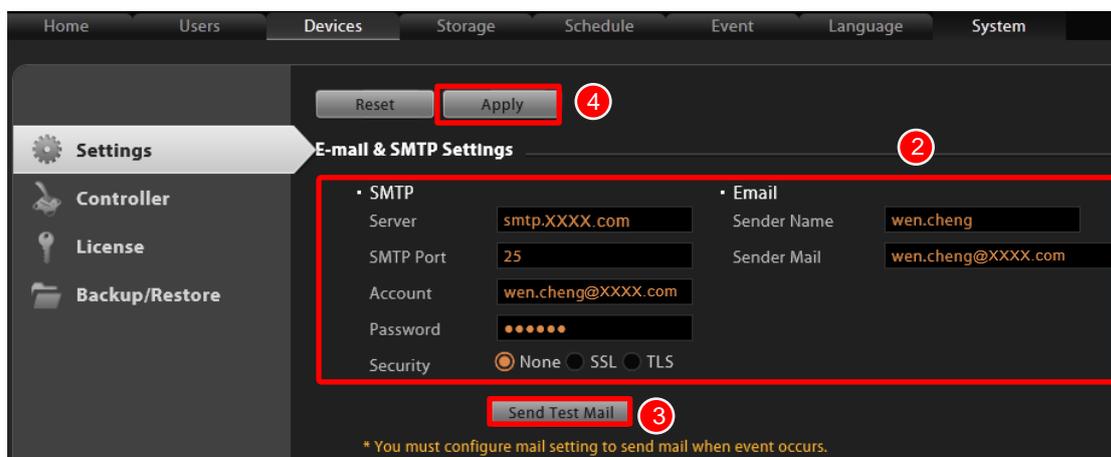

1. Go to **Setup** page→**System** tab→**Settings** → **E-mail& SMTP Settings**.
2. Fill in **each** of the following fields.

Field Name	Description
Server	Input the sender's SMTP server address. Only alphabets, numbers, and the symbols (.), (_), (-) are valid.
SMTP Port	Set the SMTP port, allowed value is from 1~65535, default is 25 .
Account	Input the name of the SMTP server account. Only alphabets, numbers, and the symbols (@), (.), (_), (-) are valid.
Password	Input the password of the SMTP server account. Only alphabets and numbers are valid.
Security	Certain webmail providers provide the SSL/TLS-encrypted SMTP connections to secure your data when sending/receiving e-mails. Please check if the SMTP connection settings you use (especially the SMTP Port) now require to enable either SSL or TLS.
Sender Name	Input the name or title of the sender. You may input a name different from the account name.
Sender Mail	Input the sender's e-mail address, which should be the same account you set for SMTP server.


3. As all necessary information is filled in, click **"Send Test Mail"** to try sending an e-mail according to your settings, and then log in to your SMTP server to check incoming e-mails. If the test mail is sent successfully, NVR server is ready to send out e-mails.
4. As the settings are confirmed, click **"Apply"** to save.

How to Setup FTP Settings for Event Rules

OneSecure supports uploading snapshots to FTP servers for Event Handling.

You can specify the e-mail and server settings here.

1. Go to **Setup** page → **System** tab → **Settings** → **FTP Settings**.

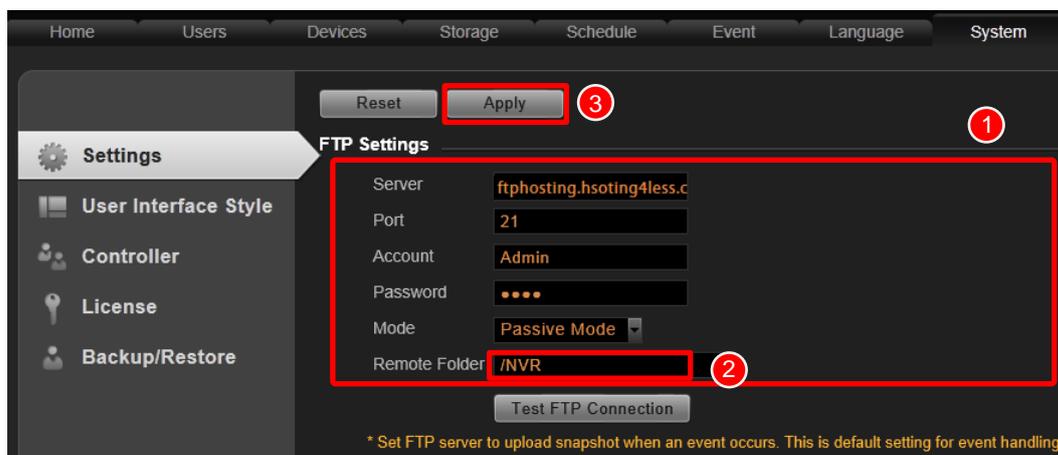

OneSecure Video Management Software Administrator Manual V3.0.09

2. Fill in **each** of the following fields.


Field Name	Description
Server	Input the FTP server address. Only alphabets, numbers, and the symbols (.), (_), (-) are valid
Port	Set the FTP port, allowed value is from 1~65535, default is 21 .
Account	Input the name of the FTP server account. Only alphabets, numbers, and the symbols (@), (.), (_), (-) are valid.
Password	Input the password of the FTP server account. Only alphabets and numbers are valid.
Mode	The FTP works in two very different manners, Active mode and Passive mode. If your FTP server is behind the firewall or a NAT router, you have to use " Passive " mode.
Remote Folder	Input the upload path of the file. Default will be "/" to represent the root folder.

3. As all necessary information is filled in, click "**Test FTP Connection**" to test the connection. If NVR server pops up a "Testing **FTP connection was successful**" message, NVR server is ready to upload to this FTP.
4. As the settings are confirmed, click "**Apply**" to save. The FTP settings here will be default for every event rule.

System Log


The activities performed by logged-in Users are recorded on server as **System Log**. With the access permission, a user may view, search and export this record for analysis or investigation. This section will provide the instructions on how to read and search data in the system log.

“**System Log**”  is one of the resident buttons on top of NVR server user interface, click it to enter search window.

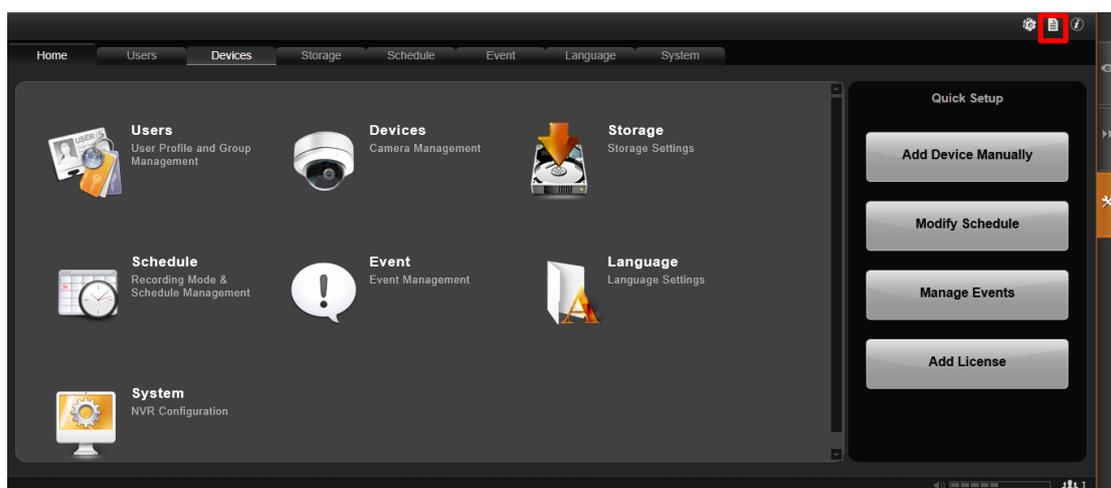


Define Search Time

You need to first define the time of the logs you would like to search for. On **Search Time** bar, define the date and time. Default is your current client time.

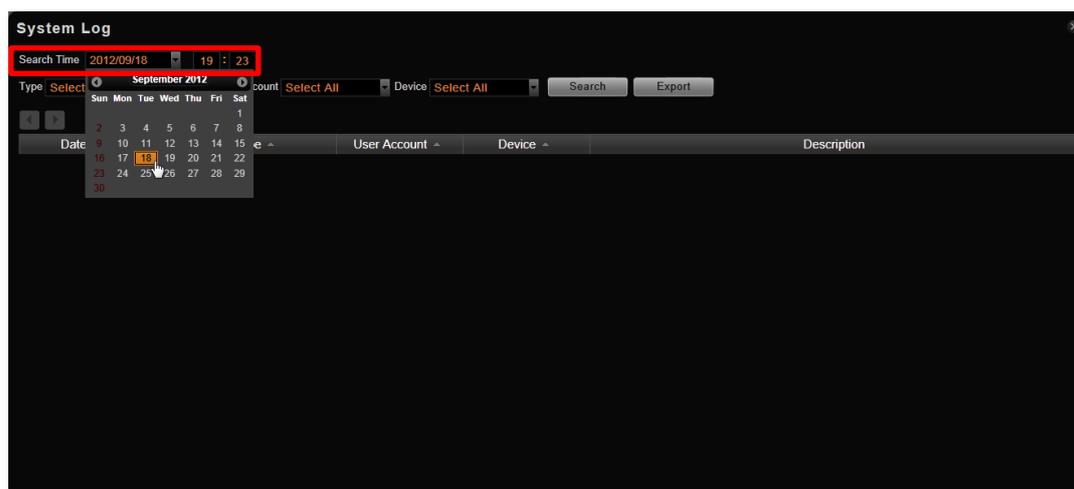


Choose Log Type

You may filter the logs by **Type**, **User Account**, and **Device** by selecting from dropdown list, then click **“Search”**. By default, all types are selected.

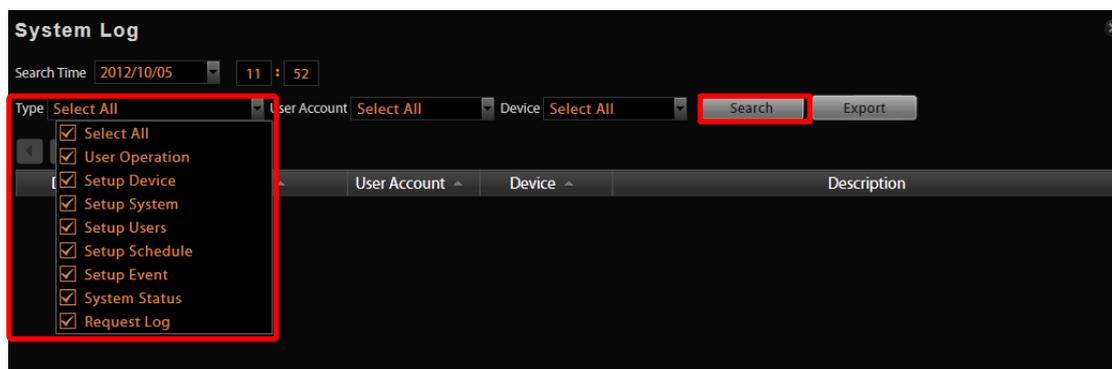

Read the Log

The search result will show 1000 records before and after your query time. You may click the pagination buttons to navigate earlier or later records. If there is an icon on the right top corner of an entry, click it to view the full description content.

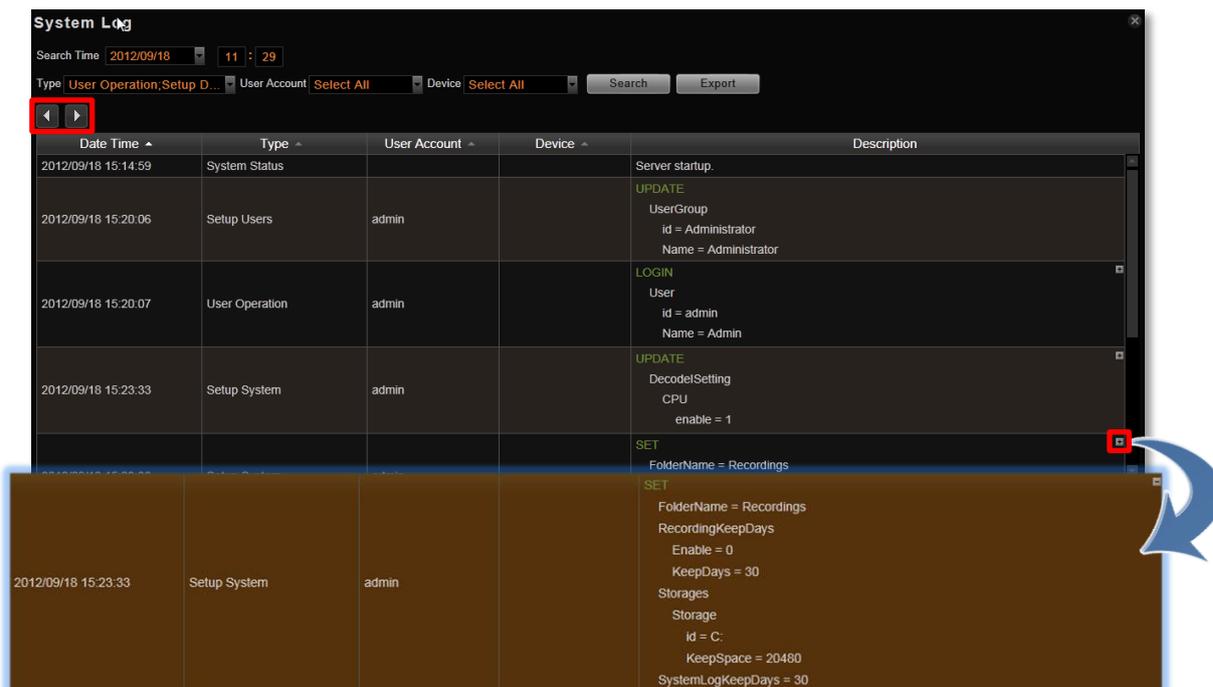

A log entry contains several kinds of information including **Date Time**, **Type**, **User Account**, **Device** and **Description**. Check **Type** and **Description** fields to know what the user has done or what happened to the whole system. In **Type** field shows what major functions user engaged in, in **Description** field narrates how the change was done (in green font color, uppercase) and the result (in white font color).

OneSecure Video Management Software Administrator Manual V3.0.09

Date Time ^	Type ^	User Name ^	Device ^	Description
2012/05/09 15:15:28	Setup System	Admin		SET UIStyle MainForm Alignment = left

The following user behaviors are recorded in NVR server:

Type	Description
User Operation	Login, Logout, Manual Record, Trigger DO
Setup System	Recording Configure, Storage System Setting
Setup Users	User – Add, Delete, Modify User Groups – Add, Delete, Modify
Setup Schedule	Modify
Setup Event	Modify
System Status	Server start up, disk is full, disk is not found, disk is available
Request Log	Time, source ip address, /SYS/SystemMgmt/xxxxx ,200

Note

If the pagination button appears to be disabled, that means no more records found on NVR server. By default, the server will keep the logs for 30 days. If you wish to adjust the period, please go to **Setup** page → **Storage** tab, in **Recording Settings** section, key in the value in this field:

Export the Log

Click “**Export**” button to export the log as .csv file. You can specify the time duration, engaged User Account and devices of the logs, and click “**Apply**”.

System Log

Search Time :

Type User Account Device

Export System Log

Time Duration : ~ :

Type

User Account


Device

Storage Management

This section describes how to manage storage space in NVR. Please note that this section only deals with the overall storage rules, and not storage of individual channels.

Please note that as NVR continuously writes and deletes file from the disk drive, using a removable disk may risk losing recording when device is removed while being accessed.

Go to **Setup** page→**Storage** tab.

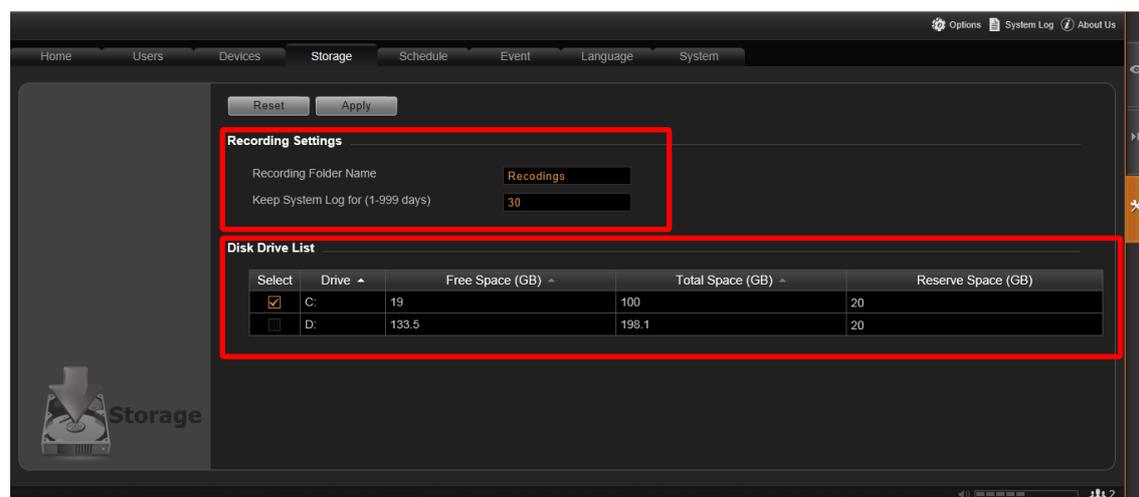

Change Recordings Folder Name

In “**Recording Settings**” section, you may change the name of video recordings folder. The video files are saved in a folder named “**Recordings**” under hard drive root directory. You may change the name here.

Set System Log Lifecycle

System Log is the record of User activities and events that took place on the server. In “**Recording Settings**” section, you may set how long this record is kept on the server. Default is **30** days.

Set Hard Drives for the Recorded Files Deletion Rule

1. On **Disk Drive List** displays the detected hard drives in your server computer. You may select the storage location of the recording files and set the deletion threshold. By default, NVR server will select **C** drive as storage location.

Select	Drive ^	Free Space (GB) ^	Total Space (GB) ^	Reserve Space (GB)
<input checked="" type="checkbox"/>	C:	60.4	100	30
<input checked="" type="checkbox"/>	D:	136.6	198.1	20

OneSecure Video Management Software Administrator Manual V3.0.09

2. After selecting the disk drive, please set the deletion rule. There are two ways to delete recordings, when both are active, NVR server will start to delete old files when any of the criteria below is met:
 - (1) Keep the recordings for a number of days, and delete files older than this period by 1 GB at a time. Please go to **Setup** page → **Schedule** tab to set it.
 - (2) Keep recordings until the disk is almost full, and then delete the earliest recording files by 1 GB at a time. NVR server will delete old files when available space is lower than **Reserve Space** you set in **Disk Drive List**.

When setting the deletion rule, please input a number in **Reserve Space** which should be smaller than your current **Free Space**.

Item	Description
Free Space (GB)	Currently available space of the chosen disk drive.
Total Space (GB)	The total volume of the chosen disk drive.
Reserve Space (GB)	This is the amount of space to be reserved for the whole computer system. Once the free space is used up as to reach the limit of reserve space, the system will delete the earliest recordings. <u>The “Reserve Space” should always be smaller than “Free Space”</u>

3. When finish settings, click “**Apply**”.


Manage User Groups/ Users

The User Groups/Users page allows you to (1) manage the access permissions of different user groups, (2) add users to or delete them from user groups, (3) and assign users to specific user group. This chapter will take you through these settings.

Access Permissions

In OneSecure, the access permissions are managed by **User Groups**. **User Groups** defines what functions and devices are allowed for each user. Different **User Groups** will have different access rights in terms of permitted operations with each device like **Live View**, **Playback**, and NVR server management operations like **Device Setup**, **Schedule Setup**, **Event Setup** and **System Setup**. For example, an Administrator User is allowed for all the operations in NVR, while a standard User may only be permitted to do **Live View** and **Playback** with limited devices.

The chart below displays different employees as NVR Users and their access rights in this system:

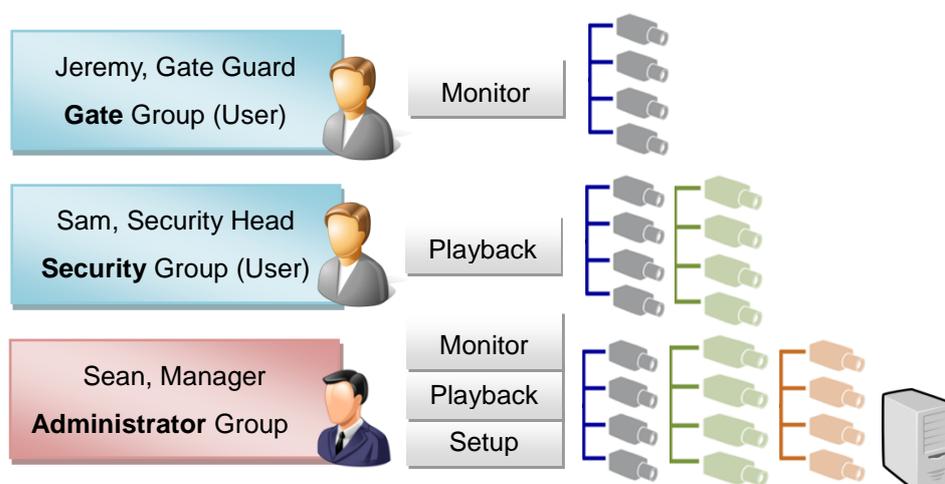

Overview

Go to **Setup** page → **Users** tab. There are two sections to manage User Groups and Users individually.

User Groups: To setup user groups and its permissions for device and functionalities.

Users: To manage user accounts and configure user information.

OneSecure has integrated **Microsoft Active Directory®** service to provide network administrators a more convenient choice for user management. Active Directory is a directory service built in Microsoft Server products to manage user identities and privileges within the

OneSecure Video Management Software Administrator Manual V3.0.09

domain network. As OneSecure runs on a server computer logged on to the same domain with Active Directory server, you can import a user account or a group from those concurrently existing in Active Directory into NVR server. In this way, the user identification is processed by Active Directory centrally; there is no need for NVR administrator to maintain user accounts as long as they are under management of Active Directory service.

User Groups

You can specify access permissions to each device for a whole user group. This user grouping can save you significant amount of works if you have multiple users performing similar tasks and acting as similar roles.

There are already two default User groups


- **Administrator:** With full permissions in the NVR.
- **User:** With the permissions to watch all camera live view and playback.

You can create a new user group on NVR server or import an existing group from the Active Directory database within your domain.

1. Select  **User Groups**, click **Add** and then choose the group type:


- Add a new user group:

Insert **ID**, group **Name** and group **Description**, your input in the **Name** field will be the name of this User group. Click **Apply** to finish.

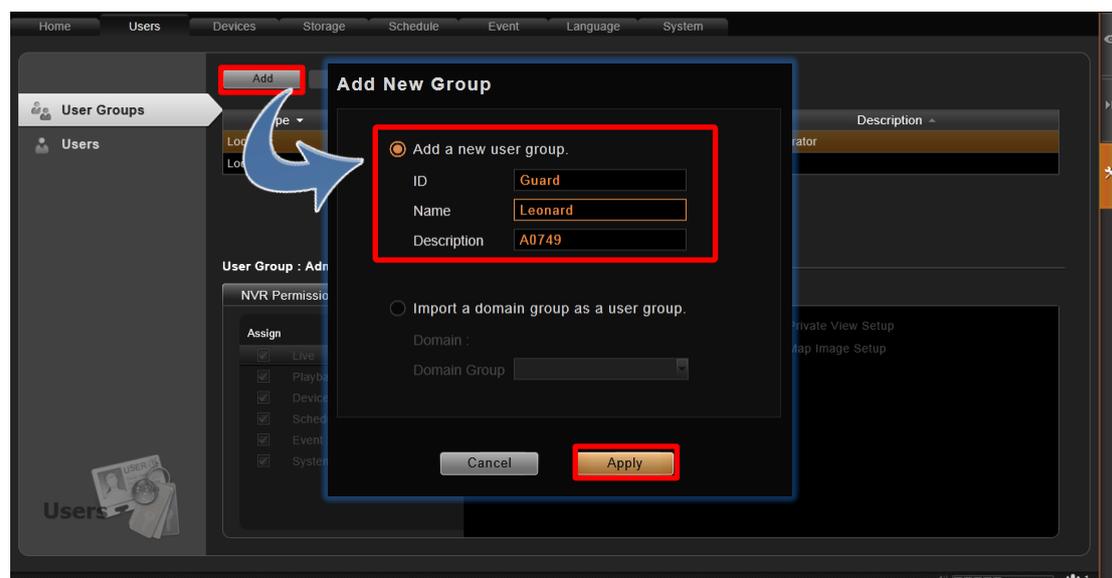

- Import a domain group as a User group:

Choose an existing user group from your domain, and click **Apply** to finish.

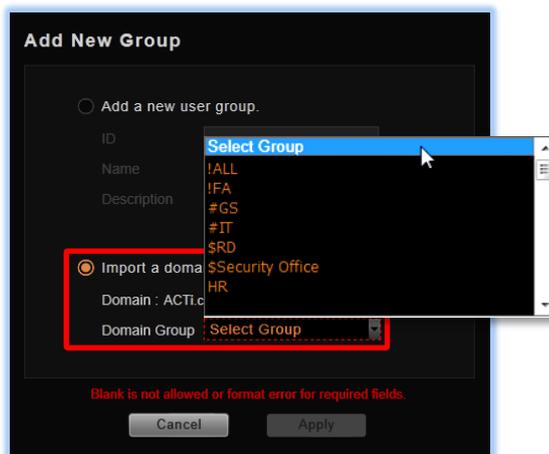


The domain users within that group will all be added to NVR server at the same time. To view the whole users within this group, please select  and enable the **“Show users in domain groups.”** The account information of these domain users, unlike those user accounts you add one by one to NVR server, are not editable on Users page.


<input checked="" type="checkbox"/> Show users in domain groups.					
User Type	User Account	User Name	Password	Email	Group Name
Customized User	admin	Admin	*****		Administrator
Domain User	Deckard Cain	Deckard Cain		Deckard.Cai@xxxxx.com	\$Security Office
Domain User	John Bourne	John Bourne		John.Bourne@xxxxx.com	\$Security Office
Domain User	Steve Lin	Steve Lin		Steve.Lin@xxxxx.com	\$Security Office
Domain User	Joyce Holiday	Joyce Holiday		Joyce.Holiday@xxxxx.com	General Service

Domain users added as a whole group


- Assign **NVR Permissions** for created group. This will define what functions this User group is allowed to access. By default, a new User group will initially be allowed to access only **Live View** page and **Playback** page, but without any permission to any device setting, so you will have to assign the device permissions later.

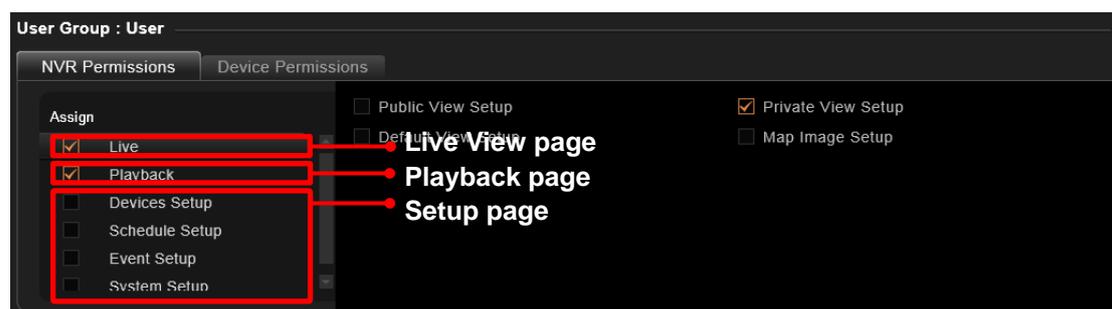

- Assign **Device Permissions** for created group. This will define which devices this User group is allowed to access. If this User group is allowed to access all newly-added devices, check **“New Device Default”** and edit the permissions, these default settings will be applied to any device added in the future.

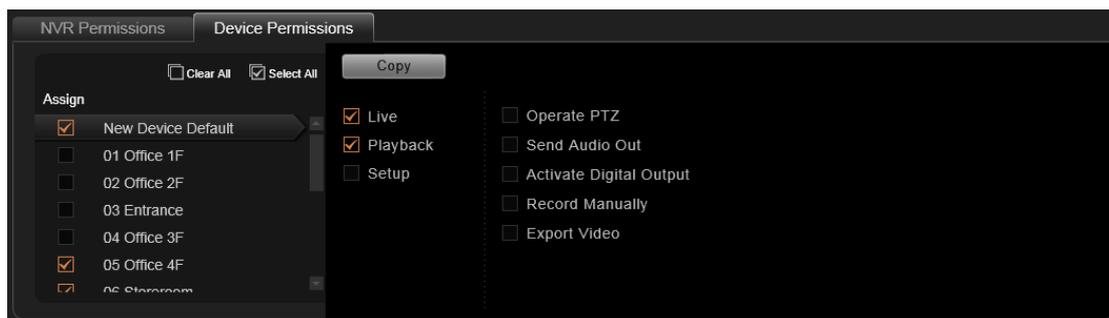

You may copy the **Device Permissions Settings** to other devices. Click **“Copy”** under **Device Permissions** tab to bring up the target device menu, check the target devices, and click **“Apply”**.

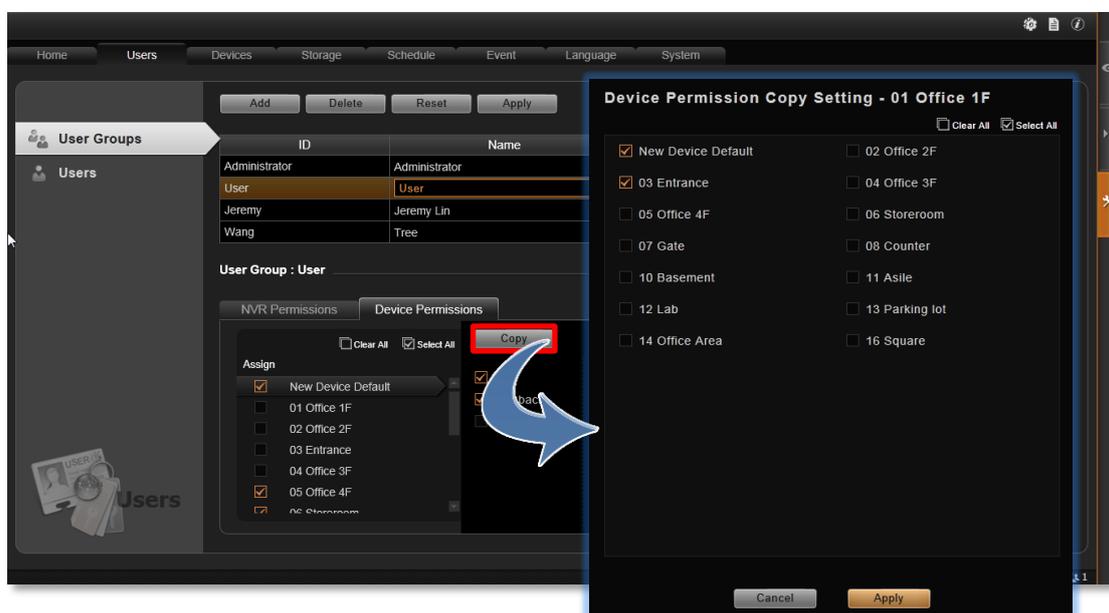


Click **“Apply”** on the top to save the settings.

Add Users

To create a user account with on NVR server.

1. Select  **Users**, and click **Add** button.
2. Select **User Type** as **Customized User** or **Domain User**.
 - **Customized User**: an account created and managed on NVR server only. You will input an account name, its password and e-mail address for this User.
 - **Domain User**: an account that already exists in Active Directory database within the domain. Since this is an existing account in your domain, you will have to select this account from **Account** dropdown list.
3. Insert user account, name, password, and the account mail (For **Customized User**).
4. Assign this created user account to a specific user group.
5. After you click **“Apply”**, this new user will be added to the list on the top.

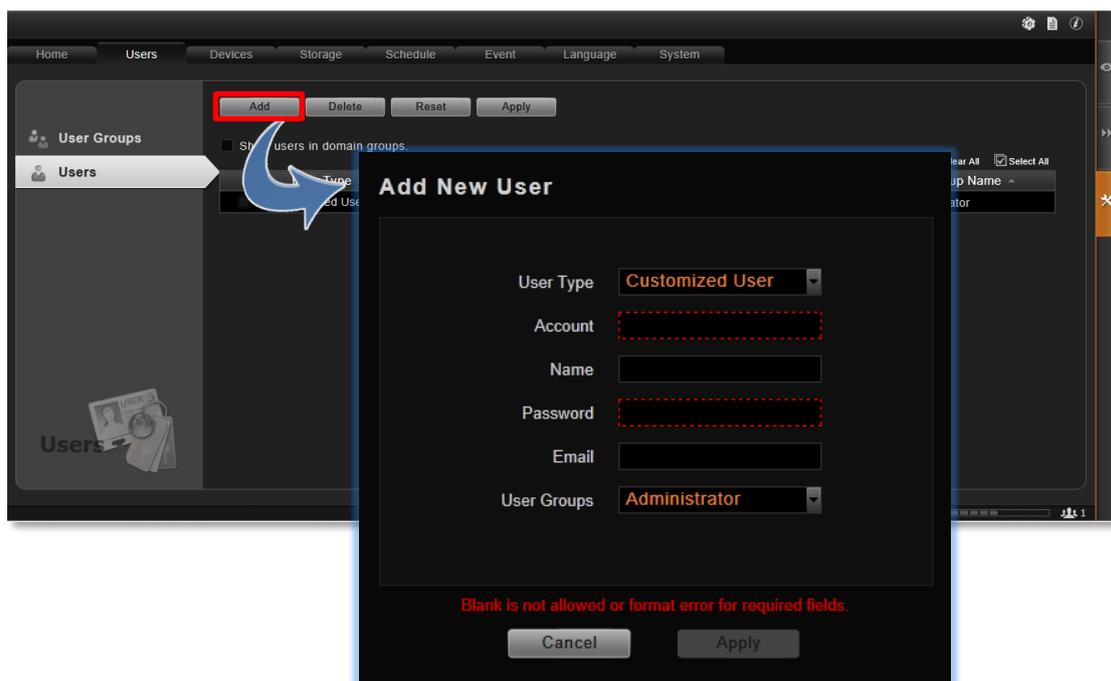

Note

NVR server provides a procedure to help Users who have forgotten the password retrieving the original information, which relies solely on the “e-mail address” authentication. It is strongly recommended that you input an e-mail address that this User has access to when you establish the User account. To update the e-mail address of an account, go to **Setup** page → **Users** tab → edit “**E-mail**” of an selected User account; the Users can also update the e-mail addresses themselves after logging in to NVR on **Live View** page → → **Update Profile**

Note

Account /Password Rules


1. **Account** and **Password** fields allow alphabets, numbers, and symbols except the following: `/ \ [] : ; | = , + * ? < > " ' " "`
2. In **Account** field, for alphabets, the input will be recognized as lowercase letters. Space is only allowed between characters; the space in the beginning or at the end will be deleted as it is saved.
3. The **Password** field is case-sensitive, and the space is allowed.

Note


Admin is the default user account and belongs to “**Administrator**” user group. Hence, the user **Admin** and the group **Administrator** cannot be deleted; it possesses full permissions to all devices and NVR settings.

Domain Users Management

As NVR server computer is logged on to a domain Active Directory, it can import a user account from Active Directory.

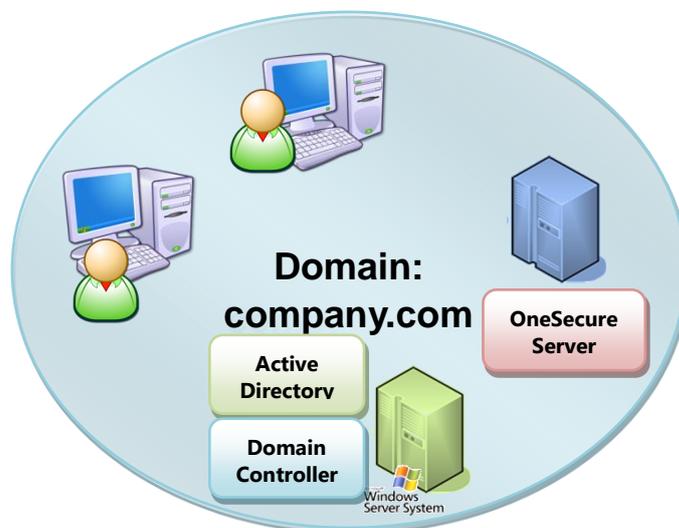

This type of User account is “Domain User”. Upon being added to NVR server, the User properties stored on Active Directory database including (1) account name (2) e-mail address will be imported to NVR server.

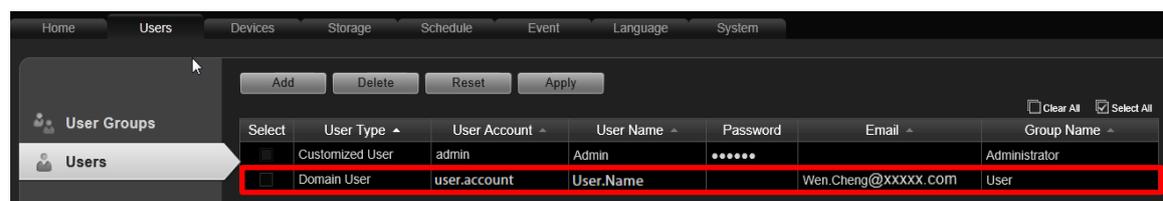

Whenever a domain User client tries to log in to NVR server, NVR server will first verify if this account exists in NVR server database, and then have Active Directory verify the user account and password.

As Active Directory owns the privilege to create, edit and delete domain users, **the Domain User's account and password are not editable through NVR user interface but via Active Directory Administrative Tool.**


Customize Views

After all devices are configured, you may start customizing the views for different users and purposes. This chapter will teach you how to add video source, arrange the channels and manage live view layouts.

In OneSecure system, a **View** refers to the layout where the live images of **Cameras** or **Maps** are placed in proper positions to suit the monitoring purpose. This is very similar to a camera group, which often consists of cameras in the same physical location. For example, a View named **11F Emap & Camera** may contain the 11F floor plan and the cameras actually placed on 11F.

On NVR Live View, a saved View not only remembers (1) layout style, (2) which channel to display which camera, (3) but the fisheye view mode (for fisheye cameras only).

Live View interface overview

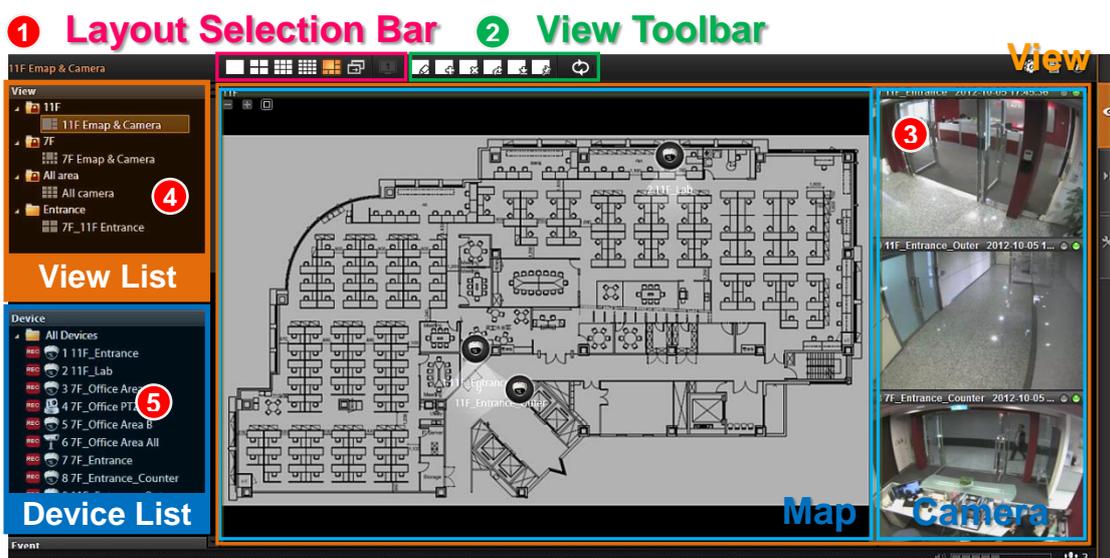

1. **Layout Selection Bar:** Provides 24 options for layout styles.
2. **View Toolbar:** Provides functions keys for editing.
3. **Channels:** Each channel window may display a camera view or a map. In edit mode, you can adjust the channel size at will.
4. **View List:** All the saved Views are shown here. On **Live View**, you can go to  → **View Manager** to group and manage these views (refer to Manage the Views on page 98).
5. **Device List:** In edit mode, drag camera from here to your desired channel.

Step 1: Create a New View

On **View Tool Bar**, click the **Create View** button  , input the **View Name**, add a **New Group** for this View and decide whether this group is to be **Public** or **Private**, and then click “**Apply**”.

- The views under **Private View Group**  are only available to the User who created them.
- The views under **Public View Group**  are open to every User.




Step 2: Enter Edit Mode


On **View Tool Bar**, click the **Edit View** button  , this view will turn into edit mode. In edit mode, you may add a video source to a channel, and adjust the channel size.

Step 3: Select a Layout


On **Layout Selection Bar**, click the **Expand** button  to find all provided layout styles. Select a layout that is perfect for your required channel number and ideal arrangement.

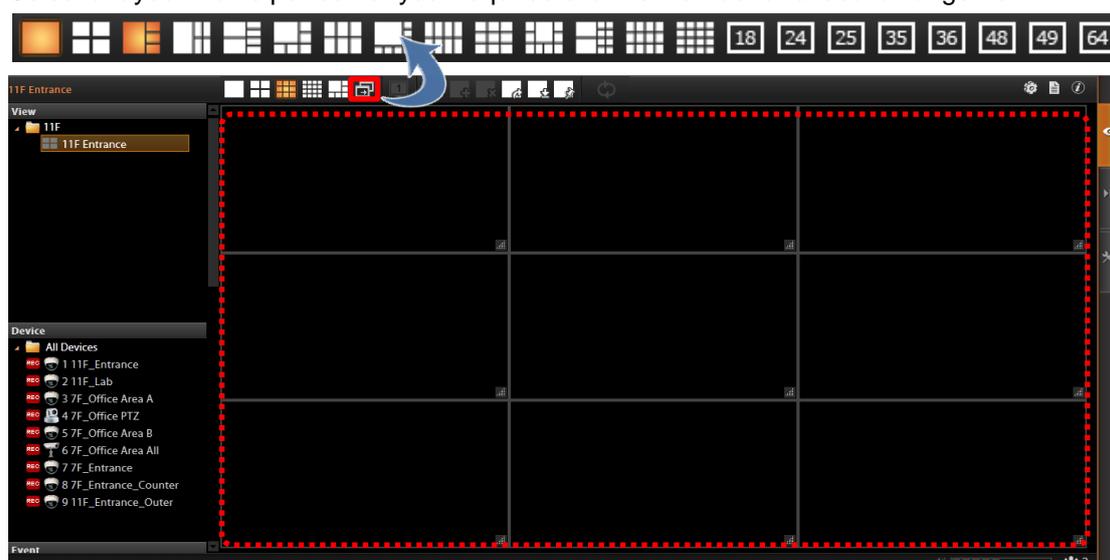


Step 4: Add Video Source

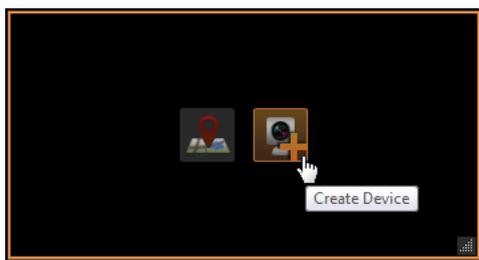

In edit mode, move the mouse over the channel and click . You may also directly pull a camera from the **Device** panel to your desired channel.

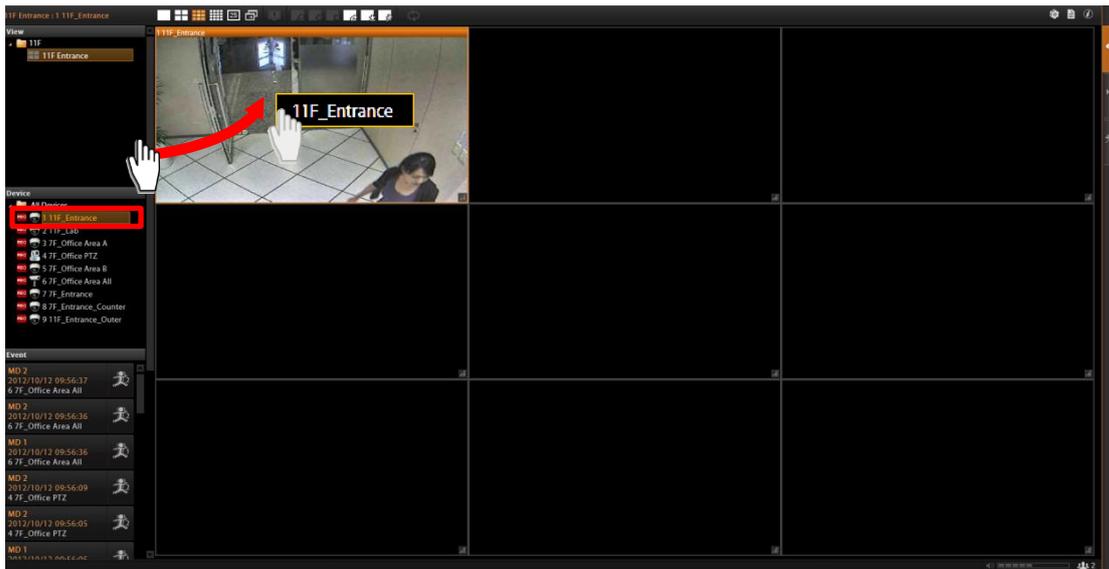


● **Remove the camera view:** right-click on the channel and select “Remove”.

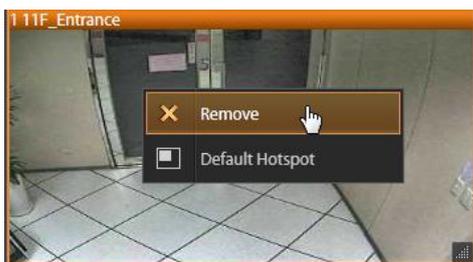


Step 5: Add a Map

By adding a map, you put a picture on the channel, where you may place camera icons to make it an “e-Map”.

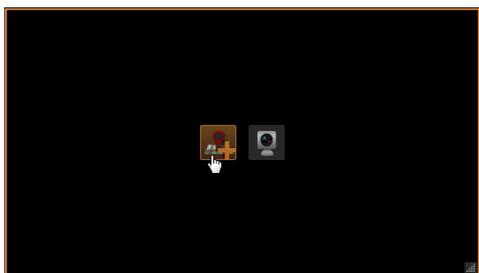


In edit mode, move the mouse over the channel and click  to upload a map. Please input the **Map Name**, select the image location (file format must be JPG) and click “**Apply**”.

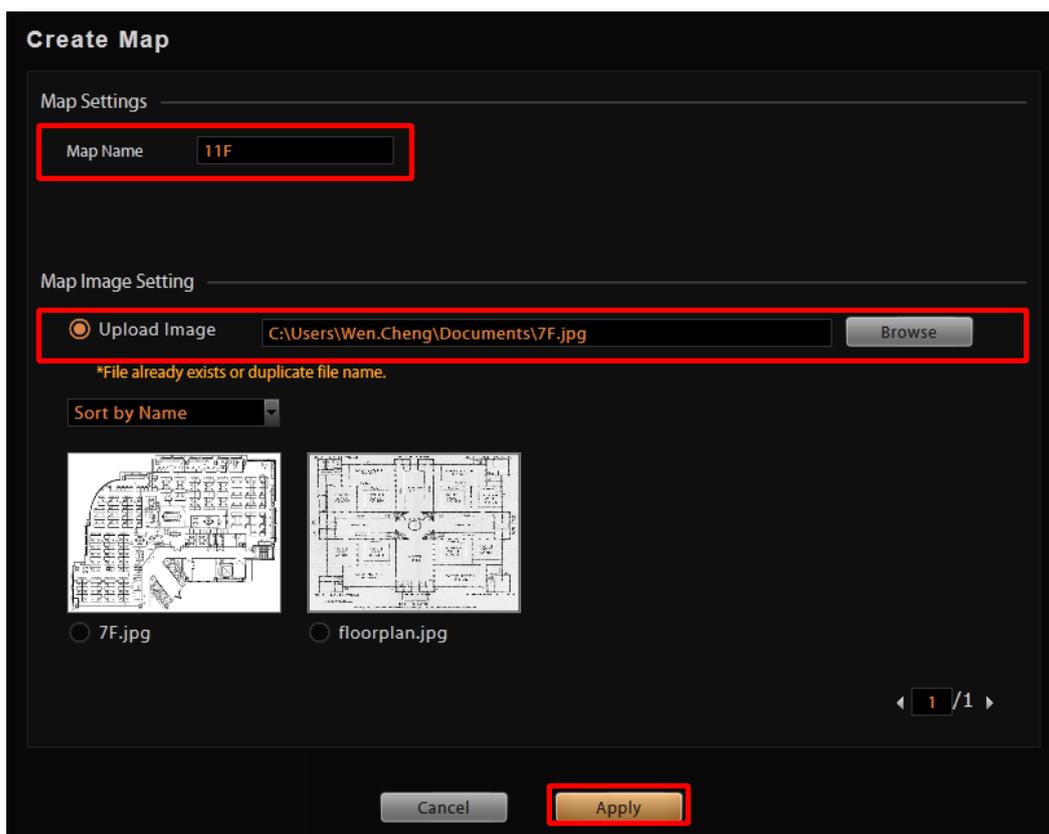


●Map brightness:

To change the map brightness, right-click on the map, select “Map Mask” and the brightness percentage level.

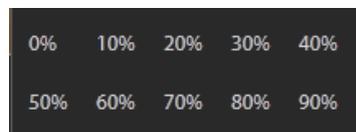

●Map size:

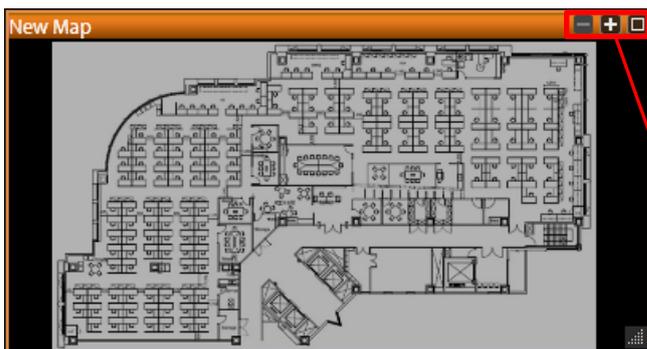

By default, the map will be displayed in its original size. Use the buttons on upper right to adjust the map size.

- Enlarge to fill channel height
- Original image size
- Zoom in
- Zoom out

●Edit map title:


The map title will be shown on channel title bar. In edit mode, right-click on a map channel and select “Edit Map Information”

●Remove the whole map:

Right-click on the map and select “Remove”.


●Manage maps:

All the uploaded images are managed under **Map Image Manager**. On **Live View** screen, you may go to  → **Map Image Manager** to view, upload or delete the maps.

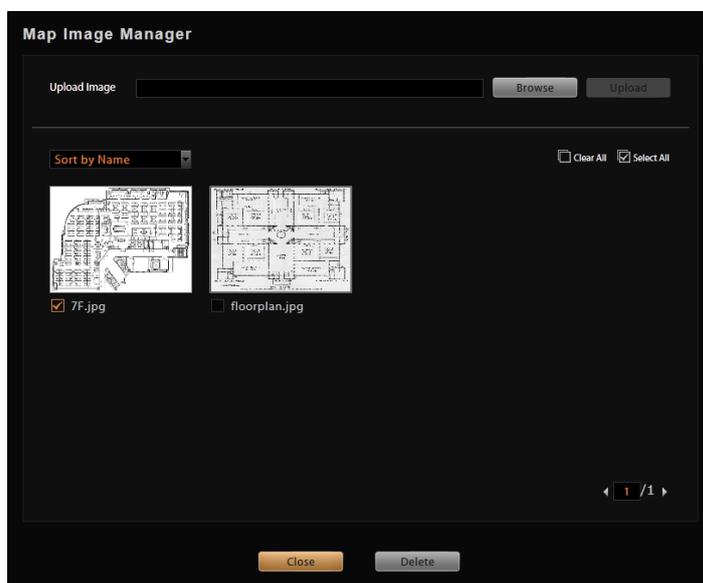

Step 6: Add Devices to the Map

Pull a device from **Device List** to the map.

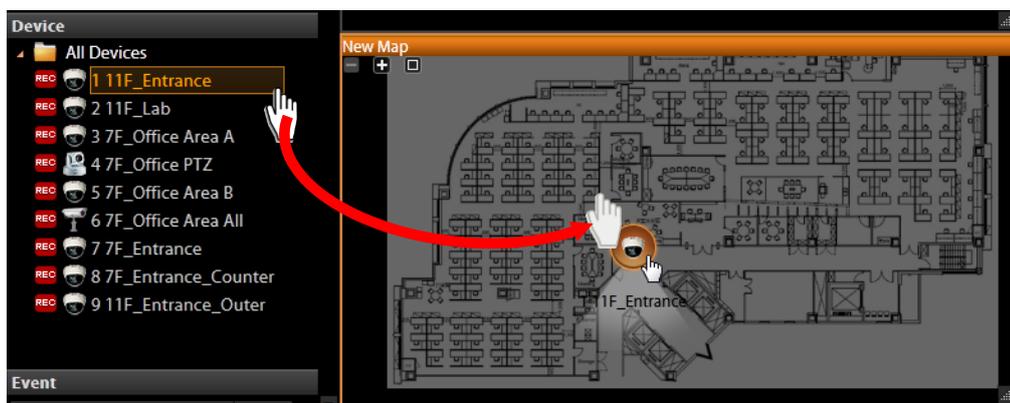

●To remove this device from map:

Click 

●To move this device:

Left-click on the device icon and drag.

●To turn the pointed direction:

Mouse over the viewing angle area, left-click on the clockwise arrow to turn the direction.




- To adjust precise pointed direction: Right-click on the device icon, select **“Pointed Direction”**.
- To adjust device’s viewing angle: Right-click on the device icon, select **“Vision Angle”**.

Step 7: Adjust the Channel Size & Layout


●Adjust the channel size:

Click  on right lower corner of the channel window, drag and then release.

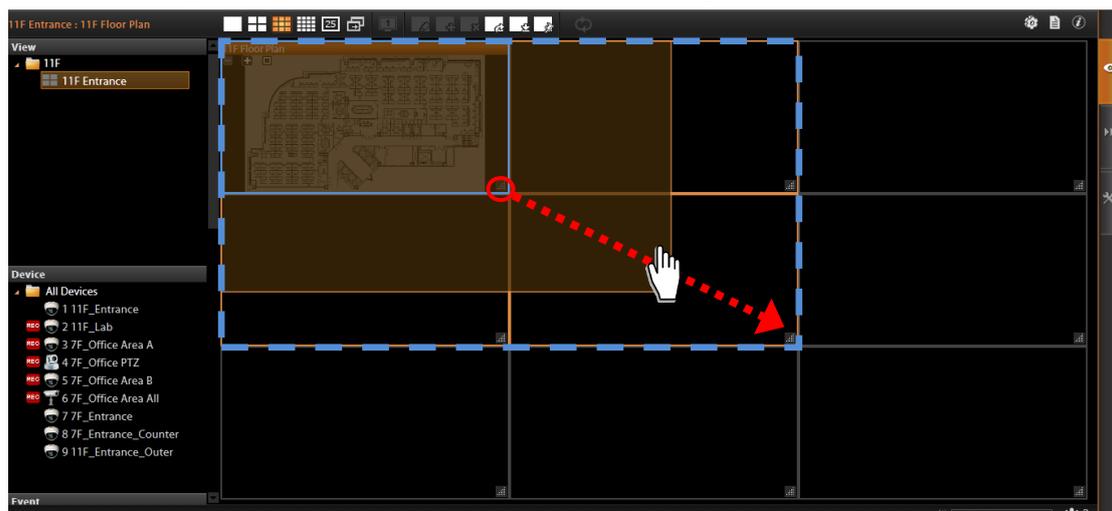

●Switch channel windows:

Click on a channel title until the cross arrow  appears, hold it to drag this device or map to your desired channel.

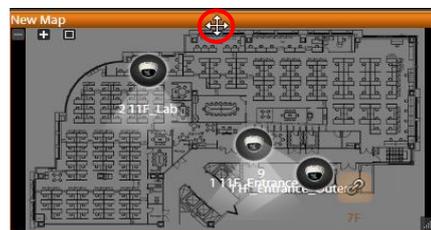

Step 8: Save the View

Click  on **View Tool Bar** to save it.

Step 9: Set Default View

To set a View as default, select it in the **View List** panel and then click  on **View Tool Bar**.
By next time you log in, you will directly enter this View.

Step 10: Set Default Hotspot Channel (Optional)

By system default, the global hotspot channel will always be the top left one. You can set any other channel on your live view screen to be the default hotspot channel. Right-click on the channel and select “Default Hotspot”  , then click  on **View Tool Bar** to save it.

Step 11: Set Fisheye Camera Mode


Define a view for a fisheye camera channel by selecting its mode and using ePTZ control. Please note that the maximum number of fisheye channels on the same View is 16.

1. On this channel, right-click to bring up channel menu, click “Fisheye Mode” and select one mode.




2. After the fisheye mode is selected, click the entire channel or a region of interest.
 - Use **PTZ Panel** controls to operate PTZ movements:

ePTZ Controls on PTZ Panel

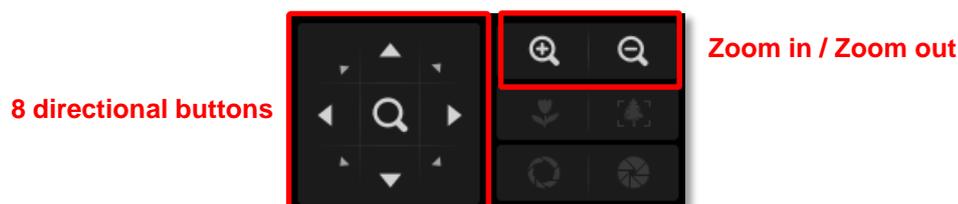

- Click the mouse anywhere on the view to pan/tilt, scroll the mouse wheel to zoom in/out.

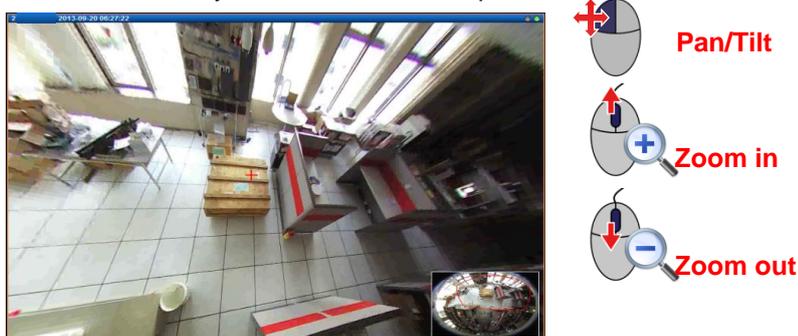

OneSecure Video Management Software Administrator Manual V3.0.09

- To reset the ePTZ navigation area back to default viewing angle, right-click to bring up channel menu, and then click “Reset”.

3. click  on **View Tool Bar** to save the configuration.

Note

Once a channel is changed to any of the following fisheye modes: **Dewarping**, **Panorama**, **Double Panorama**, **Panorama/Focus** or **Quad**, the resolution of this live stream will become 1920x1080, while NVR still records the live stream at the resolution you set on **Setup** page.

Manage the Views

Each View belongs to a specific **View Group**. With the group management, OneSecure Server makes it easy to deal with Views you created for multiple Users.


After you created and saved the Views on **Live View** screen, click  → **View Manager**.

- 1 Click on the right arrow icon in front of a group folder to reveal its **Views**.
- 2 By selecting a **View**, you may directly modify its name in **Name** field.
- 3 You may change a group's **Group Type**. Upon the change, for example, by changing a group from “**Private**” to “**Public**”, all the views belonging to it will be open to every User.
- 4 Click this icon to add a new group.  
- 5 Click this icon to delete a selected group.
- 6 Click this icon to copy a selected group to another group.
- 7 Click this icon to move a selected group to another group.



Set View Link


By creating a link button on a map view, you can directly be linked to another specific view by clicking the button. On the picture below shows how to create a link button  to 7F View on 11F View.

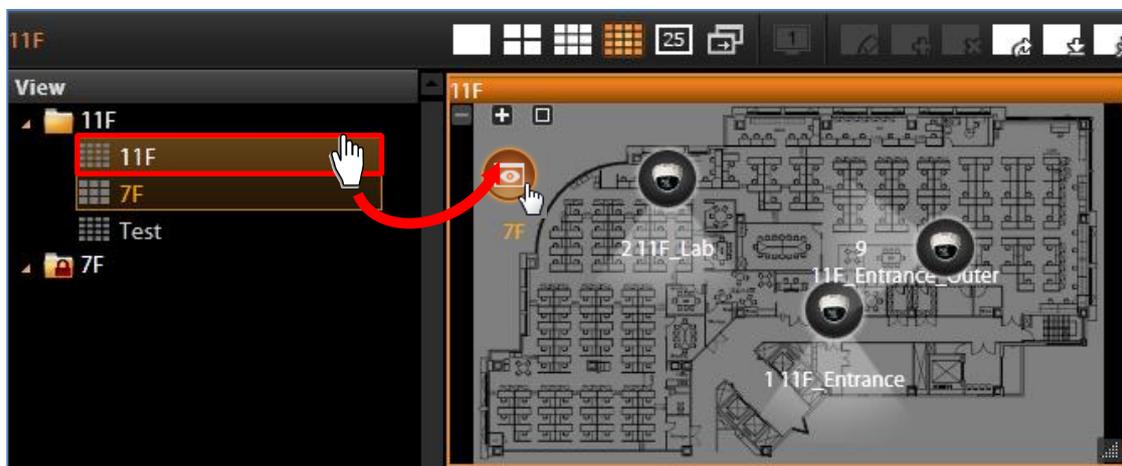

1. Select a View, on which you will place a link button to another view.
2. Click  on **View Toolbar** to enter edit mode.
3. From **View List**, drag the target View to current View, a link button will appear.
4. Click  on **View Toolbar** to save it.

Set View Patrol


You may have the saved Views patrol in turns. In this way, the views in different area in your site may cycle through themselves for you automatically.

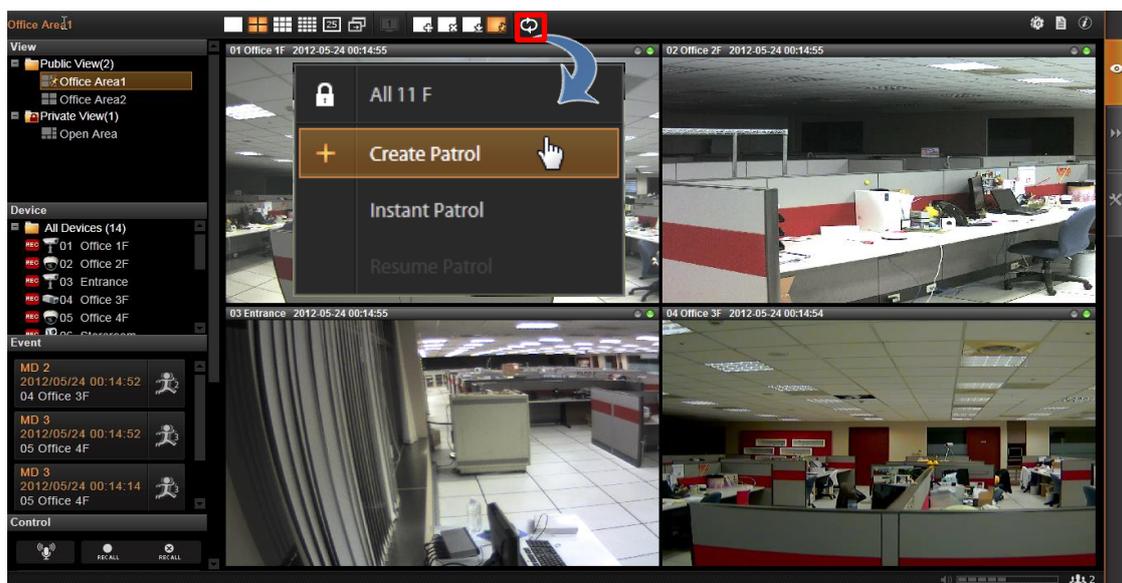

OneSecure Video Management Software Administrator Manual V3.0.09


On **View Toolbar**, click  then select **Create Patrol**.

1. Input the **Patrol Name**
2. Select the **Patrol Type** to be either available for all Users or to the creator's account only.
3. Define the **Global Dwell Time** between the views. If you want to set different dwell time length for individual Views, do not check this option, and configure them separately in the table below.
4. Choose the **Views** to display in patrol. If you select the **All Device** group, you will also need to select "All Device Layout Style" for it.
5. Click "Apply" to save the settings.

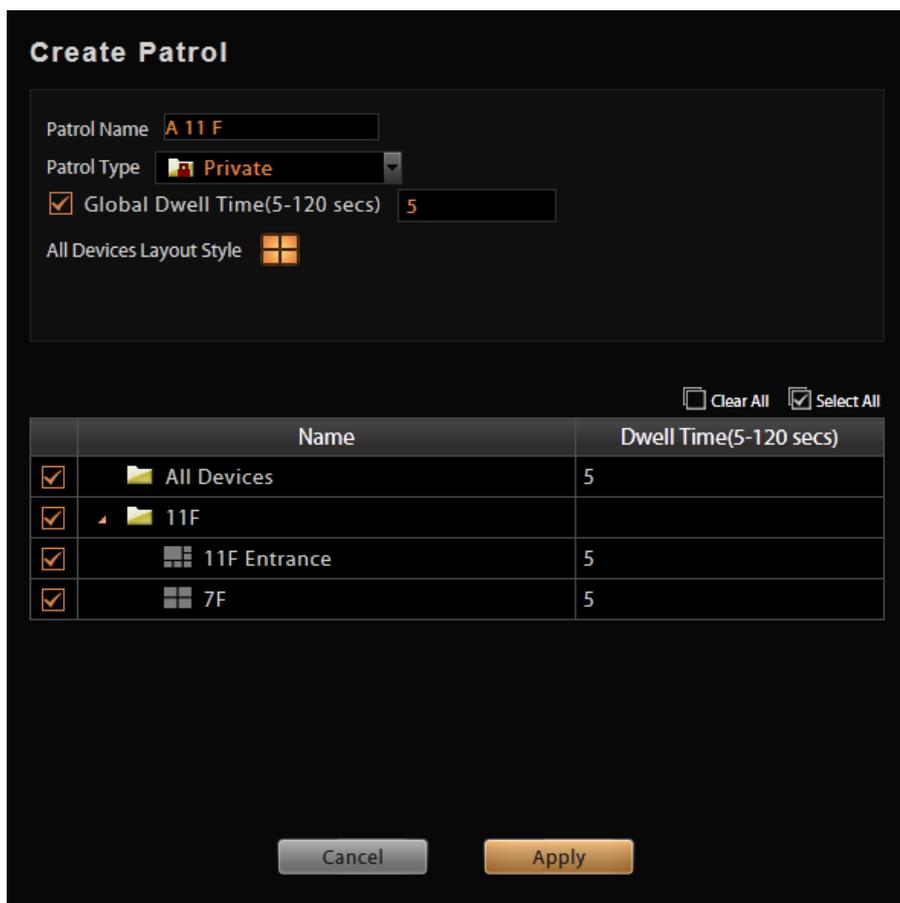

	Name	Dwell Time(5-120 secs)
<input checked="" type="checkbox"/>	All Devices	5
<input checked="" type="checkbox"/>	11F	
<input checked="" type="checkbox"/>	11F Entrance	5
<input checked="" type="checkbox"/>	7F	5

6. The saved patrols will be shown on the patrol list after you click  on **View Tool Bar**, you may delete and edit a saved patrol or select it to start patrolling.

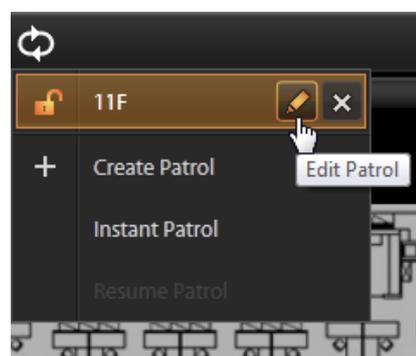


Tips to Enhance Live View Performance


Live view for multiple channels requires sufficient computing power to run the performance. In certain extreme cases, like when viewing several megapixel H.264 video streams at the same time, client computer will be overloaded and hence affect browser's performance. This is a common limitation imposed upon all Windows based video management programs and web browser.

To enhance live view performance, below are several tips you may try:

1. Use dual stream mode for those devices supporting this function. Enable the dual stream mode and use the stream of lower resolution/frame rate/bit rate for live view, and megapixel resolution stream for recording.
2. Use another browser client to share these high-resolution channels. Given that there are 32 megapixel channels to be monitored, you may have Layout 1 to display channel 1~16, set Layout 2 to display channel 17~32, then open one browser client to show Layout 1 and the second browser on an extended monitor to show Layout 2.
3. Have NVR automatically lower the frame rate of live streams when system loading is high. Go to **Setup** page → **System** tab → **Settings** → **Display Performance Setting** and enable this function. Basically, this setting will lower frame rate when the CPU usage is above certain percentage. You may also enable “**Lower the frame rate when current layout is above_**”, in this way, when the layout is displaying over certain number of channels, the frame rate of all live streams will be declined. By default, this setting will be applied to the live display of all connected web clients and Workstation clients.

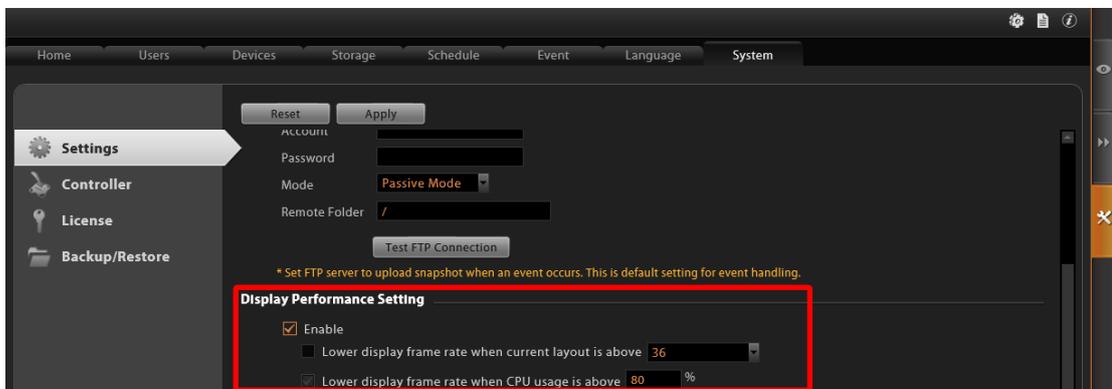

A **Workstation** client computer can have its own specific display configuration without being affected by NVR universal setting. Log in as **OneSecure Workstation** client, go to **Setup** page → **System** tab → **Workstation** and configure the **Display Performance**

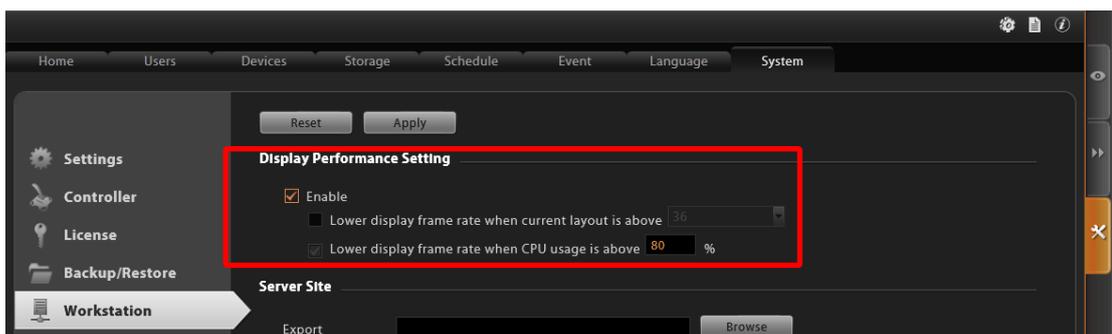

Setting.

Let Windows Automatically Start with NVR Live View

You may have the client application automatically run and open the live view after Windows starts. In this way, you may save steps and time before you eventually see the desired live view screen. Additionally, whenever a power breakdown takes place, the live view may recover as soon as your computer resumes.

If more than one users would log in to this computer, this tip might not be suitable due to account security issues.

1. On OneSecure server, set a **default View** for your account. For detailed procedures, please refer to this section in this manual: [Customize Views](#) on page 91.
2. Set **Auto-login** for your Workstation client or web browser client. For detailed procedures, please refer to this section in this manual: C. Remember Account/Password on page 27.
3. If you are using a browser client, open the browser, and set the NVR server IP as default homepage.
4. Set your browser or Workstation application to start right after Windows has started. Click **Windows Start** → **Programs** → **Startup** to open the **Startup** folder, and drag the application shortcut into it. In your case, you will have to drag the Internet Explorer shortcut or OneSecure Workstation shortcut into the **Startup** folder.
5. The next time you start Windows, OneSecure live view will be running automatically, and you may start monitoring the system in no time.



Customize System Language


NVR server supports multiple languages for user interface display. There are already 10 translated language files in the server system. Each language is open to customization based on your own needs. This section will describe how to choose or customize language strings for your site.

System Languages List

You may decide which languages to be selectable on Login screen. The chosen languages will appear on the “Language” dropdown list.



Go to **Setup** page → **Language** tab, click “**Active Languages**”. On popup window, check the languages you need, and click “**Apply**”. By default, all languages are selected, as the default system language, **English** and **Traditional Chinese** are not removable from this list.

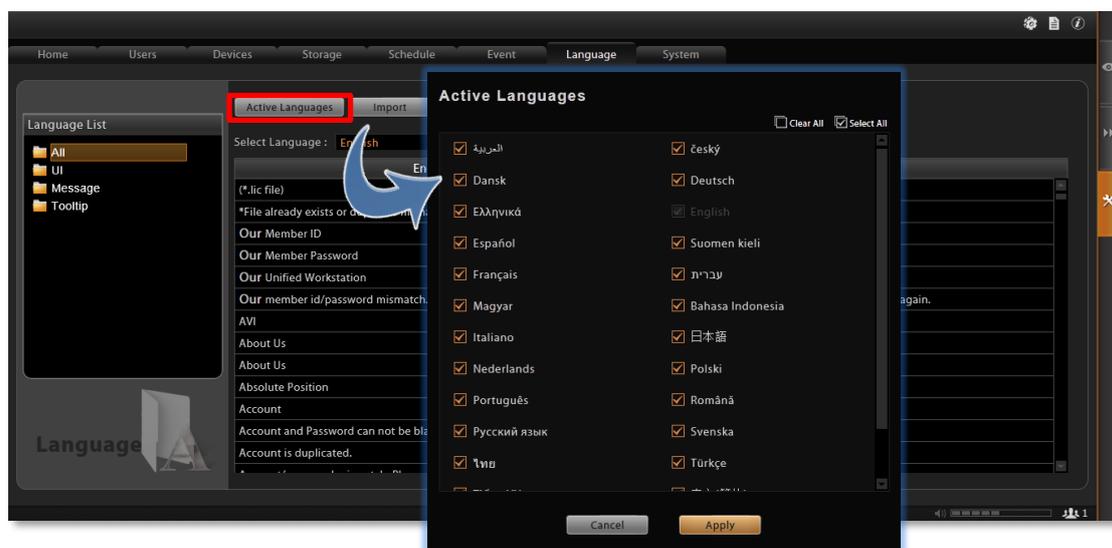


Edit User Interface Wordings


Each language file contains four editable string tables. Each table displays the default wordings in English and the translation in target language.

To view each table:


1. Select the language from “**Select Language**” dropdown list, then select a table from the “**Language List**” list on the left column.

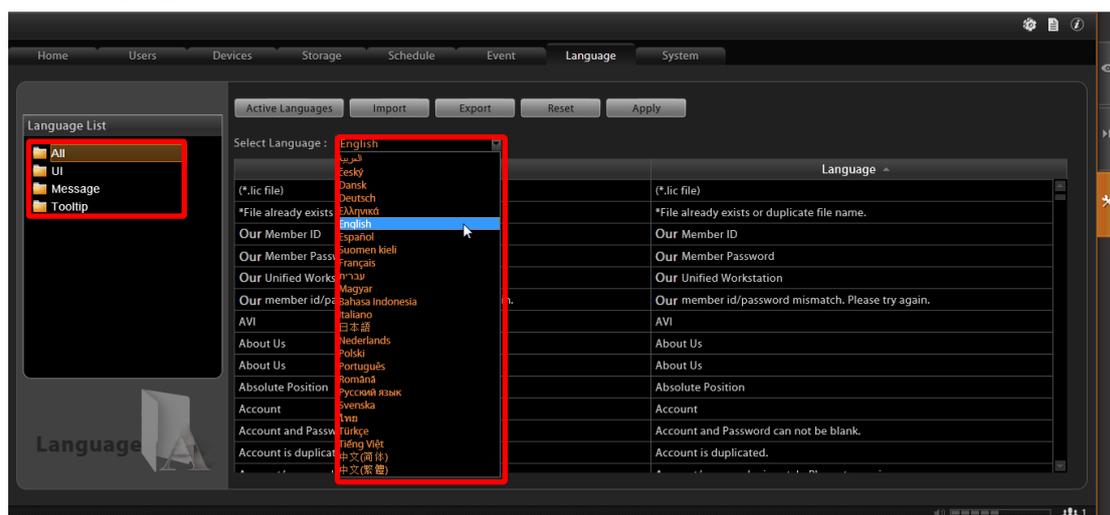

2. Your target language will be displayed on the right column, while the default system language “**English**” appears on the left for reference. Click in any field on right column to customize your desired wordings, and click “**Apply**” to overwrite the current wordings.

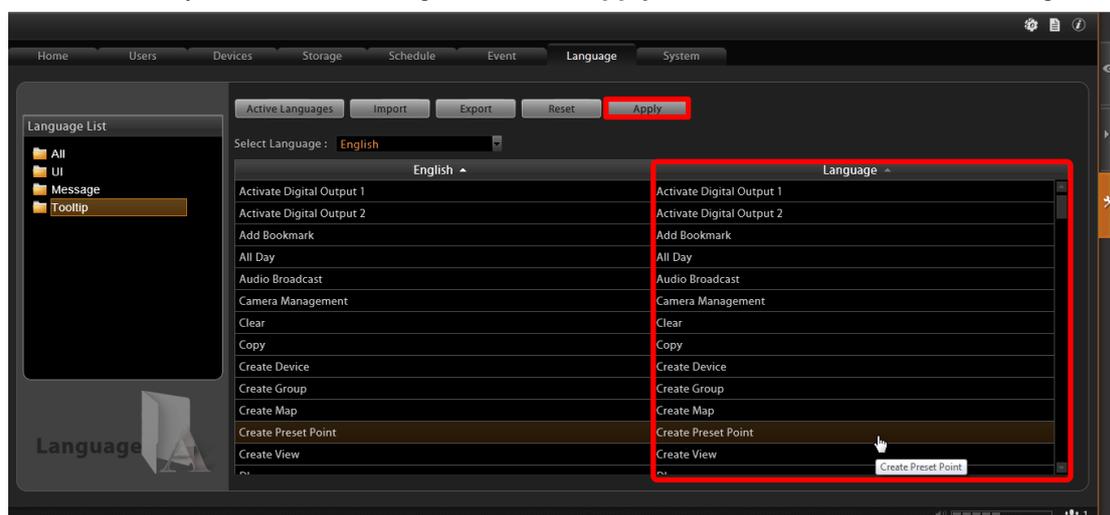


The new string will be applied by next time you log in. If you log in as an **OneSeure Workstation client**, please press  button on **Login** page to synchronize with the latest modified language file, then log in to the system.

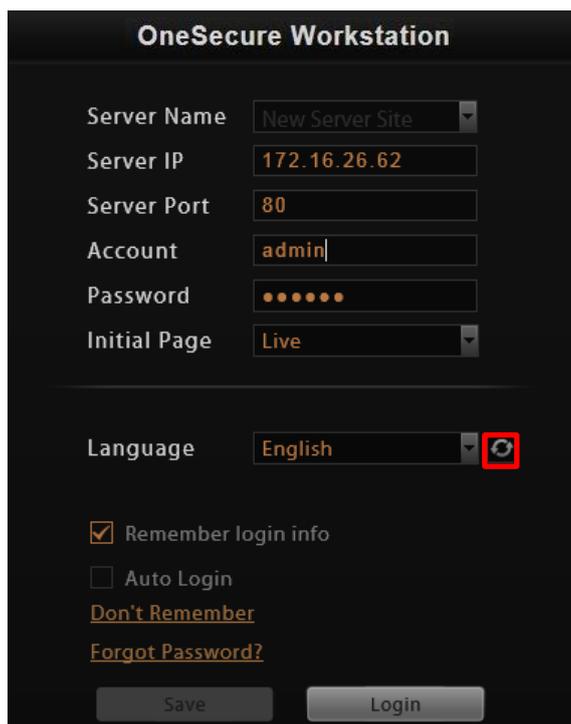

Export / Import Language String File


You may also click “**Export**” to export the language file as .xml format to edit in **Notepad**, or “**Import**” to import a language file to use in the system.

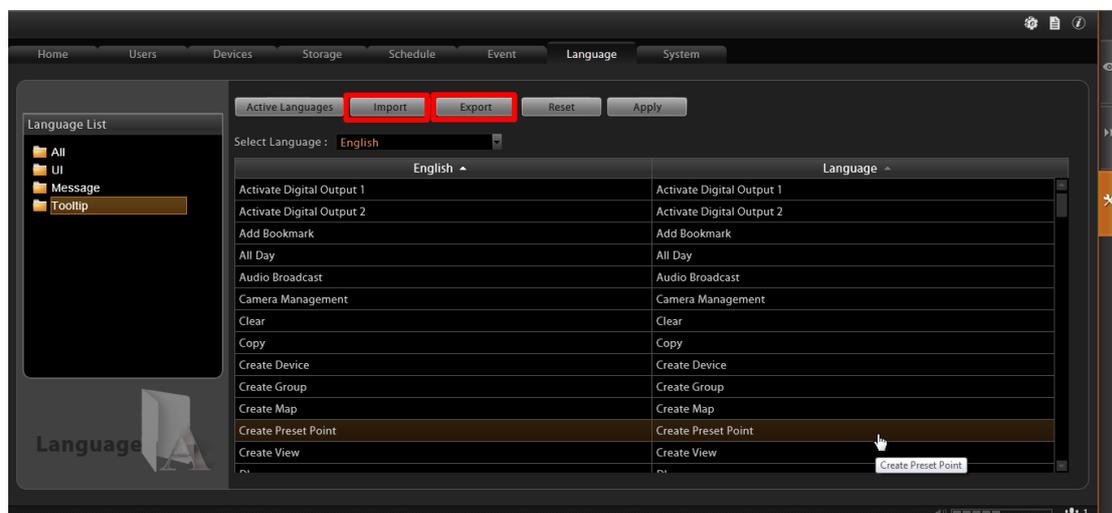

In general, it is suggested that you always save a modified language table with a different file name in a location other than default system language folder, then import it to use. In this way, you can avoid overwriting the original language file.

Display Configurations

You can change the user interface style by arranging the main screen and **Panel/Device List** on the right or left. Go to **Setup** page→**System** tab→**Settings**, in **User Interface Style** section, select the setting style then click “**Apply**”. The change will be applied upon your next login.

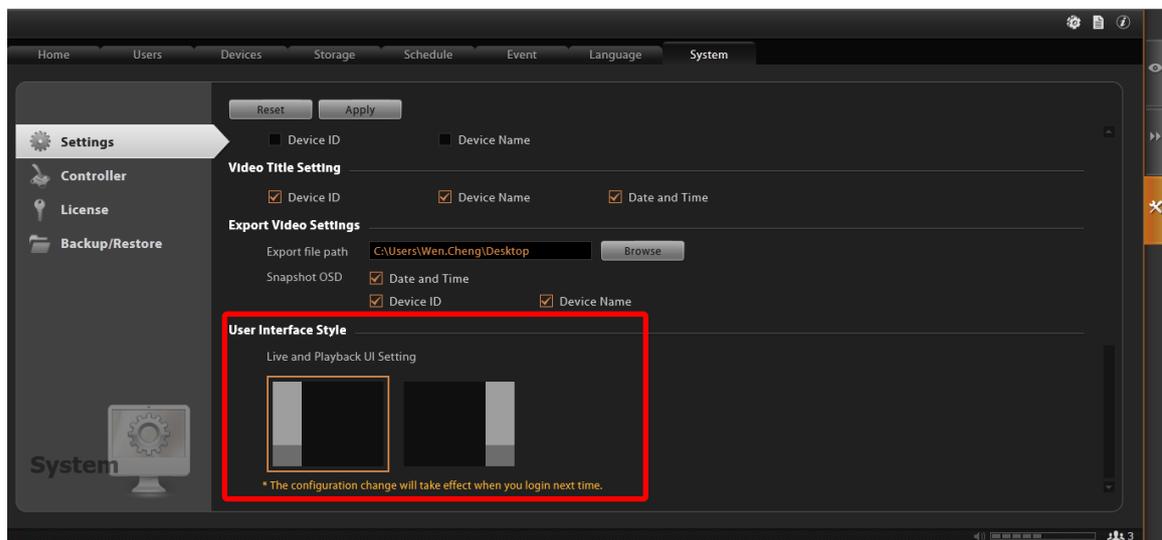


Video & Snapshot Export Configurations

The snapshots taken by Users on **Live View** and all exported video files are saved to a default file location, and you may configure the destination on NVR server. Go to **Setup** page → **System** tab → **Settings**, in **Export Video Settings** section, click **“Browse”** to choose the Export file path.

You may also define what information is printed on each snapshot by checking the items: **Date and time**, **Device ID** and **Device Name**.

These configurations will take place after you click **“Apply”**.

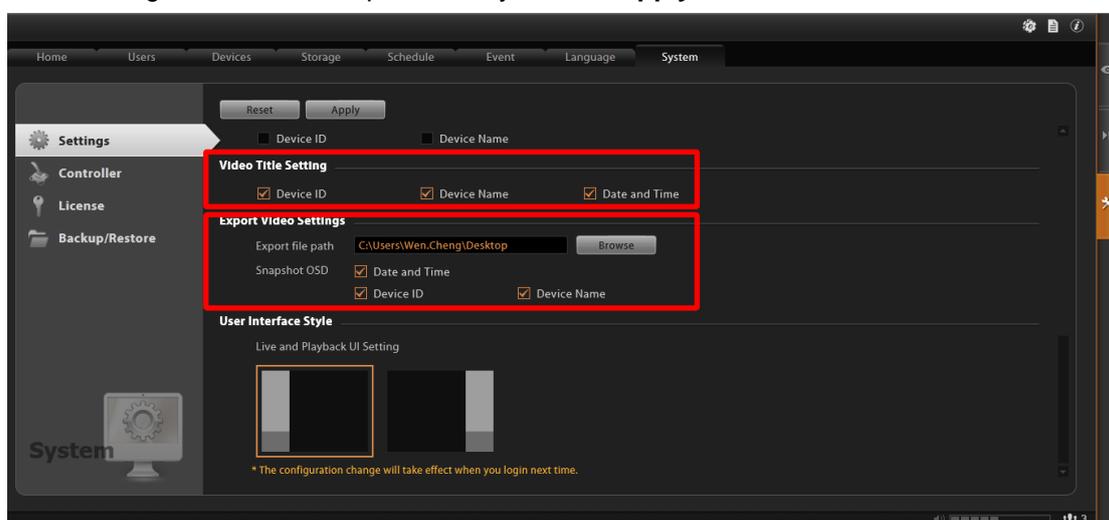

Joystick

On OneSecure, other than user interface PTZ panel and mouse operation, you may also control the PTZ movements by physical controllers. OneSecure supports two types of controllers, which both feature in a joystick and twelve buttons for users to assign specific actions.




Model: **IP Desktop**
Manufacturer: CH Products



Model: **Extreme™ 3D Pro**
Manufacturer: Logitech

Joystick Configurations

1. Log out from NVR server.
2. Connect the controller device to your computer. To make sure the device is installed properly, open **Windows Start menu** and enter **Devices and Printers** to check the status.
3. Log in to NVR server, go to **Setup** page → **System** tab, enter “**Controller**” section and select your product.
4. You may assign specific commands from dropdown list to buttons 1~12 of the controller. When setting is done, click “**Apply**”. The modification you did on one controller model will be applied to the other joystick model as well.

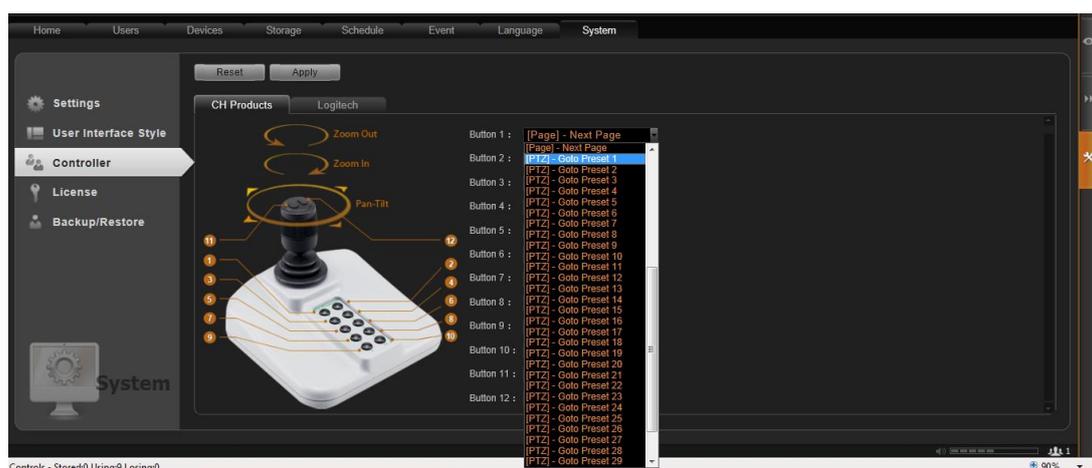

5. To validate its function, go to **Live View** page and focus on a PTZ device channel to operate the supported PTZ operations.


Un-install Server Software

In certain cases, un-installation of NVR system is necessary, for example, (1) you want to terminate NVR server and clear all the evidence due to privacy and security reasons, (2) you need to reinstall the system due to an unsuccessful installation.


Before starting un-installation, please back up important data (please refer to Back Up System Data on page 111) first and prepare the NVR server install shield application. This chapter will describe un-installation process.

Step 1: Remove OneSecure Server Program

1. Go to **Windows Control Panel** → **Add/Remove Programs** (in Windows Server 2003/Windows XP) or **Programs** → **Programs and Features** (in Windows Vista /Windows 7/Windows 2008) to remove it. When you un-install NVR server program, the web client will be terminated at the same time.

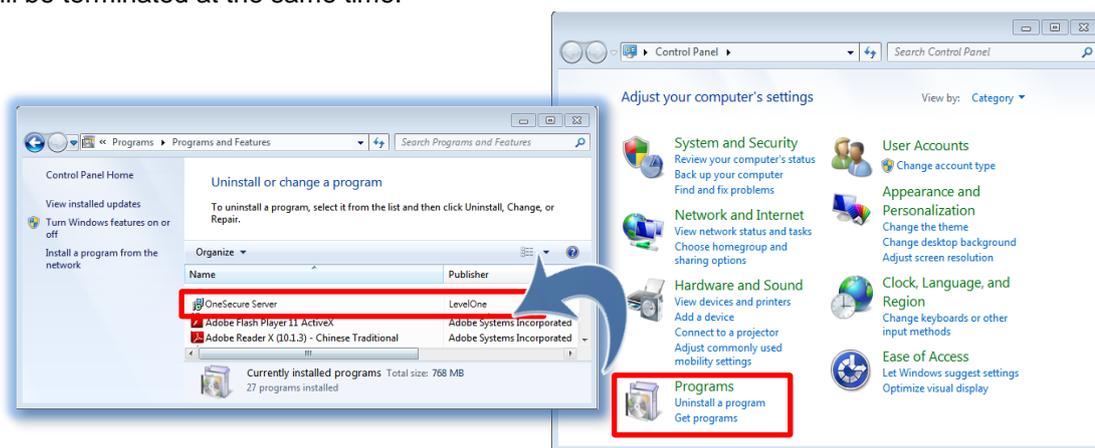

2. After you choose to uninstall “**NVR Server**” program, the uninstallshield will execute and notify you when it is completed.

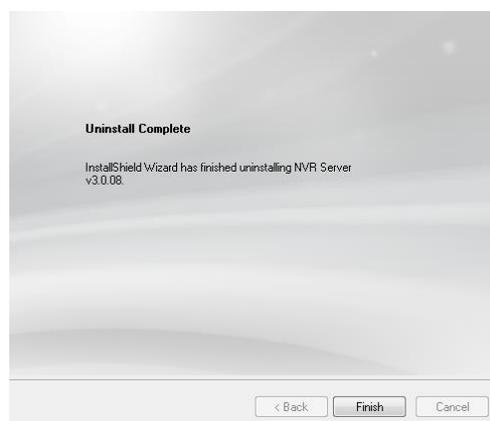


Step 2: Remove OneSecure Server Program Folder (Optional)

If you are performing a complete un-installation without leaving any NVR server related data on the current computer, you may consider deleting this folder.

After un-installation, the **OneSecure** system folder will remain under the **Program Files** folder on your hard drive, the system configuration data here will not be removed until you delete them manually. By default, the path of **OneSecure** system folder is **C:\Program Files**.


However, keeping this folder is convenient for a un-installation followed by an instant re-installation, for the previous system settings can directly be applied to the new server.

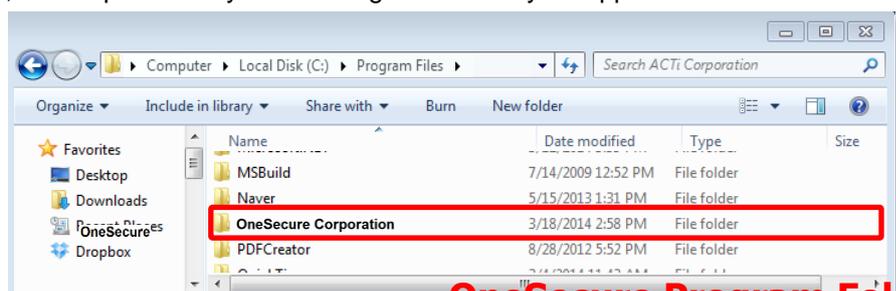

OneSecure Program Folder

Step 3: Remove the Recordings Folder (Optional)

Remove the whole **Recordings** folder(s) that saves the recorded video files on storage hard drive(s). If you selected multiple storage hard drives via **Setup** page → **Storage** tab → “**Disk Drive List**”, then the server may have generated one **Recordings** folder under each selected drive. If you have renamed the folders or change the locations, please make sure you find the correct path.

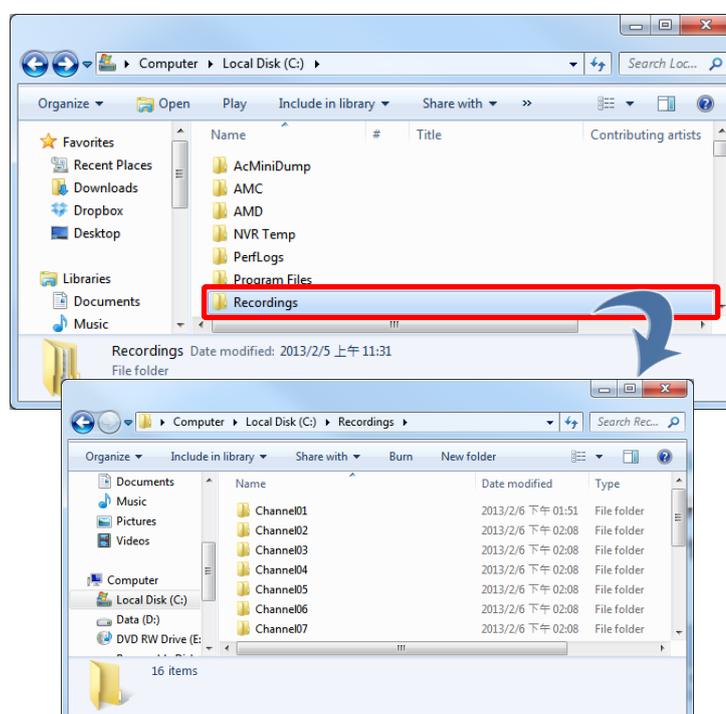

The Recordings folder contains all the video raw files saved in individual channel subfolders.

Back Up System Data

Making regular system backups is always recommended in case of unexpected disasters or accidents that may damage NVR server. Other than this, you may need to perform an on-demand backing up to (1) migrate the whole NVR server data to another computer, or (2) re-install the NVR server on current computer. There are several types of data on NVR server essential to your surveillance system, please consider your purpose and follow the below instructions to create their backups:

Regular Backup (system settings only)


NVR server can create a backup file of the whole system settings within one click. The settings being backed up include the following properties you set for system: (1) **Users** (2) **Device** (3) **Storage** (4) **Schedule** (5) **Event** (6) **System** → **Settings / User Interface Style / Joystick**, and (7) the saved **Views** in **Live View** page.

Complete Backup (system settings + video files)

Besides system settings, some organizations may want to back up the video recording occasionally in case that the recording hard drives may fail. The recording files (*.raw) can only be played on any playback utility that supports *.raw format video.

Step 1: Back up System Settings

1. Go to **Setup** page → **System** tab → **Backup / Restore**
2. In **Backup** section, click "**Browse**" to select the destination for backup file, the file will be saved as *Backup_YYYYMMDD.xml* file. Then click "**Backup**" to export the file.

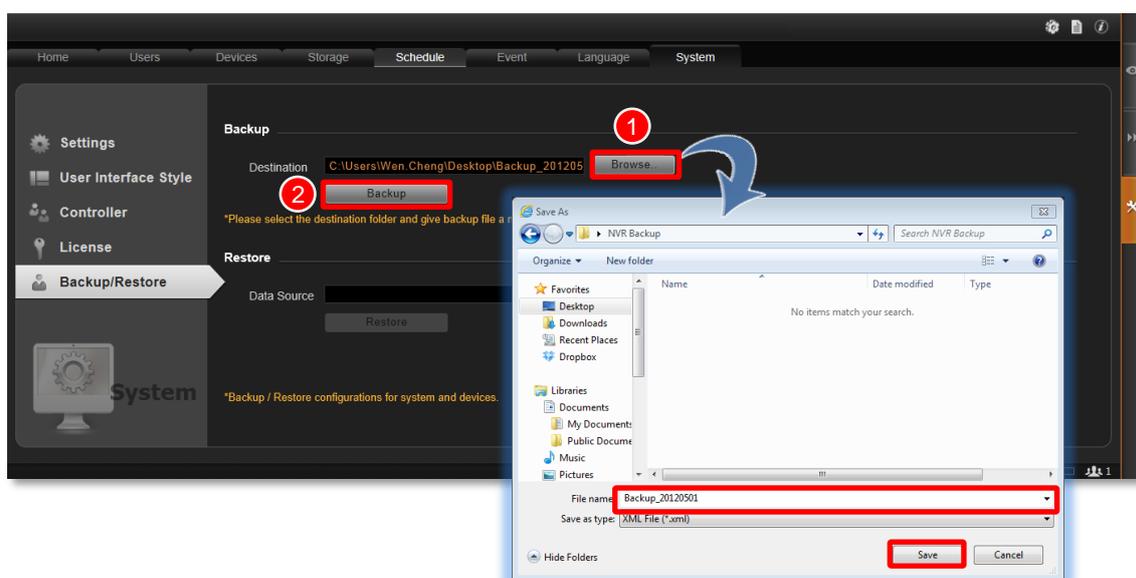


Important Notice

The license data is not included in the system backup file. You have to preserve the license key information provided in e-mail or printed card to you after the purchase takes place.


Step 2: Back up Recording Files Folder (Optional)

Back up the whole **Recordings** folder(s) that saves the recorded video files on storage hard drive(s). If you selected multiple storage hard drives via **Setup** page → **Storage** tab → “**Disk Drive List**”, then the server may have generated one **Recordings** folder under each selected drive. If you have renamed the folders or change the locations, please make sure you find the correct path.

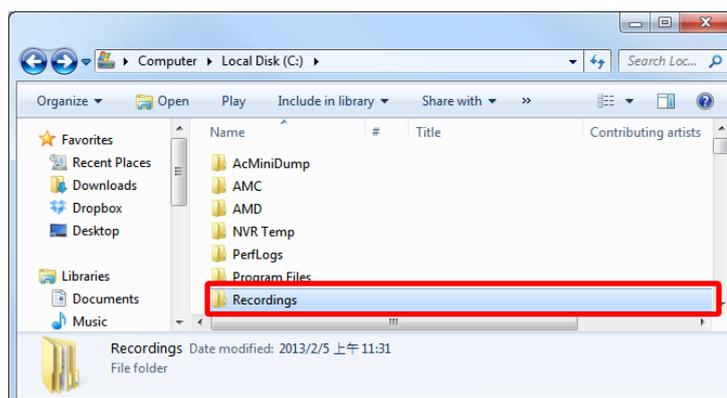

Step 3: Back up Recording Files Index Folder (Optional)

This step is necessary for OneSecure server migration between two server computers. The recording files index folder contains important video index data NVR server needs to process recorded video clips. Enter the server program folder **C:\Program Files\OneSecure Corporation\OneSecure\DataSource**, and back up the **DataBase** folder (where stores the recording files index data).

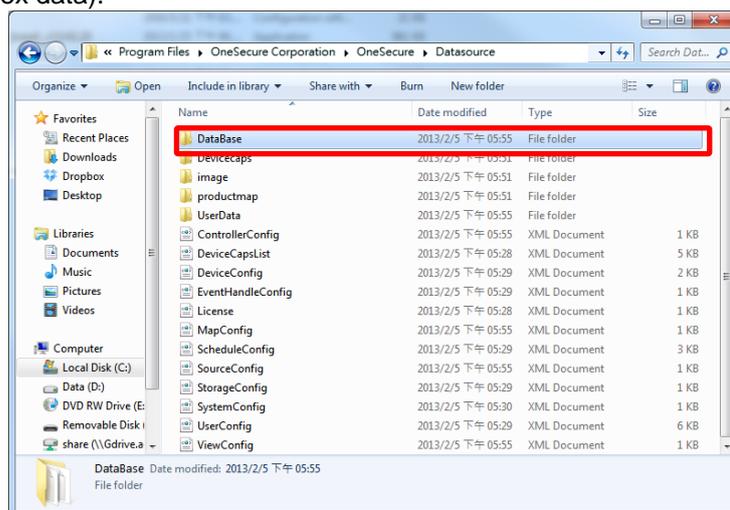

Step 4: System Log (Optional)

The system log records the operations Users perform during logging in to NVR server. You may export the system log of latest three days as *.csv file as backup. Please refer to the section in this manual: [Export the Log](#) on page 82 for instructions.


Restore System Data

Before starting restoring the system, make sure you have done the following:


- (1) **Re-activate the license.** If you have done un-installation previously, and the number of channels to be recovered is over **16**. Please prepare the license key information for online activation or the activation file(.lic) for offline activation, and follow the instructions in License and Activation on page 20 to activate your license. The license should be activated before settings are restored so that the licensed channels are ready for recovery.
- (2) The backup file(.xml).

To start,

1. Go to **Setup** page → **System** tab → **Backup / Restore**
2. In **Restore** section, click “**Browse**” to select the backup file, and then click “**Restore**” to start restoring the settings.

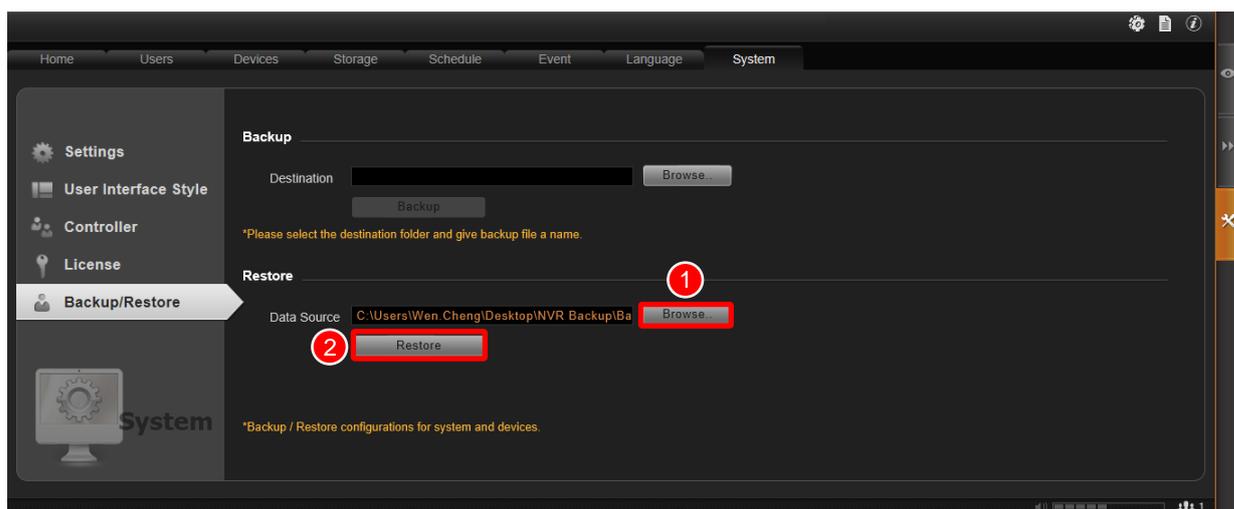

3. The restoring process requires logging out of NVR server. After restoring is done, you may log in using your previous user account properties.

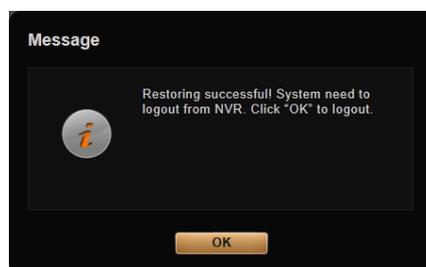

System Migration

NVR server system migration is necessary when you need to replace your current server computer. The migration process will involve a series of different procedures including backup, un-installation, installation and restoration, which should be executed carefully to prevent from loss of important data. You should go through the instructions of required procedures before the migration starts. This chapter will lead you through the procedures for managing a safe migration process.

Migrate OneSecure Server to Another Computer

For the migration of OneSecure server between two computers, make sure you have contacted LevelOne for assistance in resetting your previous activation record on LevelOne license data server, so that this license key can be activated again with another MAC address.

Please have the following data prepared before migration takes place: (1) OneSecure install shield application file, (2) OneSecure license key or activation file (.lic) (3) OneSecure server backup file(.xml). (4) make sure you have made a copy of previous OneSecure recordings folder, (5) a copy of OneSecure recording index file folder.


To start,

1. Install OneSecure server on new server computer (refer to [Server Installation](#) on page 16).
2. Activate OneSecure license on new server computer (refer to [License and Activation](#) on page 20).
3. Copy the whole backup recordings folder(s) to the storage hard drive(s).
4. Copy the whole backup **DataBase** folder to **OneSecure Corporation\OneSecure\DataSource** folder on server computer (default path is C:\Program Files\OneSecure Corporation\OneSecure\DataSource\). Remember to replace the existing folders that are with the same folder names (refer to [Back Up System Data](#) on page 111).
5. Restore the system settings with backup file (refer to [Restore System Data](#) on page 113).
6. Uninstall the OneSecure server on previous computer and remove sensitive files if needed (refer to [Un-install Server Software](#) on page 109).

Advanced Administrative Tasks


To assist the NVR administrator in monitoring the server status and basic trouble-shooting, the **OneSecure Administrator Tool** is installed along with NVR server program on the server computer.

This tool will start running as the server computer starts up, and resides in the system tray. You may double-click the icon to open this tool.

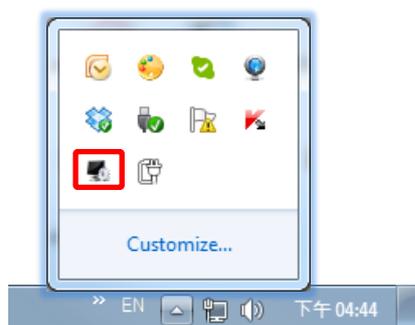


NVR Server Status

You may observe the NVR services status on **Service** tab.

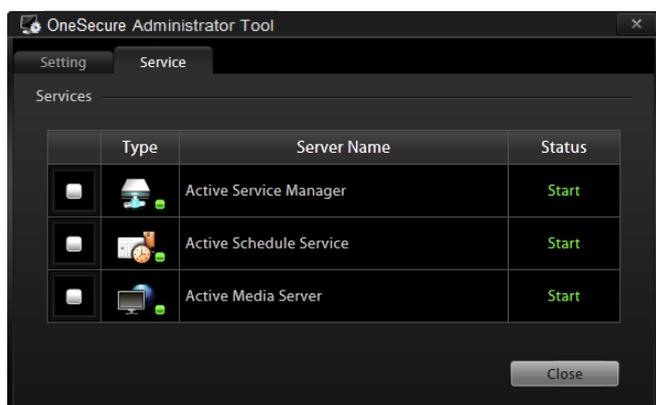

Change Server Port


On **Settings** tab, input a new port and then click “**Apply**”.

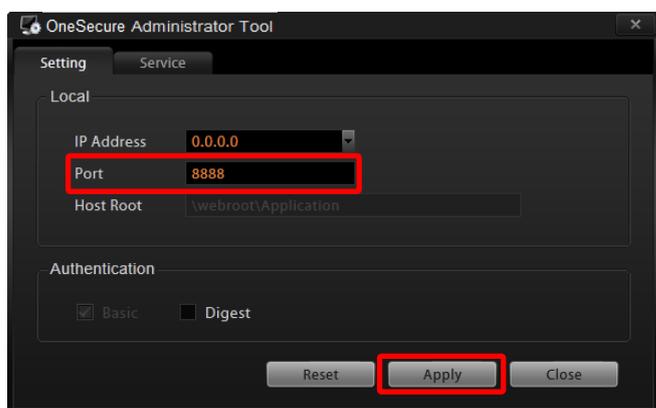

Change Authentication Method

You may enable the **Digest** authentication other than the basic way. With this method, User's credentials are encrypted using MD5 algorithm. In this way, there is more secure protection to prevent from unauthorized access.

Please also note that, with **Digest** authentication method enabled, a mobile client user or a domain user will be blocked from NVR system.

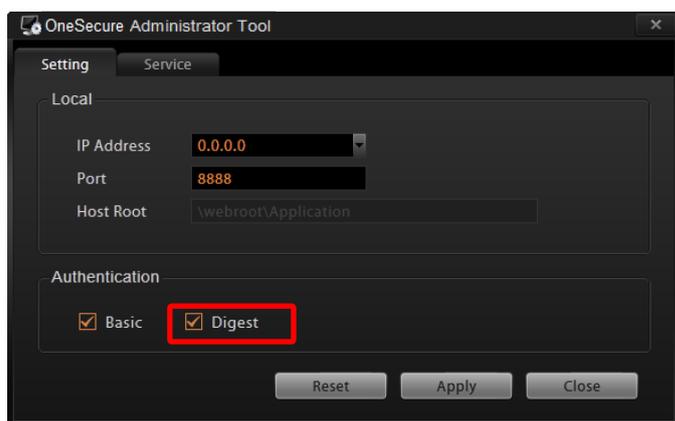

Set an NVR Server as a Redundancy Server

You can assign an NVR server as a redundancy server for other NVR server. During this time, the original settings and recordings of this server will all be overwritten, therefore, it is suggested that you prepare a specific computer to be dedicated to carrying out the redundancy tasks.

Among other functions, LevelOne's Redundancy Server records all surveillance videos directly from camera devices, logs and performs actions for real-time event notifications on behalf of the NVR server during system downtime. Authorized users may also access the Redundancy Server when it is in use for live-monitoring or playback options. After the NVR server becomes available, the Redundancy Server will then automatically synchronize all recorded video and events back to the NVR server.


Before you start,

1. Purchase the redundancy server license from LevelOne sales representative. One redundancy server computer will require one license, which can serve **sixteen (16)** NVR servers.
2. Follow this instructions narrated in [Server Installation](#) on page 16 to install NVR server program on this computer.


License Registration

With a successful purchase, you will receive a license key for registration

1. Enter **Administrative Tool** interface by clicking the icon on Windows taskbar.

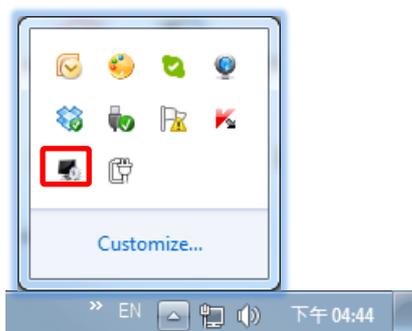

2. On **Settings** page, select “**Redundancy Server**”. You can switch the server mode to the other here.

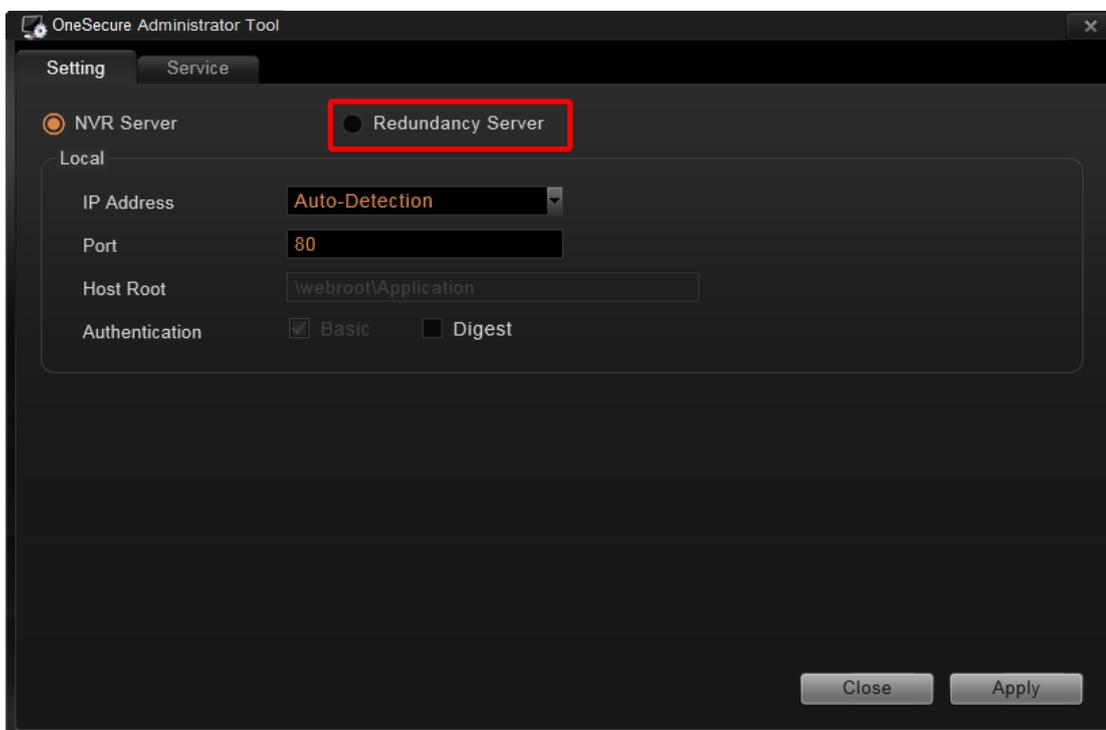


3. The other relevant settings pages will then appear. Enter “**License**” to start registering. If this server has access to Internet, please select “**Online Registration**” or you can perform “**Offline Registration**” by obtaining an activation file from <http://www.global.level1.com/> beforehand. Fill in the required fields and click “**Register**”.


Important Notice

If you are trying to switch an NVR server which has been operating for a while to a Redundancy server, please be aware that, by doing so, the original NVR relevant settings and recordings saved previously will ALL be erased.

OneSecure Video Management Software Administrator Manual V3.0.09

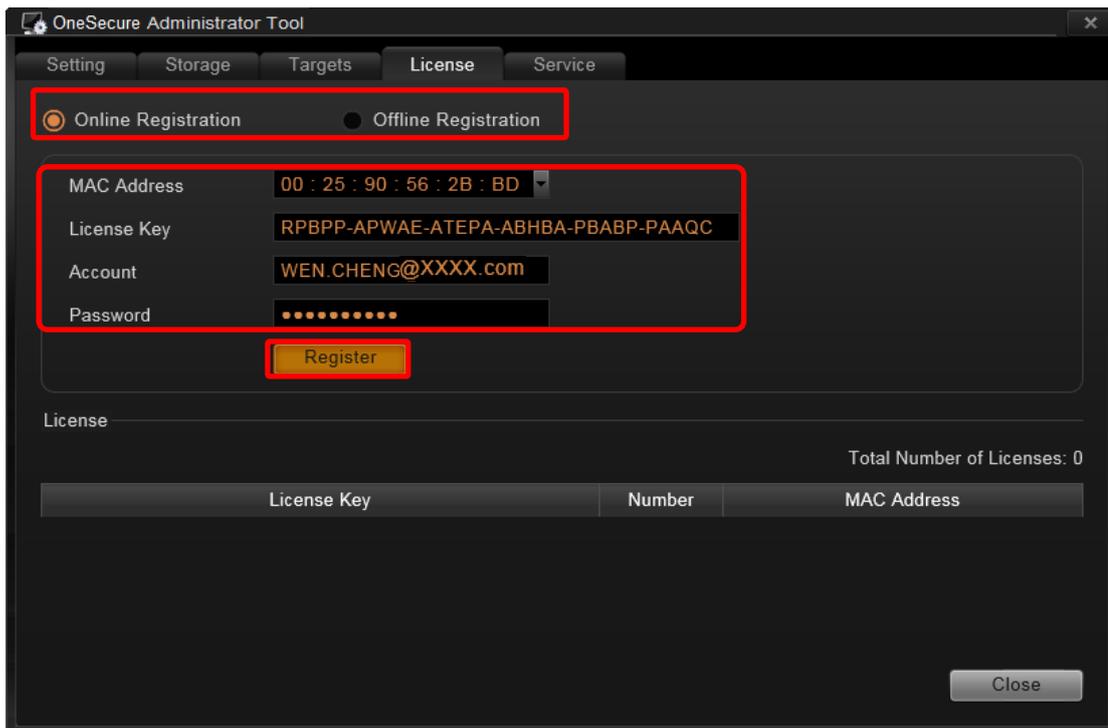


After the registration, the license information will appear on this page.

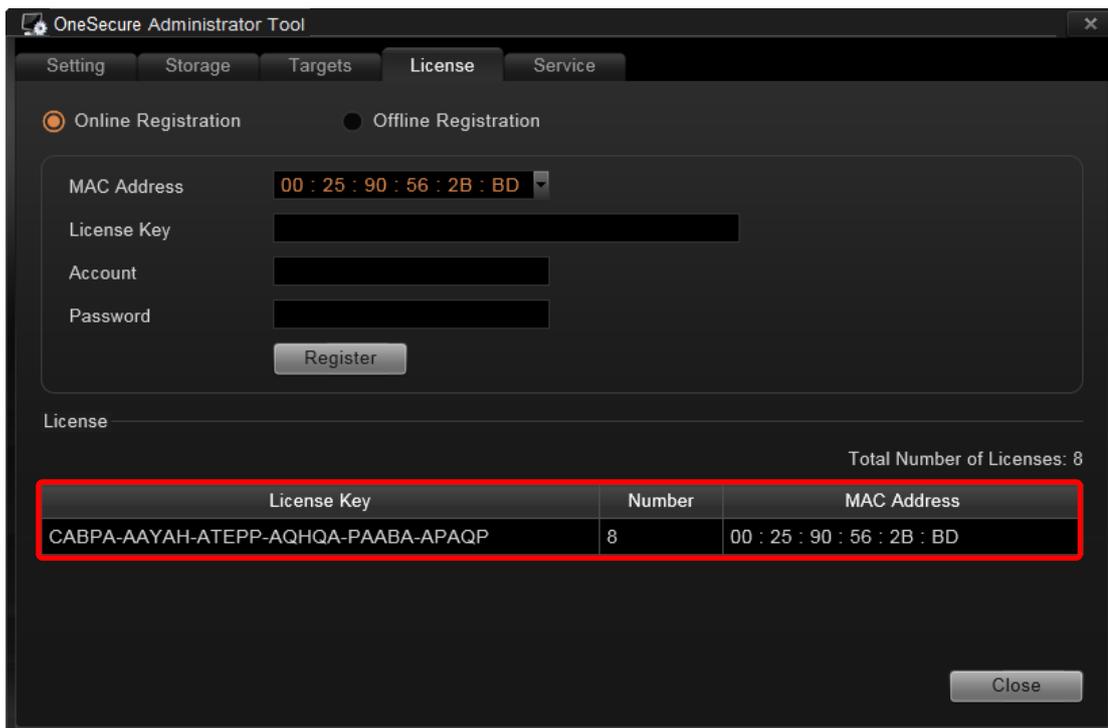


Set up Redundancy Server

1. Go to the **"Storage"** page to set up the storage space configuration

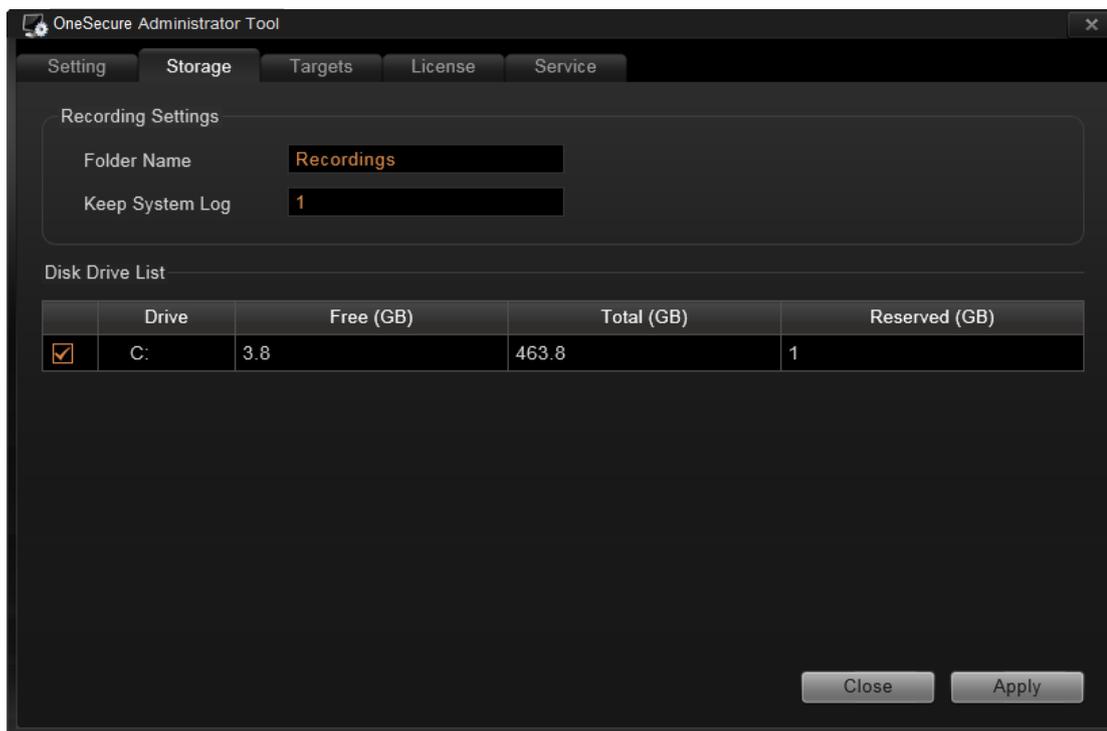

2. Go to **"Target"** page to edit the list of the target NVR servers. Click **"Add"** and fill in the connection properties of the NVR server and click **"Apply"**.

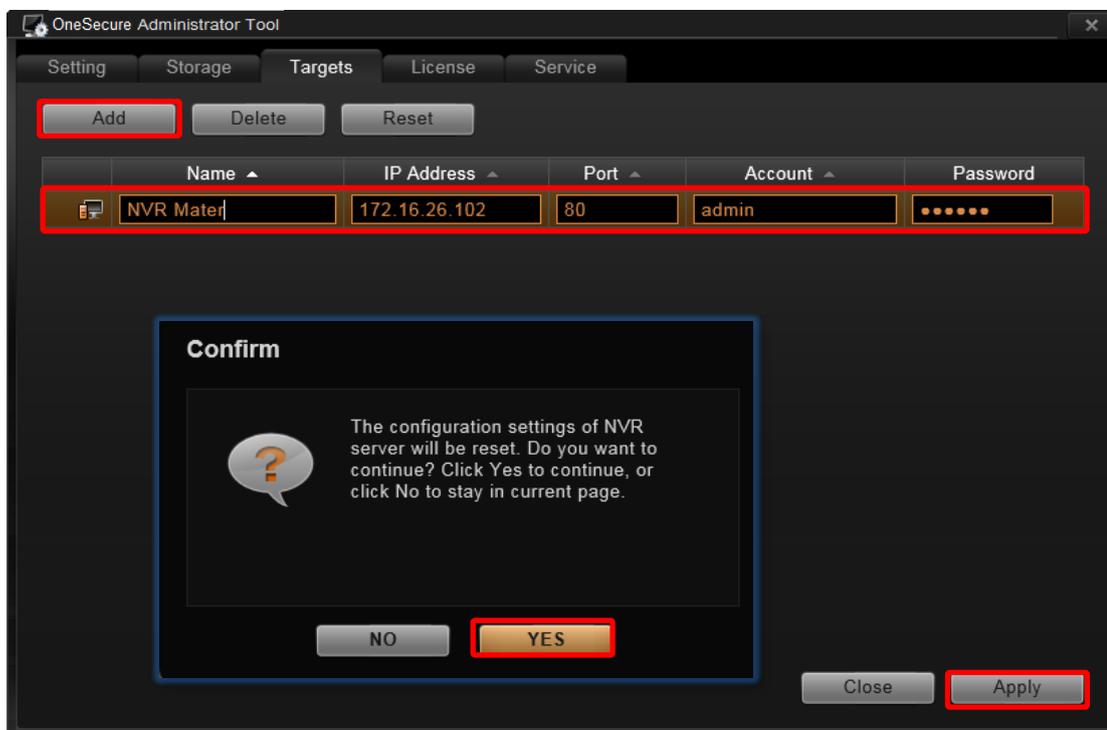

OneSecure Video Management Software Administrator Manual V3.0.09

3. After you click **“Yes”** to confirm this configuration, this NVR will immediately turn into a redundancy server on a first-come-first-serve basis.

By entering **“Service”** page, you can observe the service status.